

Service Program A

Program point C70/S70/V70 Petrol engines	Year: Km x 1000: Miles x 1000:	1 15 10	2 30 20	3 45 30	4 60 40	5 75 50	6 90 60	7 105 70	8 120 80	9 135 90	10 150 100
Automatic gearbox control -check the park / neutral position (PNP) switch		x	x	x	x	x	x	x	x	x	x
Parking brake -check and adjust		x	x	x	x	x	x	x	x	x	x
Exterior lighting -check the function		x	x	x	x	x	x	x	x	x	x
Washer and wipers for windscreens and headlamps -check the function and for signs of wear		x	x	x	x	x	x	x	x	x	x
The crankcase ventilation - clean							x			x	
Program point C70/S70/V70 Petrol engines	Year: Km x 1000: Miles x 1000:	1 15 10	2 30 20	3 45 30	4 60 40	5 75 50	6 90 60	7 105 70	8 120 80	9 135 90	10 150 100
Engine/ power train -check for leaks	Check from above.	x	x	x	x	x	x	x	x	x	x
Raise the car											
Engine/ gearbox/ power train -check for leaks	In event of leakage from the gearbox, check the oil level.	x	x	x	x	x	x	x	x	x	x
Engine oil -drain the oil and replace the oil filter	See Replacing the oil / oil filter	x	x	x	x	x	x	x	x	x	x
Constant velocity joints -check for signs of wear -check the boots							x	x	x	x	x
		x	x	x	x	x	x	x	x	x	x
Automatic gearbox The oil does not normally need changing.	Note! Cars used as taxis or mainly used for towing should have the oil changed according to the service program. AW50-42, see Gearbox fluid, replacing .					x					x
Program point C70/S70/V70 Petrol engines	Year: Km x 1000: Miles x 1000:	1 15 10	2 30 20	3 45 30	4 60 40	5 75 50	6 90 60	7 105 70	8 120 80	9 135 90	10 150 100
Wheels and tyres -check		x	x	x	x	x	x	x	x	x	x
Brake pads and brake discs -check	Minimum brake pad thickness: Front.....3 mm = 0.12"										

	Rear.....2 mm = 0.08" Check the thickness and condition of the brake discs when replacing brake pads.	x	x	x	x	x	x	x	x	x	x	x
Brake lines, fuel lines, fuel filter -check for leakage and damage		x	x	x	x	x	x	x	x	x	x	x
Fuel filter -replace								x				
Exhaust system -check for leakage, condition, mounting.							x	x	x	x	x	x
<i>Raise the front wheels</i>												
Program point	Year:	1	2	3	4	5	6	7	8	9	10	
C70/S70/V70	Km x 1000:	15	30	45	60	75	90	105	120	135	150	
Petrol engines	Miles x 1000:	10	20	30	40	50	60	70	80	90	100	
Front suspension and steering -check for signs of wear							x	x	x	x	x	
Rear suspension -check for signs of wear							x	x	x	x	x	
AWD: Final drive and bevel gear -check for leaks	Only check the oil level if there is leakage.	x	x	x	x	x	x	x	x	x	x	
AWD: Propeller shaft, pilot bearing and constant velocity (CV) joint -check							x	x	x	x	x	
<i>Lower the car</i>												
Air cleaner (ACL) -replace	Clean the air cleaner (ACL) housing.				x				x			
Spark plugs -replace				x			x			x		
Program point	Year:	1	2	3	4	5	6	7	8	9	10	
C70/S70/V70	Km x 1000:	15	30	45	60	75	90	105	120	135	150	
Petrol engines	Miles x 1000:	10	20	30	40	50	60	70	80	90	100	
Fluid levels - engine compartment -check and adjust the brake fluid, clutch fluid, power steering fluid, windscreen washer fluid, coolant		x	x	x	x	x	x	x	x	x	x	
Coolant -check and adjust the anti-freeze rating and anti-corrosion agent.		x	x	x	x	x	x	x	x	x	x	
Battery -check: pole pieces, electrolyte level, mounting		x	x	x	x	x	x	x	x	x	x	
Auxiliary equipment, drive												

belts -replace according to the service program or: -replace the belt at 8 year intervals.								x			
									x		
Timing belt -replace the belt according to the service program or: -replace the belt at 8 year intervals. Mechanical belt tensioner -replace	1997 B52xx , see Replacing timing belt . 1998 B52xx , see Replacing timing belt or Camshaft belt/Idler pulley/Belt tensioner, replacement B 52X4 S .								x		
									x		
									x		
Program point	Year:	1	2	3	4	5	6	7	8	9	10
C70/S70/V70	Km x 1000:	15	30	45	60	75	90	105	120	135	150
Petrol engines	Miles x 1000:	10	20	30	40	50	60	70	80	90	100
Doors, bonnet, detachable tow bar -lubricate		x	x	x	x	x	x	x	x	x	x
SRS -inspect at 10 year intervals.											x
Brake fluid -replace	Recommend that a customer with normal mileage has the fluid replaced every other year.		x		x		x		x		x
	Note! If mountain driving or driving in humid climates, replace the fluid every year.	x	x	x	x	x	x	x	x	x	x
SRI - reset	See Resetting SRL lamp (Service Reminder Lamp) to zero .	x	x	x	x	x	x	x	x	x	x