

Service Program B

Program point	Year:	11	12	13	14	15	16	17	18	19	20
C70/S70/V70	Km x 1000:	165	180	195	210	225	240	255	270	285	300
Petrol engines	Miles x 1000:	110	120	130	140	150	160	170	180	190	200
Automatic gearbox control -check the park / neutral position (PNP) switch		x	x	x	x	x	x	x	x	x	x
Parking brake -check and adjust		x	x	x	x	x	x	x	x	x	x
Exterior lighting -check the function		x	x	x	x	x	x	x	x	x	x
Washer and wipers for windscreens and headlamps -check the function and for signs of wear		x	x	x	x	x	x	x	x	x	x
The crankcase ventilation - clean			x			x			x		
Engine -check for leaks		x	x	x	x	x	x	x	x	x	x
Program point	Year:	11	12	13	14	15	16	17	18	19	20
C70/S70/V70	Km x 1000:	165	180	195	210	225	240	255	270	285	300
Petrol engines	Miles x 1000:	110	120	130	140	150	160	170	180	190	200
<i>Raise the car</i>											
Engine/ gearbox/ power train -check for leaks	In event of leakage from the gearbox, check the oil level.	x	x	x	x	x	x	x	x	x	x
Engine oil -drain the oil and replace the oil filter	See Replacing the oil / oil filter	x	x	x	x	x	x	x	x	x	x
Constant velocity joints -check for signs of wear -check the boots		x	x	x	x	x	x	x	x	x	x
		x	x	x	x	x	x	x	x	x	x
Automatic gearbox The oil does not normally need changing.	Note! Cars used as taxis or mainly used for towing should have the oil changed according to the service program. AW50-42, see Gearbox fluid, replacing .					x					x
Program point	Year:	11	12	13	14	15	16	17	18	19	20
C70/S70/V70	Km x 1000:	165	180	195	210	225	240	255	270	285	300
Petrol engines	Miles x 1000:	110	120	130	140	150	160	170	180	190	200
Wheels and tyres -check for damage and signs of wear		x	x	x	x	x	x	x	x	x	x
Drive shafts -check the play -check rubber bellows		x	x	x	x	x	x	x	x	x	x
		x	x	x	x	x	x	x	x	x	x

Brake pads, brake discs -check	Minimum brake pad thickness: Front.....3 mm = 0.12" Rear.....2 mm = 0.08" Check the thickness and condition of the brake discs when replacing brake pads.	x	x	x	x	x	x	x	x	x	x
Brake lines, fuel lines, fuel filter -check for leakage and damage		x	x	x	x	x	x	x	x	x	x
Fuel filter -replace					x						
Exhaust system -check for leakage, condition, mounting.		x	x	x	x	x	x	x	x	x	x
<i>Raise the front wheels</i>											
Program point	Year:	11	12	13	14	15	16	17	18	19	20
C70/S70/V70	Km x 1000:	165	180	195	210	225	240	255	270	285	300
Petrol engines	Miles x 1000:	110	120	130	140	150	160	170	180	190	200
Front suspension and steering -check for signs of wear		x	x	x	x	x	x	x	x	x	x
Rear suspension -check for signs of wear		x	x	x	x	x	x	x	x	x	x
AWD: Final drive and bevel gear -check for leaks	Only check the oil level if there is leakage.	x	x	x	x	x	x	x	x	x	x
AWD: Propeller shaft, pilot bearing and constant velocity (CV) joint -check		x	x	x	x	x	x	x	x	x	x
<i>Lower the car</i>											
Air cleaner (ACL) -replace	Clean the air cleaner (ACL) housing.		x				x				x
Spark plugs -replace			x			x			x		
Program point	Year:	11	12	13	14	15	16	17	18	19	20
C70/S70/V70	Km x 1000:	165	180	195	210	225	240	255	270	285	300
Petrol engines	Miles x 1000:	110	120	130	140	150	160	170	180	190	200
Fluid levels - engine compartment -check and adjust the brake fluid, clutch fluid, power steering fluid, windscreen washer fluid, coolant		x	x	x	x	x	x	x	x	x	x
Coolant -check and adjust the anti-freeze rating and anti-corrosion agent.		x	x	x	x	x	x	x	x	x	x
Battery -check the poles, electrolyte		x	x	x	x	x	x	x	x	x	x

level and installation											
Auxiliary belt -replace according to the service program or: -replace the belt at 8 year intervals.			x						x		
							x				
Timing belt -replace the belt according to the service program or: -replace the belt at 8 year intervals Mechanical belt tensioner -replace	1997 B52xx, see Replacing timing belt . 1998 B52xx, see Replacing timing belt or Camshaft belt/Idler pulley/Belt tensioner, replacement B 52X4 S. .						x				
							x				
							x				
Program point C70/S70/V70 Petrol engines	Year:	11	12	13	14	15	16	17	18	19	20
	Km x 1000:	165	180	195	210	225	240	255	270	285	300
	Miles x 1000:	110	120	130	140	150	160	170	180	190	200
Doors, bonnet, detachable tow bar -lubricate		x	x	x	x	x	x	x	x	x	x
Brake fluid -replace	Recommend that a customer with normal mileage has the fluid replaced every other year.		x		x		x		x		x
	Note! If mountain driving or driving in humid climates, replace the fluid every year.	x	x	x	x	x	x	x	x	x	x
SRS -inspect at 10 year intervals.											x
SRI -reset the service reminder indicator (SRI)	See Resetting SRL lamp (Service Reminder Lamp) to zero .	x	x	x	x	x	x	x	x	x	x