

Corrective action against noise from the rear right seat lock

Adjusting the lock catch


Preparations

Knot the seat belt for the right rear seat.

Fold the rear seat:

- right seat cushion,
- right backrest.

Remove the right side cushion by pulling the top forward and pulling straight up.

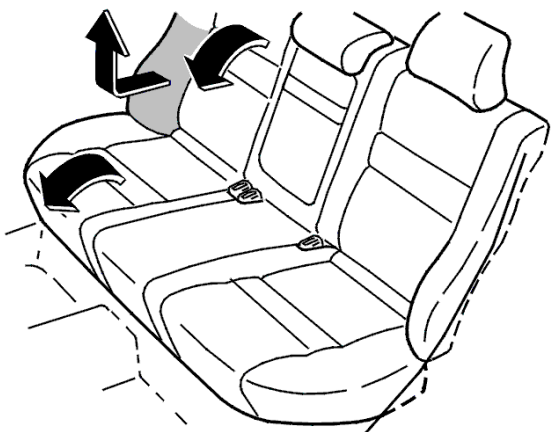

Removal

Remove:

- the right trim panel (1) above the rear backrest lock catch by pulling upwards / in towards the center of the car,
- the soundproofing,
- the clip (3) holding the right rear side panel to the C post right panel,
- the right C post panel (4).




File away material from the lock catch

Remove the lock catch.

File away 2 mm from the bottom of the rear hole.

Remove the swarf.

Treat with rustproofing agent, P/N 9437355-2.

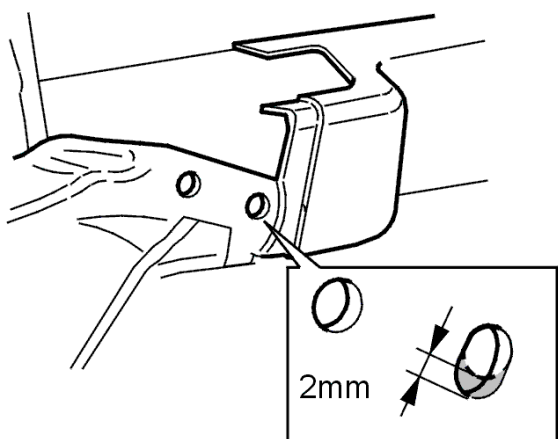


Installation

Install:

- the lock catch in the lowest position. Tighten the nut to 40 ± 10 Nm (30 ± 7 ft.lb).
- the C post panel,
- the clip,
- the soundproofing,
- the trim panel,

- the side cushion.

Replace the lock if the plastic frame is damaged.

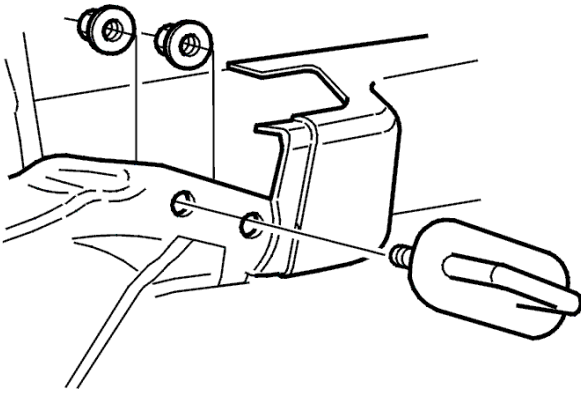

Replacing the lock

Removal

Fold the backrest halfway.

Remove:

- the clips holding the trim panel over the lock by pressing the clips in completely.
- the locking button holding the button in its rearmost position. Pry it at the front edge with a weatherstrip tool. Work the button up.

Slide the trim panel to one side.

Remove the lock.

Note! Remove all the locking pins before installing the lock.

Install a new lock, P/N 9194941-2. Tighten to 40 Nm (30 ft.lb).

Check the function of the lock. Adjust the lock catch if necessary.

Installation

Install the plastic trim.

Press the locking button into place by inserting its rear section first and guiding the lock lever into the locking button.

Install the clips. Use new clips if necessary.

Fold up the backrest.

Check the function of the lock and that the backrest is locked. Adjust if necessary.

Fold down the seat cushion.

Undo the knot in the seat belt.

