



Bulb tail lamp/stop lamp/back-up lamp/rear fog lamp/turn signal lamp, replacing

Note! The illustrations in this service information are used for different model years and/or models. Some variation may occur. However, the essential information in the illustrations is always correct.

Preparatory work

Switch resetting

Ignition off.
Reset the lighting switch.

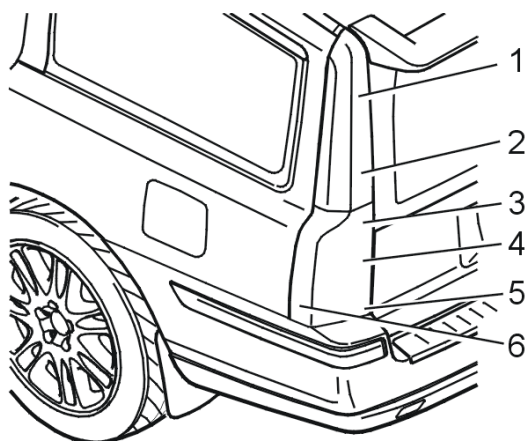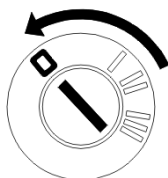

Location of components

Location

1. Turn signal lamps
2. Brake light
3. Tail lamps
4. Tail lamp/rear fog lamp
5. Back-up lamp
6. Side parking lamps.

Note! There is only a fog tail lamp bulb in one of the tail lamps. In the left tail lamp on left-hand drive vehicles or in the right tail lamp on right-hand drive vehicles.

Method content

This method consists of:

- [Bulb for turn signal lamp/stop lamp, replacing](#)
- [Bulb for tail lamp/fog tail lamp/back-up lamp/turn signal lamp, replacing](#)

Bulb for turn signal lamp/stop lamp, replacing


Removing the loudspeaker

Remove the loudspeaker D-post. See: [Loudspeaker, D-post, replacing](#).

Removing the bulb for turn signal lamps

Remove:

- the bulb holder and bulb
- the bulb.

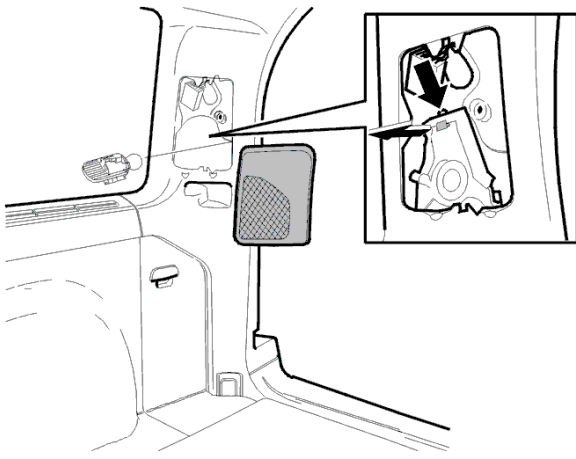

Installing the bulb for turn signal lamps


Install:

- the bulb
- the bulb holder and bulb.

Removing the bulb for stop lamps

Remove:

- the connector
- the bulb holder and bulb
- the bulb.

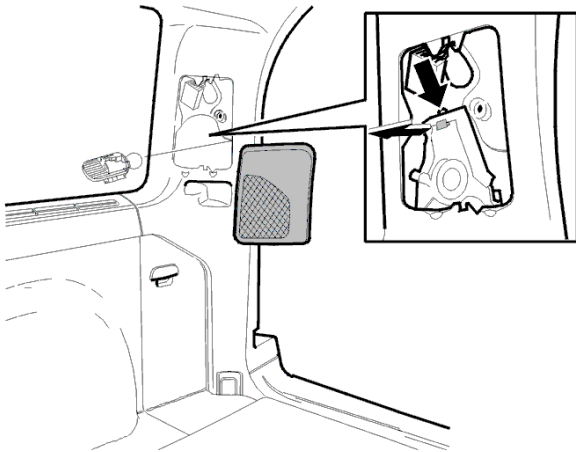

Installing the bulb for stop lamps

Install:

- the bulb
- the bulb holder and bulb
- the connector.

Installing the loudspeaker

Install the D-post loudspeaker. See: [Loudspeaker, D-post, replacing](#) .

Test the function.

Bulb for tail lamp/fog tail lamp/back-up lamp/turn signal lamp, replacing


Removing the side panel

Remove the cover in the side panel. See: [Side panel, cargo compartment, replacing](#) .

Removing the bulb for tail lamp/fog tail lamp/back-up lamp

Remove:

- the bulb holder and bulb
- the bulb.

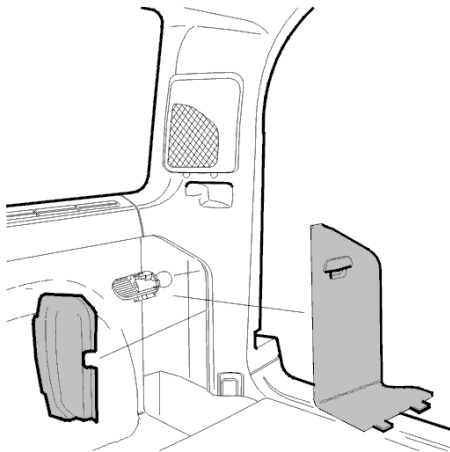

Installing the bulb for tail lamp/fog tail lamp/back-up lamp

Install:

- the bulb
- the bulb holder and bulb.

Installing the side panel

Install the cover in the side panel. See: [Side panel, cargo compartment, replacing](#) .

Test the function.


Removing the LED for the side marker lamps

Remove:

- the tail lamp. See: [Tail lamp, replacing](#)
- the 2 screws
- the cover.

Hint: Note the routing of the cable.

- the 2 flat pin connectors
- the LED plate.

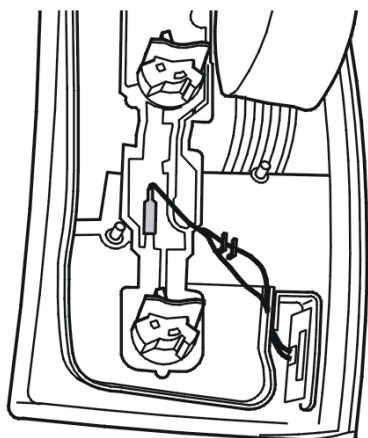

Installing the LED for the side marker lamps

Install the LED plate.

Note! Route the cable through the hole in the lamp housing.

Install:

- the 2 flat pin connectors
- the cover
- the 2 screws
- the tail lamp. See: [Tail lamp, replacing](#) .

Test the function.