

Service Manual

Cars

Section 3 (39)
Wiring diagrams
S70/V70 1998
C70 Coupé 1998

TP 3932202

Cars with SRS (Air bag)/SIPS bag

Warning

Cars equipped with a Supplemental Restraint System (SRS)/SIPS bag must be treated extra carefully when repairs are being made. This is to help prevent:

1. Injuries when carrying out a repair. 2. Damage or malfunction of the SRS/SIPS bag system. Repair to either the SRS/SIPS bag itself or a related system or component must be carried out by an authorized Volvo workshop. Refer to the appropriate SRS and SIPS bag service manual for complete system information.

Is the car equipped with SRS?

Cars with SRS are most easily recognized by the SRS letters on the steering wheel pad. If the car is also equipped with an air bag on the passenger side, the letters 'SRS' will be embossed on the instrument panel above the glove compartment. On models from 1993 on, cars with SRS will also be equipped with pyrotechnical seat belt tensioners in the B-posts.

The SIPS bags are only installed in cars equipped with SRS systems, 1995-. Cars with SIPS bags can be recognized by the identifying labels on the windshield and on seat storage tray.

Dashboard or around steering column

Take care to avoid the SRS wiring being pinched, frayed or pierced by screws when working on the firewall, knee bolster, ignition switch, steering column casings, glove compartment, instrument panel, door sills and B-posts.

Center console

The SRS collision sensor is located between the handbrake and gear lever (selector) in the center console. Never install accessories on or near the sensor.

Repairs to steering gear and column

When carrying out repairs to the steering wheel, steering gear or column always follow the repair procedures given in the appropriate SRS service manual. The contact reel in the steering column will be damaged if the steering wheel is turned more than three turns in either direction.

Seats

The SIPS bag sensor is located in the front section of the seat storage tray. The SIPS-bag can be activated by a blow or pressure on the tray or if an object is caught between the tray and the door when the door is closed. Refer to the SIPS bag Service manual when carrying out work on the front seats.

Test terminal

Data Link Connector socket in passenger compartment.

Modifications carried out up to and including June 1997

Any modifications made to the car after this date are not included in this manual. See Service Bulletin if necessary.

Volvos are sold in versions adapted for different markets. These adaptations depend on many factors including legal, taxation and market requirements. This manual may therefore show illustrations and text which do not apply to cars in your country.

Contents

Abbreviations	3	Stop (brake) lamps	
How to use the diagrams	4	C70	124
Fuses	6	S70	126
Rails in the central electrical unit	9	V70	128
Ignition switch	9	Back-up (reversing) lamps	130
Relays	10	Interior lighting	
Ground points	12	C70	132
Electrical distribution		S70/V70	134
Fenix 5.2	20	Instrument and control lighting	136
Motronic 4.3/4.4	22		
MSA 15.7	24	Group 36	
Connectors	26	Turn signal lamp and hazard warning signal	
Junction points	59	flasher	
Routing of cable harnesses in the car	78	C70	138
		S70	140
		V70	142
Group 23/28		Horn	144
Engine management system		Wipers	
Fenix 5.2	88	Windshield	146
Motronic 4.3/4.4	92	Headlamp	146
Engine management system MSA 15.7	96	Rear windshield	148
		Cigarette lighter / 12V-output	150
Group 26		Anti-theft alarm	
Engine cooling fan		C70	152
Fenix 5.2, Motronic 4.3/4.4	100	S70/V70	154
MSA 15.7	102	Immobilizer	
		Fenix 5.2, Motronic 4.3/4.4	156
		MSA 15.7	158
Group 27		Group 37	
Cruise control		On board diagnostic system (OBD)	
Fenix 5.2, Motronic 4.3/4.4	104	Fenix 5.2, Motronic 4.3/4.4	160
MSA 15.7	106	MSA 15.7	162
Group 32/33		Tow hitch wiring	
Power supply and starter system	108	C70	164
		Accessory wiring	166
		Cool box wiring	168
Group 35		Group 38	
High and low beams	110	Seat belt reminder	170
Headlamp range adjustment	112	Seat belt reminder and key warning	
Fog lamp		USA, Canada and Korea	172
C70	114	Australia	174
S70/V70	116	Combined instrument panel	176
Parking lamps, tail lamp and license plate lighting			
C70	118		
S70	120		
V70	122		

Continued on next page

Order number TP3932202

Replaces the previous manuals TP3922201, TP3931201 and TP3932201

We reserve the right to make alterations without prior notification

There are a number of abbreviations in the book. These are explained below.

Countries/Markets:

A	= Austria
AUS	= Australia
B	= Belgium
CDN	= Canada
CH	= Switzerland
D	= Germany
DK	= Denmark
E	= Spain
EU/OS	= Markets outside the USA and Canada
FIN	= Finland
GB	= Great Britain
J	= Japan
KOR	= Korea
N	= Norway
NL	= Holland
S	= Sweden
WEU	= Western Europe

Colors:

BL	= Blue
BN	= Brown
GN	= Green
GR	= Gray
OR	= Orange
P	= Pink
R	= Red
SB	= Black
VO	= Violet
W	= White
Y	= Yellow

Other:

ALTER	= Alternative
AUTO	= Automatic transmission
AWD	= All wheel drive
C70	= 2-door
EARLY	= Early version
EXC	= Exclusive
GA	= Anti-theft alarm
IMMO	= Immobilizer
LATE	= Late version
LH	= Left-hand side
LHD	= Left-hand drive
MAN	= Manual transmission
OTHERS	= Others
RH	= Right-hand side
RHD	= Right-hand drive
S70	= 4-door
V70	= 5-door
W/O	= Without

USA and Canada:

MOD1	= Early version, S70 -CH 459999 V70 -CH 395001
MOD2	= Late version, S70 CH 460000- V70 CH 395002- C70 all

Markets outside USA and Canada:

MOD1	= Model year 1997
MOD2	= Model year 1998

How to use the diagrams

A. Component designation

Each component has a component designation. This consists of a type number and a component number.

There is a list of component designations at the end of the book where you can obtain the components names.

B. Type number


The first part of the component designation indicates what type of component it is, for example switch, electric motor, etc.

Type numbers:

- 1 Battery
 - 2 Relay
 - 3 Switch
 - 4 Control module
 - 5 Combined instrument panel
 - 6 Electric motor
 - 7 Sensor
 - 8 Actuator
 - 9 Heater pad
 - 10 Lamp
 - 11 Fuse
 - 13 Junction point
 - 15 Distribution rail, power supply
 - 16 Audio
 - 17 Service/ On board diagnostic system (OBD)
 - 18 Contact reel
 - 19 Gauges
 - 20 Ignition components/ resistors
 - 23 Junction point
 - 24 Connectors
 - 31 Ground point
 - 33 Junction point
 - 34 Terminal block/-bridge
- A Connector
B Connector
C Connector
D Connector

C. Component number

The second part of the component designation indicates which specific component it is, light switch, central locking motor, etc.

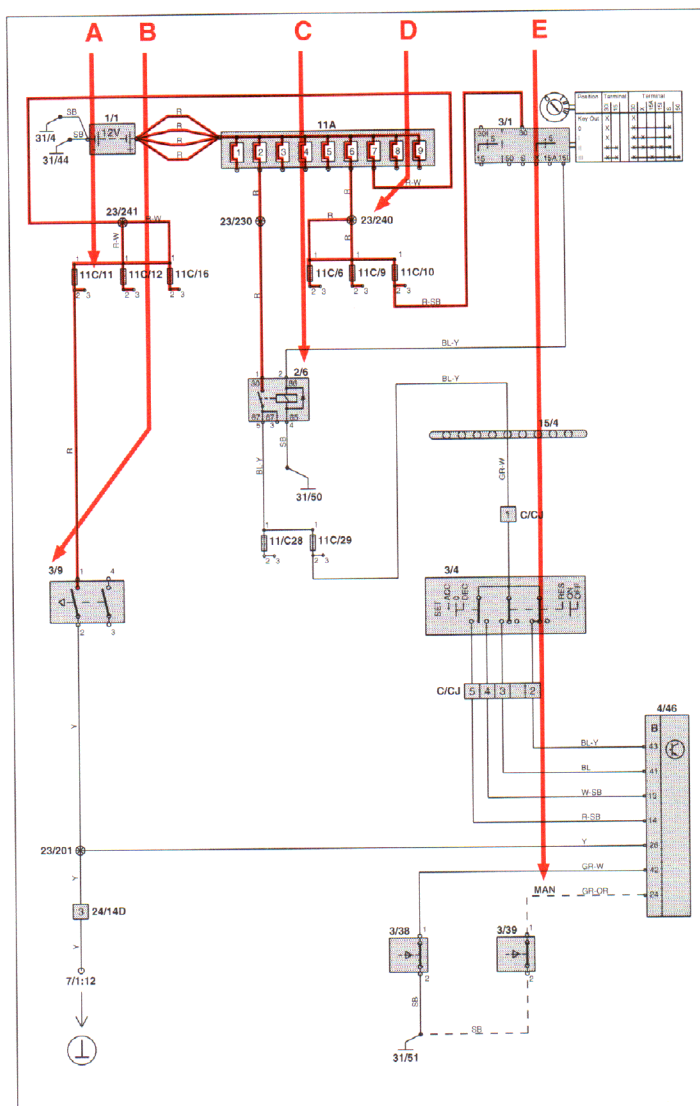









Explanation of symbols

- = No voltage
- = System voltage
- = Voltage less than system voltage
- = Pulsed voltage
- = Ground point
- = Shielded cable
- = Junction point
- = Twinned cables
- = Electrical connection
- = No electrical connection
- = Variant
- = The cable continues to component

Fuses

LHD

RHD

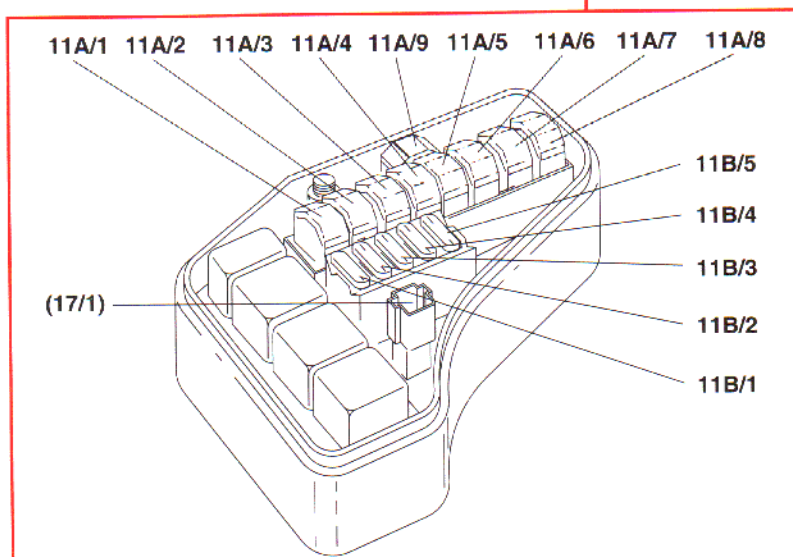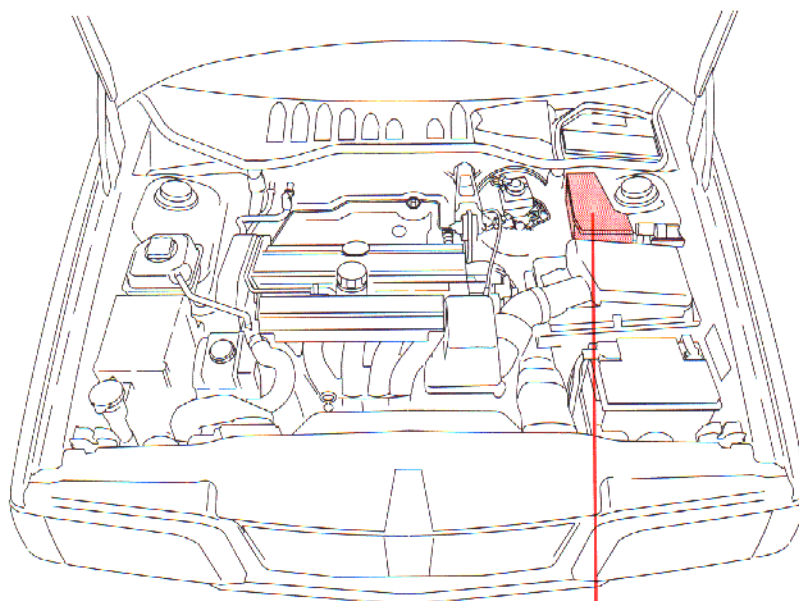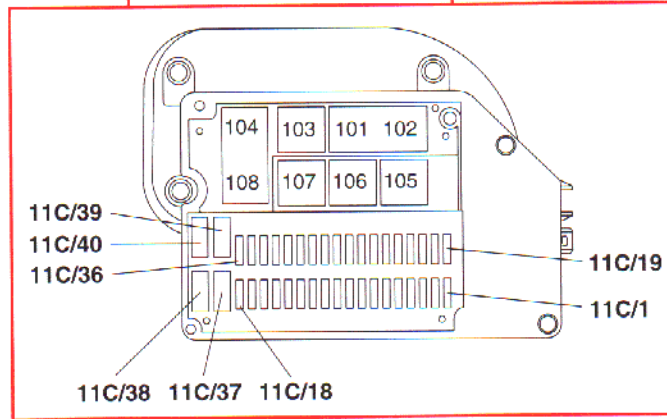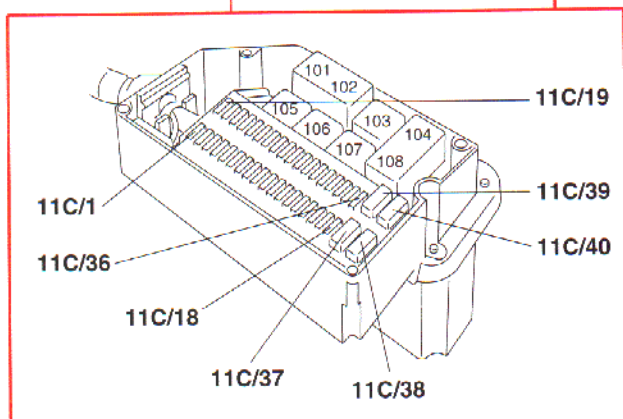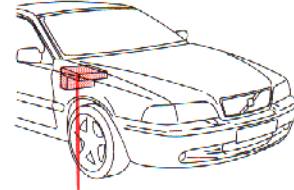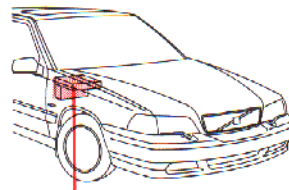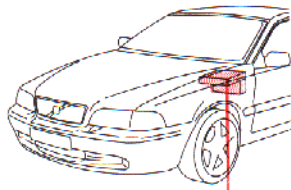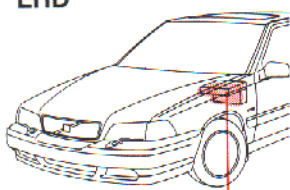


Rails in the central electrical unit



- 15/4 15I-rail
- 15/8 X-rail
- 31/50 Ground rail (power ground)
- 31/51 Ground rail (signal ground)

LHD


RHD

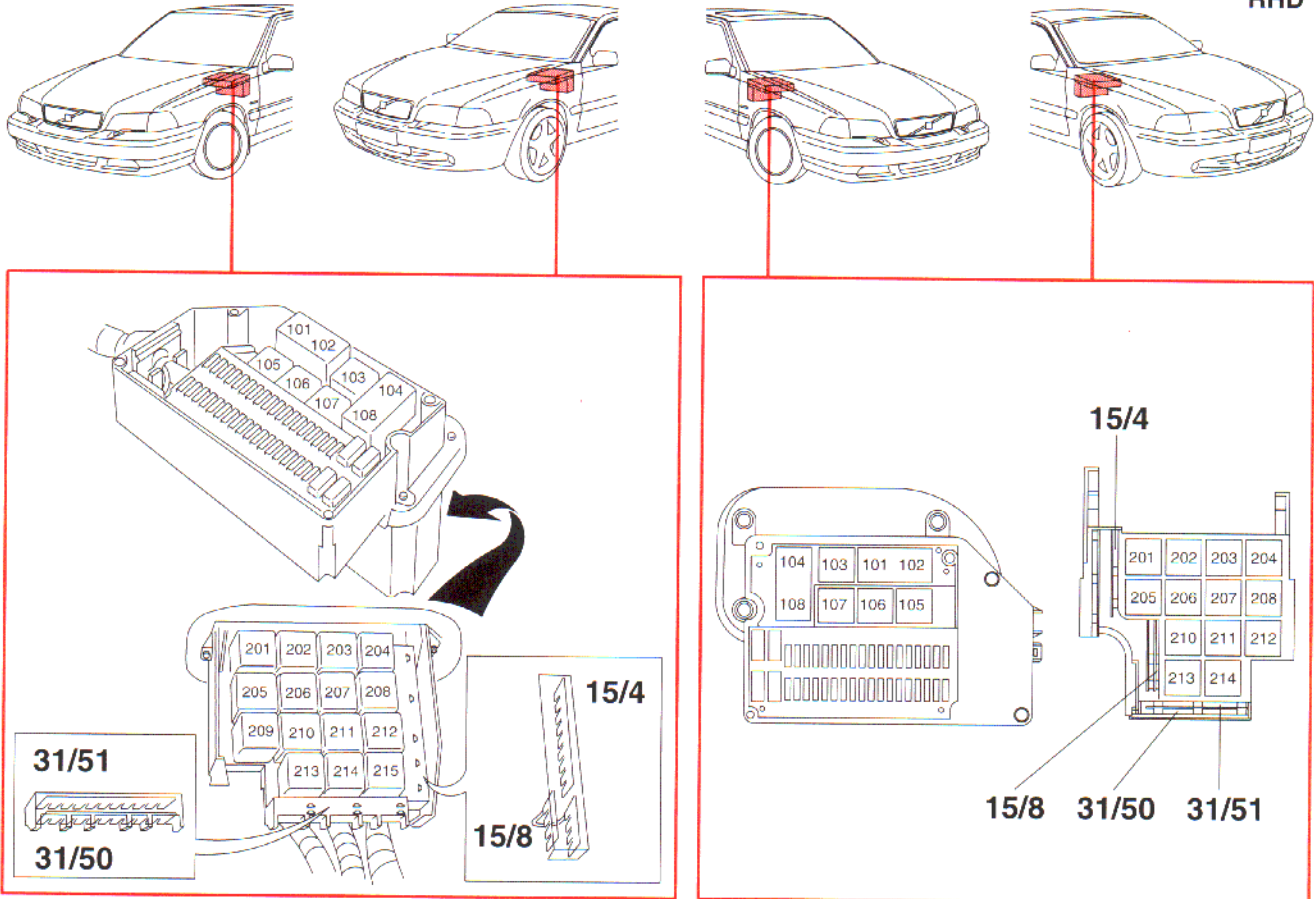




Ignition switch

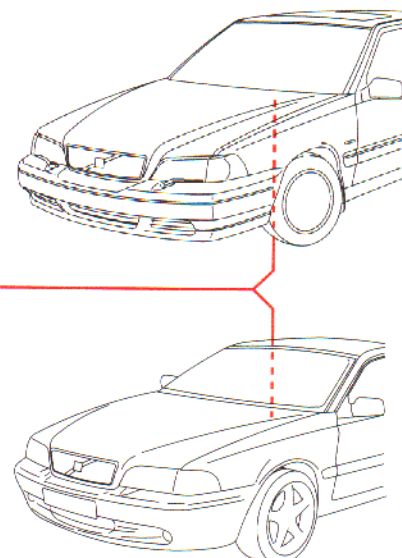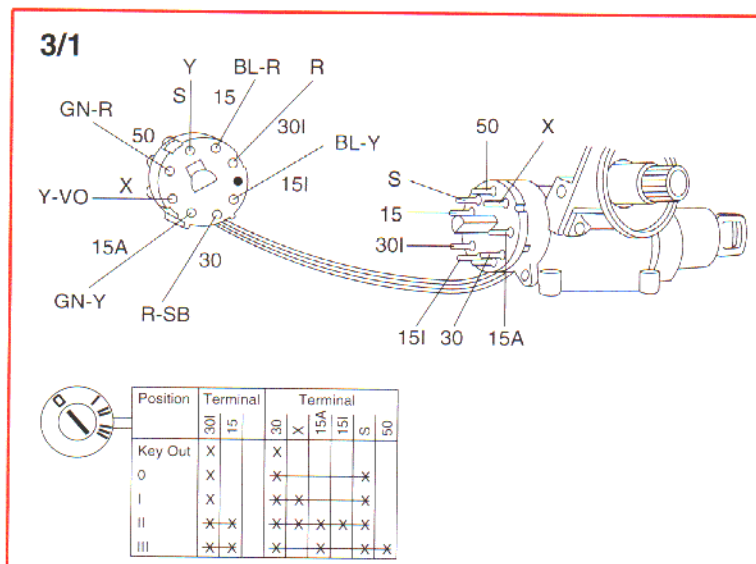




Relays

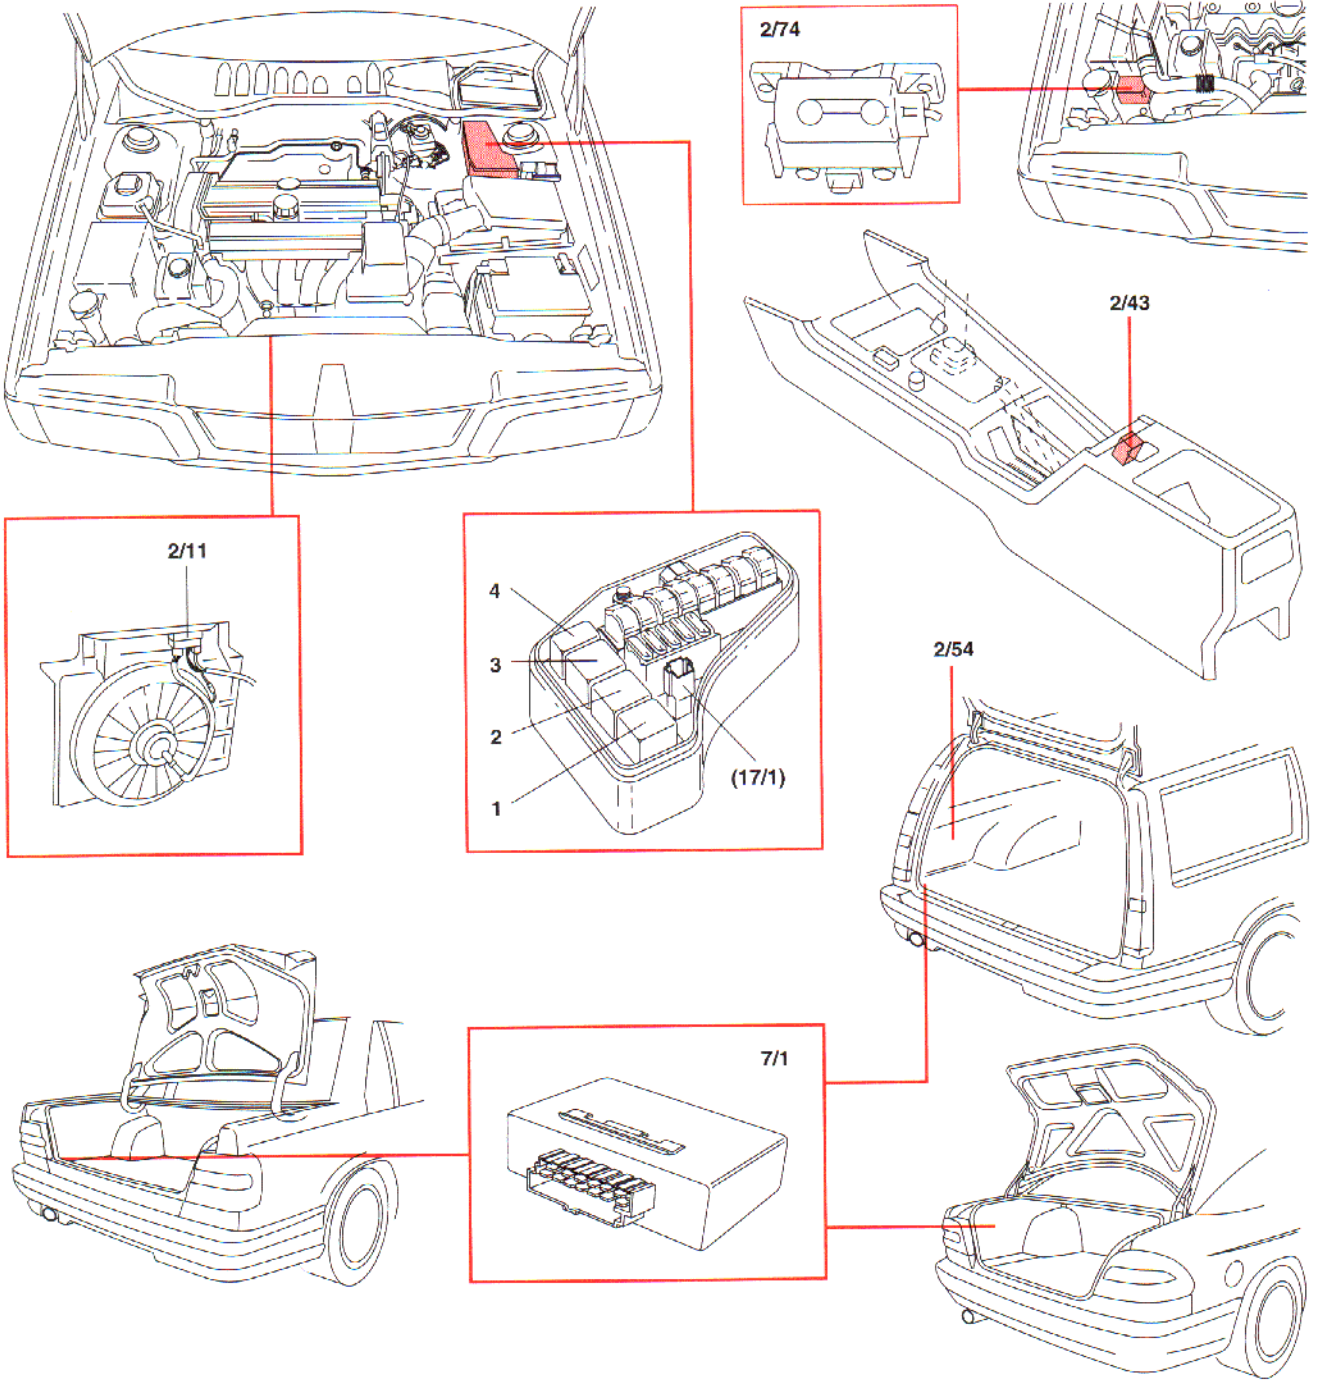


LHD

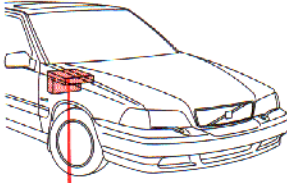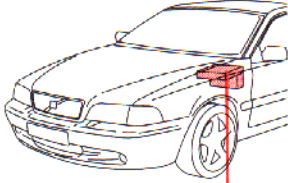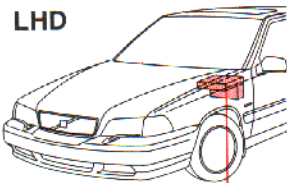


RHD

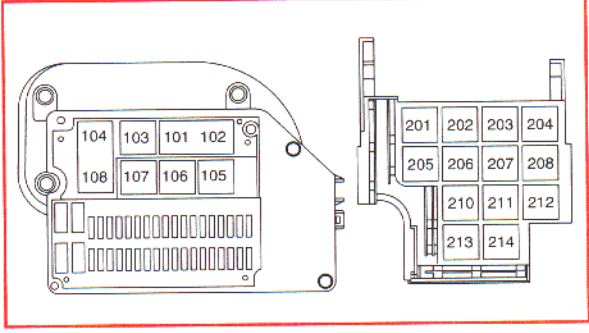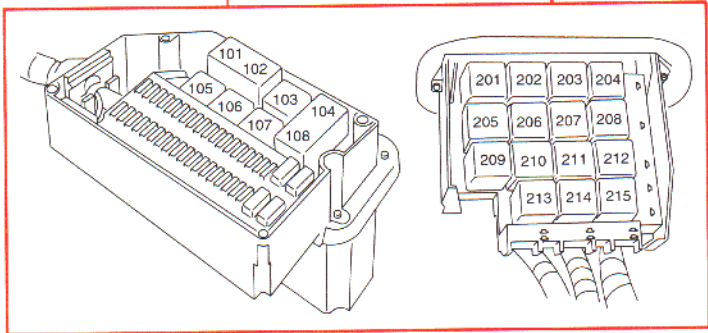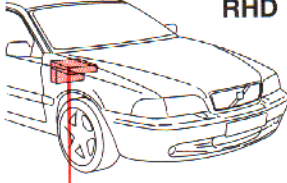


Ground points

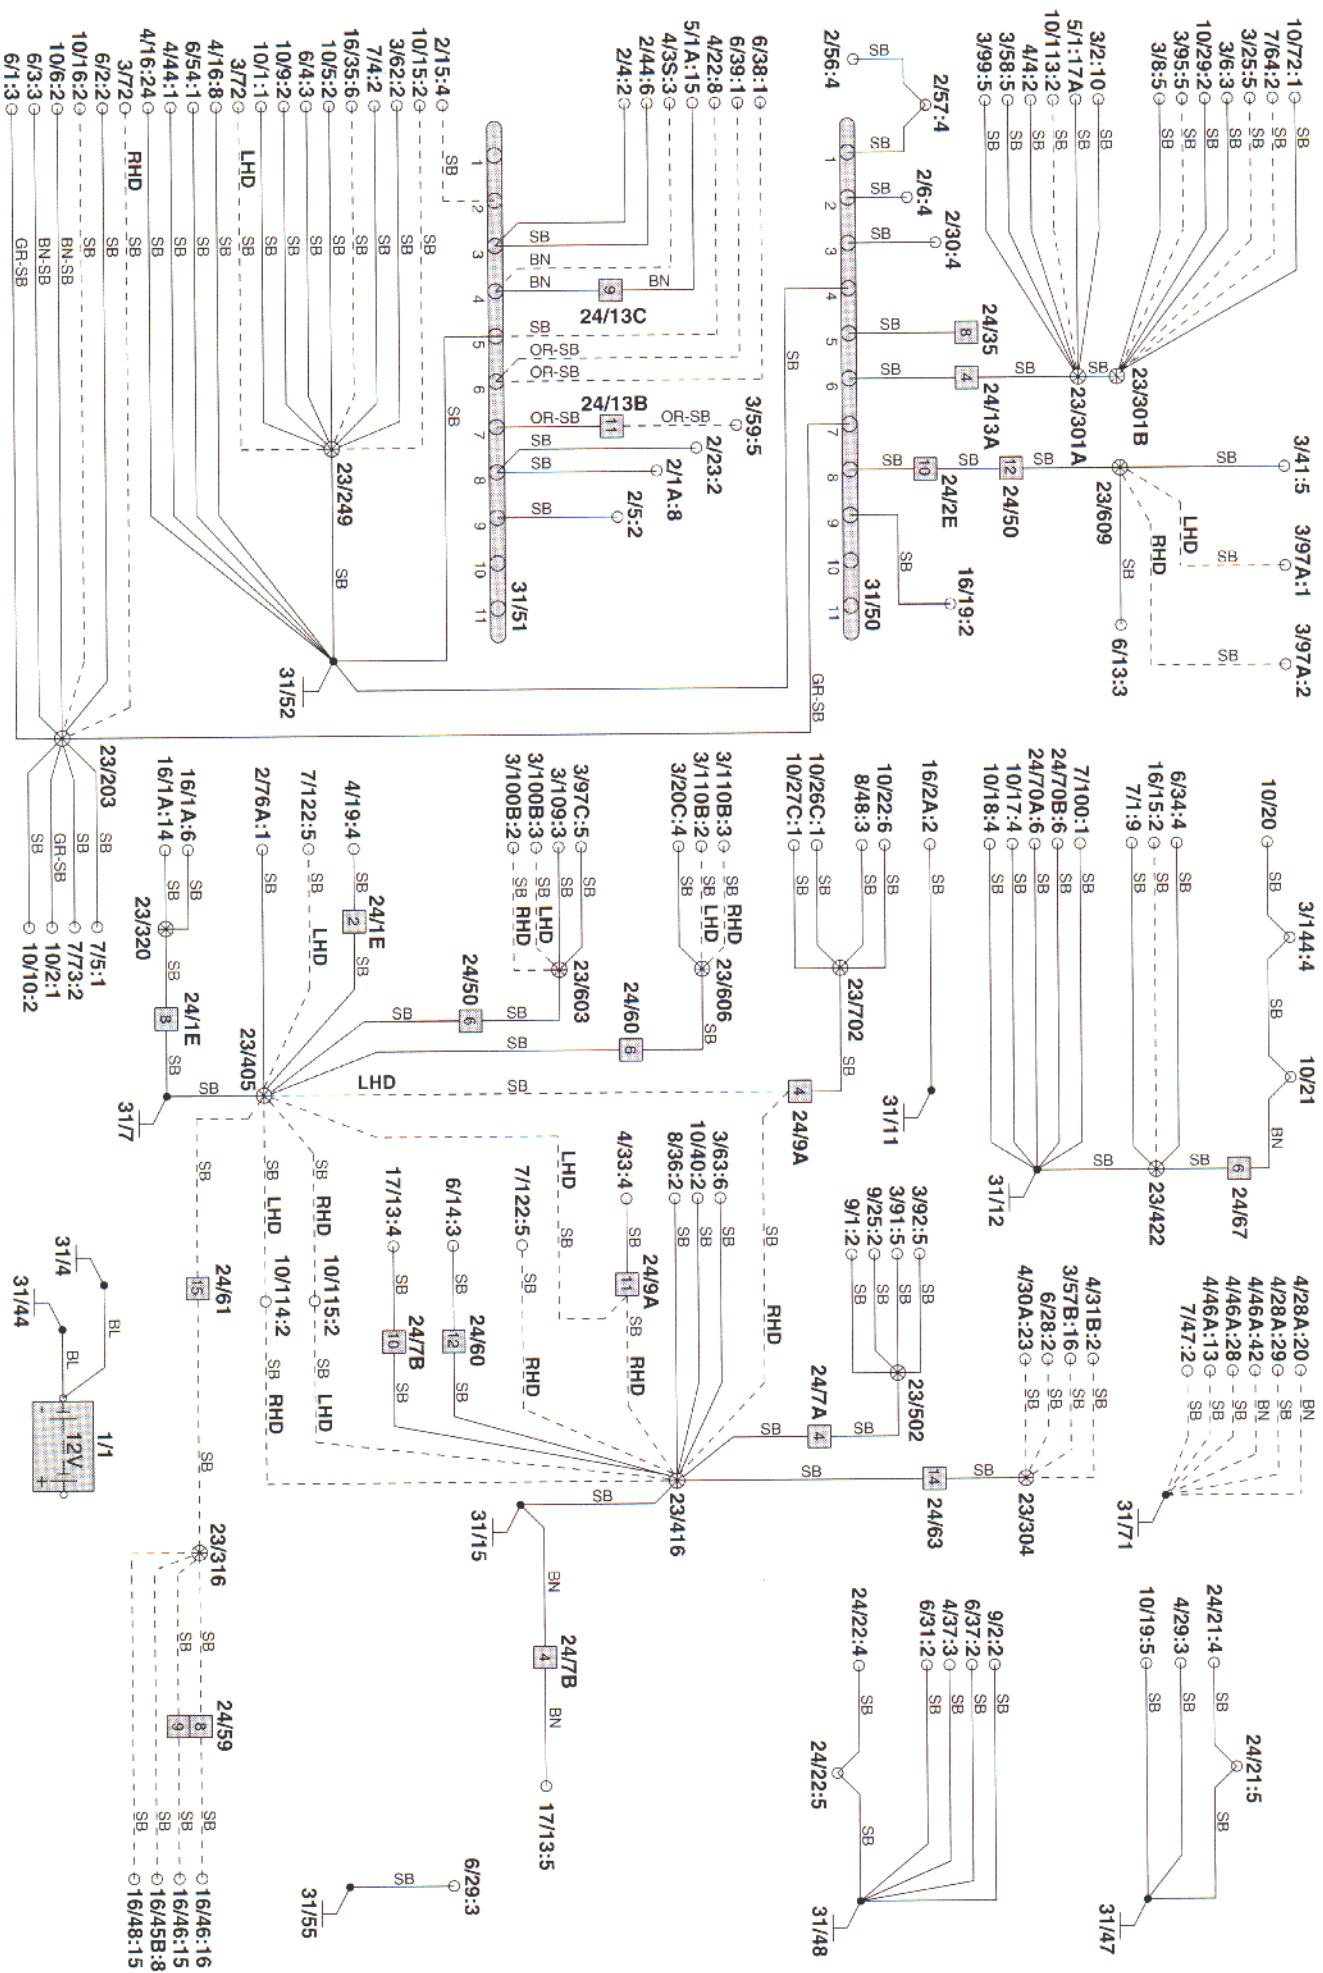

Electrical distribution Fenix 5.2

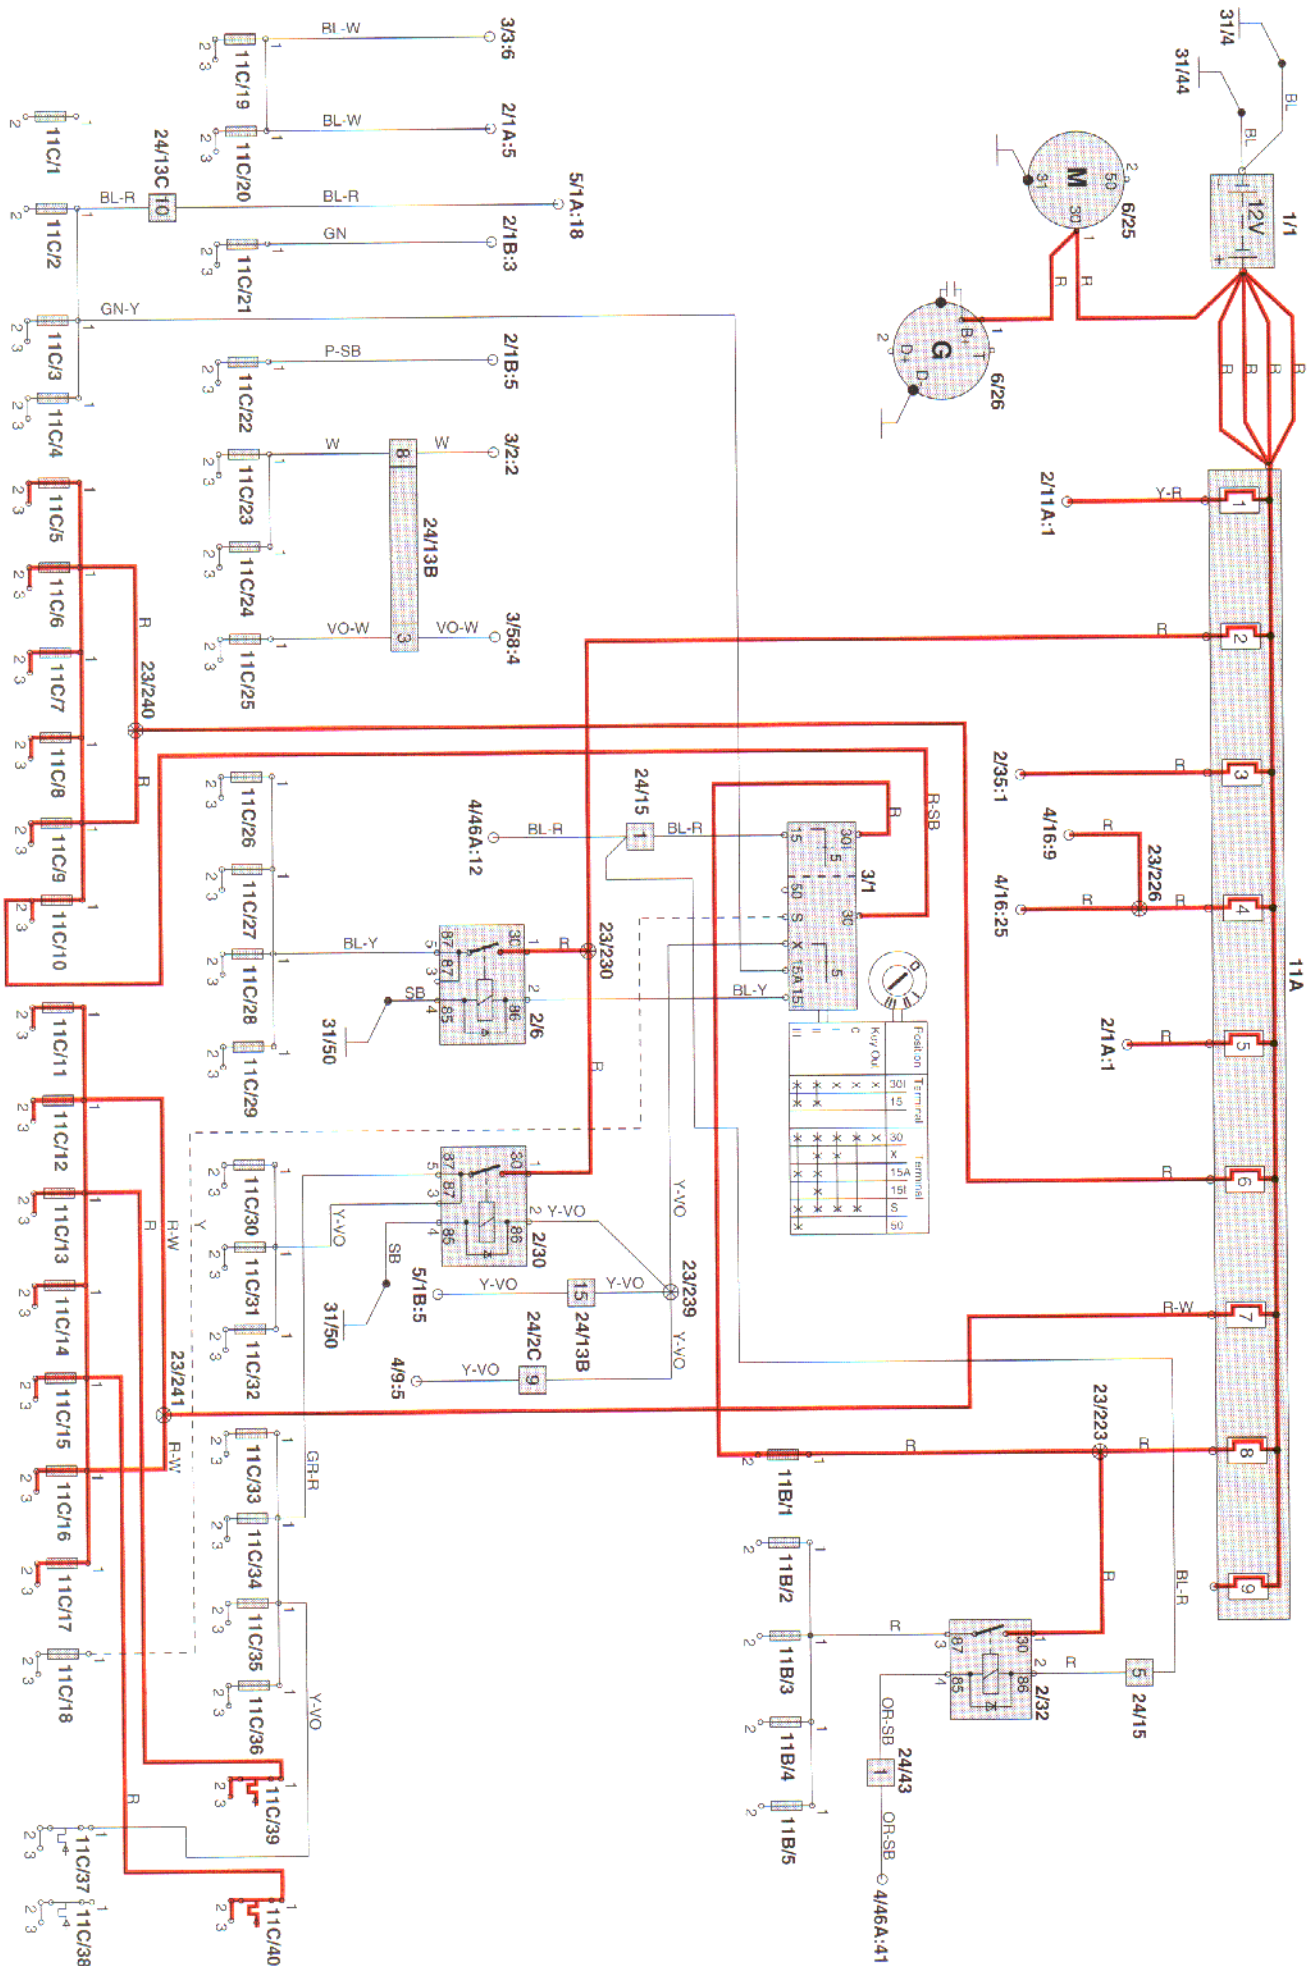


Electrical distribution Motronic 4.3/4.4

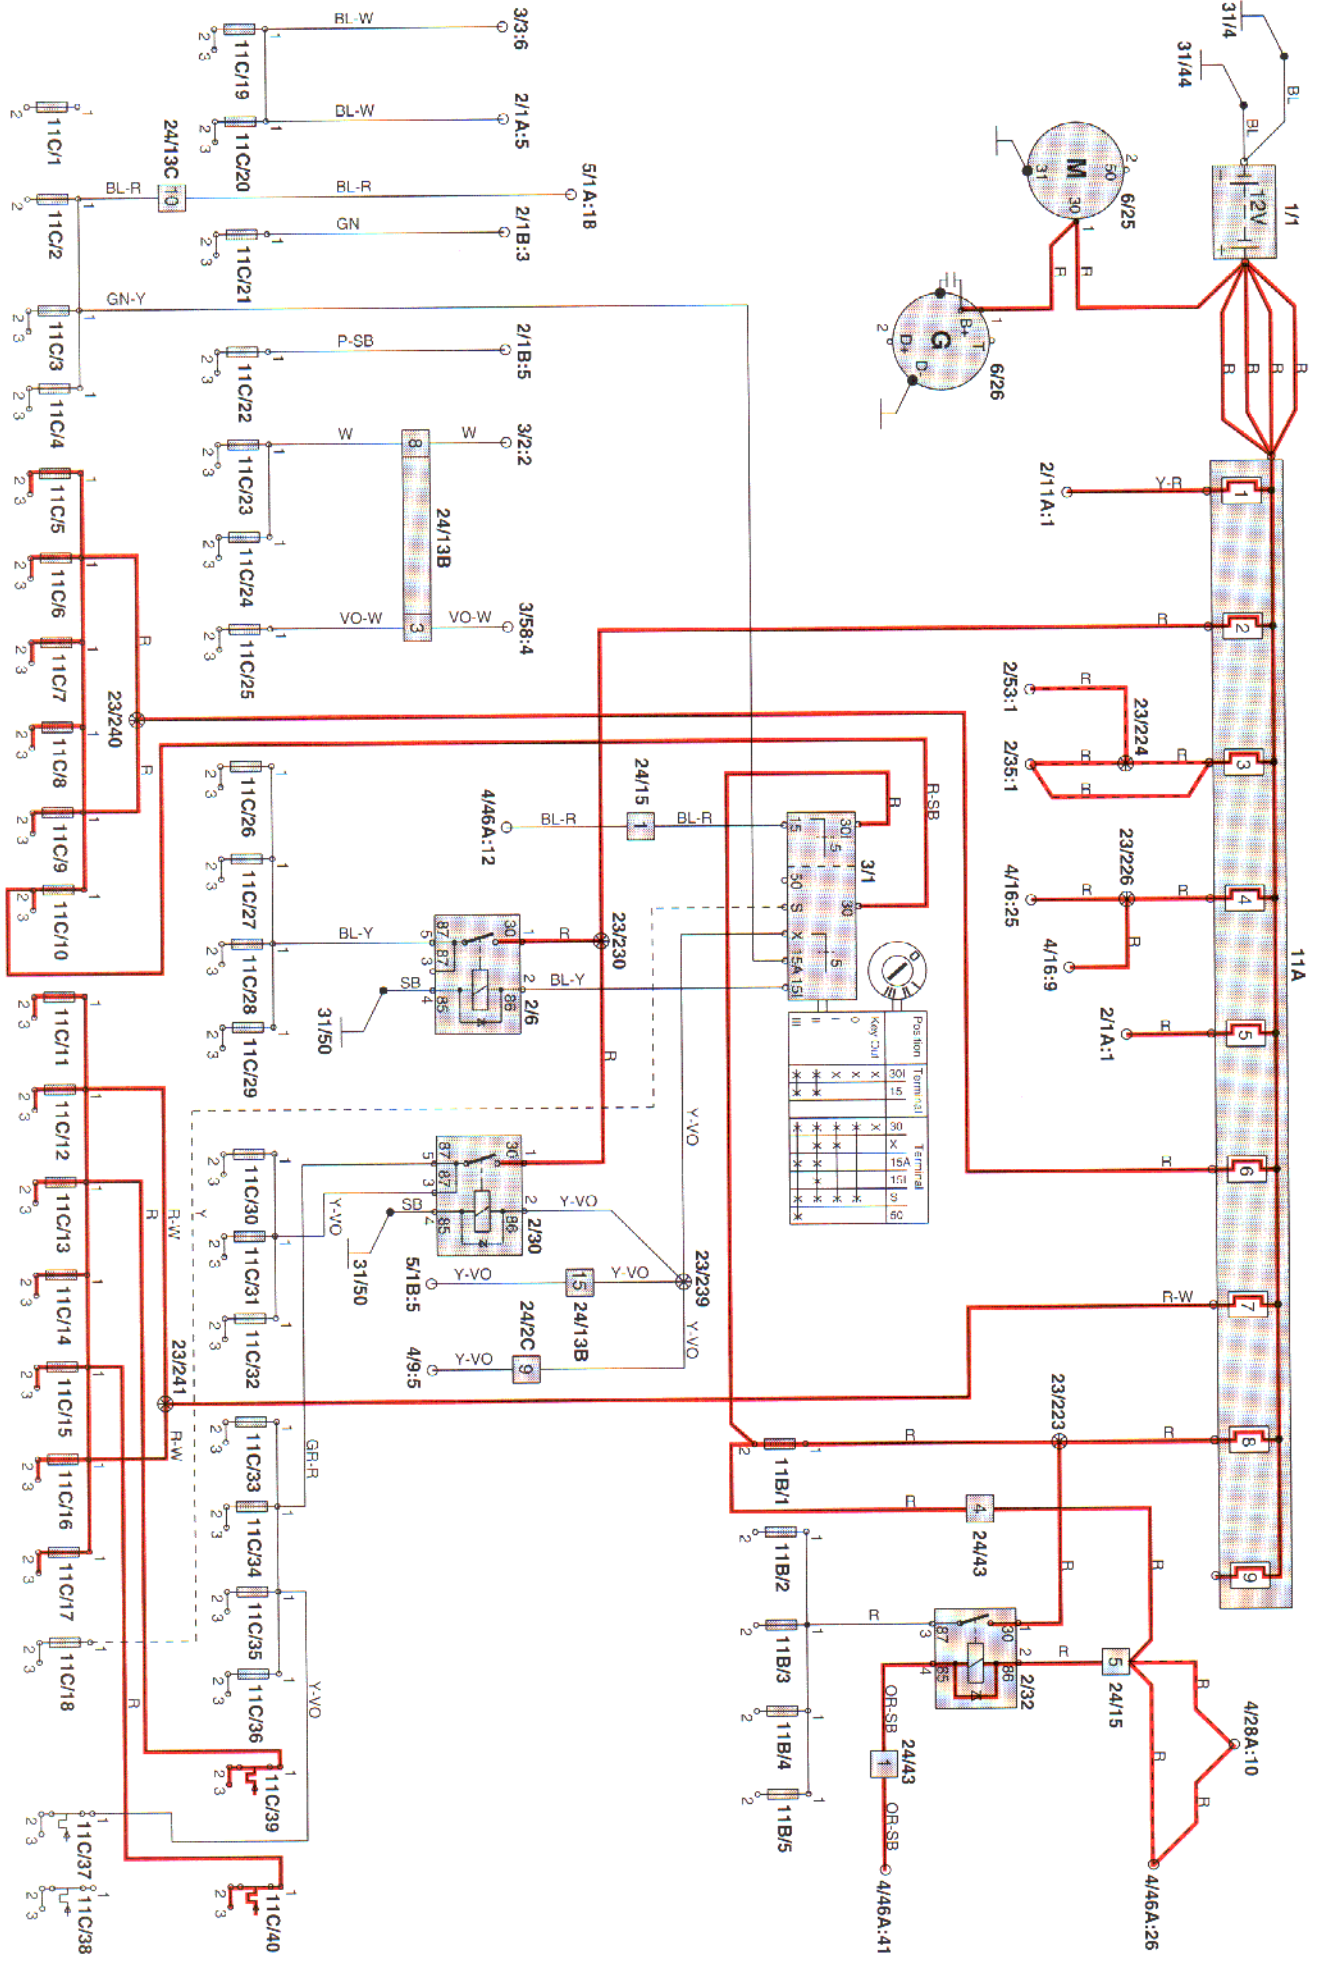


Electrical distribution

MSA 15.7

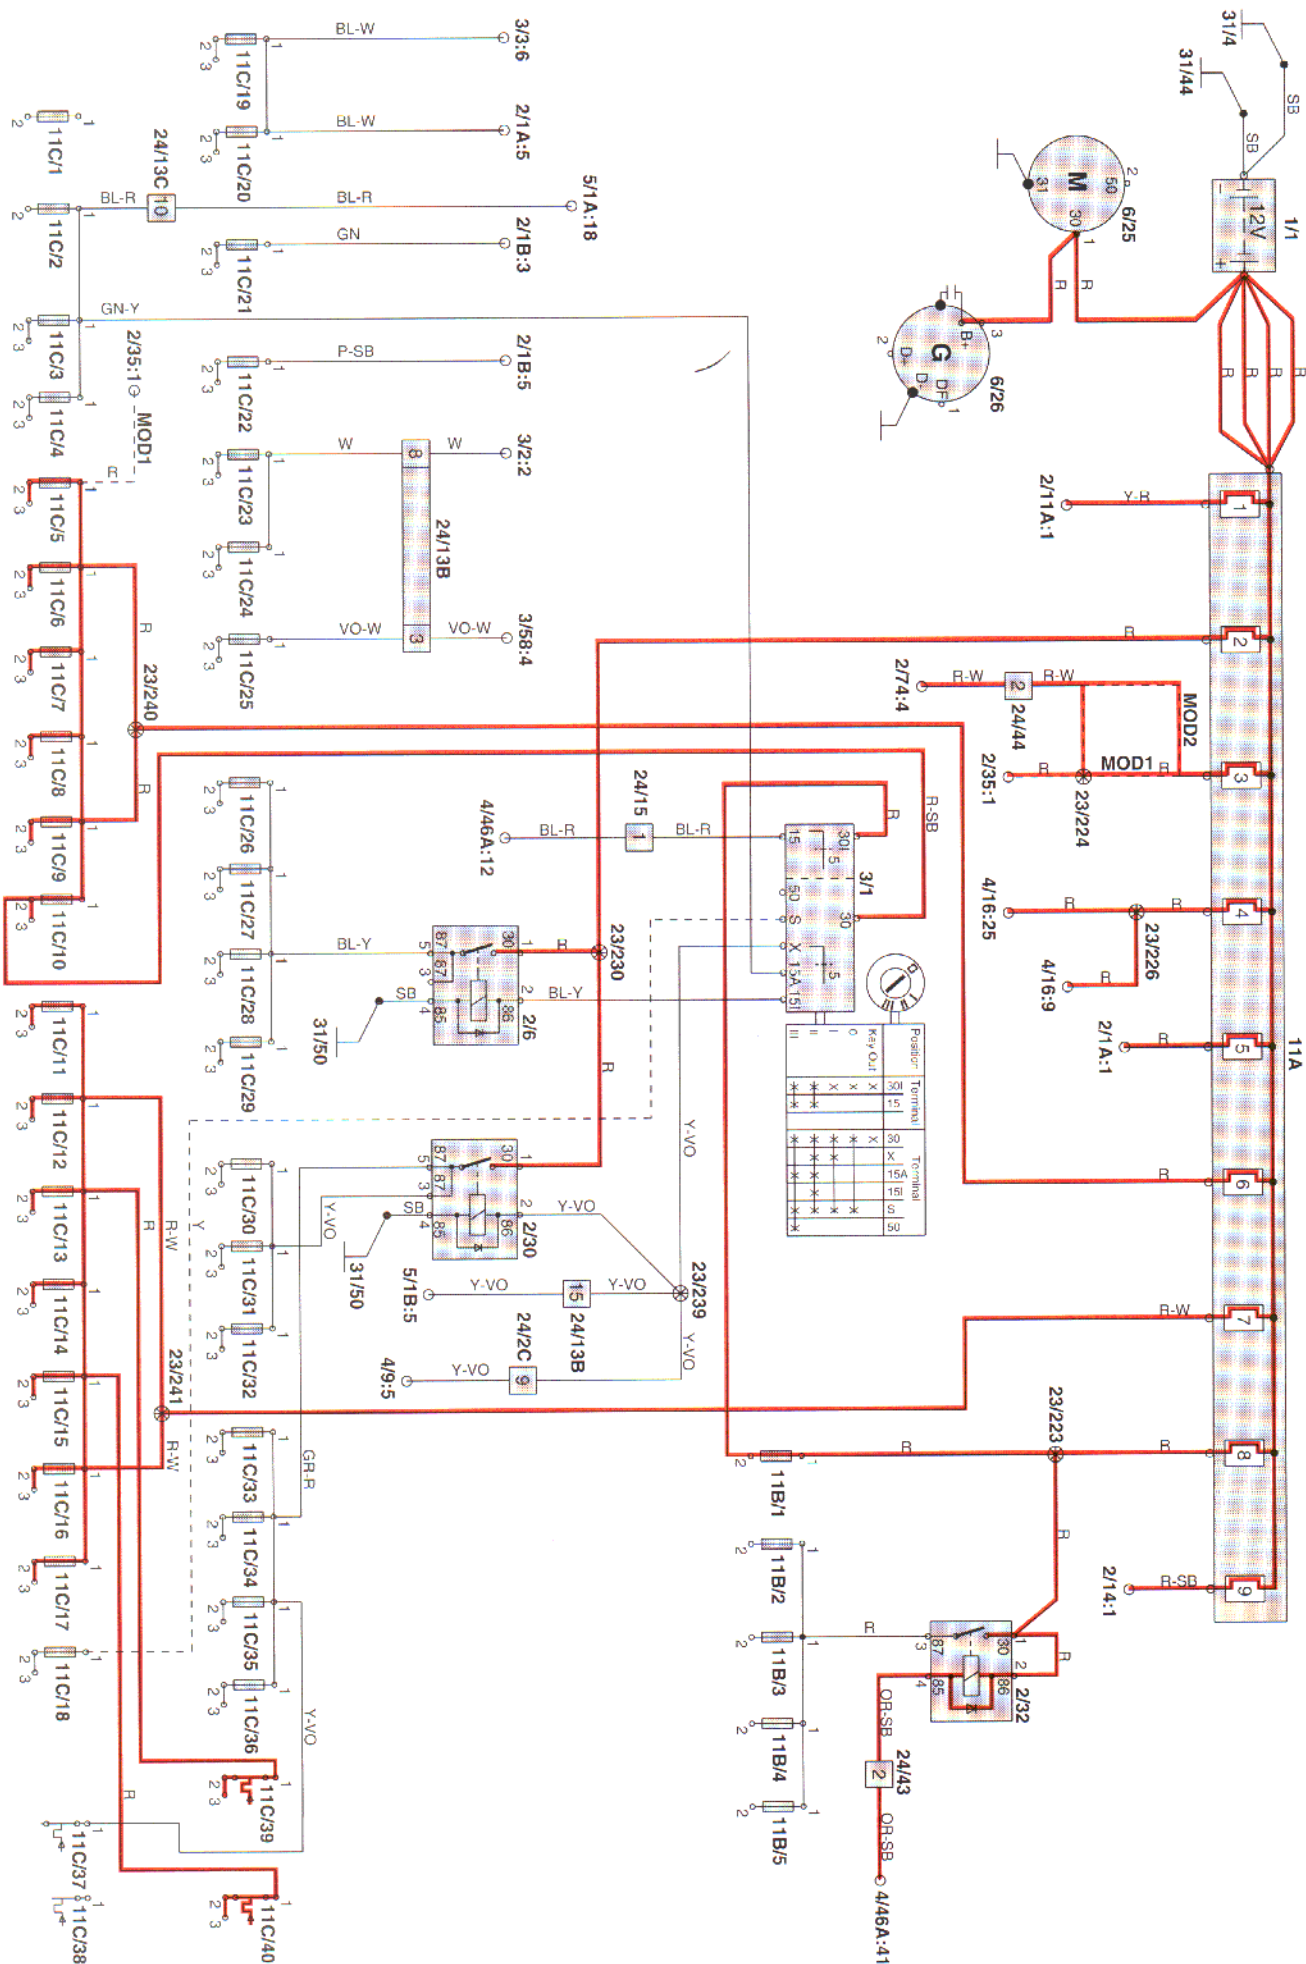

Connector 24/1

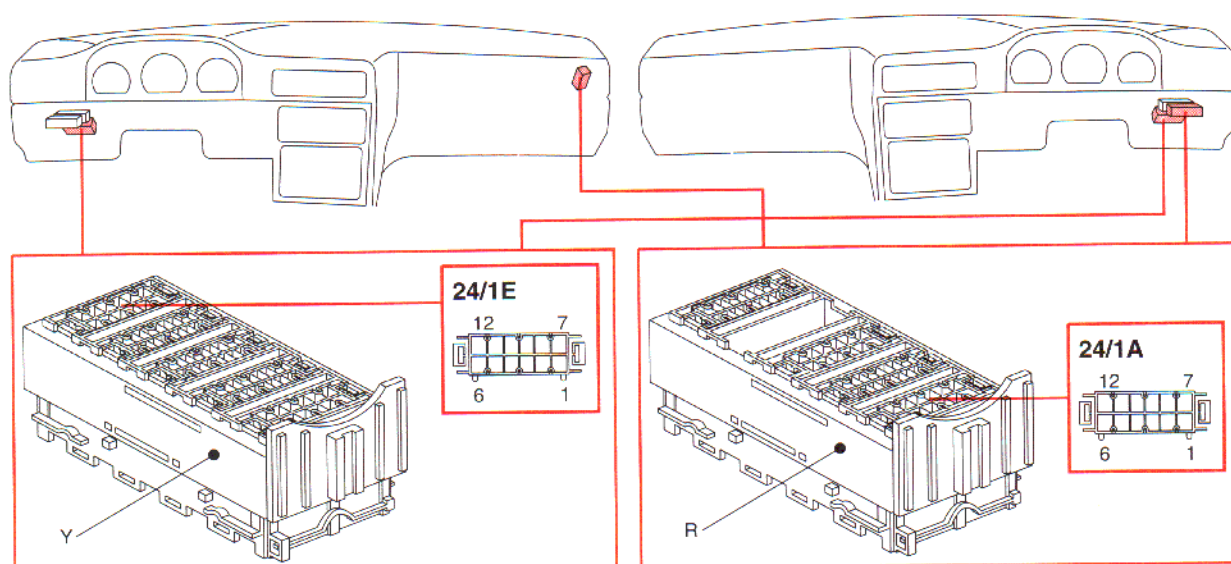

24/1A Green 12-pin (C70) Instrument panel harness - Firewall harness

Term.	Female	Male	Color
1-4	-	-	
5	Loudspeakers left-hand side :2	Connector 24/3B:8	GN-SB
6	Loudspeakers left-hand side :1	Connector 24/3B:12	GN-W
7-10	-	-	
11	Loudspeakers right-hand side :1	Connector 24/3C:1	R-W
12	Loudspeakers right-hand side :2	Connector 24/3C:6	R-SB

24/1E White 12-pin Instrument panel harness - Firewall harness

Term.	Female	Male	Color
1	Combined instrument panel B:13	Parking brake switch connector 24/61:5	Y
2	Remote control module :4 Glass breakage sensor :5 (S70/V70)	ground terminal 31/7 [via 23/405]	SB
3	Remote control module :1	Control module lock/alarm A:8	GN-GR / GN-W
4	Remote control module :2	Control module lock/alarm A:9	GN-W
5	Remote control module :3	Control module lock/alarm B:16	GN-Y
6	Combined instrument panel A:4	Connector 24/4B:2	Y-GR
7	Combined instrument panel A:5	Connector 24/4B:3	Y-R
8	Junction point 23/320	Ground terminal 31/7	SB
9	Airbag passenger side :1	SRS Sensor module :13	GN
10	Junction point 23/300	Junction point 23/414	P
11	Combined instrument panel B:3	Control module SRS :7	GN-BN
12	Airbag passenger side :2	Control module SRS :14	W

General

For location of branching points in the car refer to section
 "Cable harness routing in the car" see pages 78-87

23/6 (Engine harness)

To/from		Color	Note
24/43:2	Engine compartment harness (fuse 11B/5:2)	GN-OR	
7/15:1	Heated oxygen sensor (HO2S), front	GN-OR	
8/18:1	Canister purge (CP) valve	GN-OR	
8/43	Solenoid valve pulsed secondary air injection system (PAIR)	GN-OR	
7/82:1	Heated oxygen sensor (HO2S), rear	GN-OR	
7/47	PTC resistor preheating	GN-OR	

23/8 (Engine harness, in the control module box.)

To/from		Color	Note
7/105	Outside temperature sensor engine control module (ECM)	BN-SB	Gasoline
4/46A:18	Engine control module (ECM)	BN-SB	Gasoline
4/46:35	Engine control module (ECM)	BN-SB	
7/21:1	Camshaft position (CMP) sensor	BN-SB	Gasoline
7/54:1	Throttle position (TP) sensor	BN-SB	Gasoline
7/16:2	Engine coolant temperature (ECT) sensor	BN-SB	Gasoline
7/81:A	Manifold absolute pressure (MAP) sensor	BN-SB	Fenix
7/77:2	Air intake temperature sensor	BN-SB	Fenix
6/31:4	Fuel injection pump	BN-SB	Diesel

23/10 (Engine harness)


To/from		Color	Note
4/46:15	Engine control module (ECM)	VO	
7/54:2	Throttle position (TP) sensor	VO	
7/81:C	Manifold absolute pressure (MAP) sensor	VO	

23/11 (Engine harness, gasoline)

To/from		Color	Note
24/43:3	Engine compartment harness (fuse 11B/2:2)	GN	
4/46A:27	Engine control module (ECM)	GN	
8/5:1	Idle air control (IAC) valve	GN	
8/5:2	Idle air control (IAC) valve	GN	
7/17:3	Mass air flow (MAF) sensor	GN	
8/6-10	Injectors	GN	


Routing of cable harnesses in the car

Engine compartment harness Engine harness

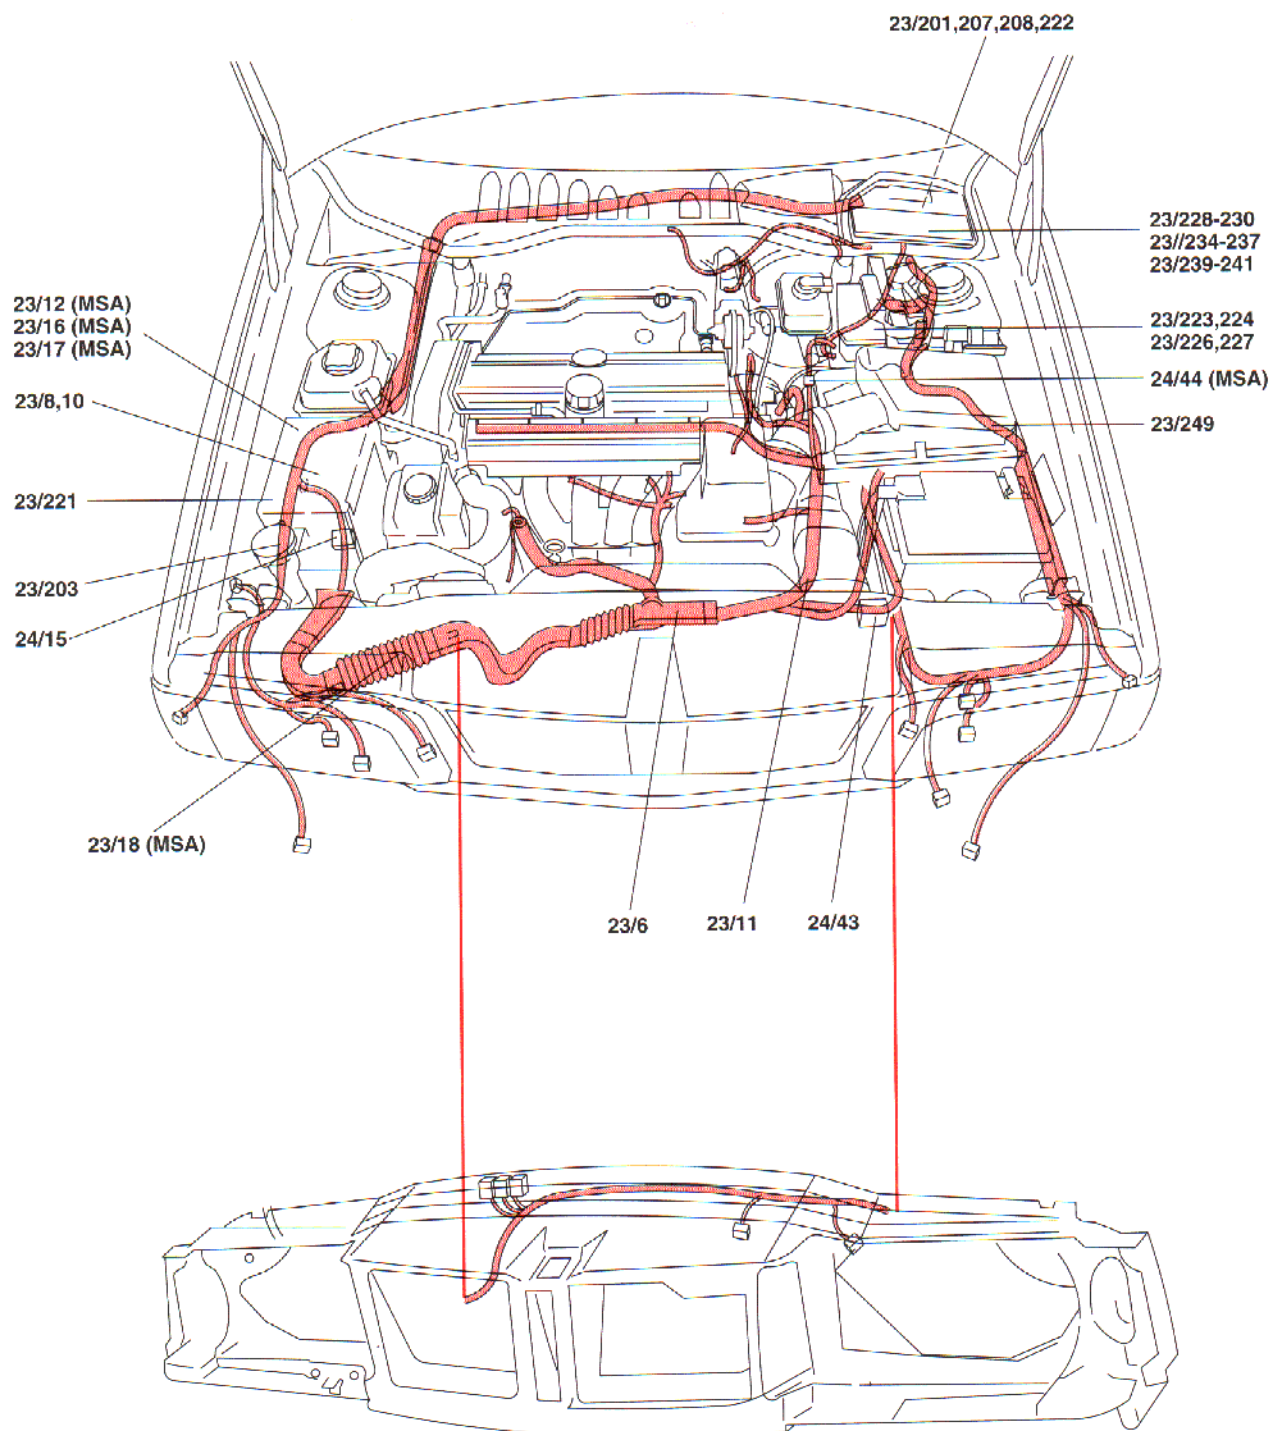


Fuel and ignition system


Fenix 5.2

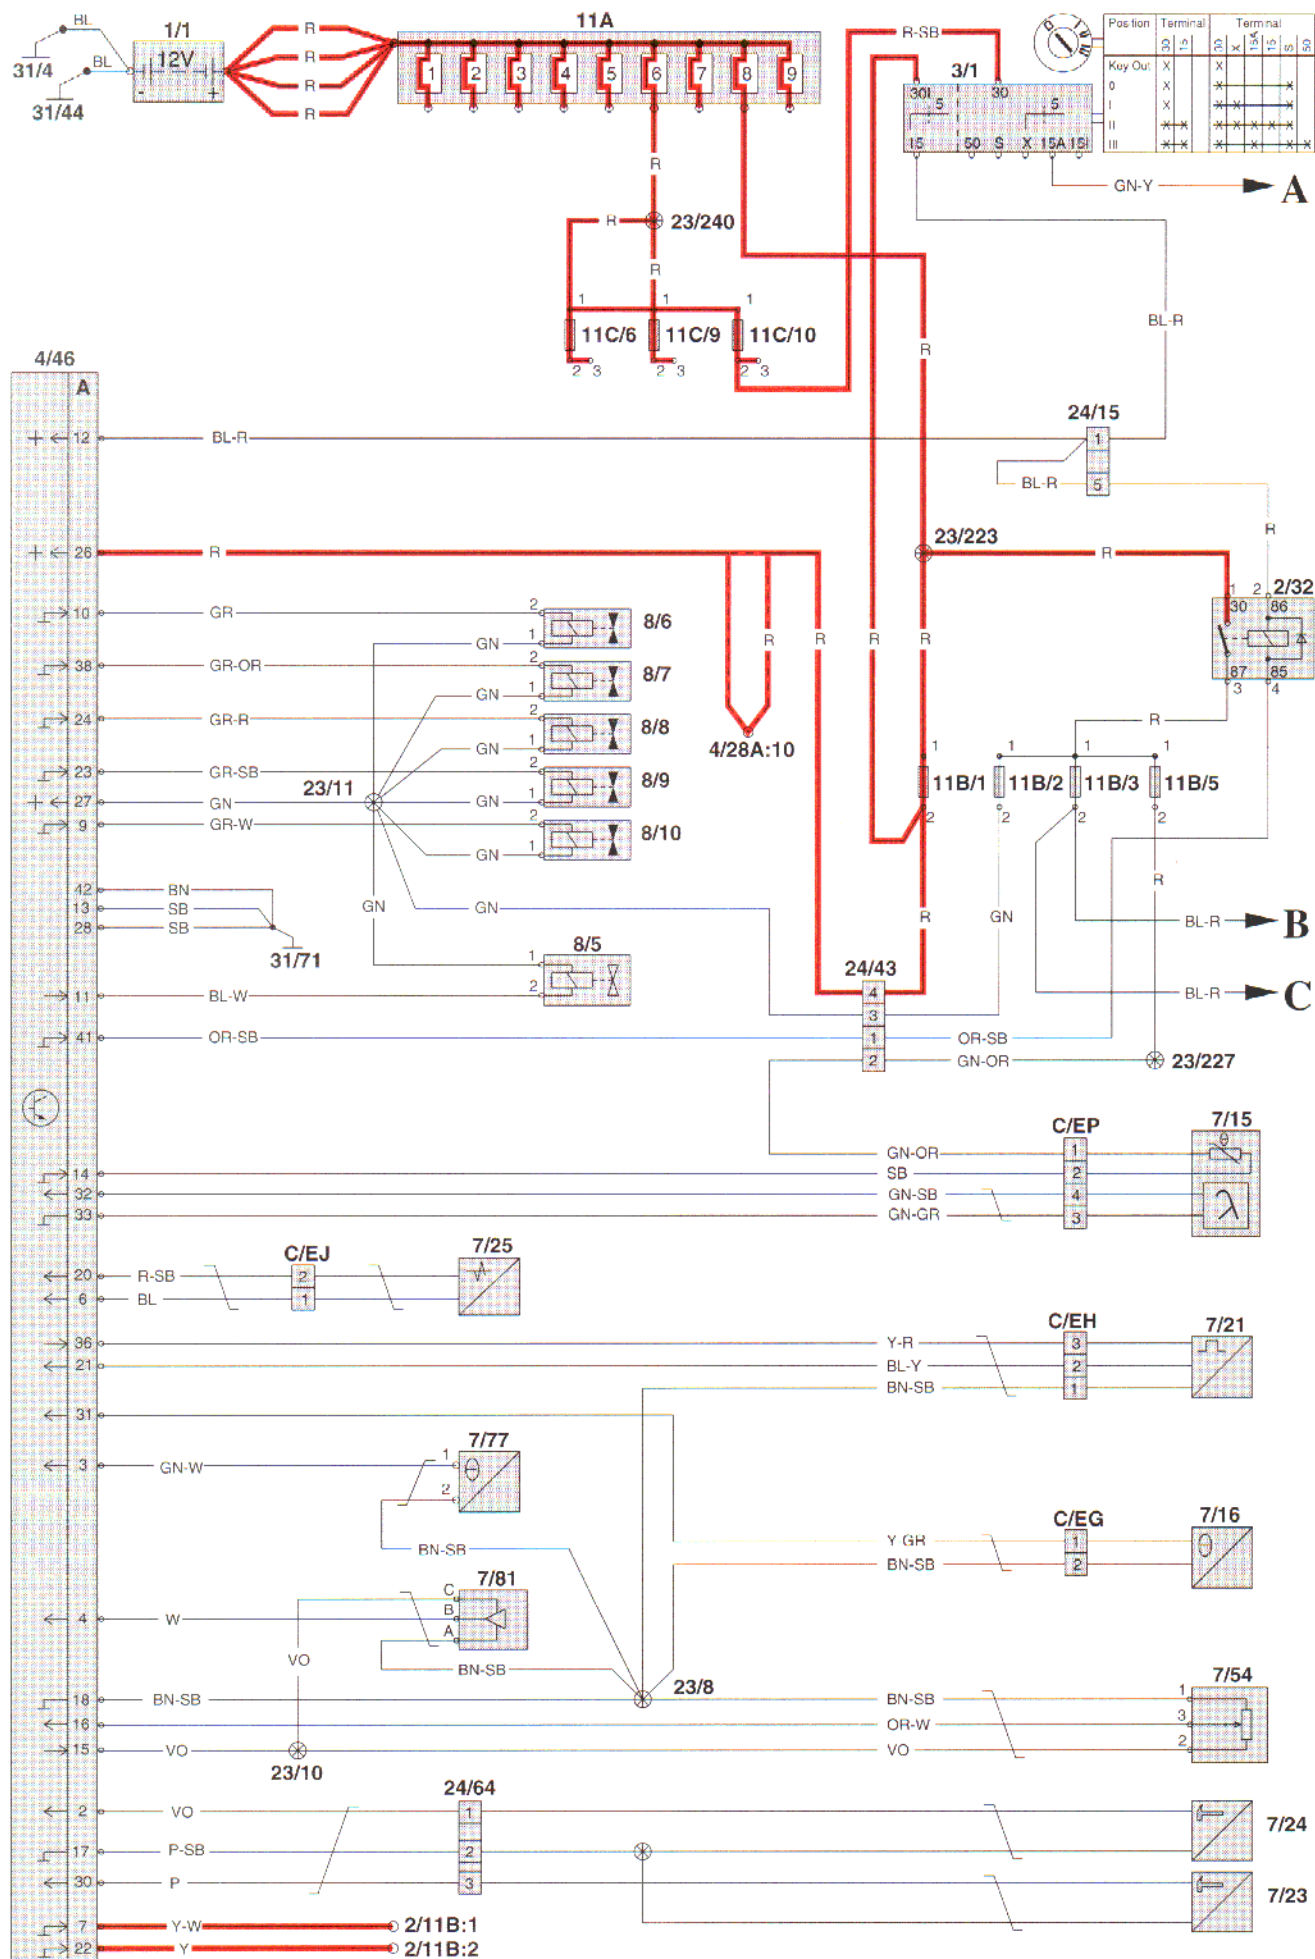


Fuel and ignition system Motronic 4.3/4.4

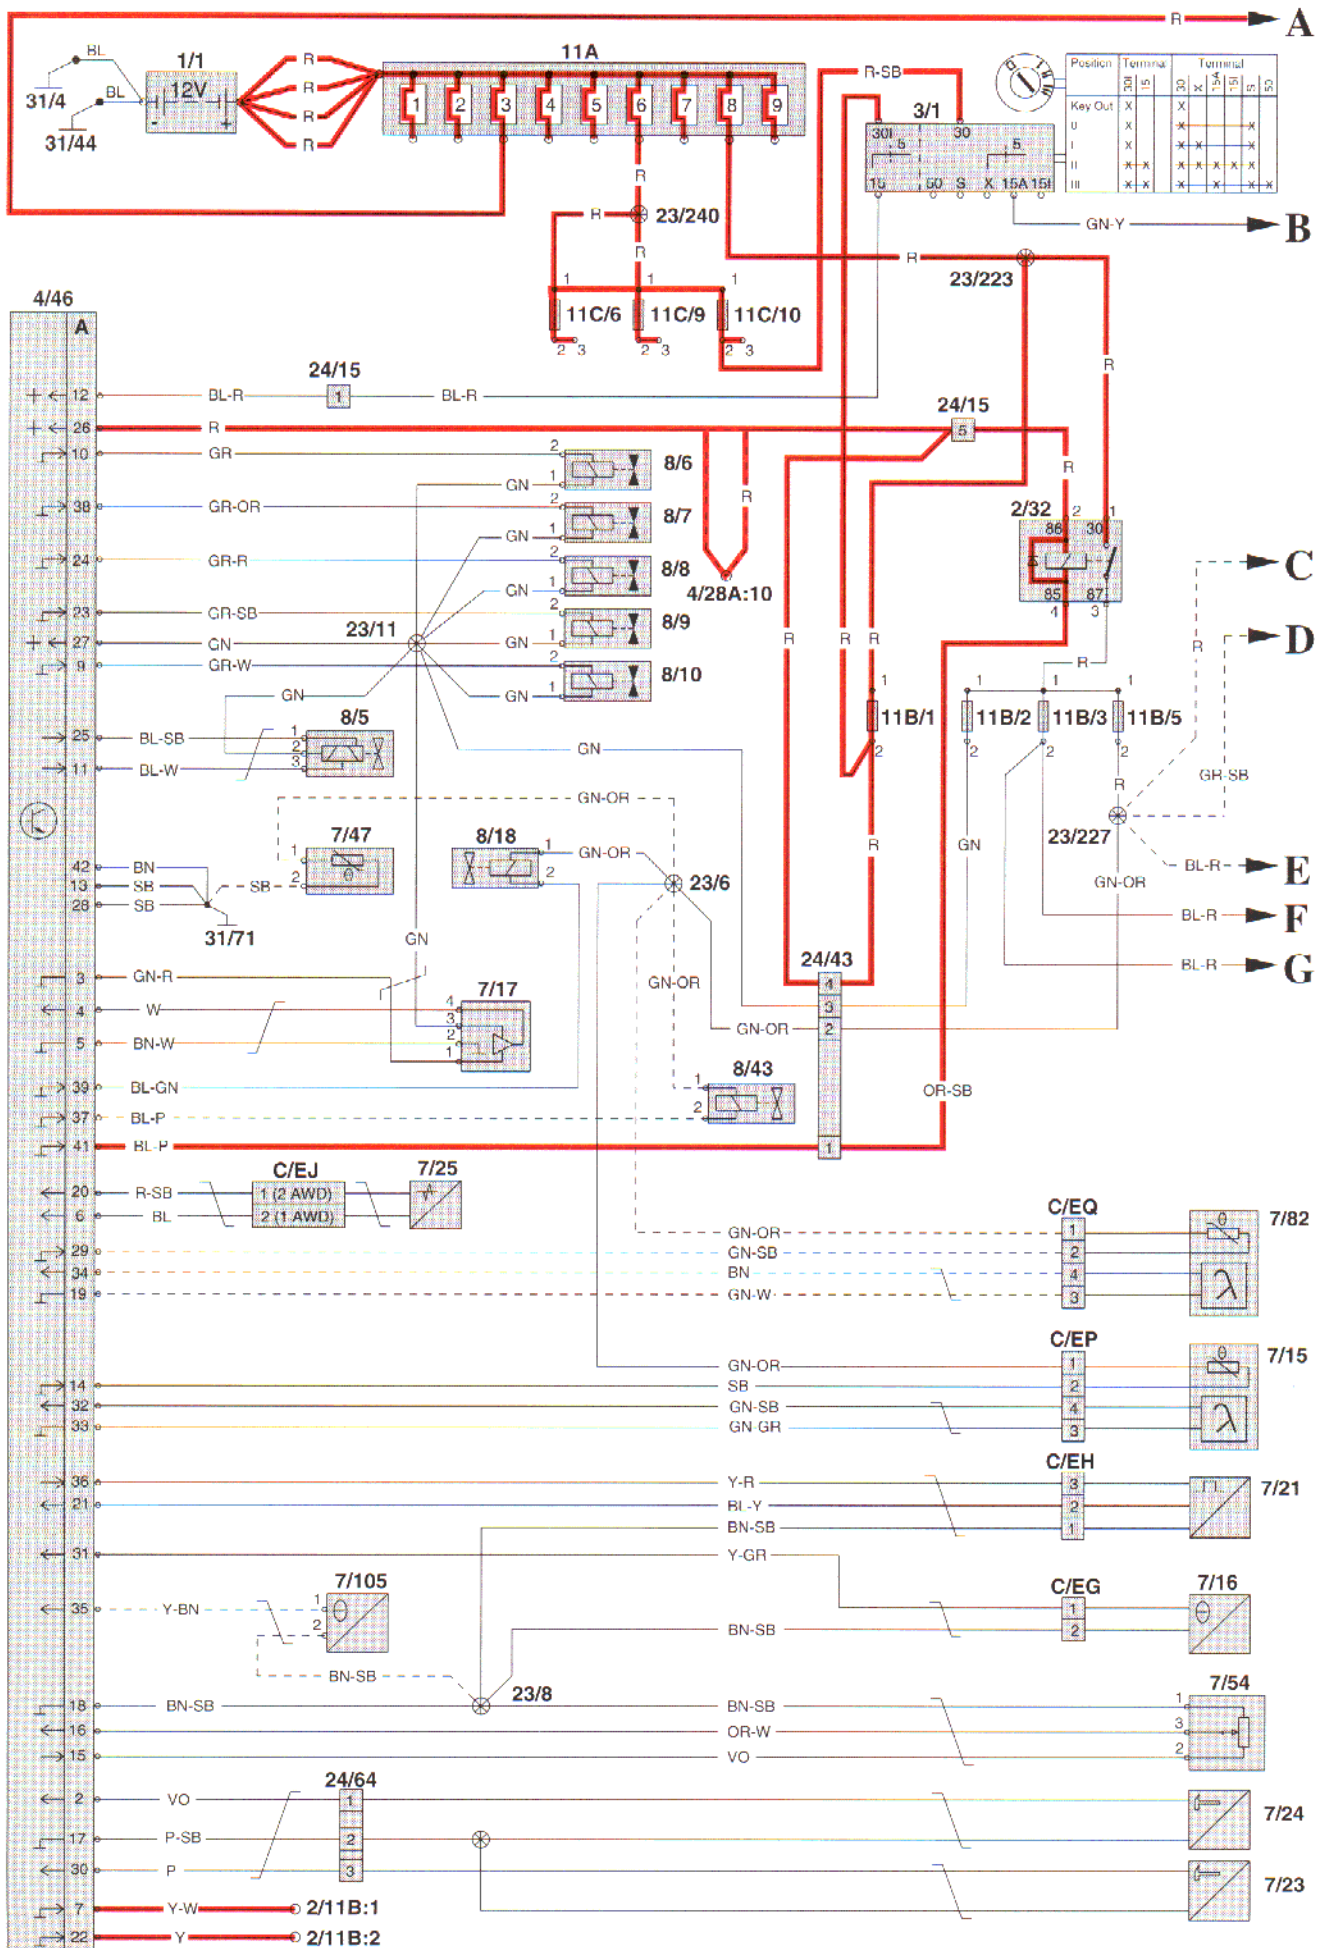


Engine management system MSA 15.7.

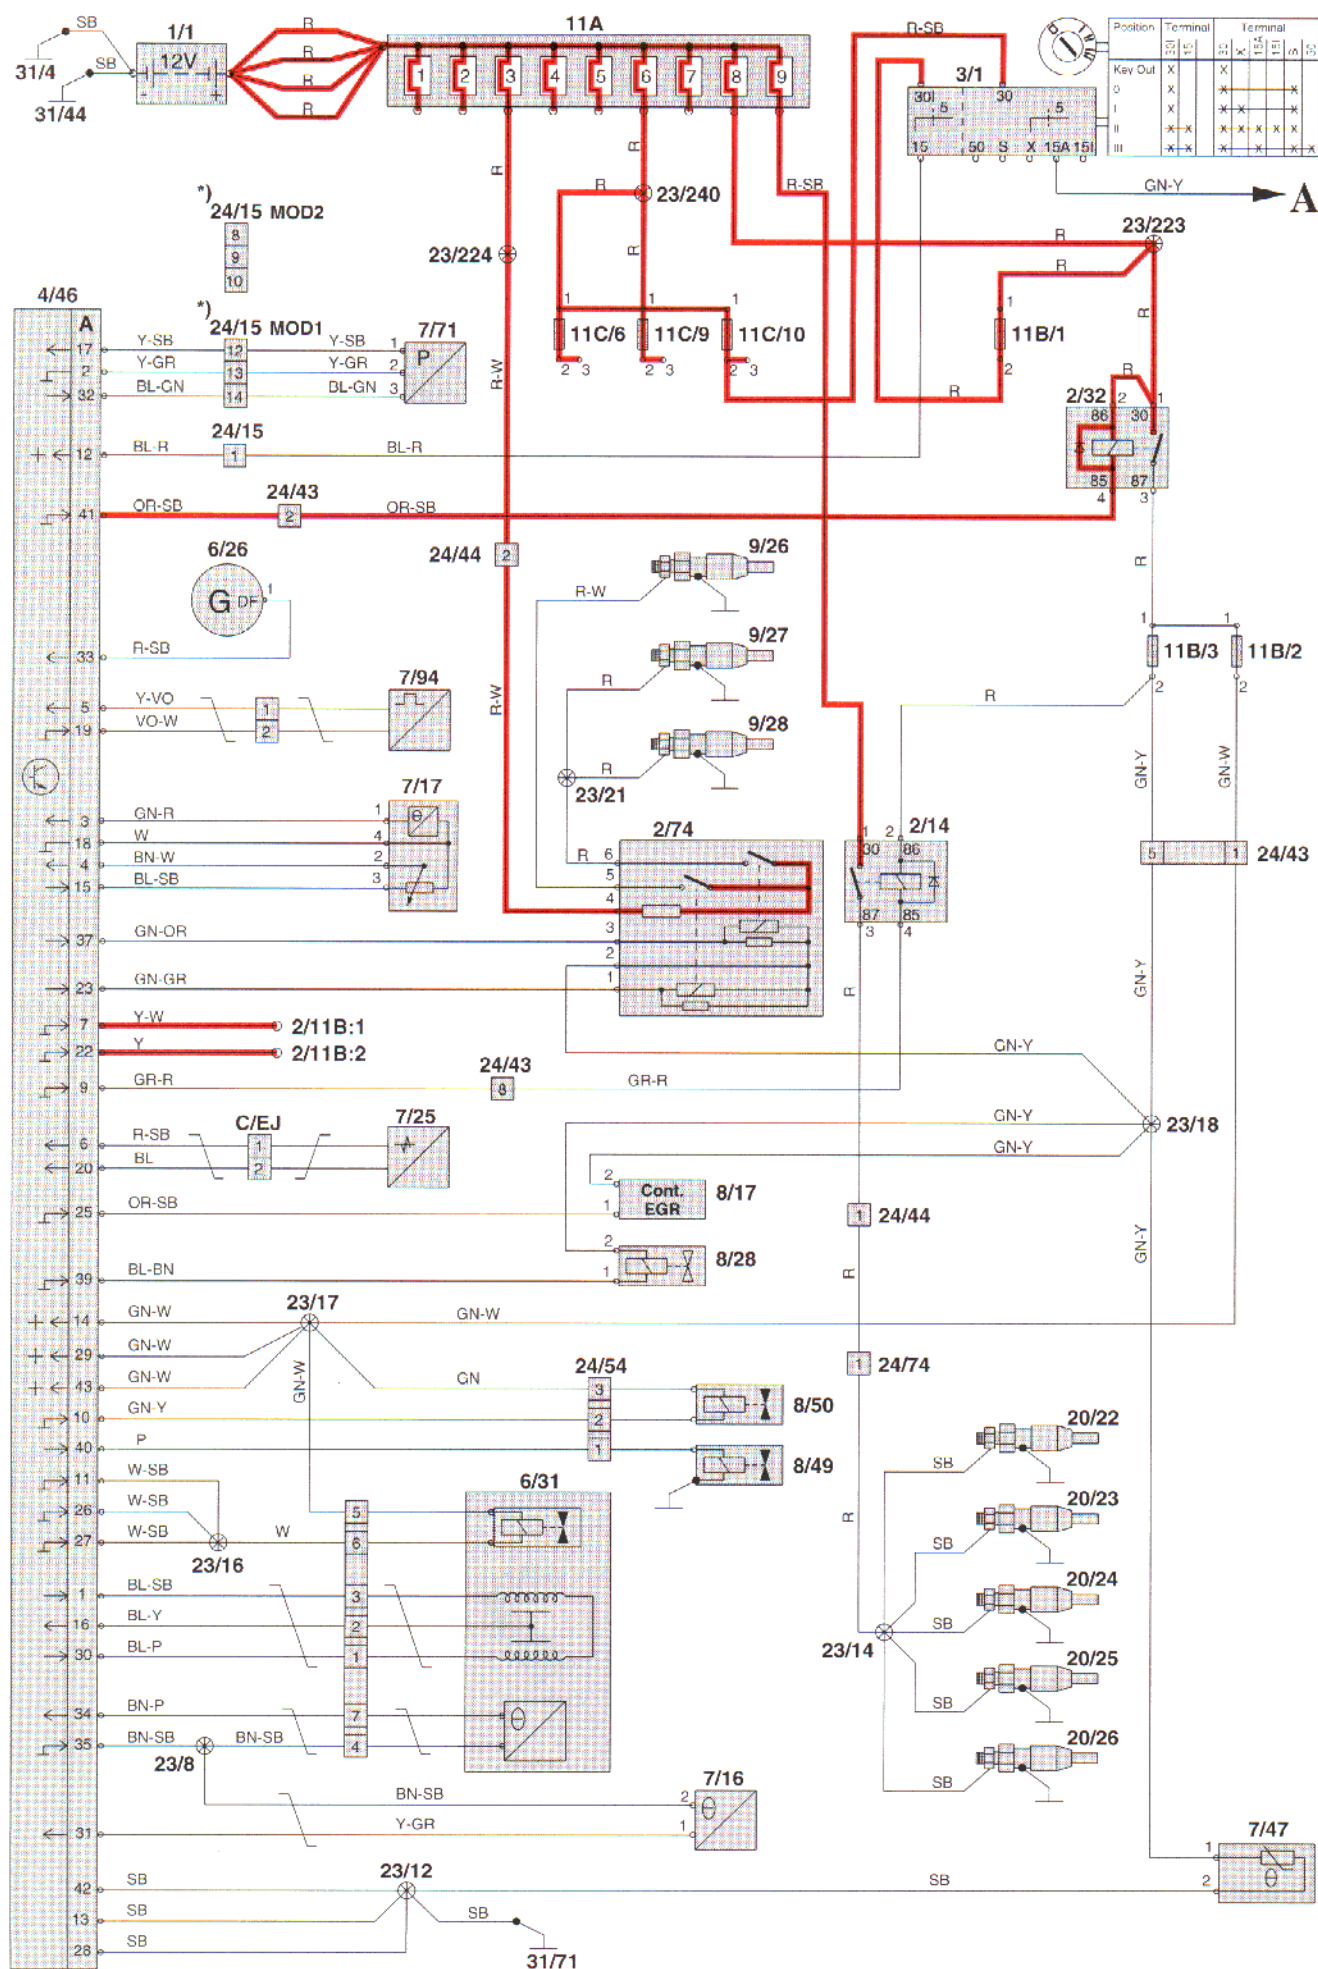

Engine cooling fan (FC) Fenix 5.2, Motronic 4.3/4.4

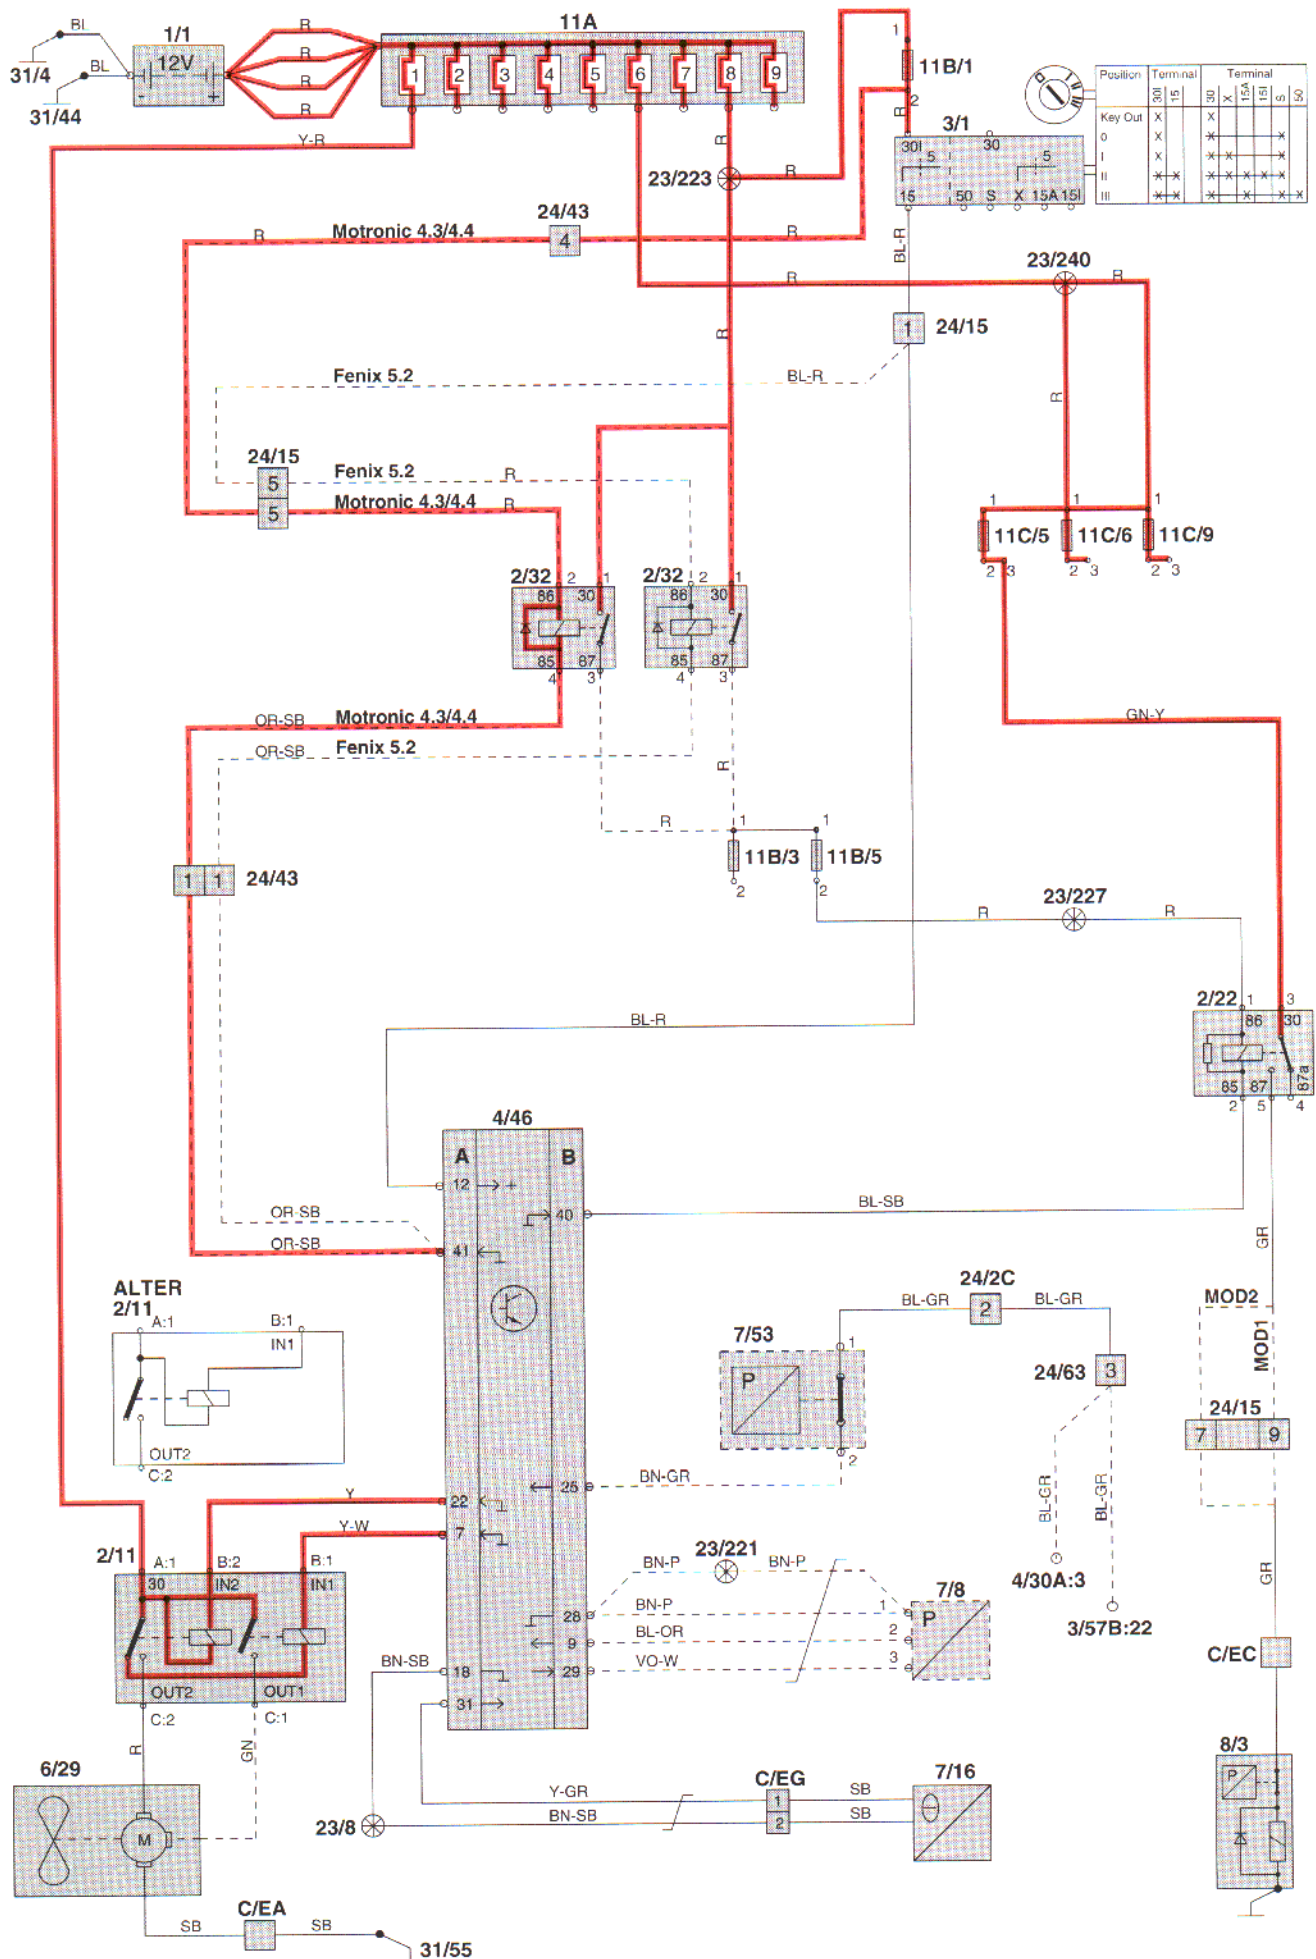


Engine cooling fan (FC)
MSA 15.7

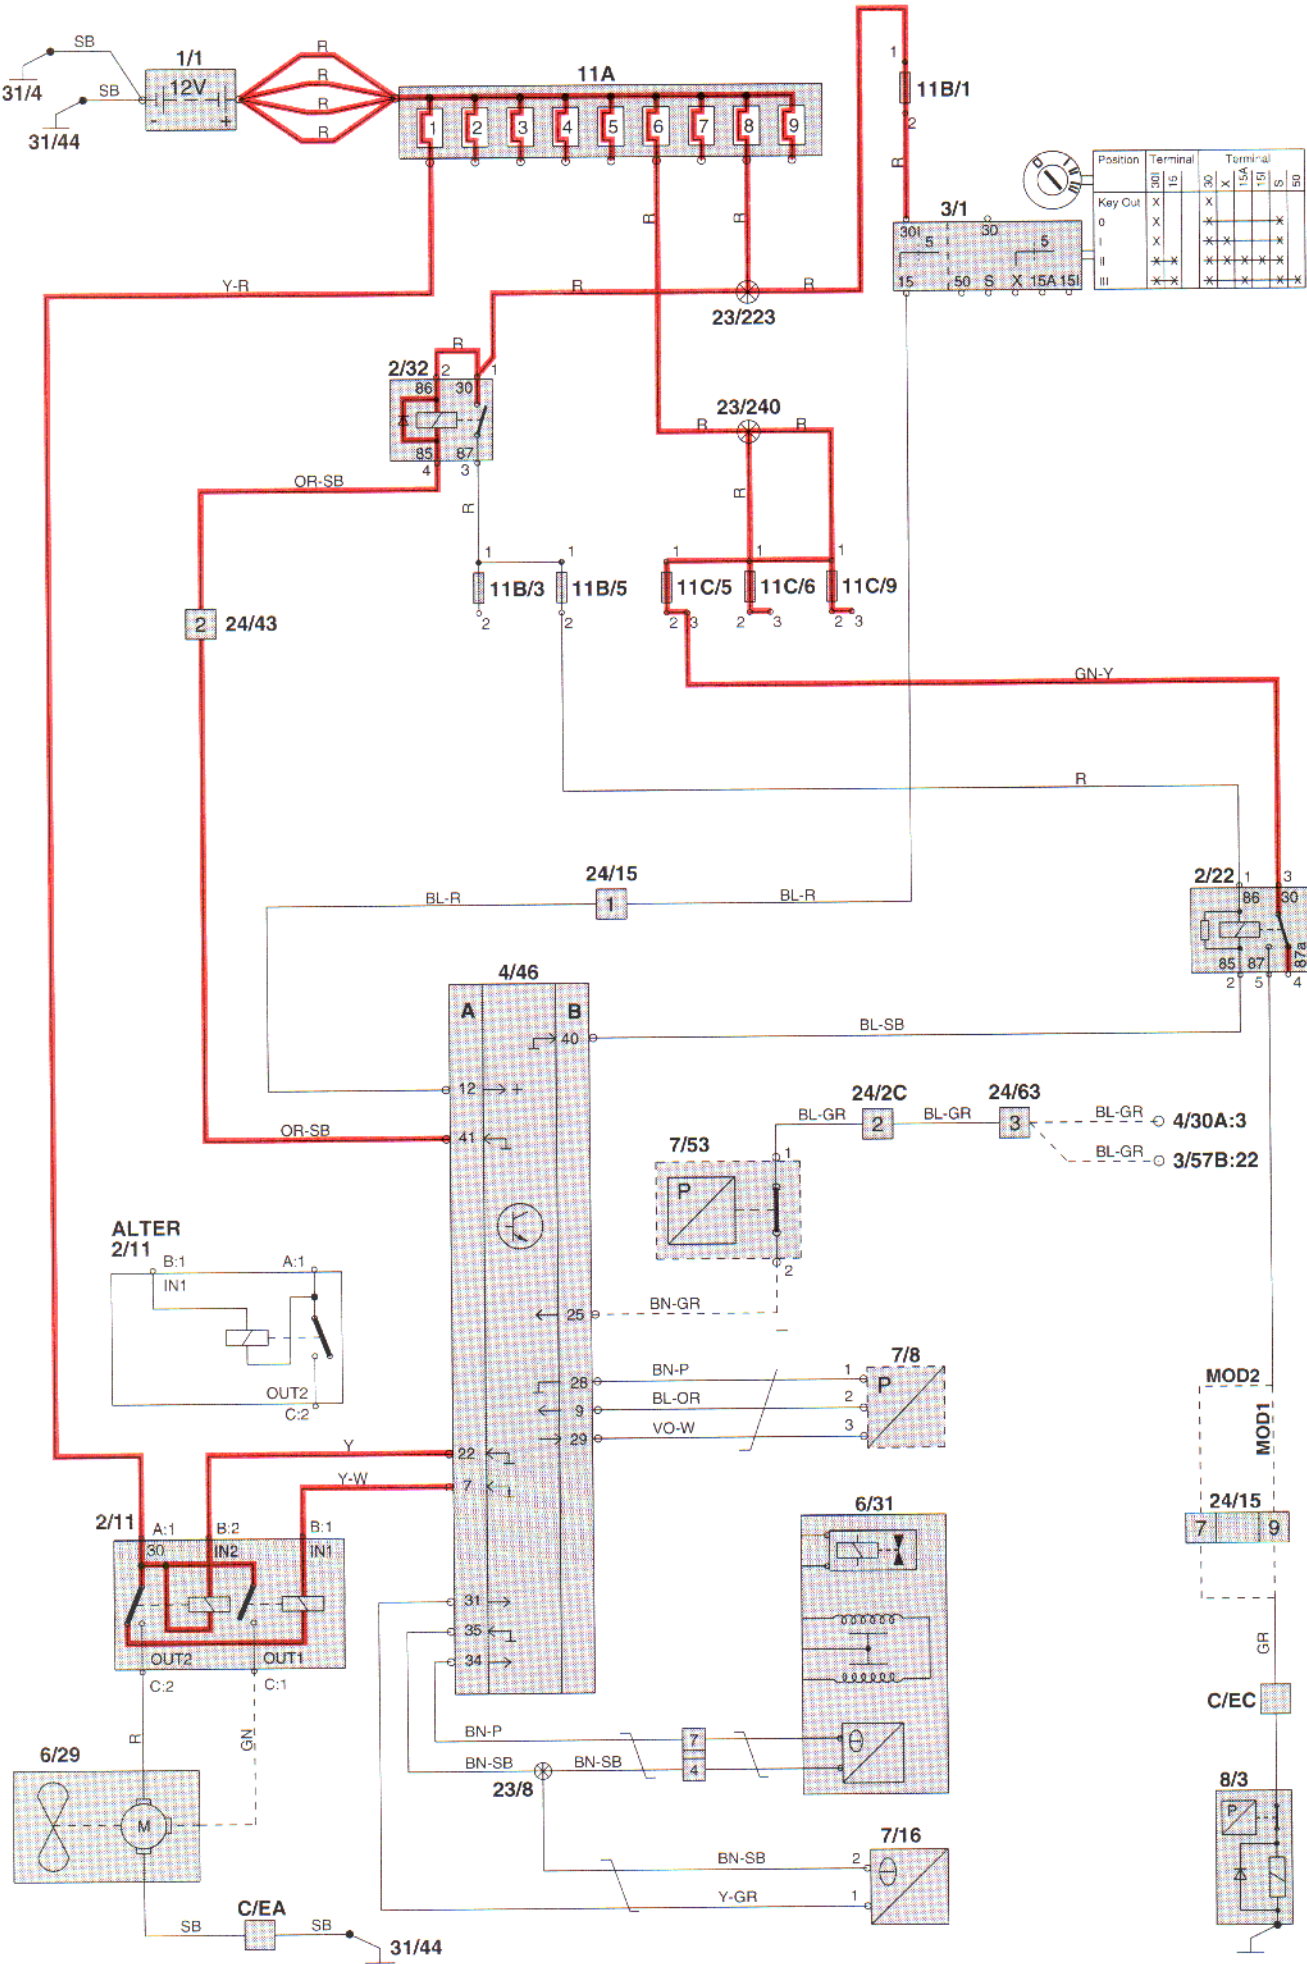

Cruise control Fenix 5.2, Motronic 4.3/4.4


For function diagram, see Page 256.

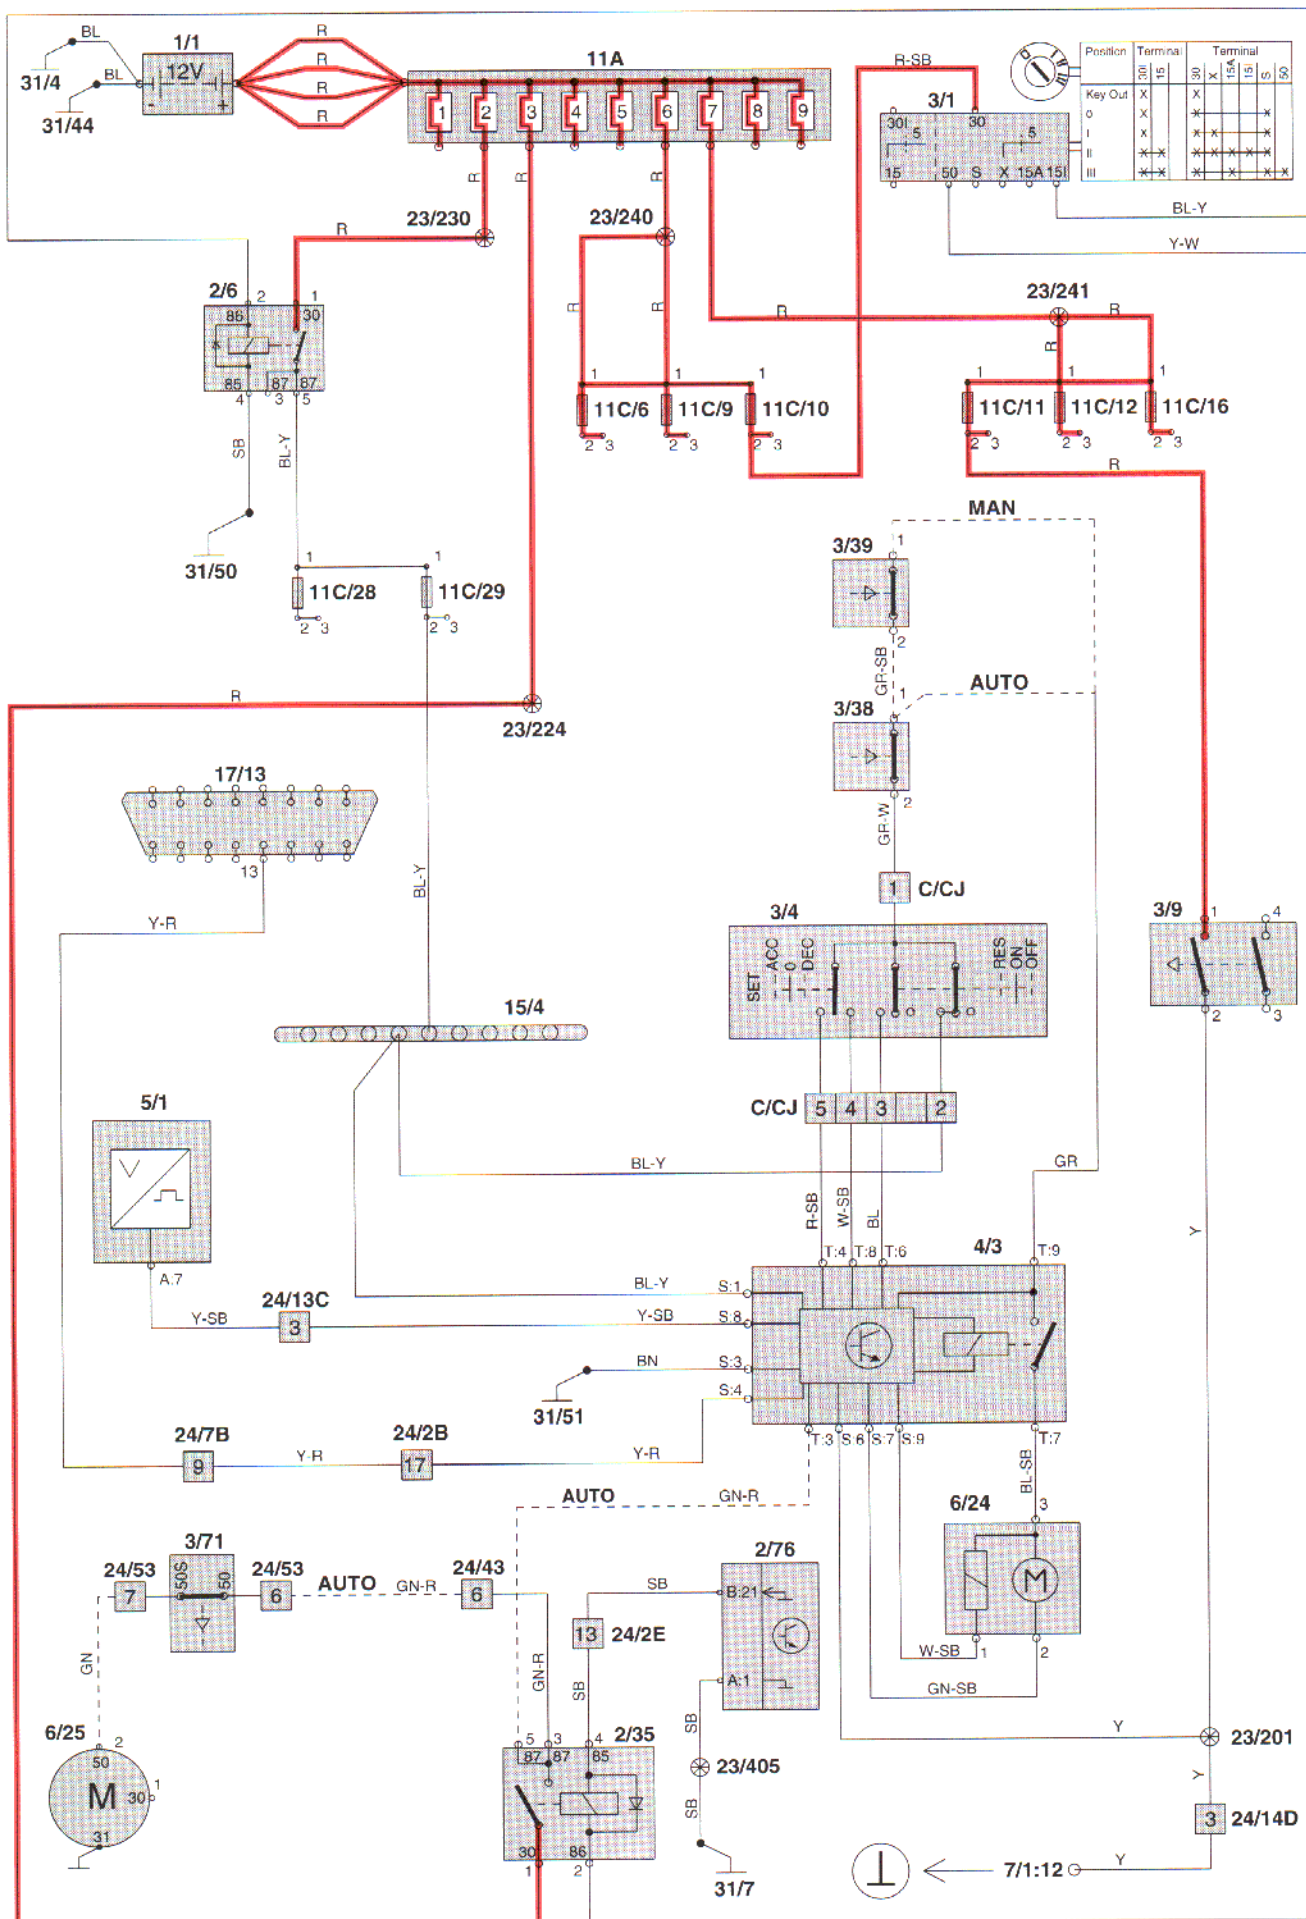

Cruise control


MSA 15.7

For function diagram, see Page 259-261.

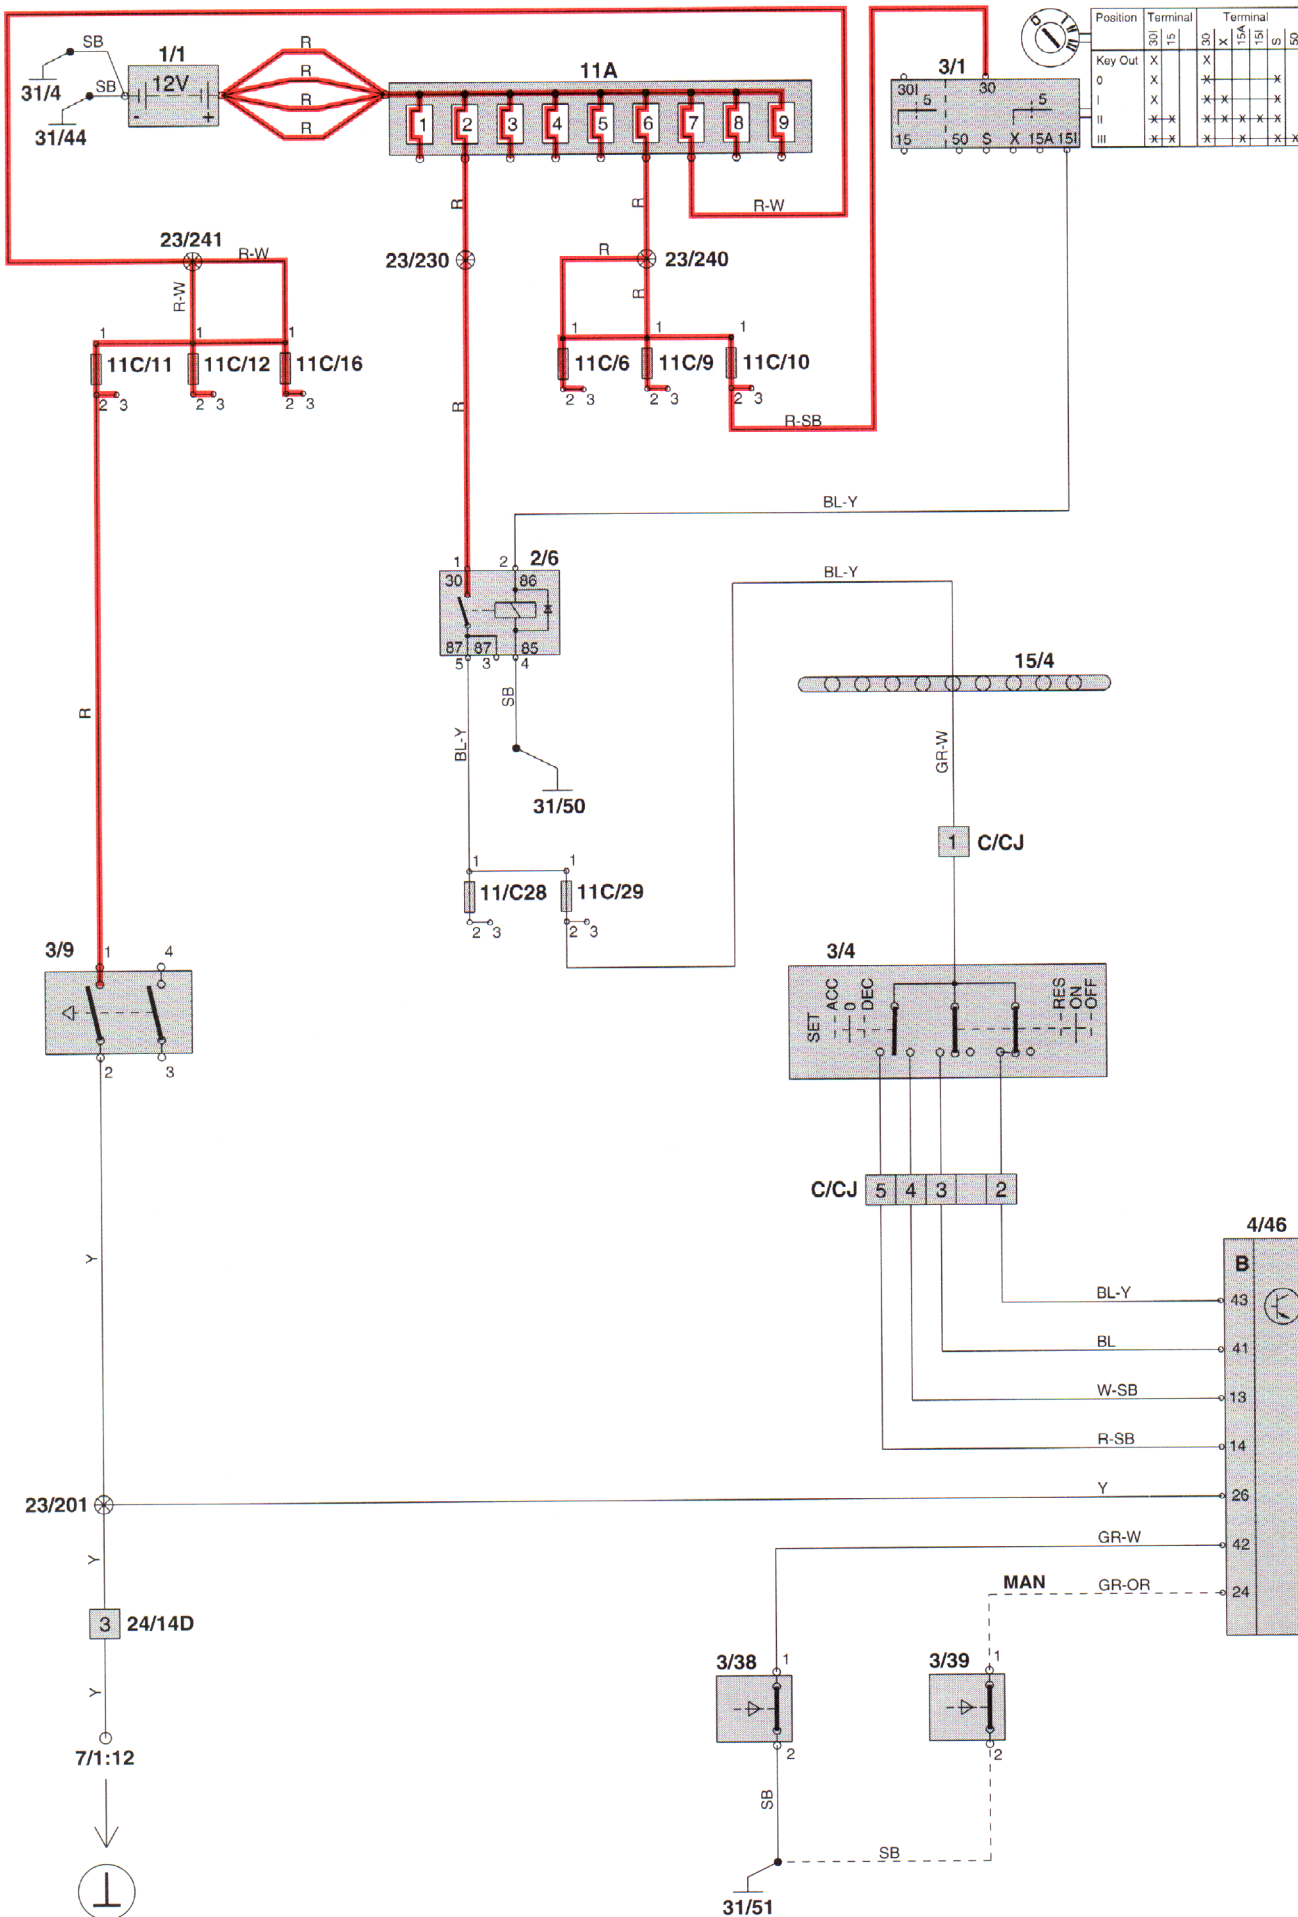


Power supply and starter system

For function diagram, see Page 262-263.

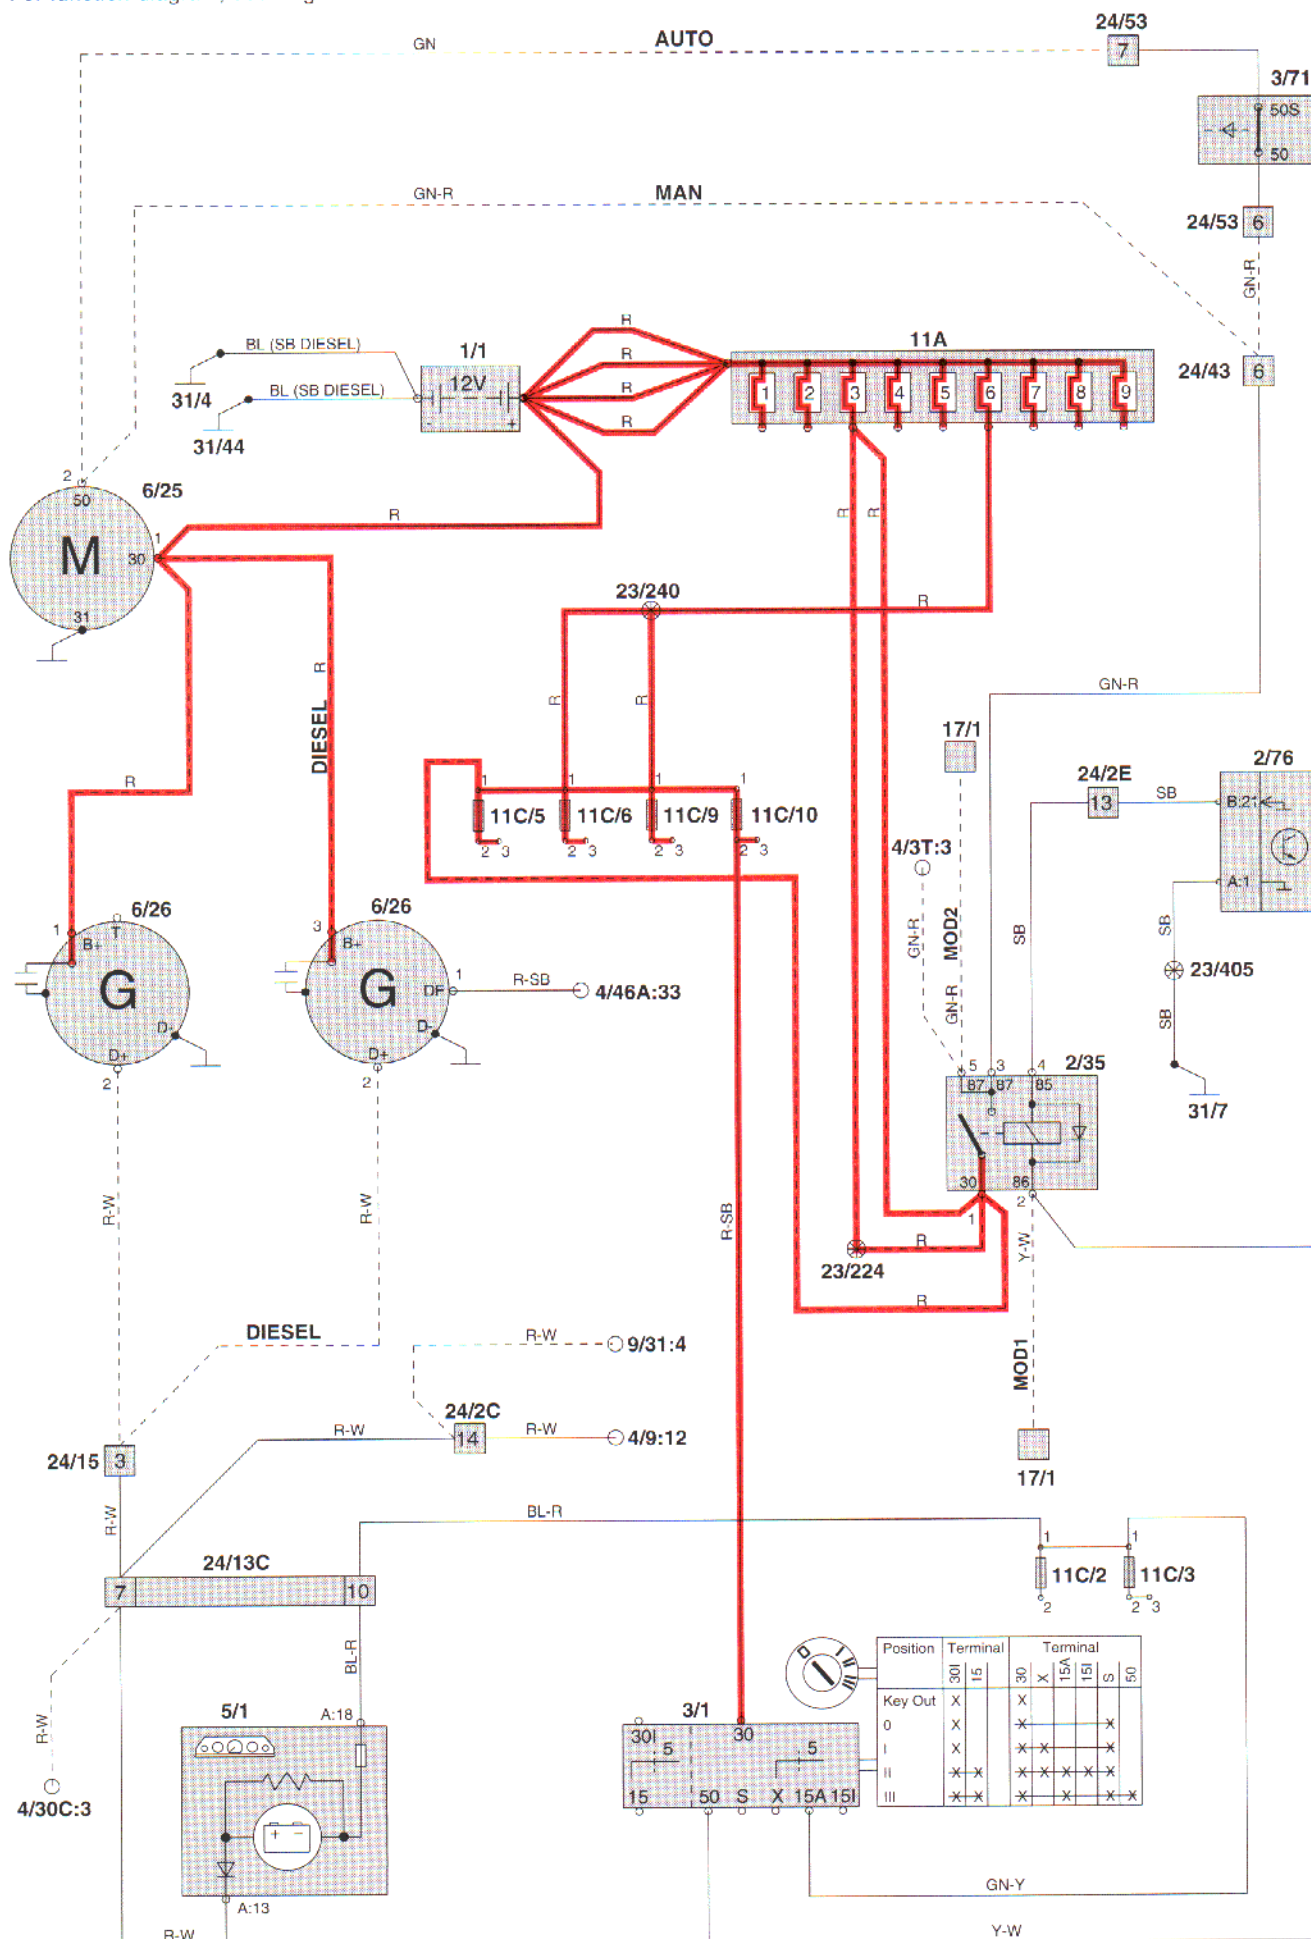


High and low beams

For function diagram, see Page 264.

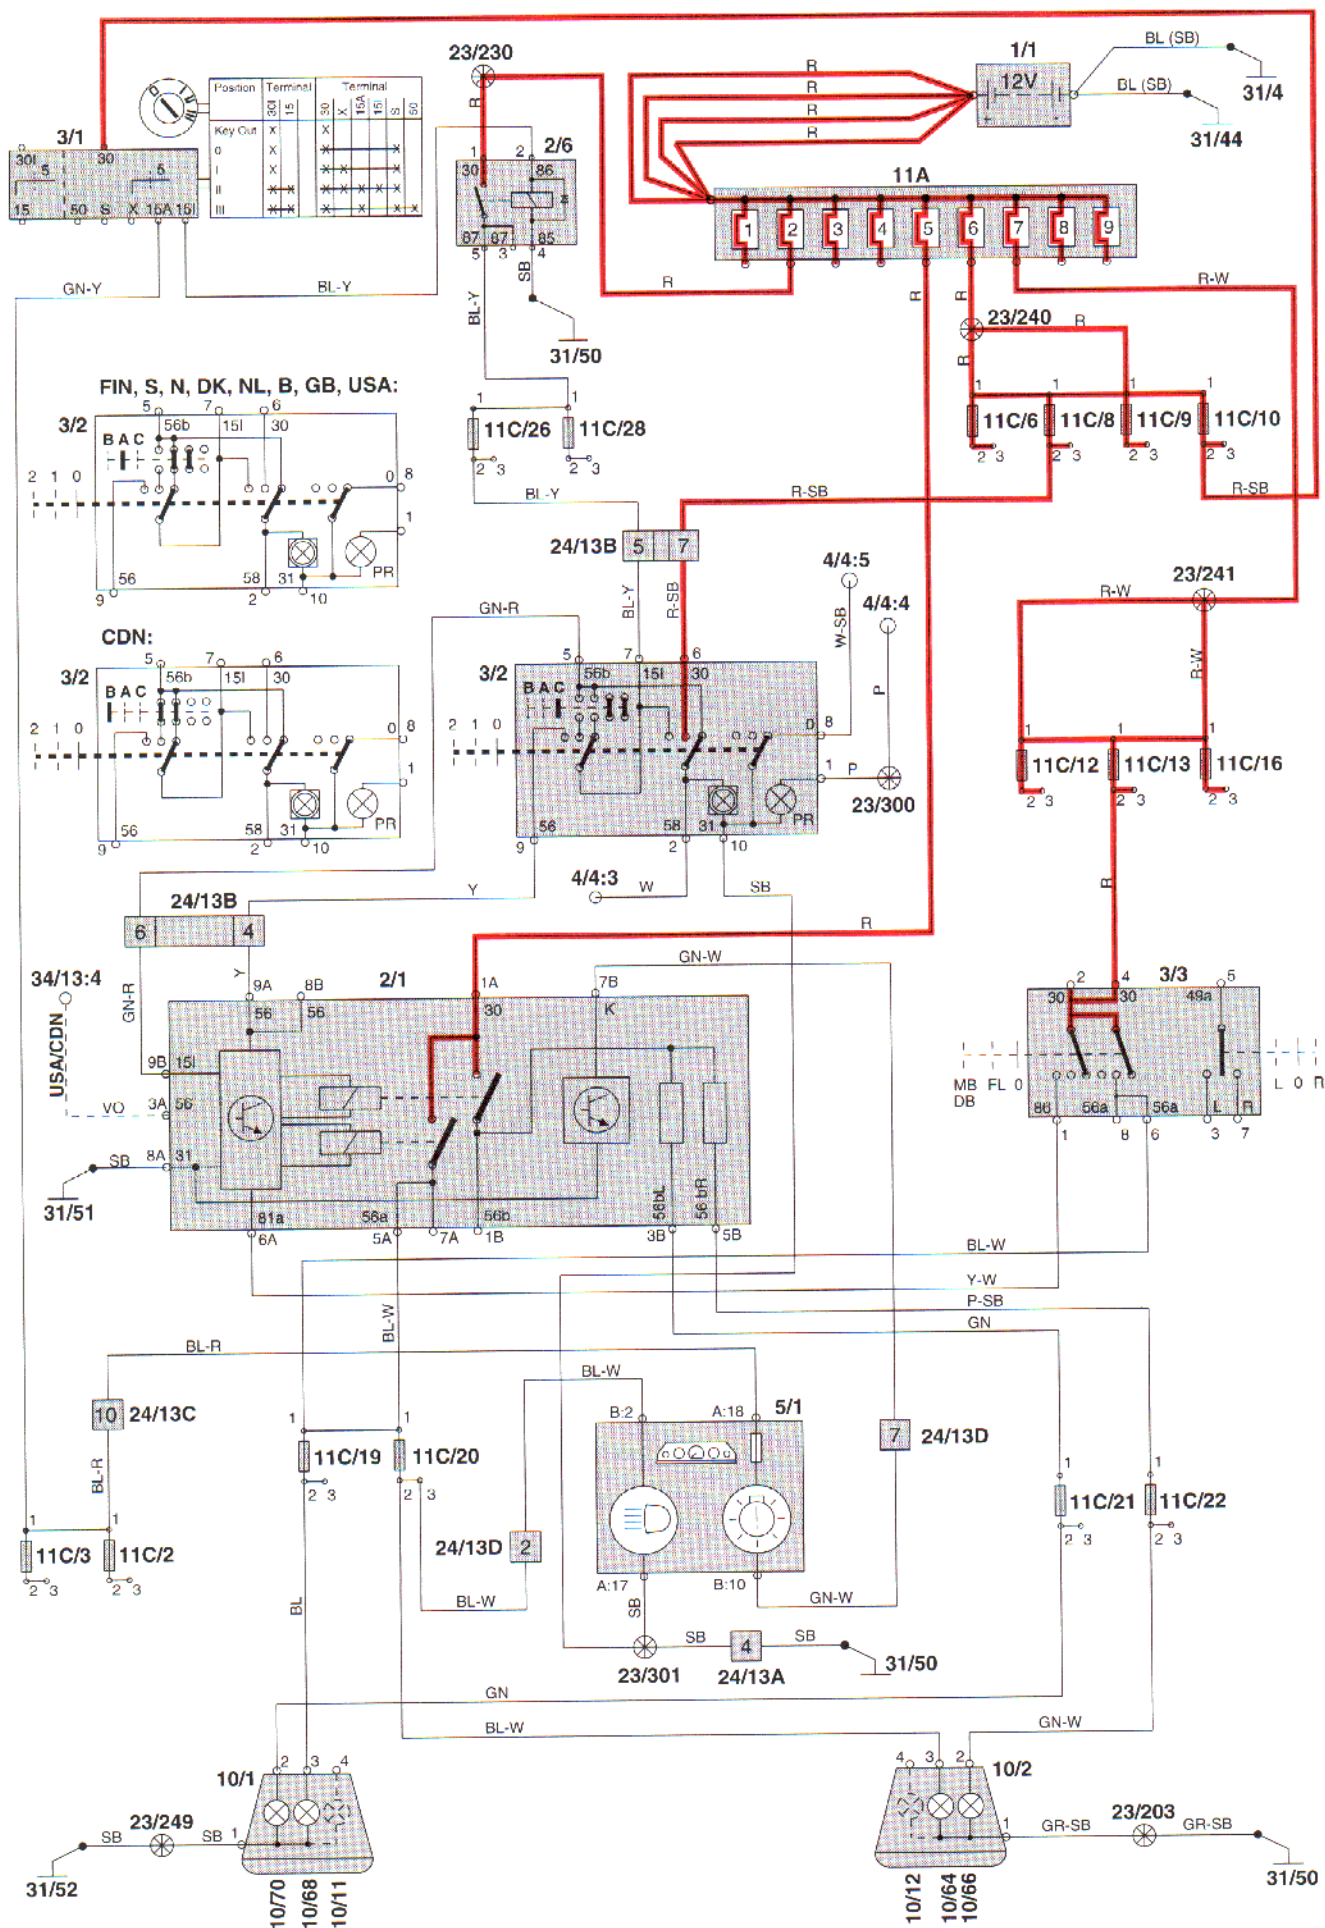


Headlamp range adjustment

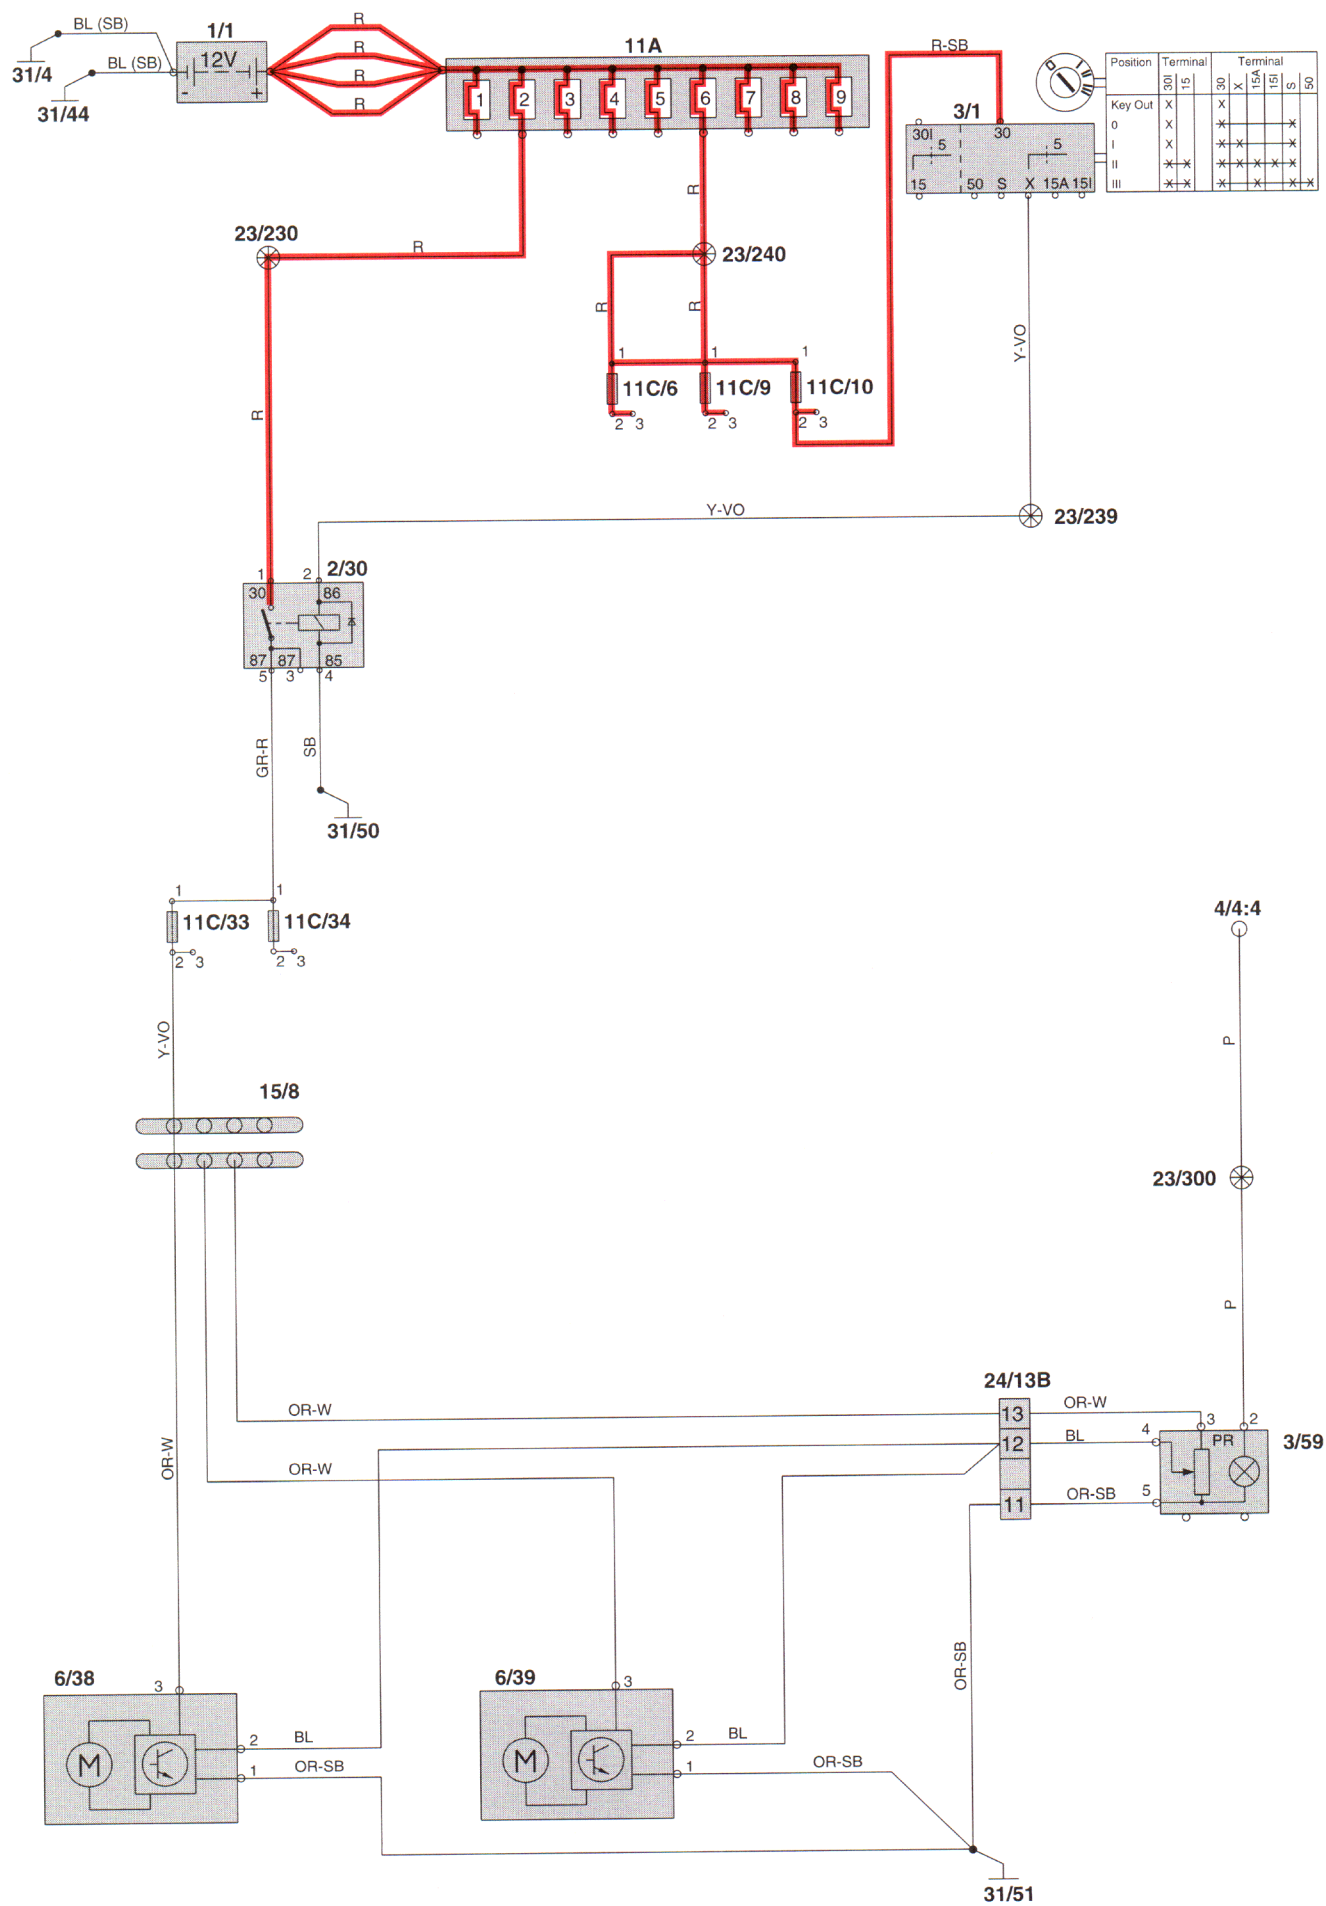


Fog lamps C70

For function diagram, see Page 265.

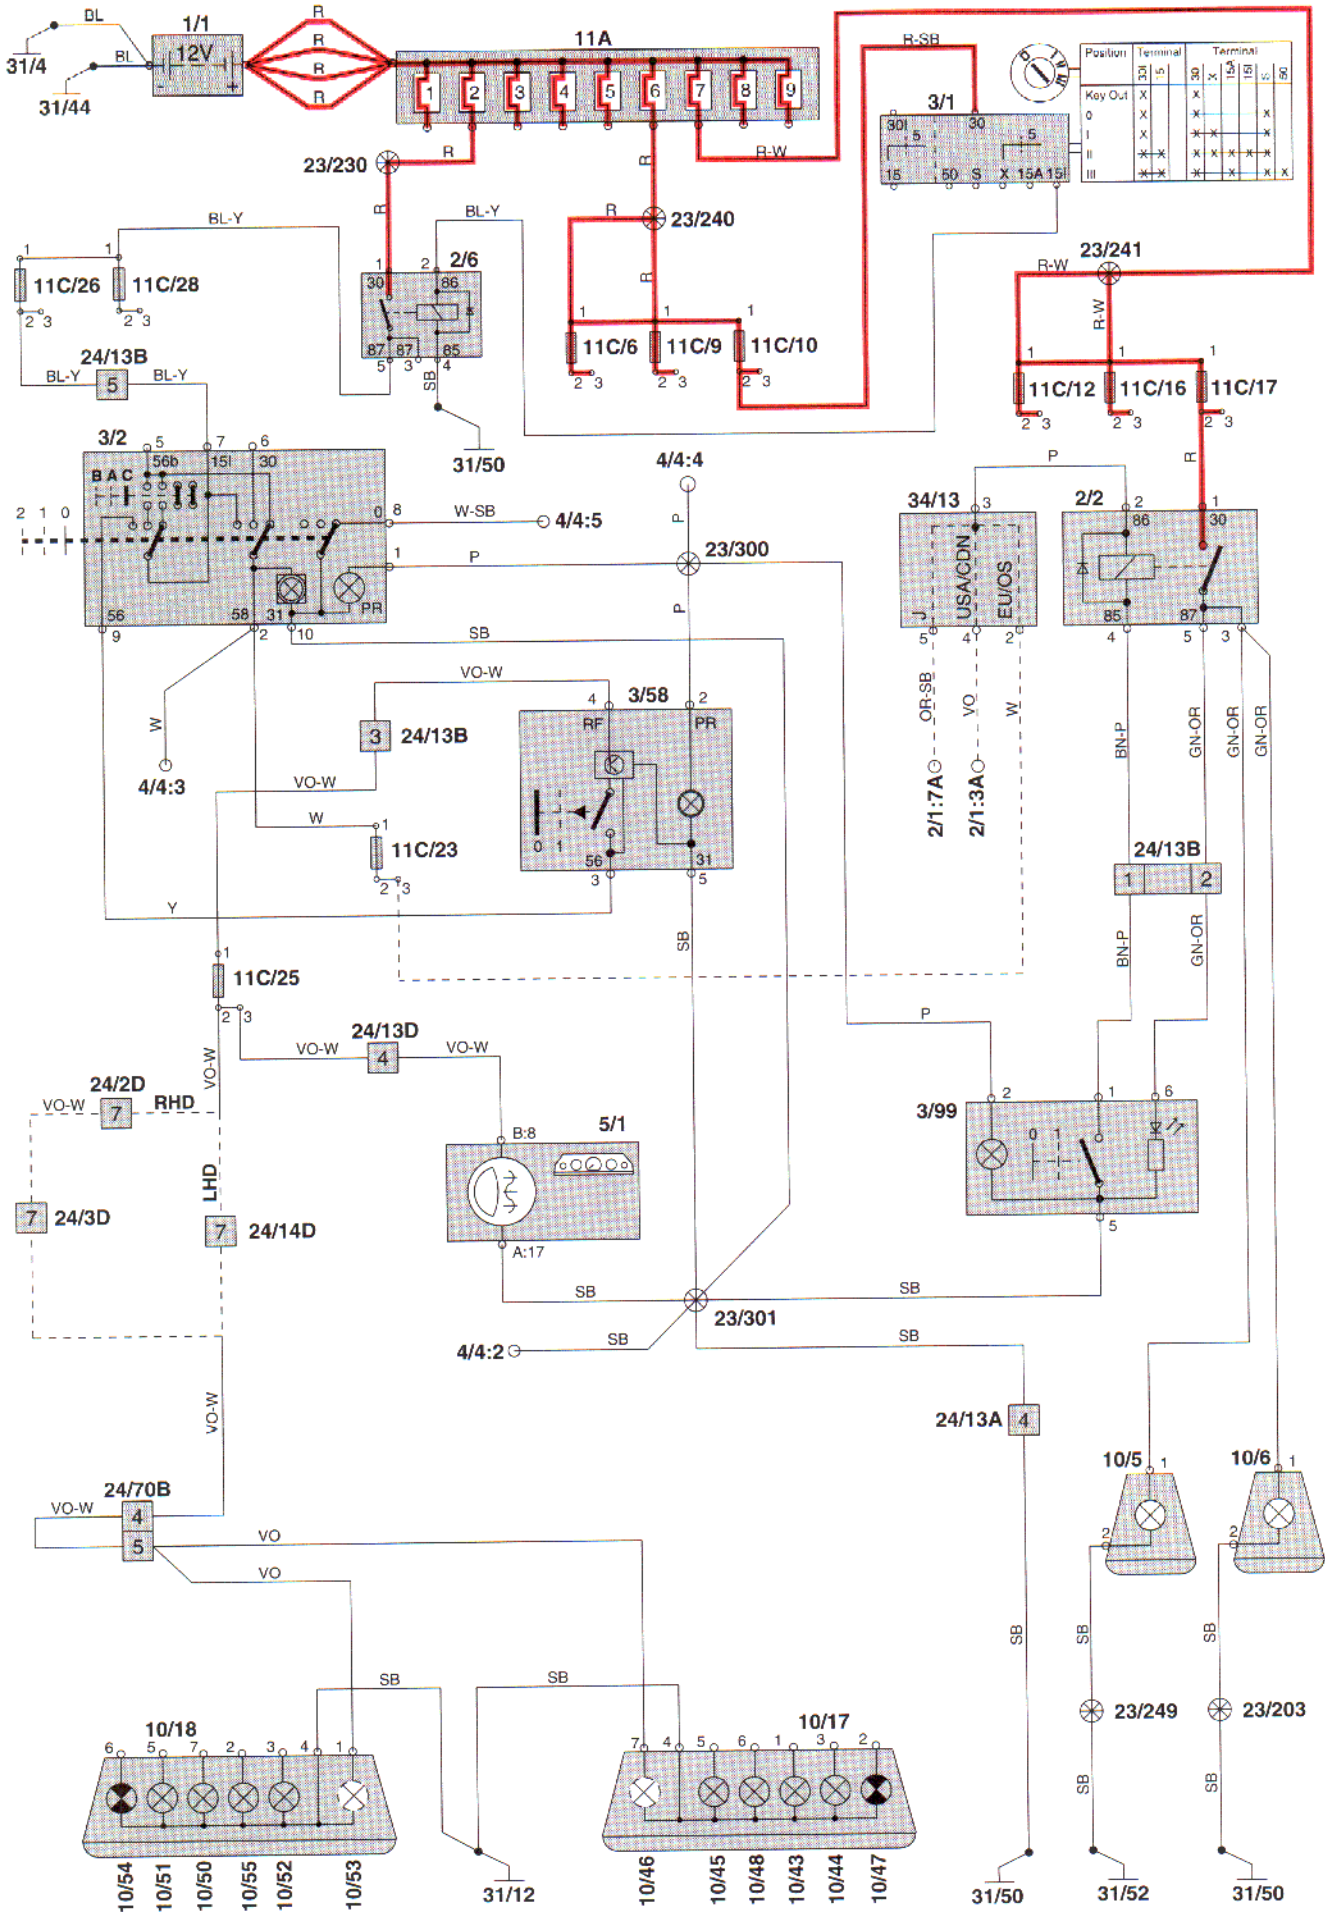


Fog lamps S70/V70


For function diagram, see Page 265.

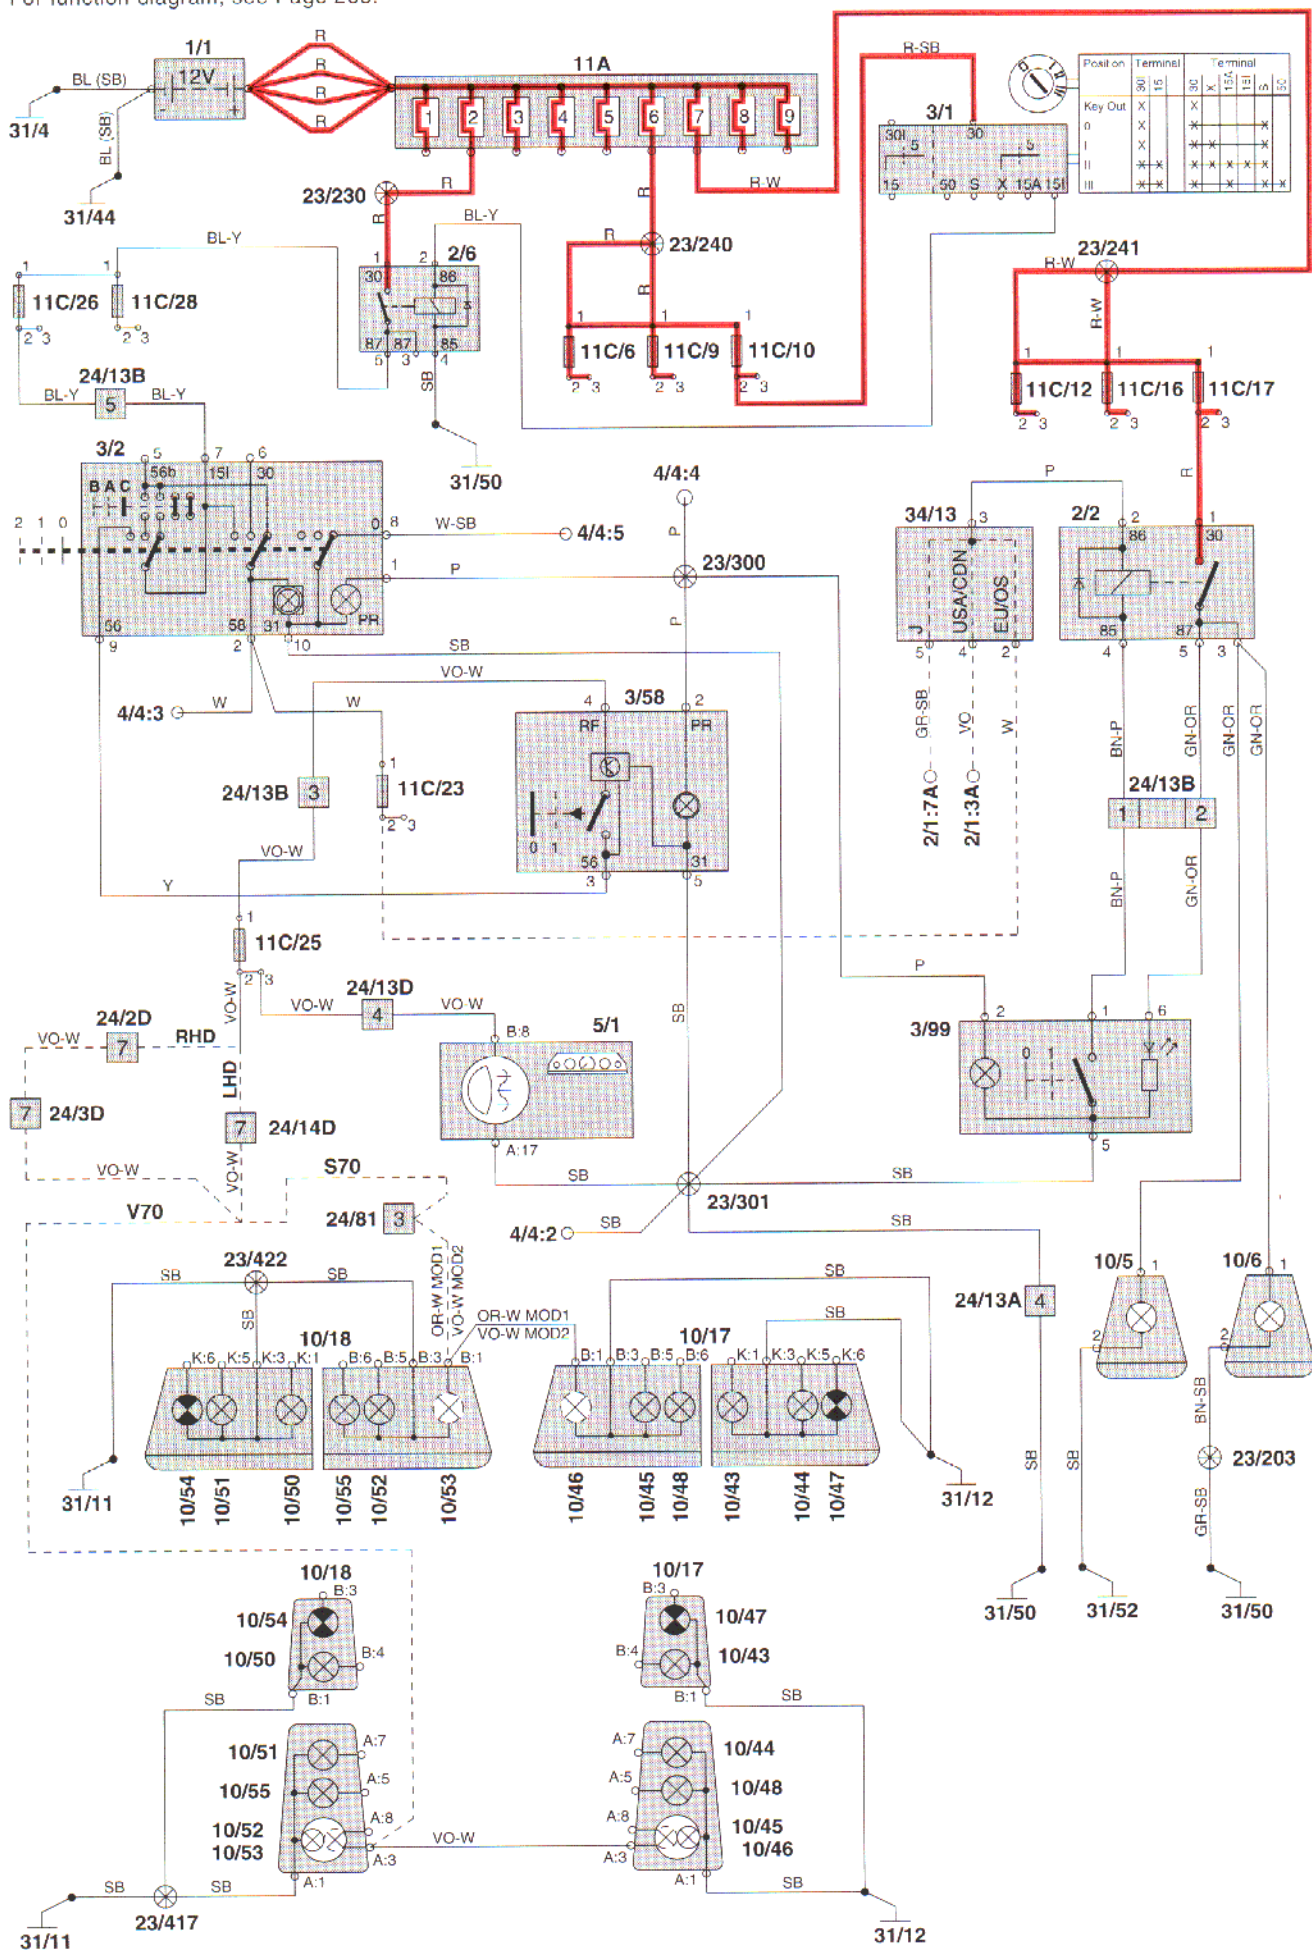


C70

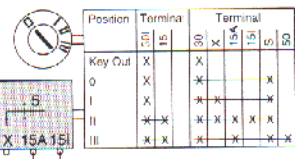


Parking lamps, tail lamps and license (number) plate lighting
S70

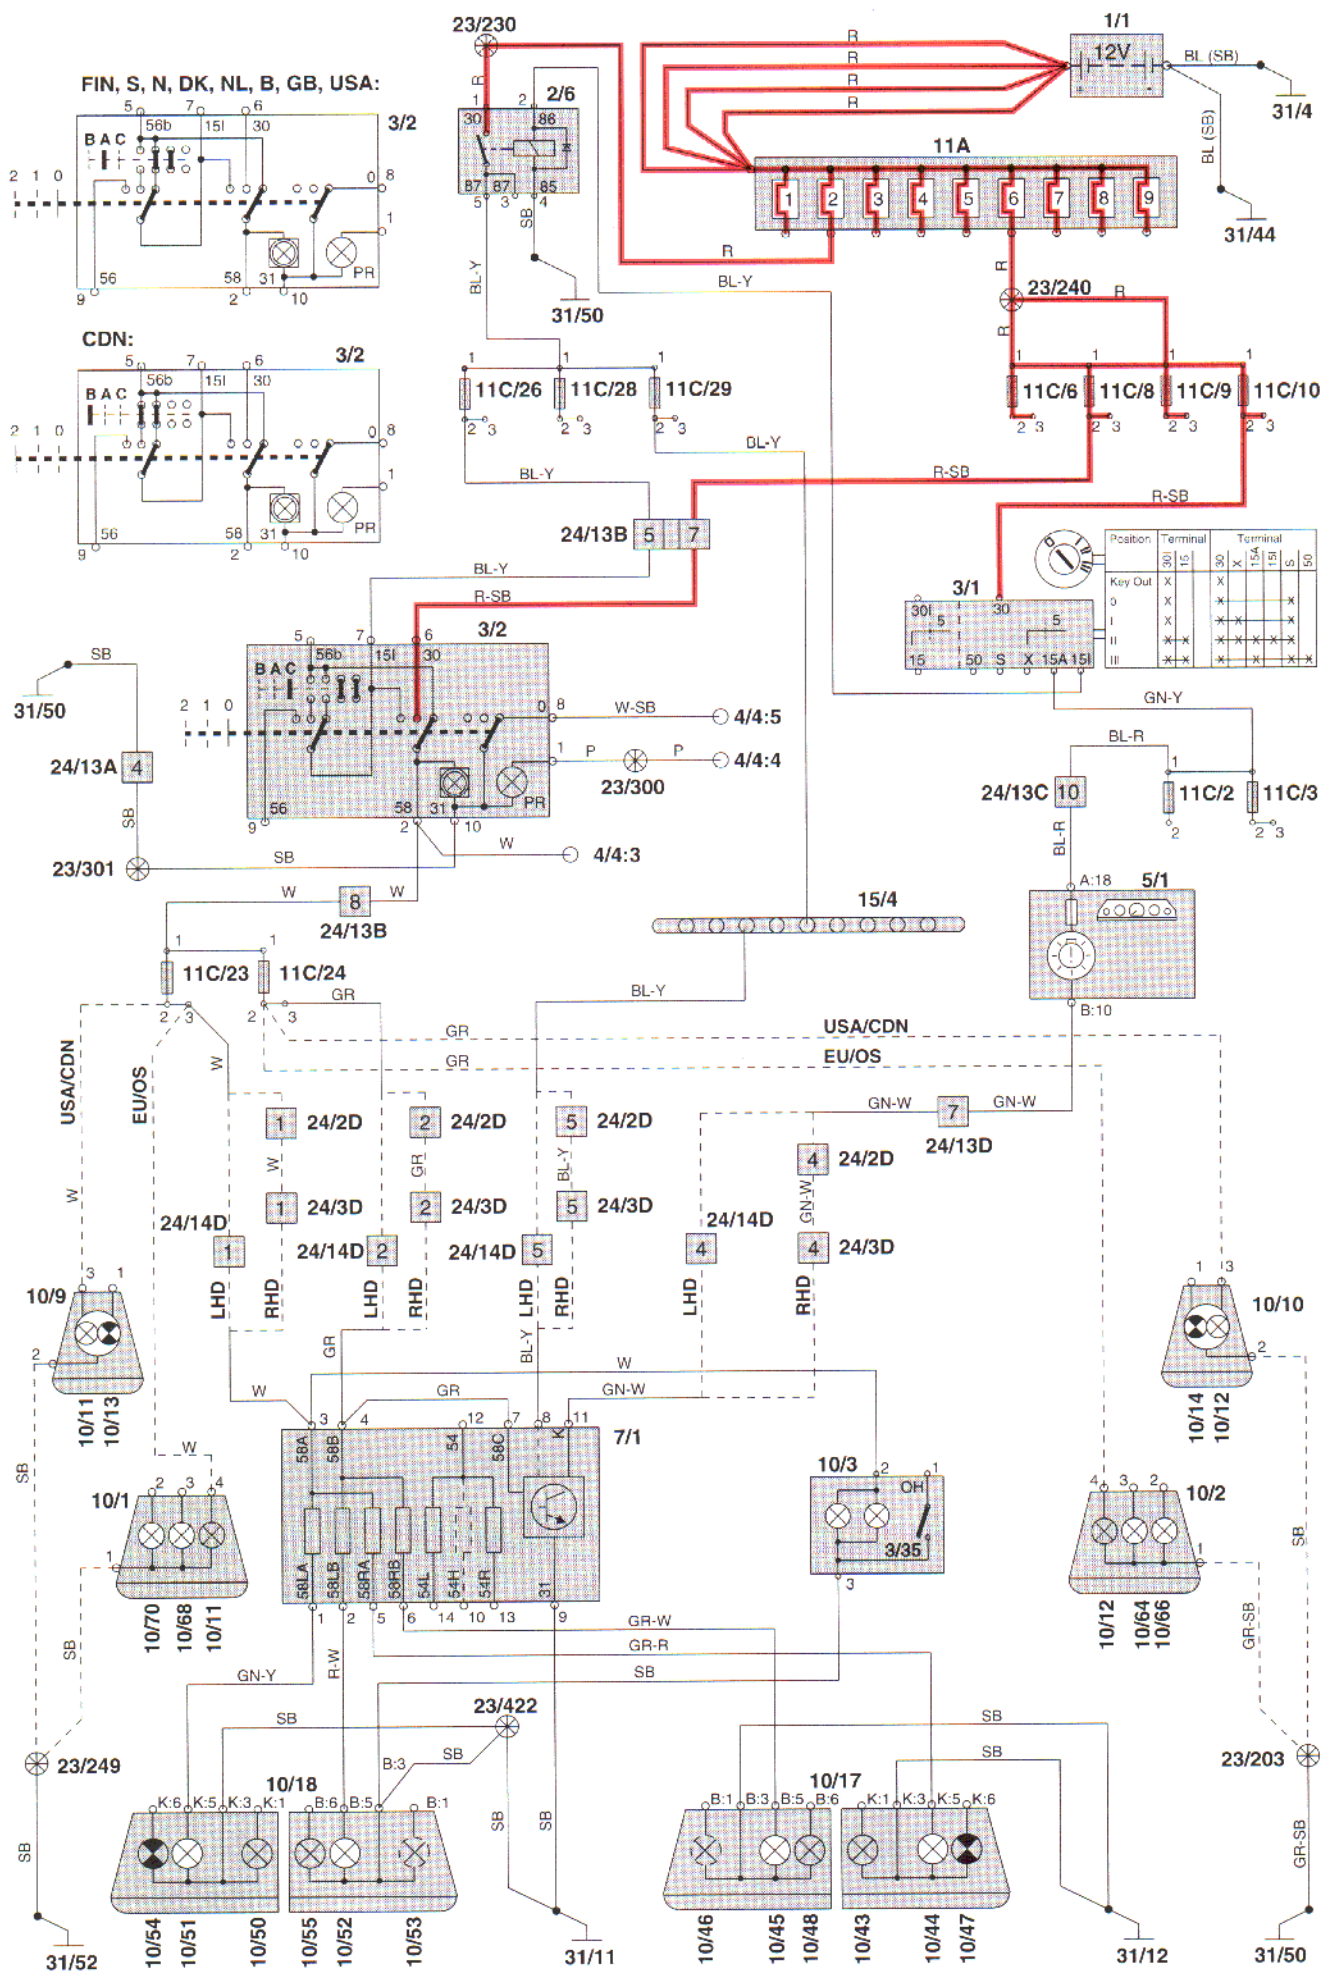


Parking lamps, tail lamps and license (number) plate lighting V70

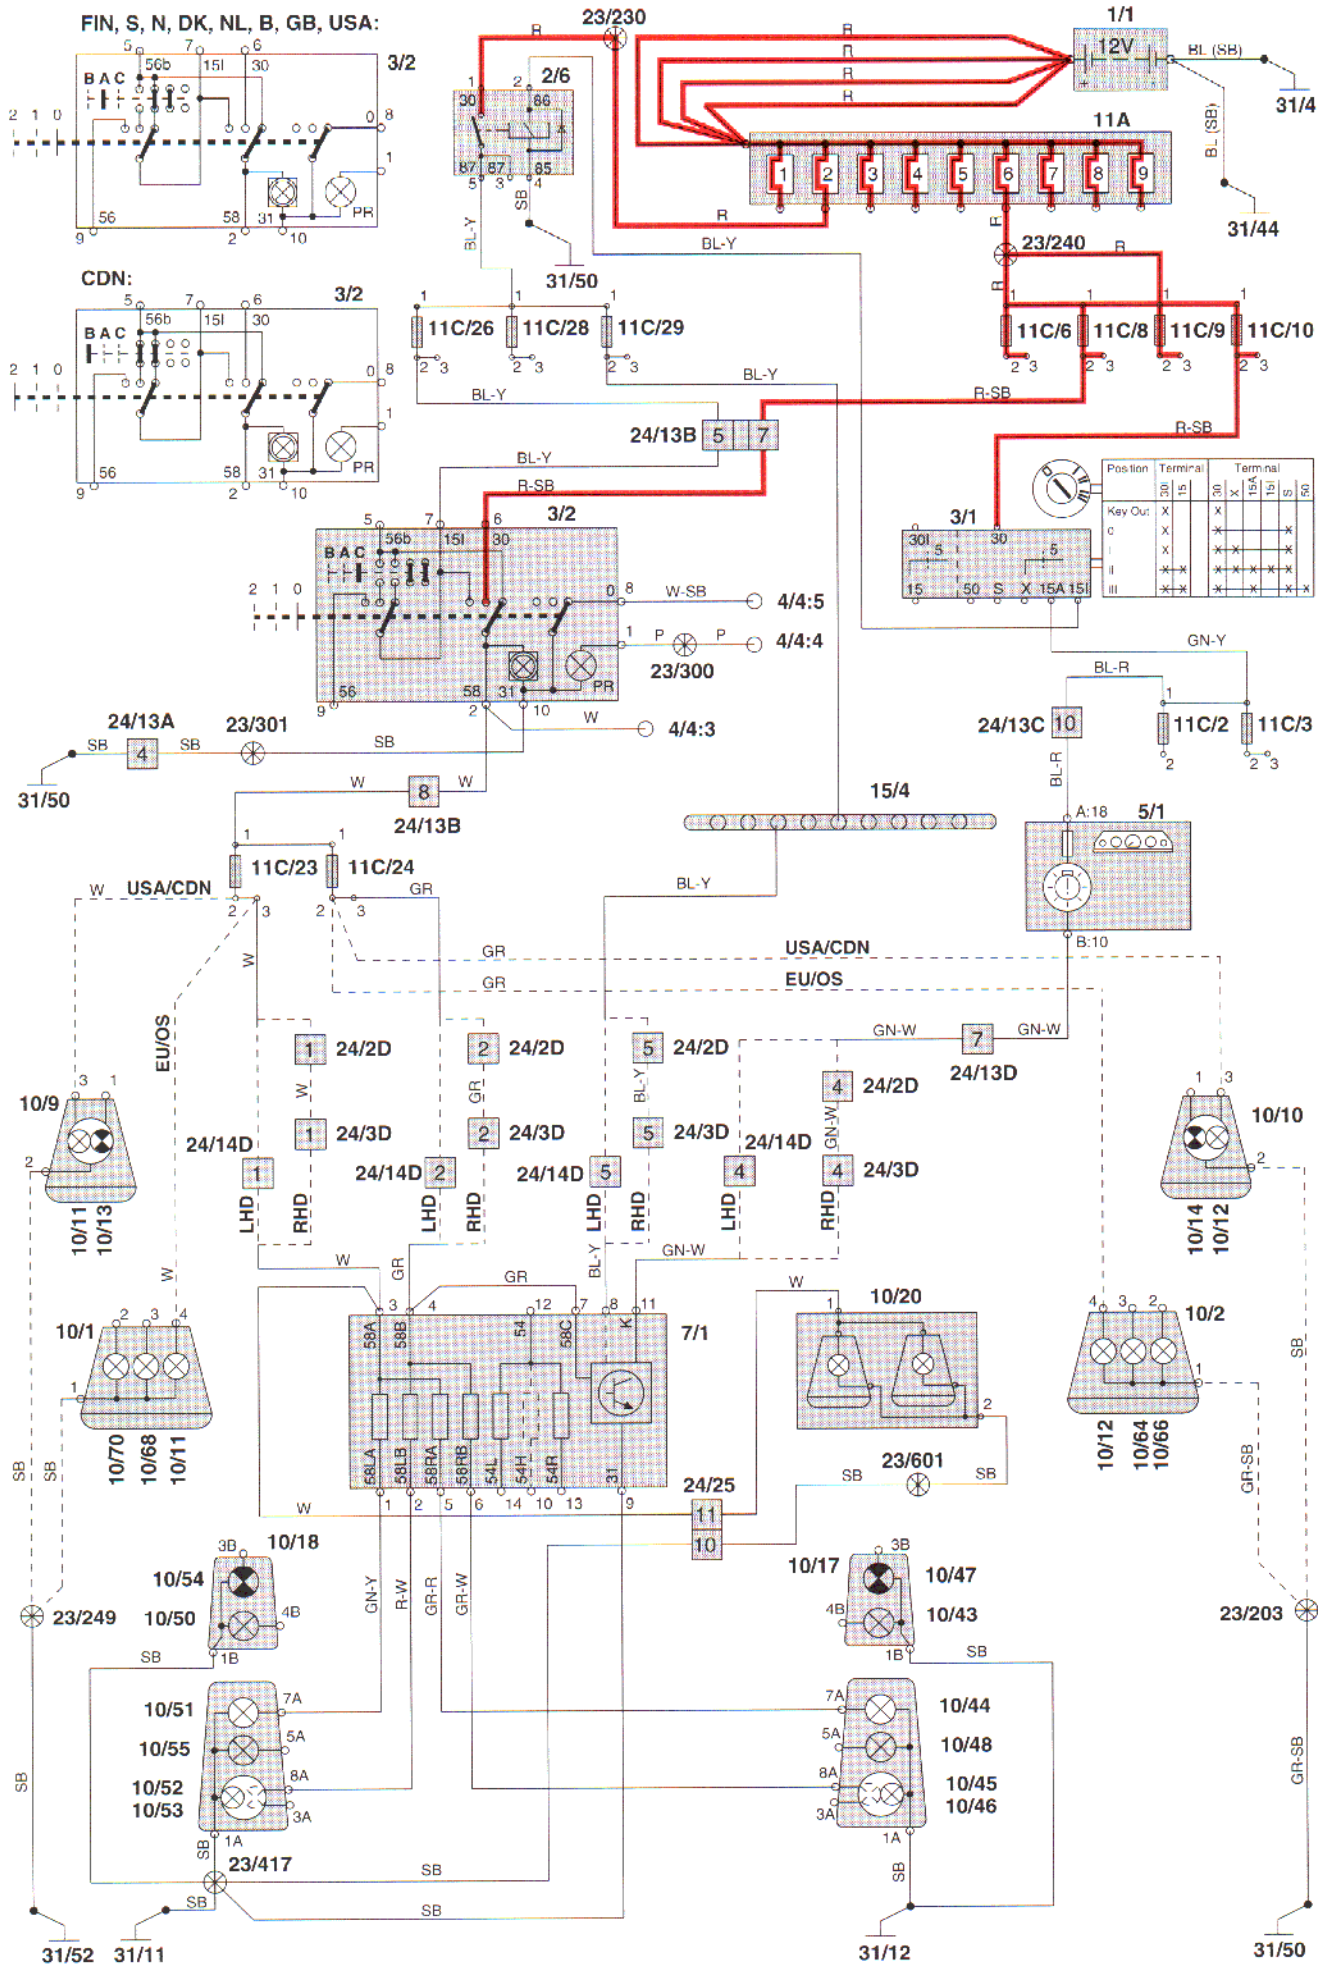


Stop (brake) lamps C70

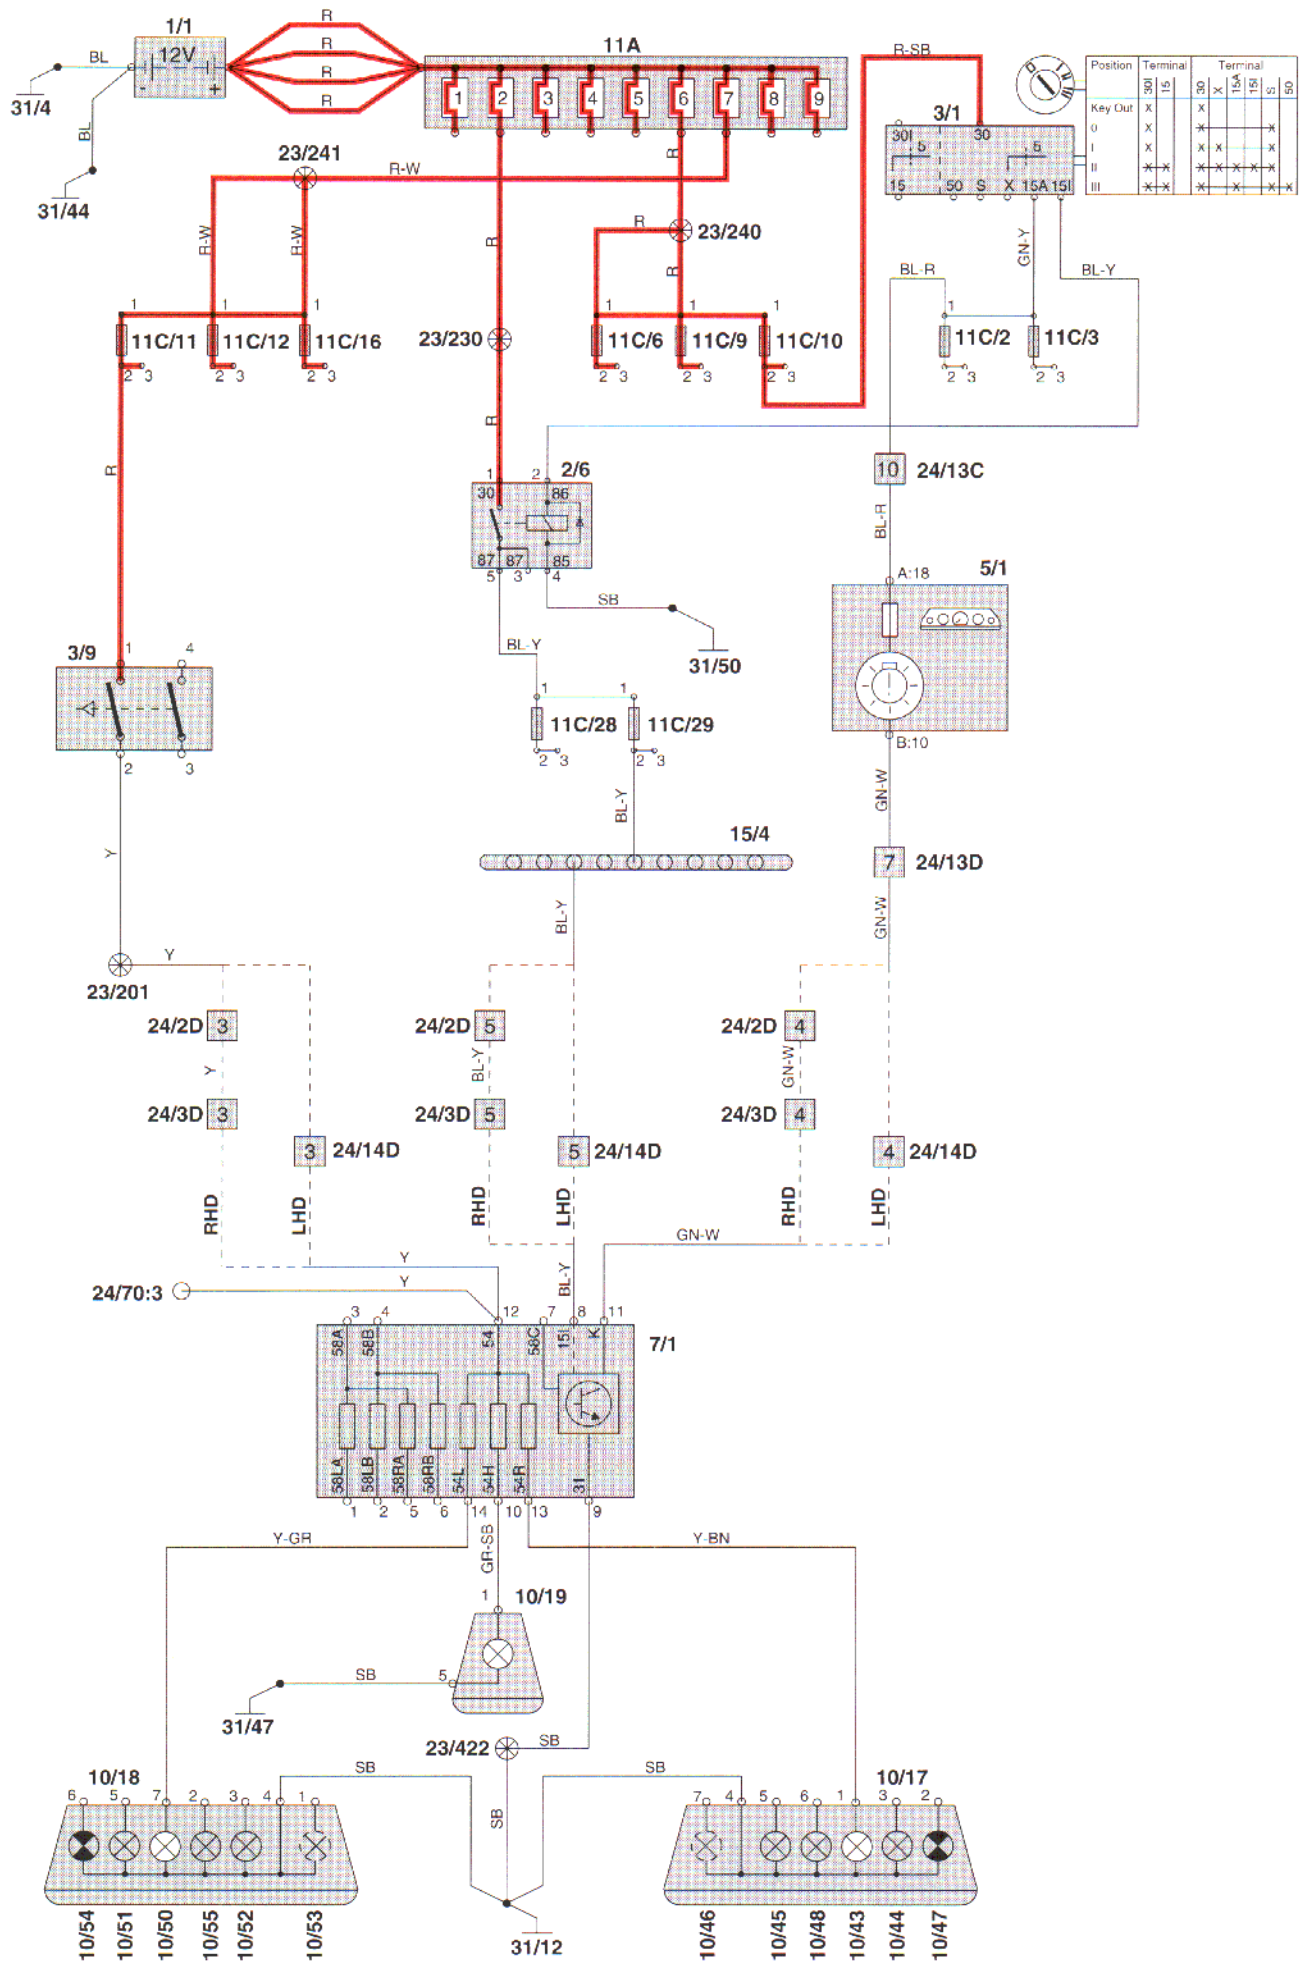


Stop (brake) lamps S70

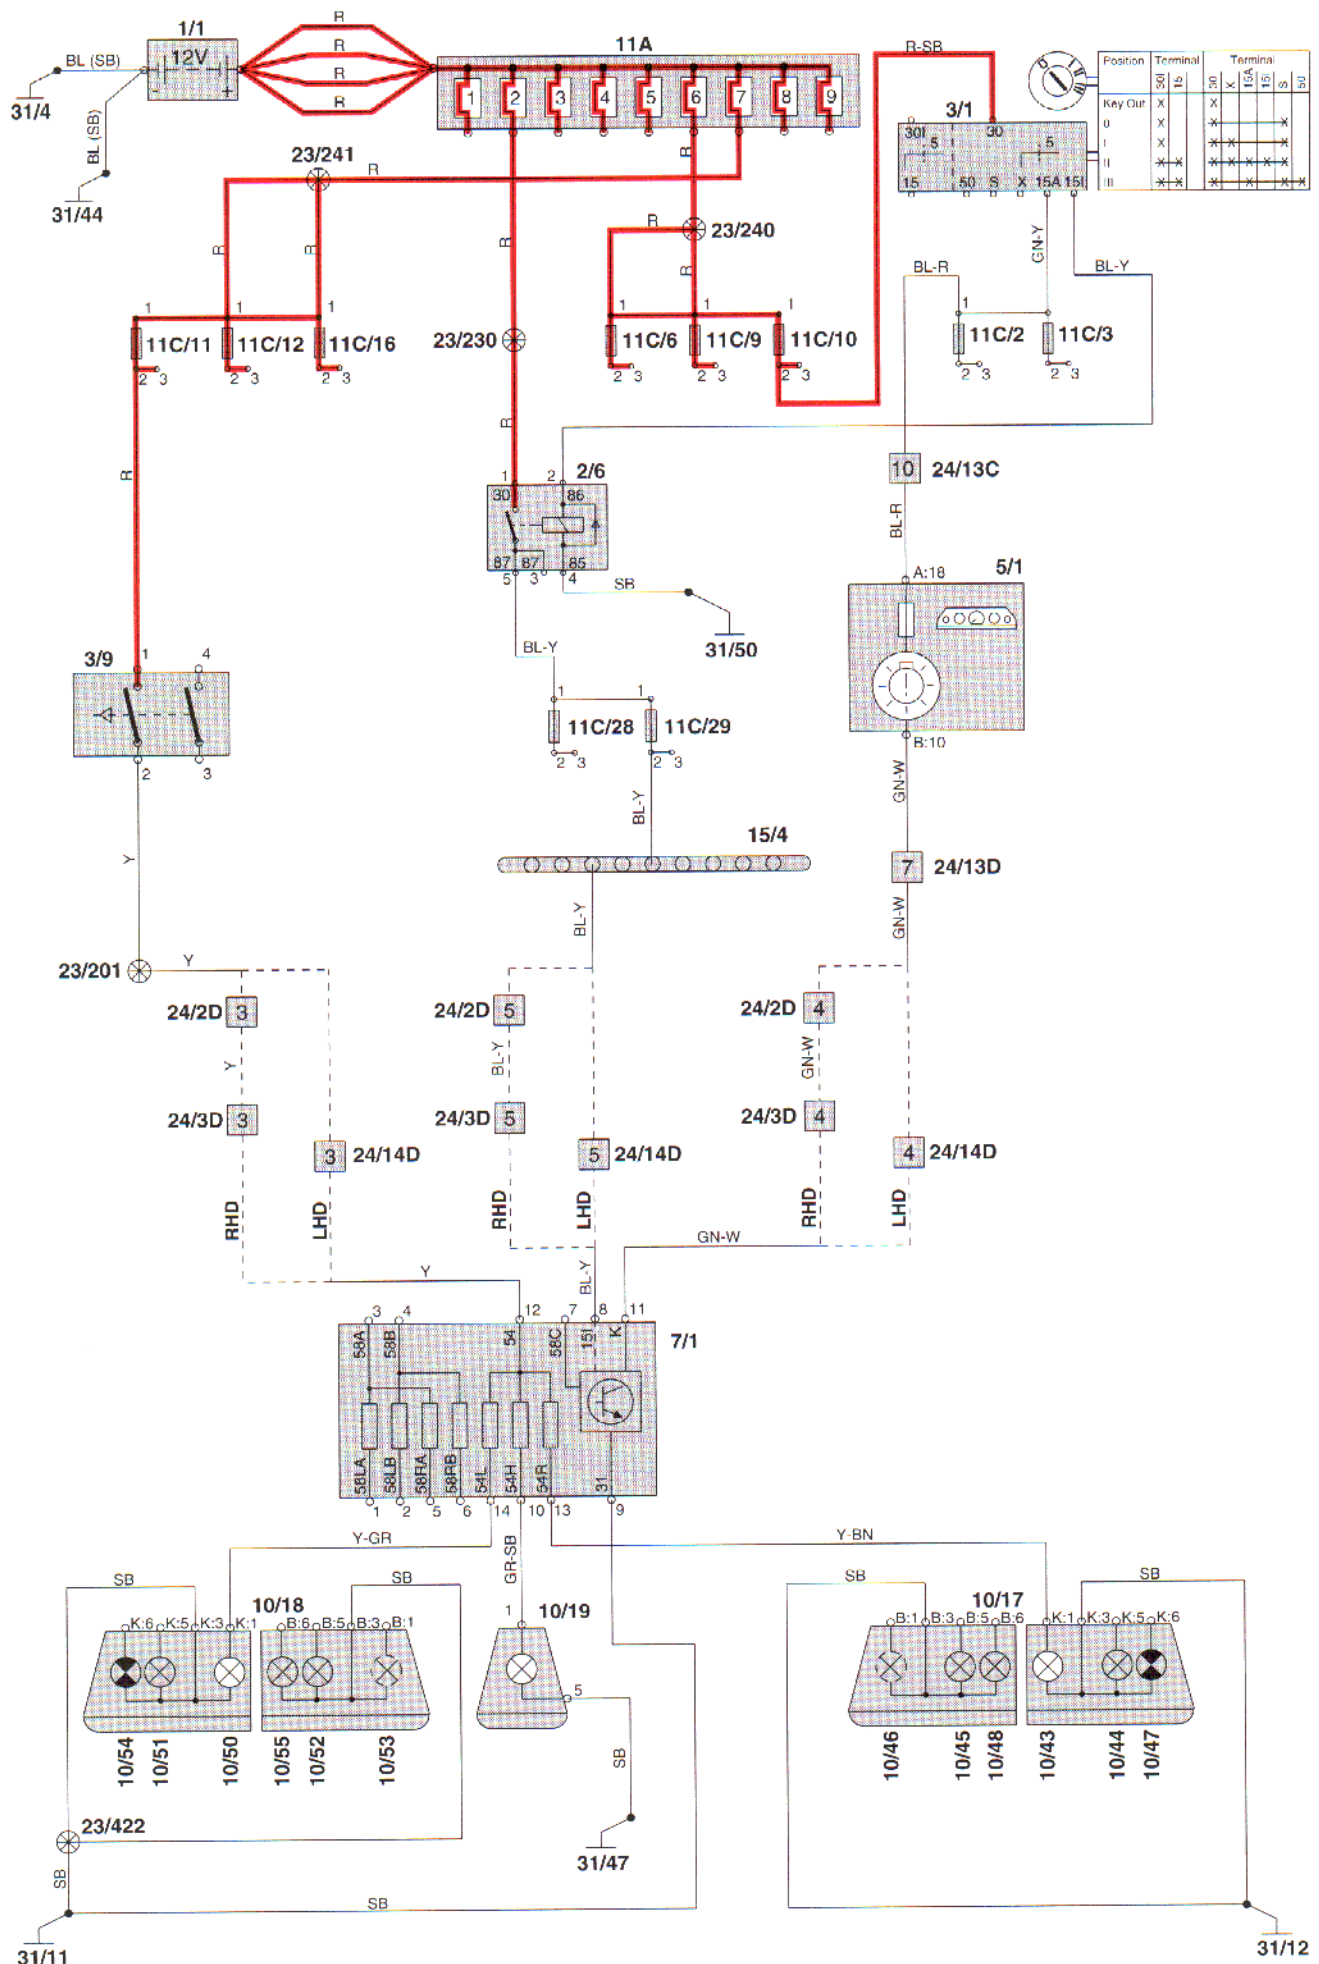


Stop (brake) lamps

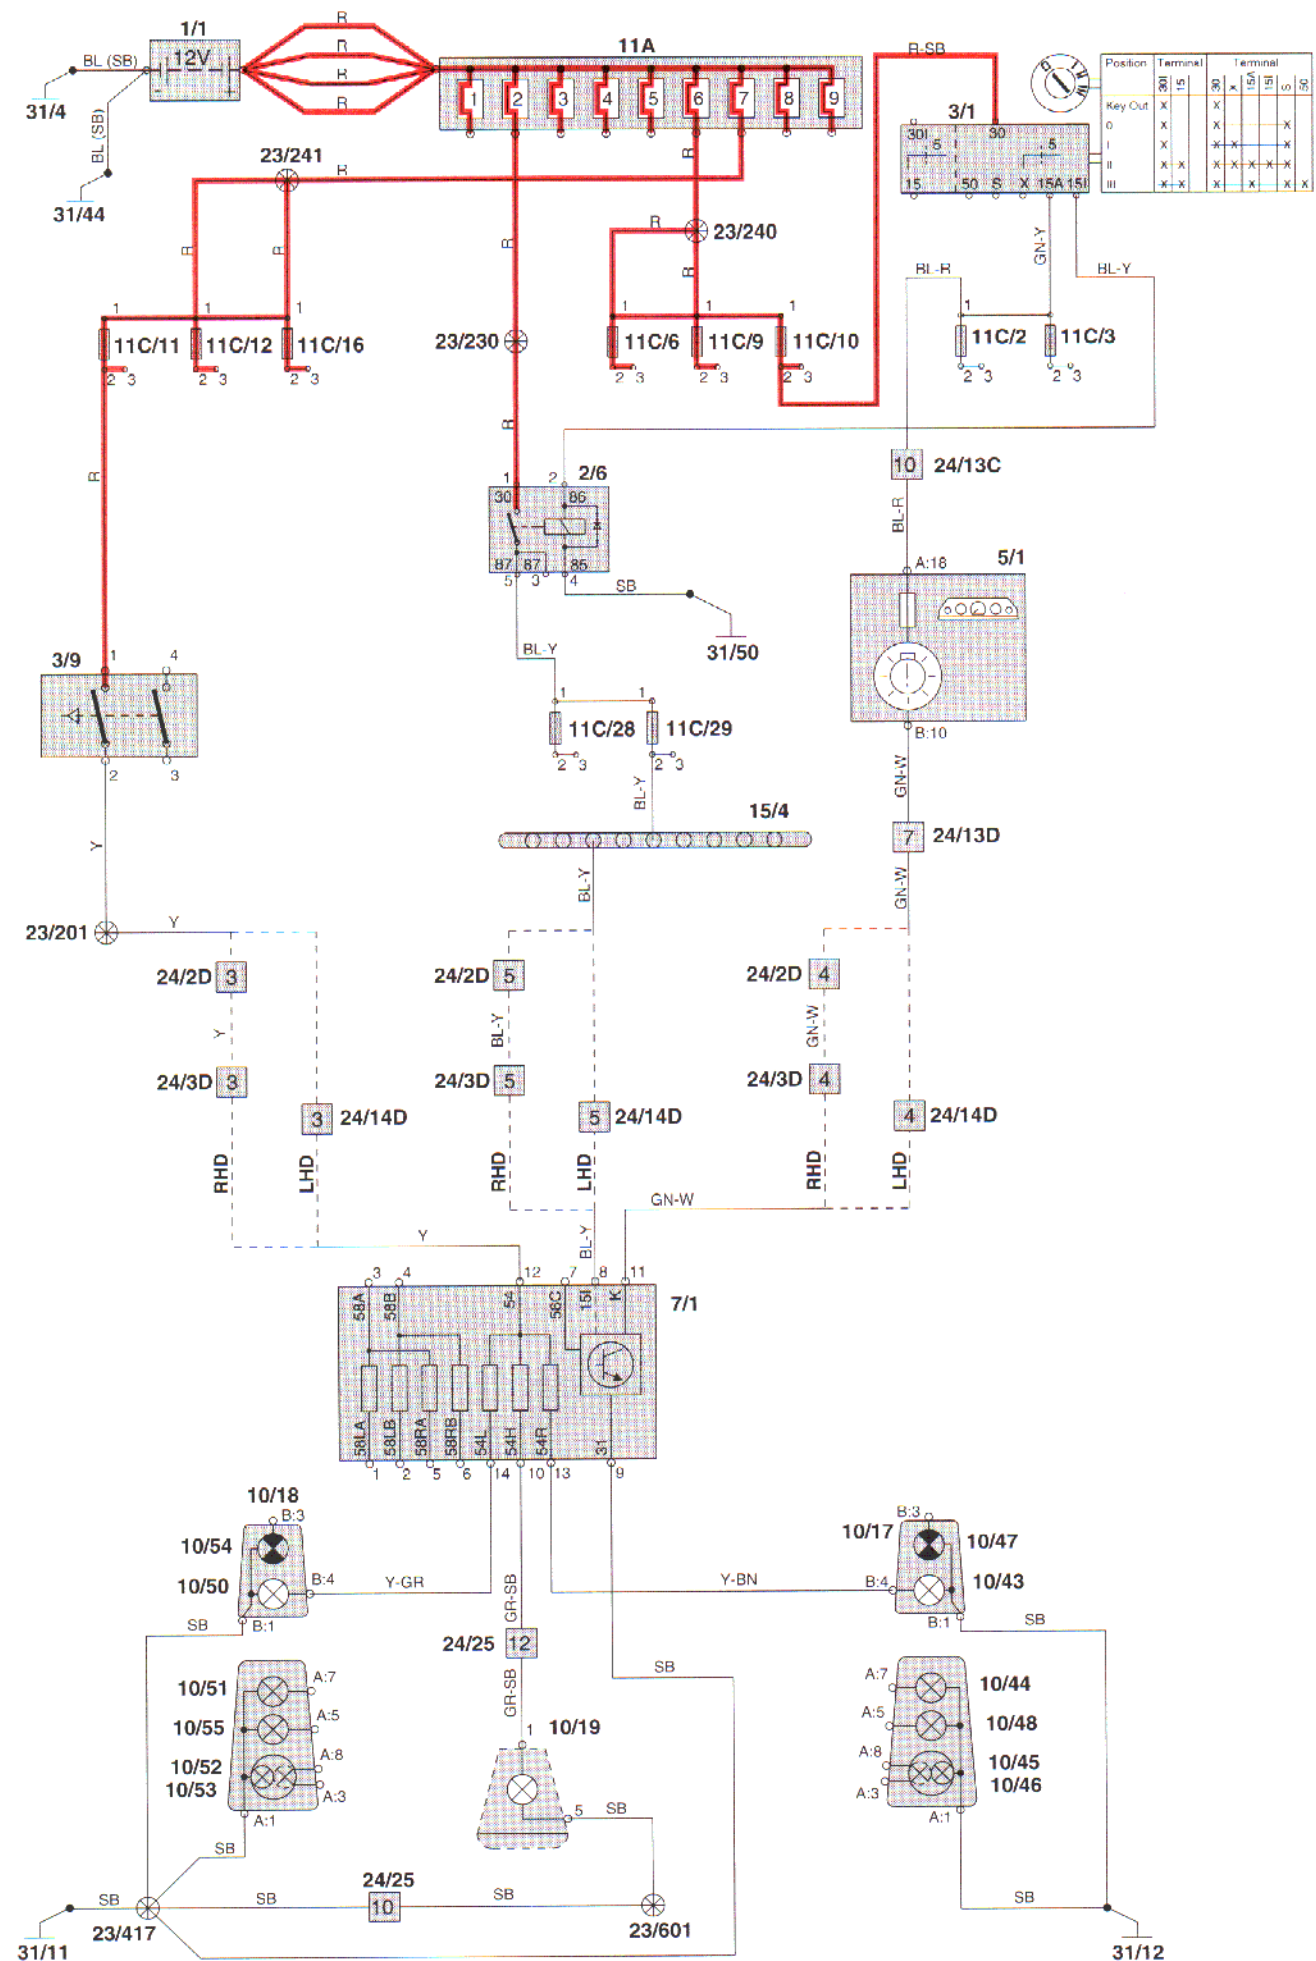


Back-up (reversing) lamps

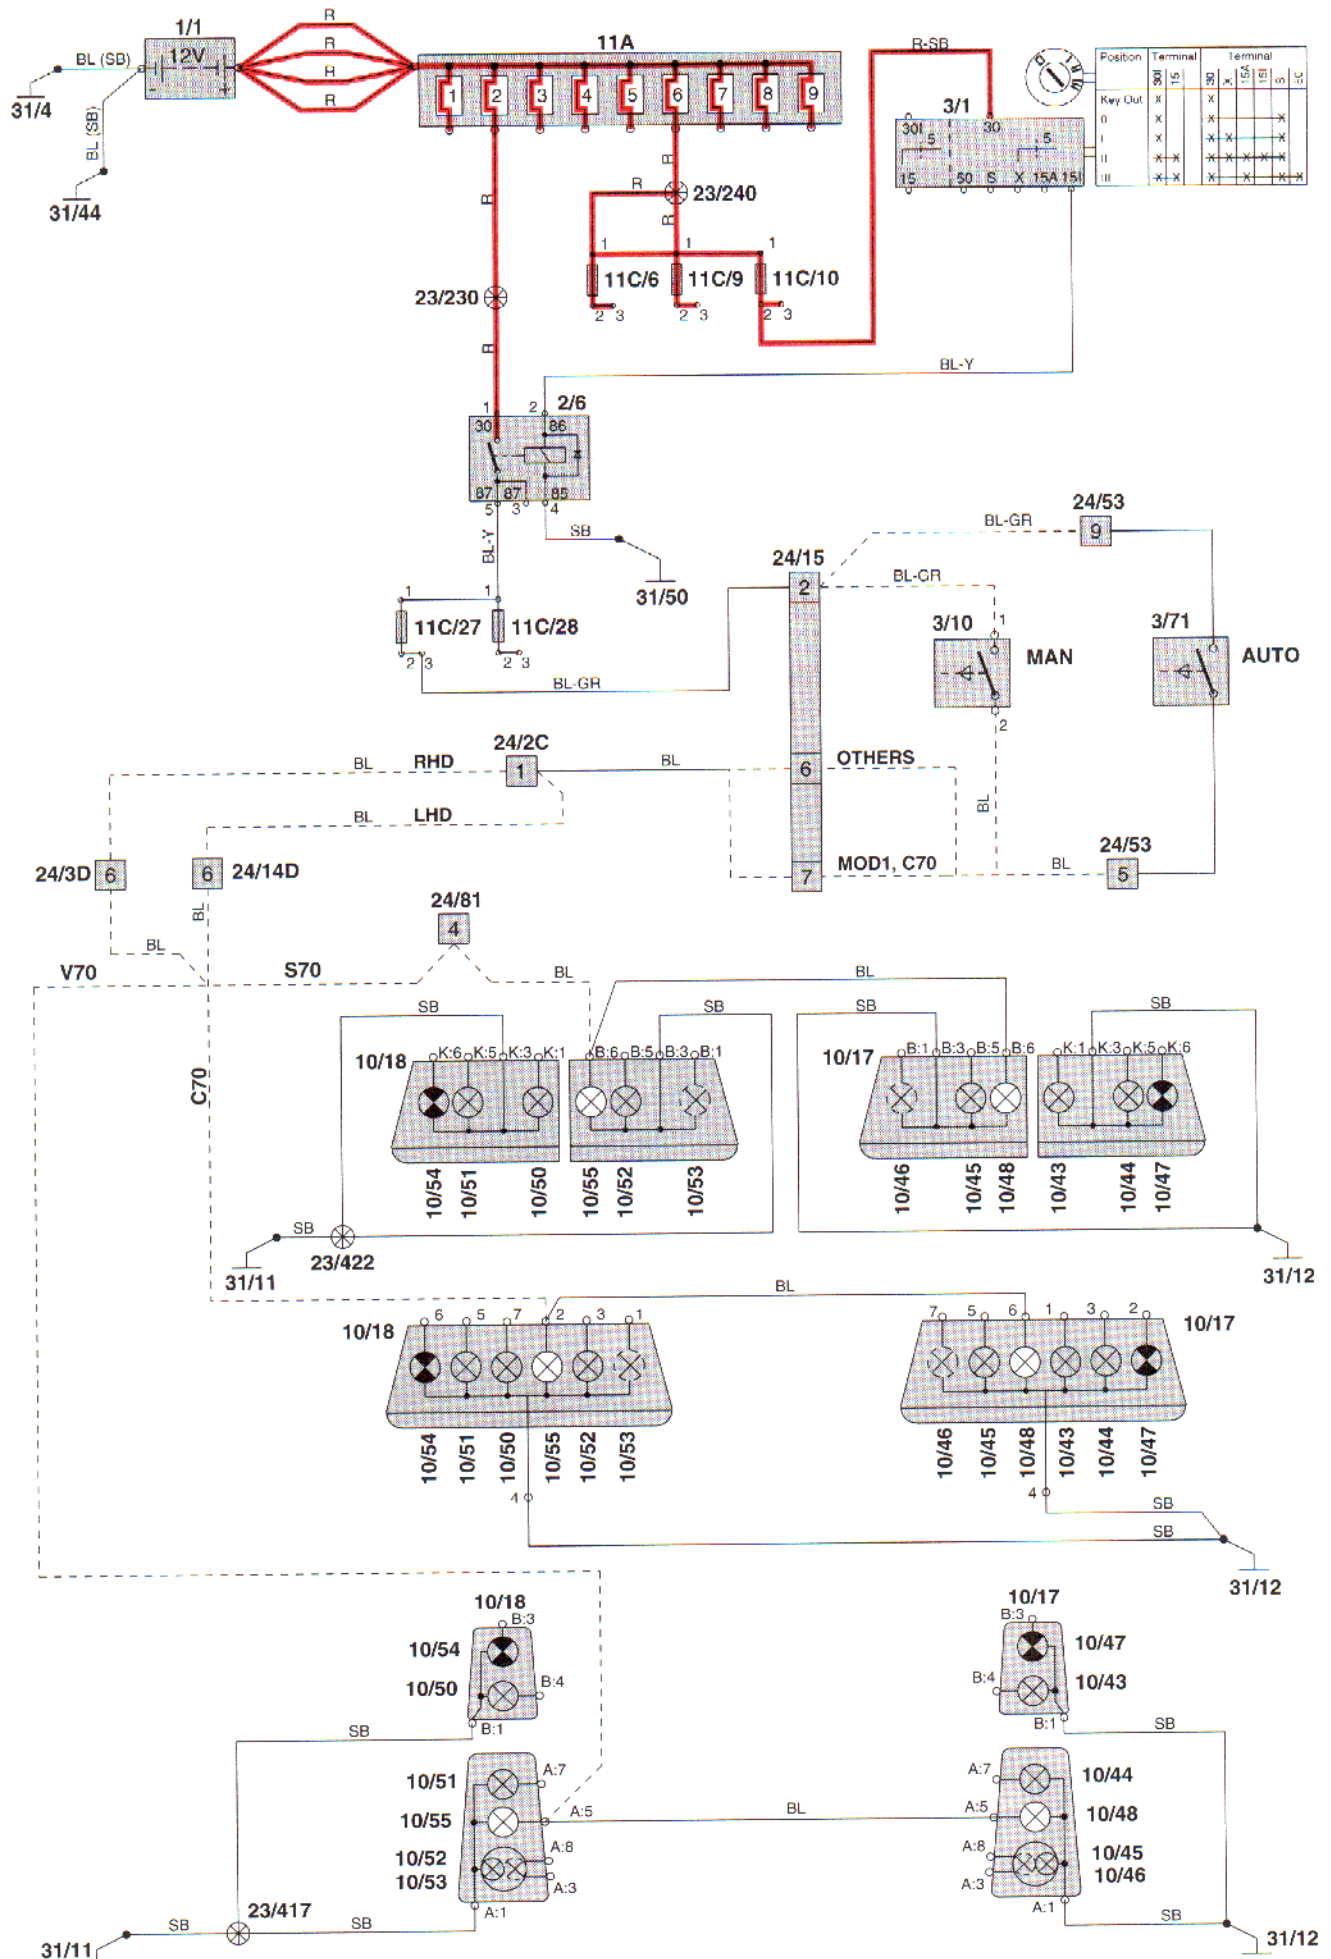


Courtesy lighting C70

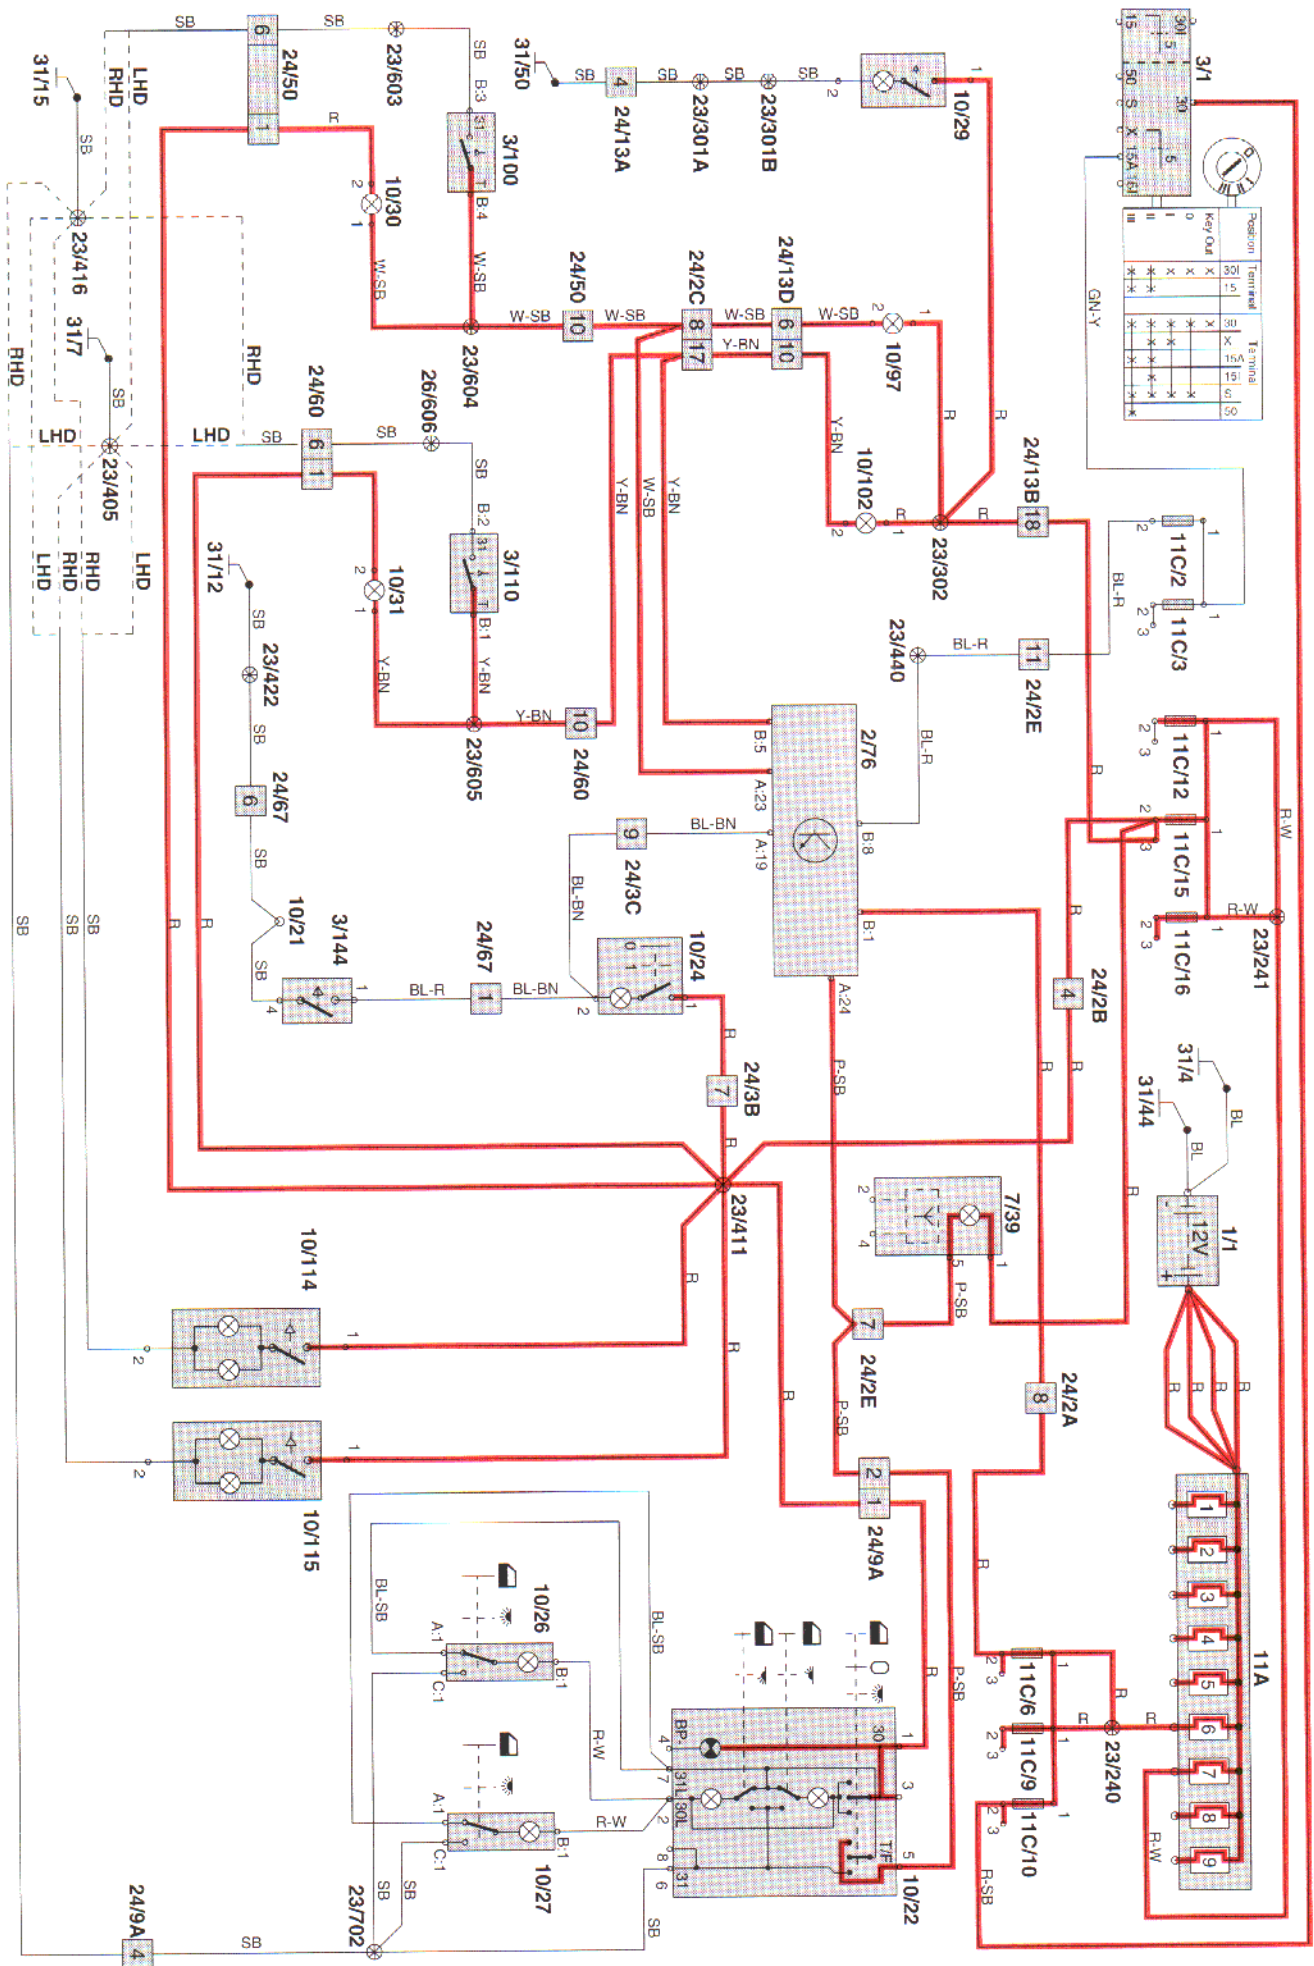

Courtesy lighting S70/V70

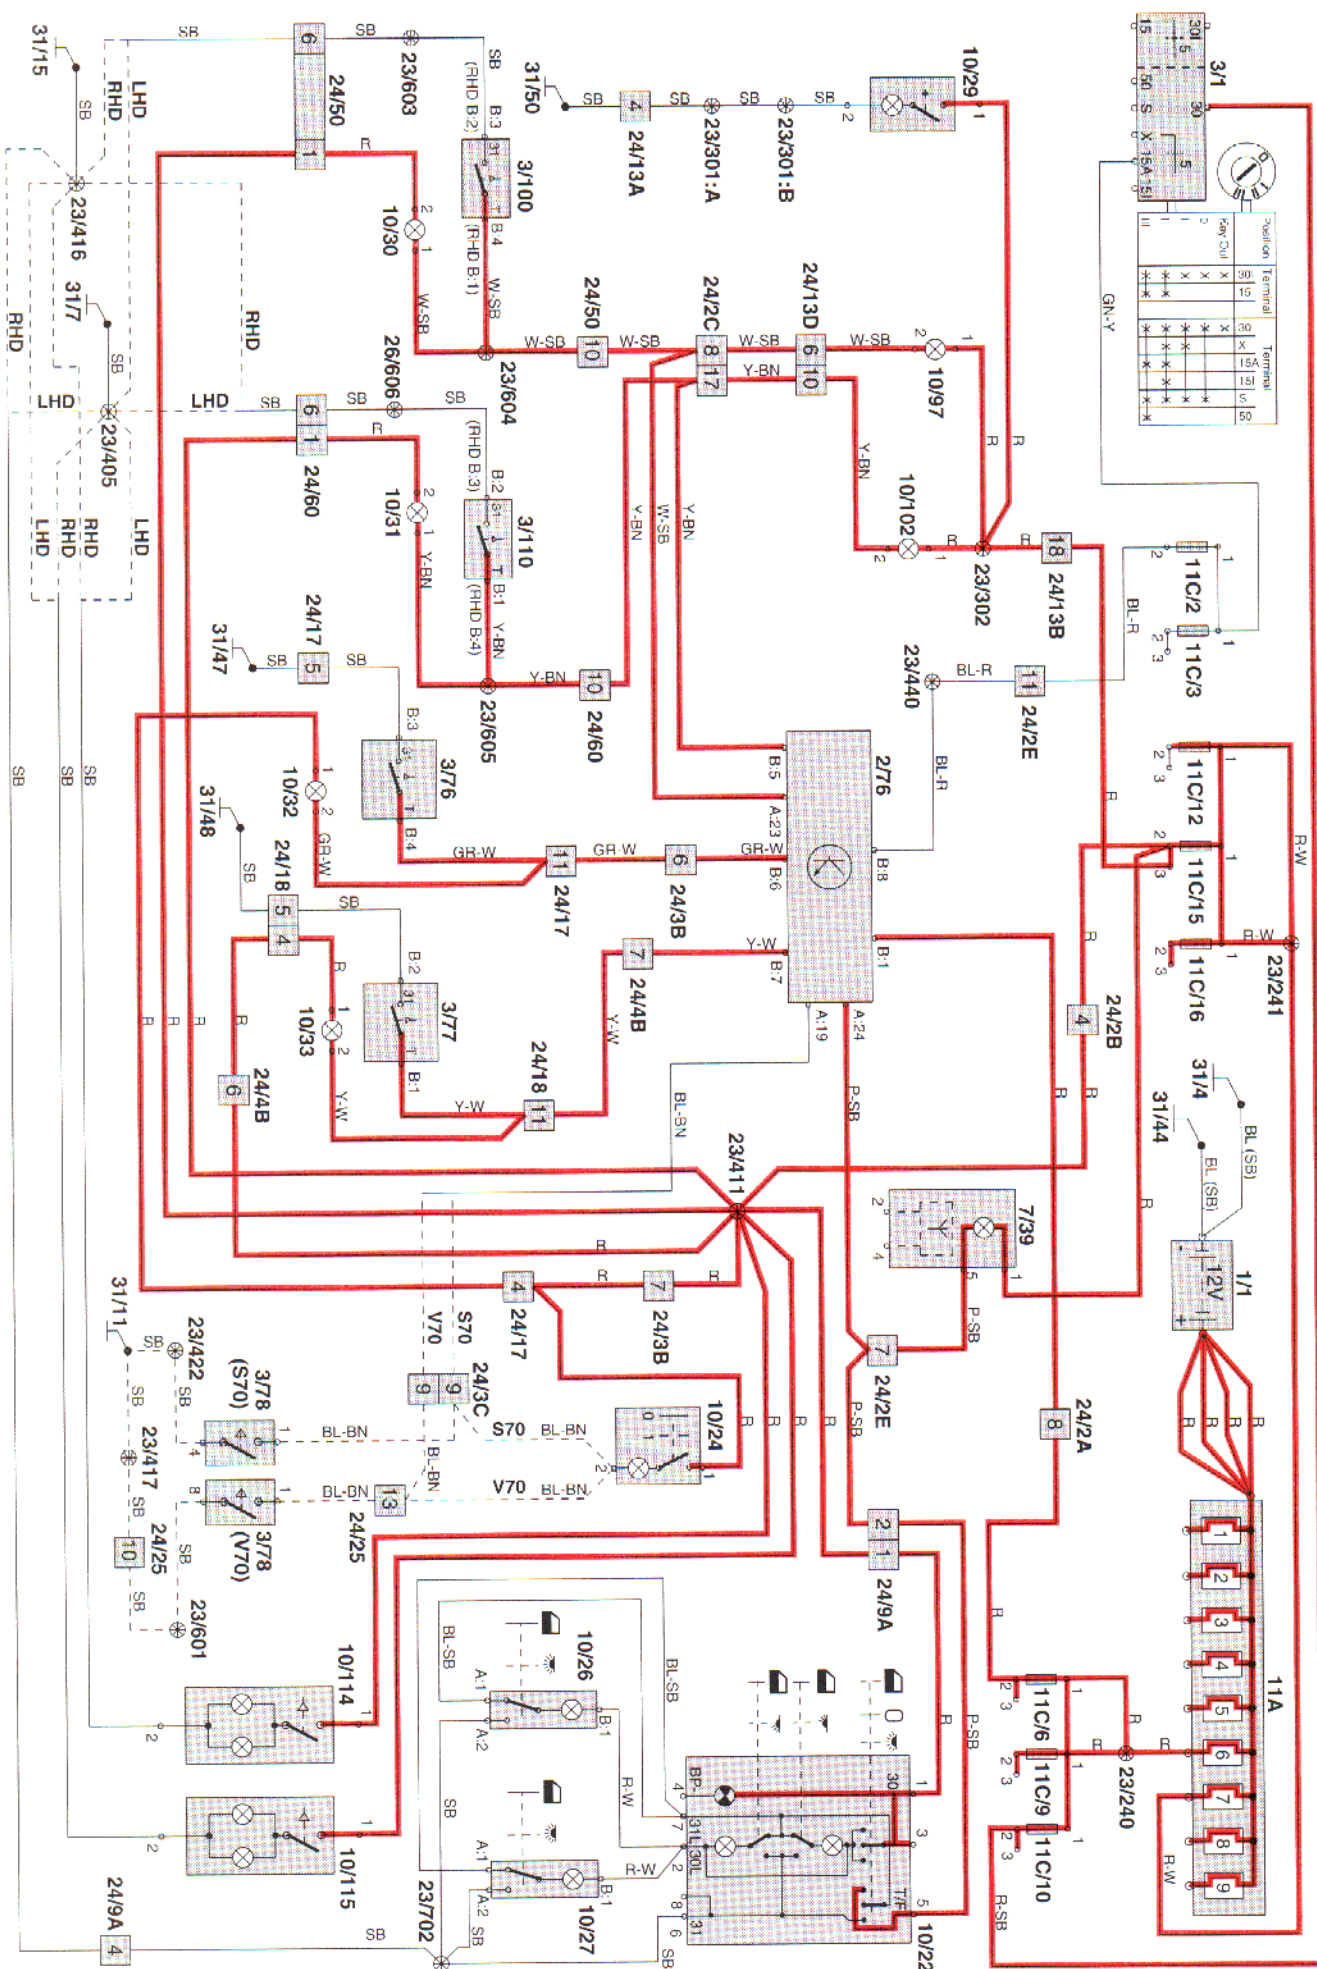

136

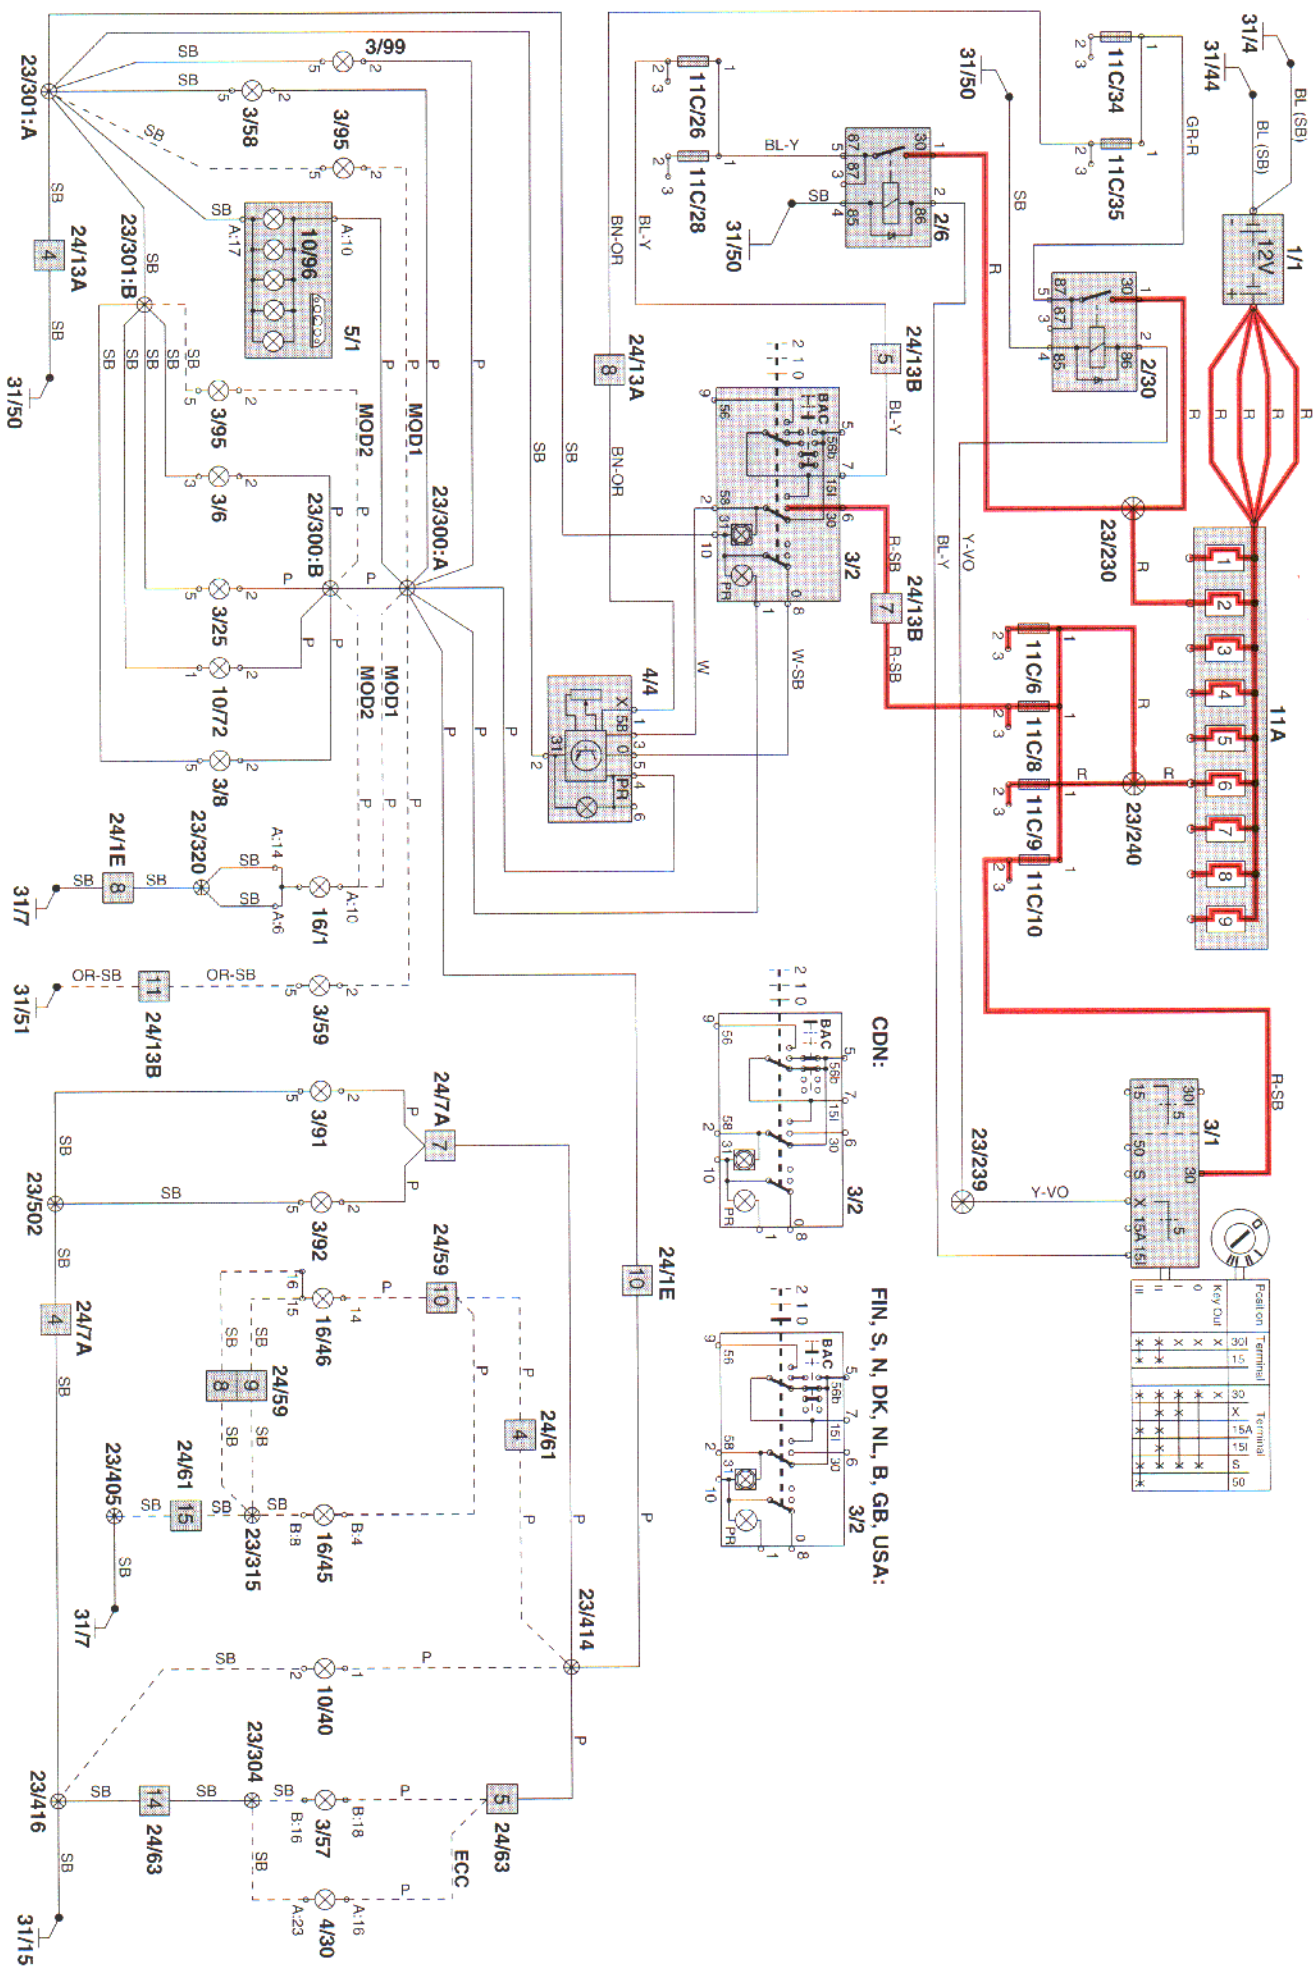

For function diagram see Page 266.




For function diagram see Page 266.



Turn signal lamp and hazard warning signal flasher V70


For function diagram see Page 266.

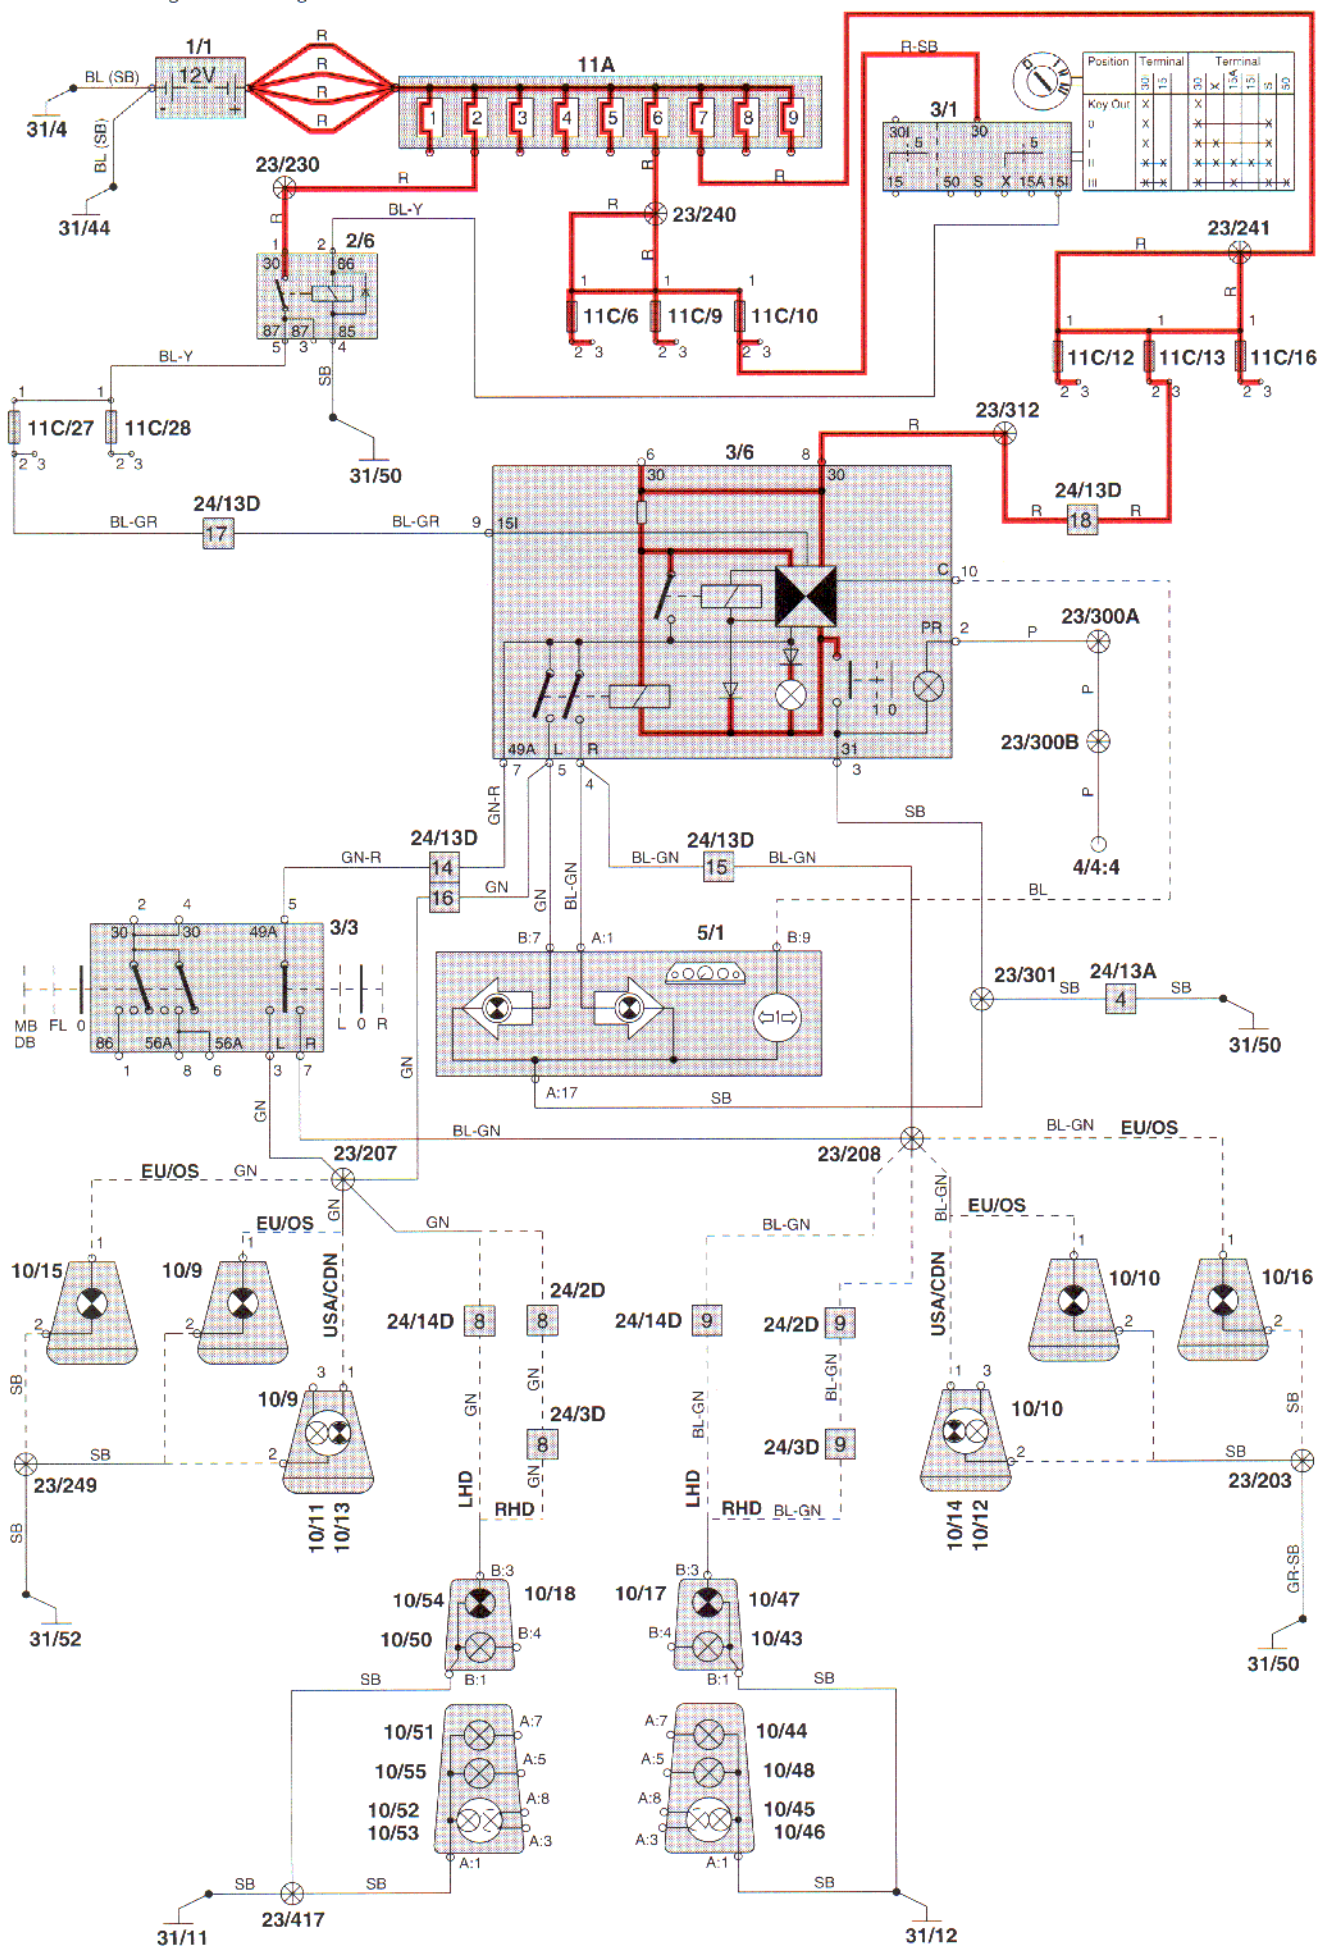




Washer windshield and headlamp


For function diagram see Page 267.

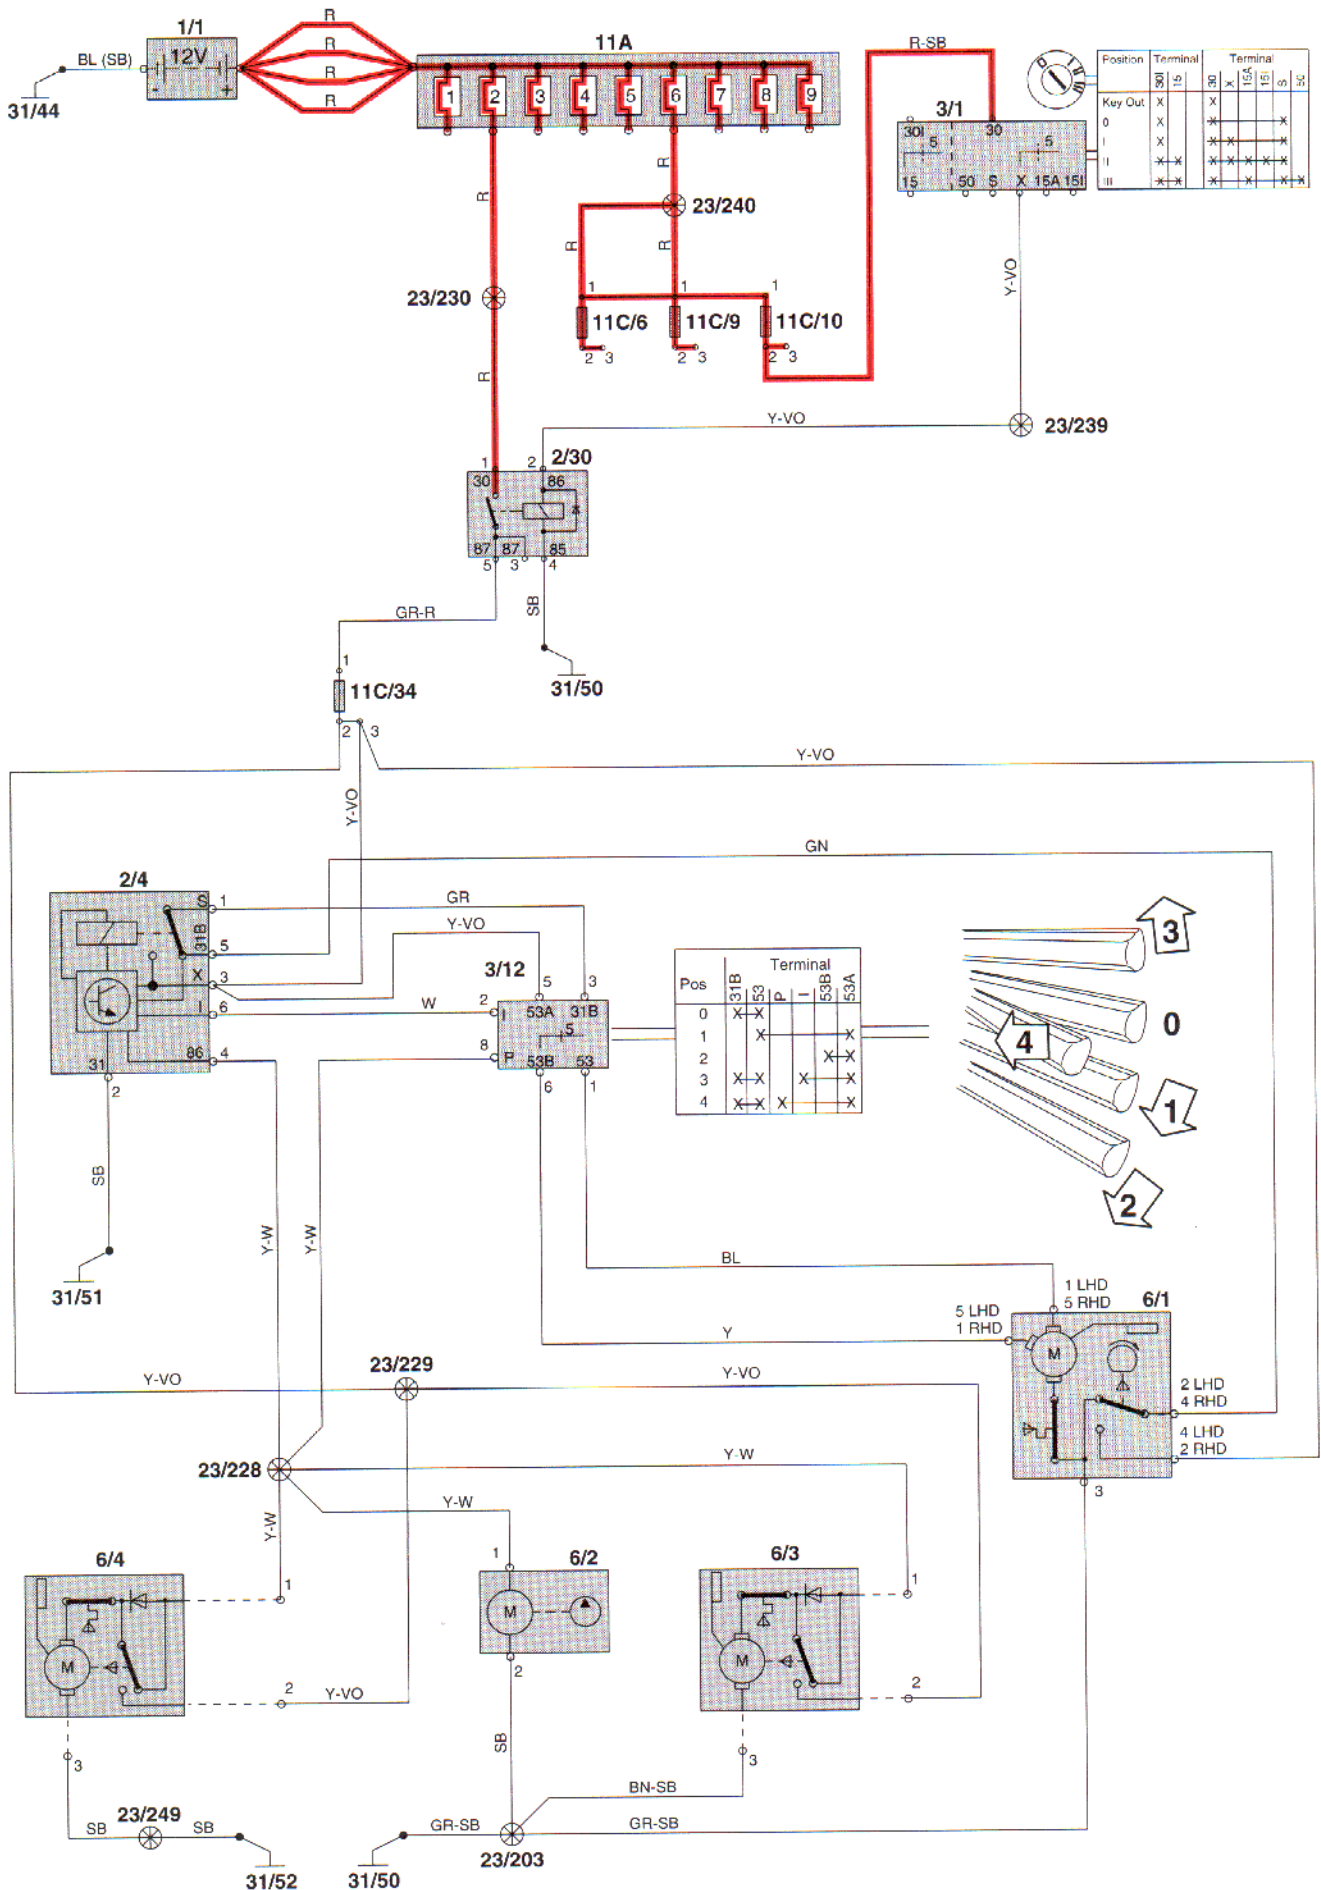

For function diagram see Page 269.

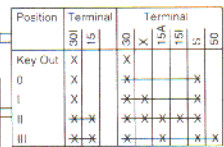


Cigarette lighter/ 12V-output

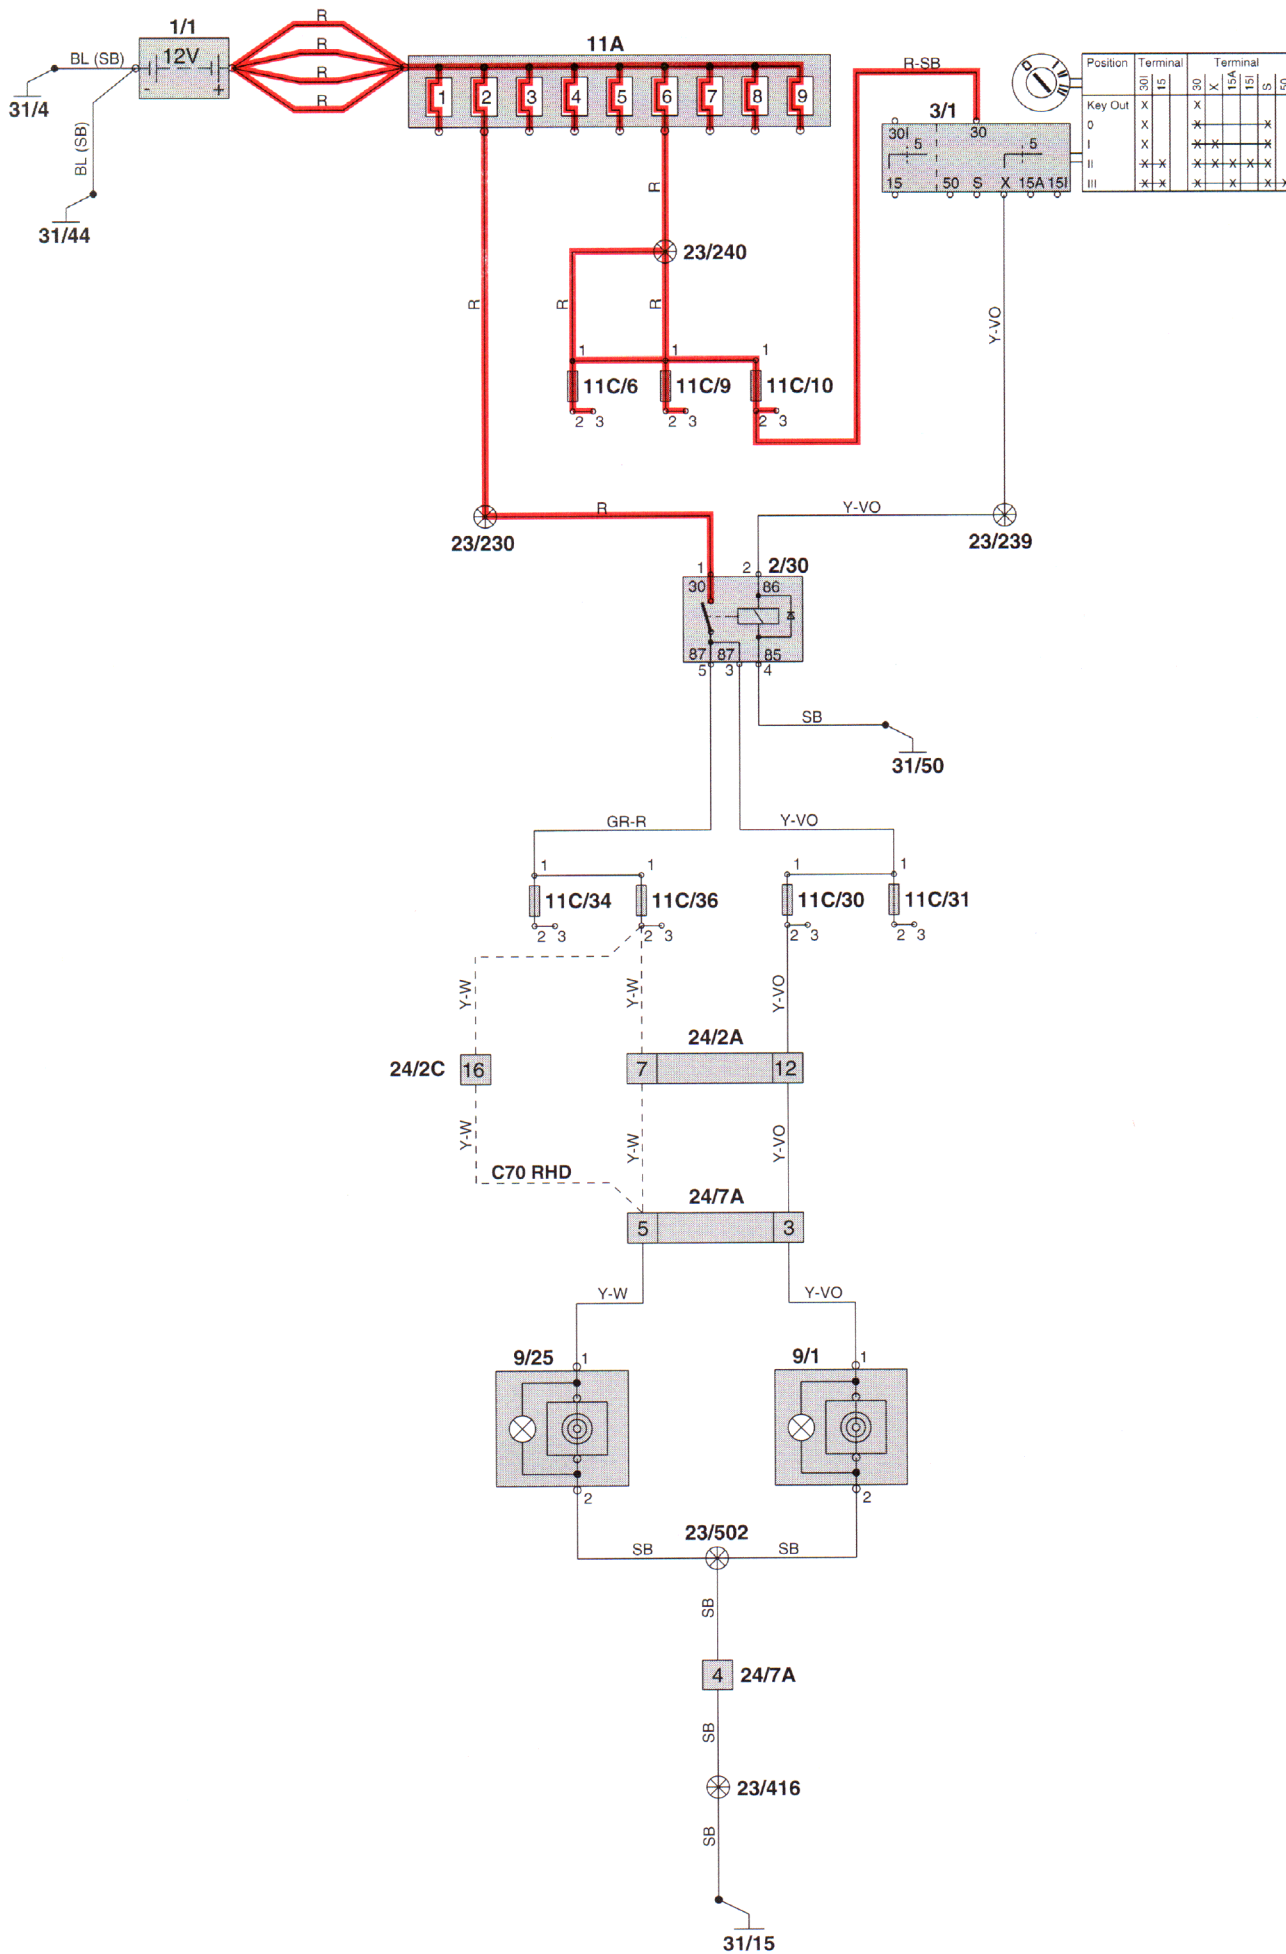


[illegible]


Immobilizer Fenix 5.2, Motronic 4.3/4.4

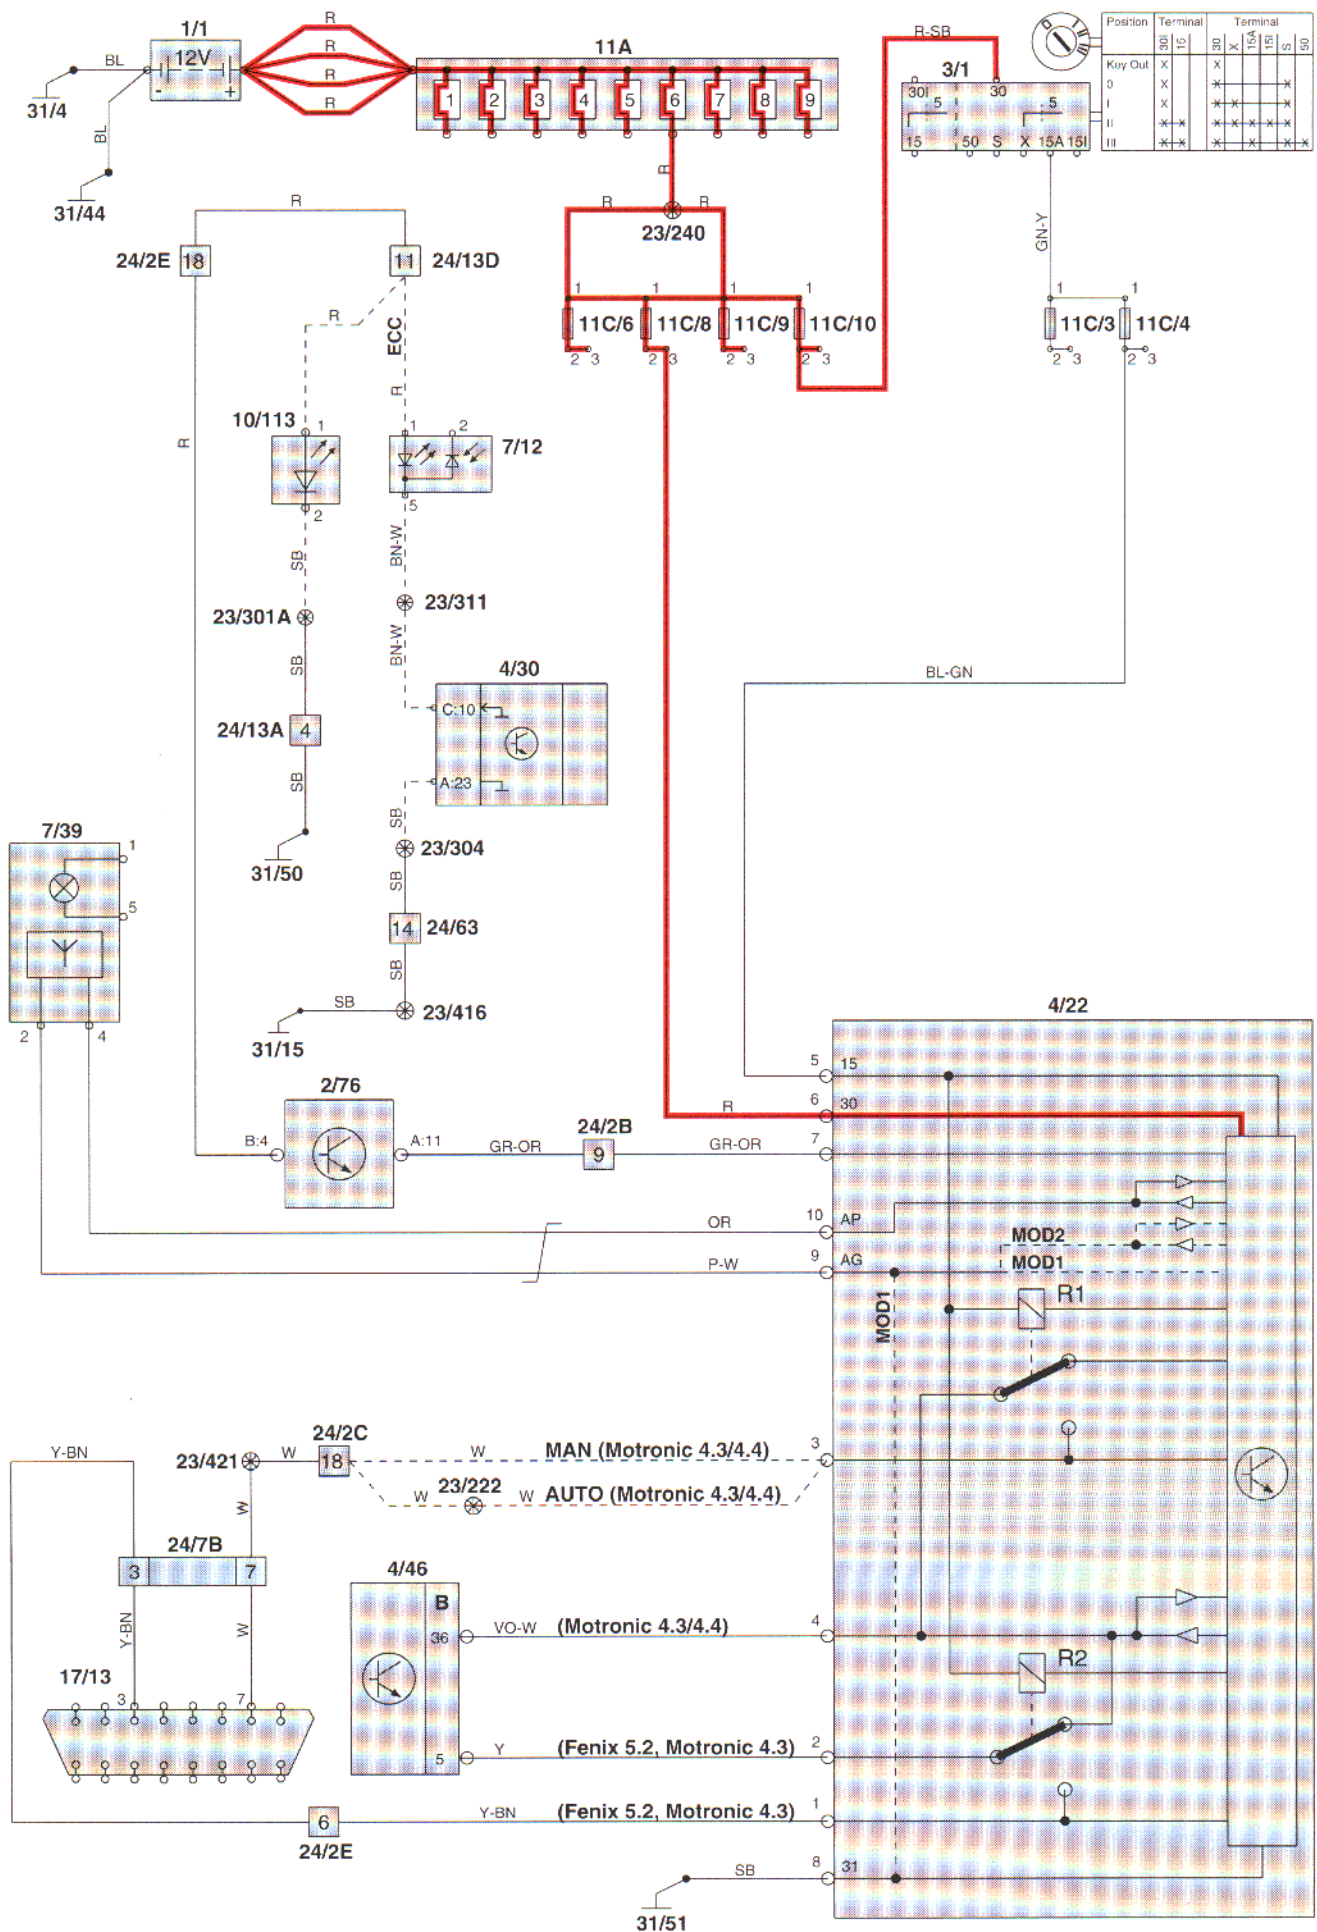


Immobilizer MSA 15.7

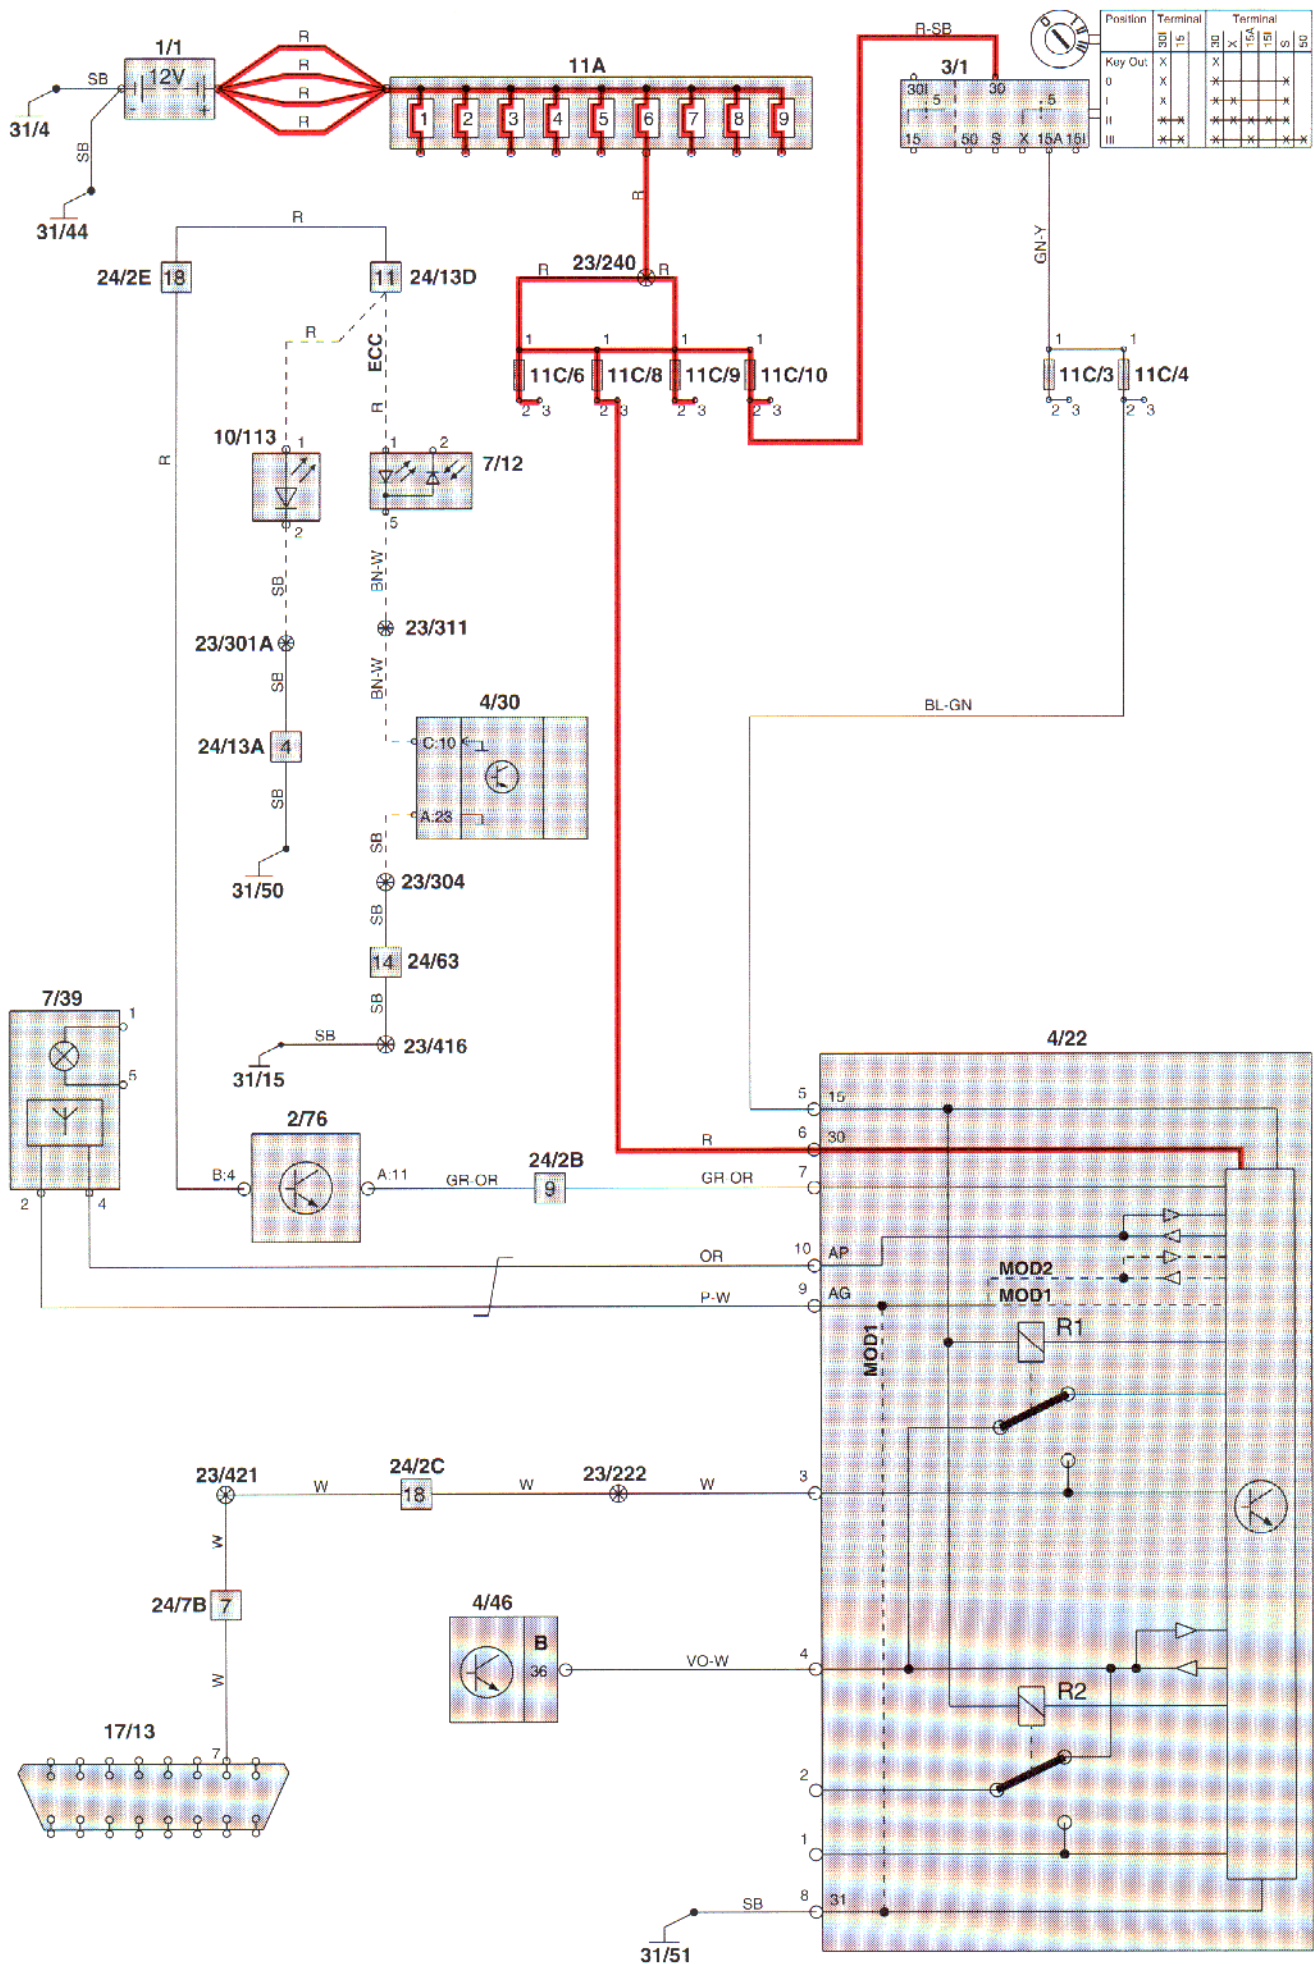

On-board diagnostic system (OBD system)

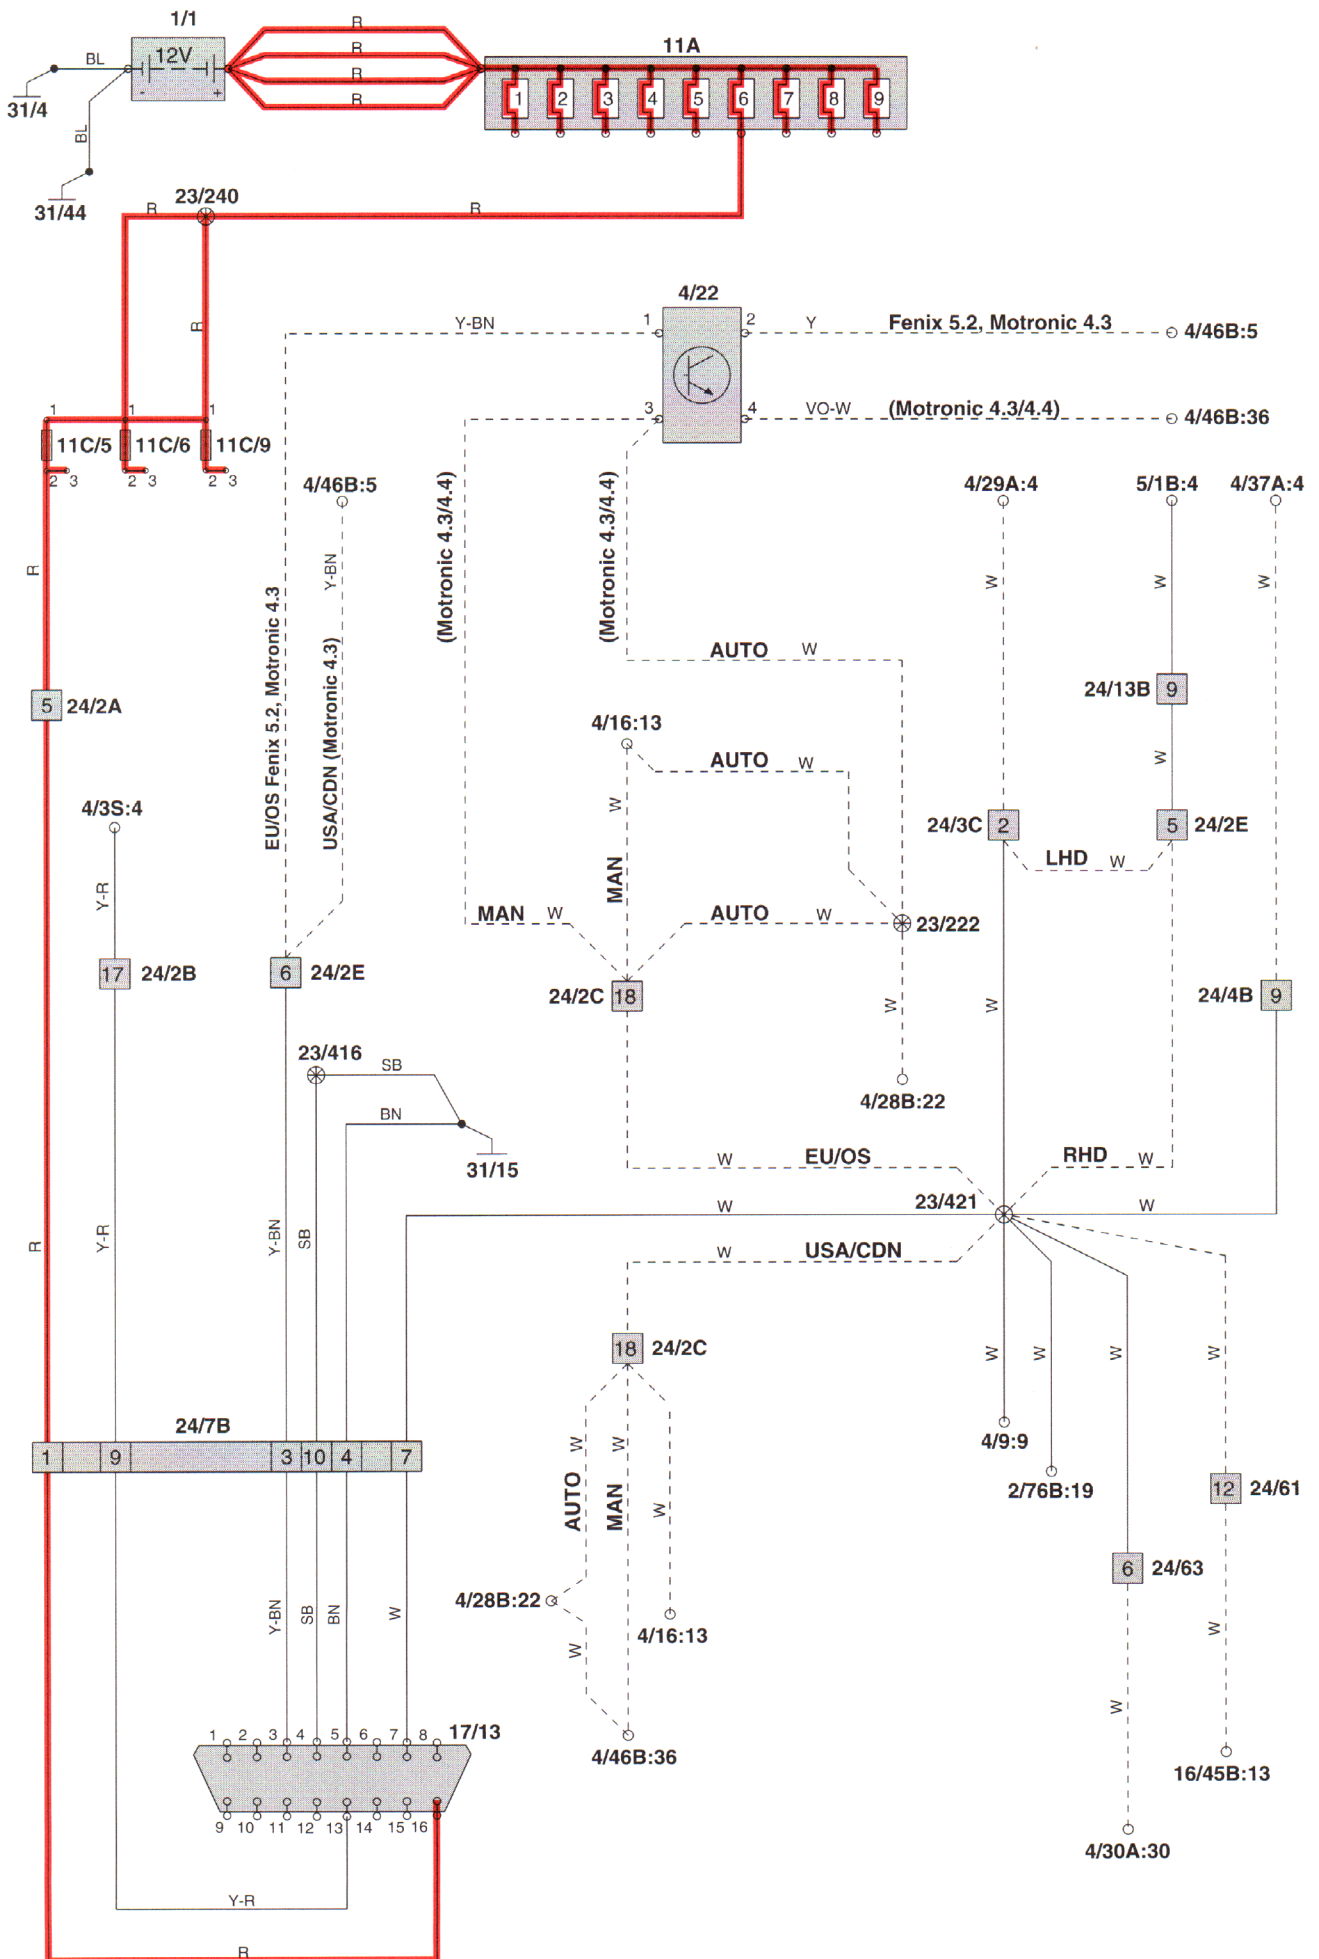

On-board diagnostic system (OBD system) MSA 15.7

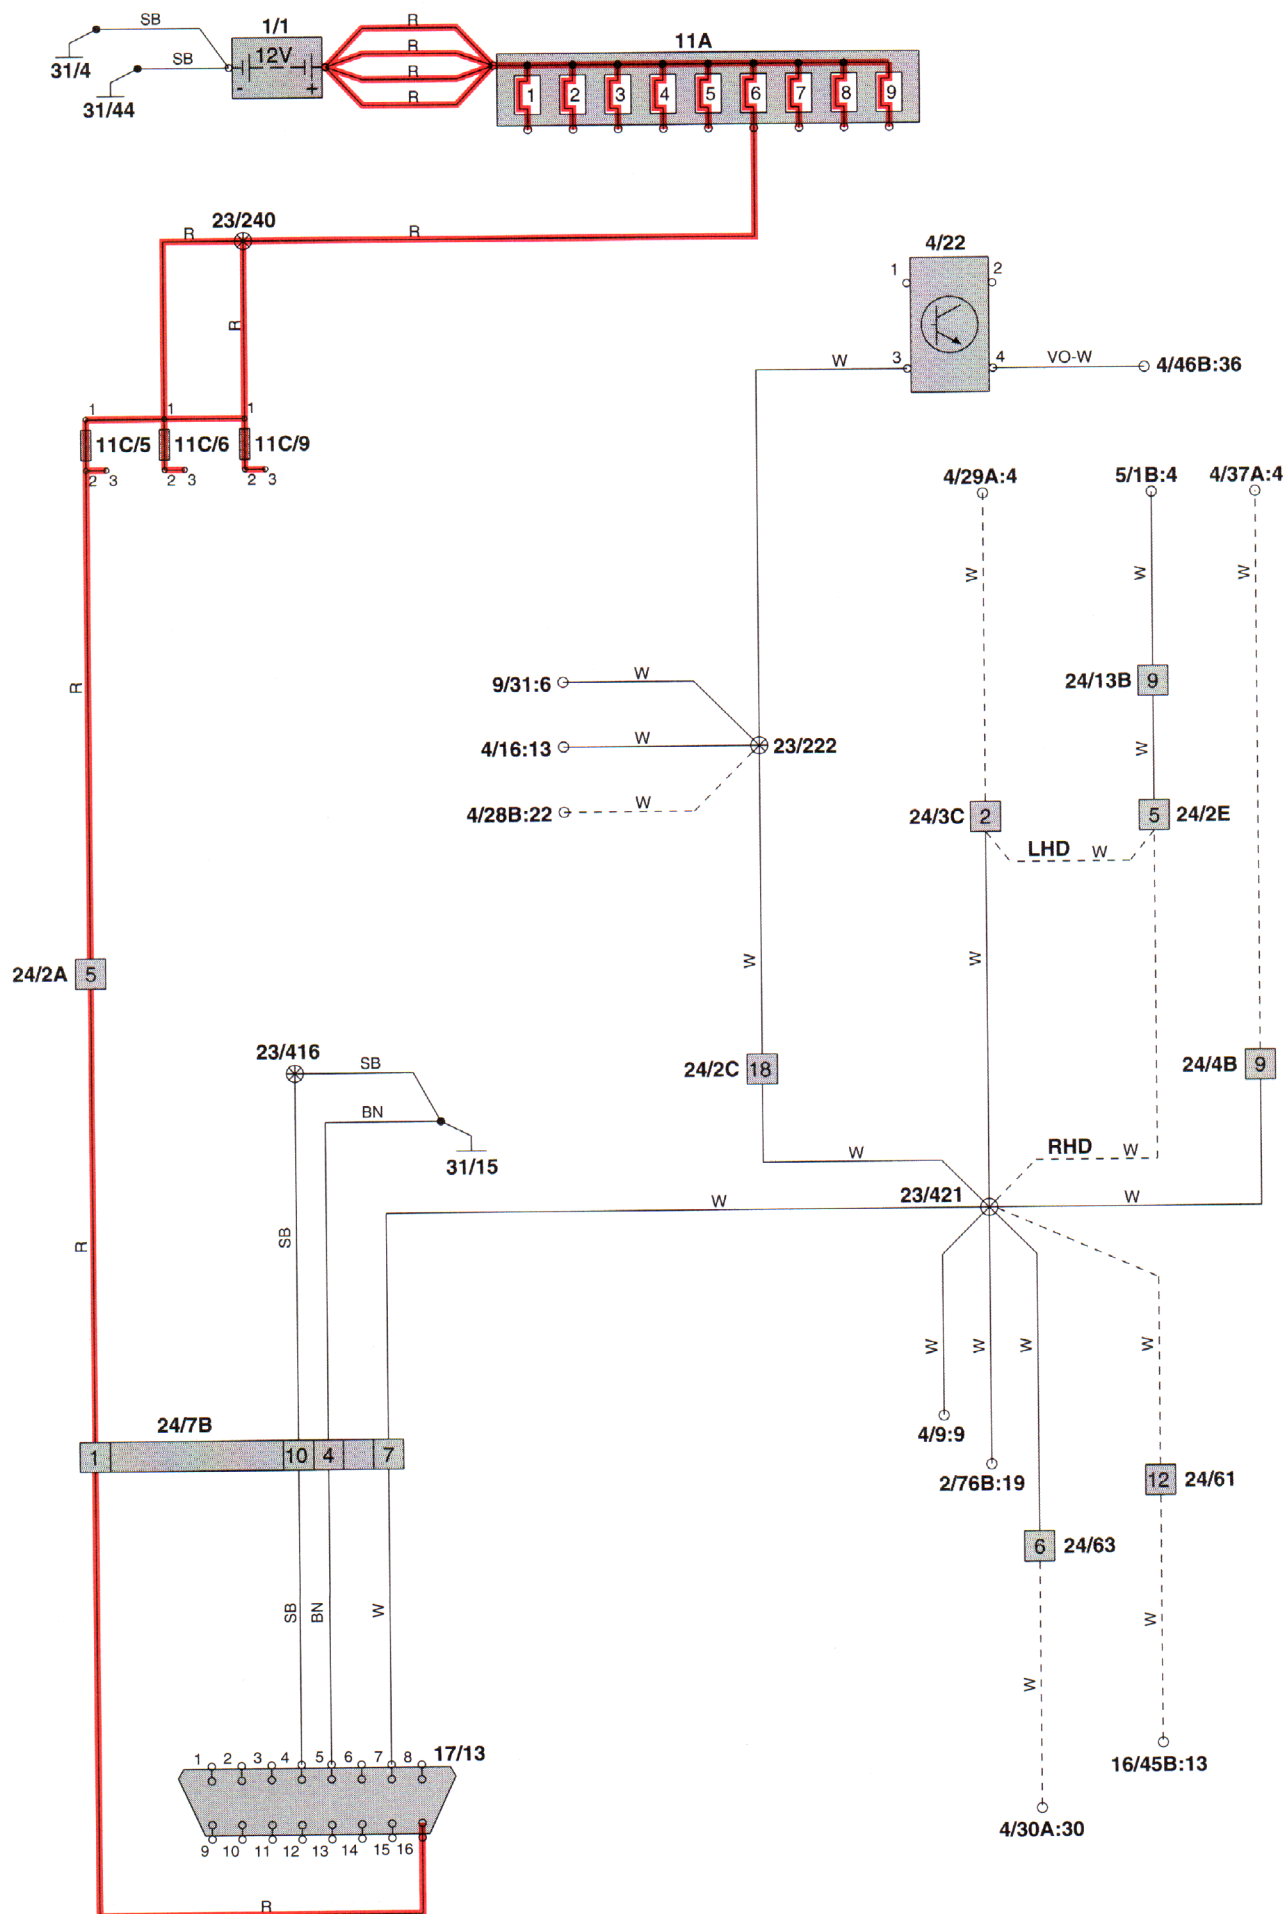


Tow hitch cable harness C70

24/70A

- 1 Left turn signal lamp
- 2 Right turn signal lamp
- 3 Stop (brake) lamp
- 4 Parking lamps
- 5 Parking lamps
- 6 Ground terminal

24/70B


- 1 30-supply
- 2 15I-supply
- 3 Back-up (reversing) lamp
- 4 Fog tail lamp
- 5 Fog tail lamp, bridging
- 6 Ground terminal

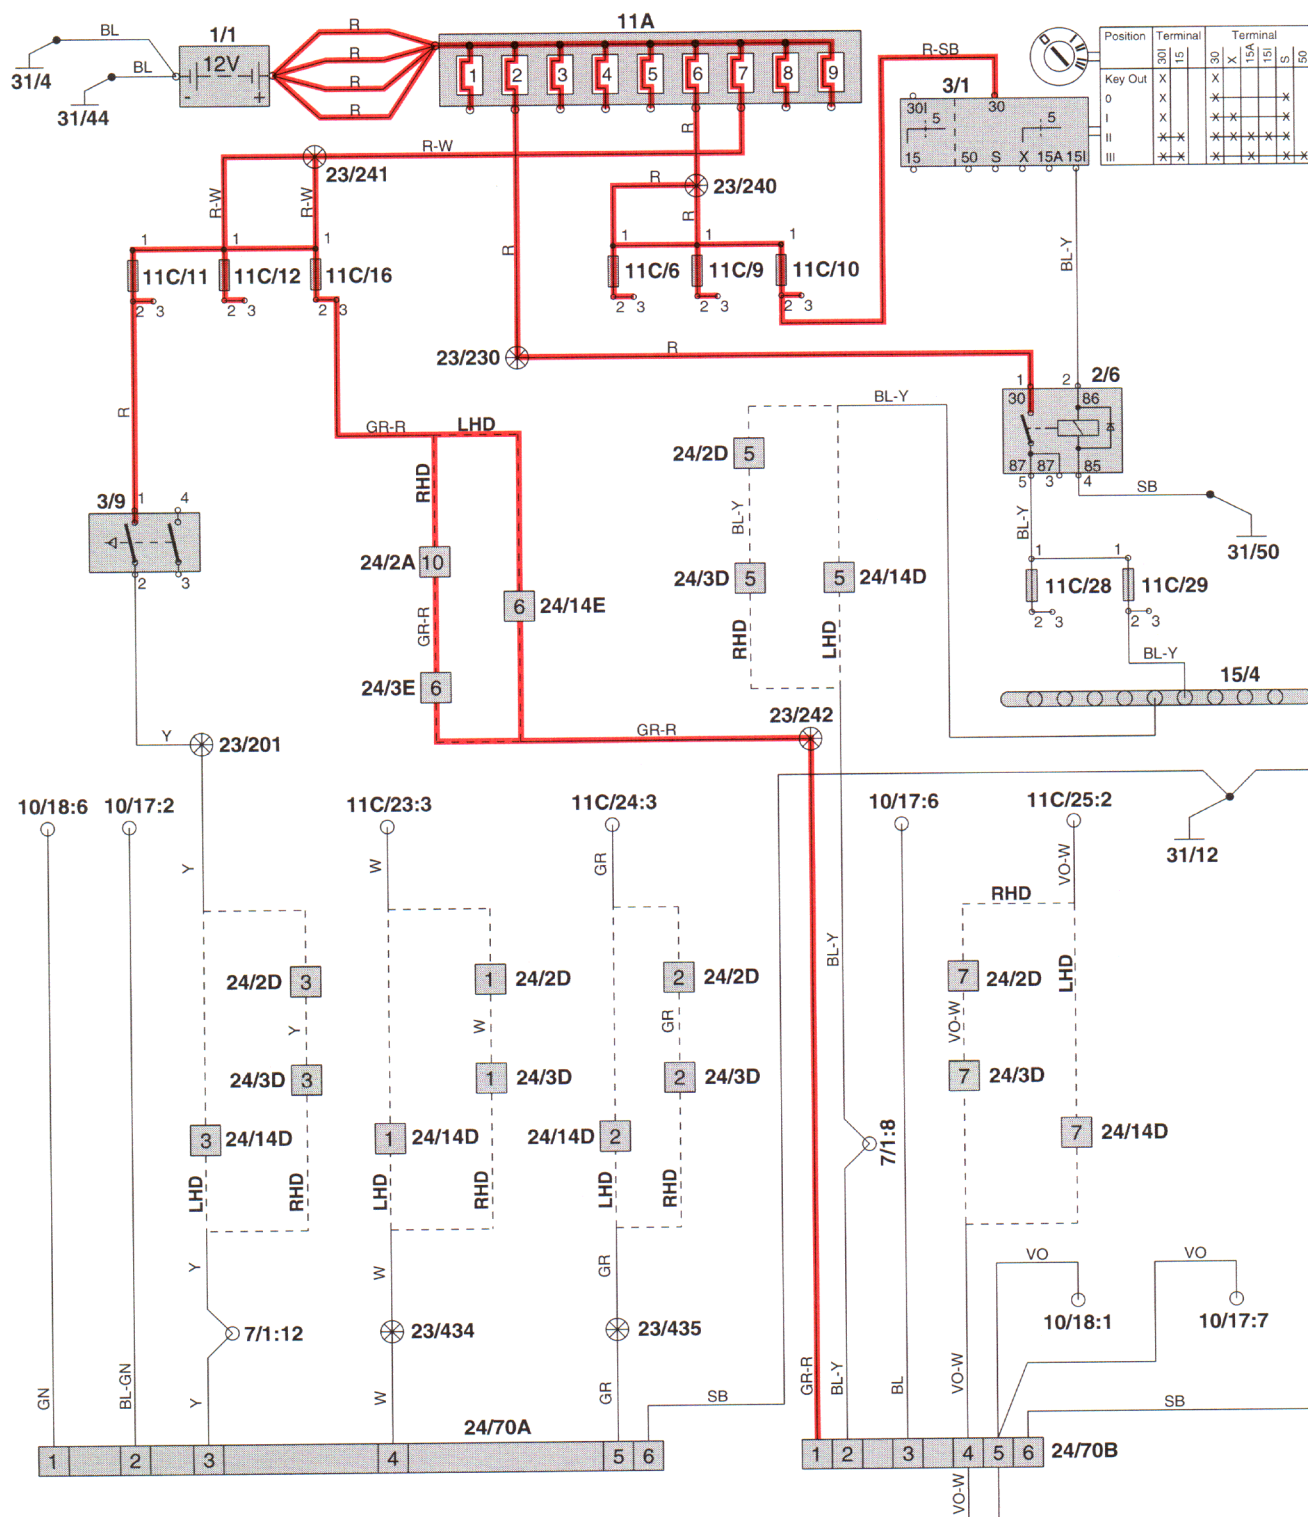


Accessory wiring

24/35

- 1 30-supply
- 2 X-supply
- 3 High beam
- 6 Rheostat, variable supply
- 8 Ground point

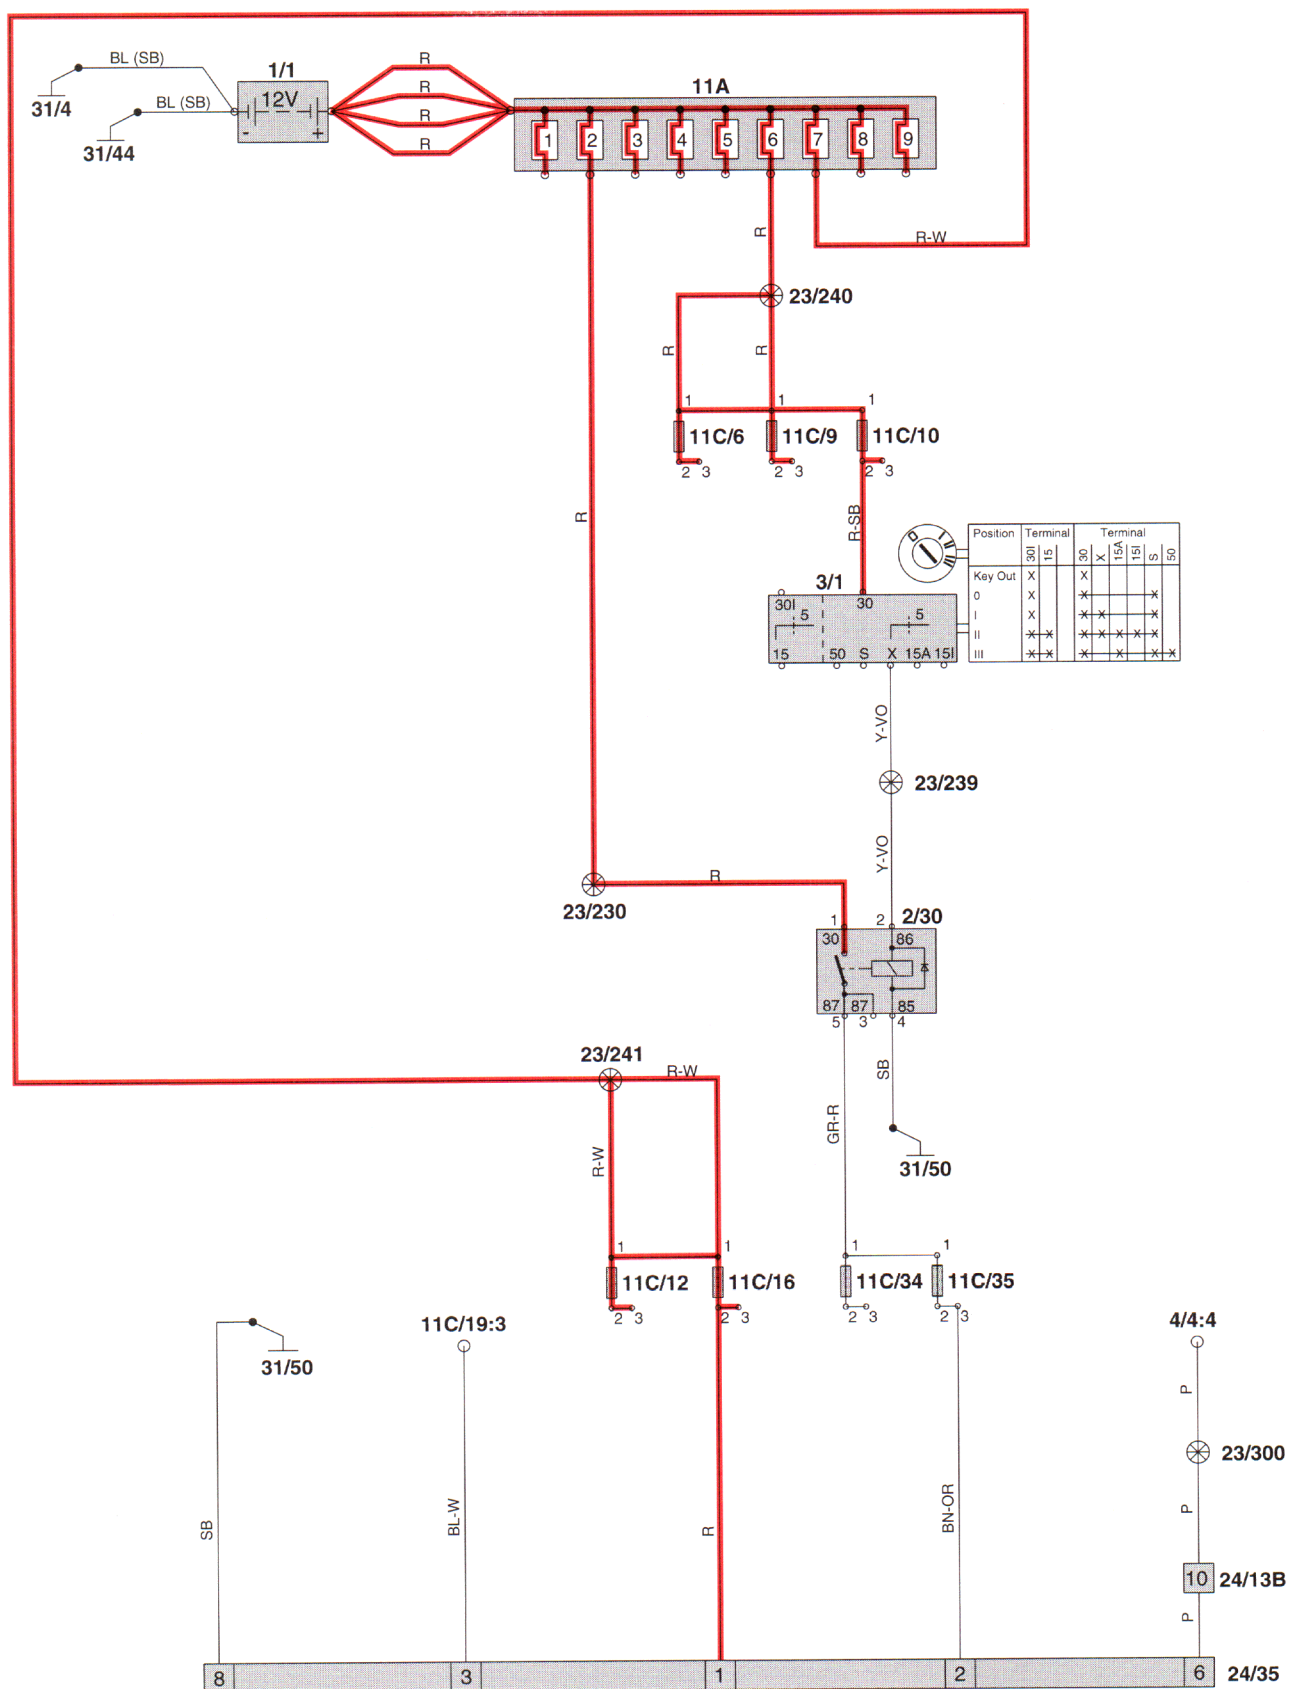


Cool box wiring

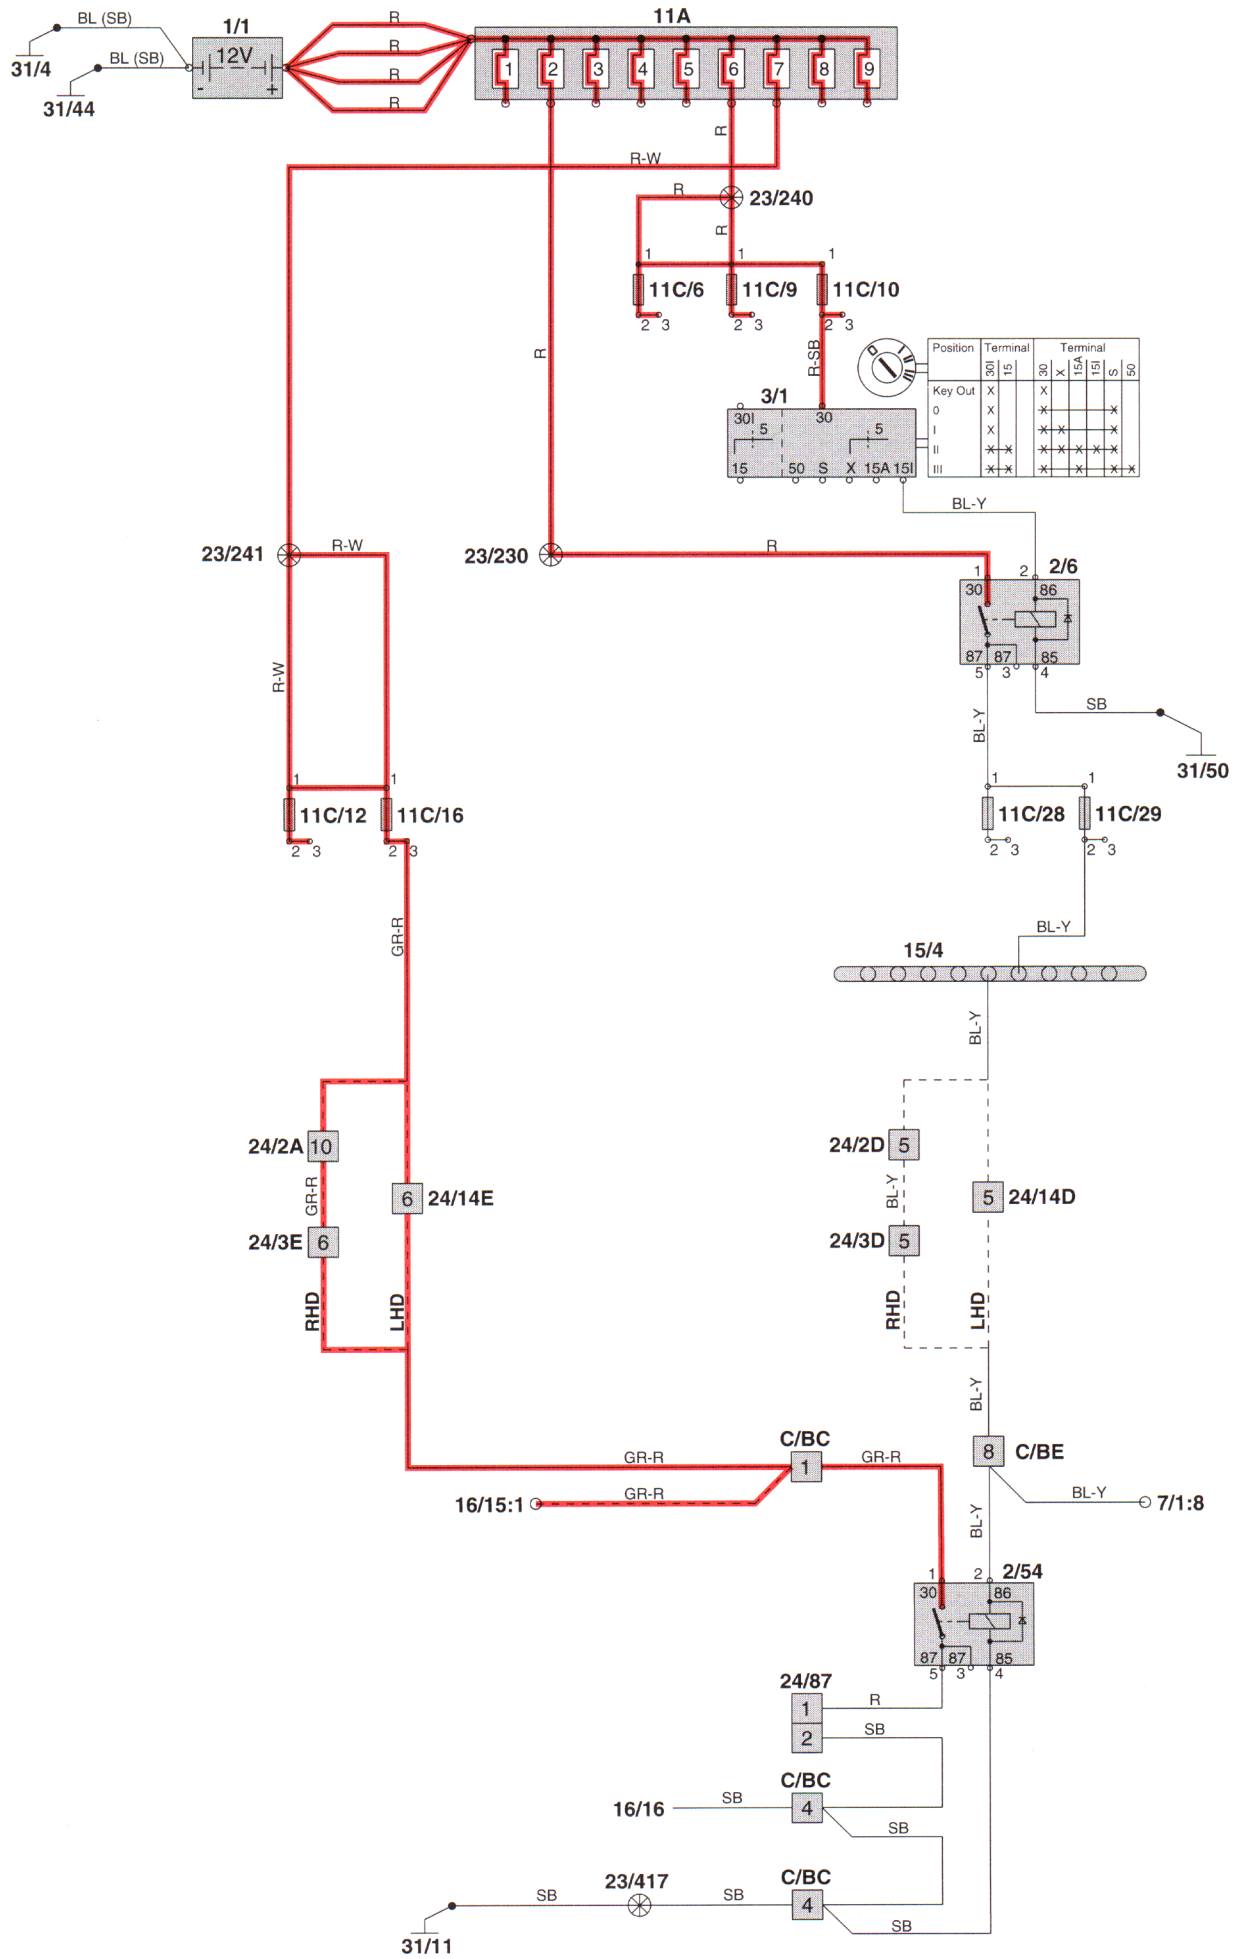


Seat belt reminder

For function diagram, see Page 270.

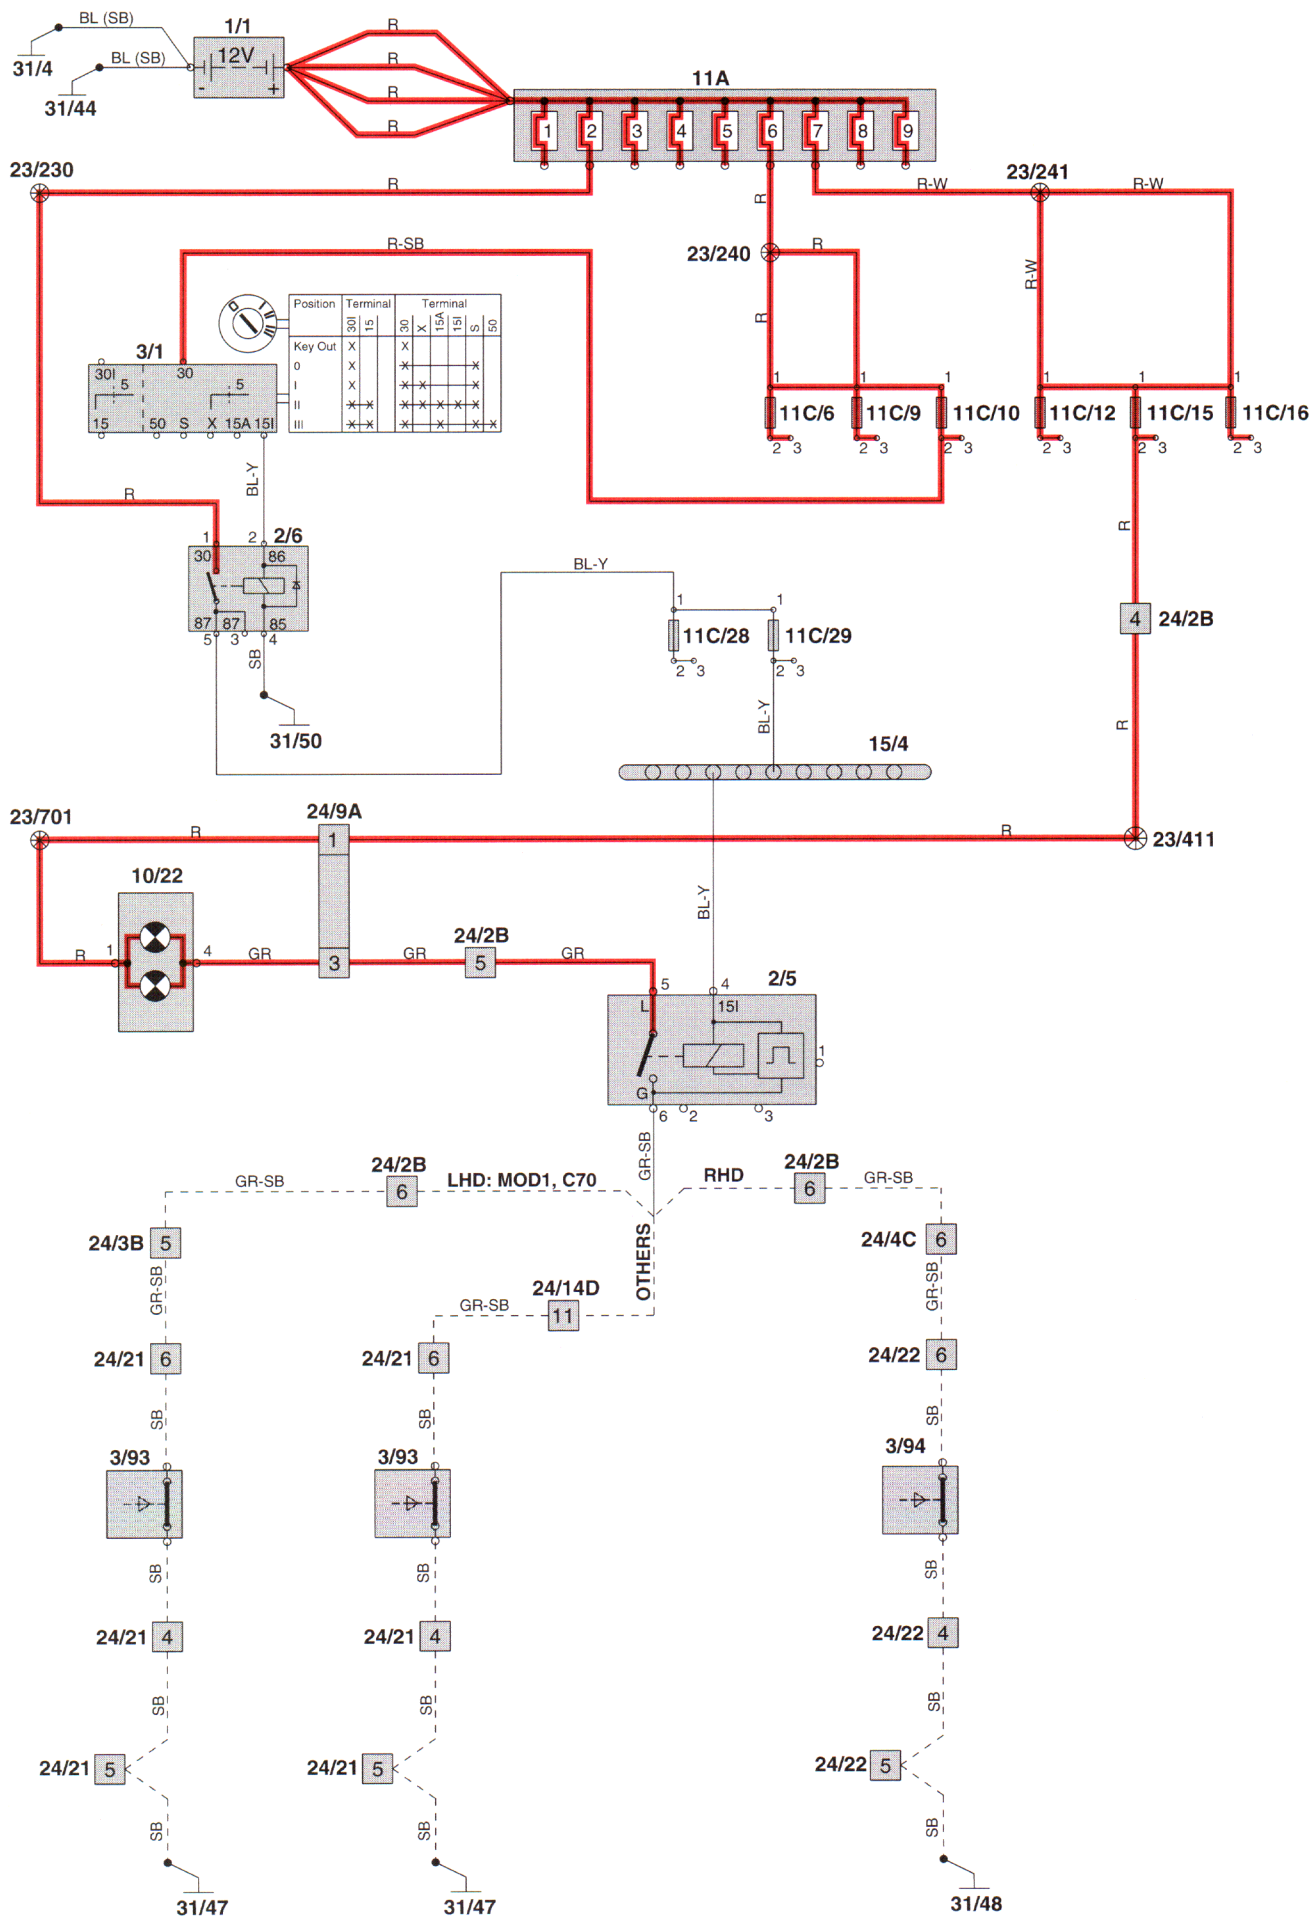

Seat belt reminder and ignition warning USA, Canada and Korea


For function diagram, see Page 271.

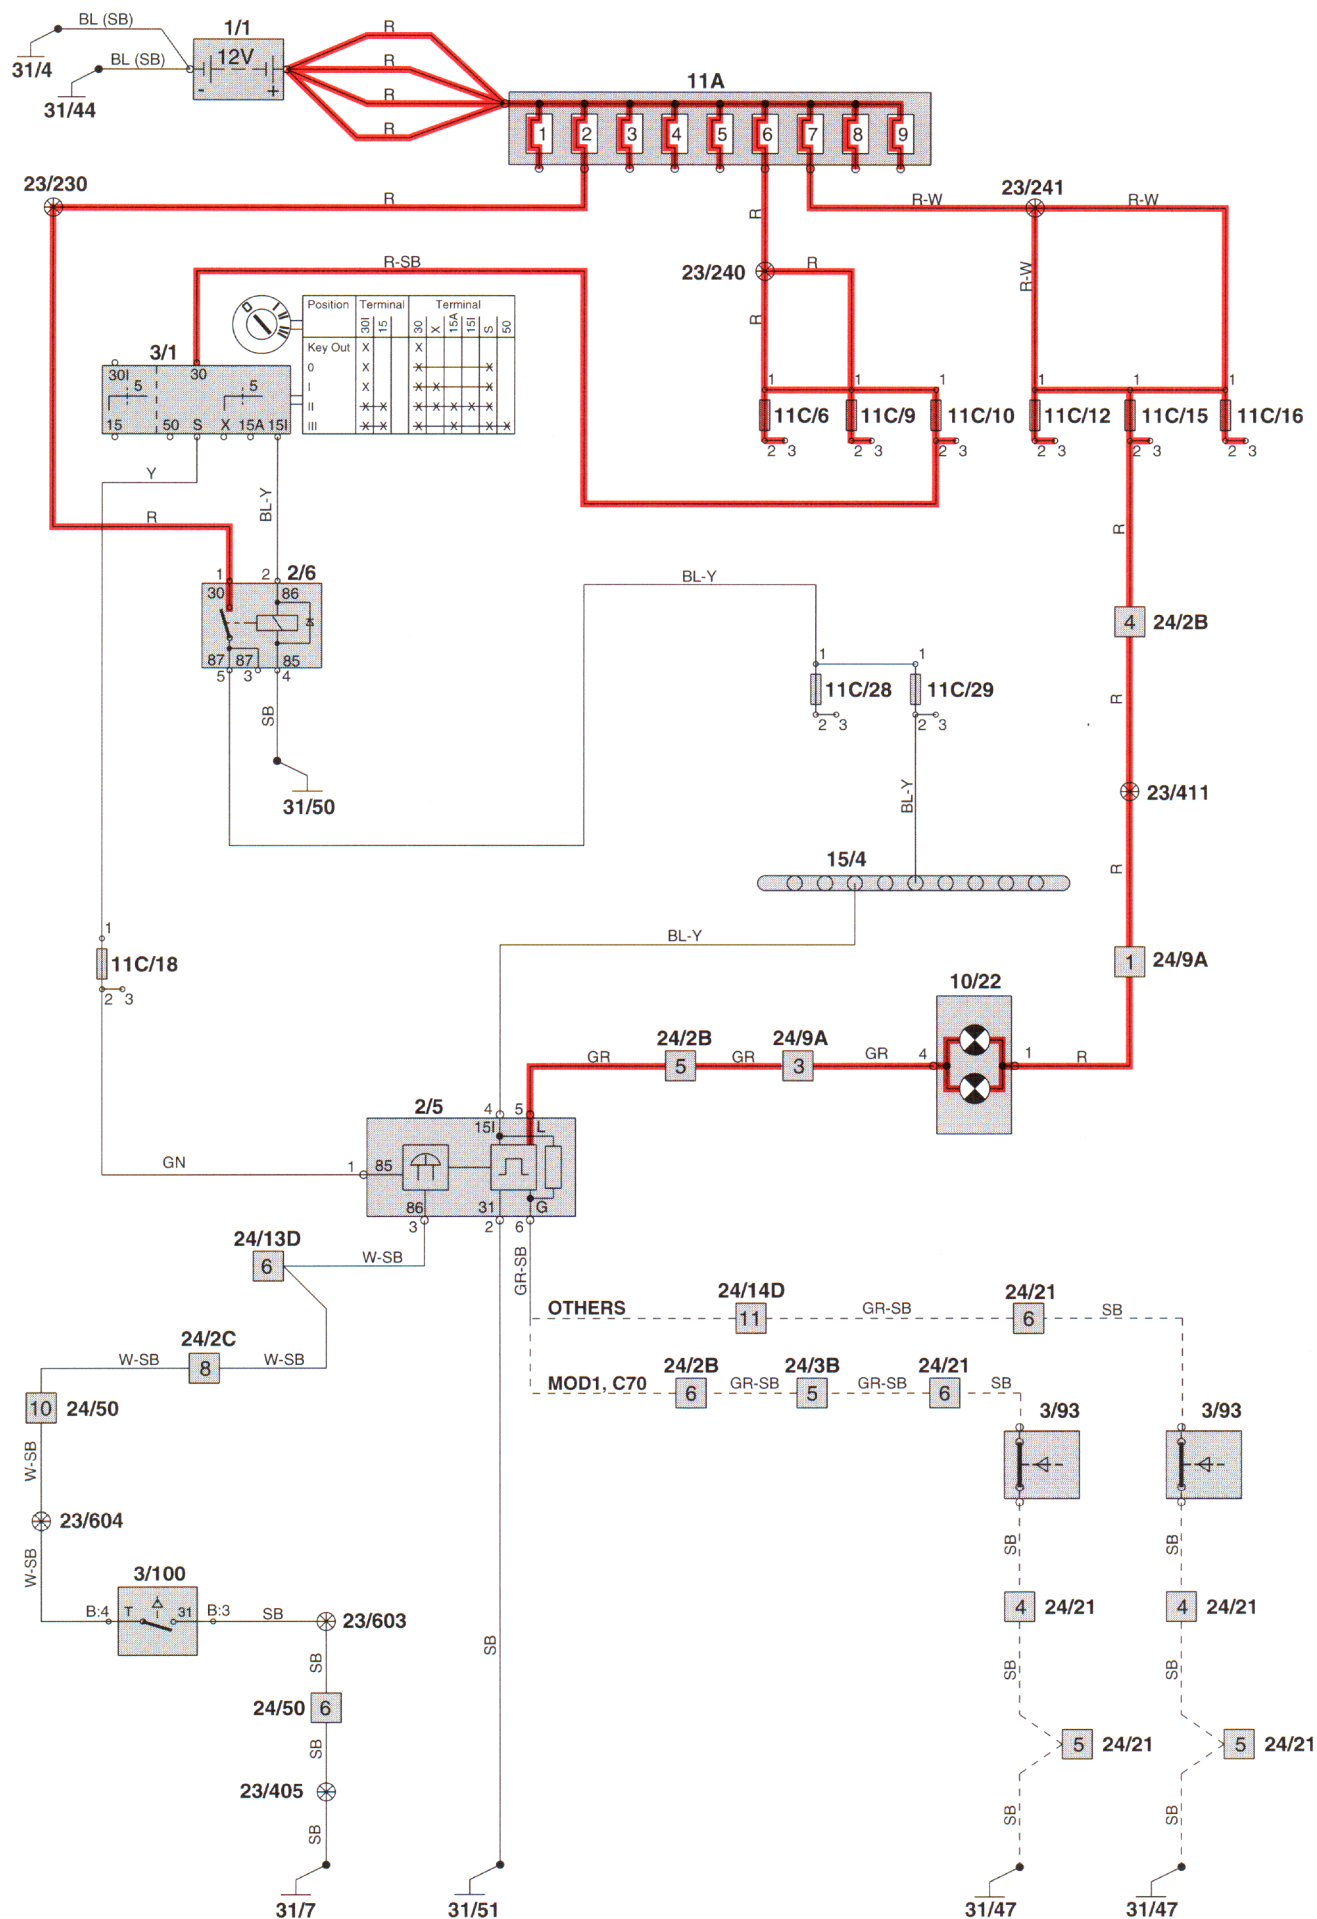

For function diagram, see Page 271.



Combined instrument panel

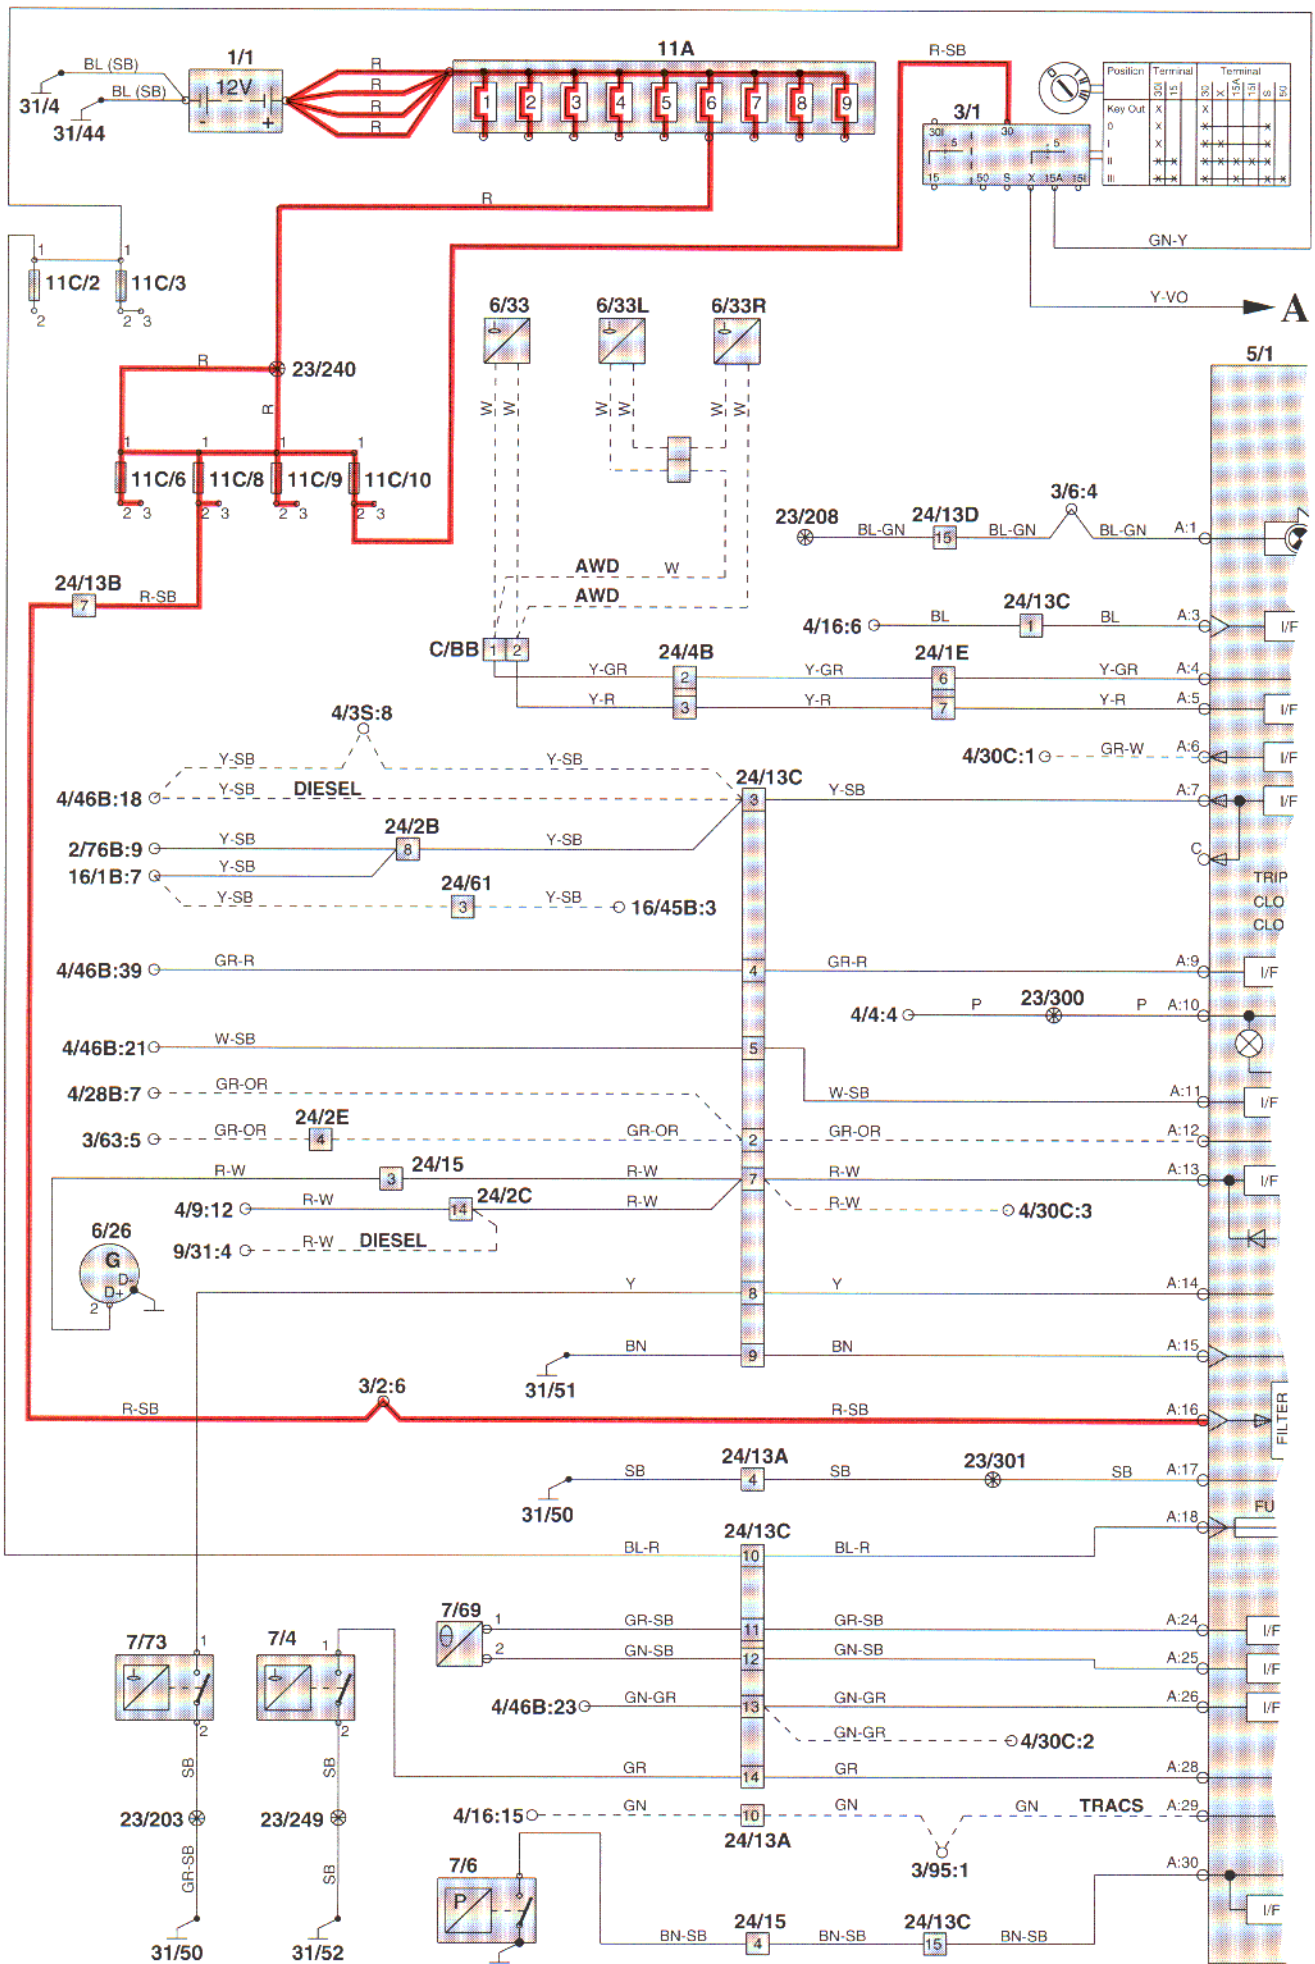

Contents

Group 39

Radio	
C70	182
S70	184
V70	186
Radio with 4x50 W extra amplifier	
S70	188
V70	192
RTI Road Traffic Information	
C70	196
S70/V70	198

Group 43

Electronically controlled automatic transmission	
AW 50-42	
Fenix 5.2, Motronic 4.3/4.4	200
MSA 15.7	202
P-shift lock, automatic transmission	204

Group 59

ABS Brake system and TRACS	206
----------------------------------	-----

Group 83

Power windows	
C70	208
S70/V70	210
Central locking	
C70	212
S70	216
V70	220
Power sunroof	224

Group 84

Heated rear window and	
heated door mirrors	226
Power door mirrors	228

Group 85

Electrically heated seats	230
Heated rear seat	232
Power seats	234


Group 87

Standard heater	236
Manual climate control MCC	
Fenix 5.2, Motronic 4.3/4.4	238
MSA 15.7	240
Electronic climate control ECC	
Fenix 5.2, Motronic 4.3/4.4	242
MSA 15.7	244
Additional heater	246
Cargo compartment fans	248
Exhaust temperature switch	250


Group 88

SRS Supplemental Restraint System	252
Rear view mirror with automatic dimming	254
Function diagrams	256
Index	293
List of components (see foldout)	at end of manual
Feedback	last page of this manual


Radio C70

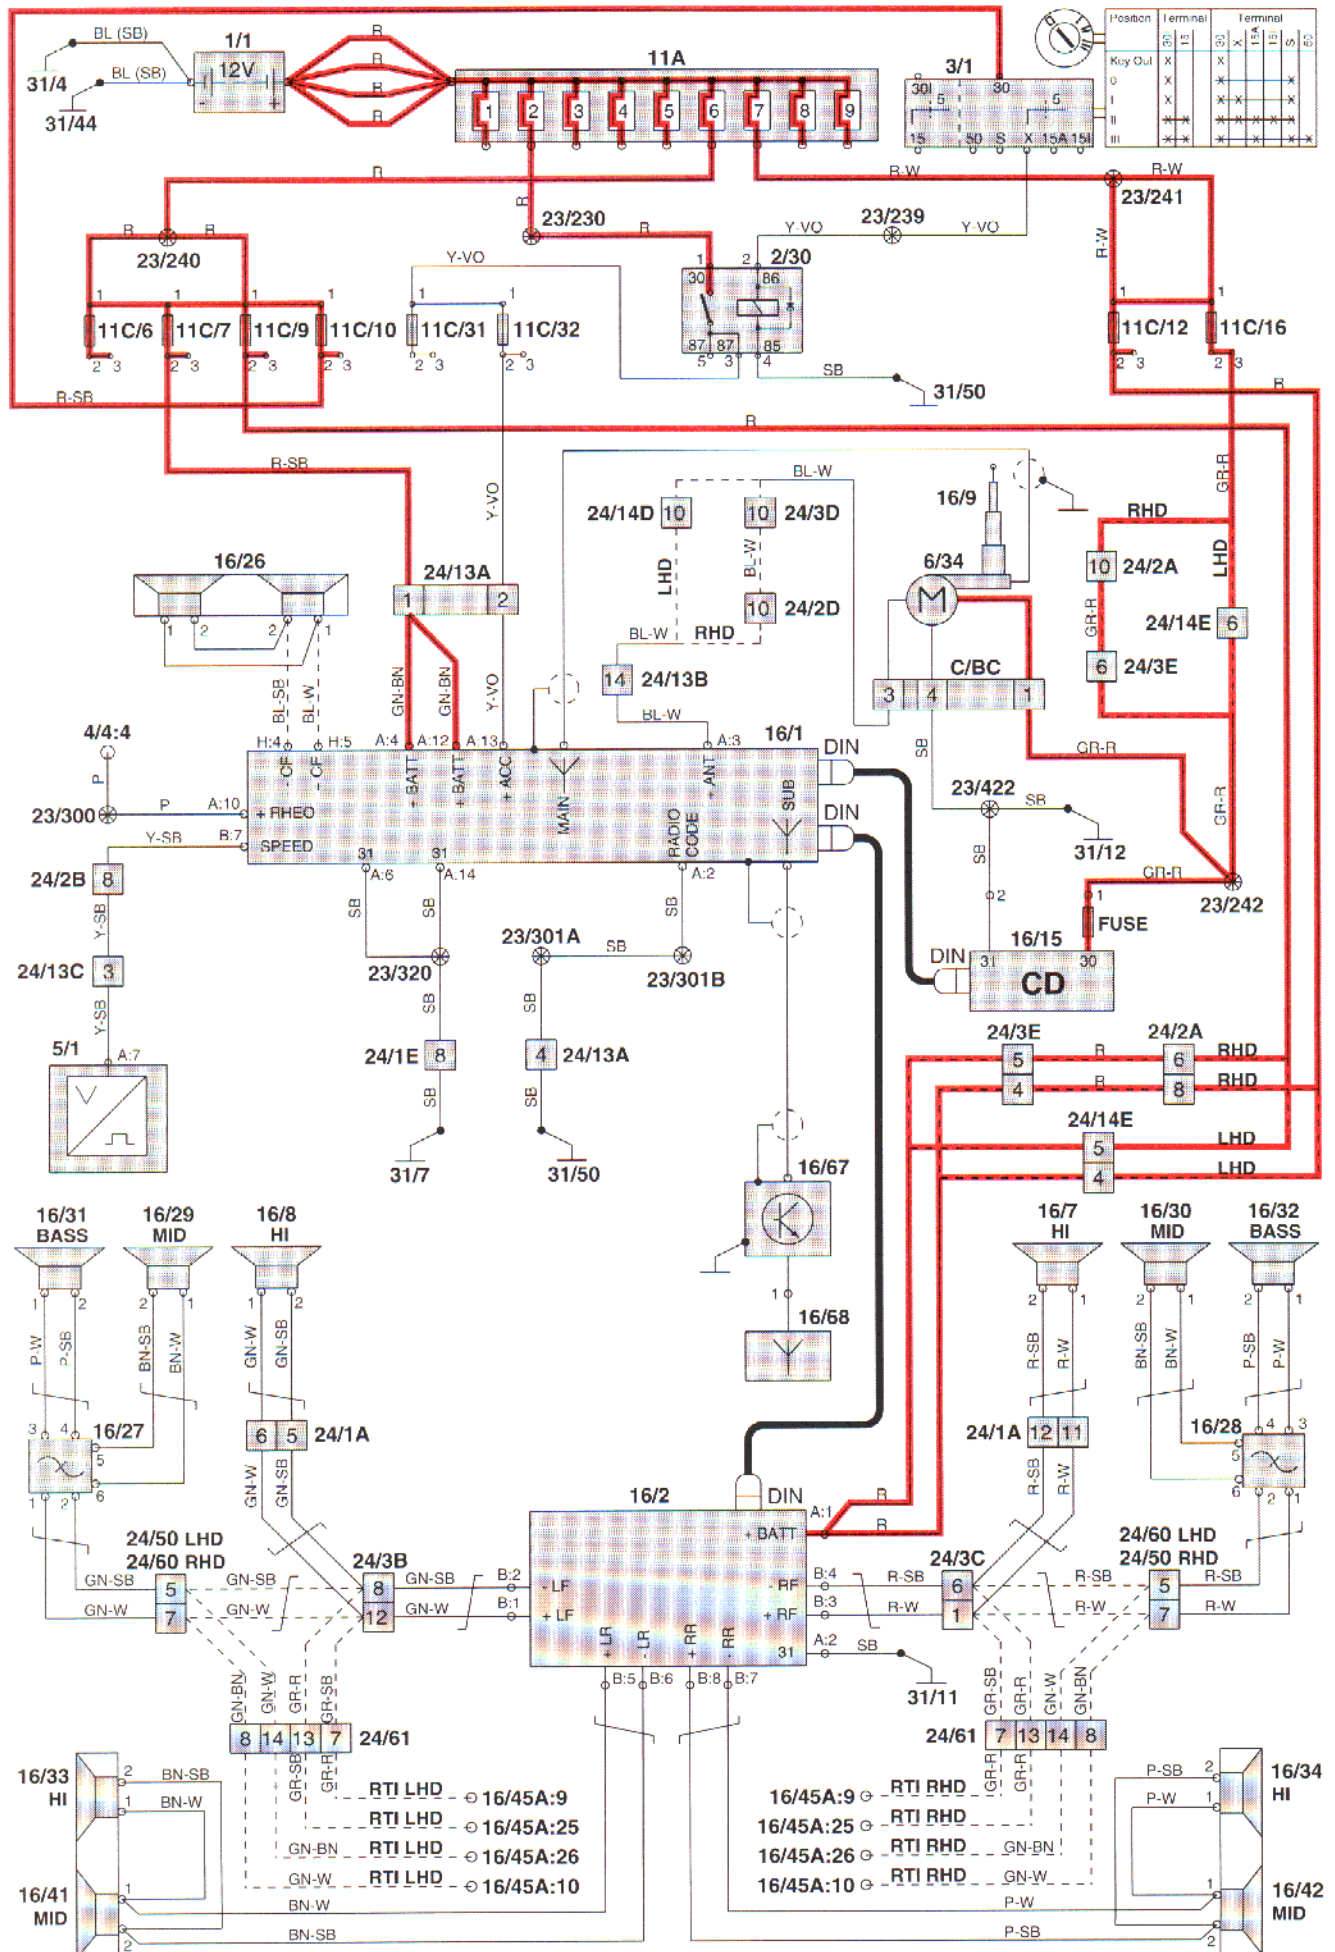


Radio S70

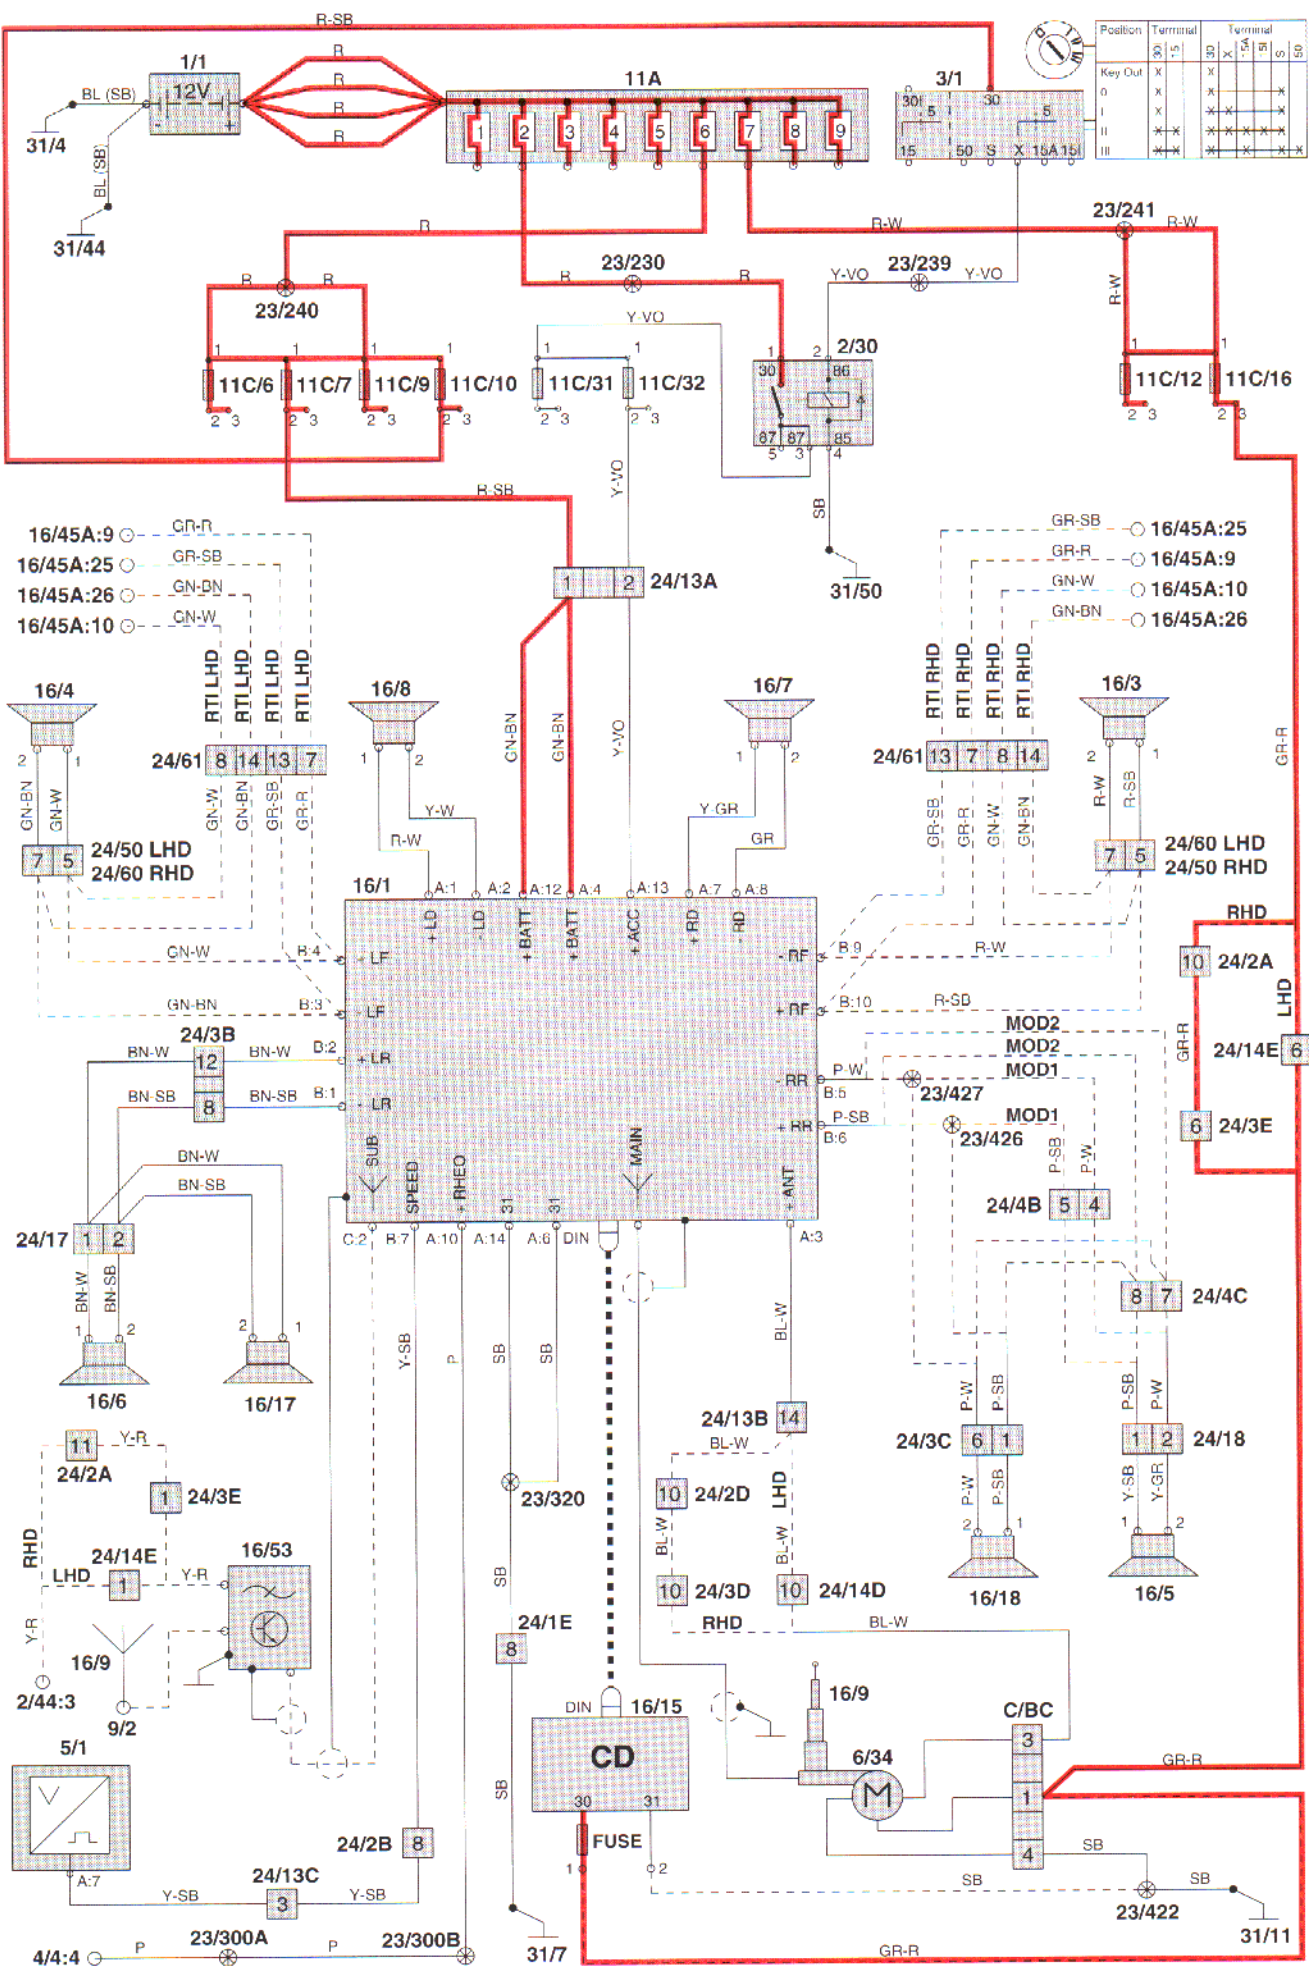


Radio V70

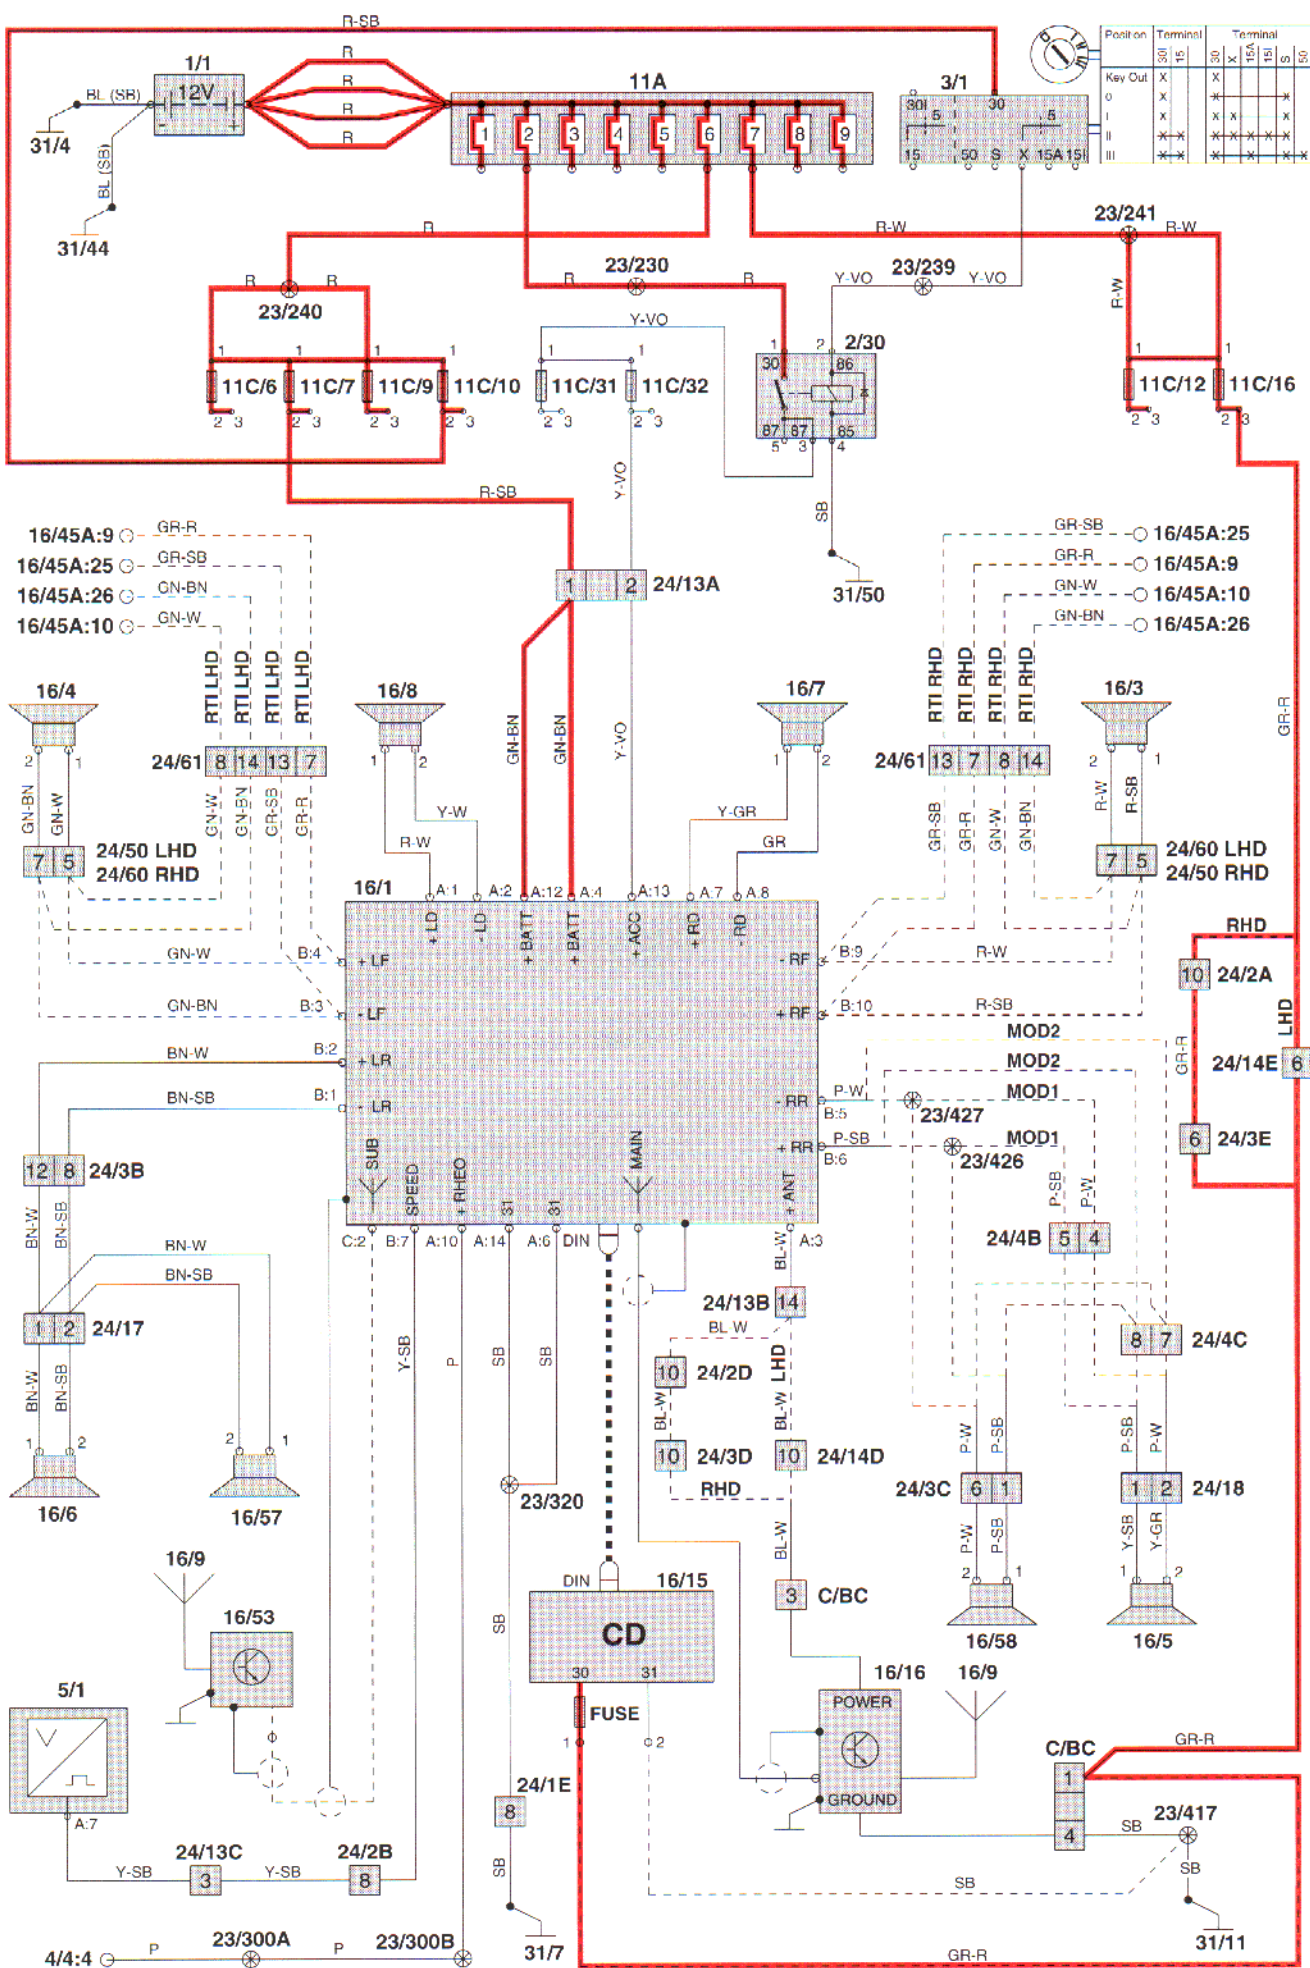


Radio with 4x50 W extra amplifier
S70 MOD1

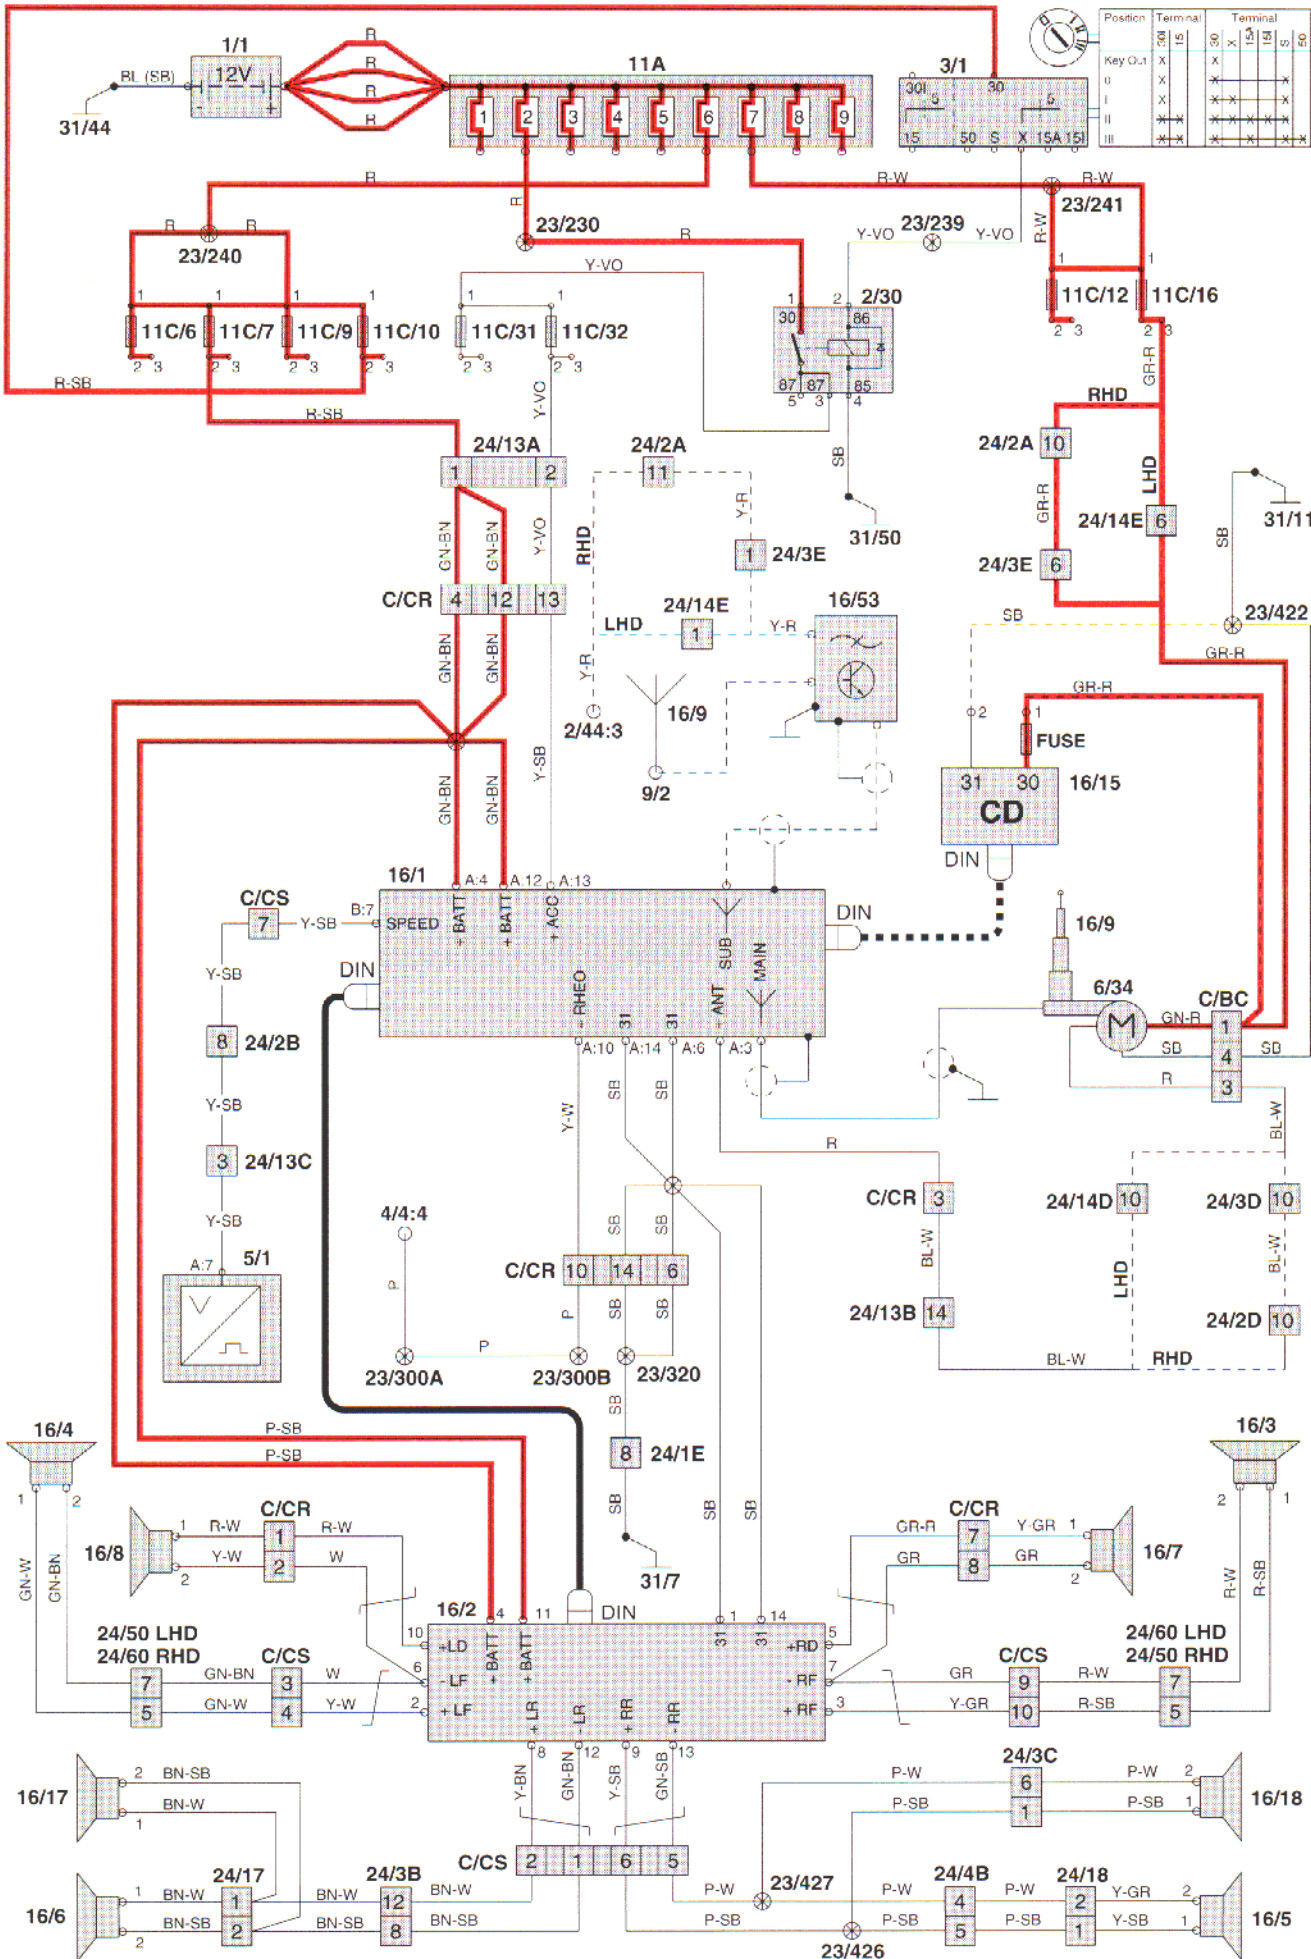


Radio with 4x50 W extra amplifier V70 MOD1

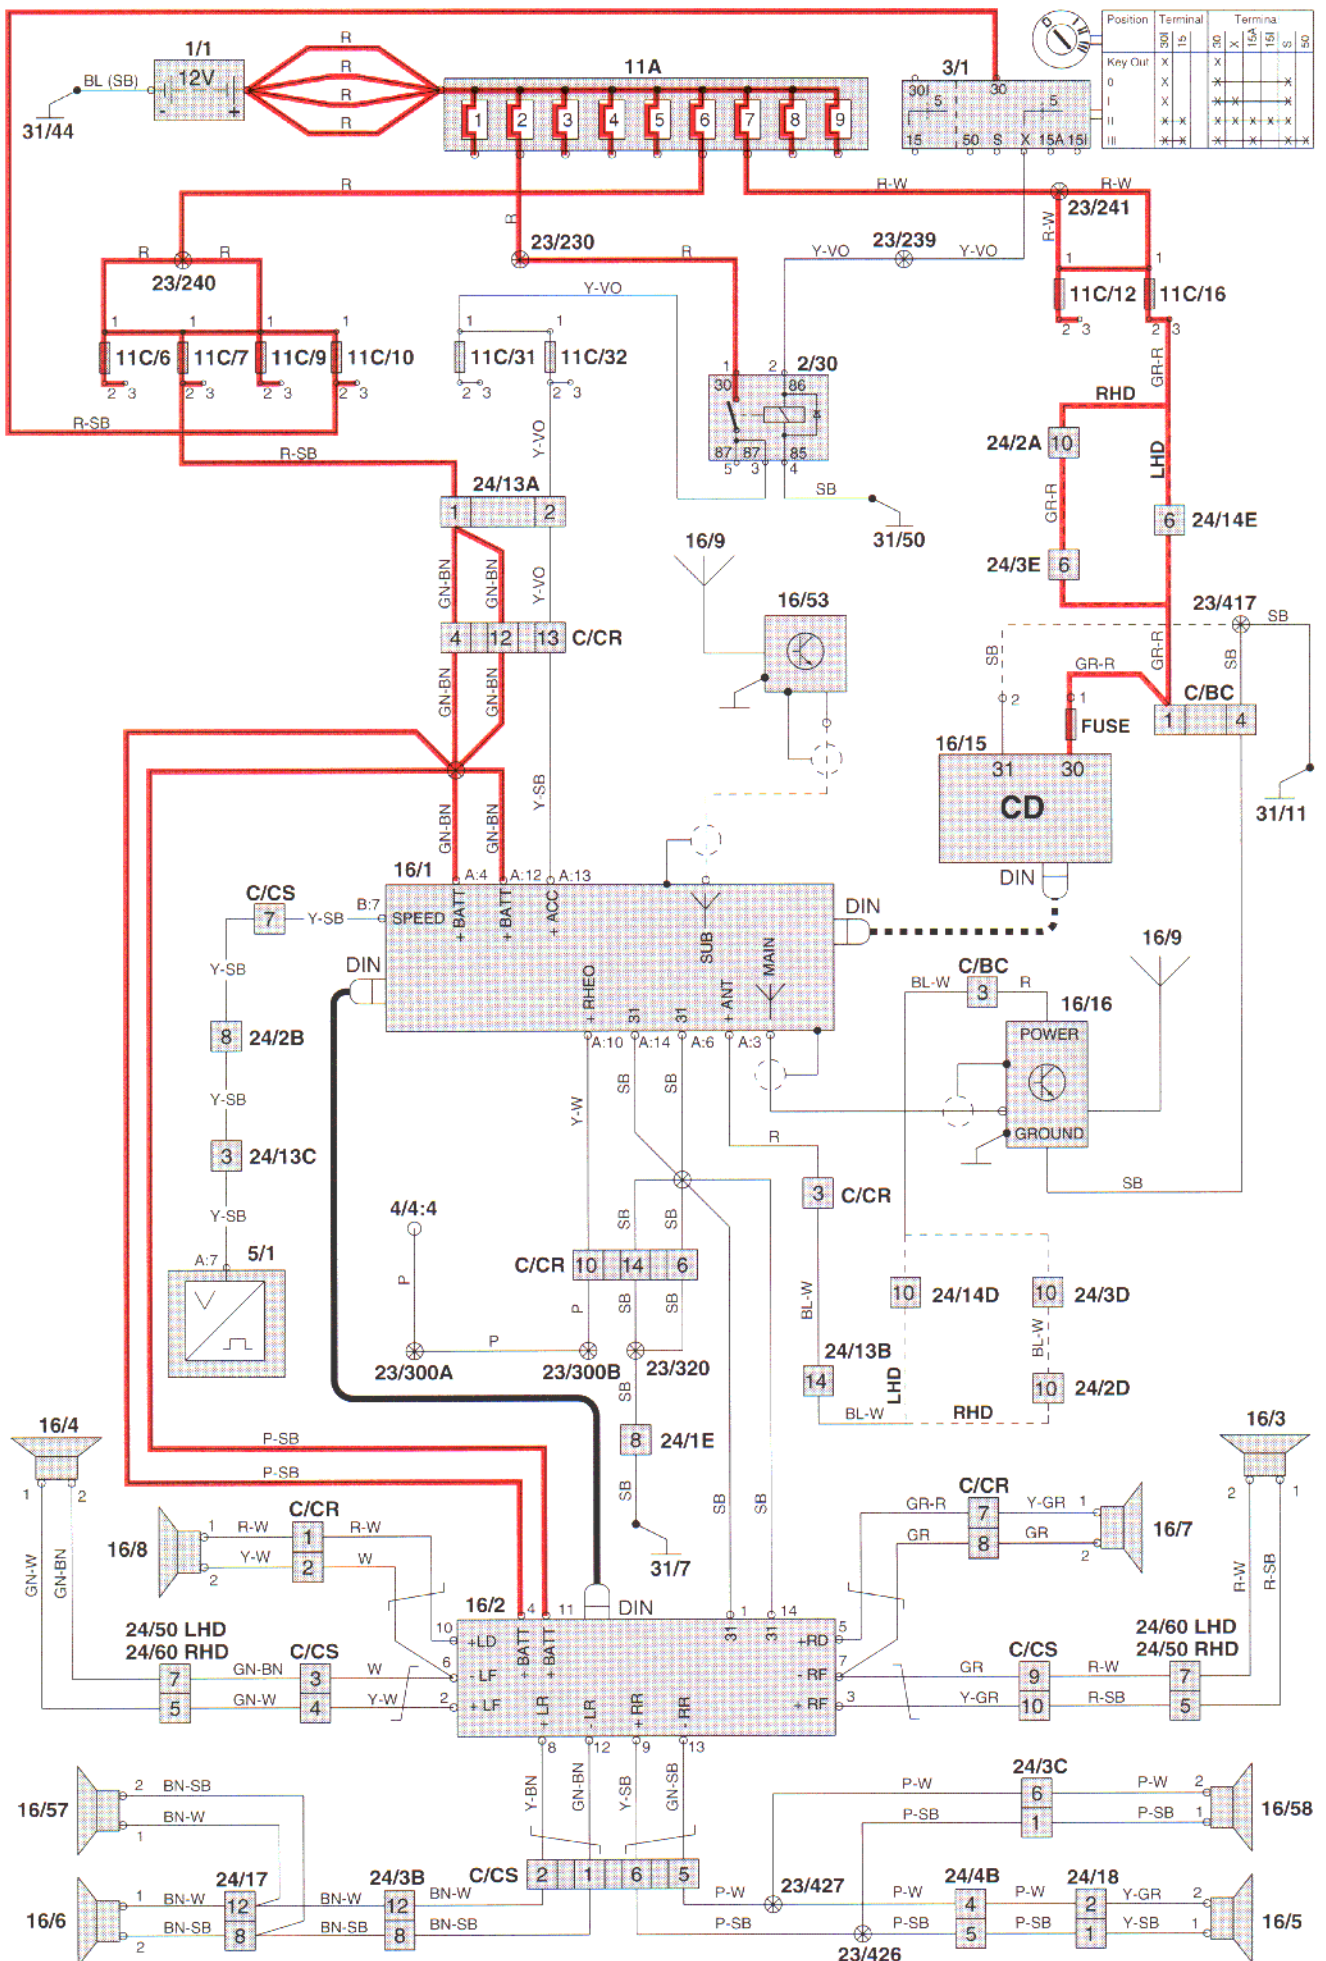


RTI Road Traffic Information C70

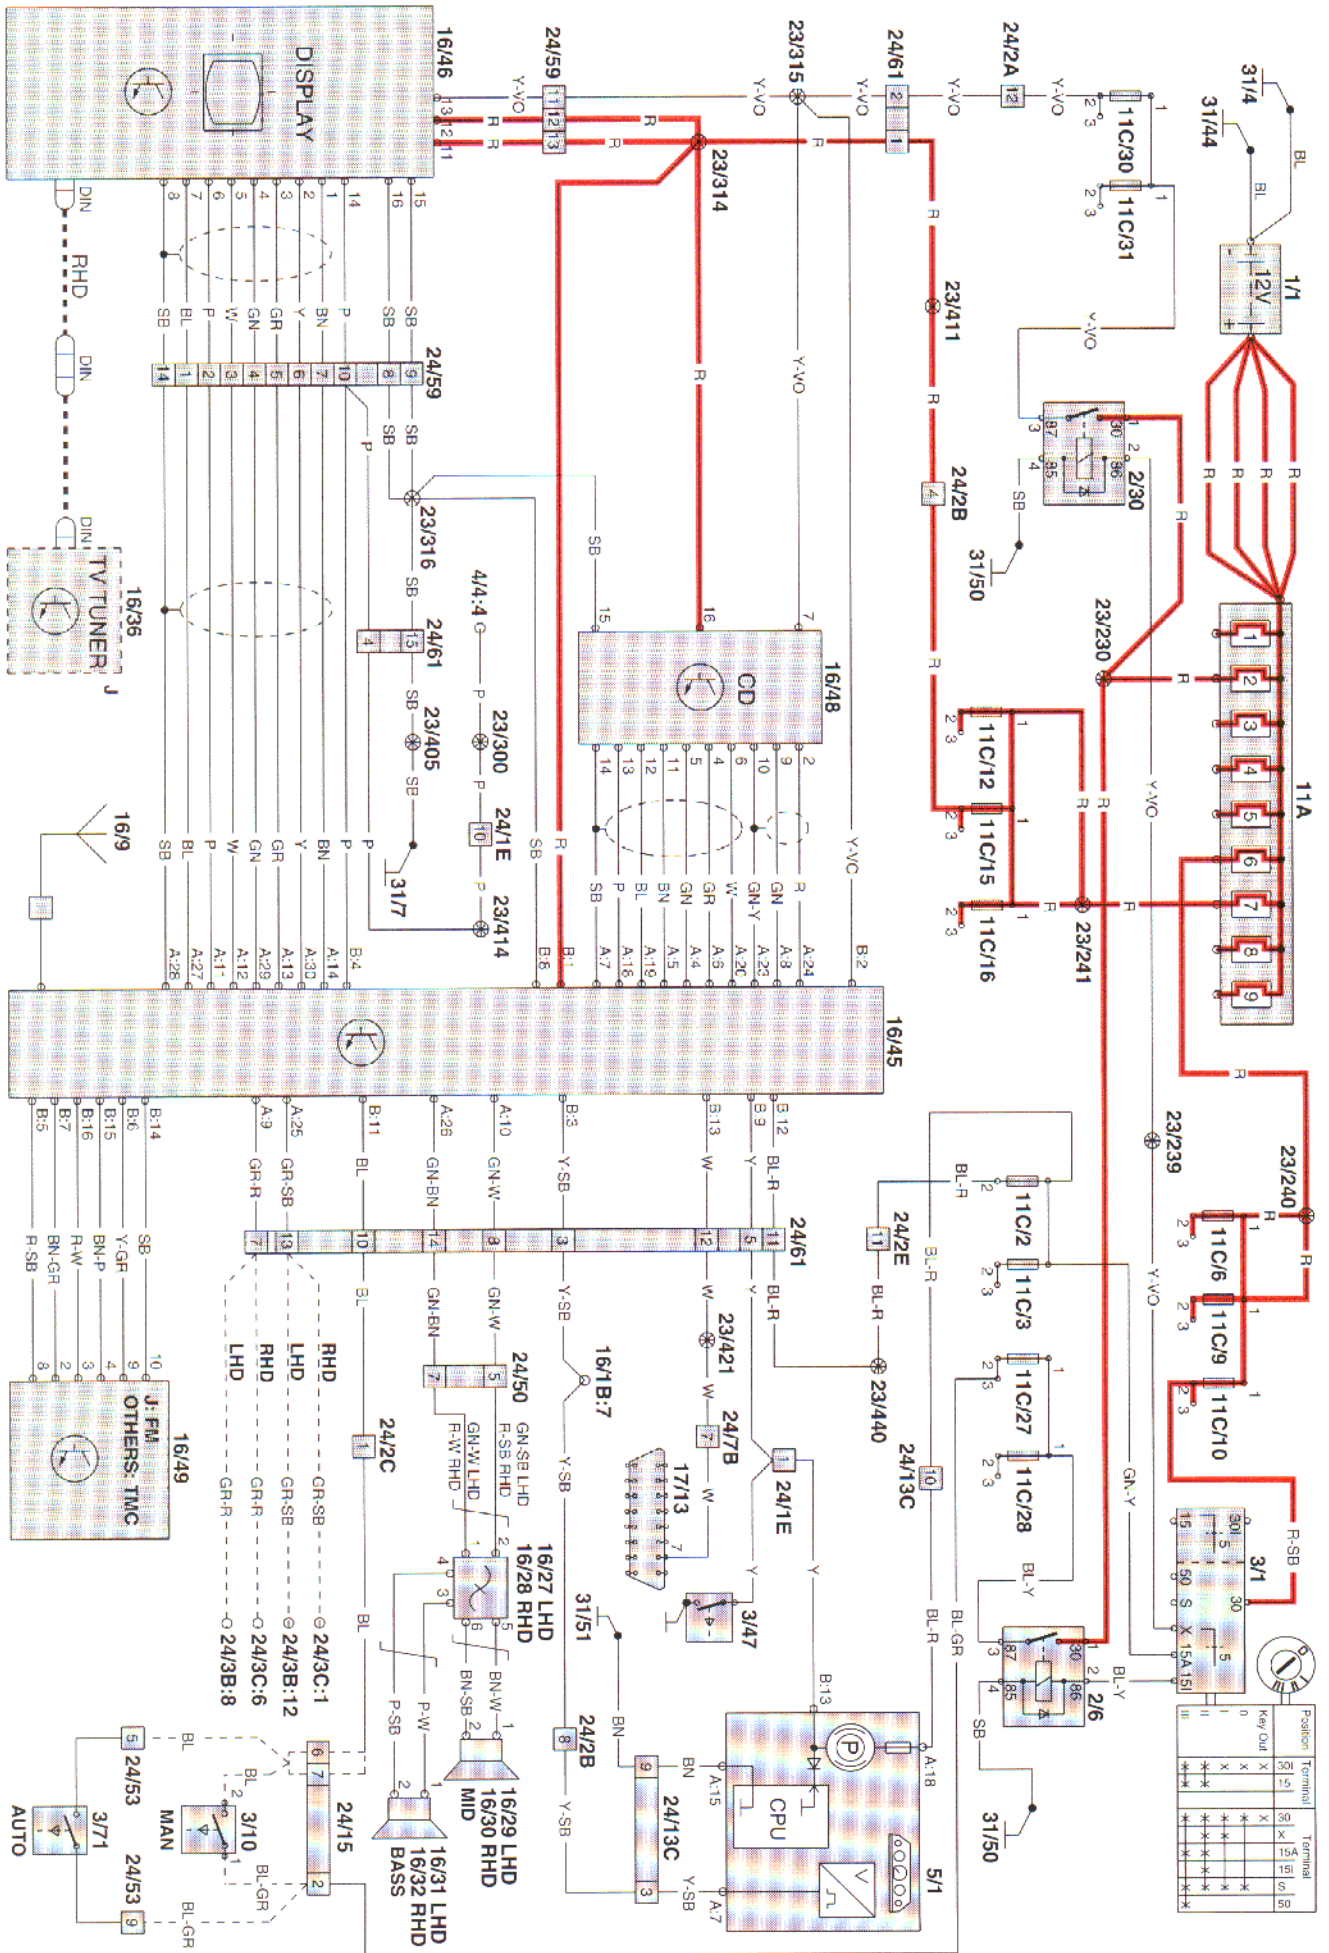


RTI Road Traffic Information S70/V70

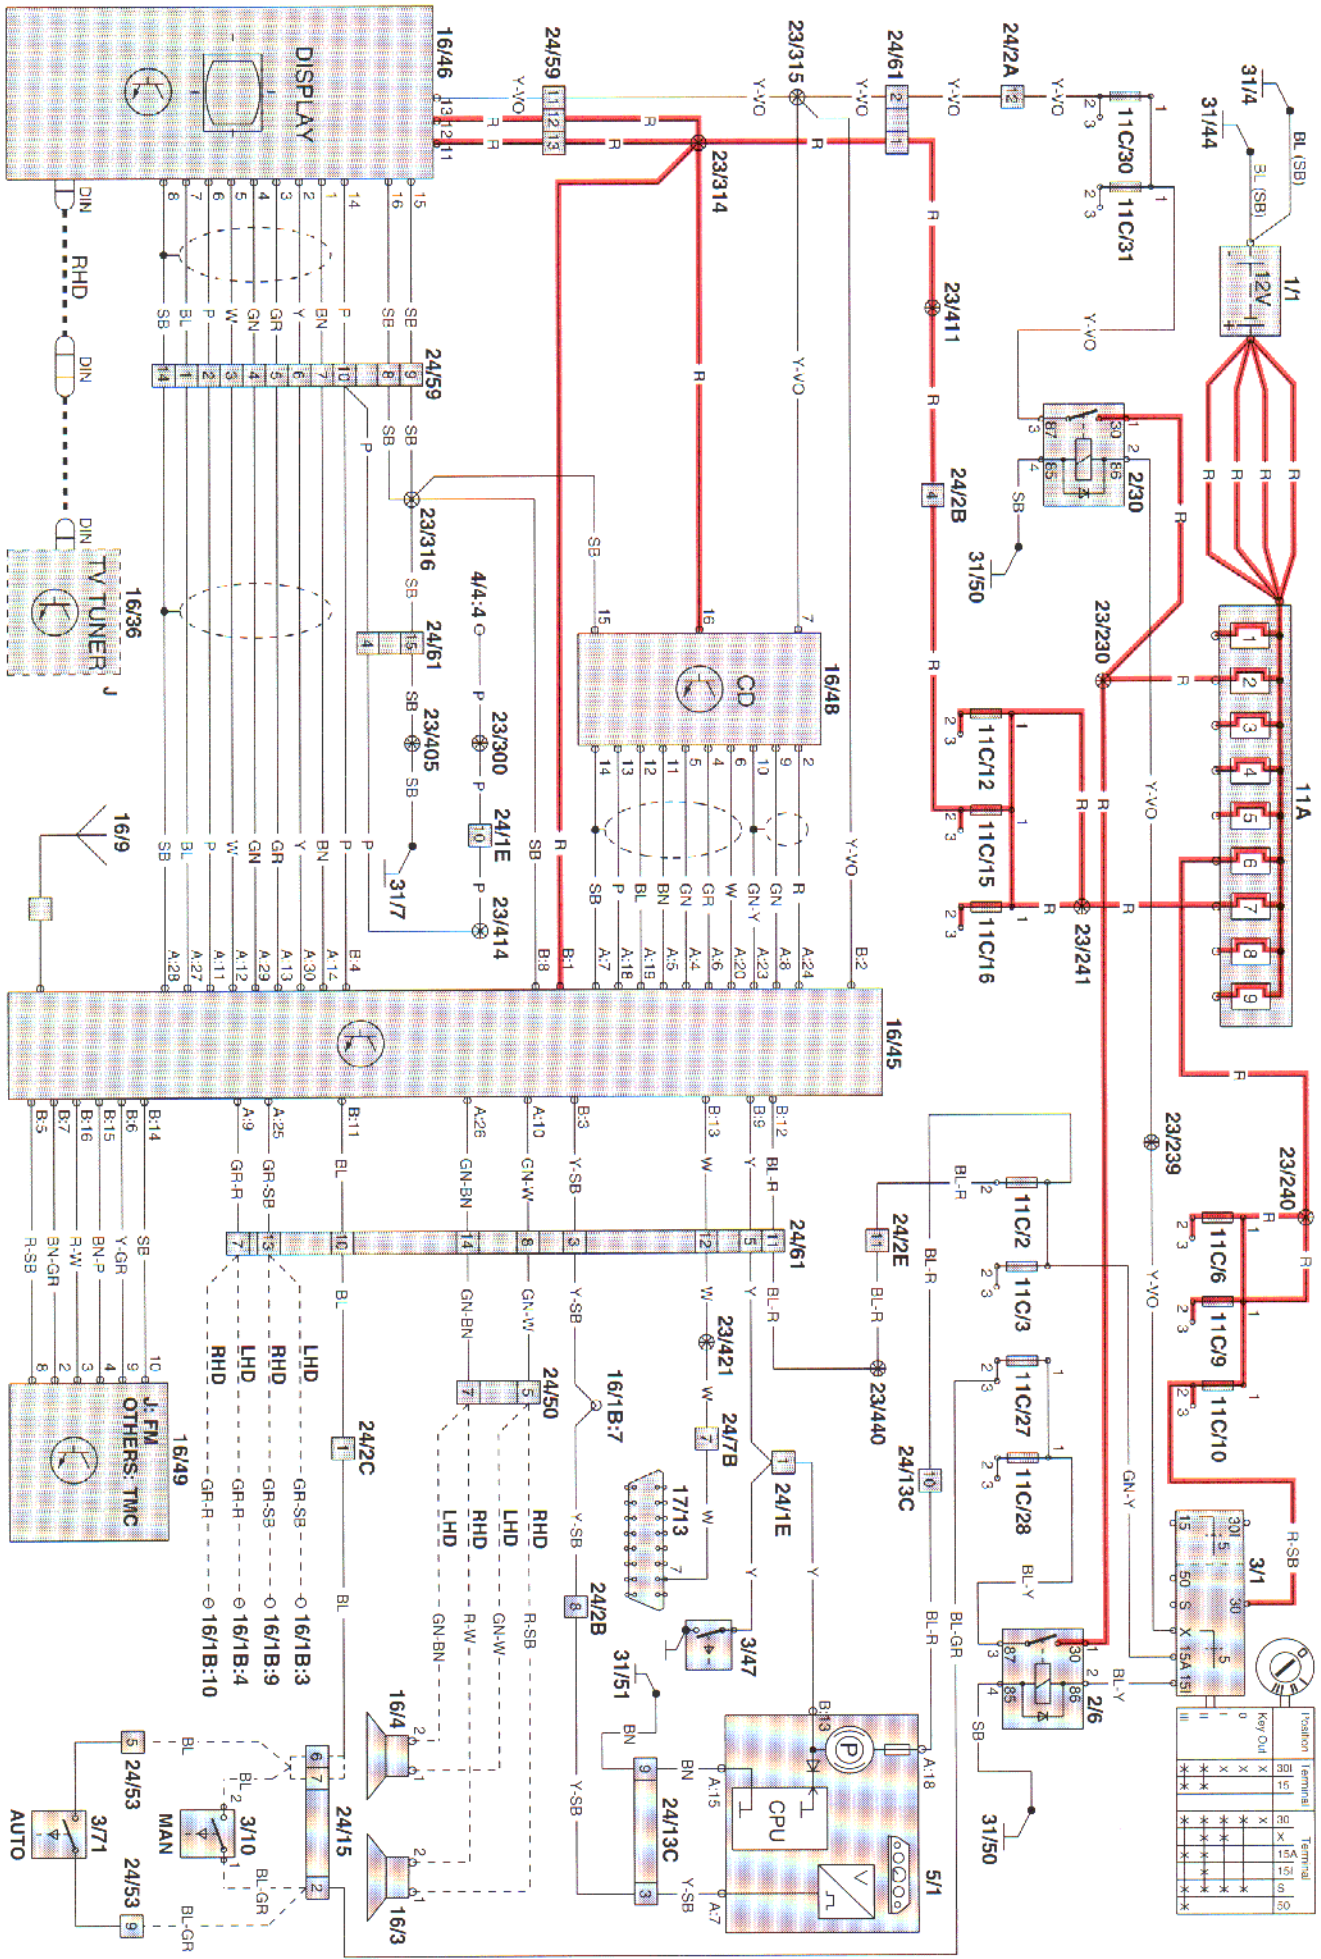

AW 50-42 electronically controlled automatic transmission Fenix 5.2, Motronic 4.3/4.4

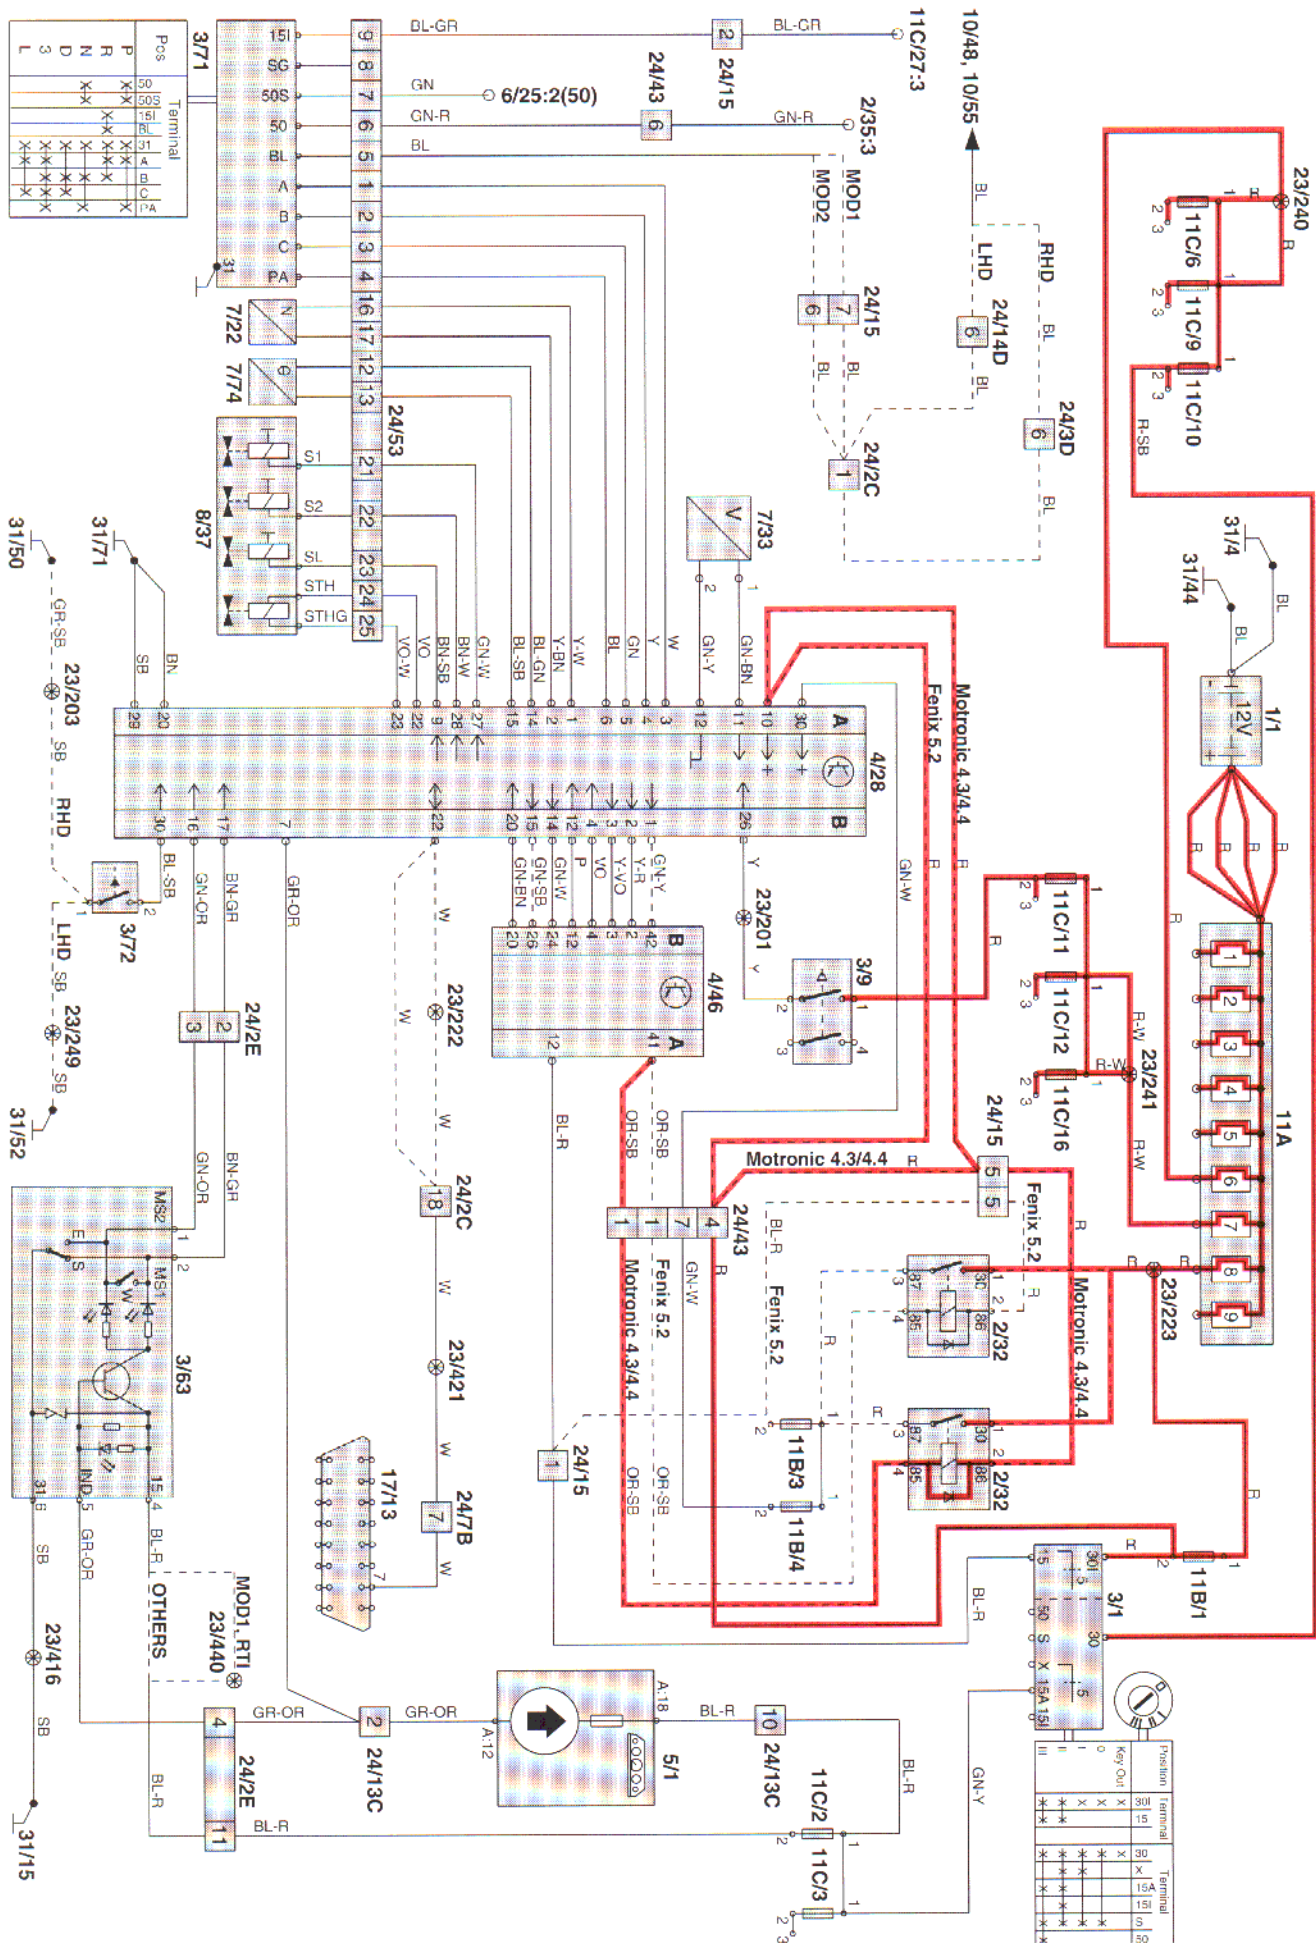


AW 50-42 electronically controlled automatic transmission MSA 15.7

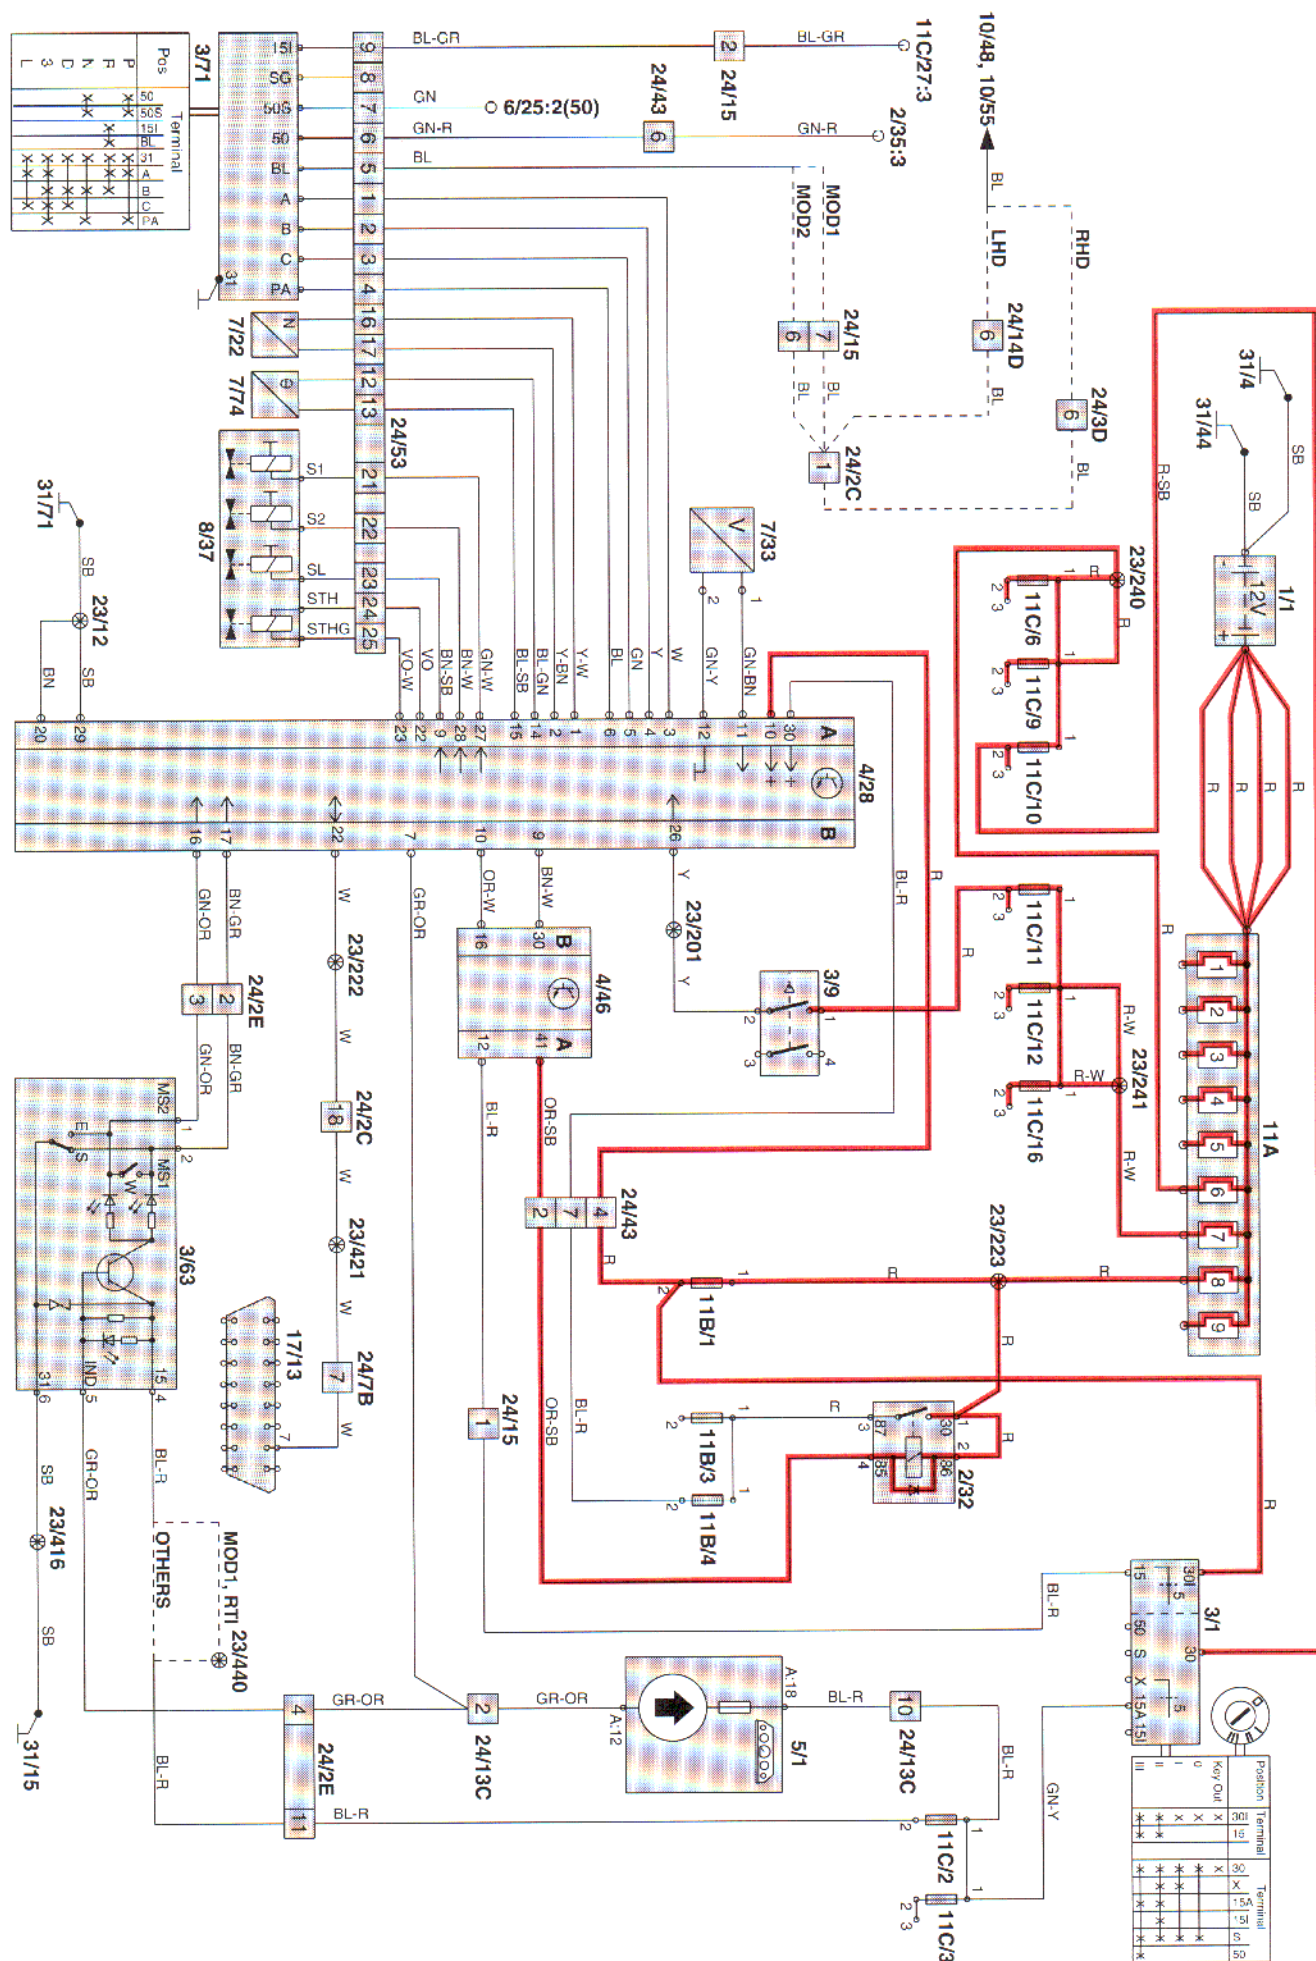


P-shift lock, automatic transmission

For function diagram, see Page 272.

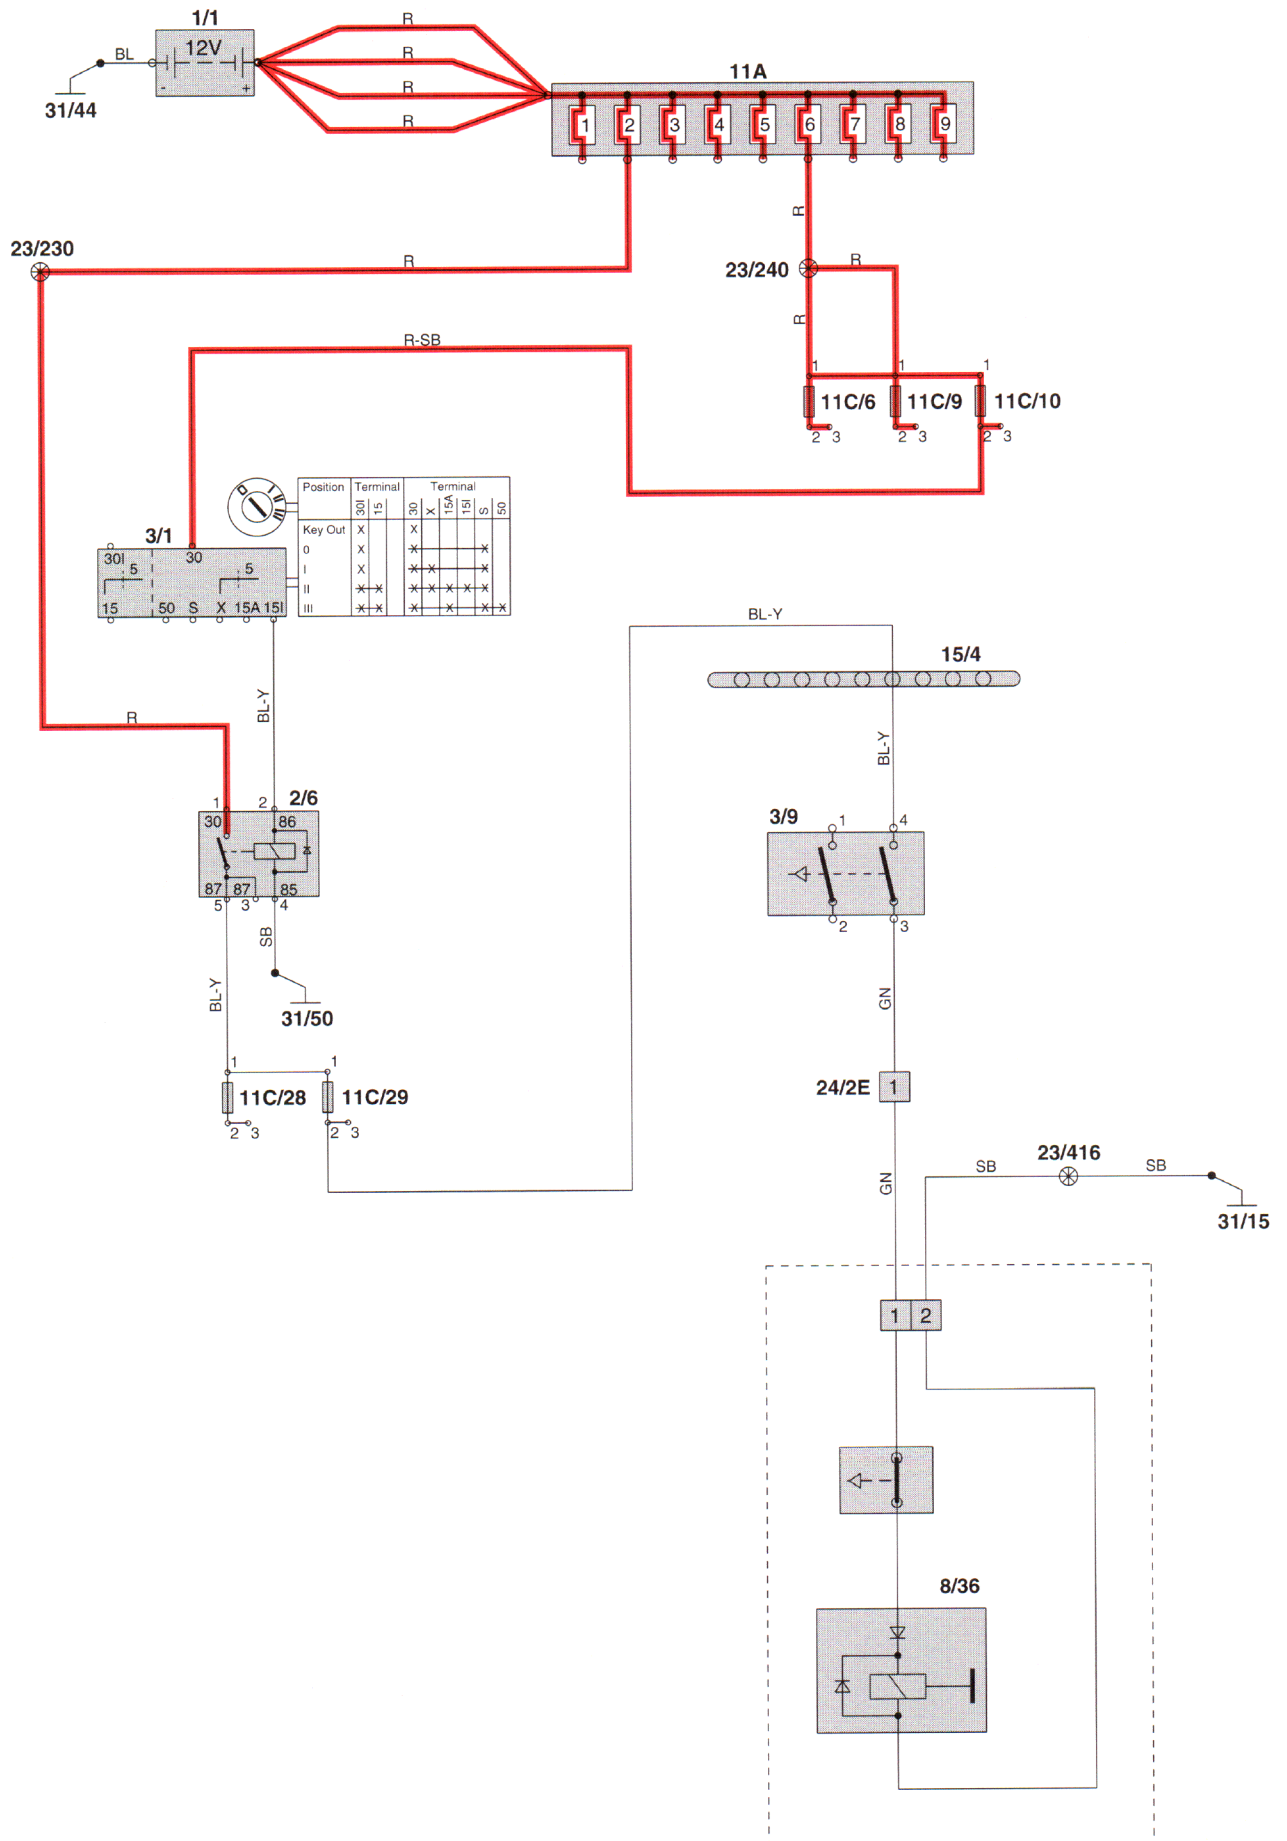


206

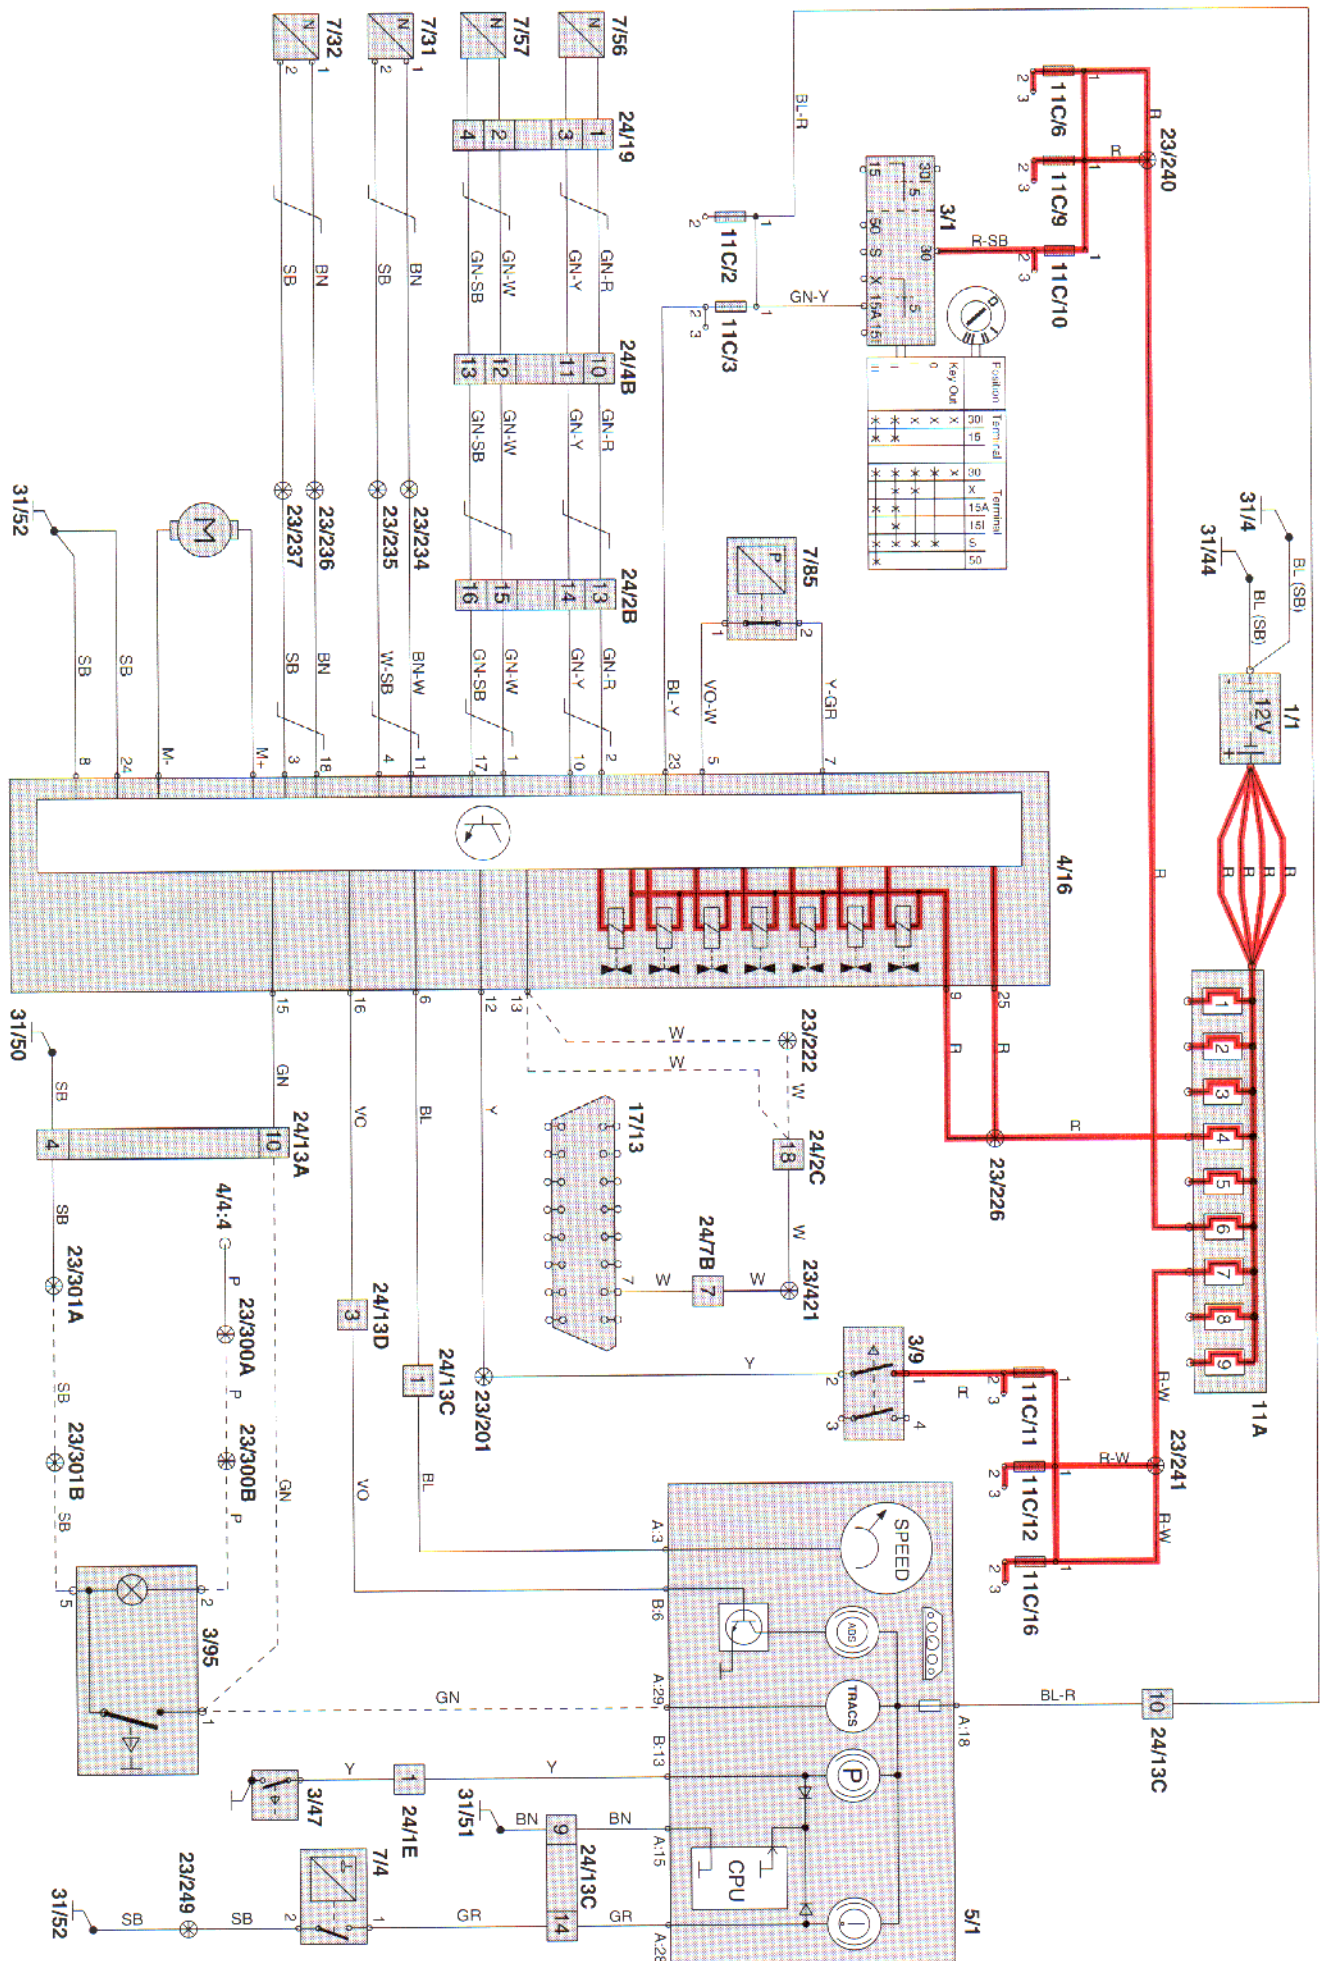

Power windows C70


For function diagram, see Page 273.

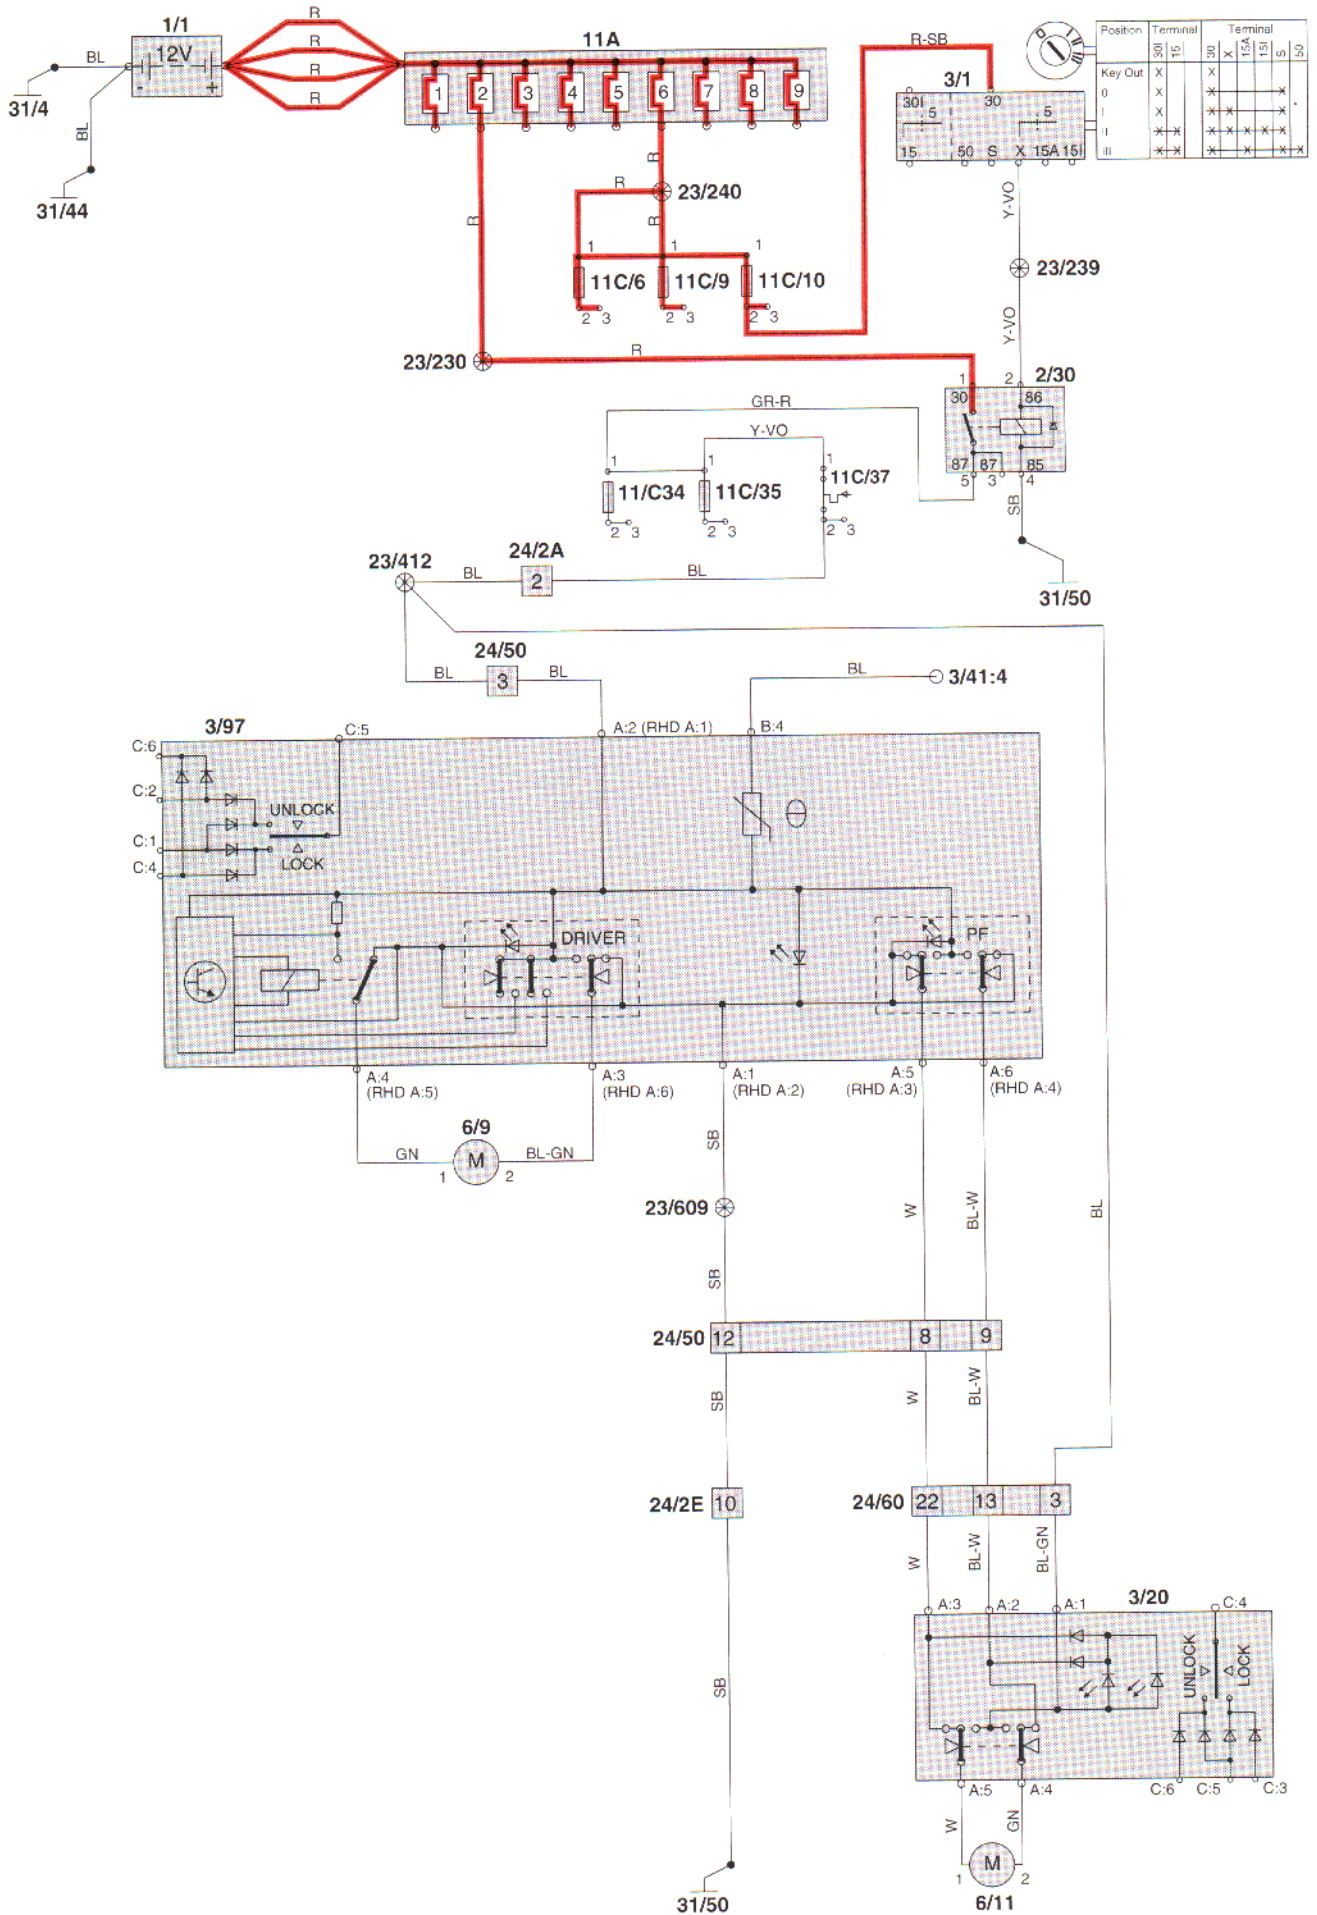

Power windows


S70/V70

For function diagram, see Page 277.

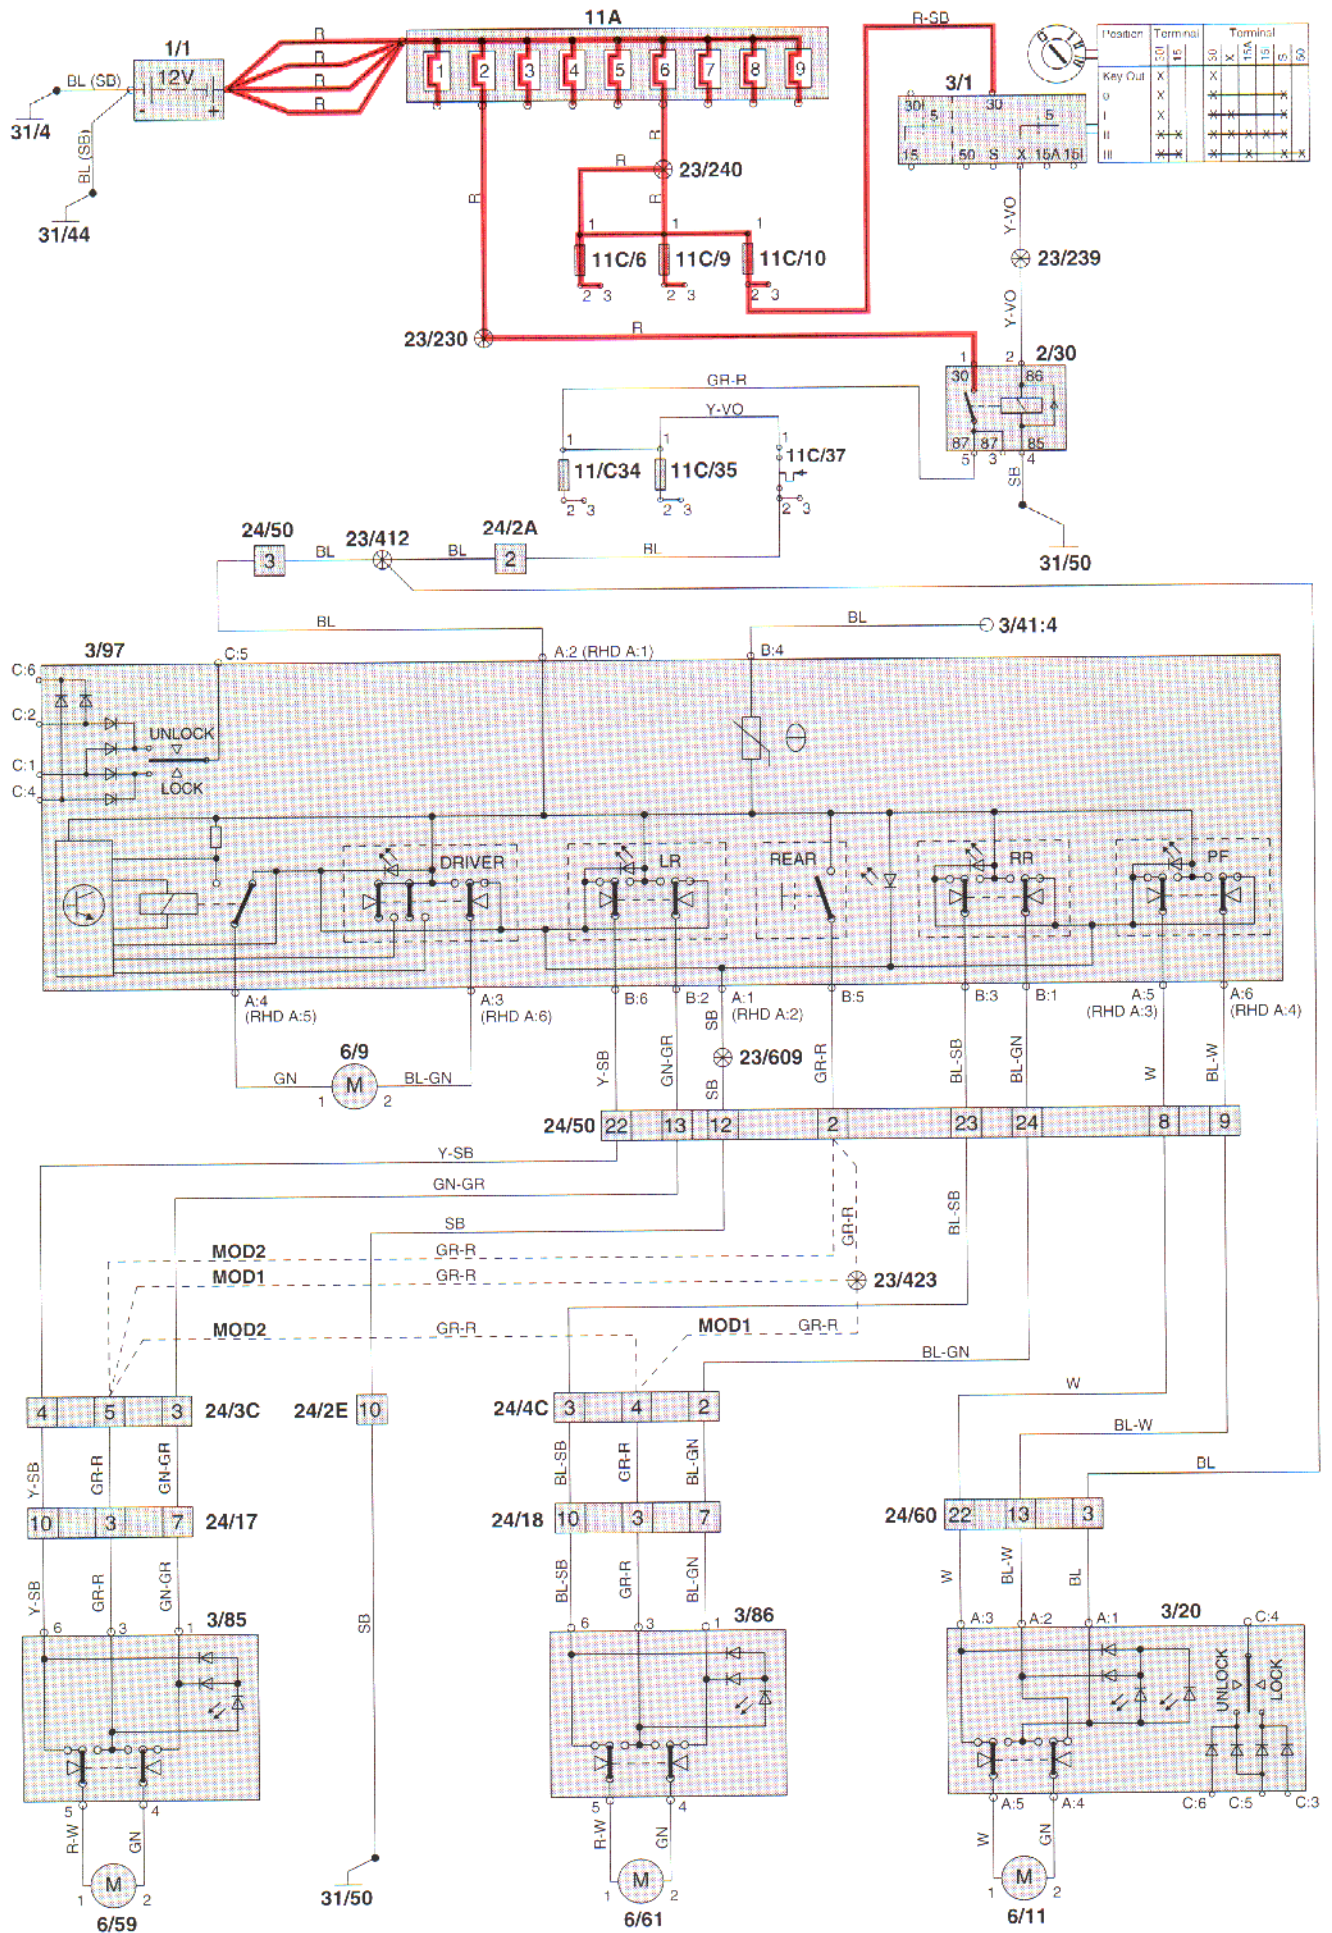


Central locking C70

For function diagram, see Page 282.

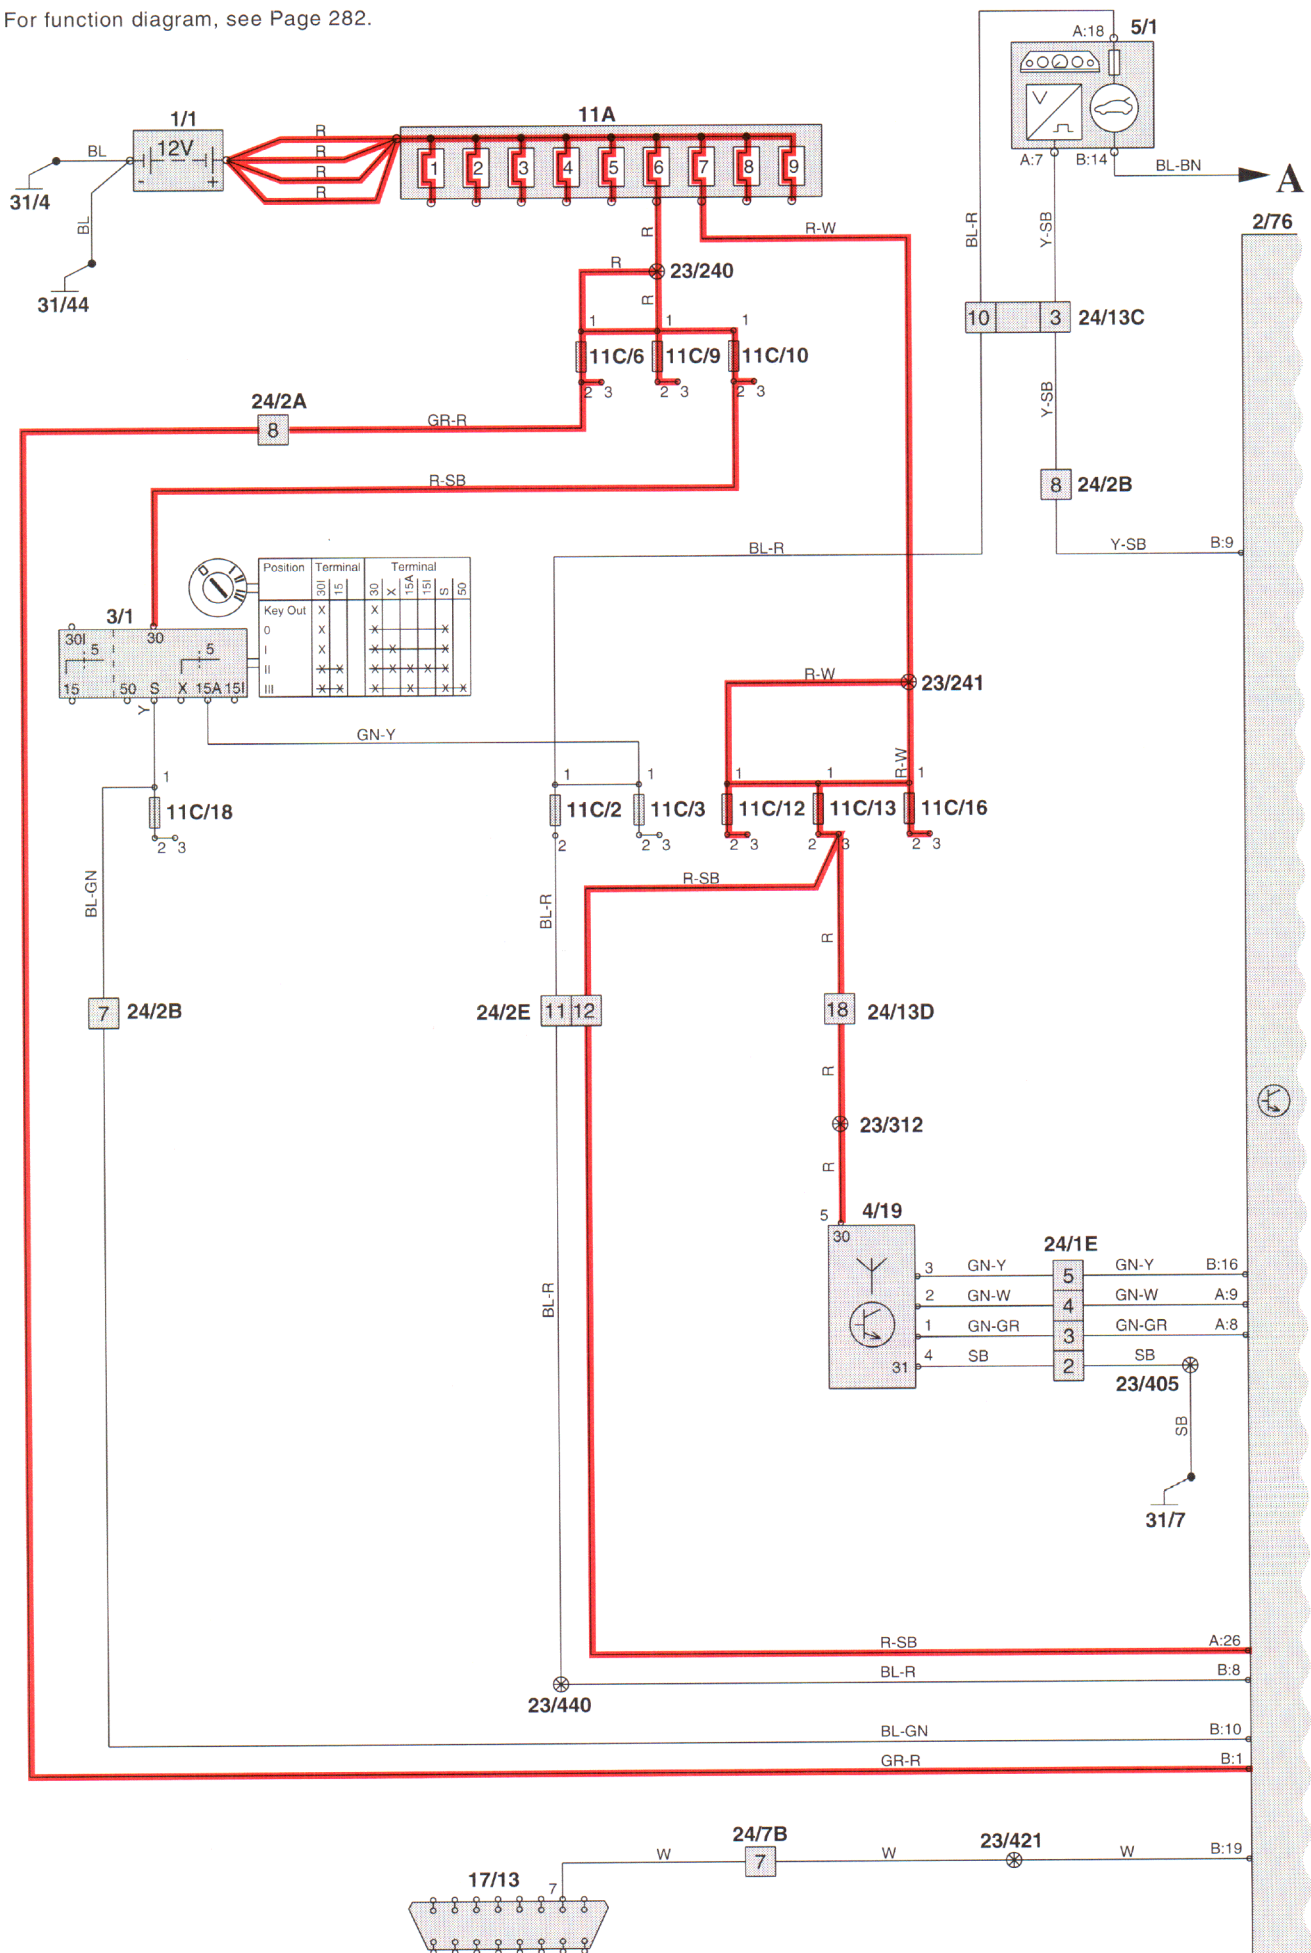


For function diagram, see Page 283.

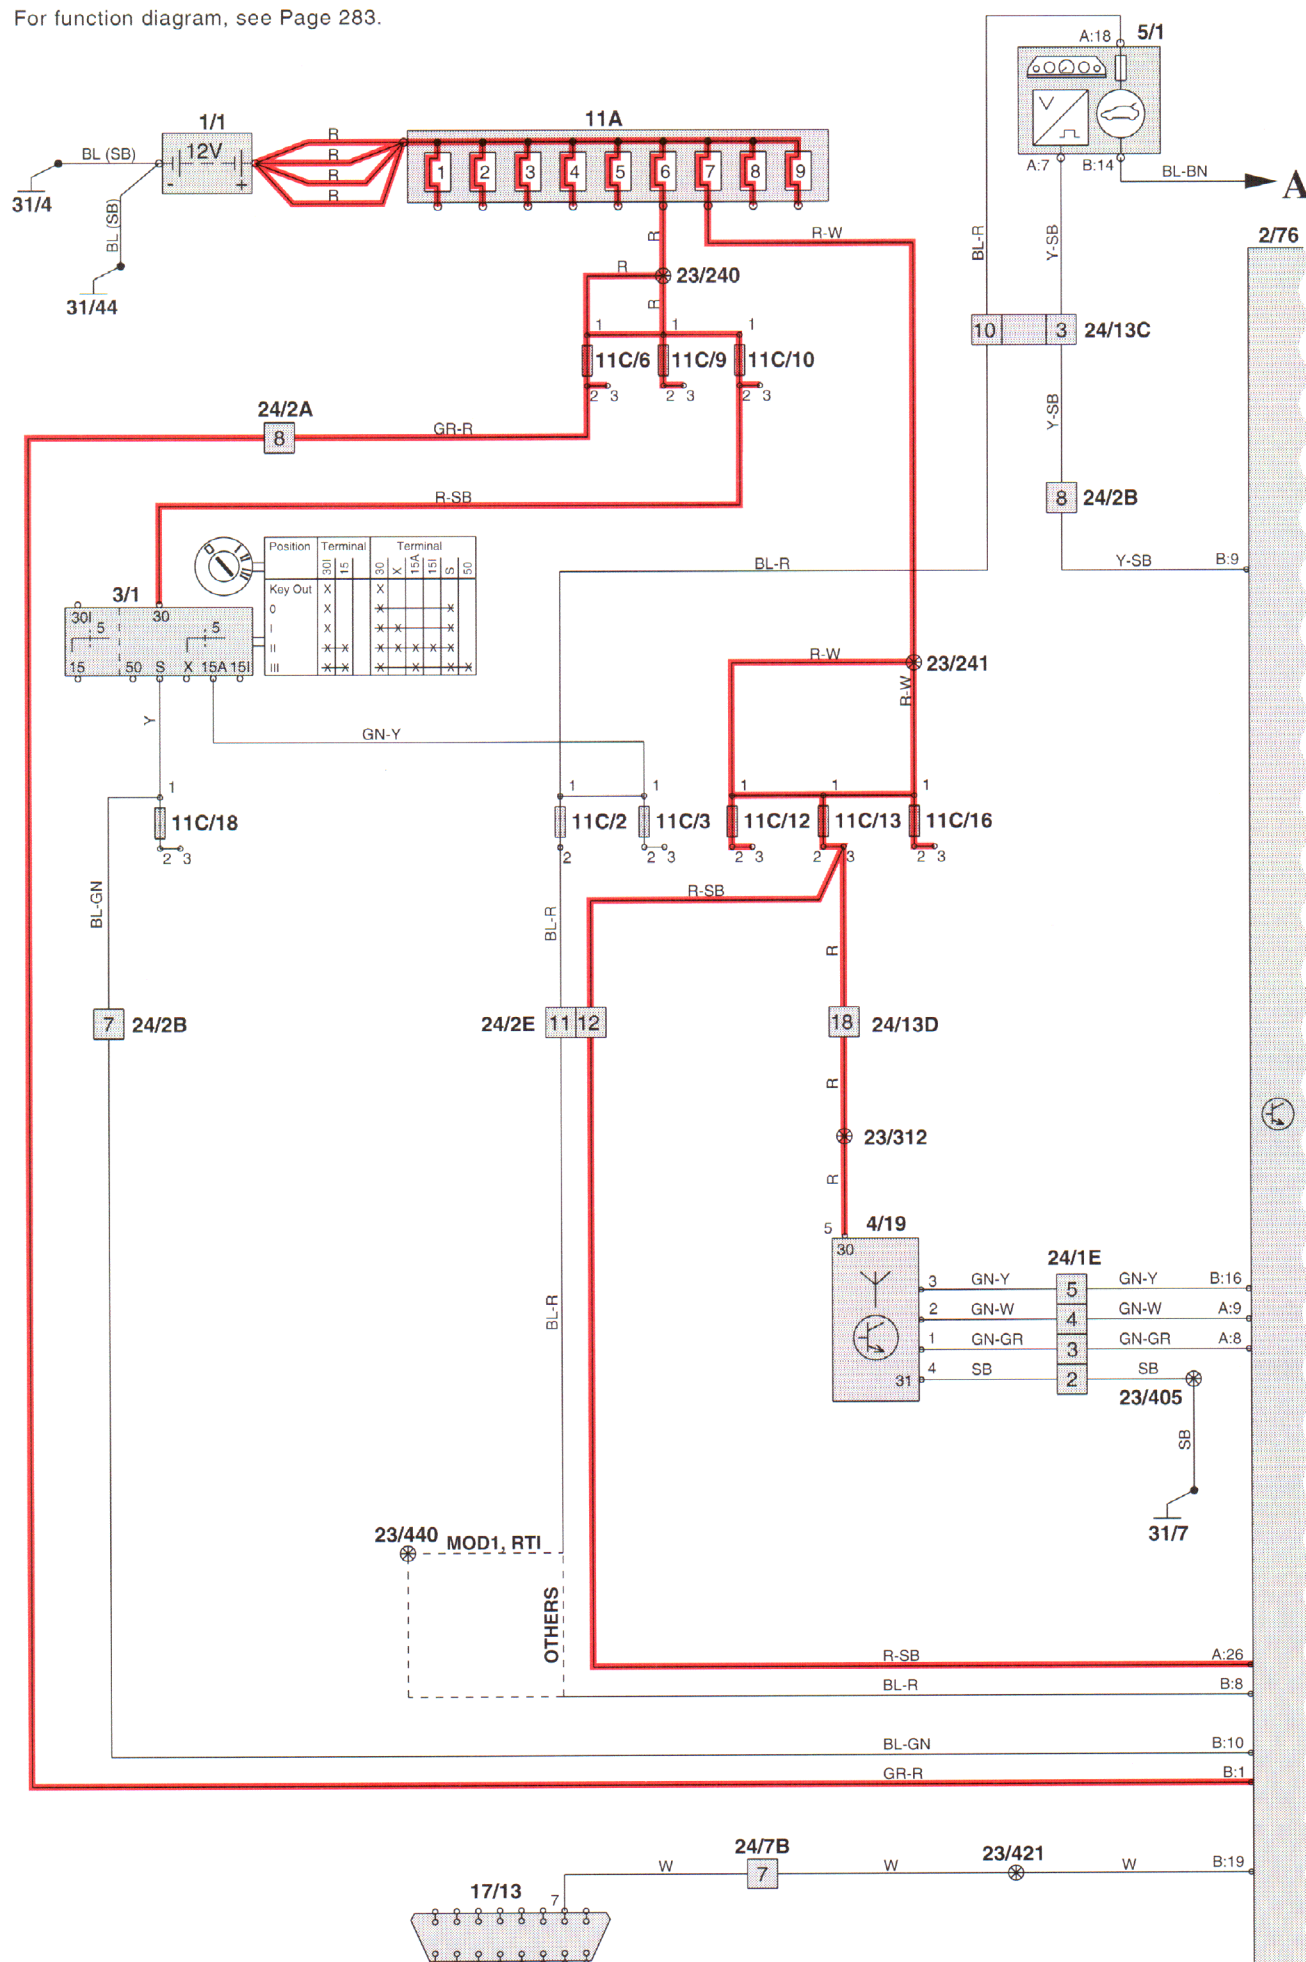


Central locking V70

For function diagram, see Page 284.

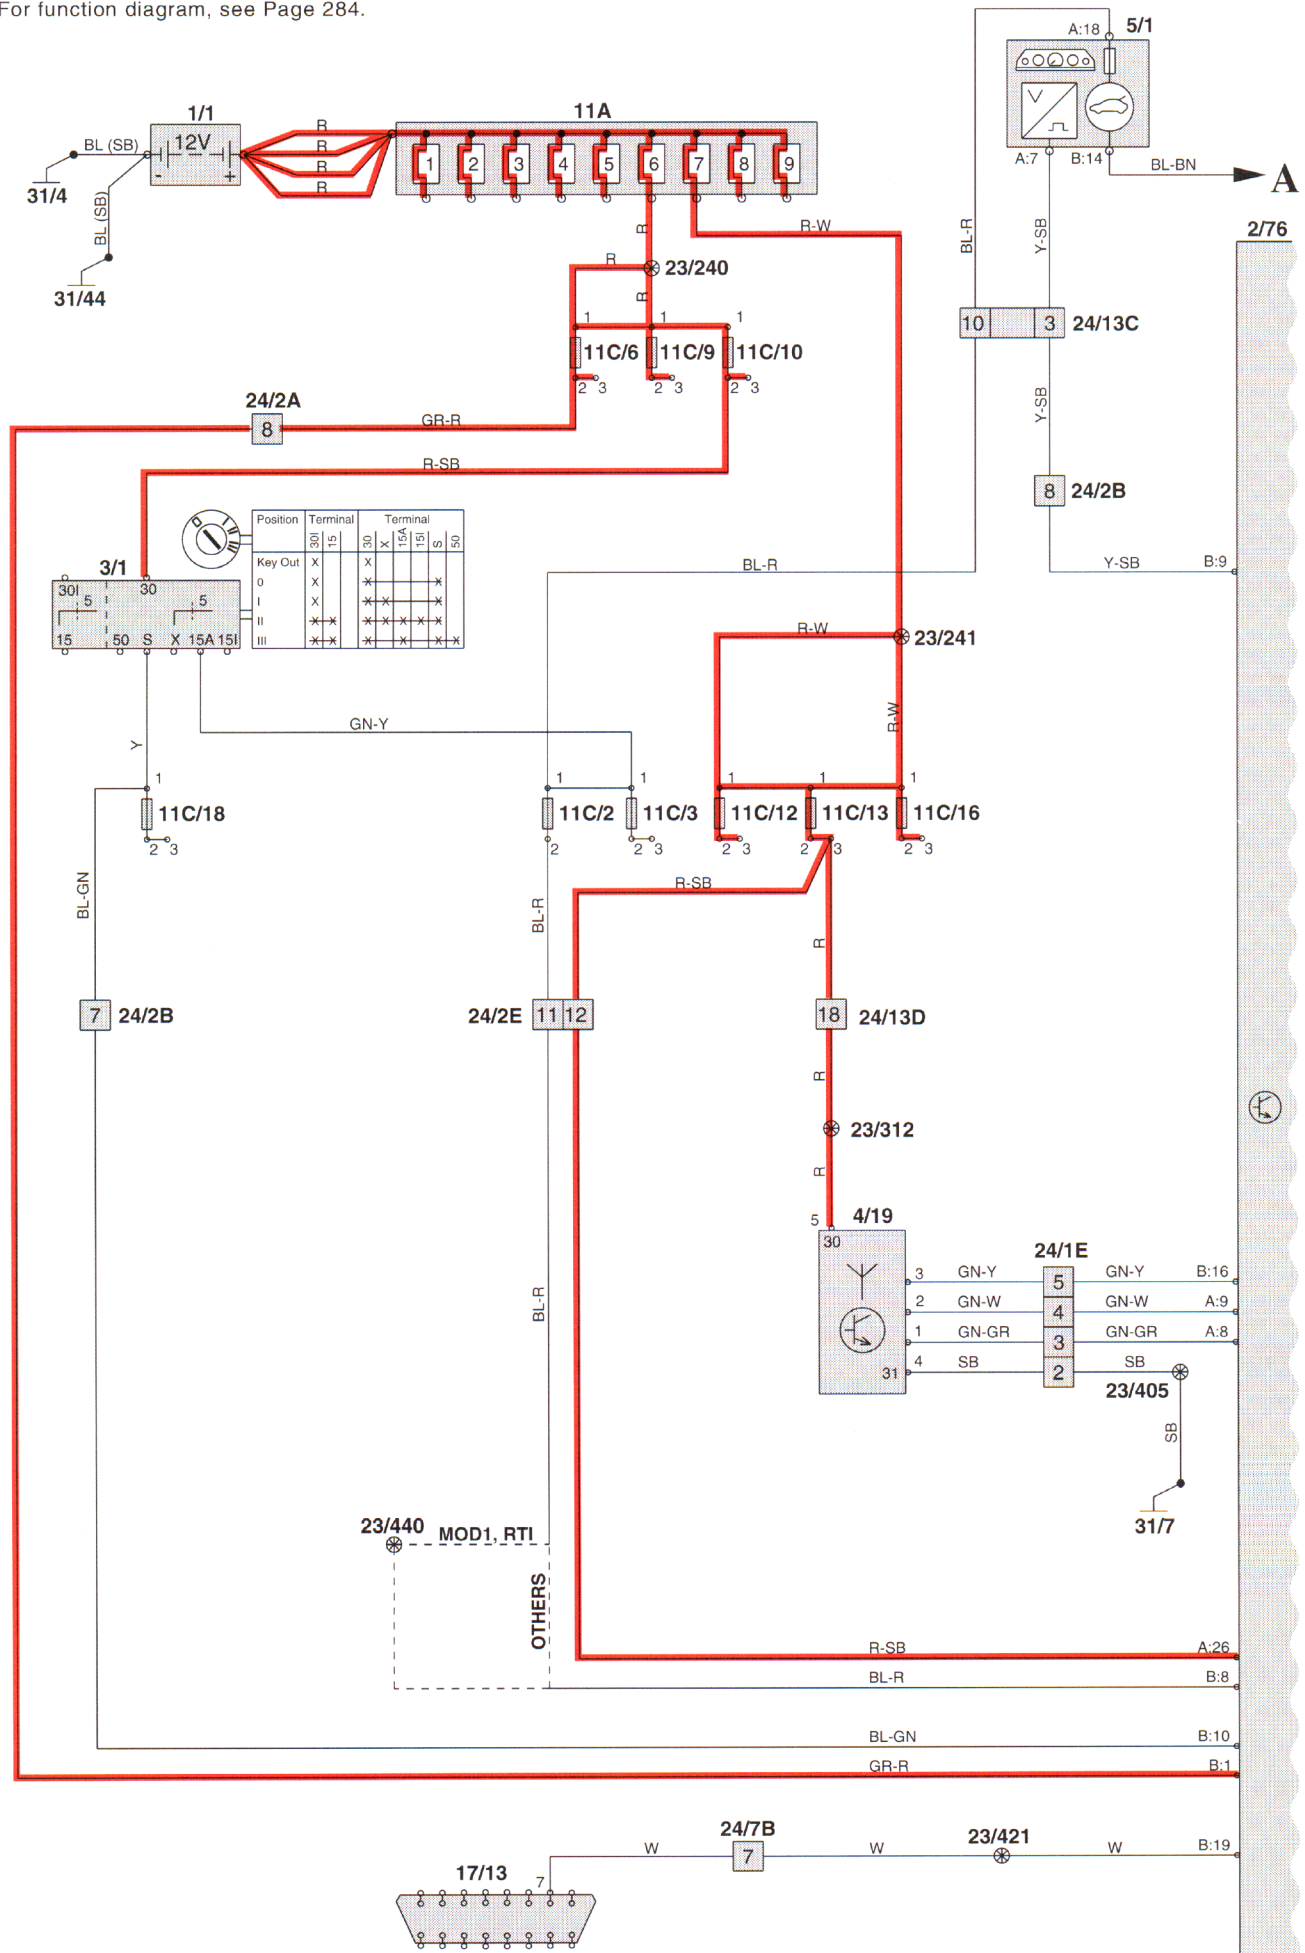


Power sunroof

For function diagram, see Page 285.

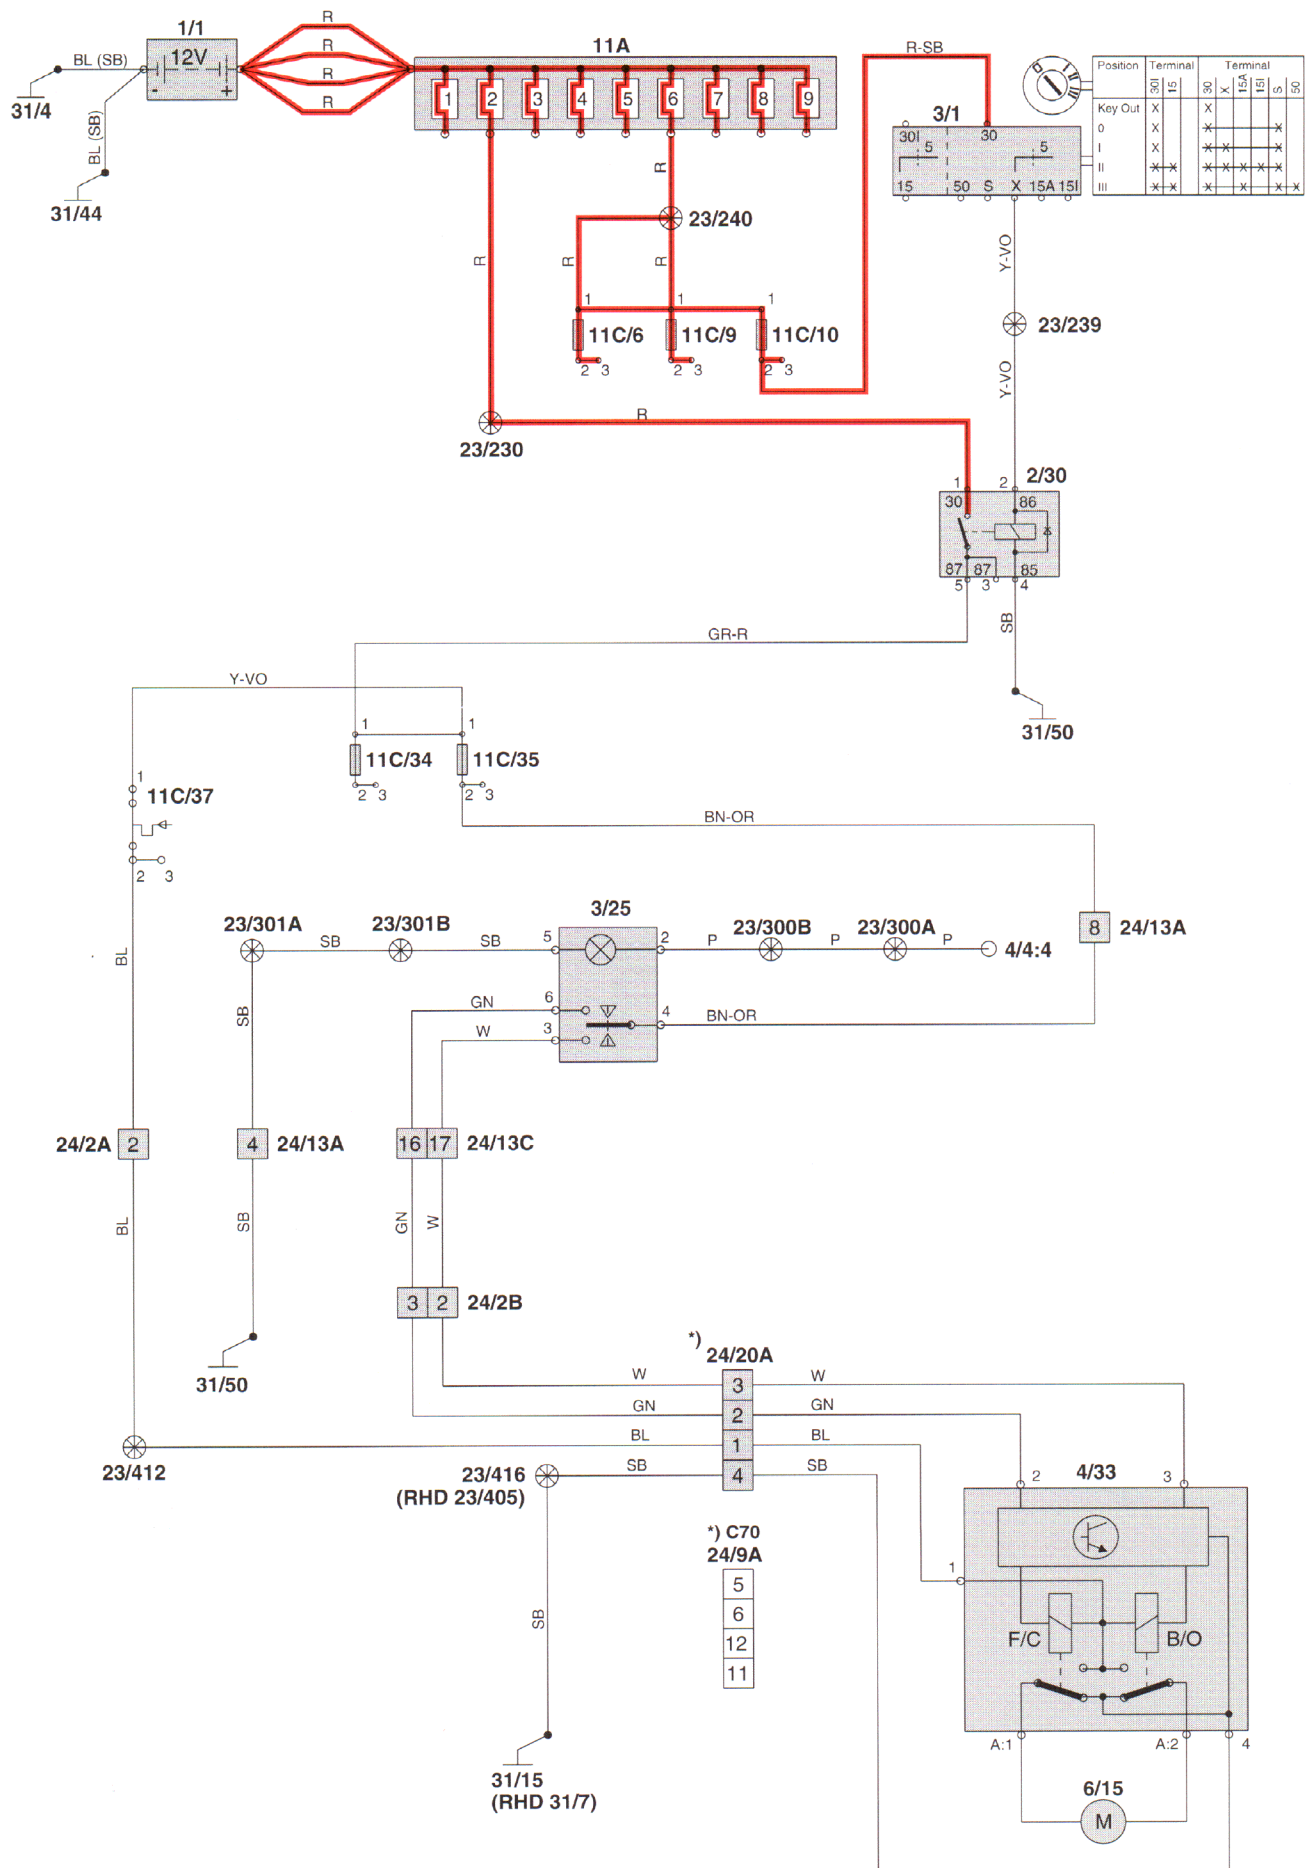


Heated rear window and heated door mirrors

For function diagram, see Page 286.

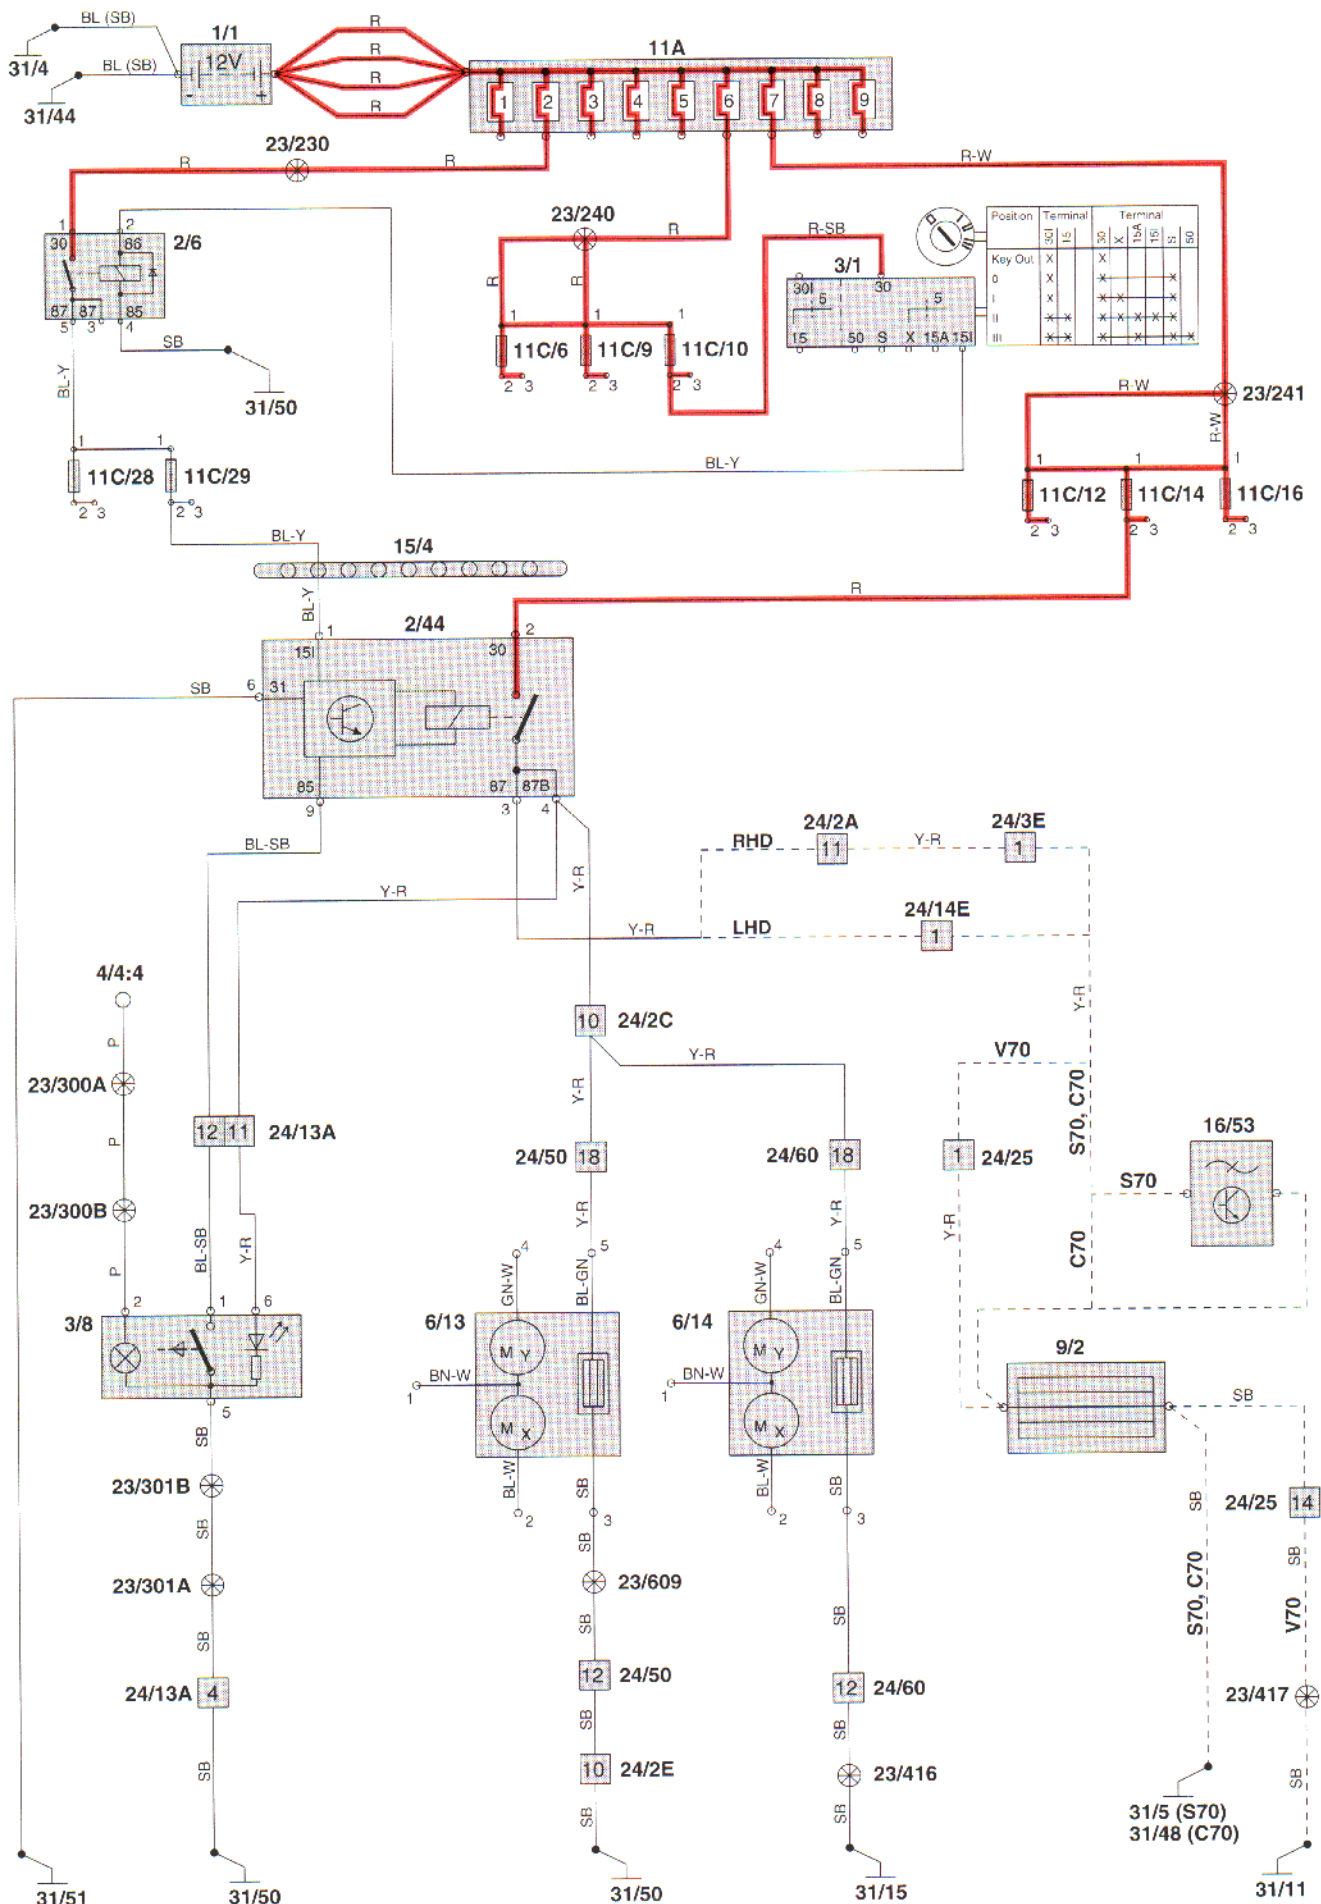


Power door mirrors


For function diagram, see Page 287.

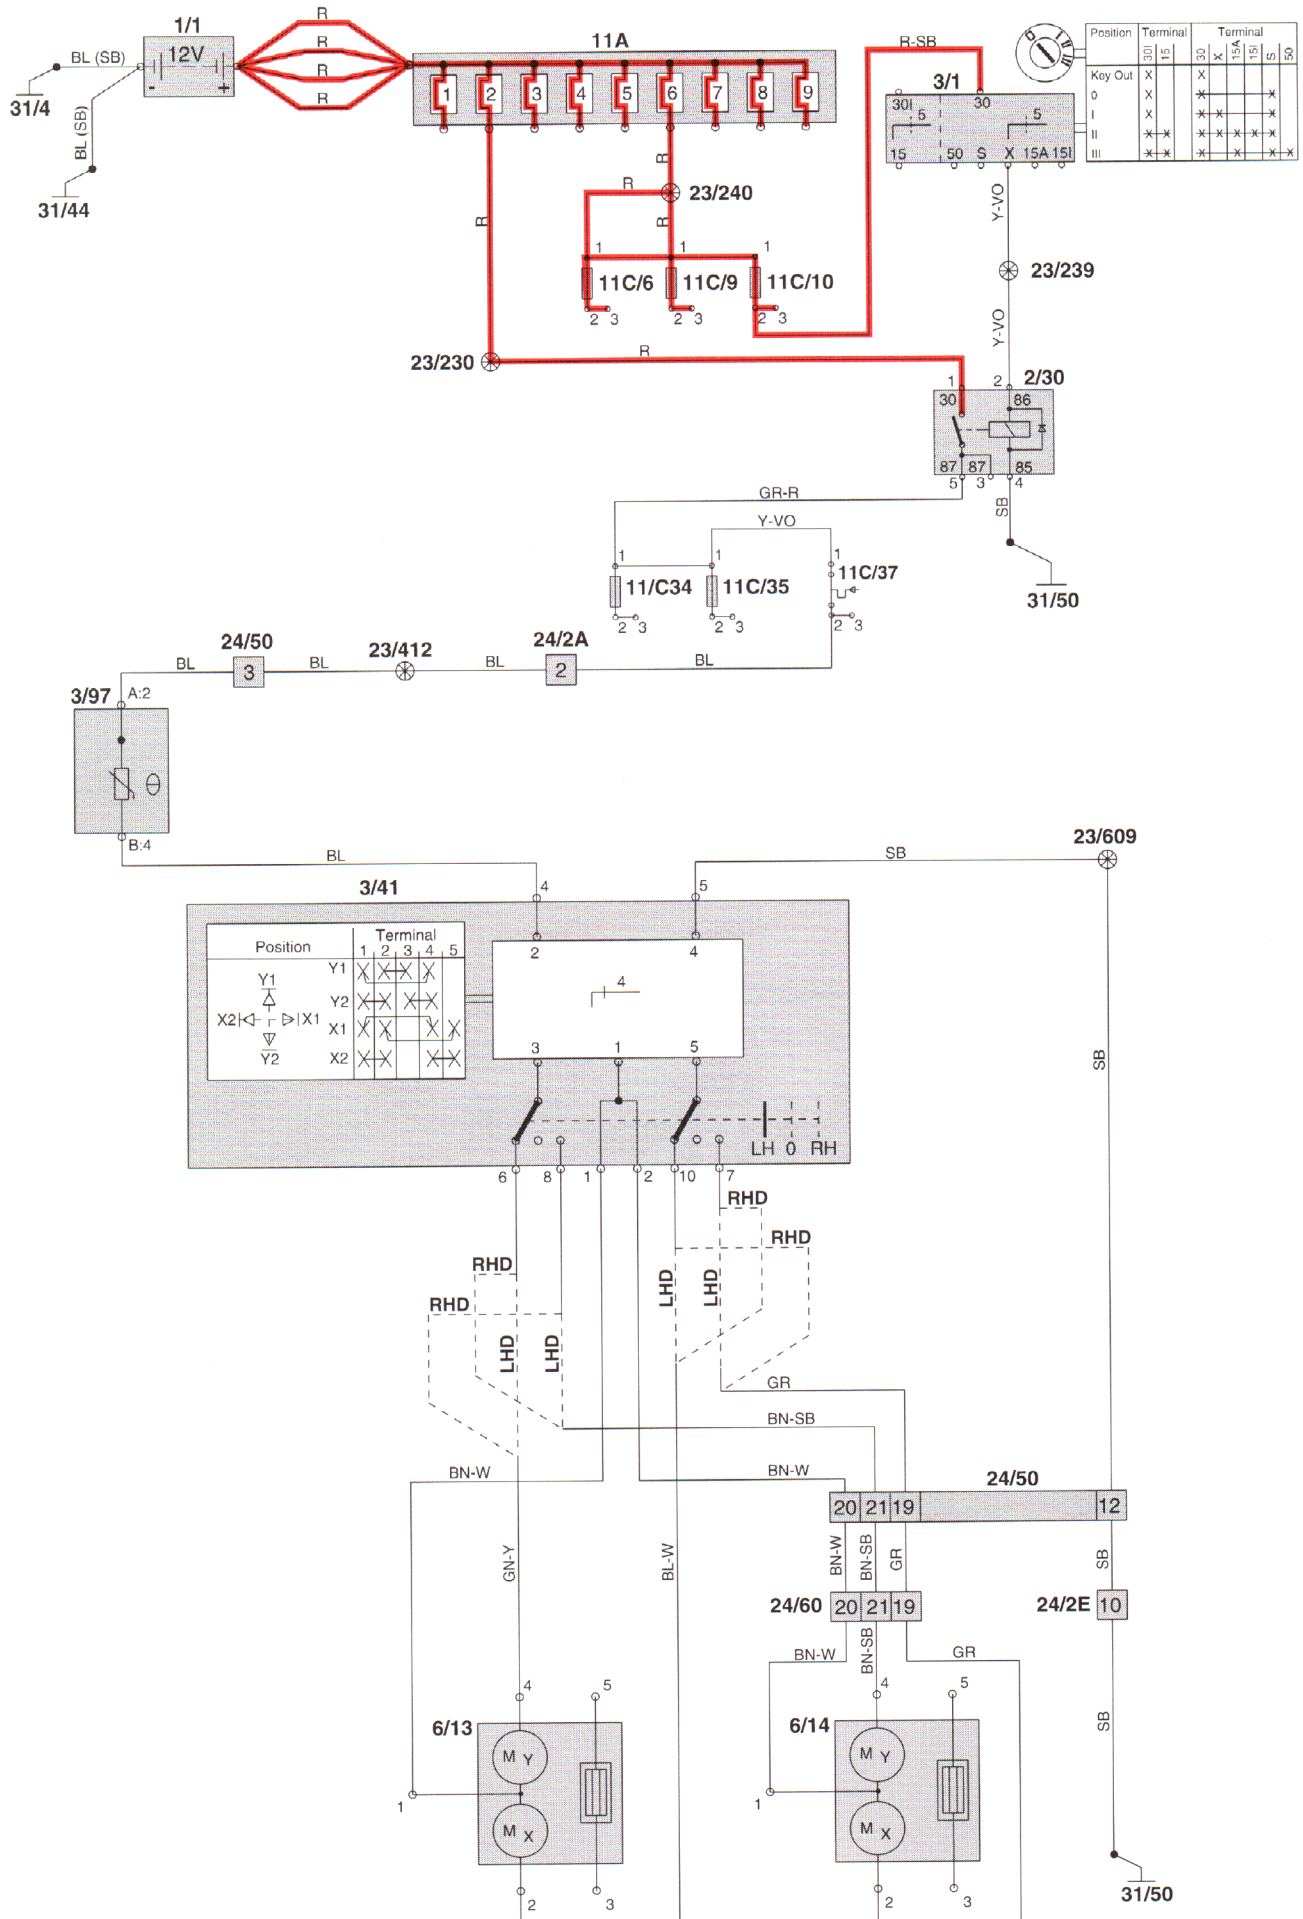


Electrically heated seats

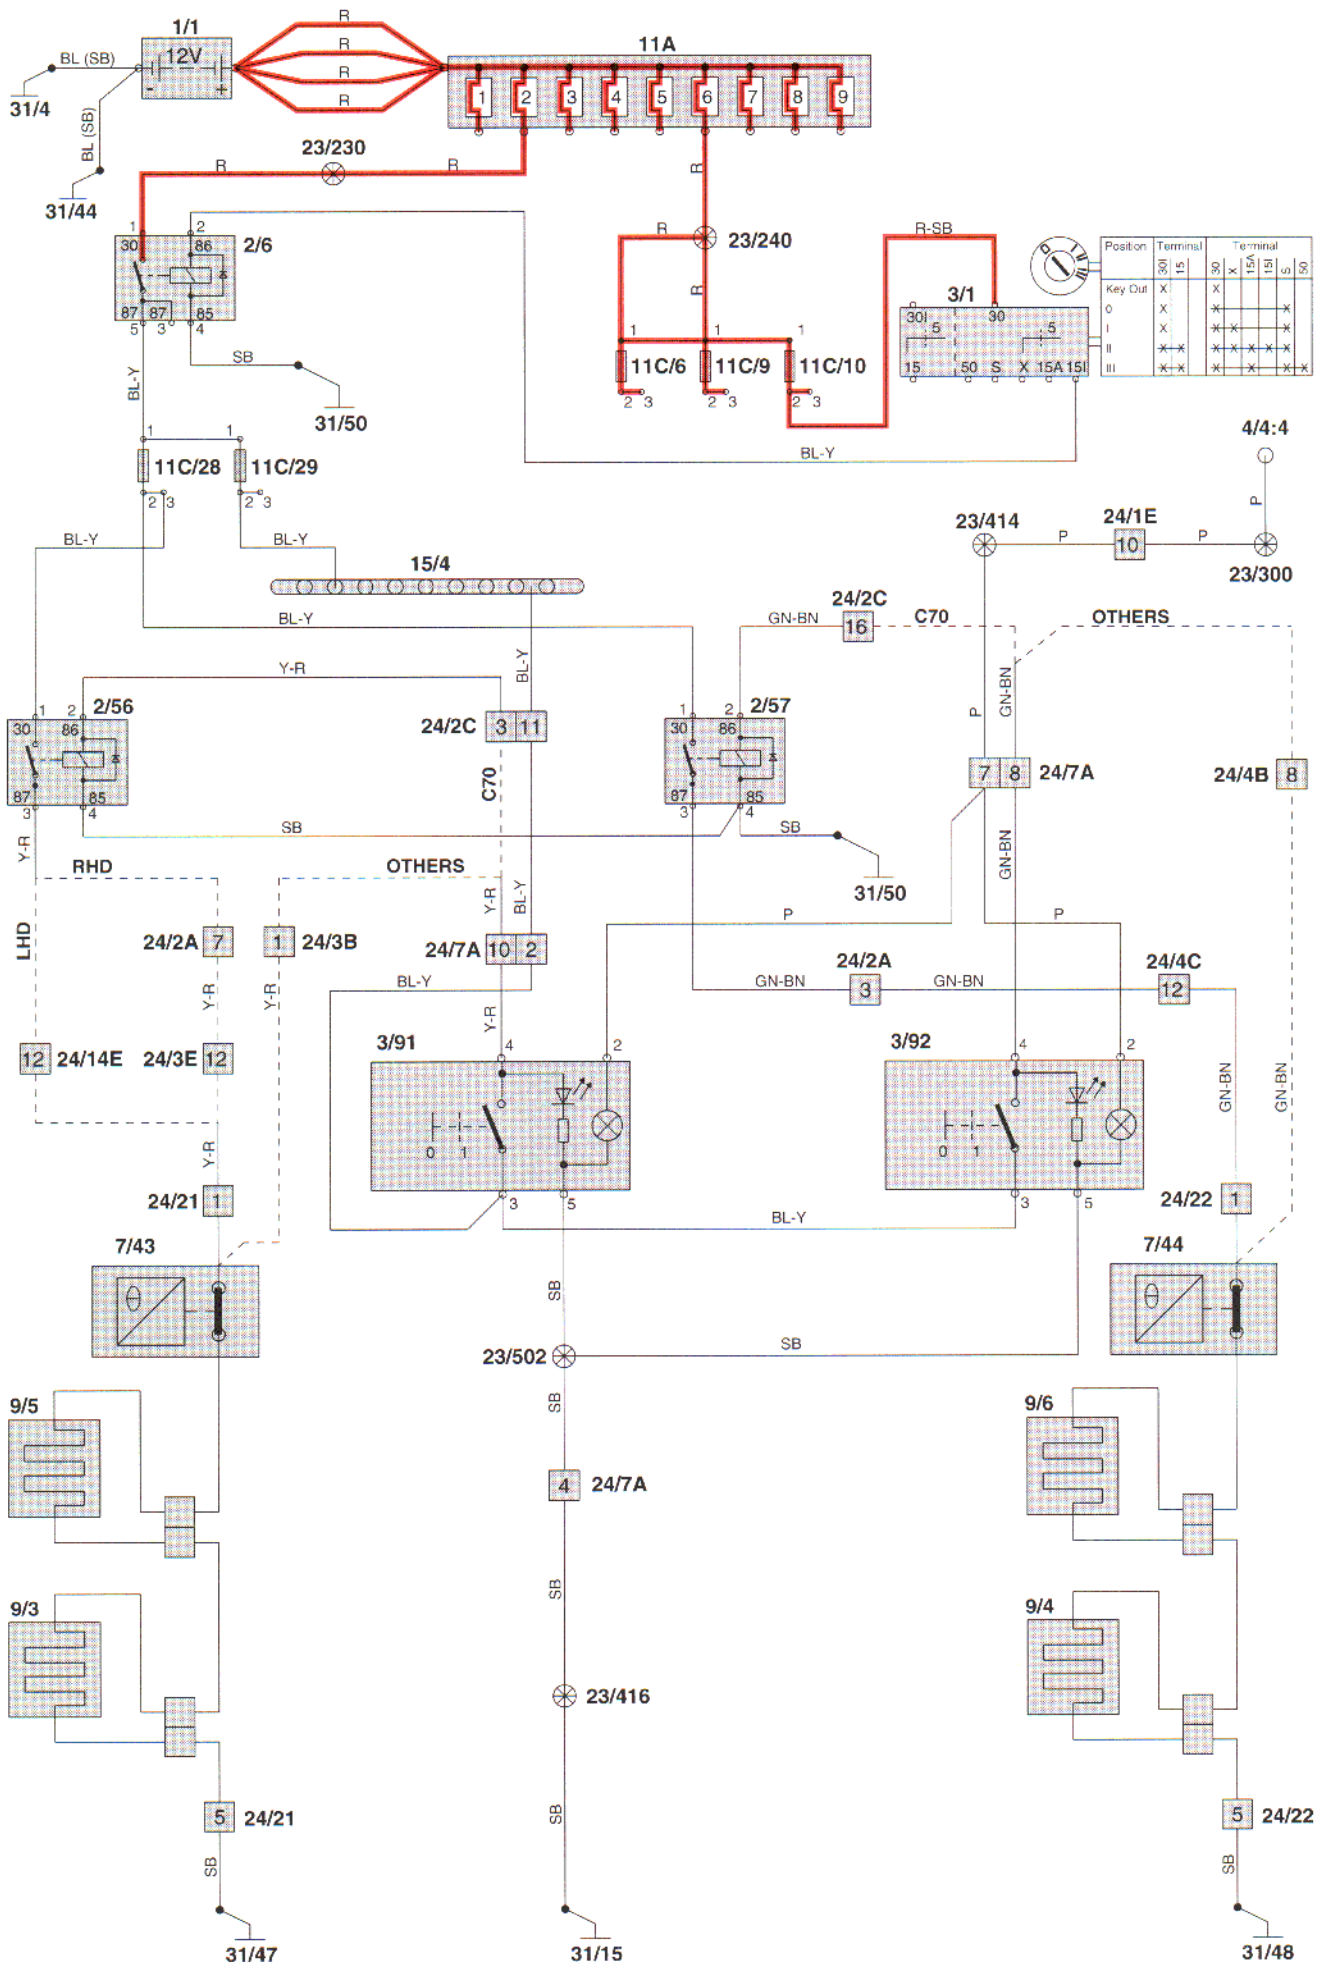


Heated rear seat

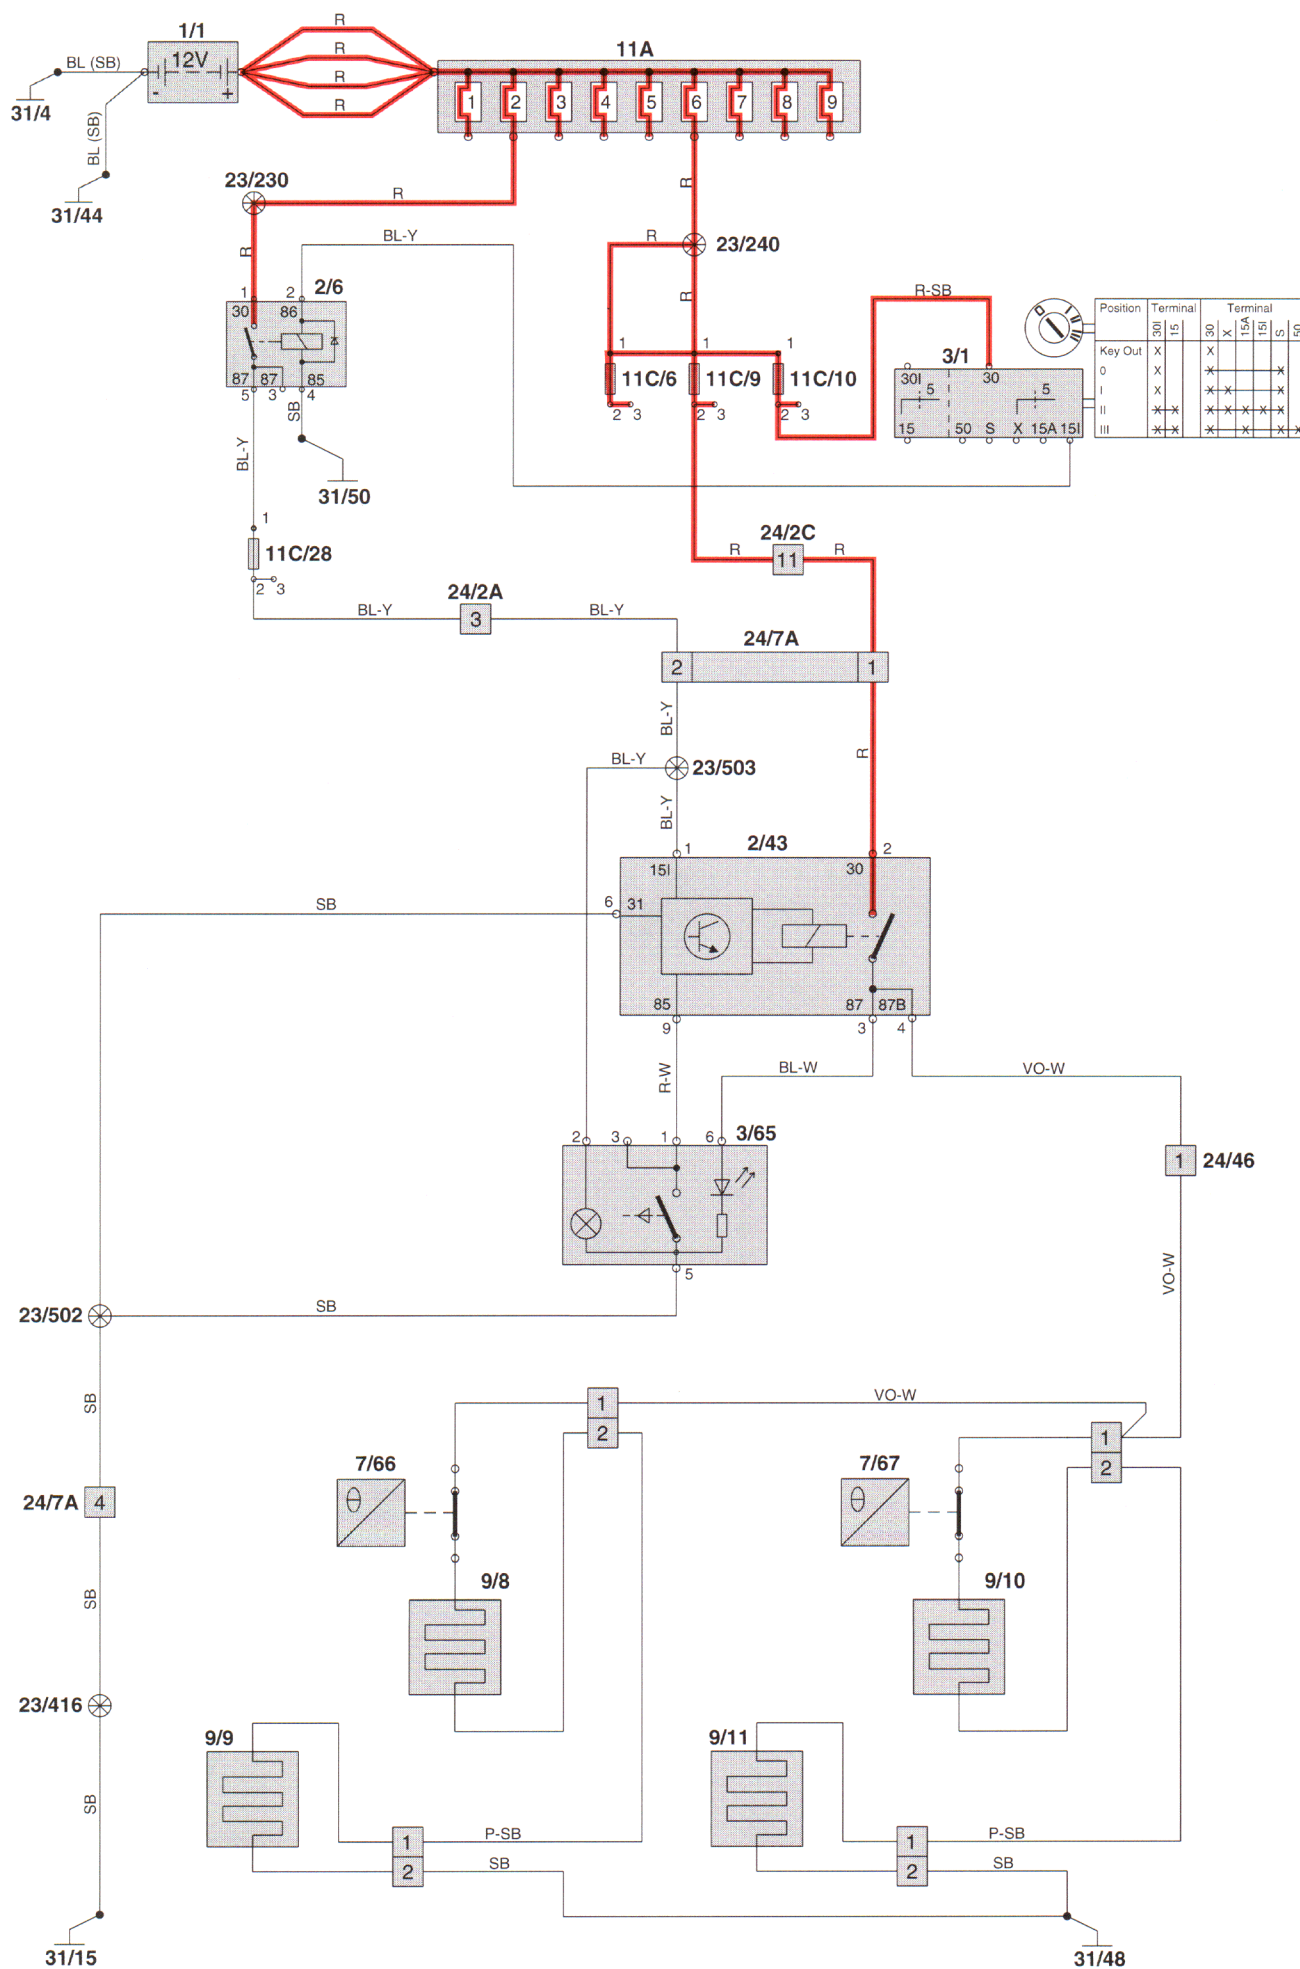


Power seats

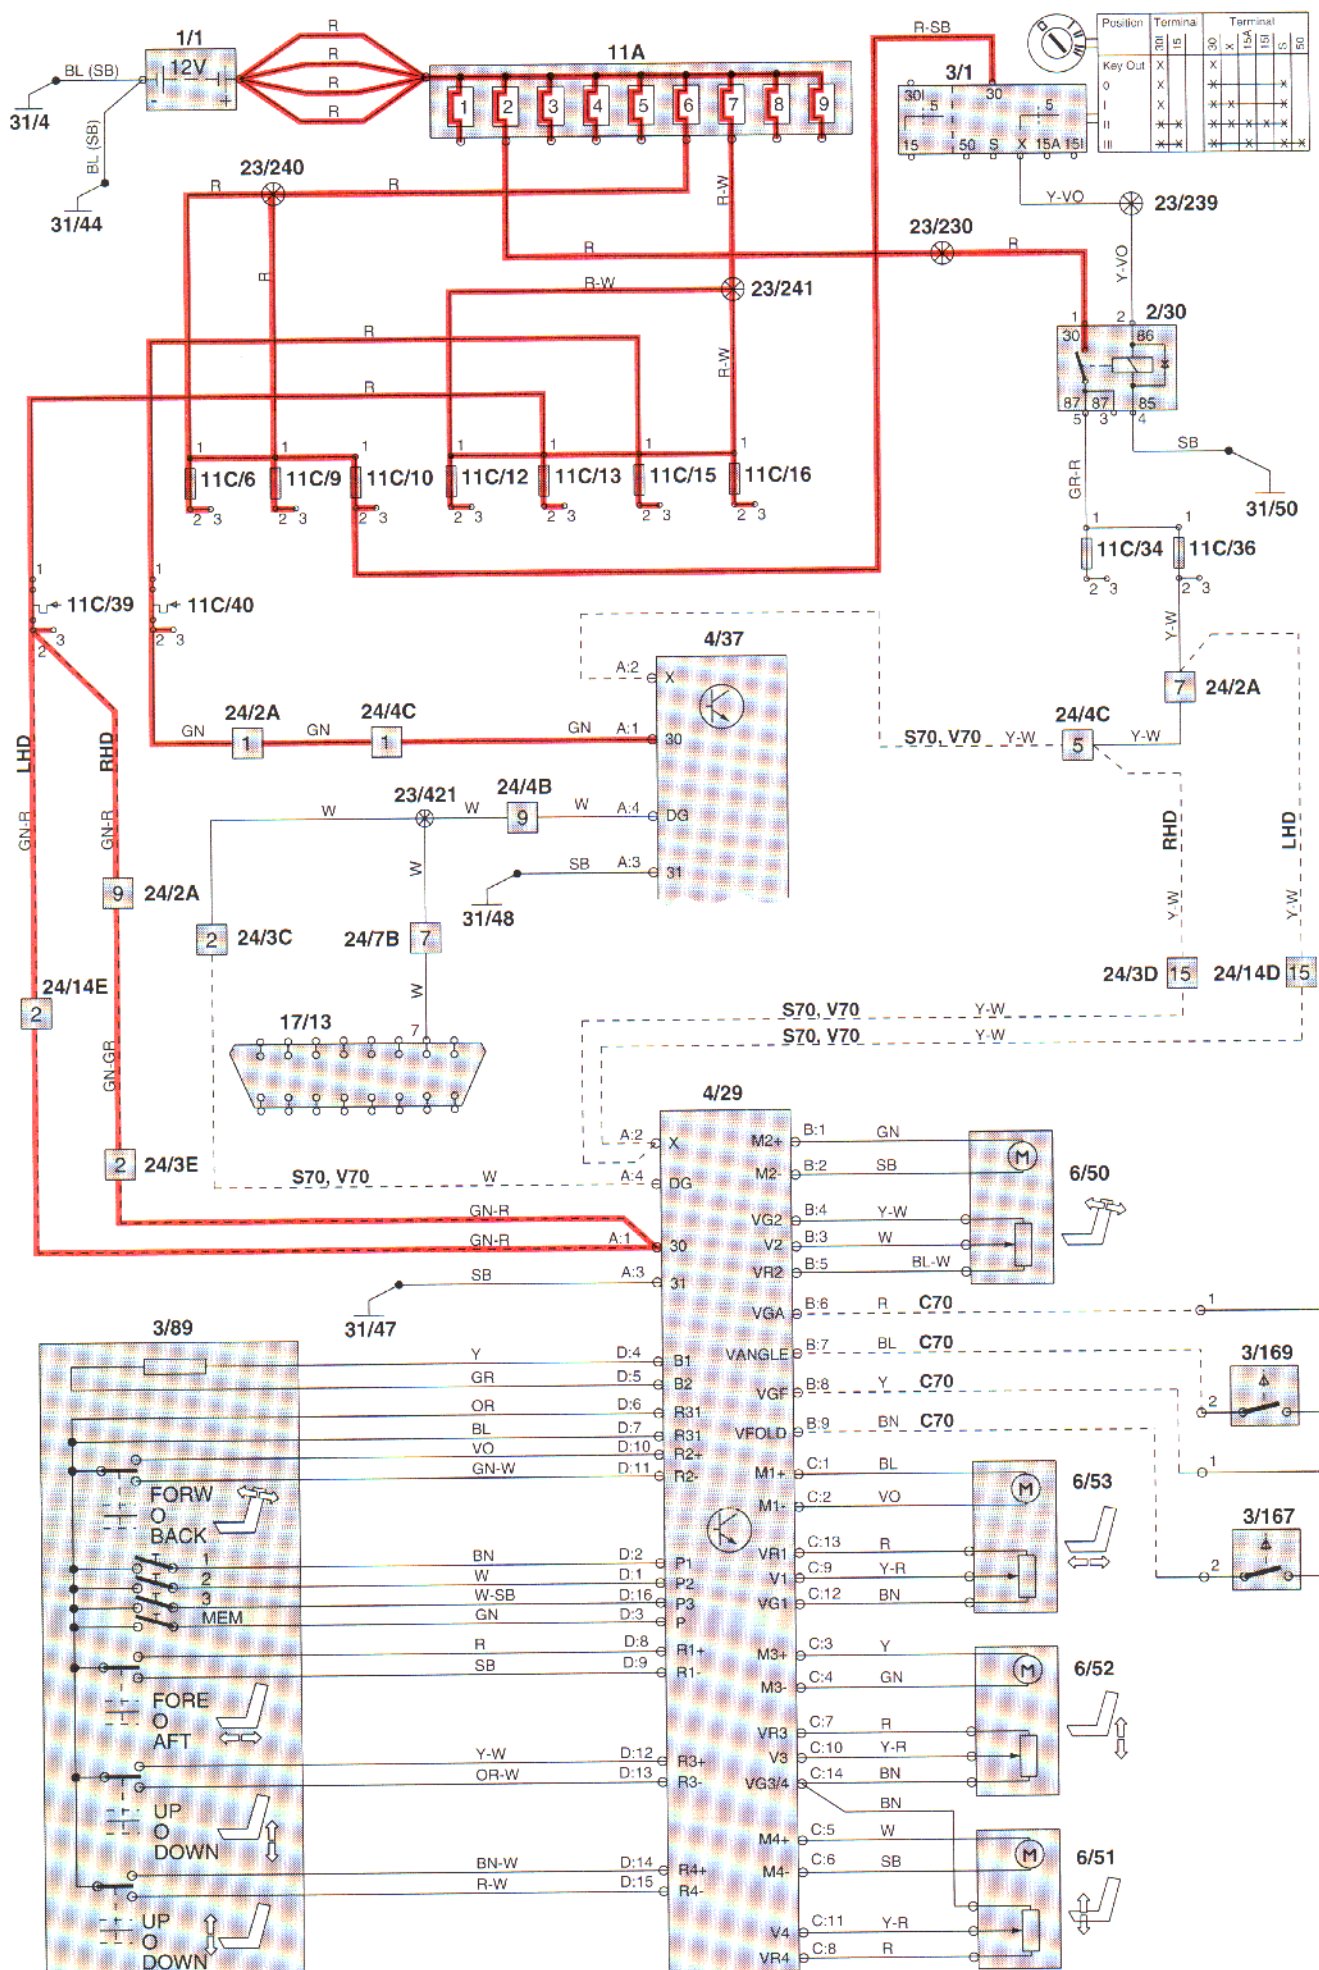


Standard heater

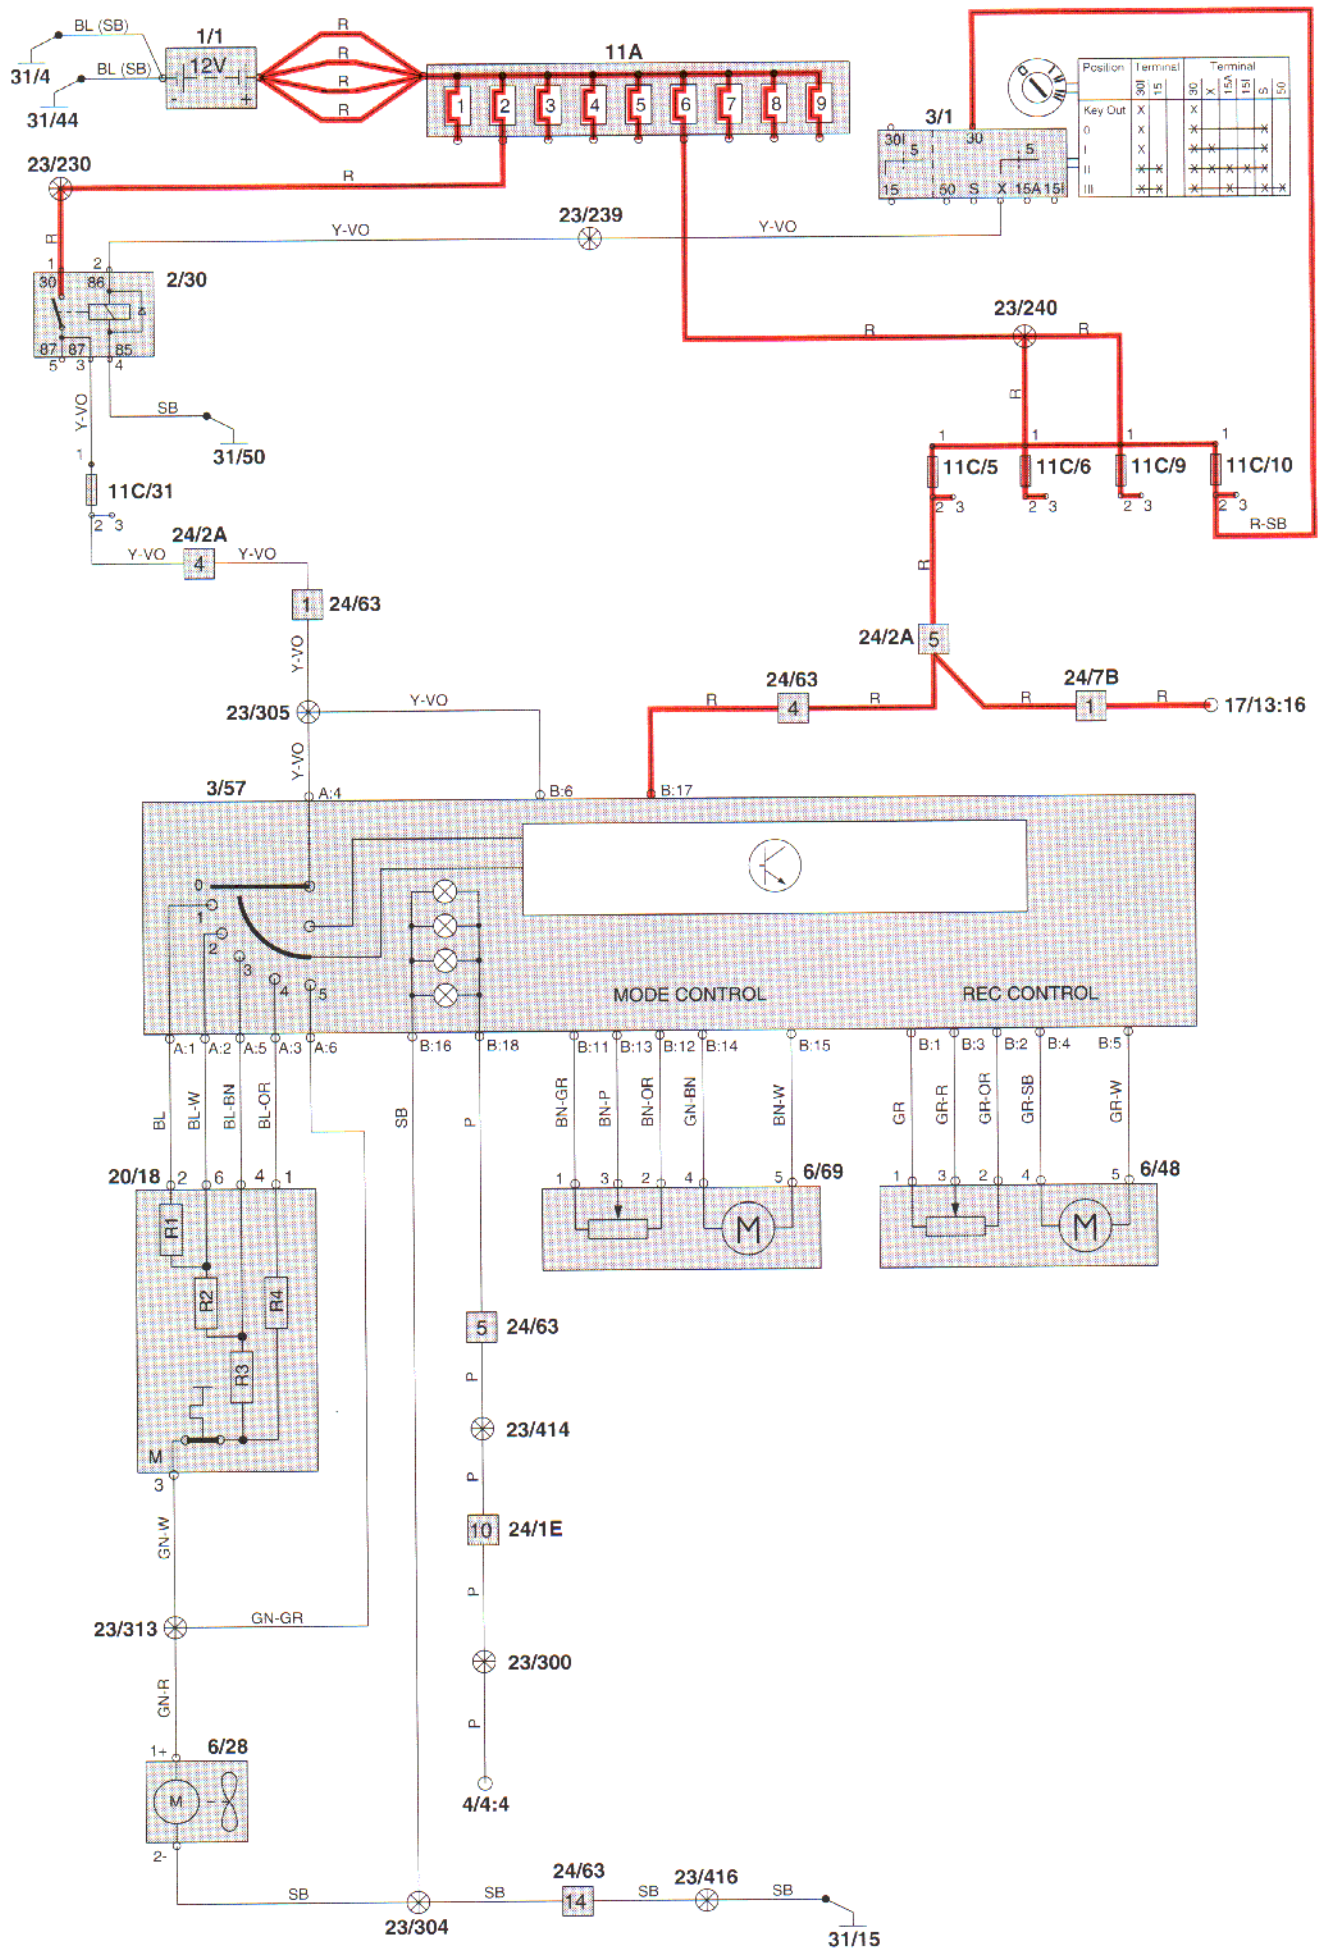


Manual Climate Control unit MCC Fenix 5.2, Motronic 4.3/4.4

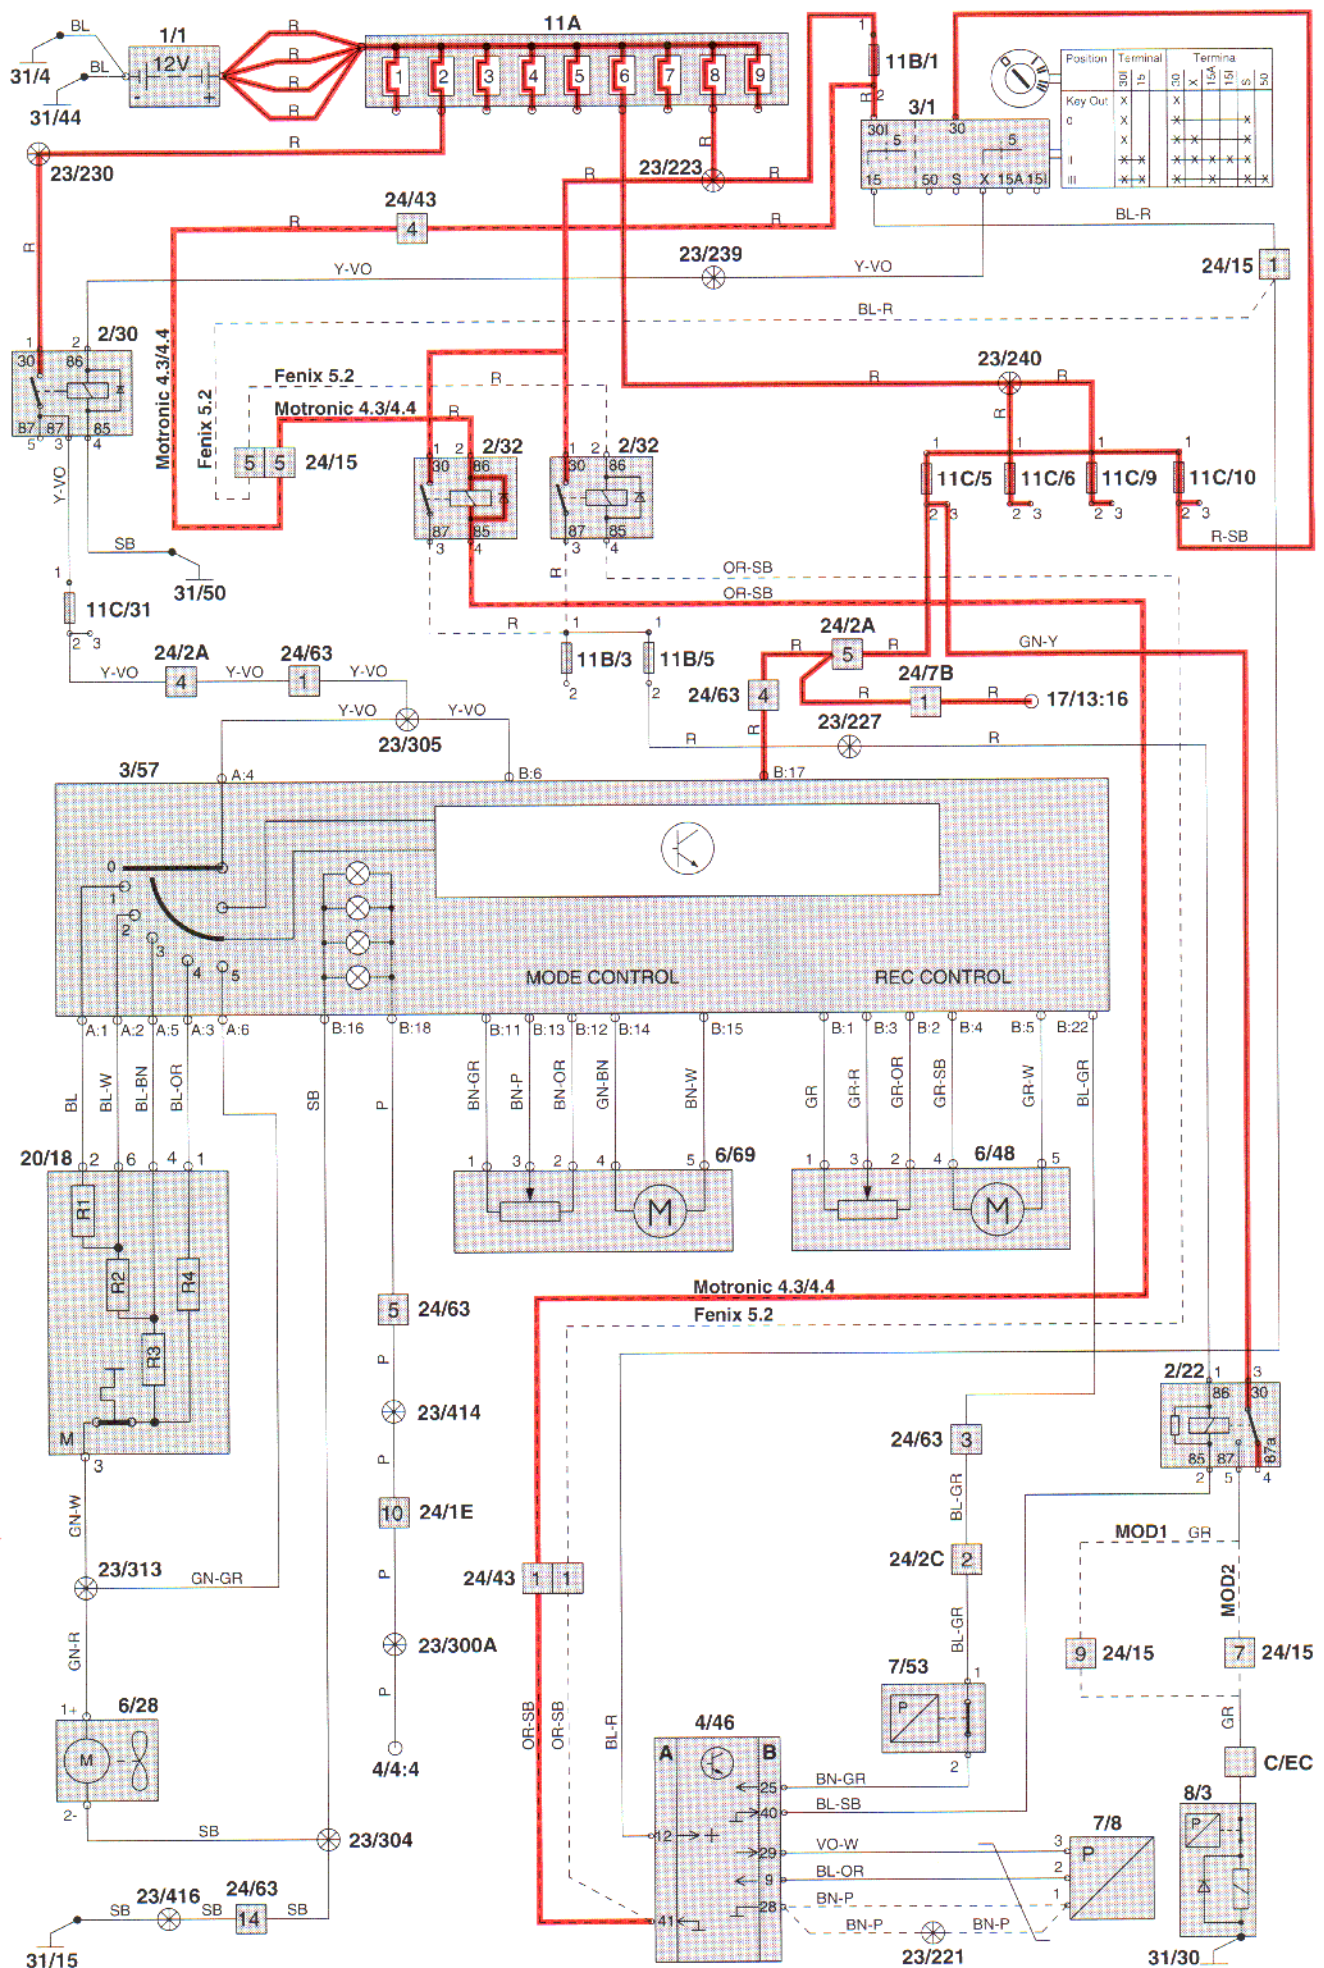


Manual Climate Control unit MCC MSA 15.7

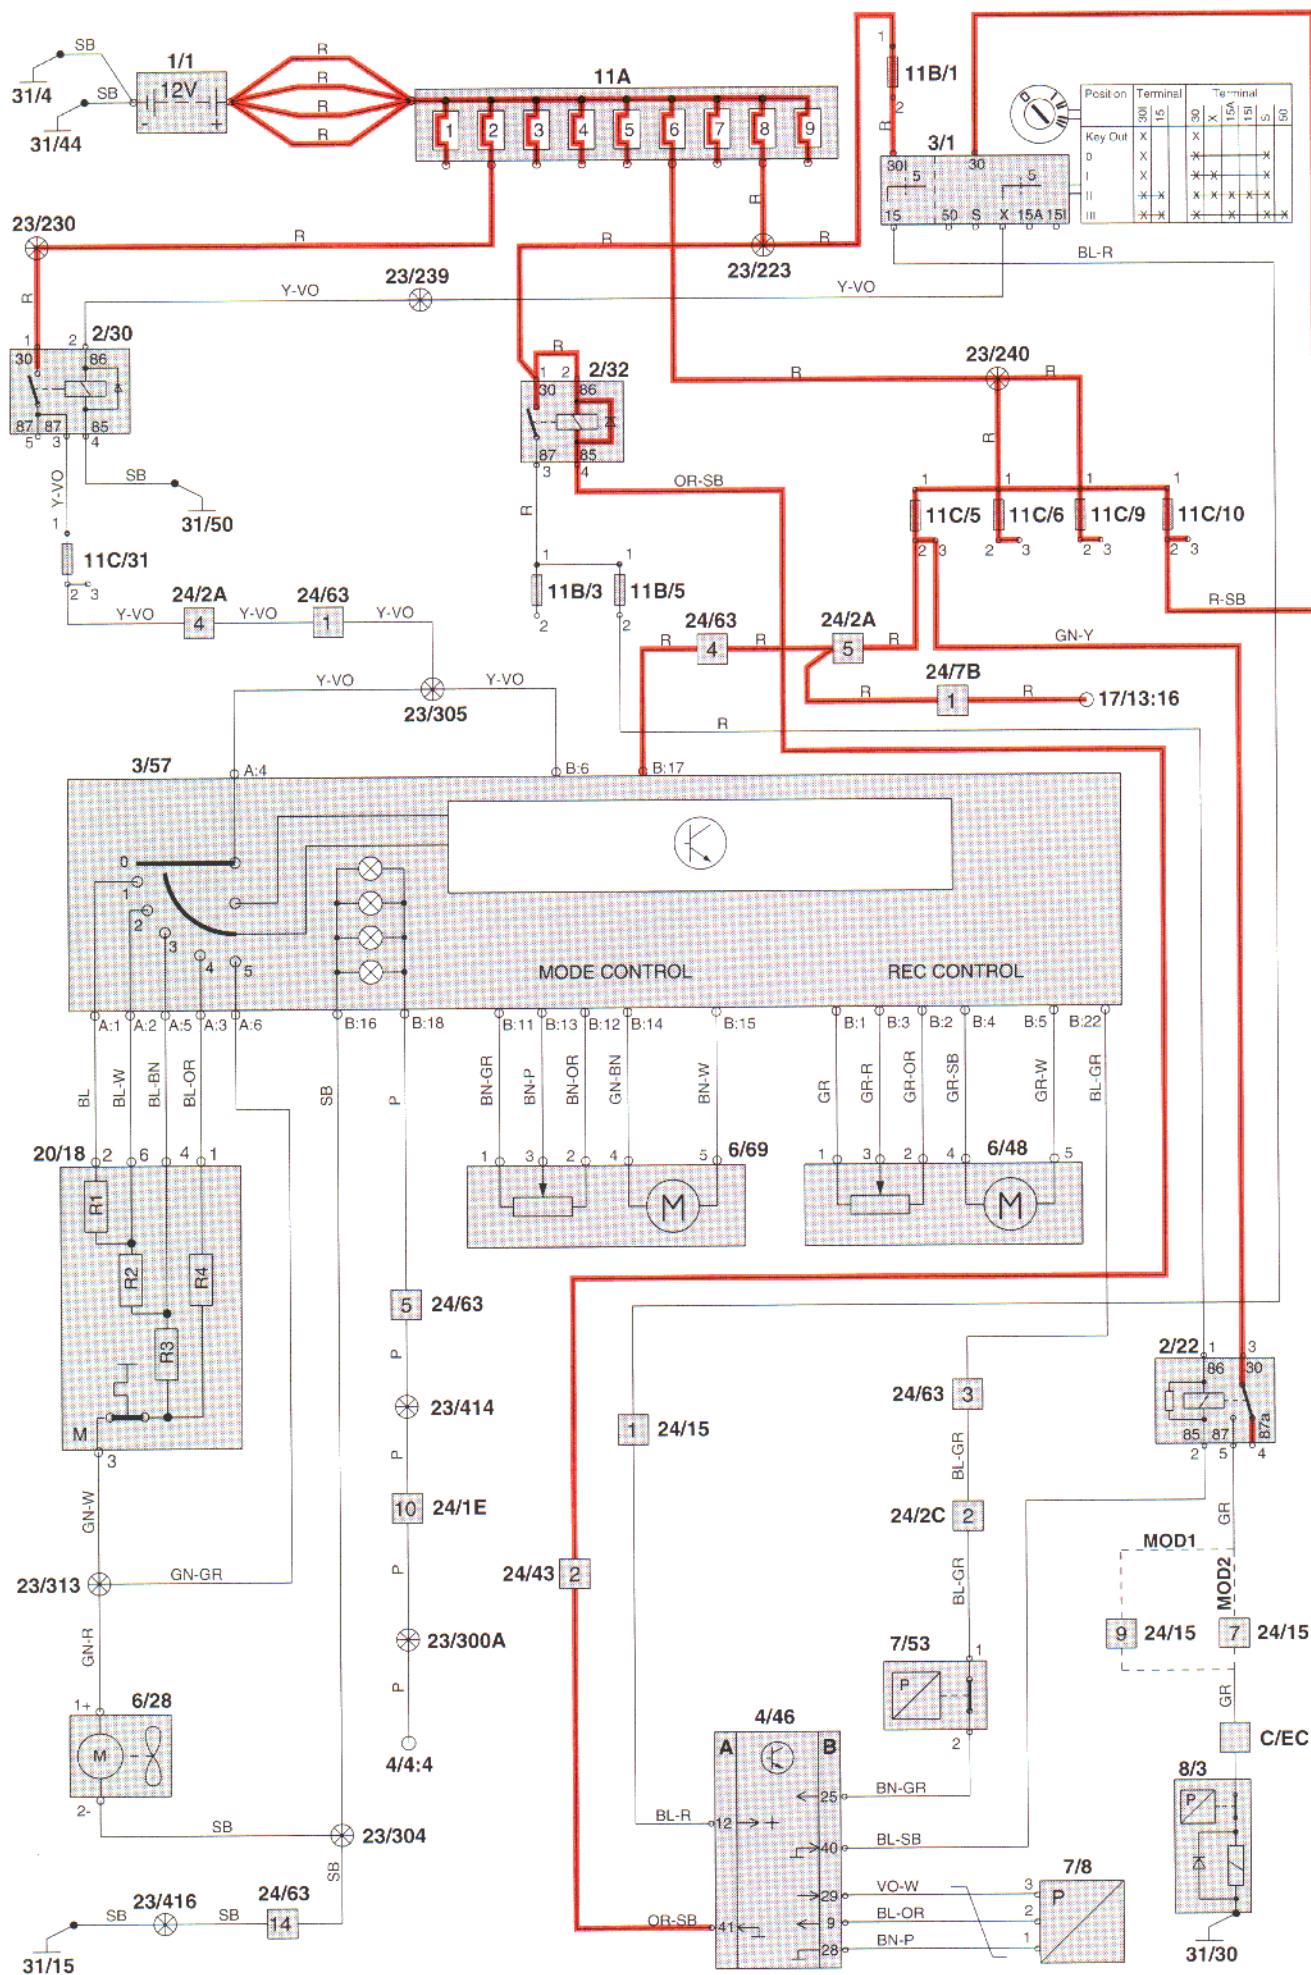

Electronic climate control ECC
Fenix 5.2, Motronic 4.3/4.4

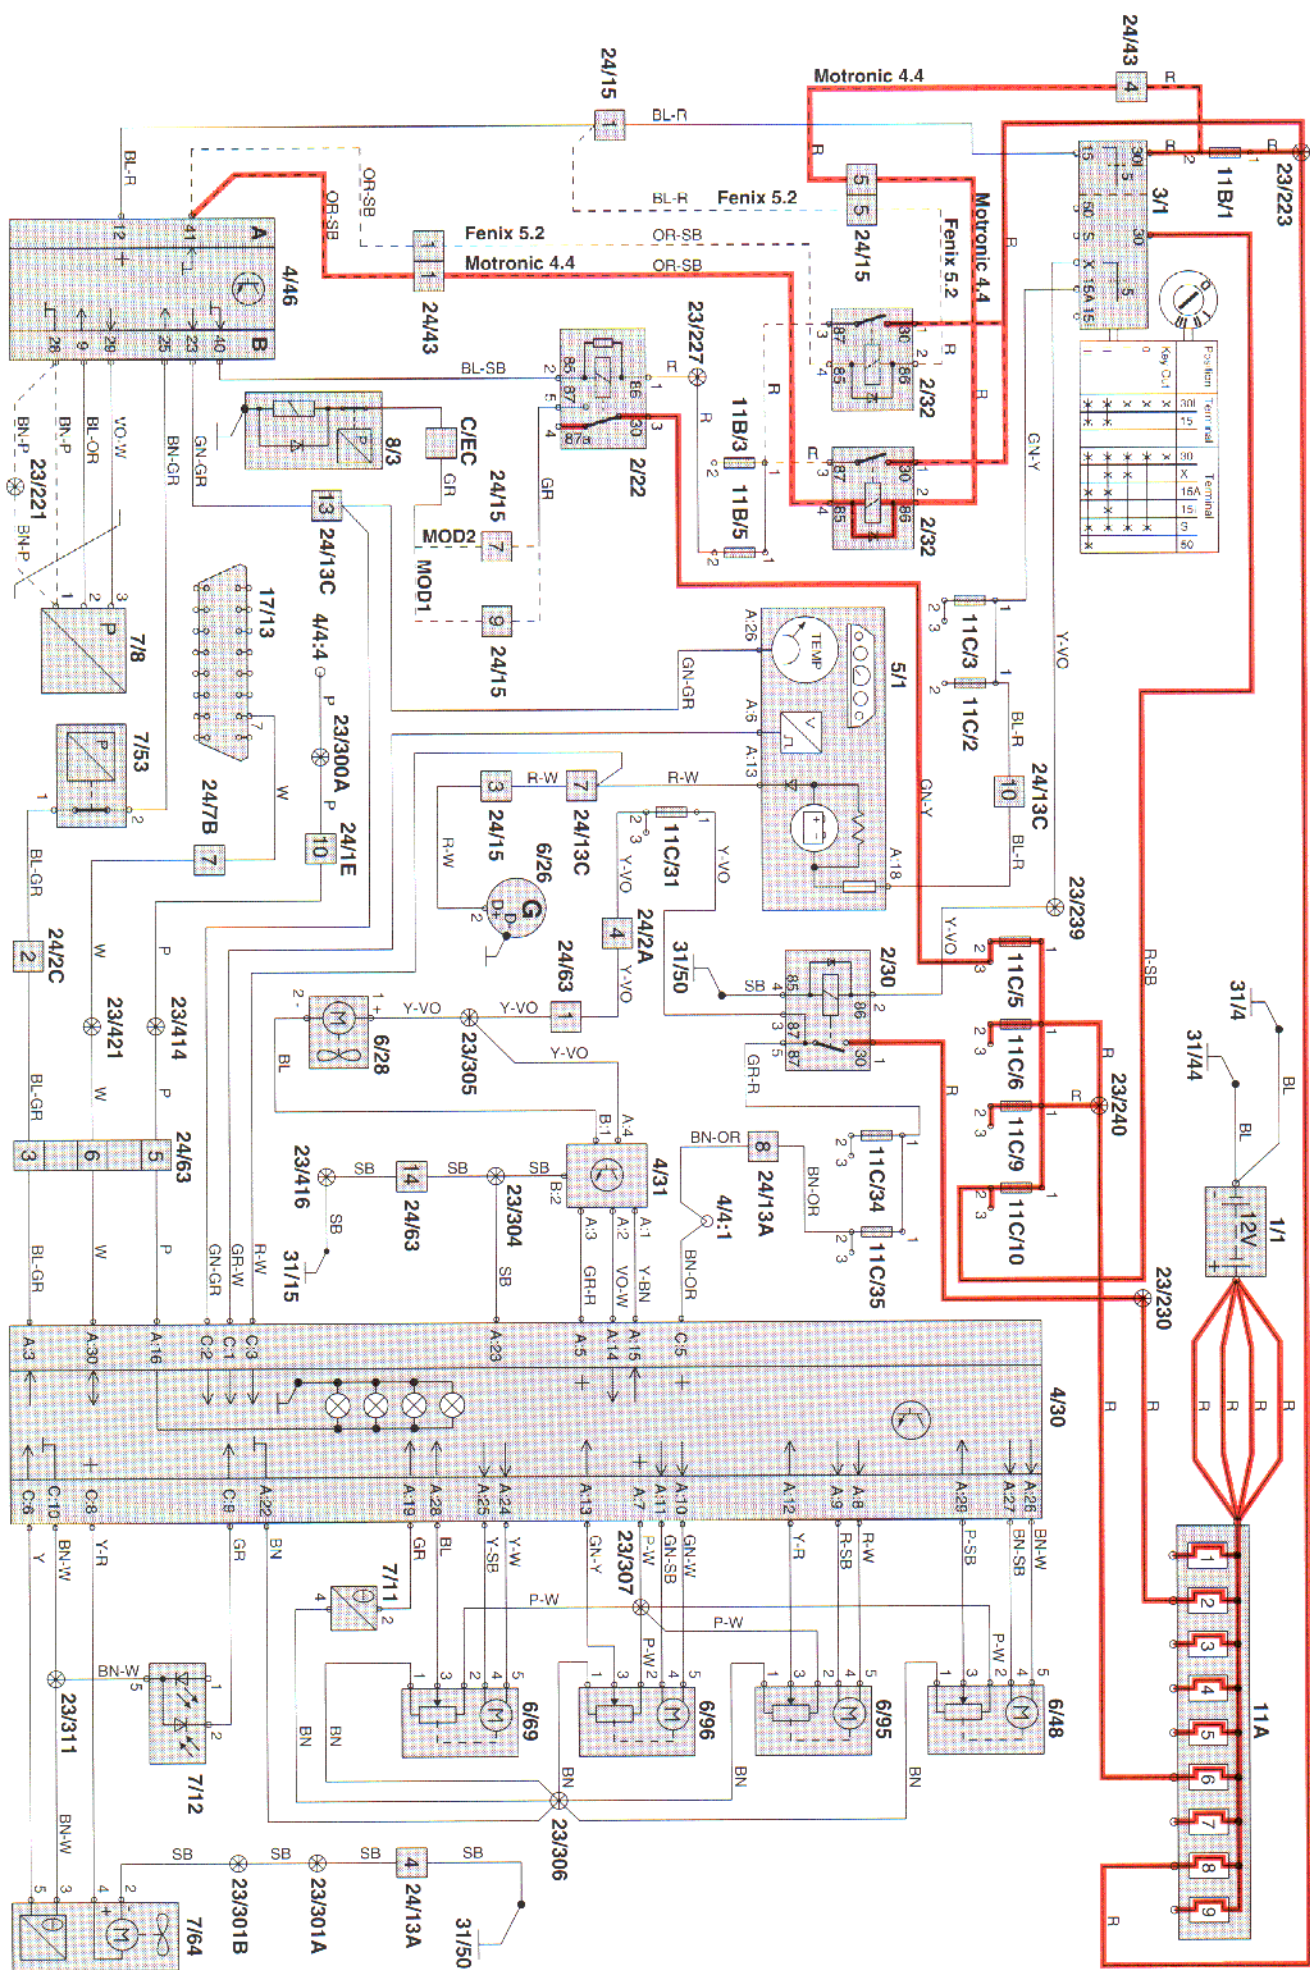


Electronic climate control ECC
MSA 15.7

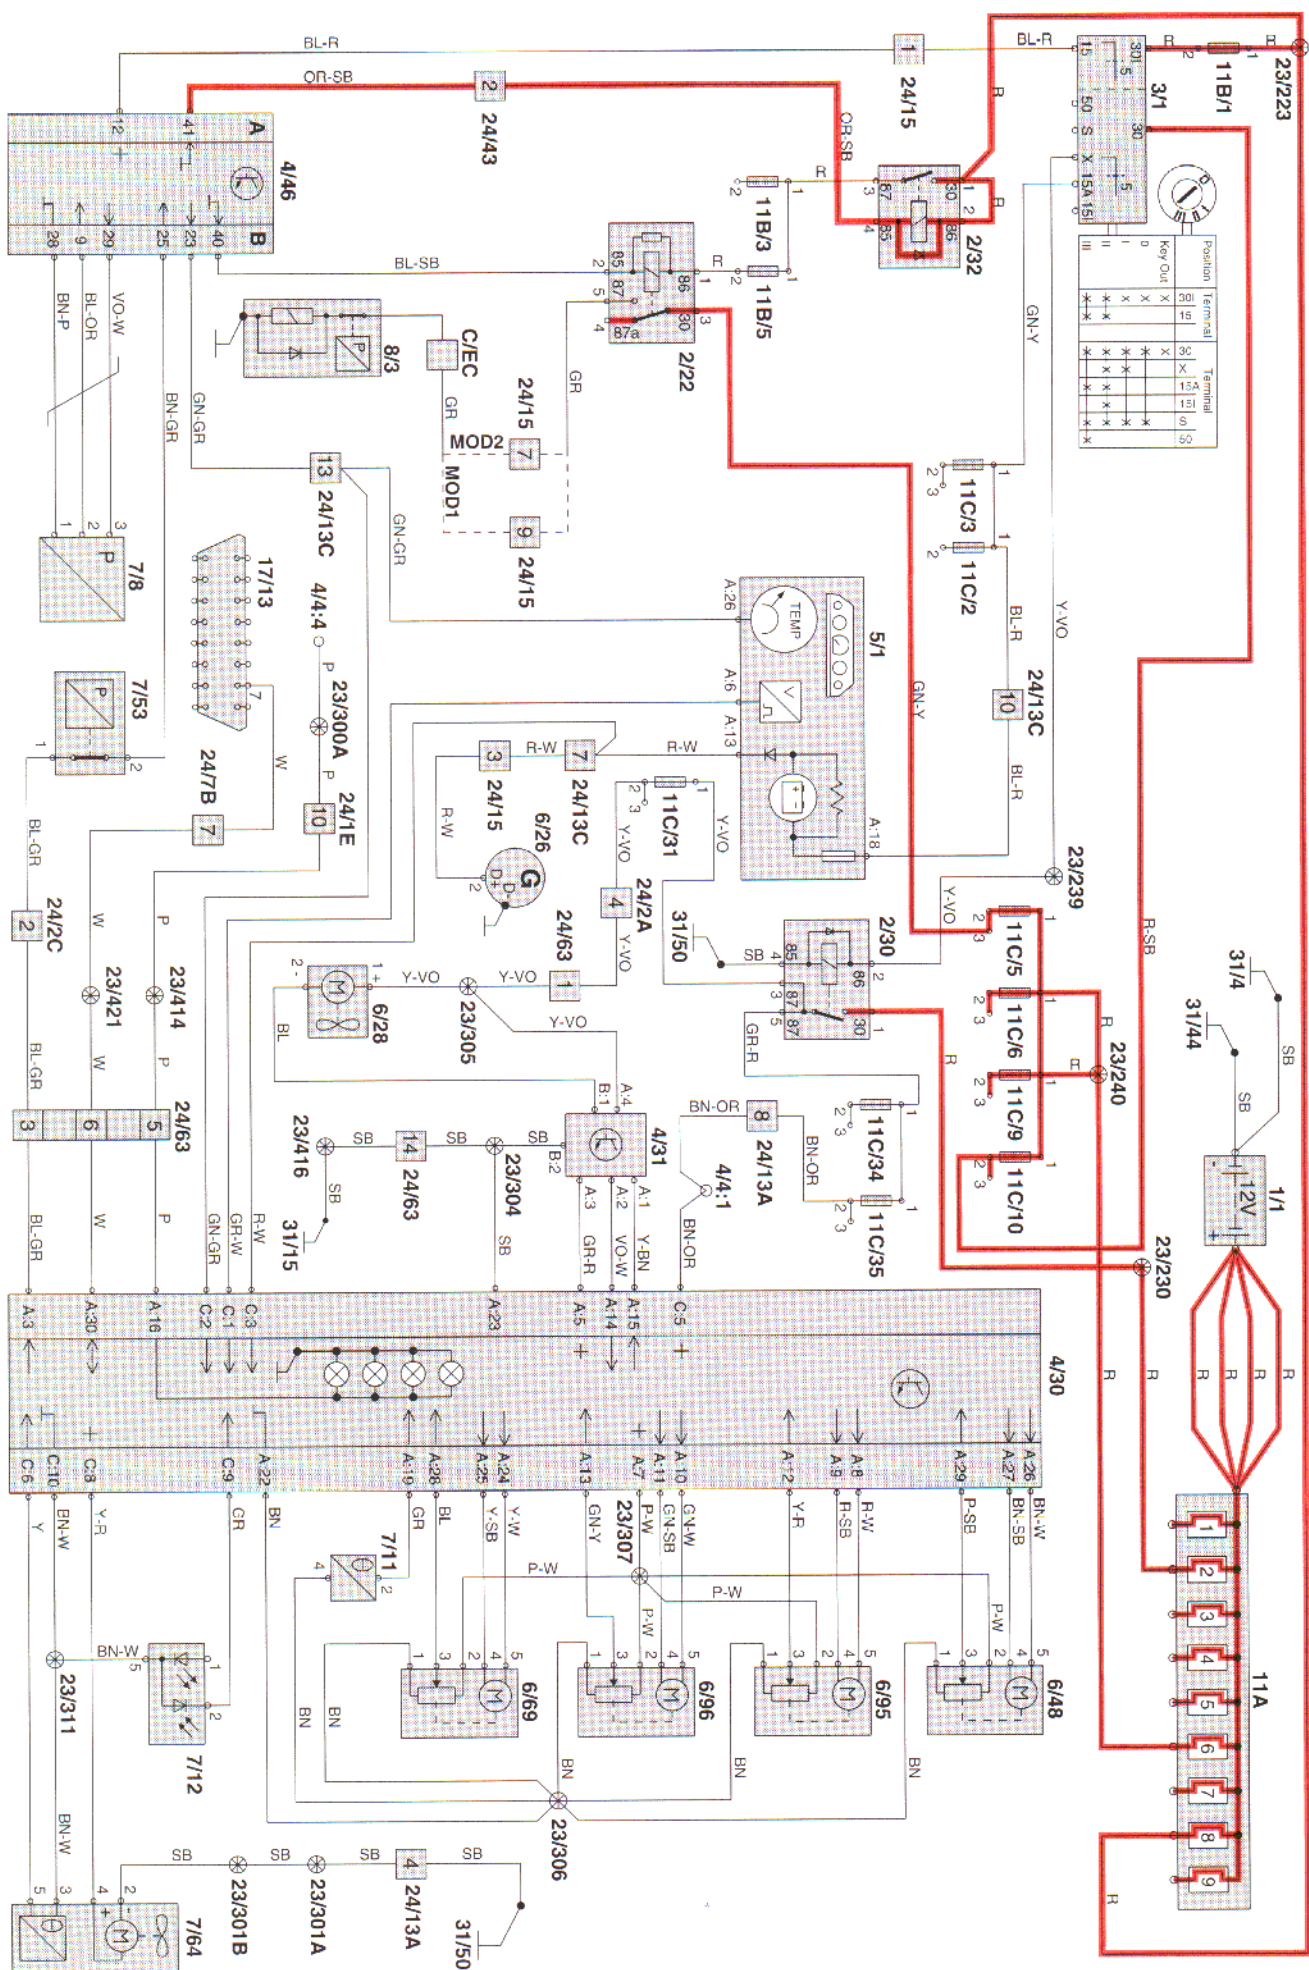


Additional heater

- | | | | |
|---|---|---|----------------------------|
| A | Outside temperature sensor | H | Coolant pump |
| B | Flame sensor | J | Heater fan |
| C | Engine coolant temperature (ECT) sensor | K | Control module |
| D | Ground terminal, glow plugs, | L | Connector on heater, 6-pin |
| E | Glow plugs | M | Clock |
| F | Overheat protection thermostat | | |
| G | Fuel pump (FP) | | |

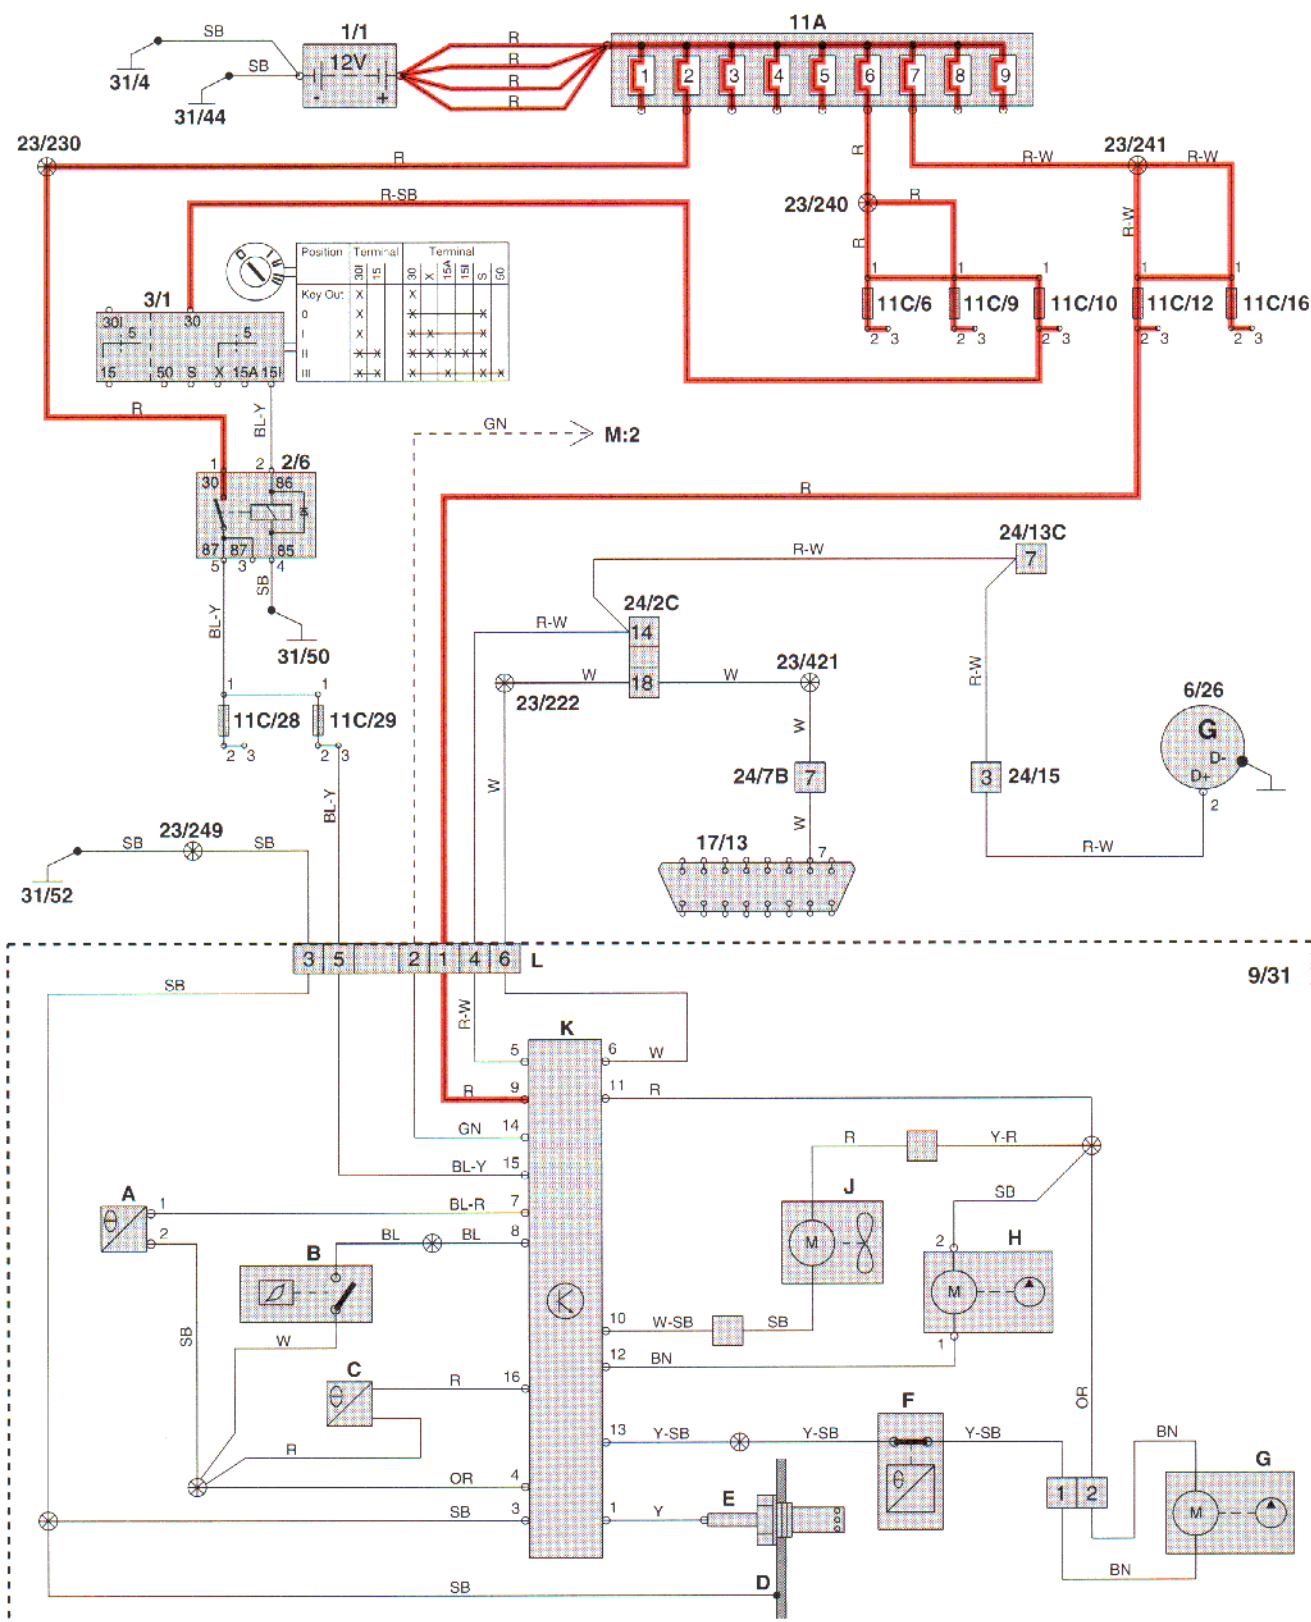


Cargo compartment fans

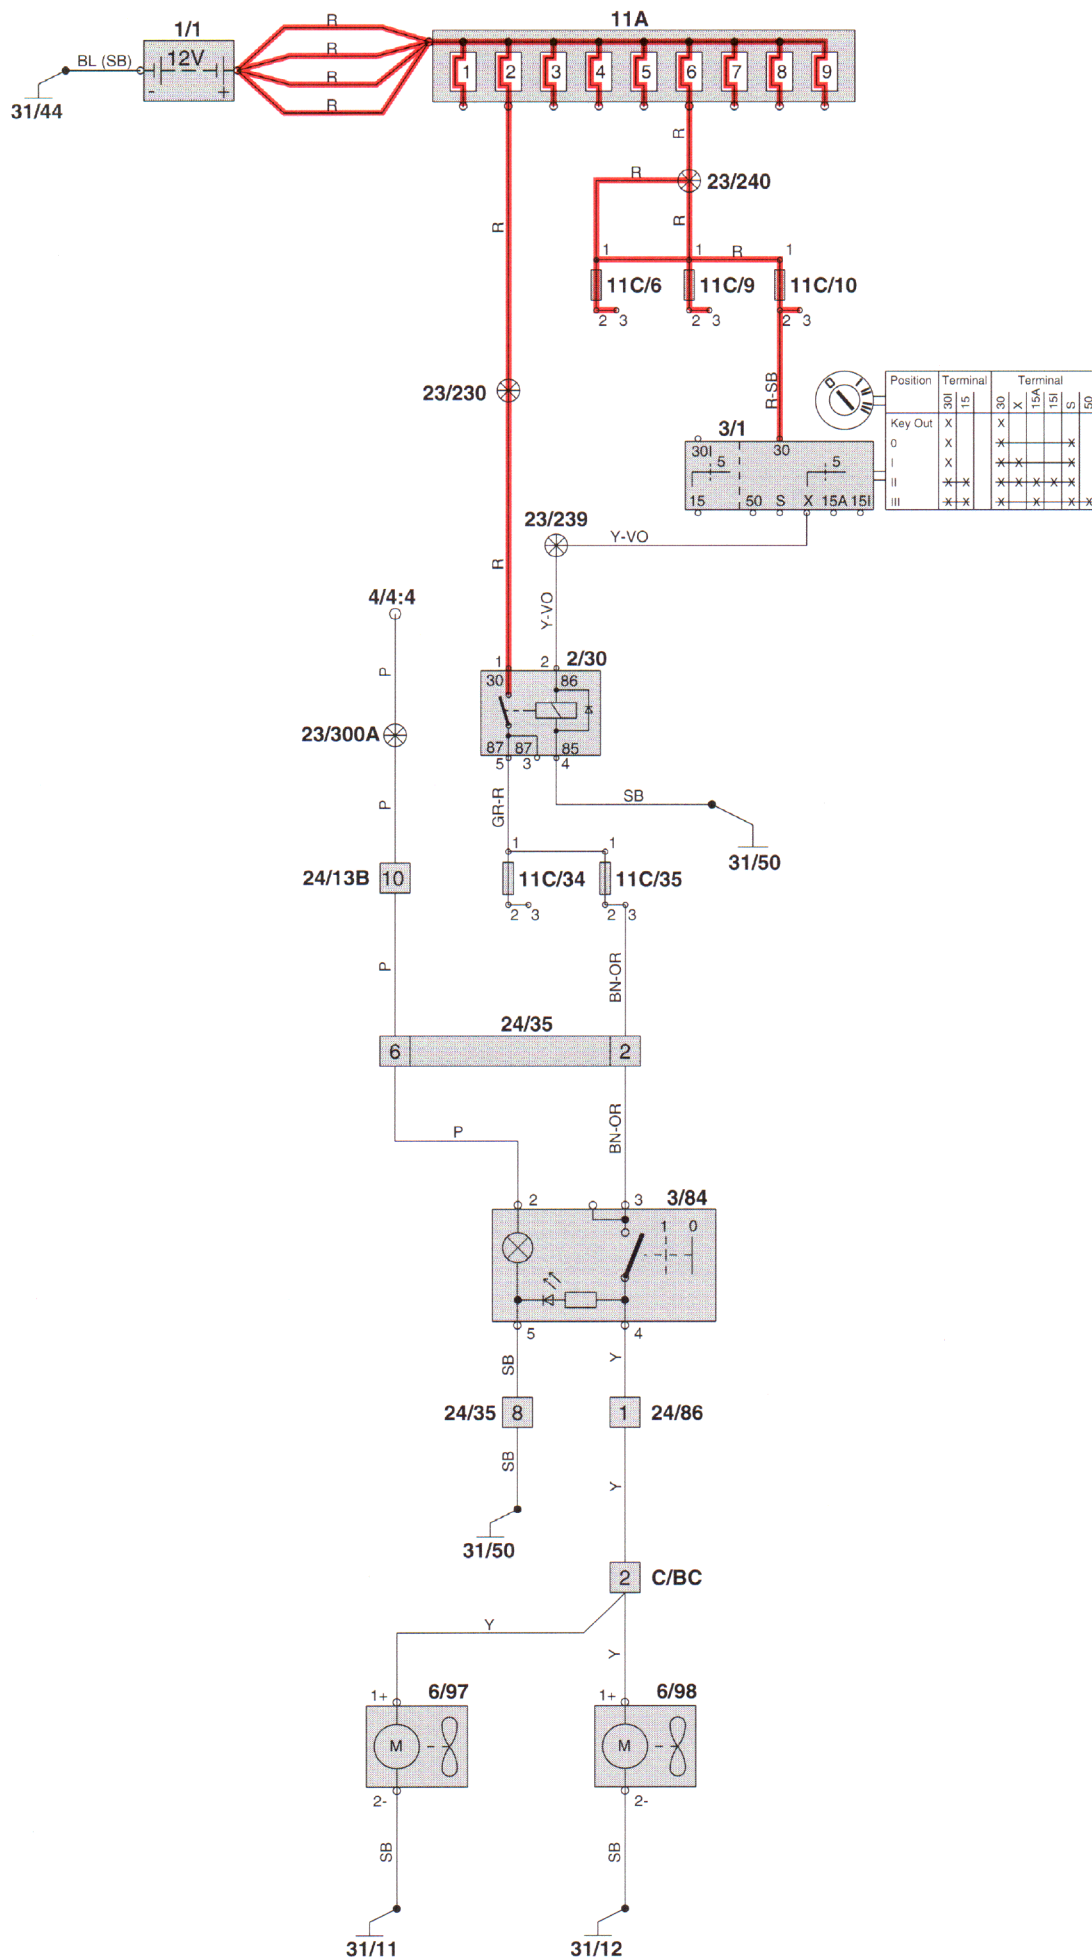


Exhaust temperature switch


For function diagram, see Page 288.

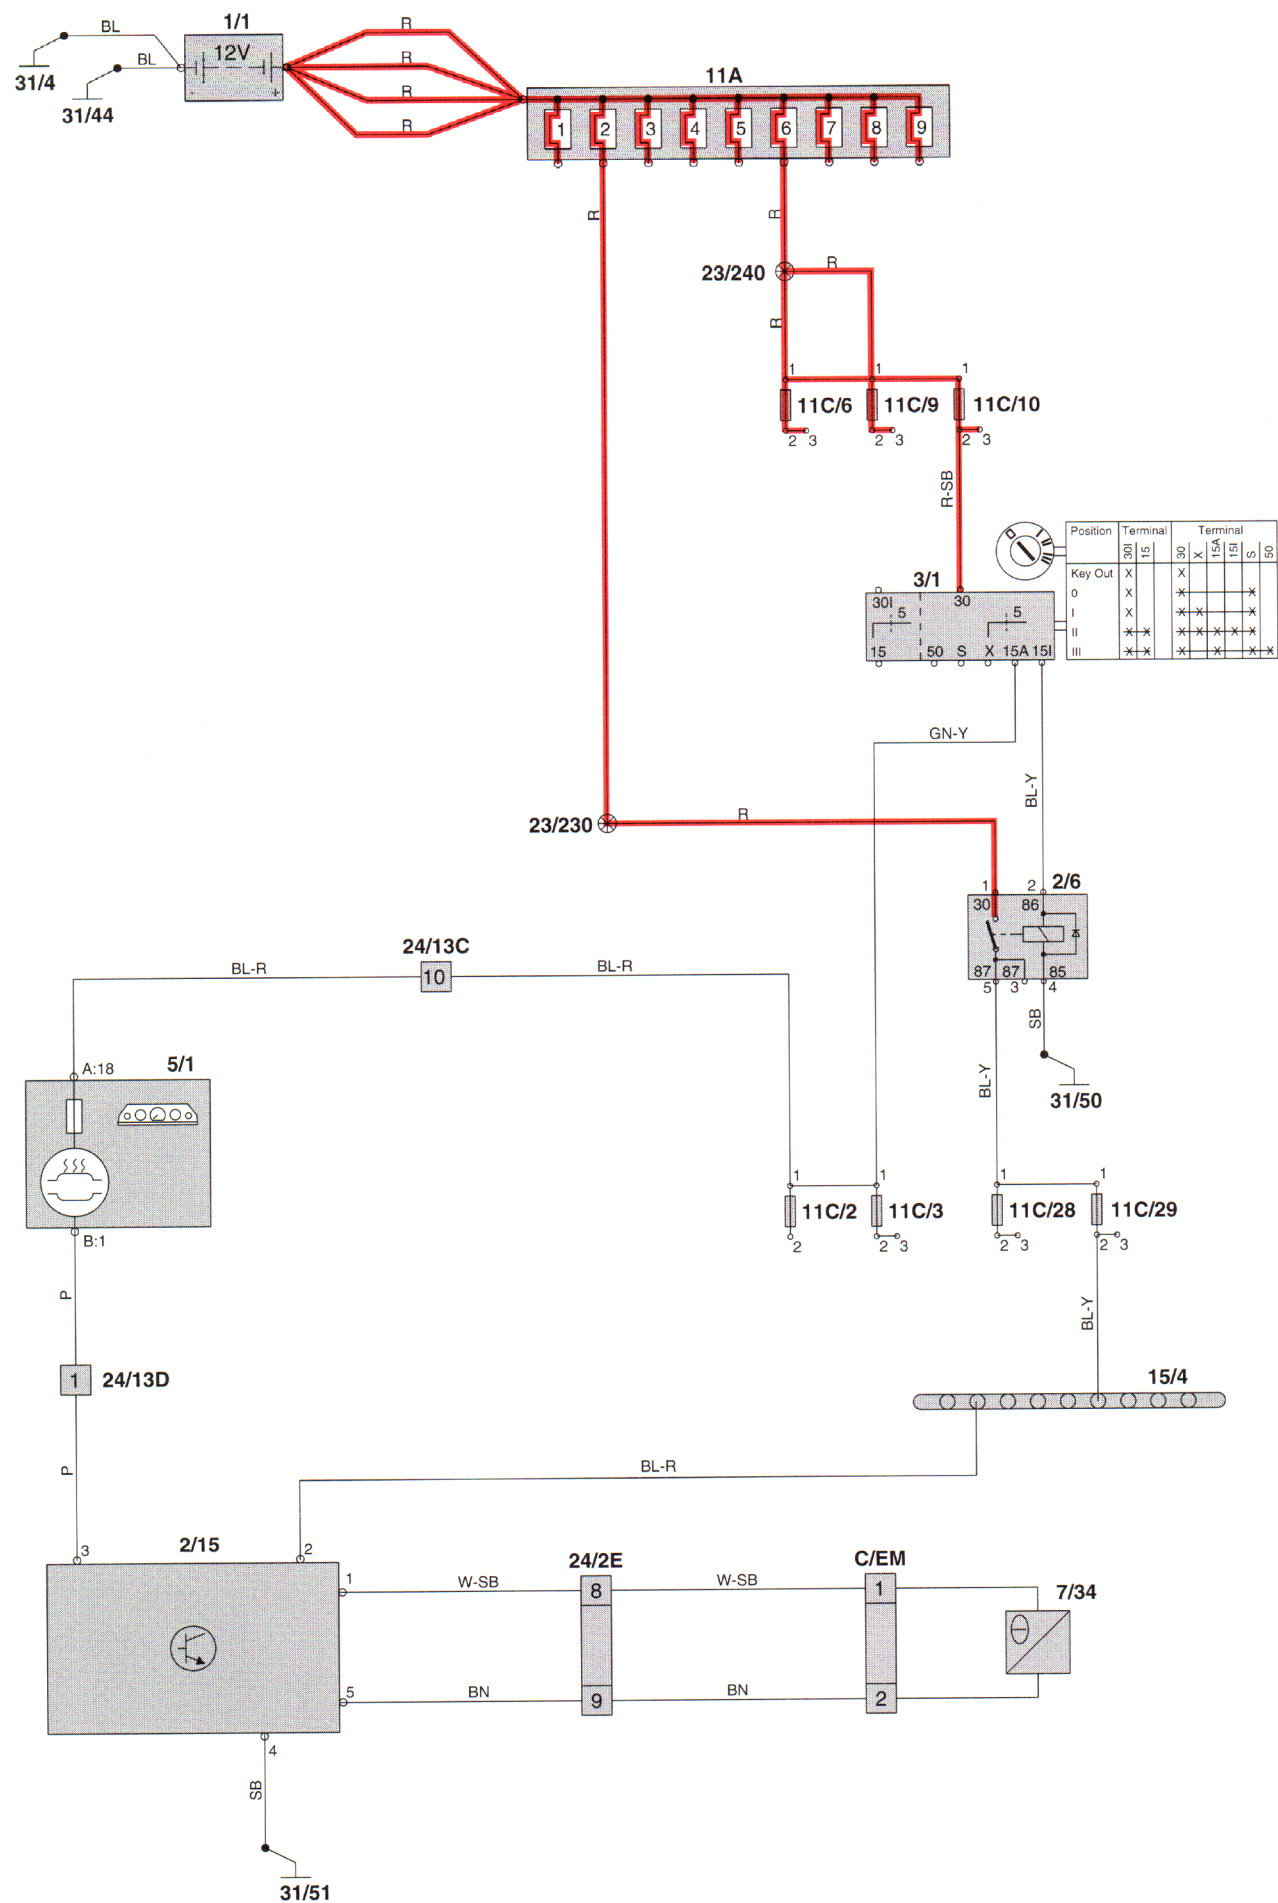

SRS Supplemental Restraint System

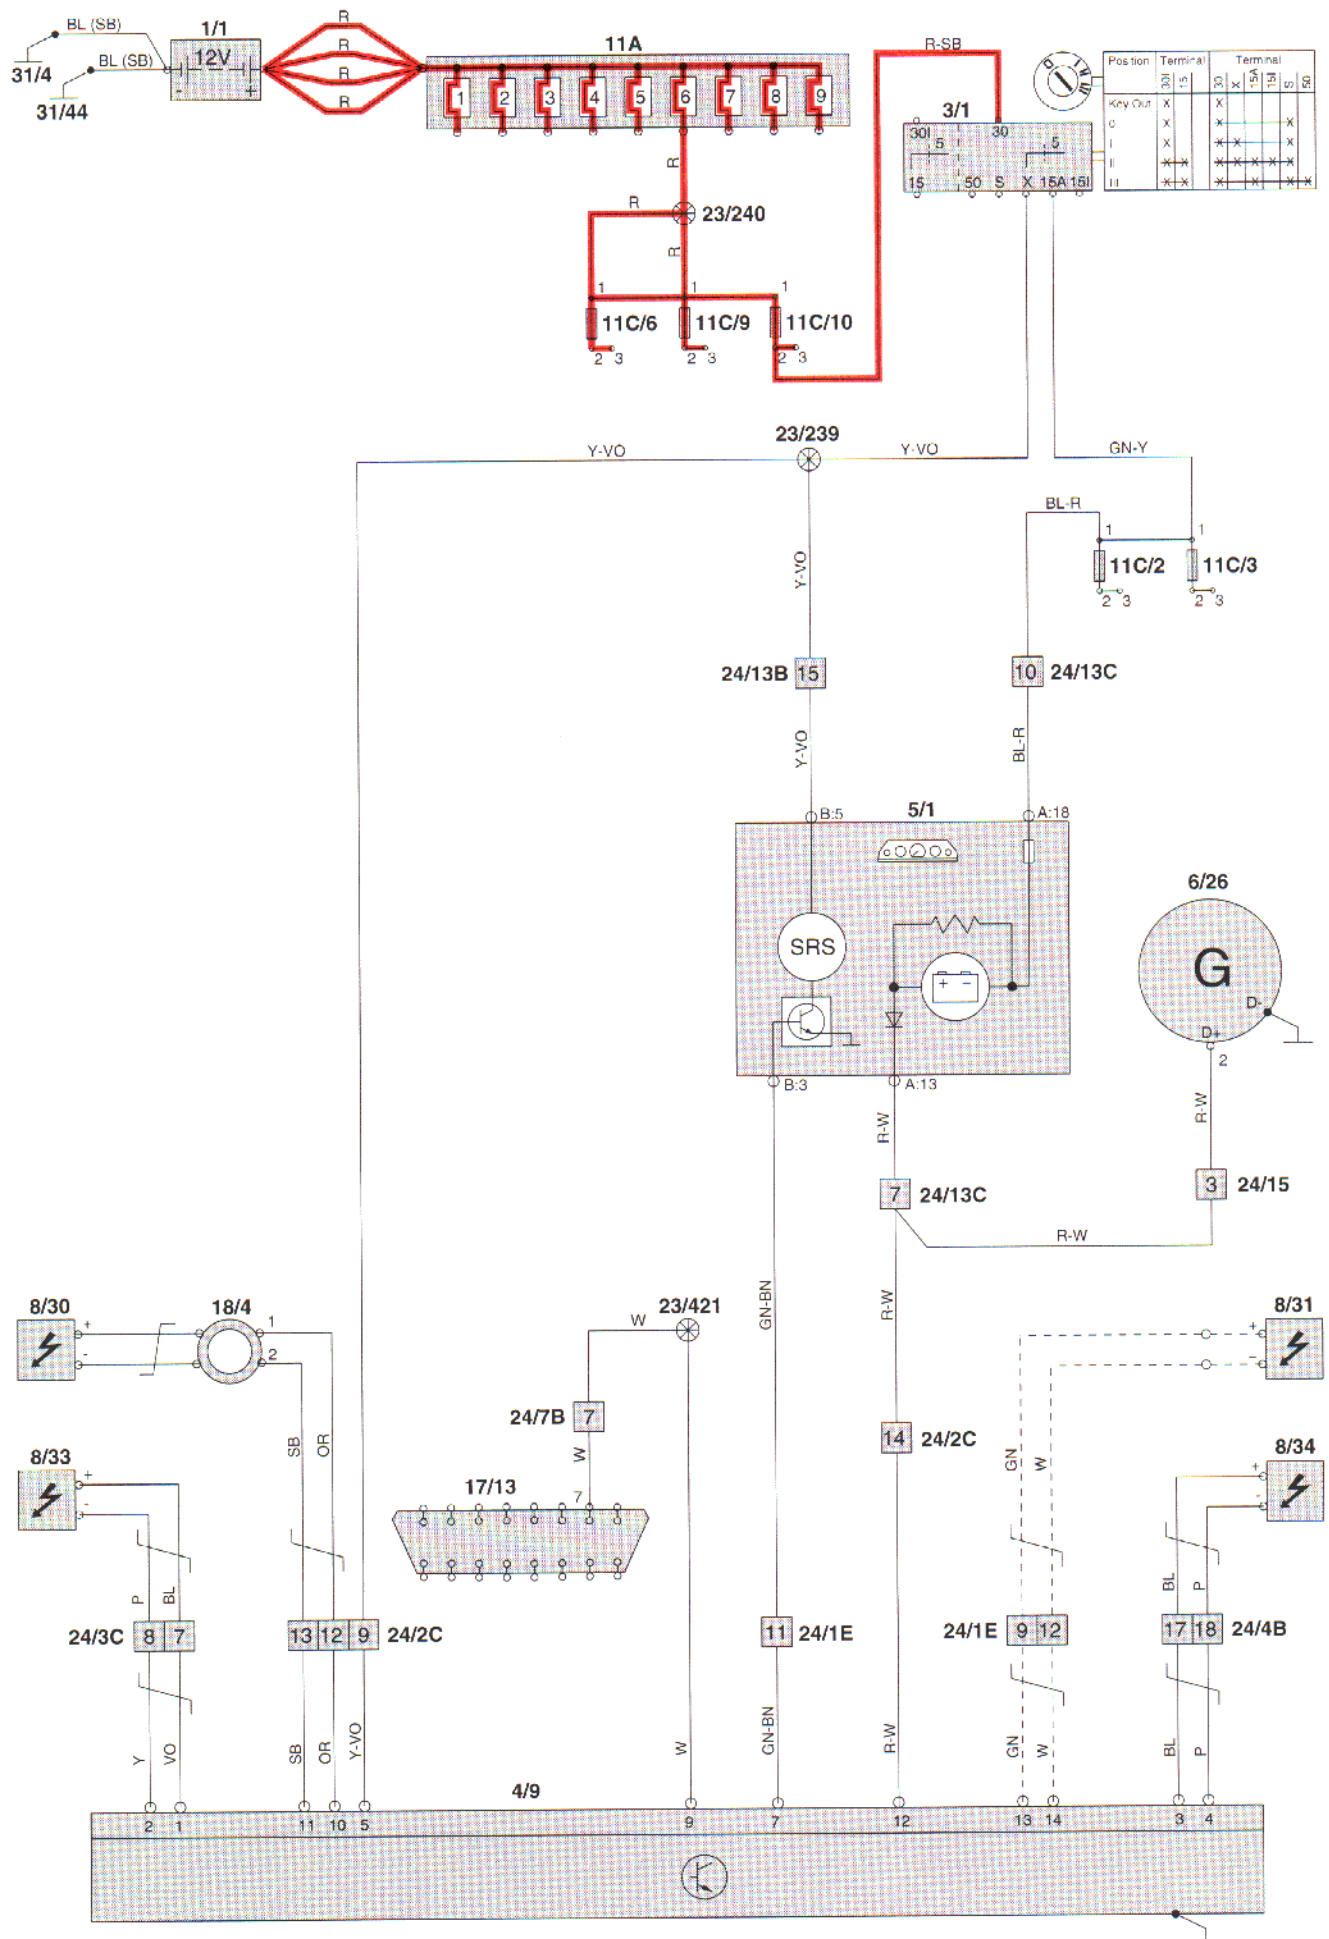


Rear view mirror with automatic dimming

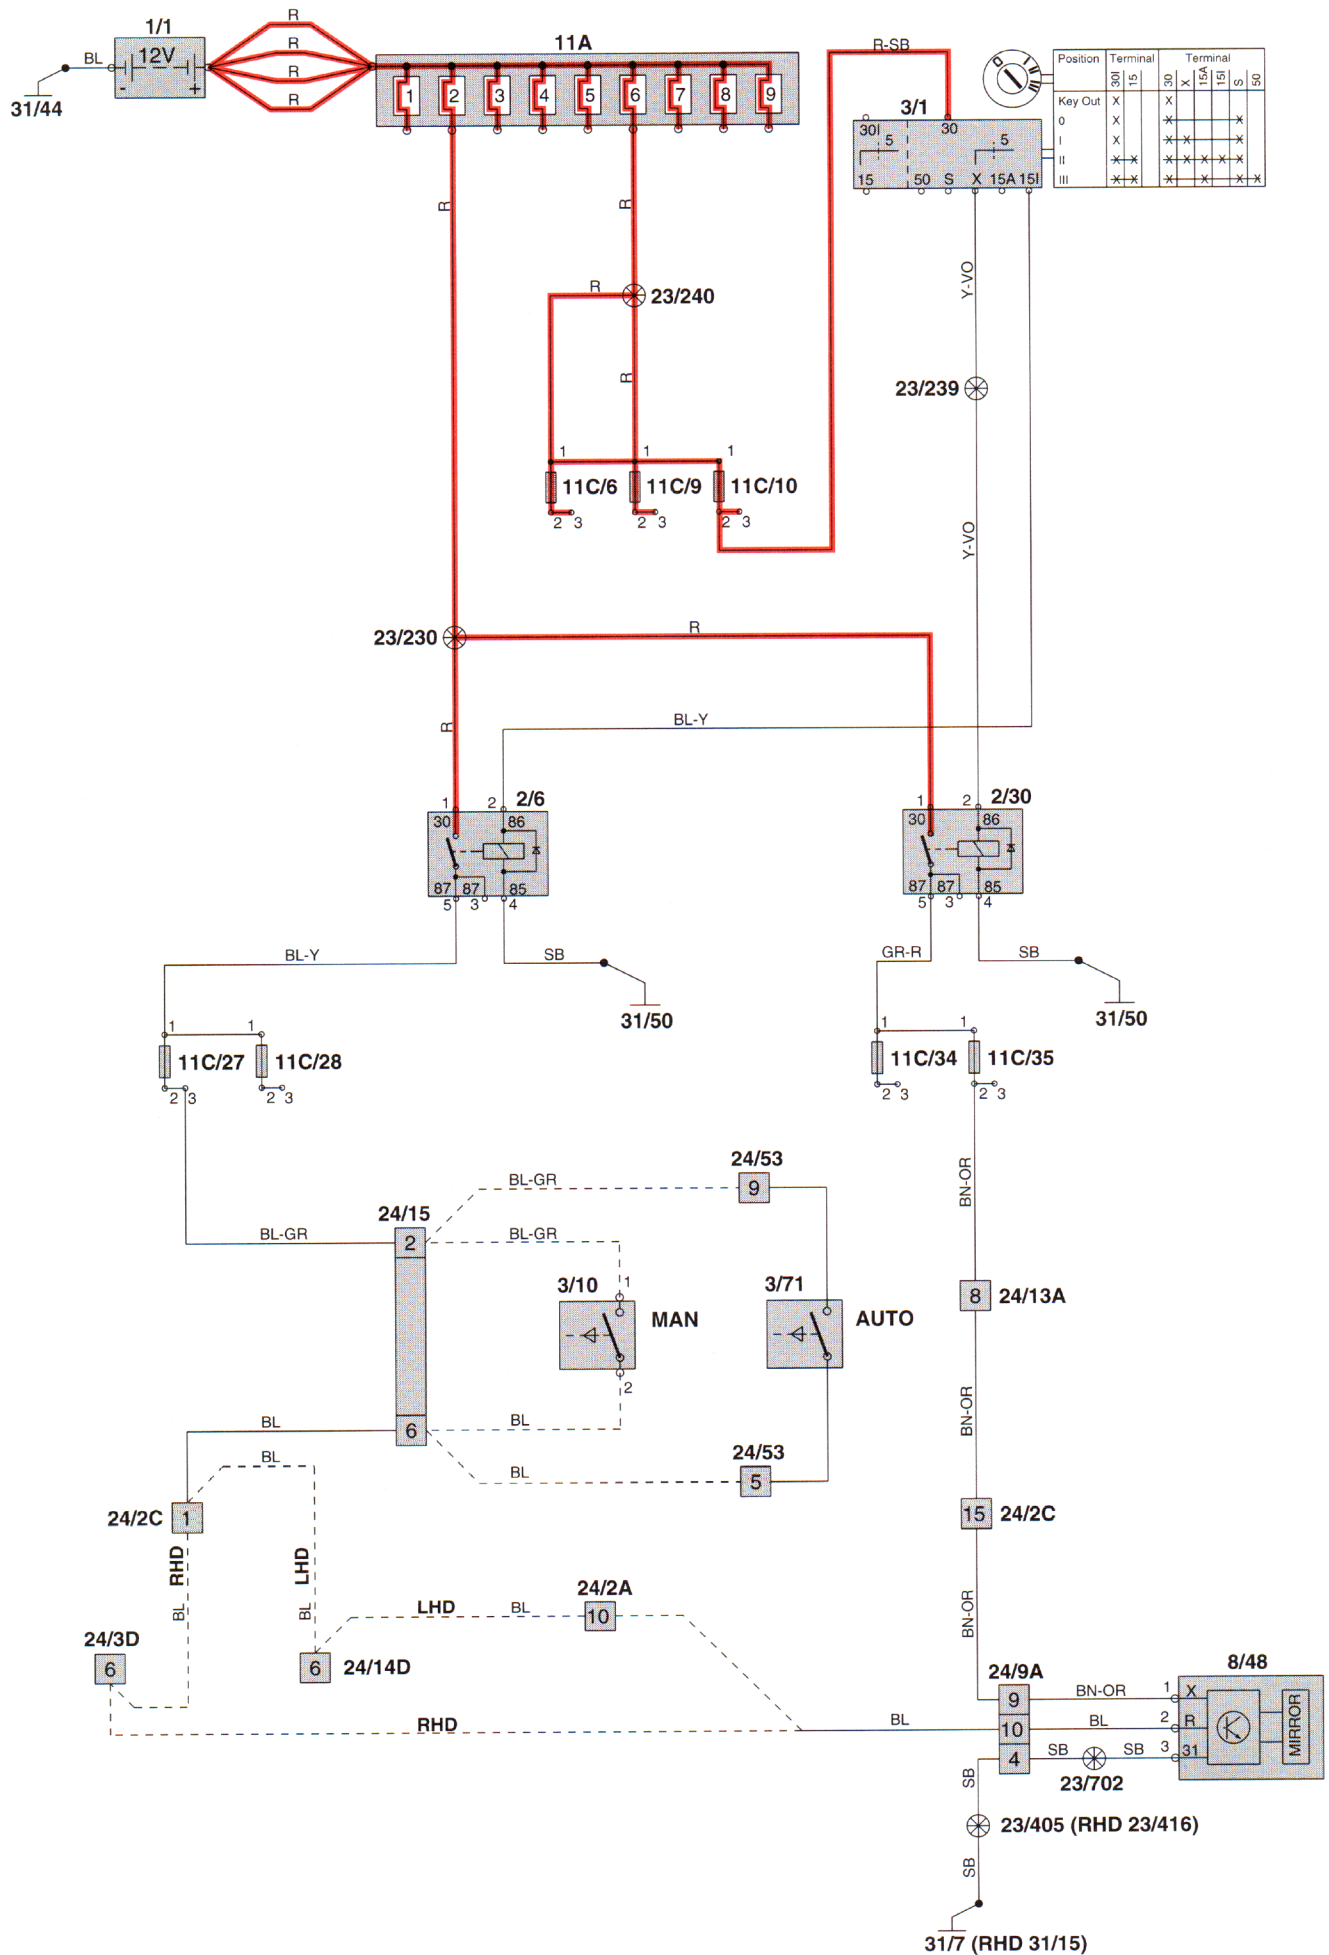

Cruise control Fenix 5.2, Motronic 4.3/4.4

Function diagram

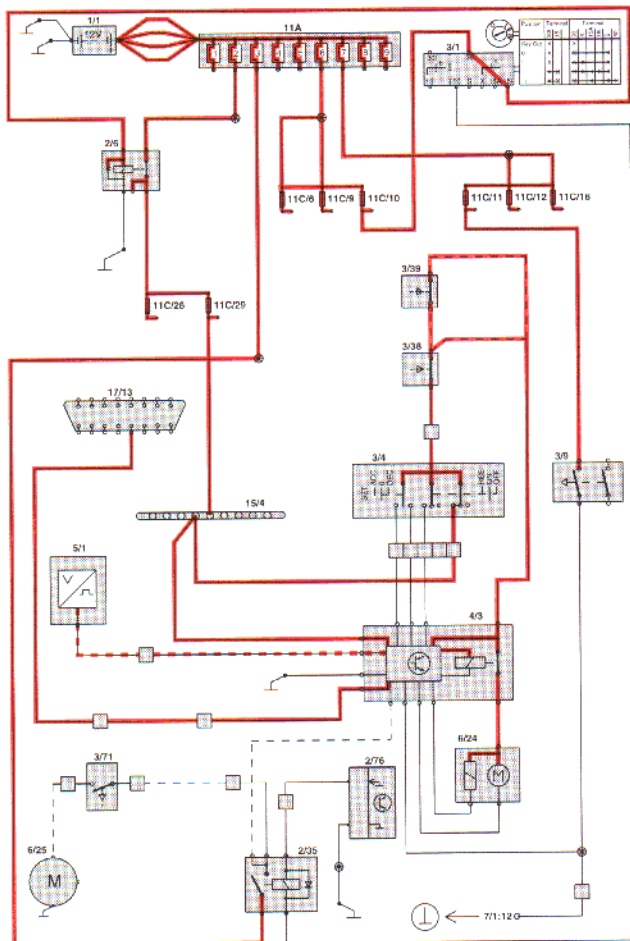


Speed setting.

Switch in the ON position.

SET button depressed for less than 0.5 seconds. Speed above 35 km/h (20 mph) and brake pedal not depressed.

Retaining speed.

Switch in the ON position. Speed above 35 km/h (20 mph) and brake pedal not depressed.

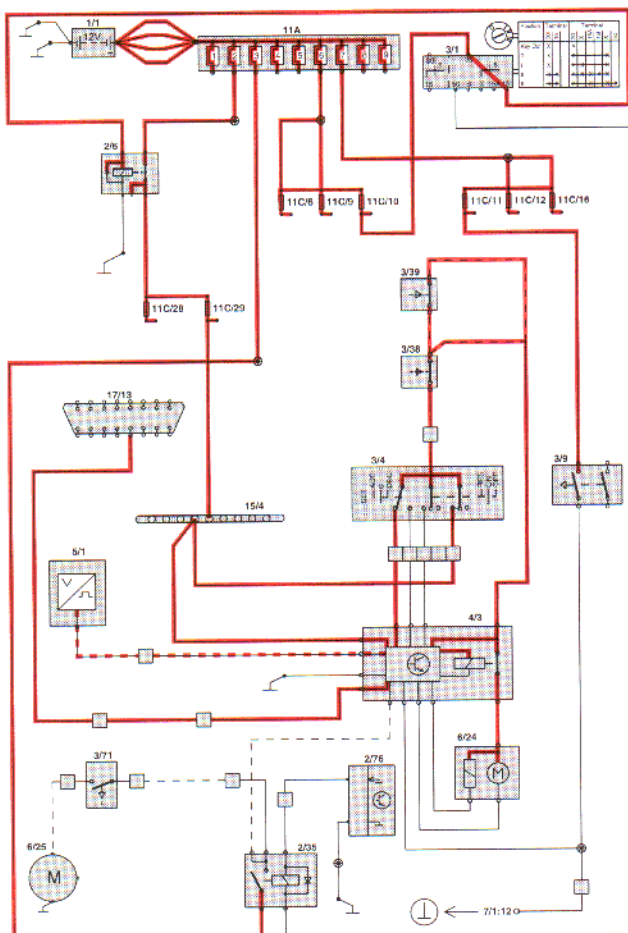

Increasing the set speed.

Switch in the ON position.

Cruise control controls the throttle.

If the SET button is depressed for more than 0.5 seconds the speed will slowly increase until the SET button is released.


If the SET button is depressed for less than 0.5 seconds the speed increases by less than 1.6 km/h (1 mph).

Index


ABS Anti-lock braking system	206	High beam	110, 264
Accessory wiring	166	Horn	144
Additional heater	246	Ignition switch	9
Alarm	152, 154	Ignition system	88, 92
Automatic transmission	200, 202	Immobilizer	156, 158
Back-up (reversing) lamps	130	Instrument lighting	136
Blower fan	236	Junction points	59-77
Cable harnesses	78-87	Key warning	172, 174, 271
Cargo compartment fans	248	License plate lighting	118, 120, 122
Central electrical unit	9	Lighting for controls	136
Central locking	212-223, 282-284	List of components	see end of manual
Cigarette lighter	150	Low beam	110, 264
Climate Control unit	238-245	MCC	238, 240
Combined instrument panel	176-181	Motronic 4.3/4.4	92
Connectors	26-58	MSA 15.7	96
Cool box wiring	168	On-board diagnostic system (OBD system)	160, 162
Courtesy lighting	132, 134	Parking light	118, 120, 122
Cruise control	104, 106, 256-261	Power door mirrors	228, 287
ECC	242, 244	Power seats	234
Electrical distribution	20, 22, 24	Power sunroof	224, 285
Electrically heated seats	230	Power supply	108, 262
Electronic park/neutral position (PNP) switch	156, 158	Power windows	208, 210, 273
Engine cooling fan (FC)	100, 102	Radio	182-195
Engine management system	96	Rear view mirror	254
Exhaust temperature switch	250, 288	Relays	10
Feedback	last page of this manual	RTI Road Traffic Information	196, 198
Fenix 5.2	88	Seat belt reminder	170, 172, 174, 270
Fog lamps	114, 116, 265	Shift lock	204, 272
Fuel injection system	88, 92	SRS Supplemental Restraint System	252
Function diagrams	256-288	Standard heater	236
Fuses	6-8	Starter system	108, 263
Ground points	12-19	Stop (brake) lights	124, 126, 128
Hazard warning signal flashers	138, 140, 142, 266	Tail lamps	118, 120, 122
Headlamp range adjustment	112	Tailgate wash/wipe	148, 269
Headlamp washers	146, 267	Tow hitch cable harness	164
Heated door mirrors	226, 286	TRACS	206
Heated rear seat	232	Turn signal indicator	138, 140, 142, 266
Heated rear window	226, 286	Windshield washers	146, 267

Central locking, C70 Function diagrams

Unlocking with key at driver's door.

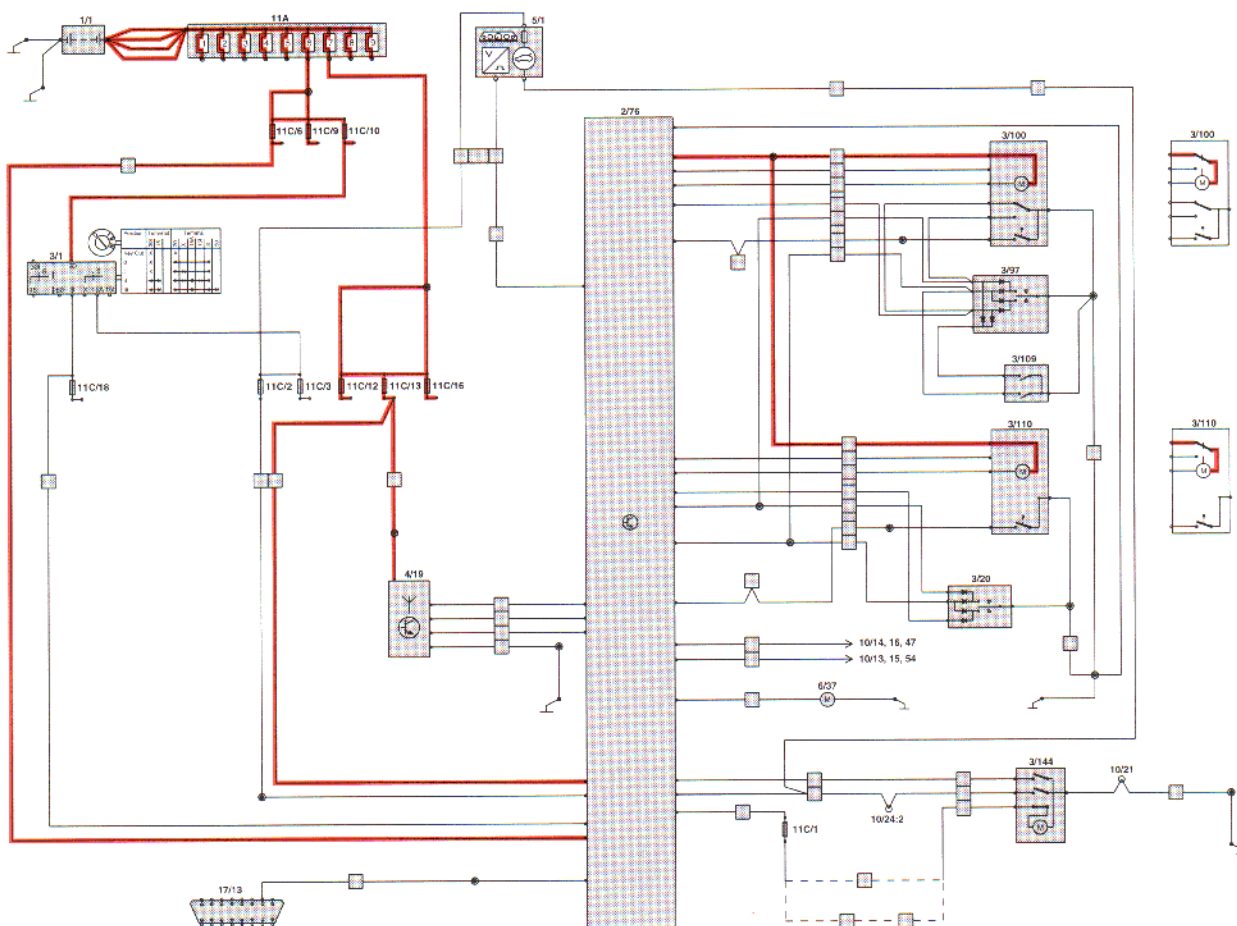

Locking with key at driver's door.

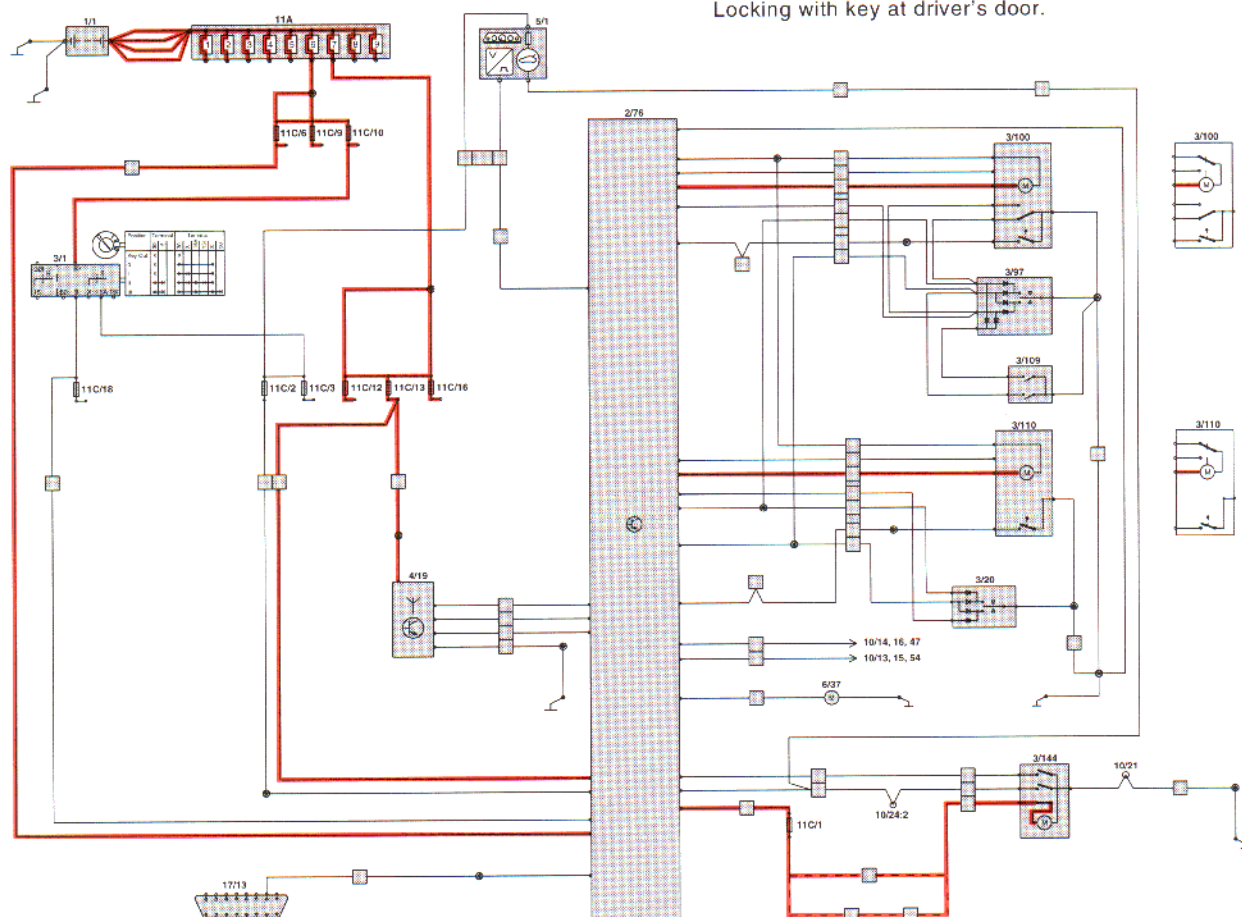

Component list

1/1	Battery	3/94	Seat belt lock, right front seat	4
2/1	Main headlamp relay with bulb failure warning sensor	3/95	TRACS switch	4
2/2	Fog lamp relay	3/97	Power window switch driver's door	9
2/4	Relay, windshield intermittent wiper	3/99	Switch front fog lamps	2
2/5	Relay, seat belt reminder/key warning	3/100	Lock unit driver's door	8
2/6	Overload relay 15l-supply	3/109	Trunk lid/fuel tank filler cover switch	6
2/11	Relay engine coolant fan (FC)	3/110	Lock unit passenger door	7
2/14	Glow plug relay	3/144	Lock unit tailgate	1
2/15	Relay exhaust temperature switch	3/167	Upper contact breaker left backrest	2
2/16	Intermittent tailgate wiper relay	3/168	Upper contact breaker right backrest	5
2/22	A/C relay	3/169	Lower contact breaker left backrest	11
2/23	Fuel pump relay	3/170	Lower contact breaker right backrest	4
2/30	Overload relay X-supply	4/3	Control module, cruise control	3
2/32	Fuel system main relay	4/4	Rheostat	2
2/35	Starter motor relay	4/9	SRS Supplemental Restraint System Crash Sensor	3
2/43	Relay, heated rear seat	4/16	ABS control module	3
2/44	Relay, heated rear window/door mirrors	4/19	Remote control unit central locking/alarm	2
2/53	Relay, pulsed secondary air injection system (PAIR) pump	4/22	Electronic start inhibitor (Immobilizer)	2
2/54	Relay 30-supply cargo compartment	4/28	Control module AW 50-42	2
2/56	Heated seat relay front left	4/29	Control module left front seat	7
2/57	Heated seat relay front right	4/30	ECC climate control module	1
2/74	Relay heating plugs coolant	4/31	Power unit blower fan	5
2/76	Central locking/anti theft alarm (lock/alarm) control module	4/33	Control module power sunroof	2
2/77	Relay alarm horn	4/37	Control module right front seat	3
3/1	Ignition switch	4/44	Ignition discharge module (IDM) and ignition coil	3
3/2	Light switch	4/46	Engine control module (ECM)	5
3/3	Turn indicator/ DIM-DIP switch	5/1	Combined instrument panel	1
3/4	Control cruise control	6/1	Windshield wiper motor	1
3/6	Switch, hazard flasher with flasher relay	6/2	Washer motor front	1
3/8	Switch, heated rear window/door mirrors	6/3	Right headlamp wiper motor	1
3/9	Stop (brake) lamp switch	6/4	Left headlamp wiper motor	1
3/10	Back-up (reversing) lamps switch	6/9	Power window motor driver's door	1
3/12	Windshield wash/wipe switch	6/11	Power window motor passenger door front	1
3/13	Tailgate wipe/ -washer switch	6/13	Driver's side power door mirror	1
3/20	Power window switch front passenger door	6/14	Passenger side power door mirror	1
3/25	Switch power sunroof	6/15	Sunroof motor	1
3/35	Tailgate handle switch	6/24	Vacuum pump, cruise control	1
3/37	Horn switches	6/25	Starter motor	1
3/38	Brake pedal switch	6/26	Generator	1
3/39	Clutch pedal switch	6/28	Blower fan	1
3/41	Power door mirrors switch	6/29	Engine coolant fan (FC)	1
3/47	Handbrake switch	6/30	Washer motor rear windshield	1
3/57	Climate control system	6/31	Fuel pump (FP)/Fuel injection pump	1
3/58	Switch rear foglamp	6/32	Tailgate wiper motor	1
3/59	Beam height control	6/33	Fuel level sensor	1
3/61	Trip computer control	6/33L	Fuel level sensor left	1
3/62	Alarm switch in bonnet	6/33R	Fuel level sensor right	1
3/63	Mode selector AW 50-42	6/34	Power antenna	1
3/65	Switch, heated rear seat	6/37	Central locking motor	1
3/71	Gear position sensor	6/38	Headlamp height adjustment motor left	1
3/72	Kickdown switch (KD) throttle mechanism	6/39	Headlamp height adjustment motor right	1
3/76	Lock unit left rear	6/48	Servo motor recirculation shutter	1
3/77	Lock unit right rear	6/50	Backrest motor left seat	1
3/78	Lock unit tailgate	6/51	Motor, up/down front edge of left front seat	1
3/84	Cargo compartment fans switch	6/52	Motor, up/down rear edge of left front seat	1
3/85	Power window switch left rear door	6/53	Motor, backward-forwards left front seat	1
3/86	Power window switch right rear door	6/54	Pulsed secondary air injection system (PAIR) pump	1
3/89	Control unit left seat	6/59	Power window motor left rear door	1
3/91	Heated seat switch front left	6/61	Power window motor right rear door	1
3/92	Heated seat switch front right			
3/93	Seat belt lock, left front seat			

Comments

To
VOLVO CAR CORPORATION
Technical Service
Dept. 91310 SAA1
S-405 08 GOTHENBURG
Sweden
Telefax +46 31 59 23 53

From
.....
.....
.....

Publication:.....
.....


Section:..... Page..... TP No.....

Suggestion/Reason:
.....
.....
.....
.....
.....
.....
.....


Date.....
.....

If you have any suggestions or comments about this manual make a copy of this page, write down your comments and send to us.

Exhaust temperature switch Function diagrams

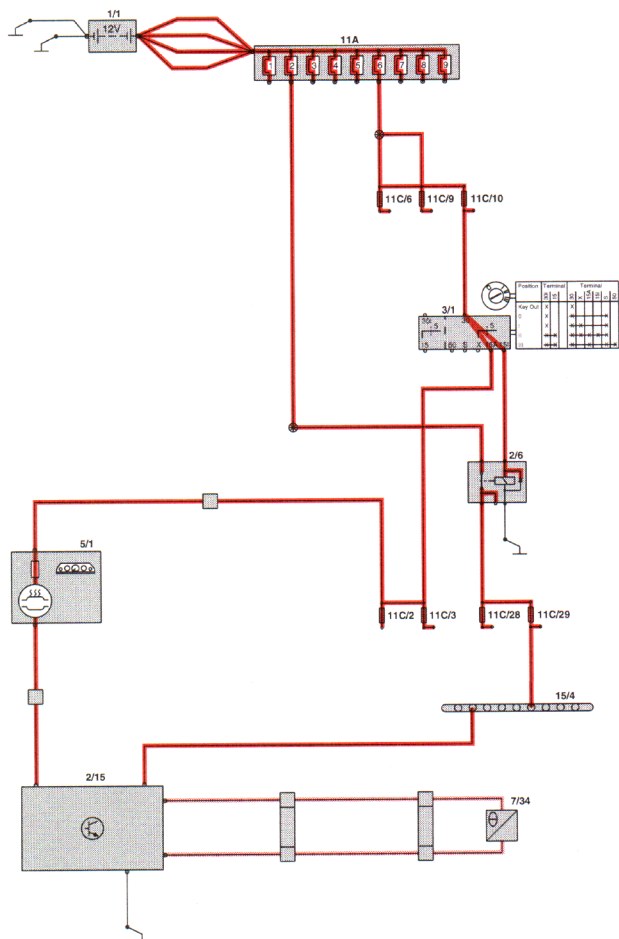

Exhaust temperature under 850°C.

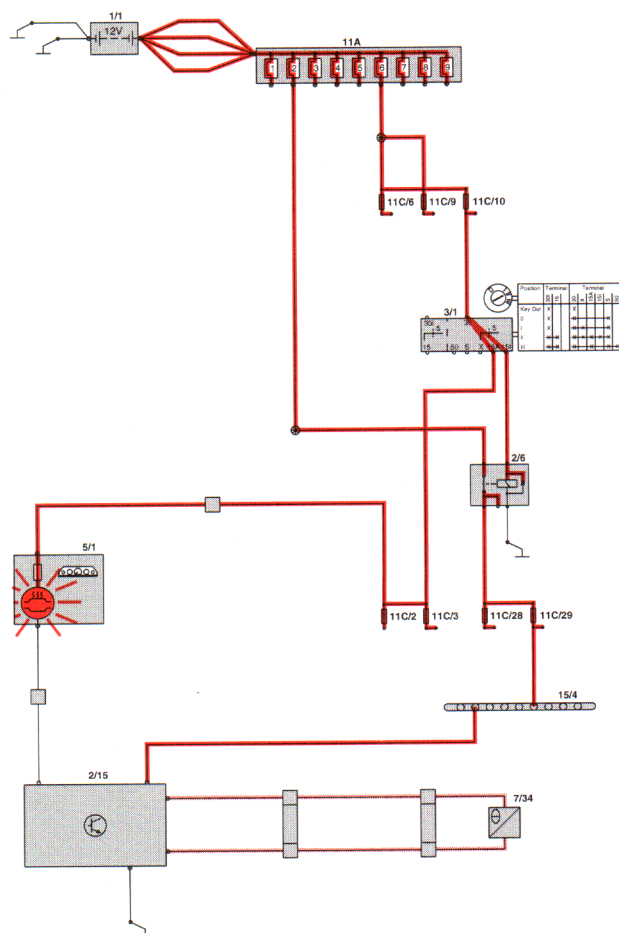




Exhaust temperature over 850°C.

Fog lamps

Function diagram






Turn signal lamp and hazard warning signal flasher Function diagram

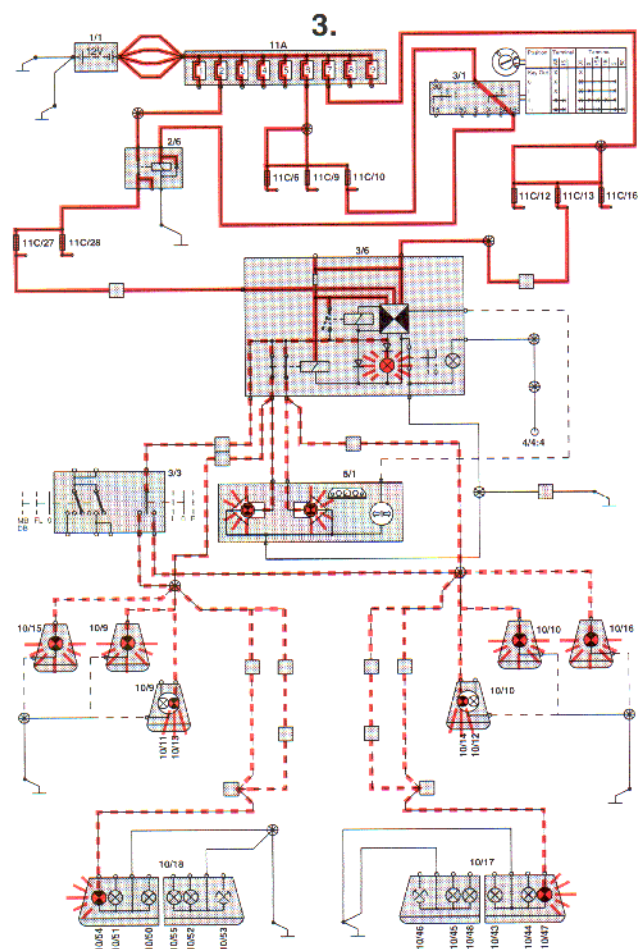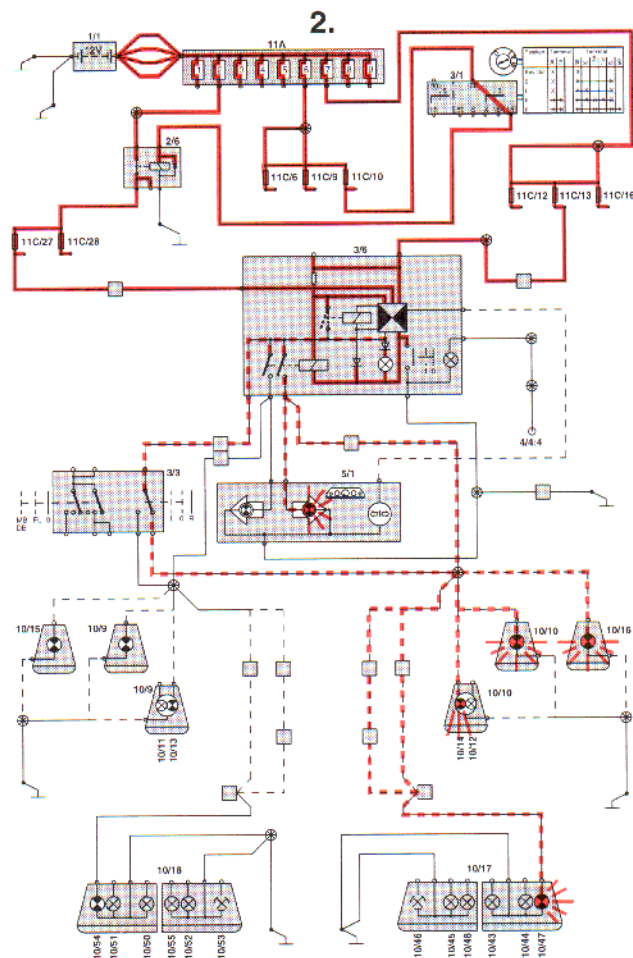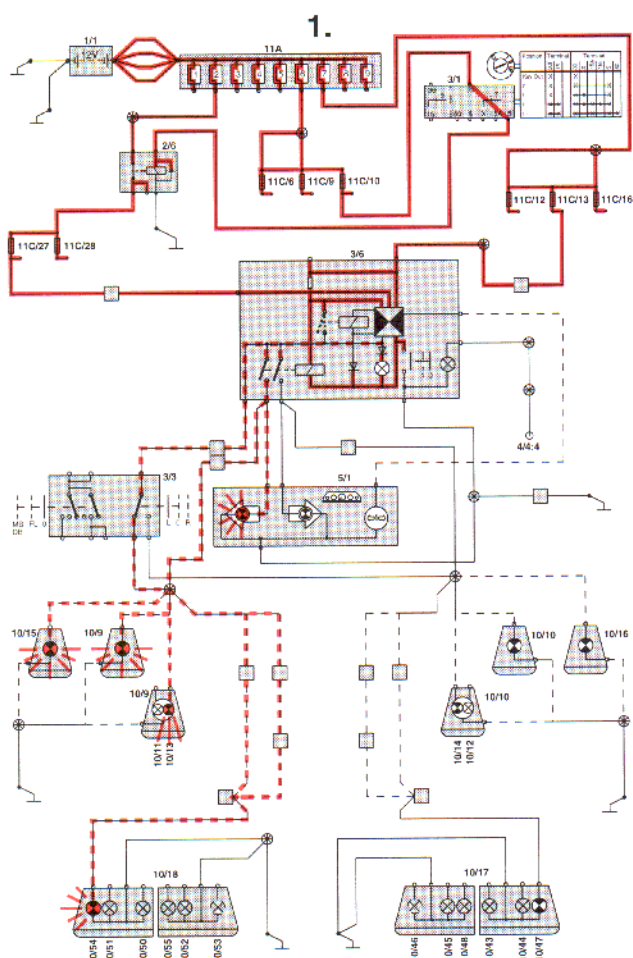

Ignition on.

1. Left turn signal connected
2. Right turn signal connected
3. Hazard lights connected


Windshield and headlight wash/wipe Function diagram

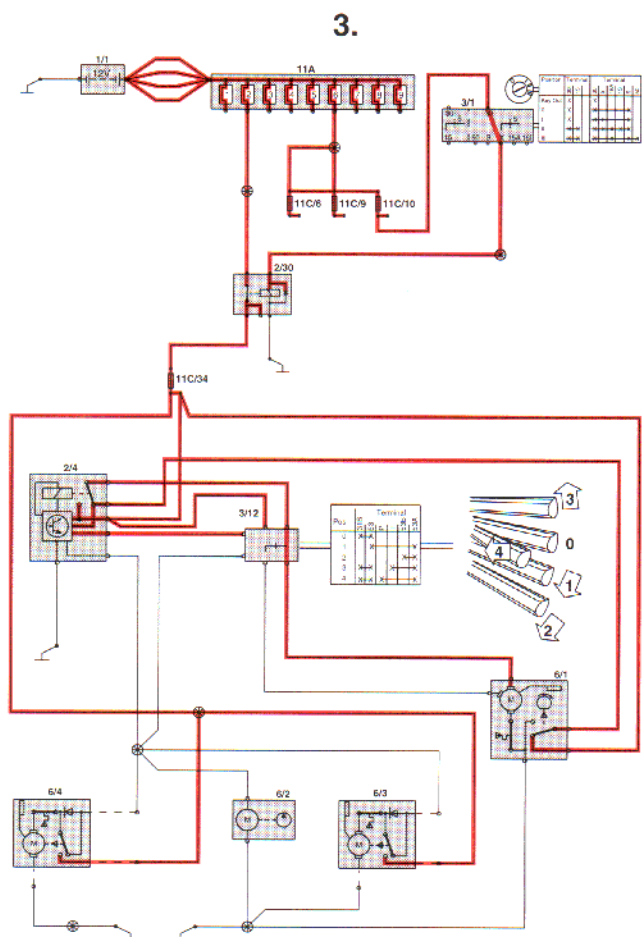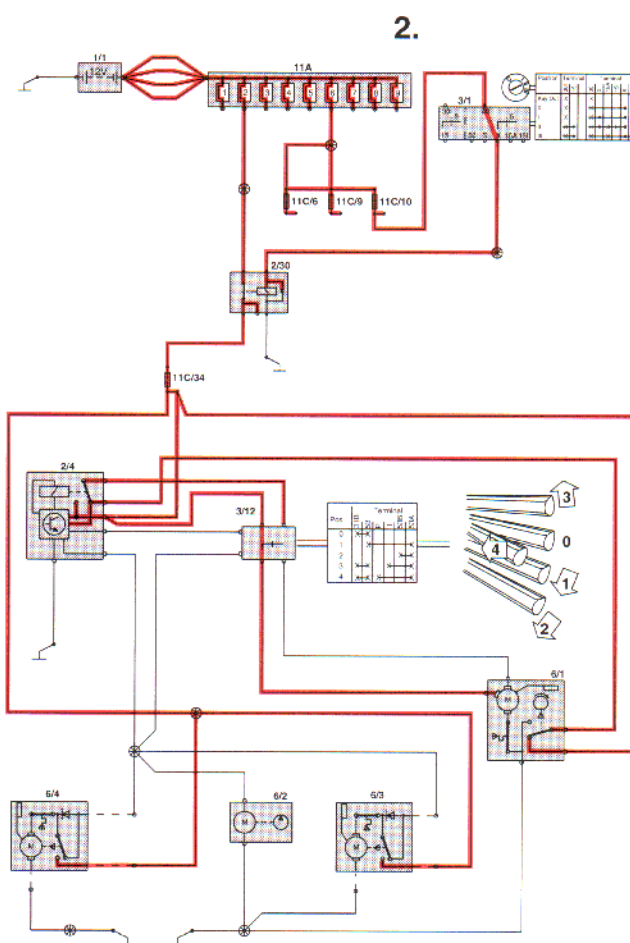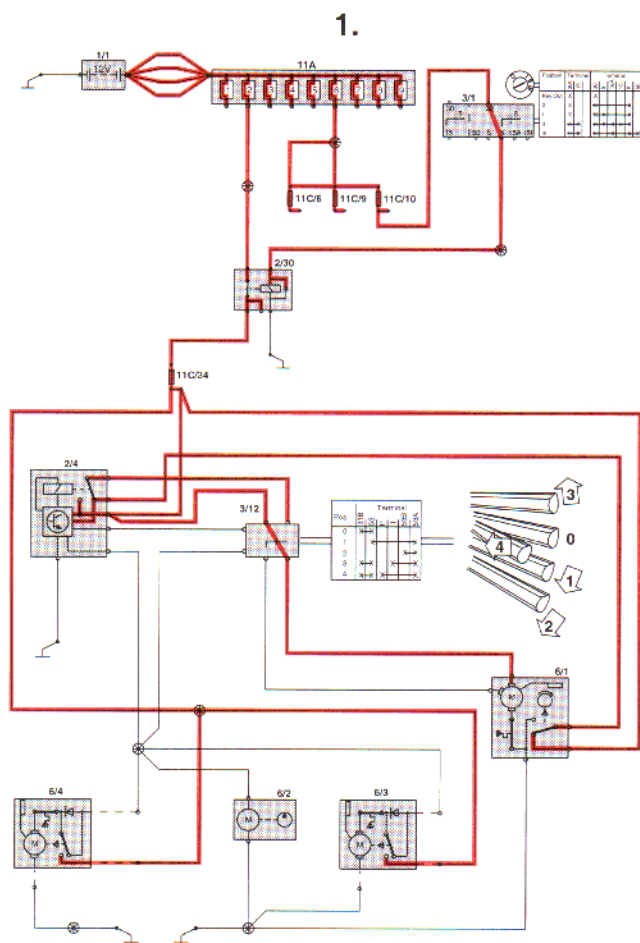


Ignition on.

1. Windshield wiper at normal speed
2. Windshield wiper at high speed
3. Windshield wiper at intermittent wipe

Heated rear window and heated door mirrors Function diagrams

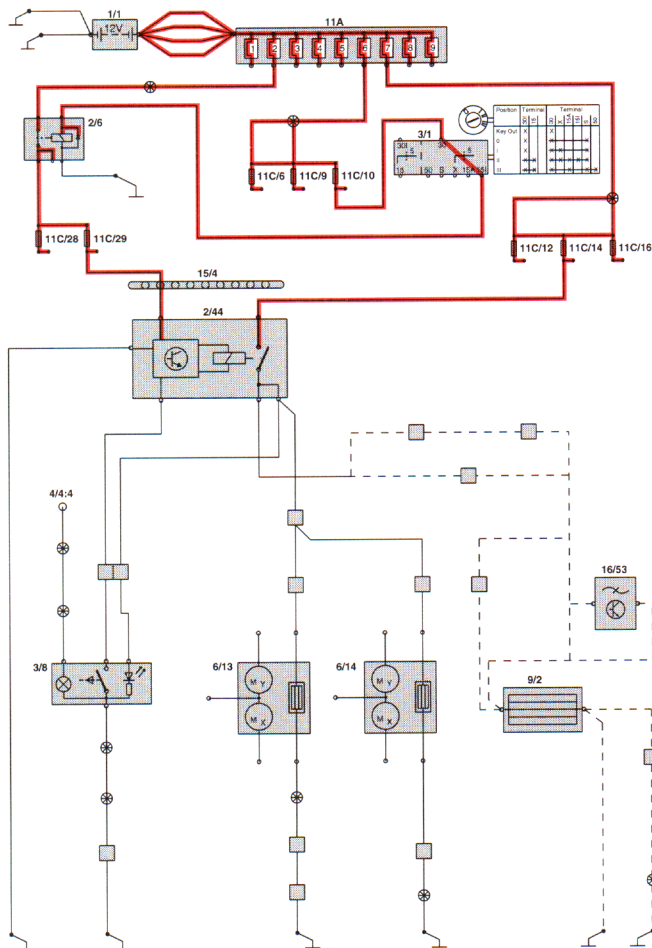


Ignition on.
Time relay, 2/44, for heating
heated rear windshield/powered rear
view mirrors not activated.

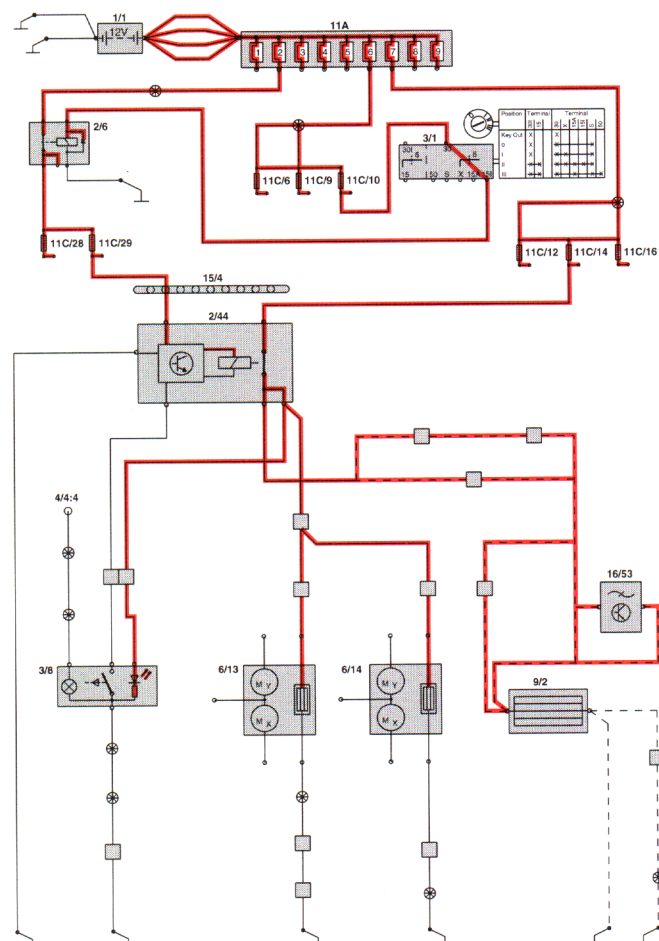


Ignition on.
Time relay, 2/44, for heating
heated rear windshield/powered rear
view mirrors activated
with switch, 3/8.
The time relay is active for a few min-
utes after the switch has been released.

High and low beams Function diagram


High beam

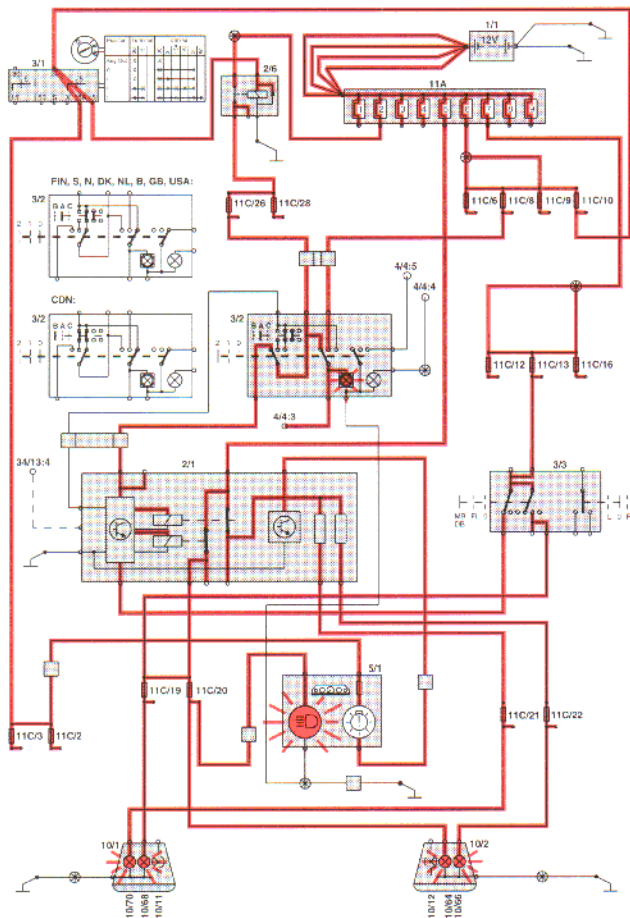


Low beam

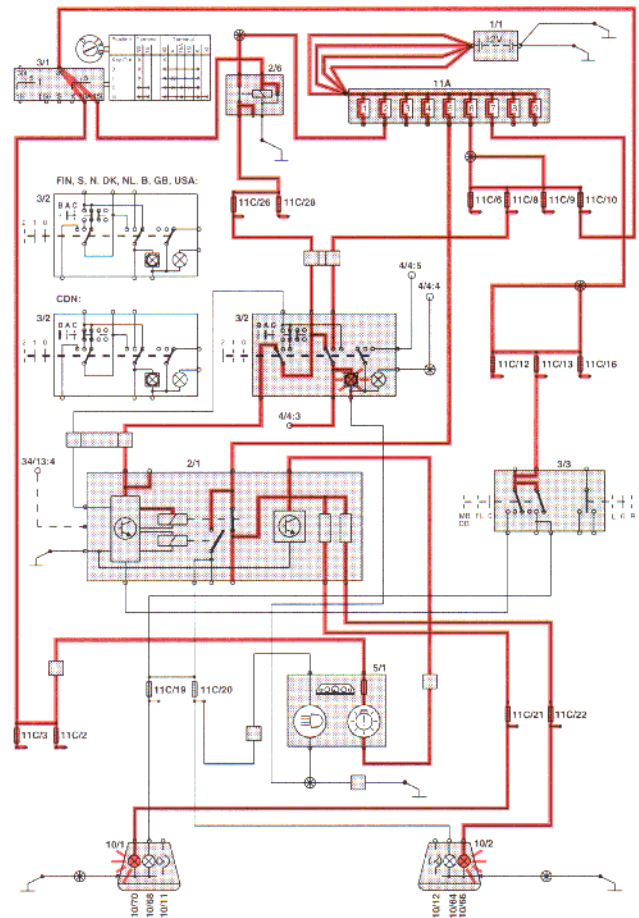




Automatic low beam

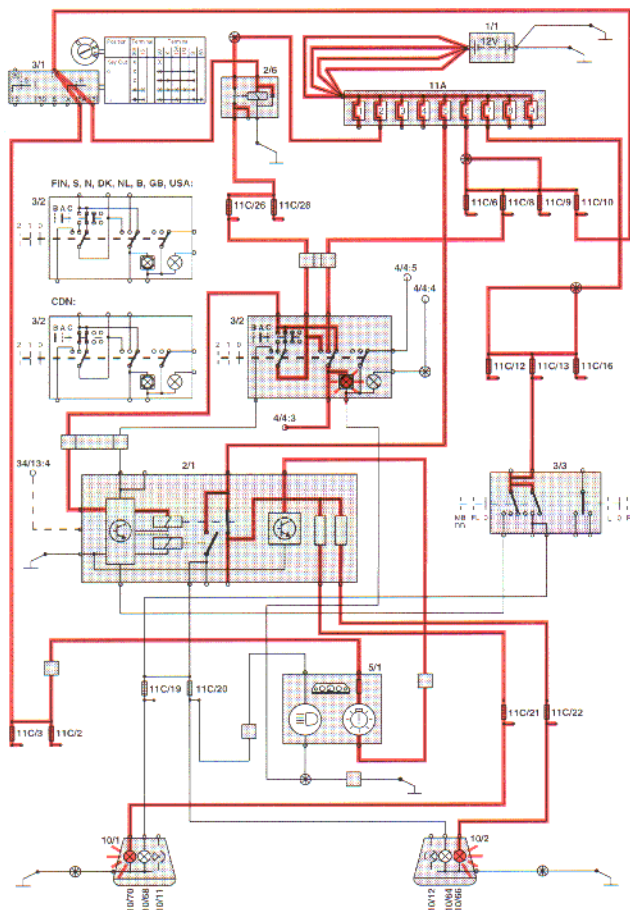

High beam flasher

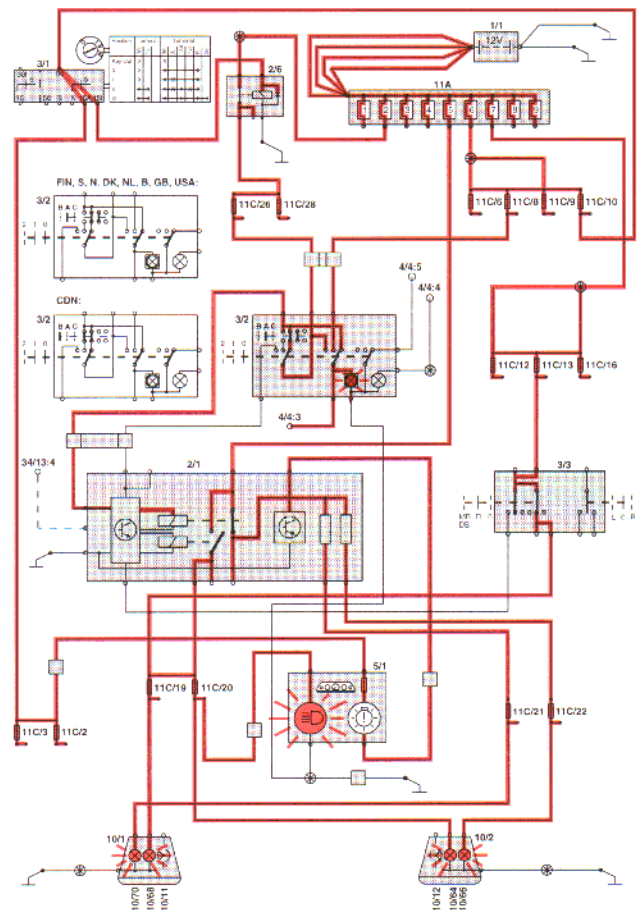


Seat belt reminder and key warning Function diagram

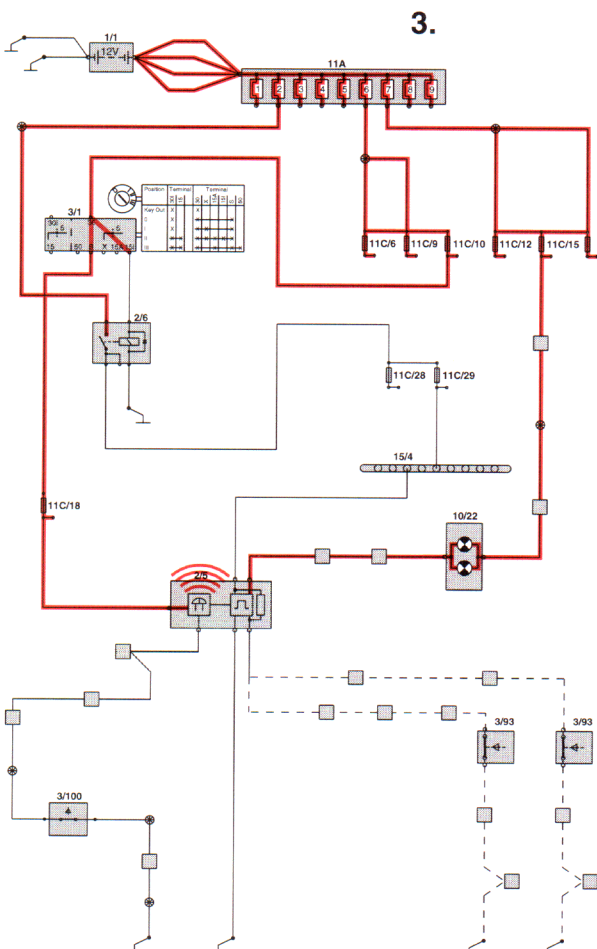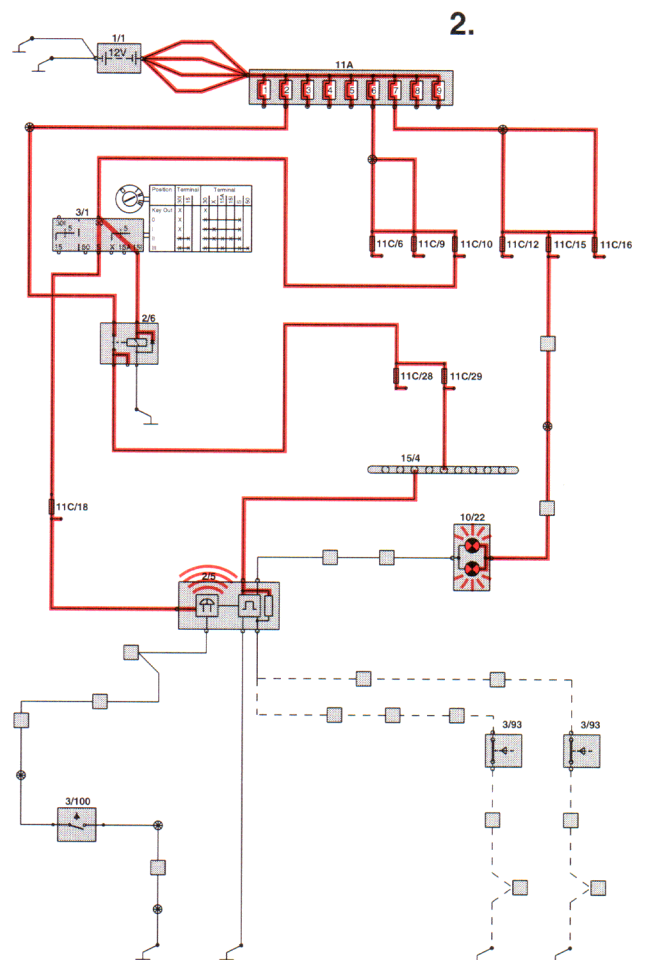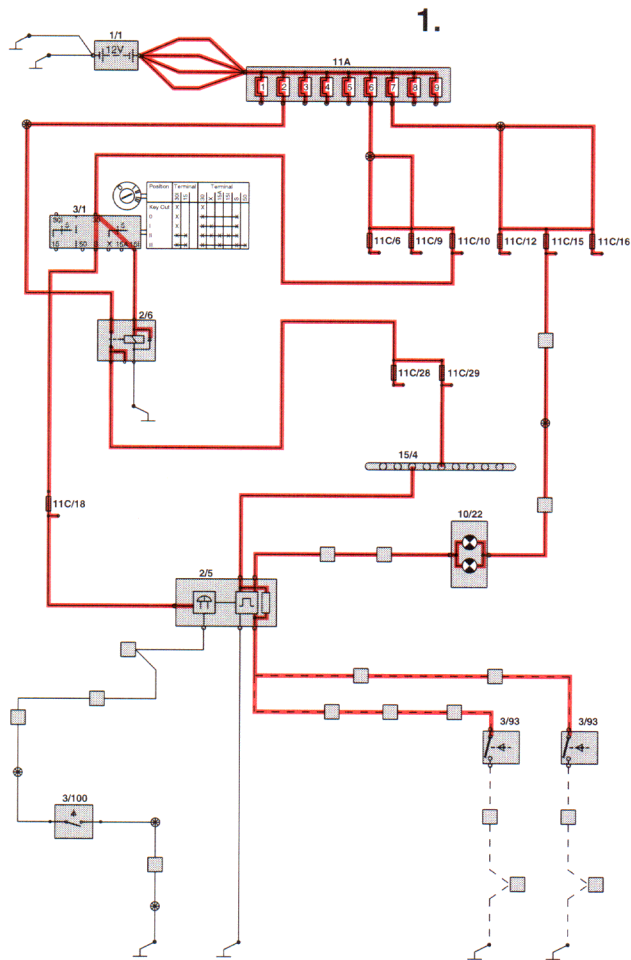


1. Ignition on.
Seat belt connected.
2. Ignition on.
Seat belt not connected.
Seat belt warning lamp lights
and clock sounds for a few seconds
3. Key still in ignition and
driver door open.
Clock sounds.

Power door mirrors Function diagrams


Driver's side door mirror.
LHD adjust outwards.

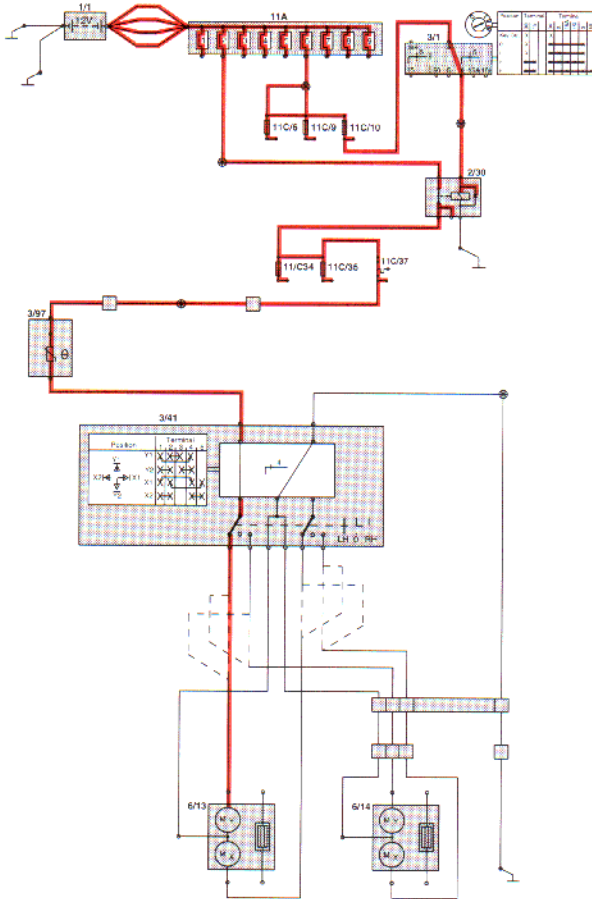


Driver's side door mirror.
LHD adjust inwards.

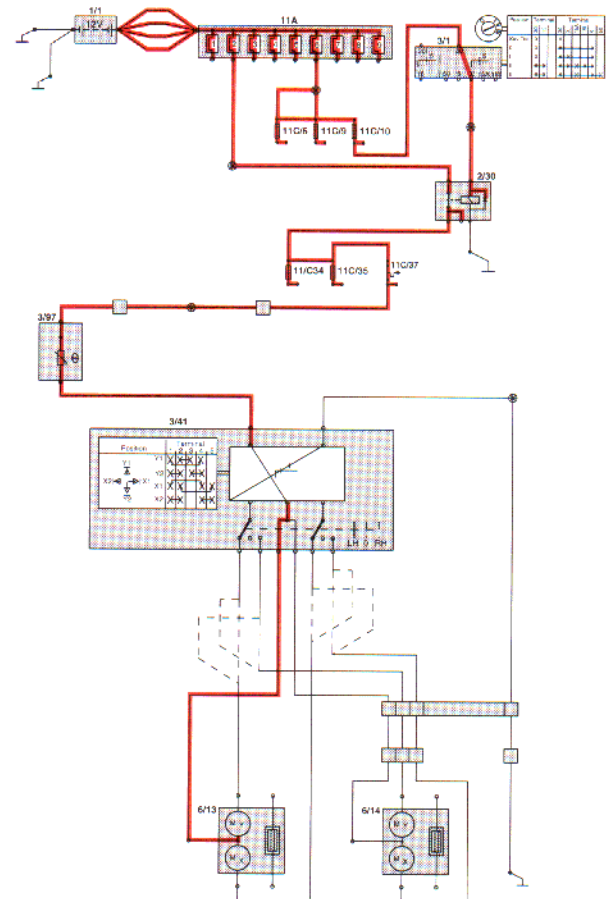


Driver's side door mirror.
LHD adjust upwards.

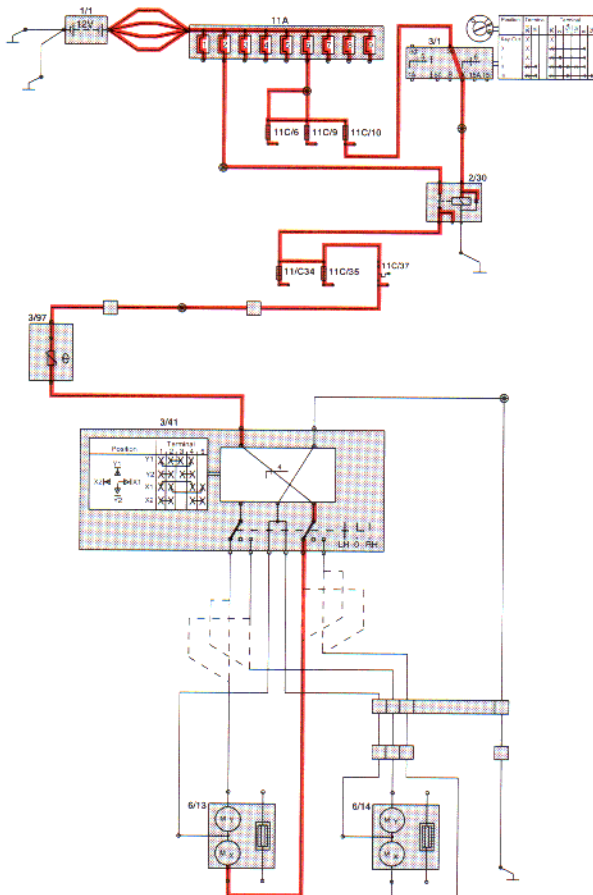


Driver's side door mirror.
LHD adjust downwards.

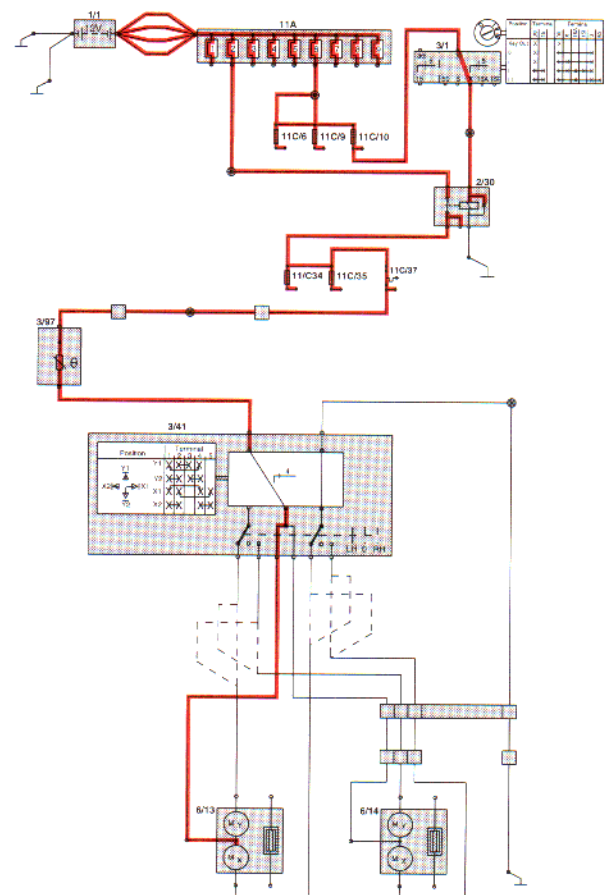

Power sunroof Function diagrams


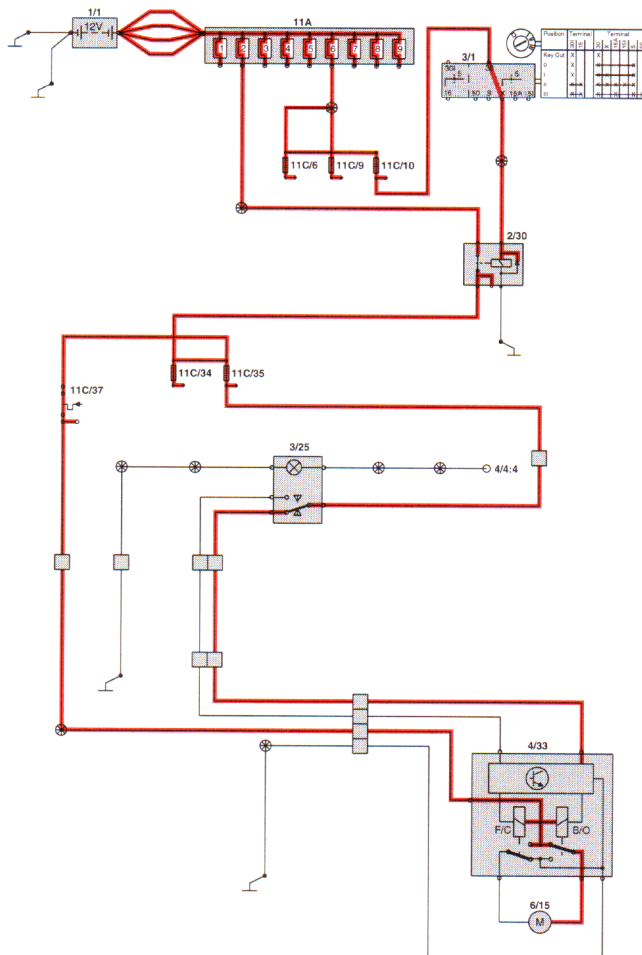


Ignition on.
Opening the sunroof

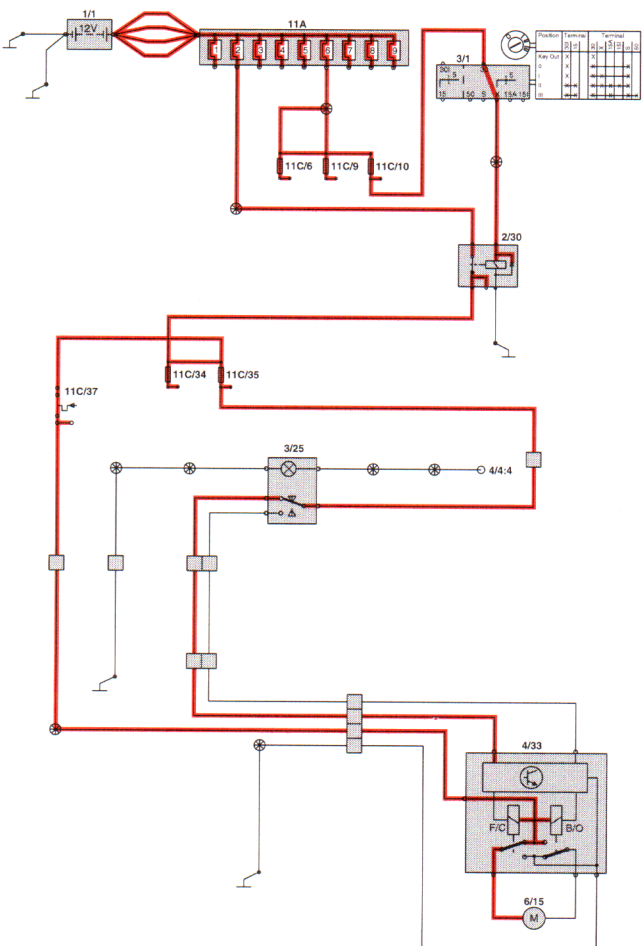


Ignition on.
Closing the sunroof


Power supply Function diagram

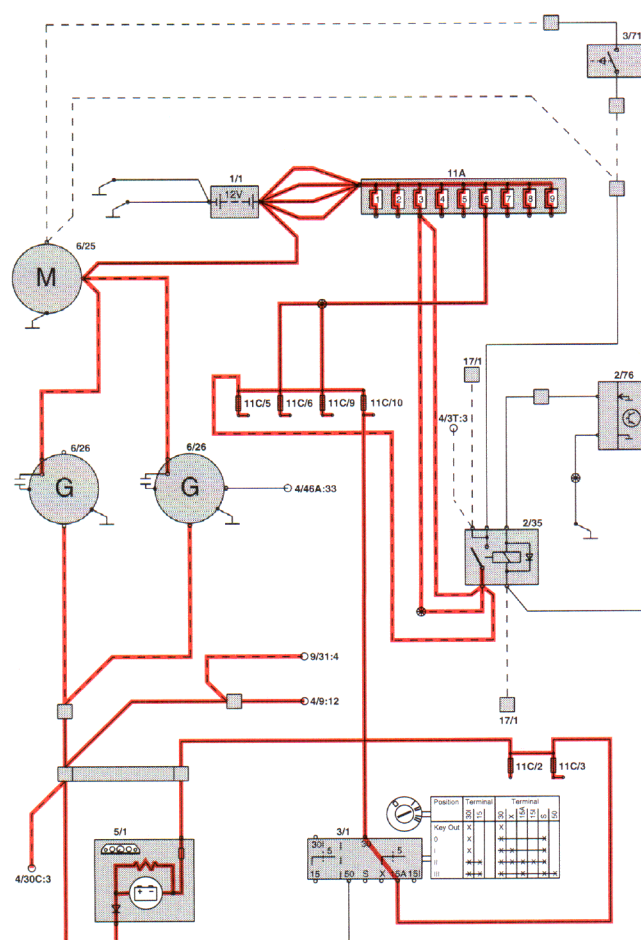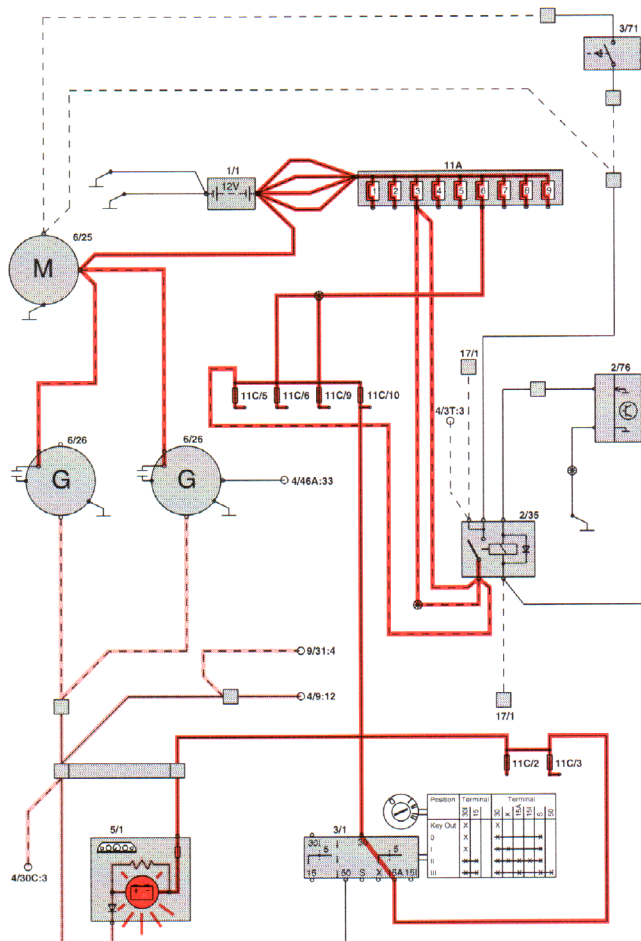

Power windows, C70 Function diagram

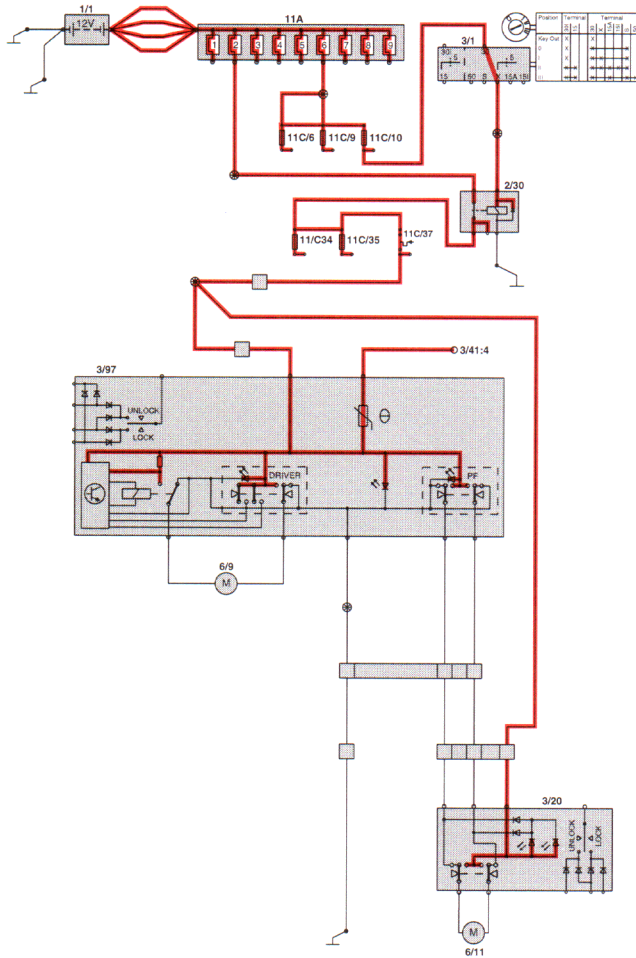


Ignition on.
Power windows not activated.

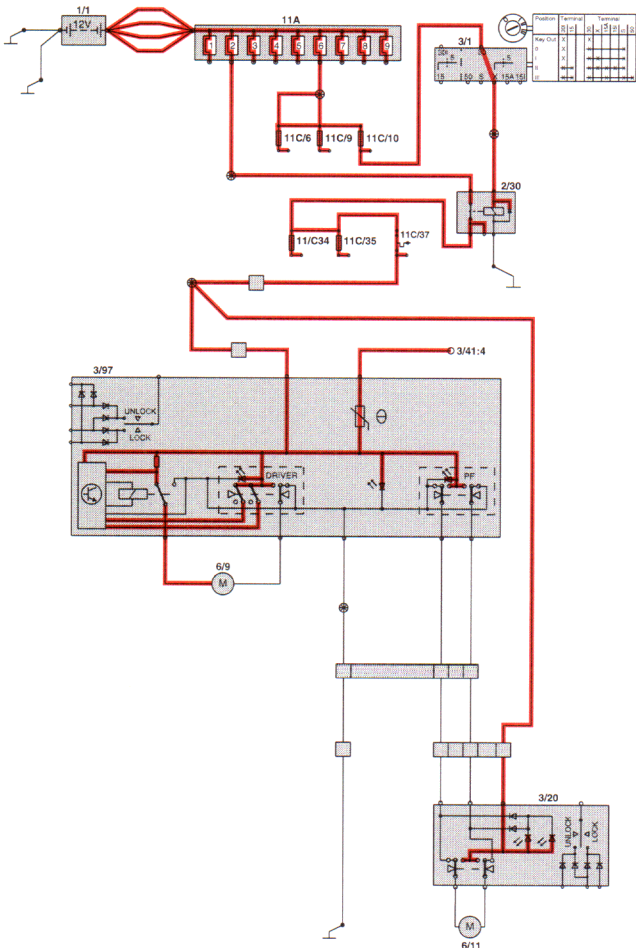


Ignition on.
The driver door power window switch in down position.

Seat belt reminder Function diagram

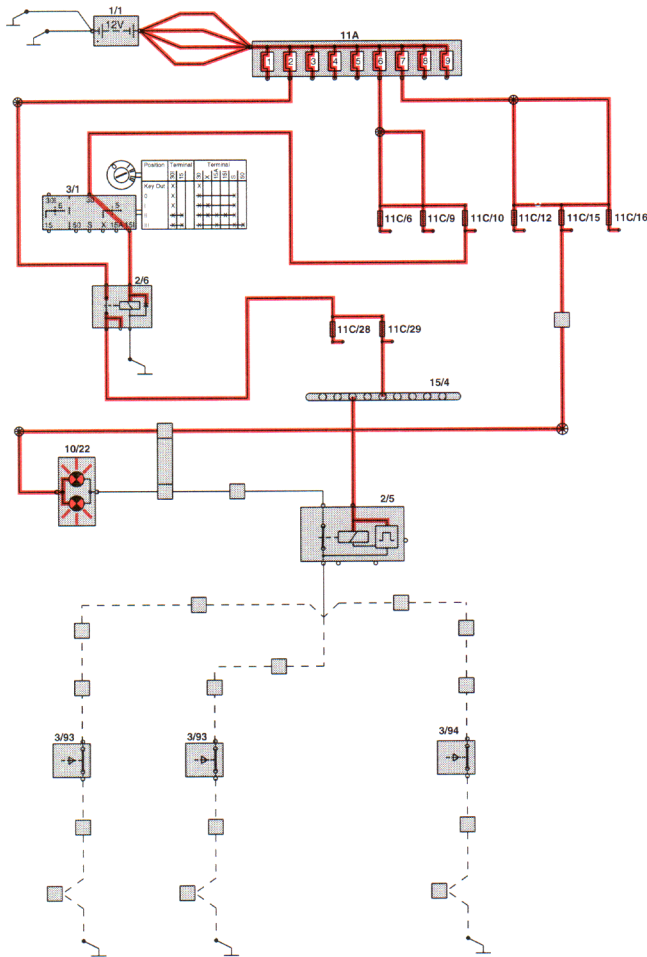


Ignition on.
Seat belt not connected.

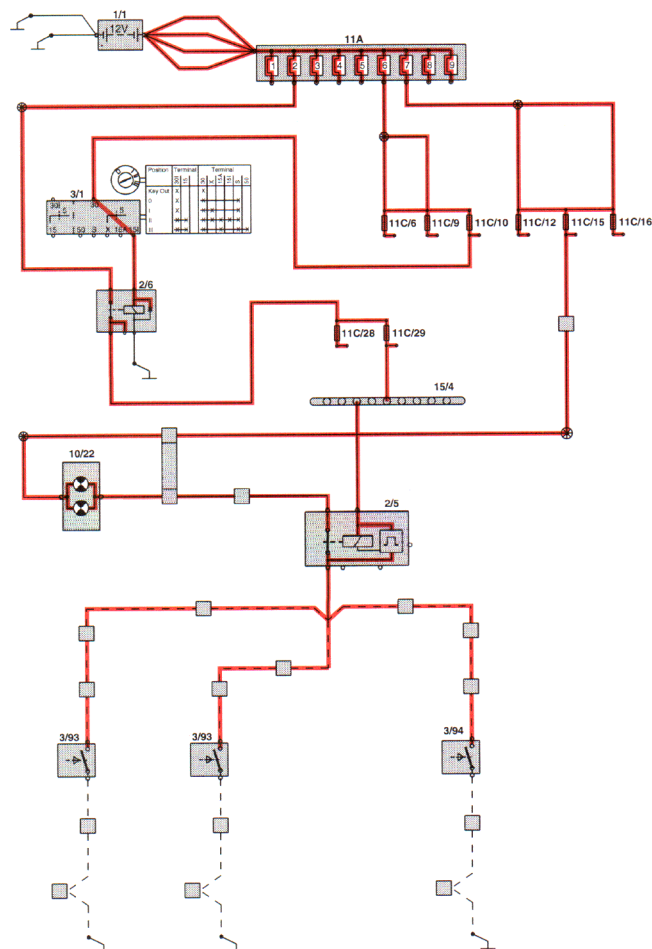


Ignition on.
Seat belt connected.

P-shift lock, automatic transmission

Function diagram

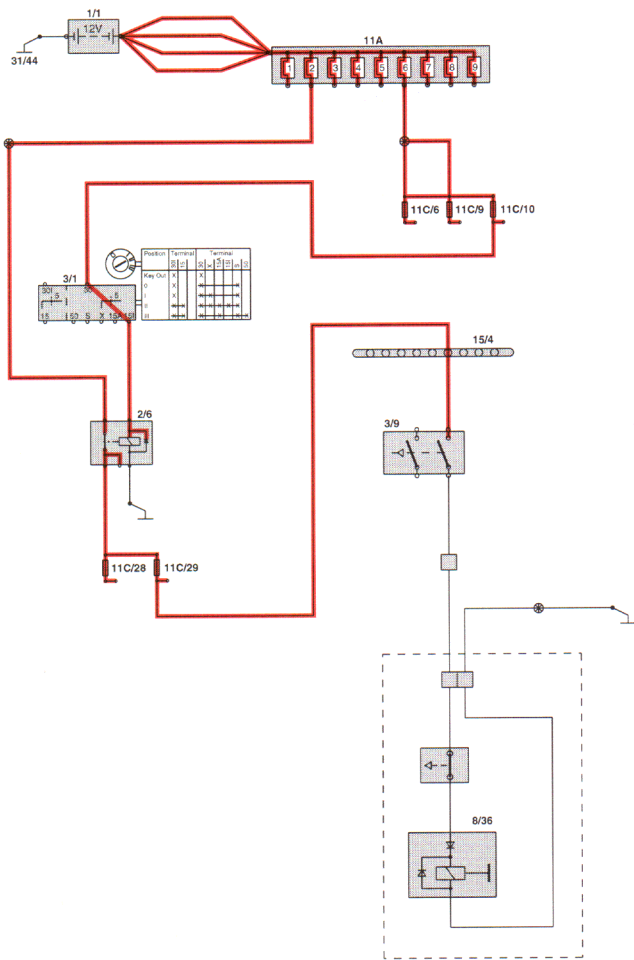


Ignition on.
Gear selector locked in P-shift position.

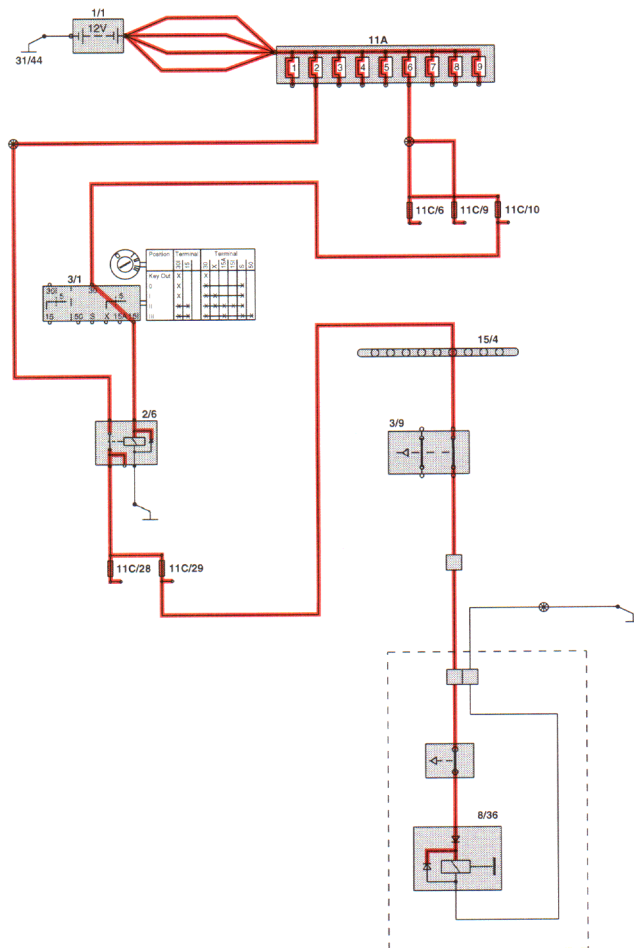


Ignition on.
Stop (brake) lamp switch is closed and solenoid for P-shift lock is tripped.
Gear selector can now be moved from its P-shift position

Starter system Function diagram

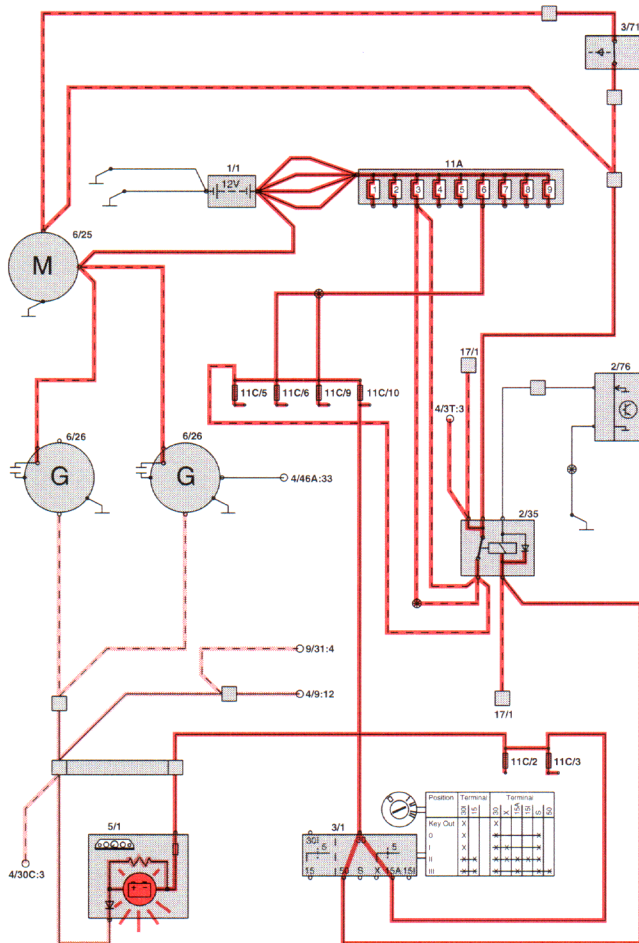


The solenoid pushes the starter cog to engage the flywheel rim teeth.

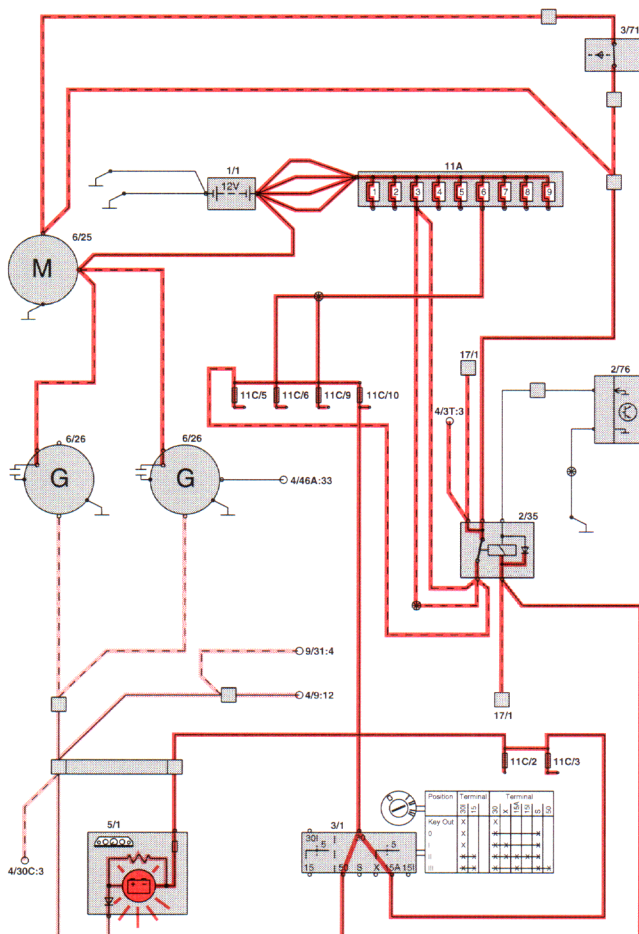


The starter cog is engaged the switches are closed and the starter motor begins to operate.

Tailgate wash/wipe Function diagram


Tailgate wiper connected.

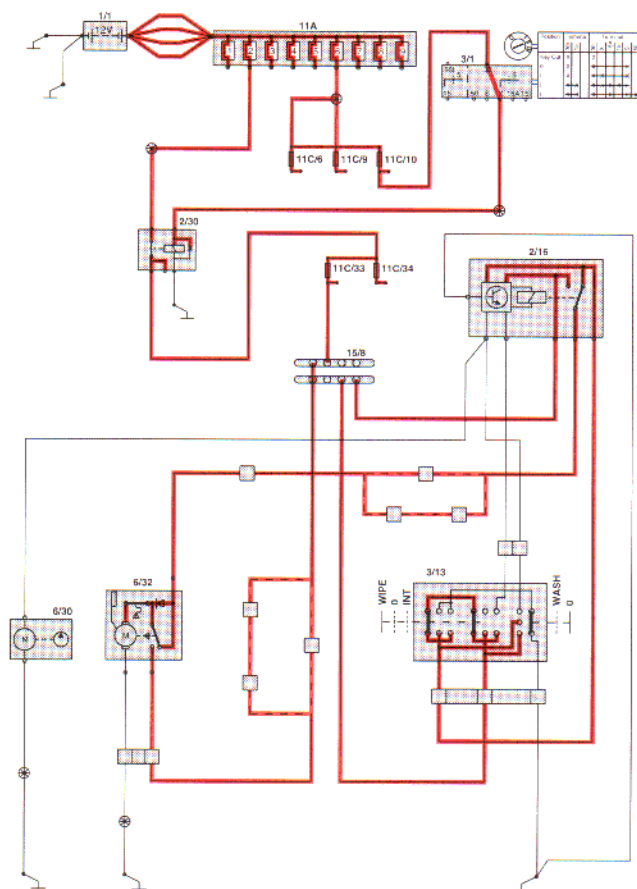


Tailgate wiper and washer connected.
Wiper continues for 2-3 wipes after washer button released.

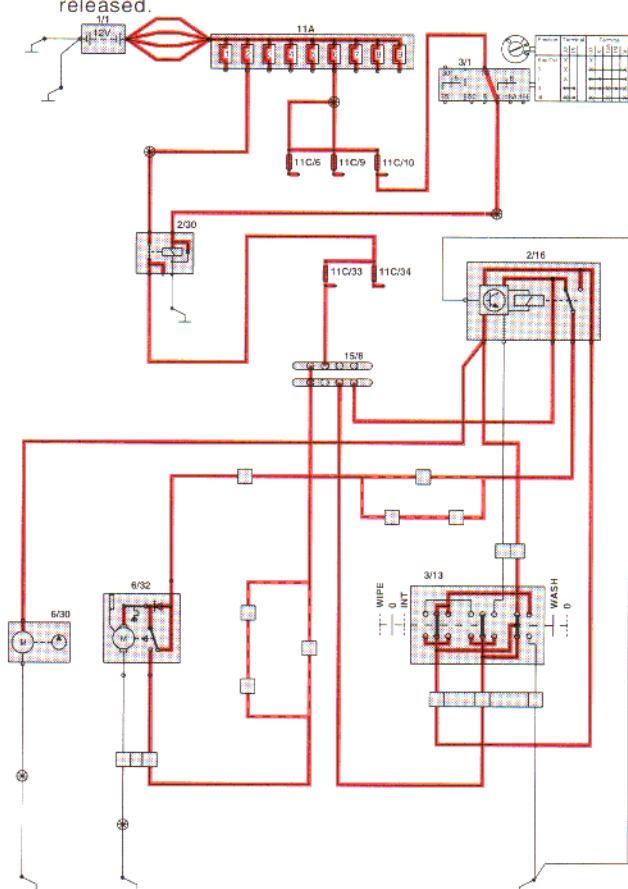


Tailgate wiper at intermittent wipe.

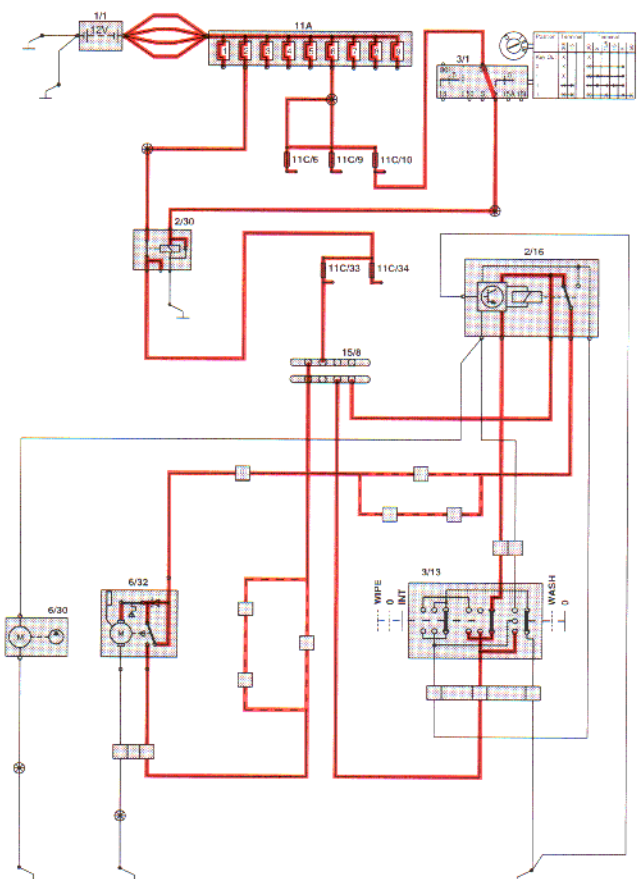

Tailgate wiper at parking speed.

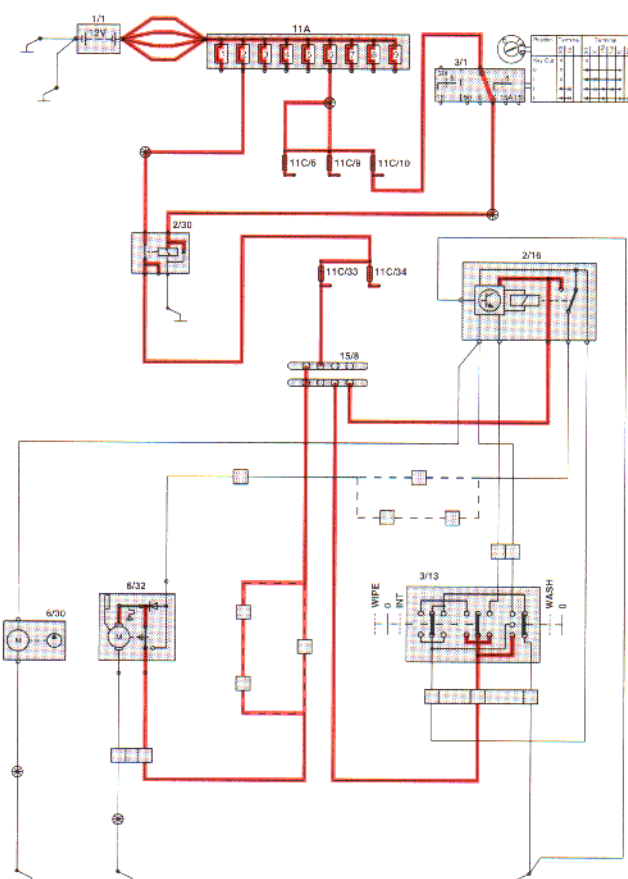

How to use the diagrams

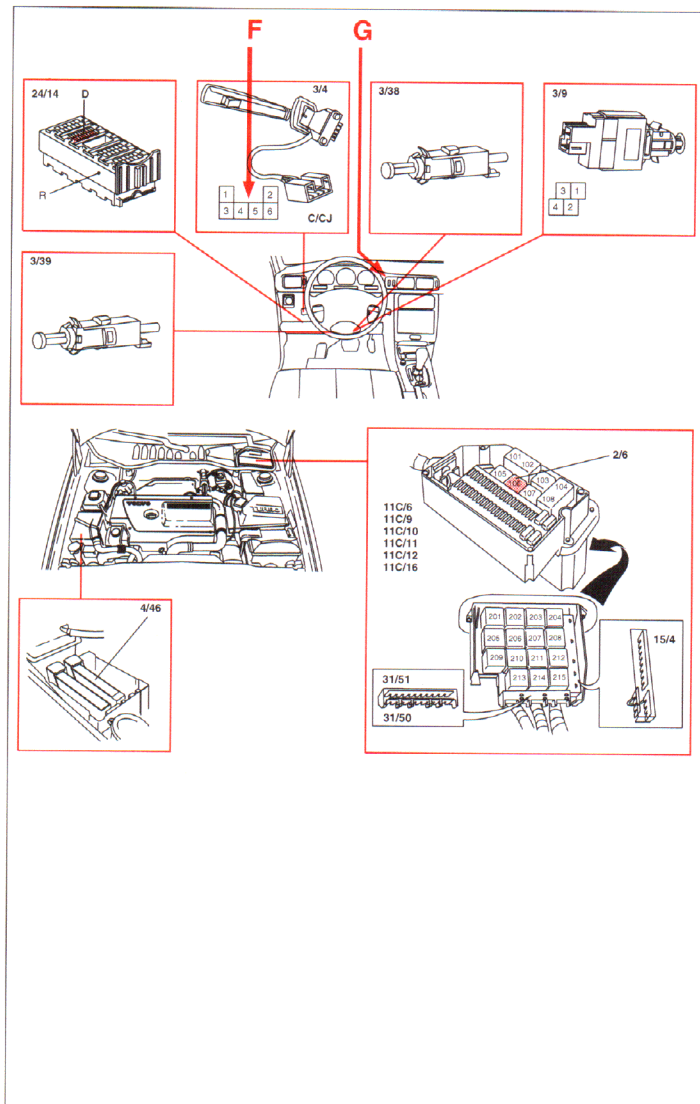

D. Junction points

The junction points are numbered. In an illustration of the different junction points you can see which other components the junction point is connected.

E. Abbreviations

There are a number of abbreviations used in the book. These are explained in the chapter "Abbreviations".

Example. BN-SB = Brown-black

F. Components

This shows which different positions the different cables are connected to on the relevant component.

G. Location of components

It shows where the function components are placed.

Table

Certain complicated multi-point switches are described using a table, see the example below.

The table is used to read off when the terminals are electrically connected to each other.

Example. In position III, terminal 30 is connected to terminal 15A, S, and 50.

3/1		Position	Terminal	Terminal	Terminal	Terminal	Terminal
30	5		30	42	30	15	S
15	50	Key Out	X	X	X	X	X
		0	X	X	X	X	X
		I	X	X	X	X	X
		II	X	X	X	X	X
		III	X	X	X	X	X

Fuses, 11A/1-9, in relay/fuse box in engine compartment

No.	Fuse function	A
11A/1	Engine cooling fan (FC)	60
11A/2	Fuses 11C/26-29 via overload relay 15I, Fuses 11C/33-37 via overload relay X	50
11A/3	Starter motor, Pulsed secondary air injection system (PAIR) pump, Diesel heater plugs coolant	50
11A/4	ABS control module	50
11A/5	Main headlamp relay with bulb failure warning sensor	50
11A/6	Fuses 11C/5-10	60
11A/7	Fuses 11C/11-17 and Fuses 11C/39-40	50
11A/8	Fuse 11B/1, Fuses 11B/2-5 via main relay fuel injection system	60
11A/9	Glow plugs 1-5 via Glow plug relay (Diesels)	80

Fuses, 11B/1-5, in relay fusebox in engine compartment

No.	Fuse function	A
11B/1	Ignition switch, Engine control module (ECM), Control module AW 50-42, Main relay fuel injection system (Motronic 4.3/4.4)	10
11B/2	Engine control module (ECM), Injectors, Idle air control (IAC) valve, Mass air flow (MAF) sensor, Fuel injection pump (Diesel), Injection timing valve (Diesel)	10
11B/3	Fuel pump (FP), Ignition discharge module (IDM) and ignition coil, Glow plug relay (Diesel), Heater plug coolant (Diesel), Turbocharger (TC) control valve (Diesel), EGR converter (Diesel), PTC resistor air preheating (Diesel)	20 (15 Diesel)
11B/4	Control module AW 50-42	10
11B/5	Air conditioning (A/C) relay, Heated oxygen sensor (HO2S) front, Heated oxygen sensor back, Canister purge (CP) valve, Solenoid valve pulsed secondary air injection system (PAIR), EVAP canister shut-off valve, Pulsed secondary air injection system (PAIR) pump relay, Turbocharger (TC) control valve, PTC resistor air preheating	10

Fuses

Fuses, 11C/1-40, in the central electrical unit

No.	Fuse function	A
11C/1	-	-
11C/2	Control module central locking/anti-theft alarm, Mode selector AW 50-42, Control module RTI	10
11C/3	ABS control module	10
11C/4	Immobilizer	10
11C/5	Climate control, Data link connector (DLC)	15
11C/6	control module central locking/anti-theft alarm, Alarm siren, Movement detector (S70/V70)	20
11C/7	Radio/Amplifier	15
11C/8	Immobilizer, Combined instrument panel, Light switch	15
11C/9	Heated rear seat (S70/V70), Amplifier (C70)	20
11C/10	Ignition switch	15
11C/11	Stop (brake) lamp	10
11C/12	Engine coolant heater (Diesel), Amplifier (C70)	20
11C/13	Turn signal lamp/Hazard warning signal flasher, Headlight flash, Control module central locking/anti-theft alarm, Remote controlled central locking/anti-theft alarm, Glass breakage sensor	15
11C/14	Heated rear windshield, Heated door mirrors	30
11C/15	Courtesy lighting, Glove compartment lighting, Footwell courtesy lighting, Door open warning lamps, Cargo compartment lighting, Seat belt reminder, Control module RTI, CD-player RTI, Display RTI	10
11C/16	Power antenna, CD player, Trailer output socket (S70/V70), Accessories, Tow hitch (C70)	30
11C/17	Front fog lamps	20
11C/18	Key warning, Control module central locking/anti-theft alarm	10
11C/19	Left high beam, Accessory	15
11C/20	Right high beam, High beam warning lamp	15
11C/21	Left low beam	15
11C/22	Right low beam	15
11C/23	Parking lamps, Tail lamp, License (number) plate lighting	10
11C/24	Parking lamps, Tail lamp, Bulb failure warning sensor	10
11C/25	Fog tail lamp, Tail fog lamp indicator lamp	10
11C/26	Light switch	15
11C/27	Back-up (reversing) lamp, Turn signal lamp	15
11C/28	Heated seats, Heated rear seat (S70/V70)	25
11C/29	15-rail (15/4): Rear demist, Heated door mirrors, Seat belt reminder, Cruise control, Bulb failure warning sensor Germany, Alarm siren, Shift lock, Exhaust temperature sensor, Engine coolant heater (Diesel), Tow hitch (C70)	10
11C/30	Cigarette lighter/12V front outlet, Control module RTI, CD-player RTI, Display RTI	15
11C/31	Climate control	25
11C/32	Radio/Amplifier	10
11C/33	X-rail(15/8): Beam width control, rear windshield wash/wipe	15
11C/34	Horn, Windshield wash/wipe, Headlamp wash/wipe, Horn	25
11C/35	Instrument and control panel lighting, ashtray lighting, Power sun roof, (Accessories), Rear view mirror (C70)	10
11C/36	Cigarette lighter/12V outlet back, Power seats	15

Automatic fuses

11C/37	Power windows, Power sunroof
11C/38	-
11C/39	Left power seat
11C/40	Right power seat

Relays in the relay/fusebox, in the engine compartment

1	Main relay fuel injection system (2/32)
2	Relay, pulsed secondary air injection system (PAIR) pump (2/53) (S70/V70) Alternatively Glow plug relay (diesels) (2/14)
3	Relay starter motor (2/35)
4	Relay A/C (2/22)


Relays in central electrical unit

101-102	Control module, cruise control (4/3)
103	Relay fuel pump (FP) (2/23)
104, 108	Headlamp relay with bulb failure warning sensor (2/1)
105	Overload relay X-supply (2/30)
106	Overload relay 15I-supply (2/6)
201	Fog lamp relay (2/2)
202	Relay alarm horn (2/77)
203	Intermittent wiper relay (2/4)
204	Intermittent wiper relay rear windshield (2/16)
205	Relay left heated seat (2/56) (C70)
206	Relay right heated seat (2/57) (C70)
207	Relay exhaust temperature switch (2/15)
208	Relay heated rear windshield/door mirrors (2/44)
212	Relay seat belt reminder/key warning (2/5)
213	Front fog lamps, bridge (34/13)


Other relays

- 2/11 Relay engine coolant fan (FC)
- 2/43 Relay heated rear seat (S70/V70)
- 2/54 Relay coolbox (V70)
- 2/74 Relay heating plugs coolant (Diesel)
- 7/1 Bulb failure warning sensor rear


Ground points
C70

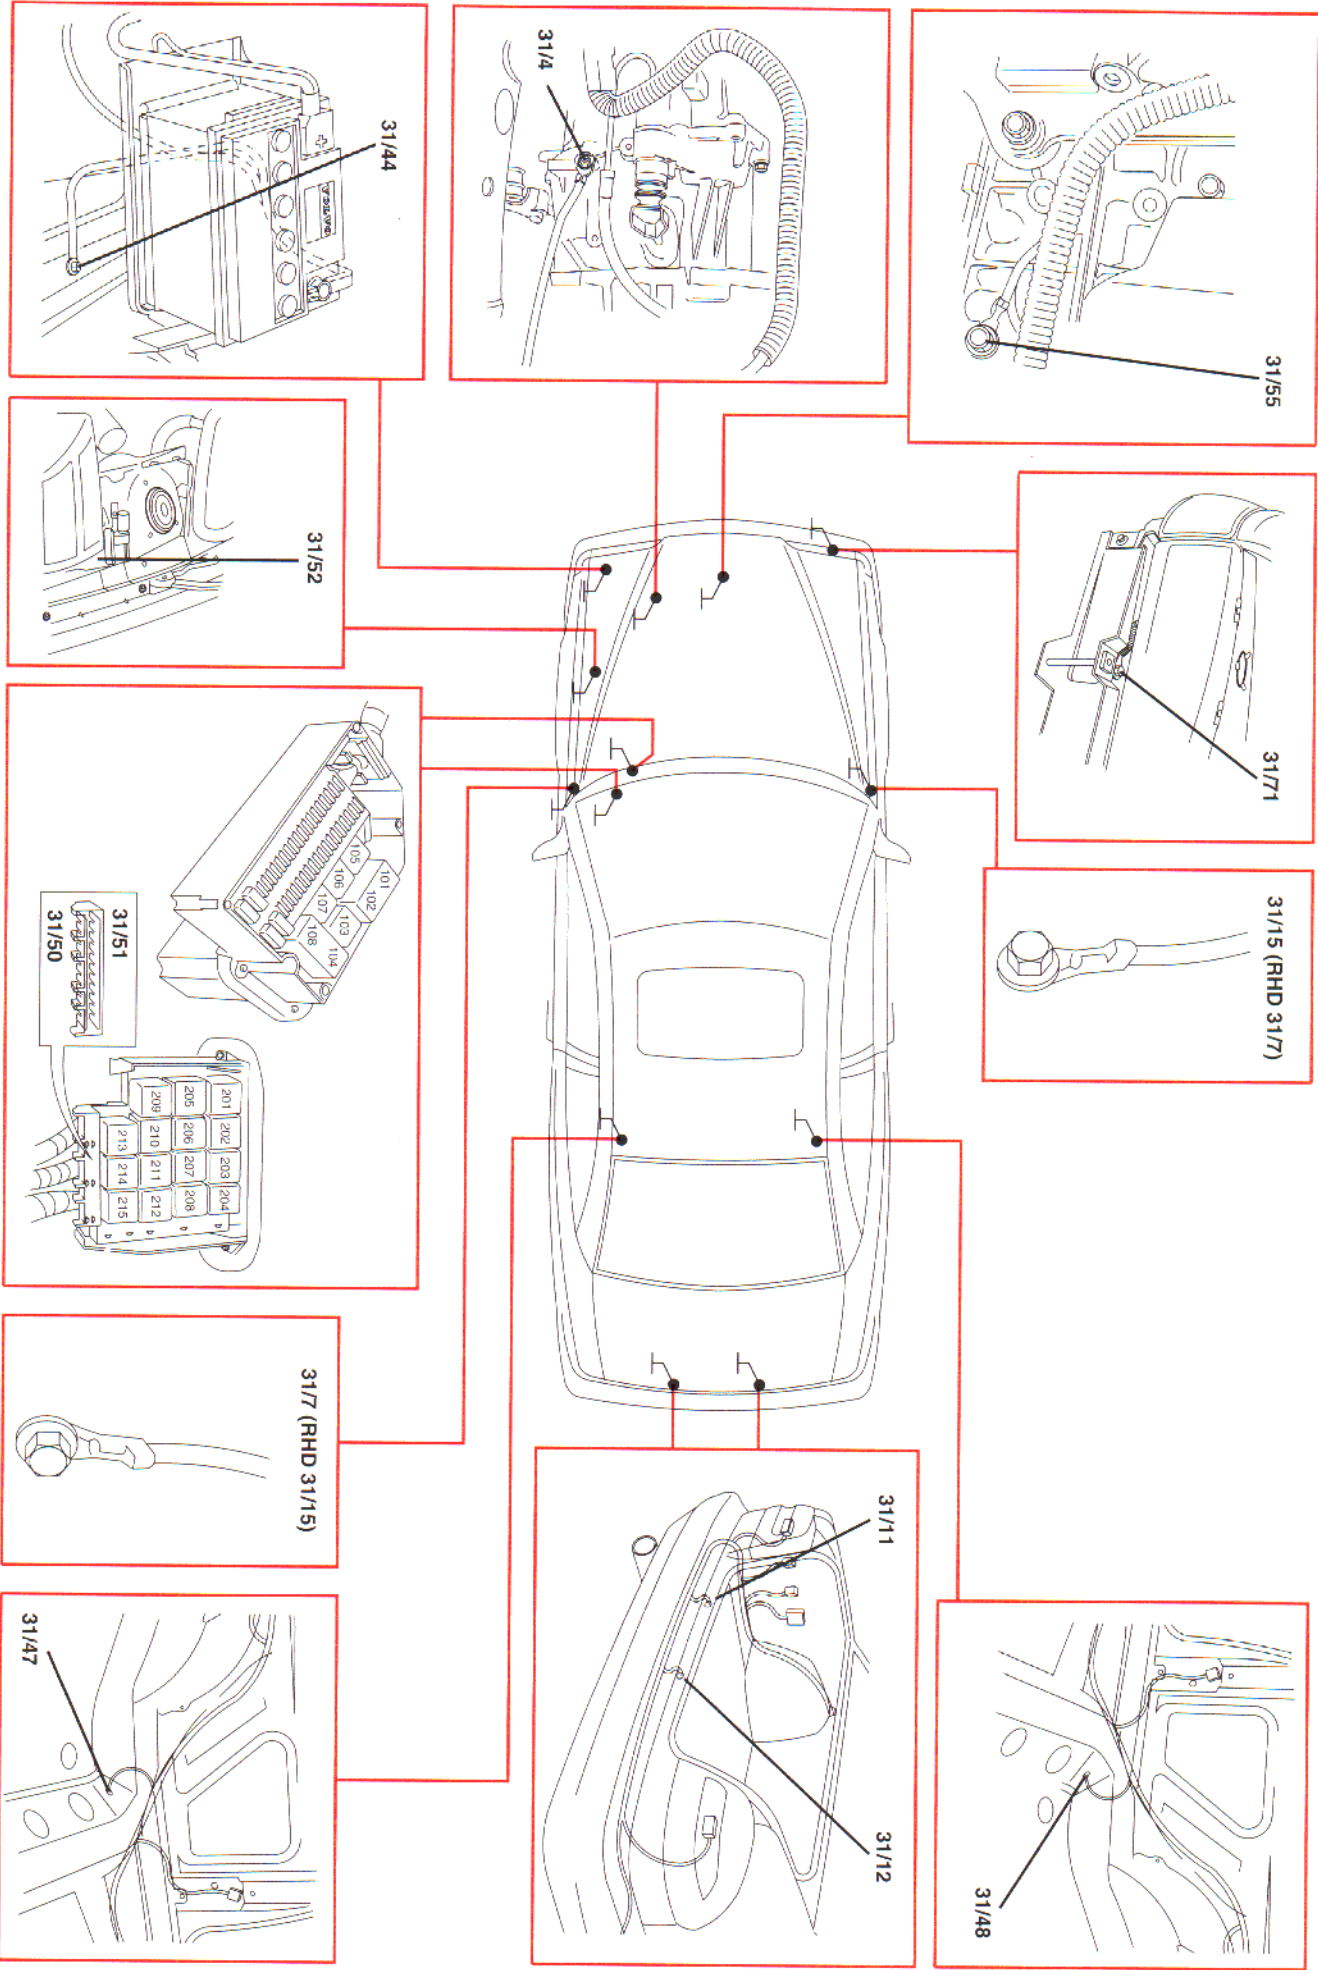


Ground points

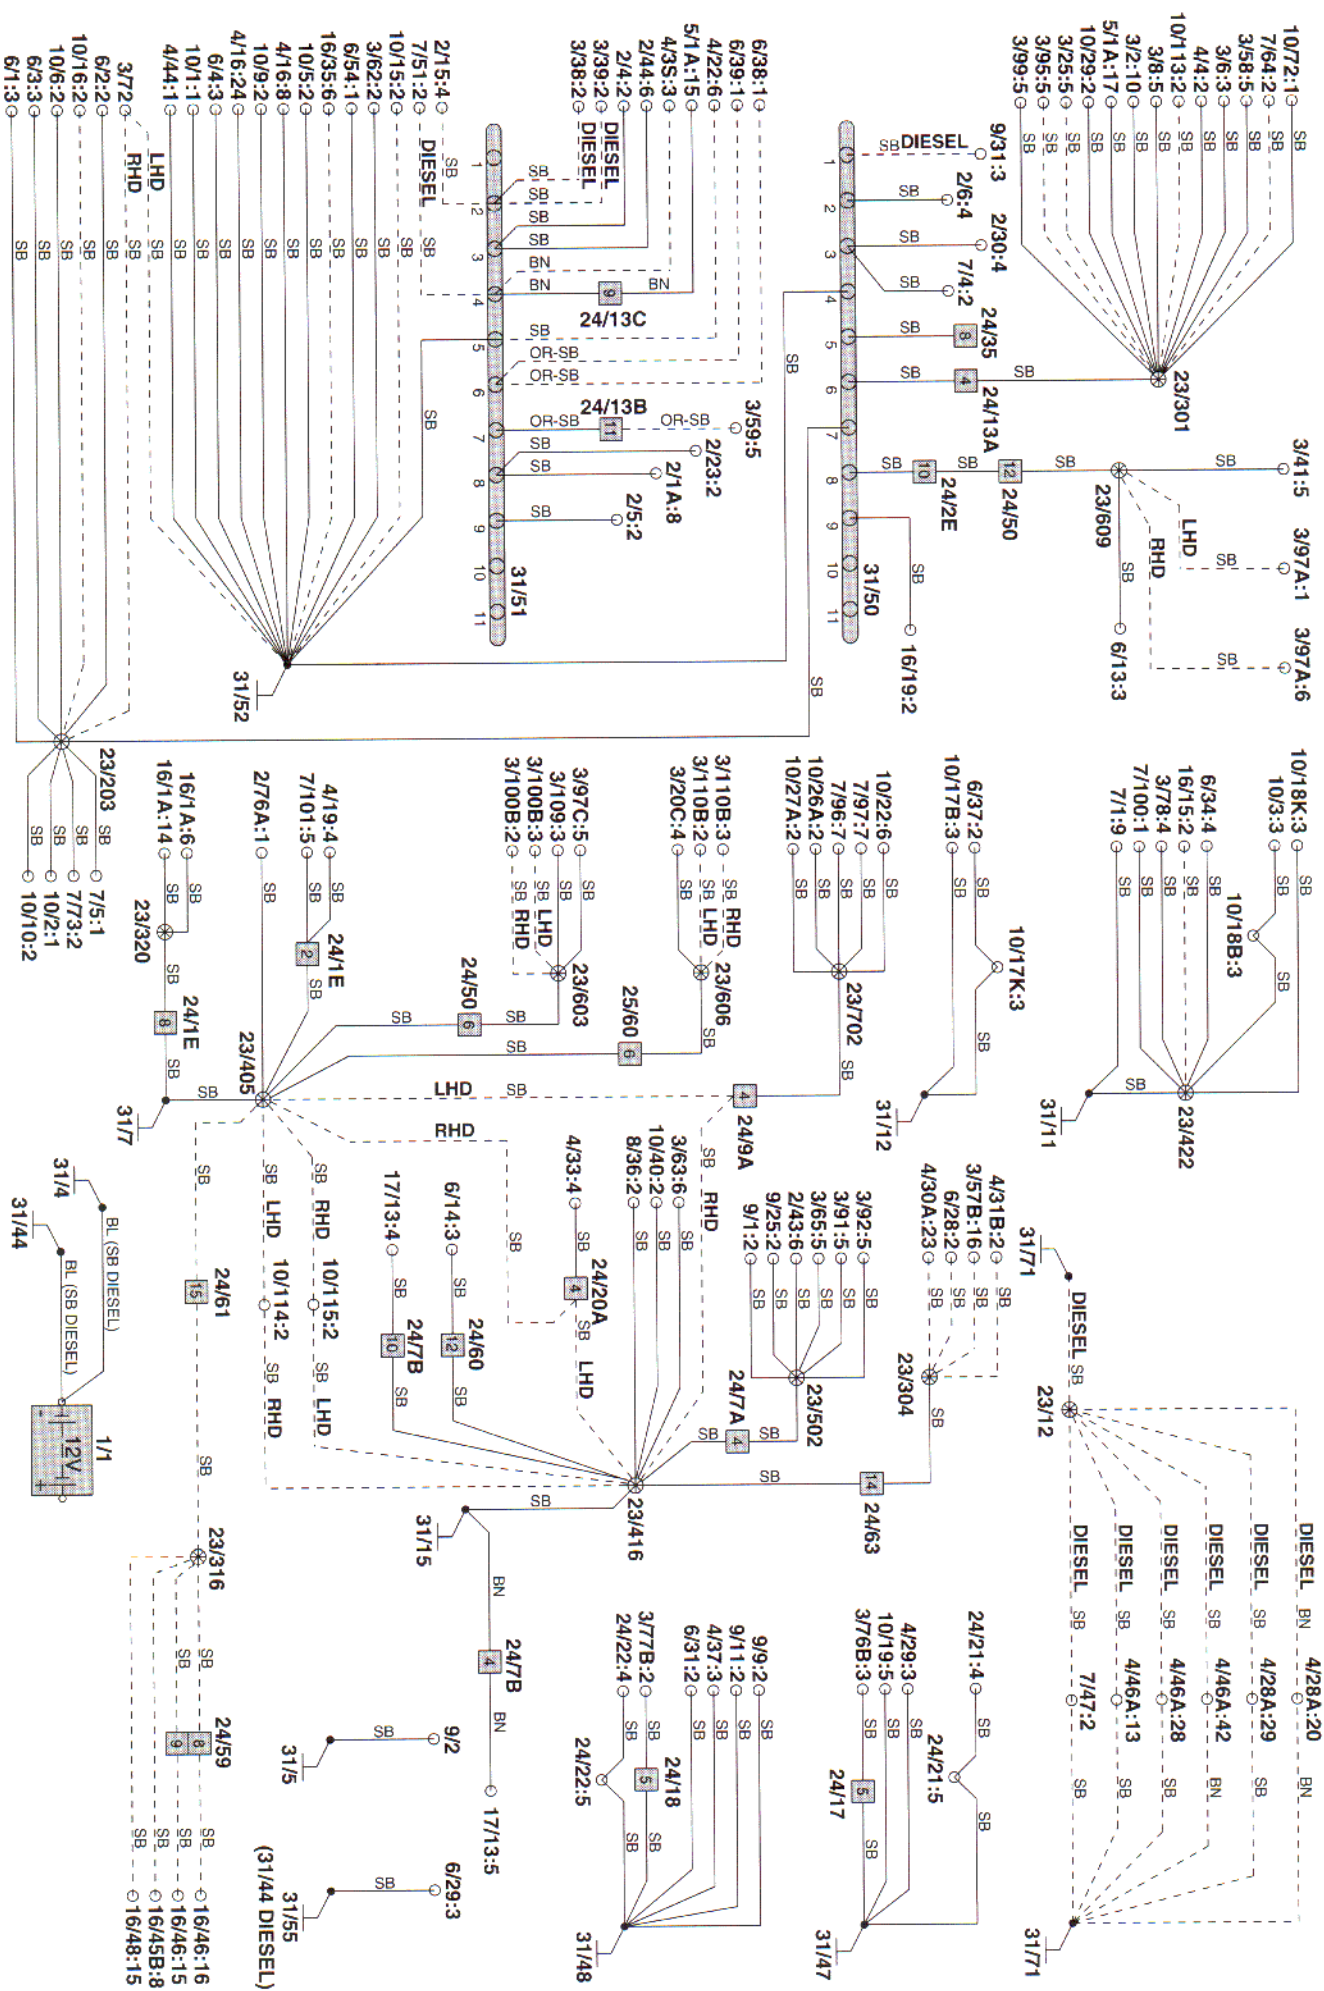


Ground points
S70

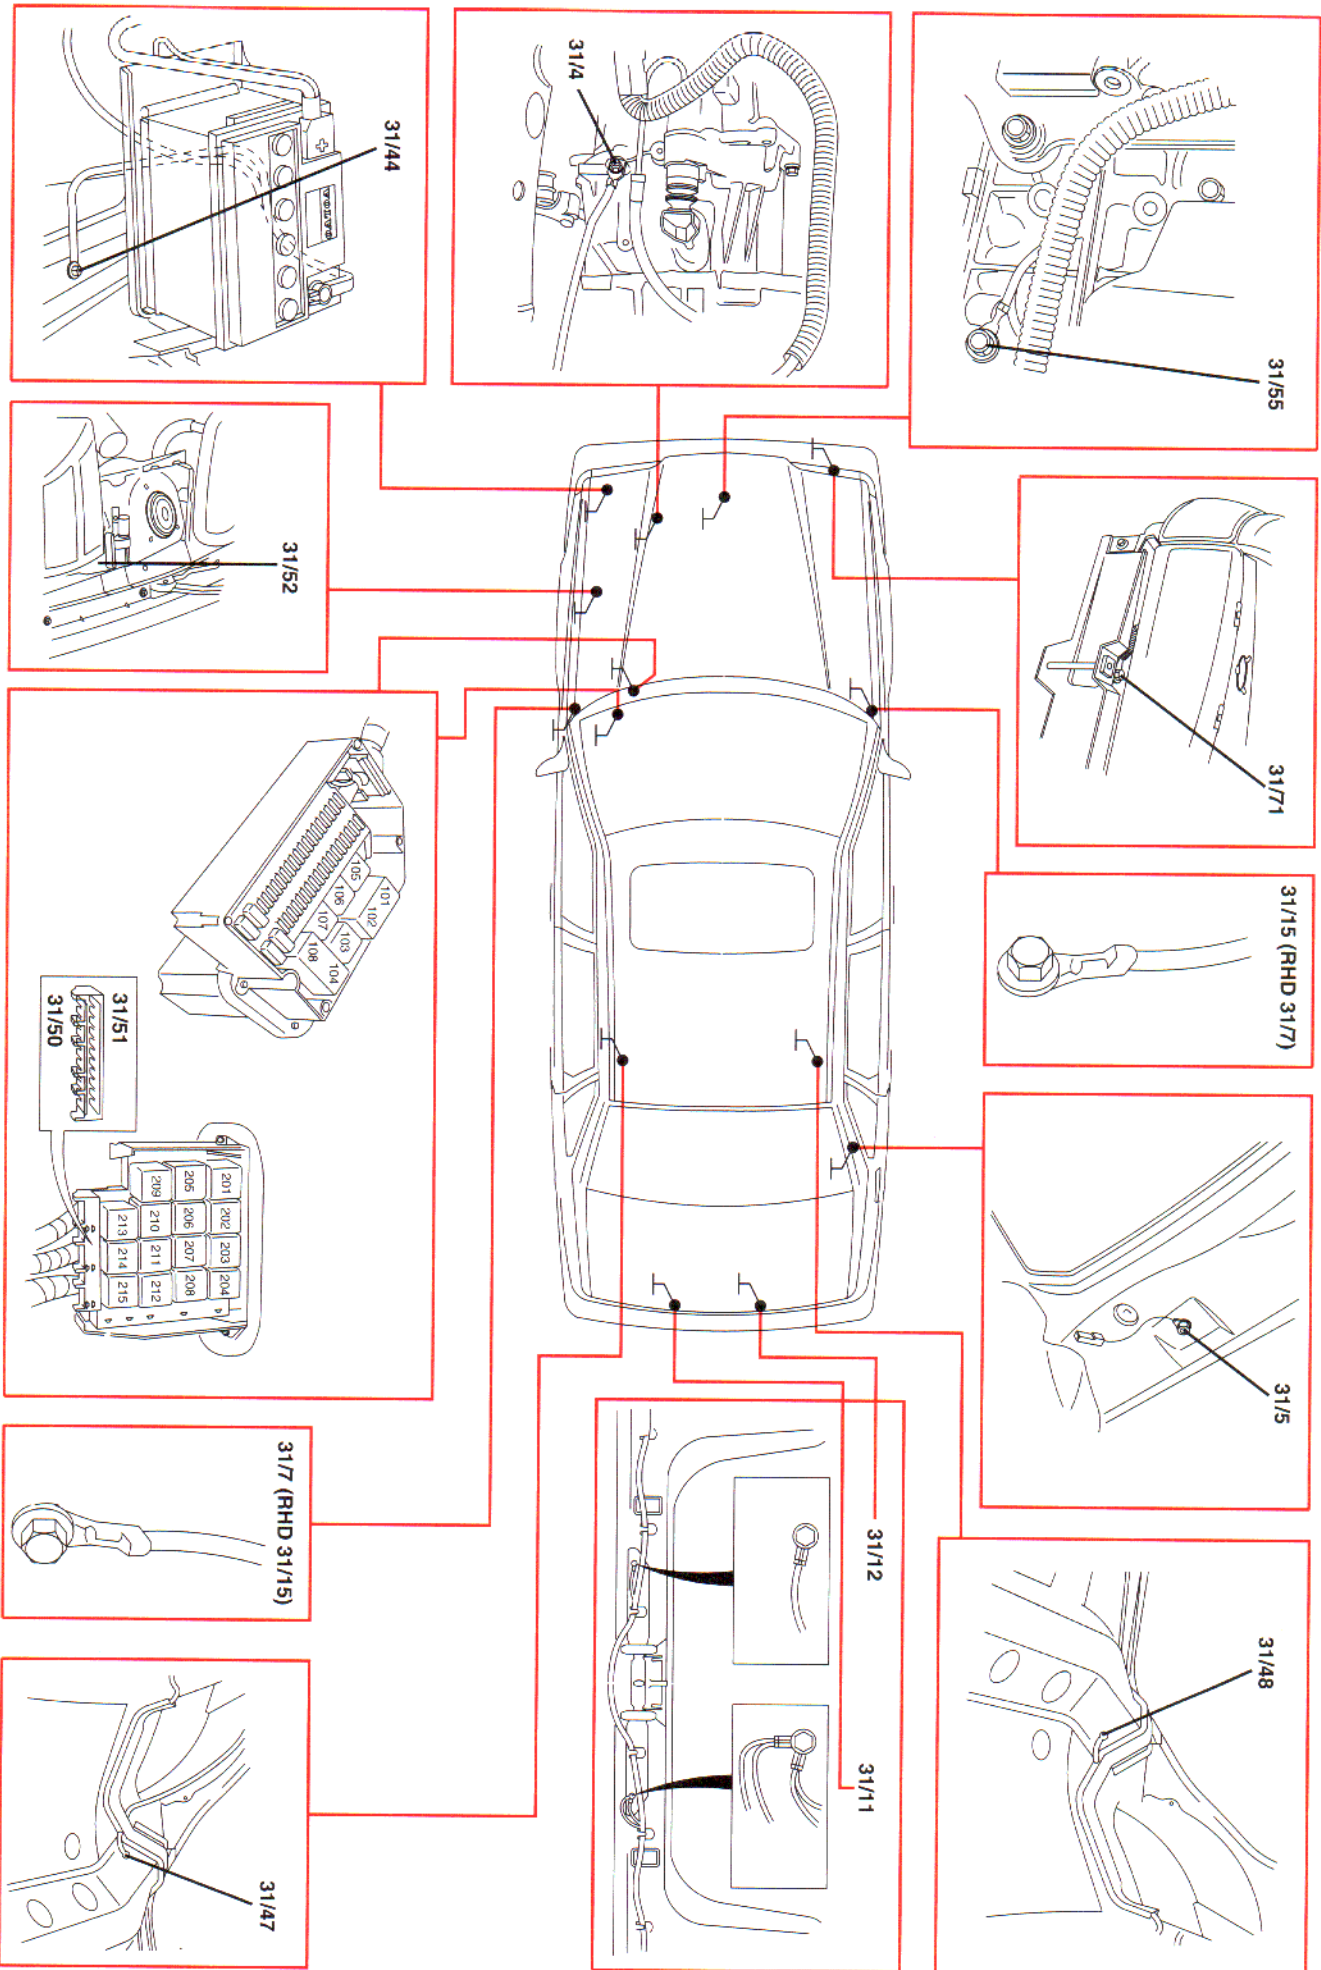

Ground points V70

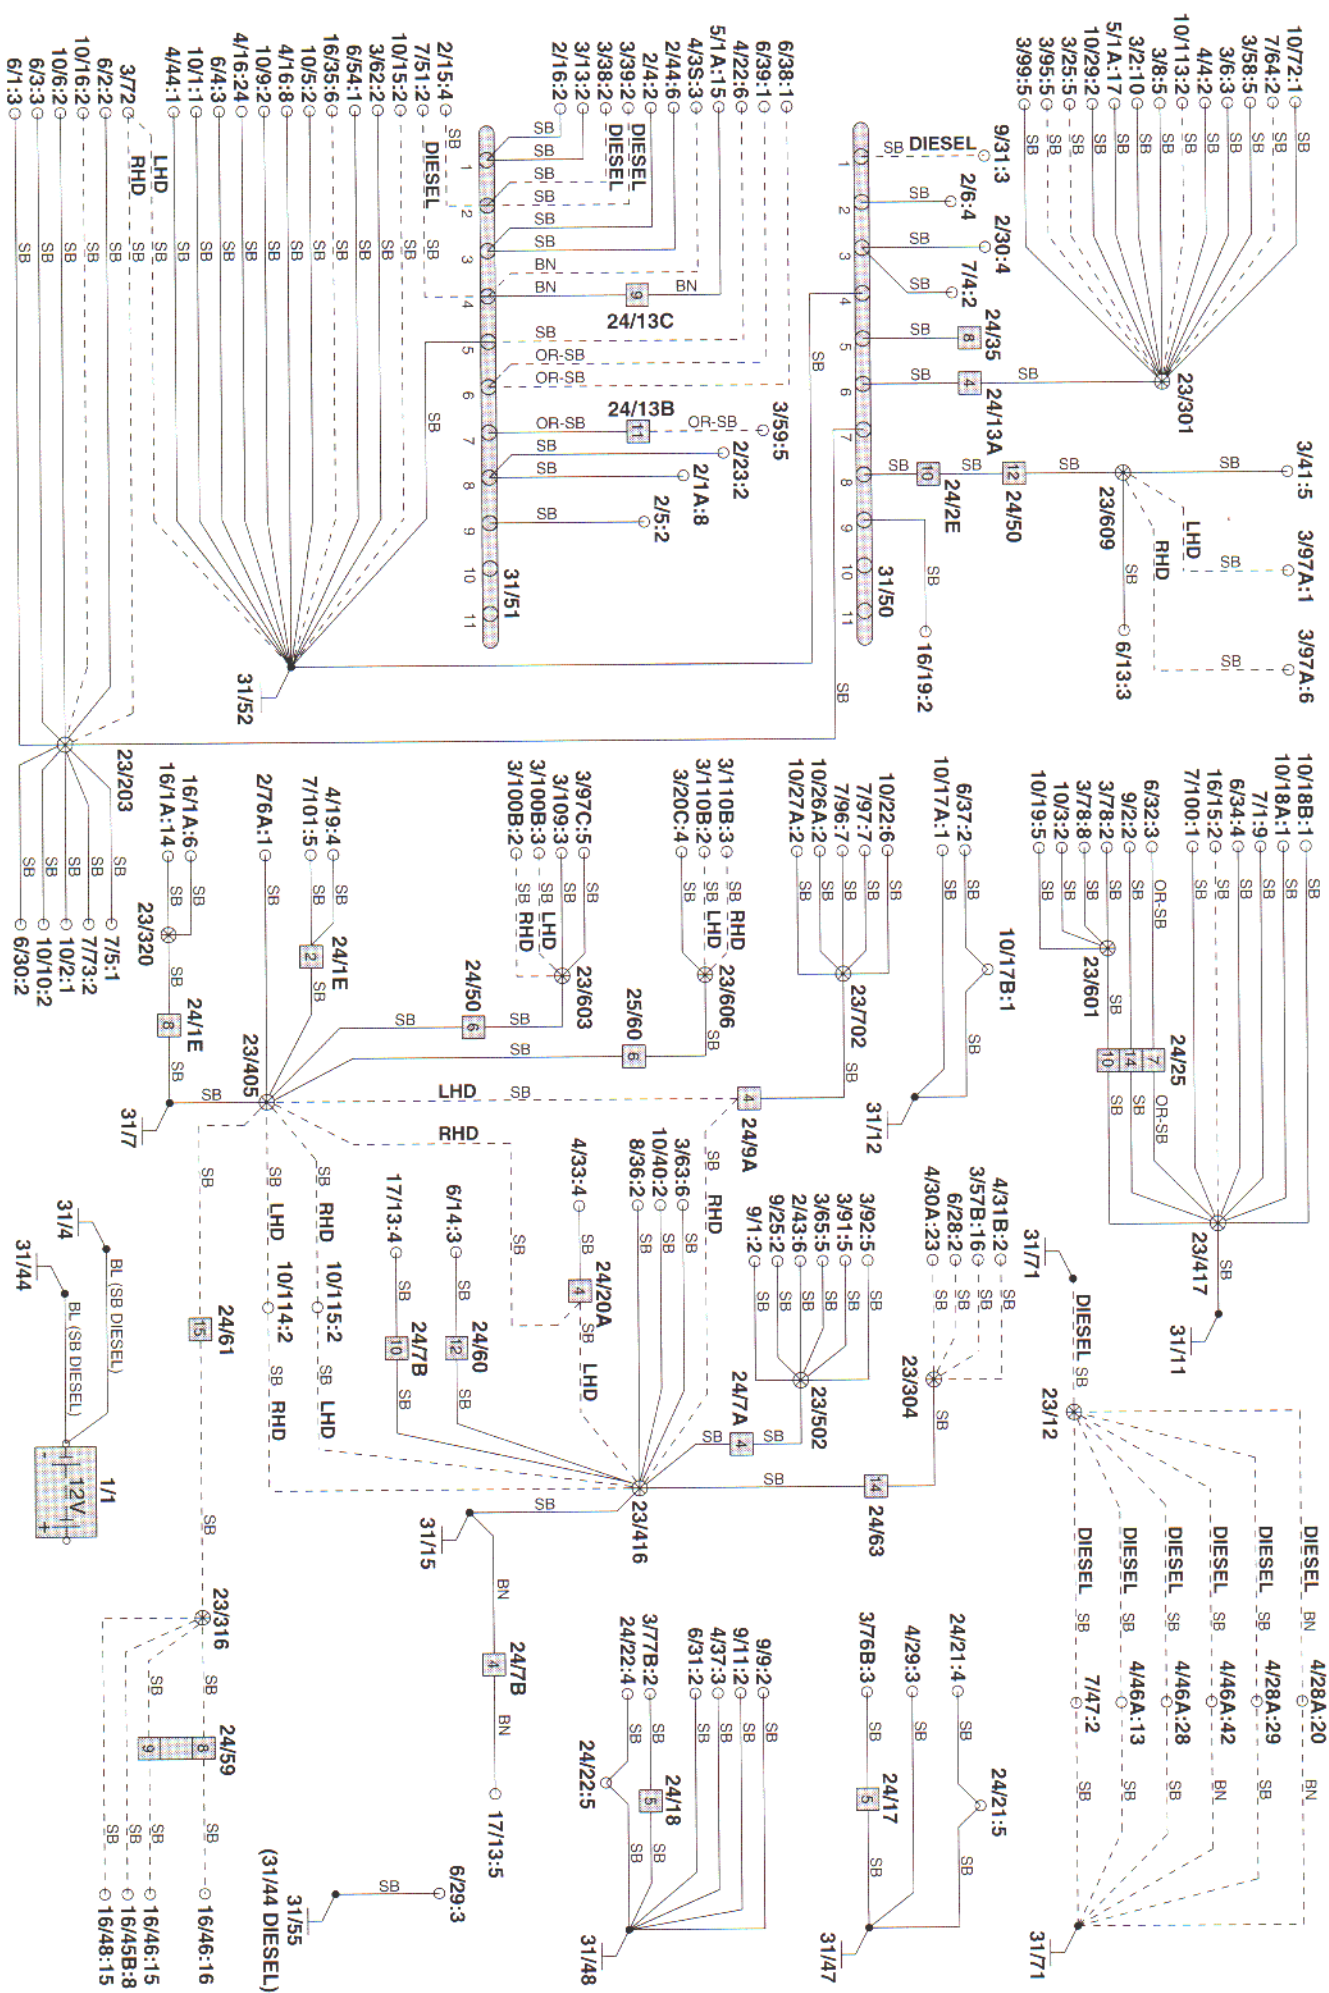

Ground points V70

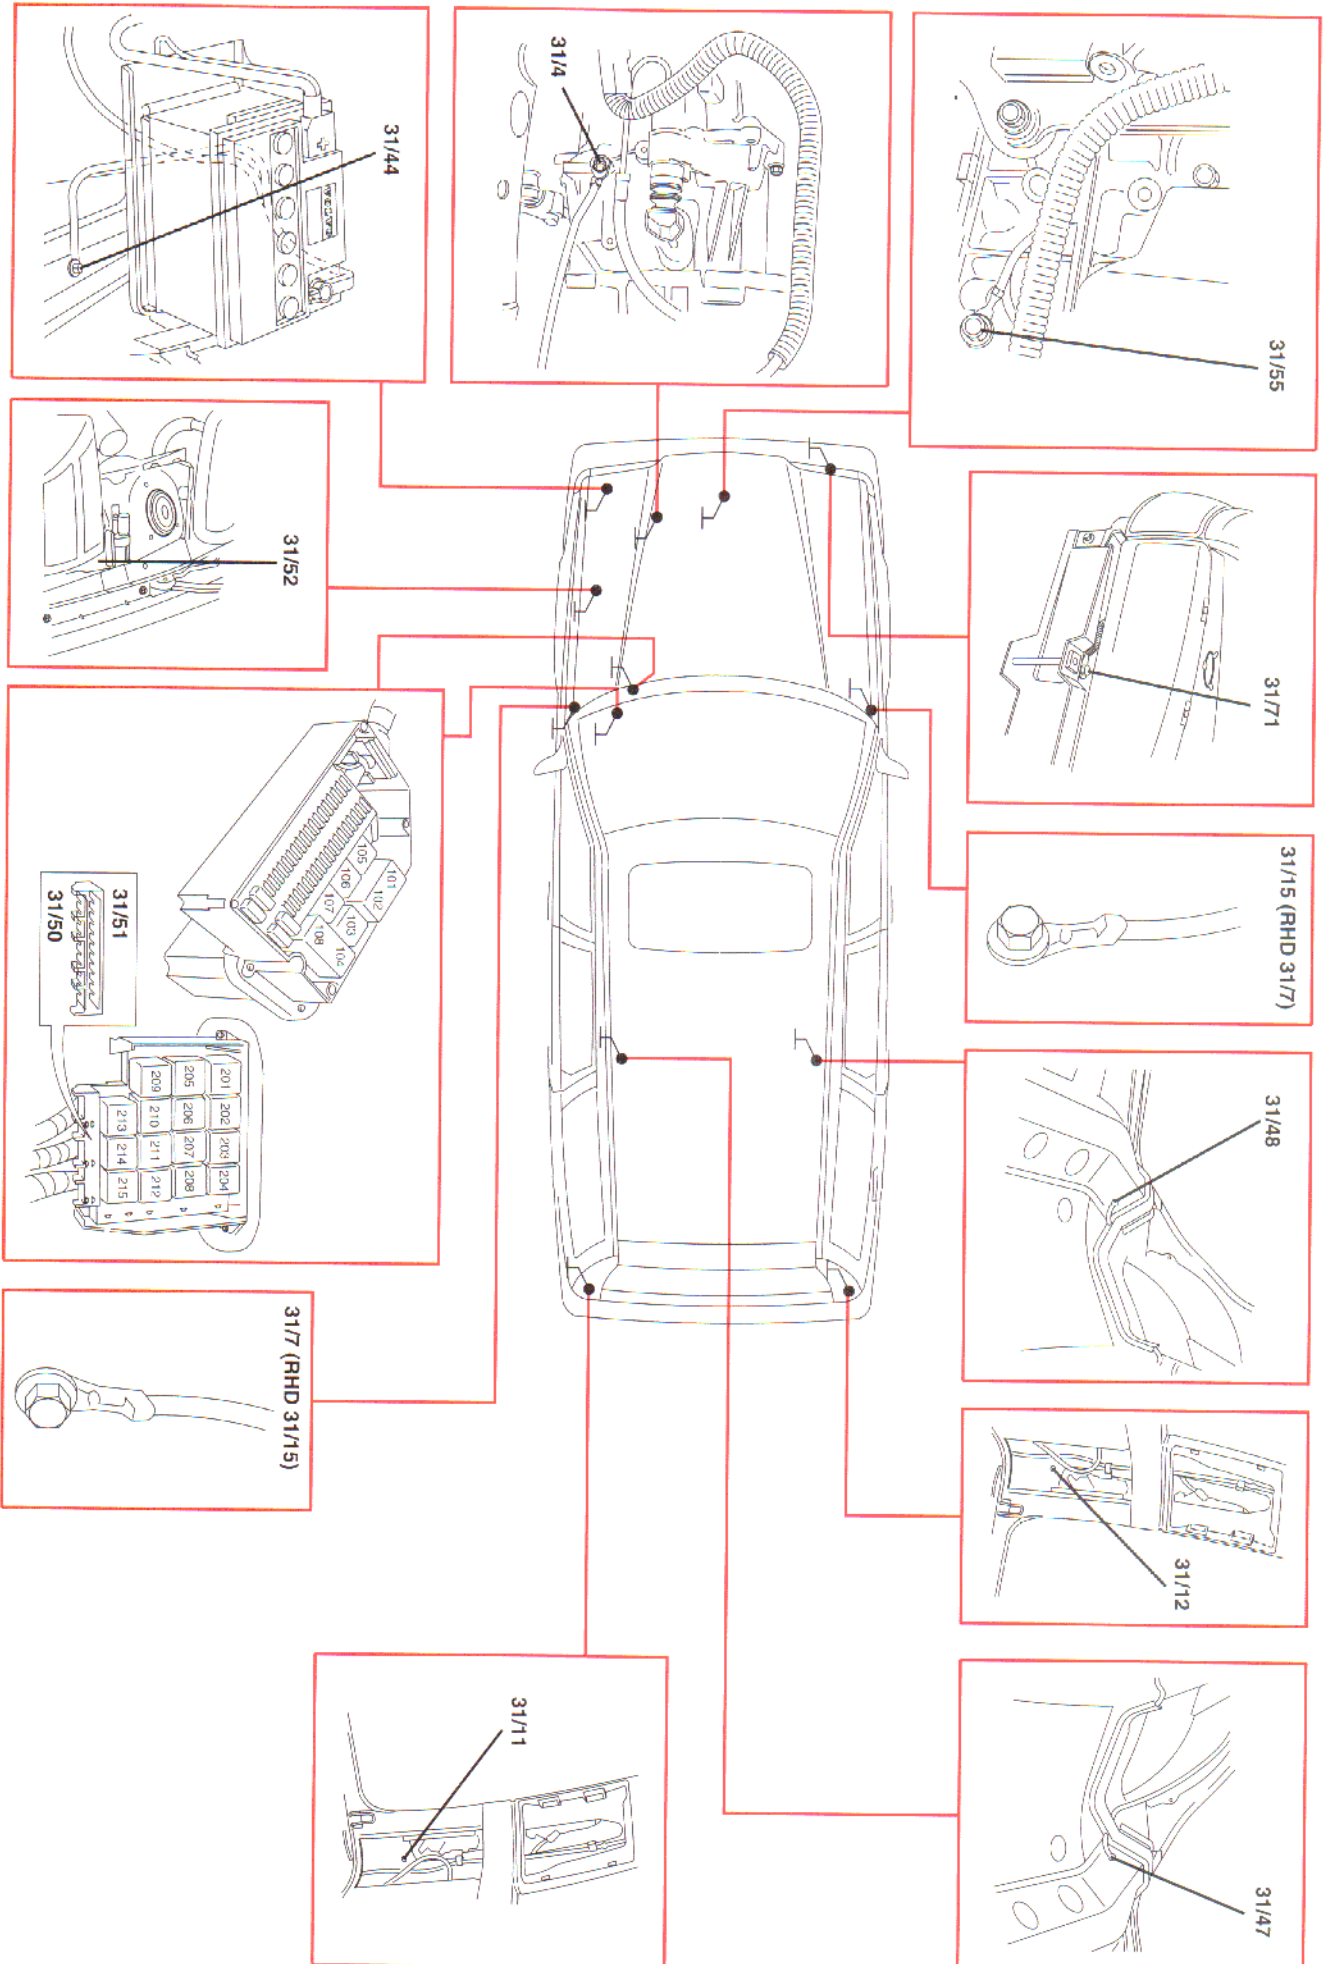

Ground points

31/4	Battery
-------------	---------

31/5	Rear demist (S70)
-------------	-------------------

31/7	Lock unit driver's door
	Lock unit passenger door
	Passenger compartment courtesy light (LHD)
	Reading light back left (LHD)
	Reading light back right (LHD)
	Vanity mirror lighting left side (LHD)
	Vanity mirror lighting right side (RHD)
	Movement sensor left side (LHD)
	Movement sensor right side (LHD)
	Control module central locking/anti-theft alarm
	Control module power sun roof (RHD)
	Radio
	Glass breakage sensor
	Remote-controlled central locking/alarm
	Power window switch driver's door
	Power window switch passenger door
	Switch trunk lid/fuel tank filler cover
	Display RTI
	Control module RTI
	CD-player RTI
	Amplifier

31/11	Lock unit tailgate
	Bulb failure warning sensor rear
	Power antenna
	Left tail lamp
	License (Number) plate lighting
	High-mounted stop (brake) lamps (V70)
	Tailgate wiper motor
	Rear demist (V70)
	CD changer
	Left fan cargo compartment
	Antenna amplifier
	Tilt sensor

31/12	Right tail lamp unit
	Right fan cargo compartment
	Central locking motor fuel tank filler cover

31/15	Climate control system
	Mode selector AW 50-42
	Heated rear seat switch
	Heated seat switch left
	Heated seat switch right
	Control module ECC
	Power unit blower fan
	Control module power sunroof (LHD)
	Blower fan (Not ECC)
	Heated door mirror passenger side
	Shift lock solenoid
	Cigarette lighter/12V outlet front
	Cigarette lighter/12V outlet back
	Passenger compartment courtesy light (RHD)
	Reading lamp left rear (RHD)
	Reading lamp right rear (RHD)
	Gear selector light
	Vanity mirror lighting left side (LHD)
	Vanity mirror lighting right side (RHD)
	Data link connector (DLC)
	Heated rear seat relay
	Movement detector
	Movement sensor left side (RHD)
	Movement sensor right side (RHD)

31/44	Battery
	Engine cooling fan (FC) (Diesel)

31/47	Lock unit left rear
	Seat belt lock, left front seat (LHD)
	Control module left seat
	Backrest heater pad left seat
	High-mounted stop (brake) lamps (C70/S70)

31/48	Lock unit right rear
	Seat belt lock, right front seat (RHD)
	Control module right seat
	Fuel pump
	Backrest heater pad right seat
	Backrest heater pad rear seat left side
	Backrest heater pad rear seat right side

31/50	Overload relay X-supply
	Overload relay 15I-supply
	Light switch
	Hazard lights switch with flasher relay
	Heated rear window/door mirrors switch
	Power sunroof switch
	Fog tail lamp switch
	TRACS switch
	Rheostat
	Combined instrument panel
	Windshield wiper motor
	Washer motor front
	Washer motor rear windshield
	Coolant level sensor
	Washer fluid level sensor
	Right side turn signal flasher
	Glove box lighting
	Ashtray lighting
	Indicator LED alarm/immobilizer
	Alarm horn
	Accessories connector
	Kickdown switch throttle mechanism (RHD)
	Right front fog lamp
	Right parking lamps and turn signal lamp front
	Right headlamp washer motor
	Front foglamp switch
	Power door mirror switch
	Power window switch driver's door
	Heated door mirror driver's side
	Cabin temperature sensor
	Engine coolant heater
	Cargo compartment fan switch
	Sun sensor ECC and indicator LED alarm/immobilizer
	Radio
	Right front lamp unit















31/51	Accelerator pedal (AP) position sensor
	Main headlamp relay with bulb failure warning sensor
	Intermittent wiper relay windscreen wiper
	Relay seat belt reminder/ key warning
	Relay exhaust temperature switch
	Intermittent tailgate wiper relay
	Relay fuel pump (FP)
	Heated rear window/door mirrors relay
	Switch tailgate wash/wiper
	Headlamp range adjuster
	Control module, cruise control
	Combined instrument panel
	Headlamp height adjustment motor, left
	Headlamp height adjustment motor, right
	Electronic start inhibitor (Immobilizer)
	Brake switch (Diesel)
	Clutch pedal (Diesel)

31/52	Ignition discharge module (IDM) and ignition coil
	Ground rail power ground
	Ground rail signal ground
	Left side flasher unit
	Alarm switch hood
	Pulsed secondary air injection system (PAIR) pump
	Alarm siren
	Left front fog lamp
	ABS control module
	Left parking lamps and turn signal lamp front
	Left headlamp washer motor
	Left front lamp unit
	Engine coolant heater (Diesel)
	Brake fluid level sensor
	Kickdown switch throttle mechanism (LHD)
















31/55	Engine cooling fan (FC)(Gasoline)
--------------	-----------------------------------

31/71	Control module AW 50-42
	Engine control module (ECM)
	PTC resistor air preheating


Electrical distribution
Fenix 5.2

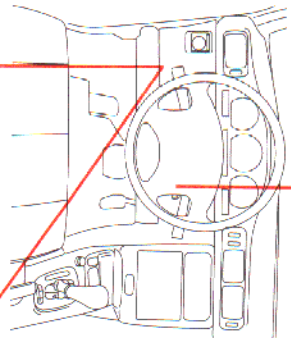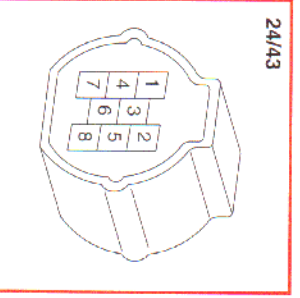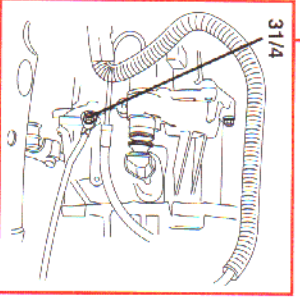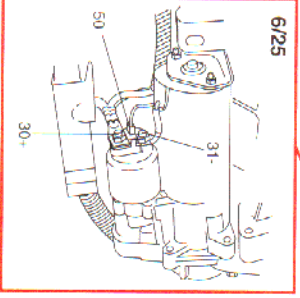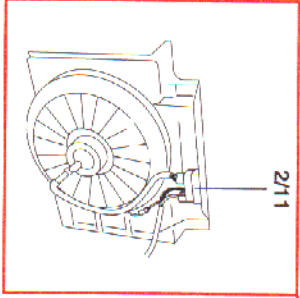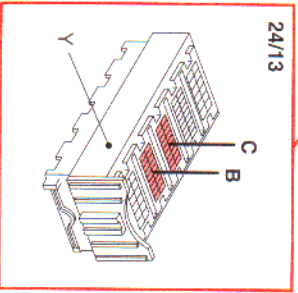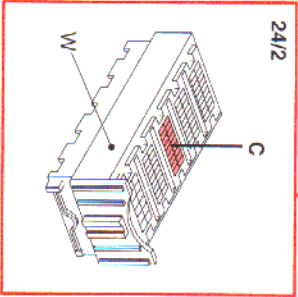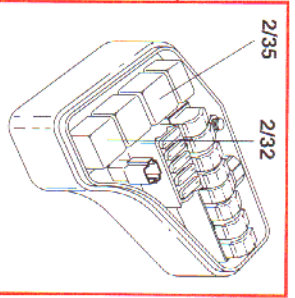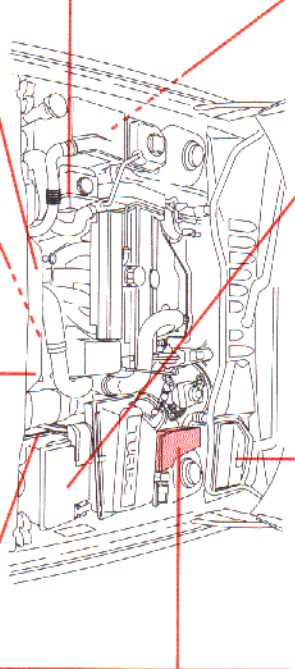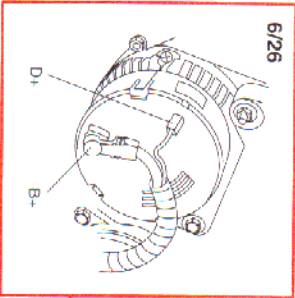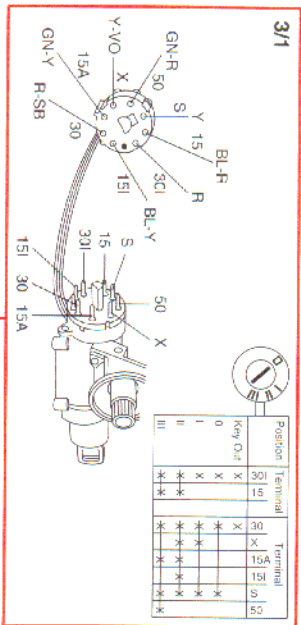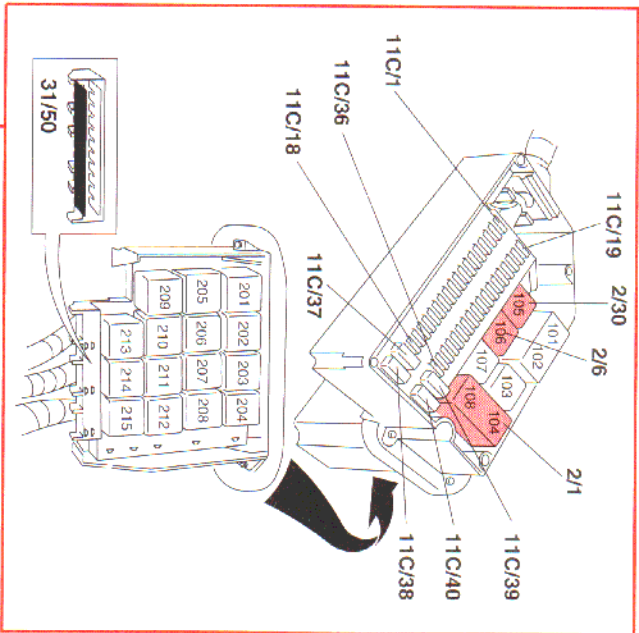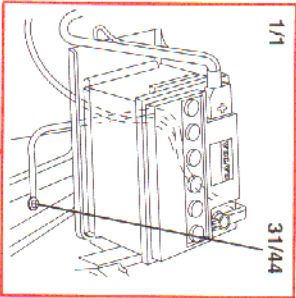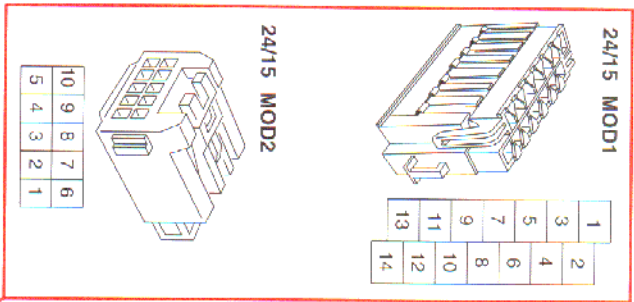


Electrical distribution
Motronic 4.3/4.4

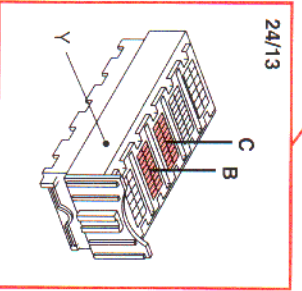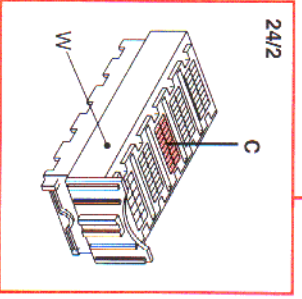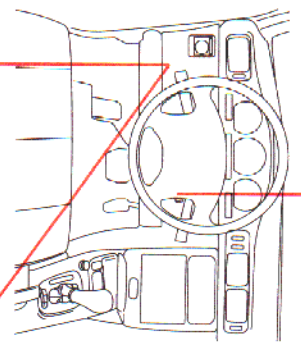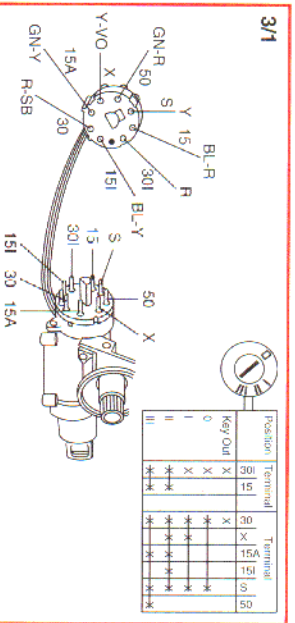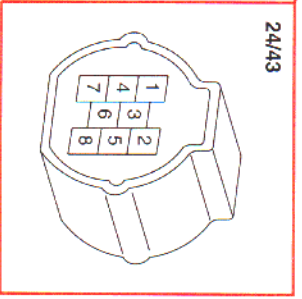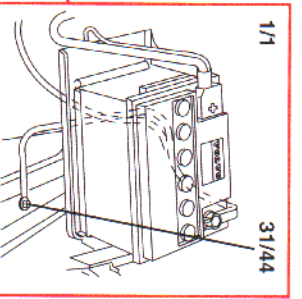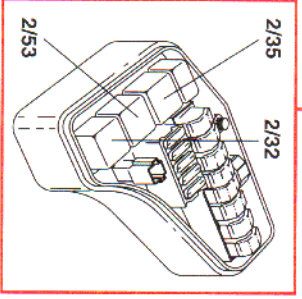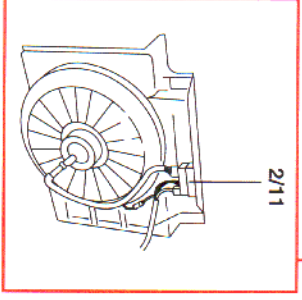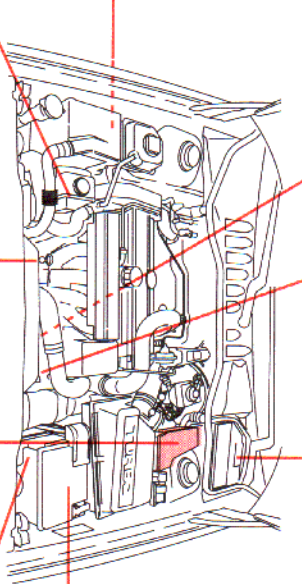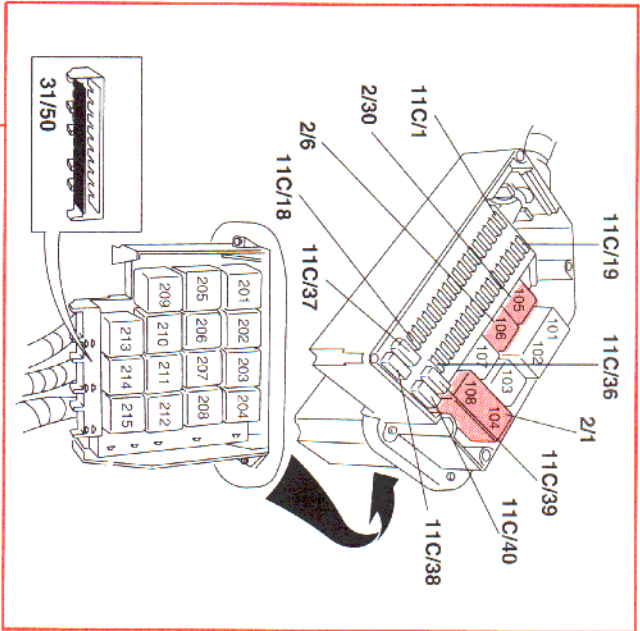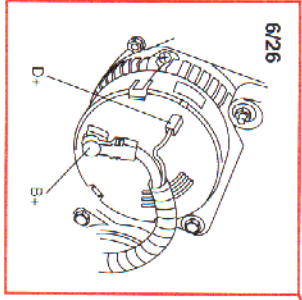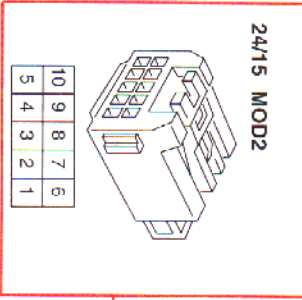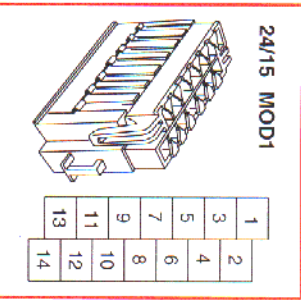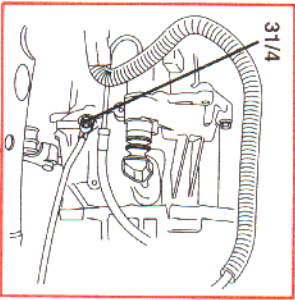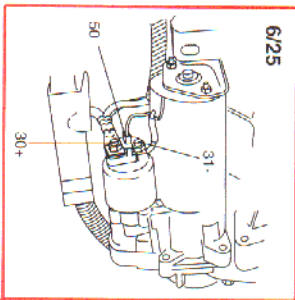

Electrical distribution MSA 15.7

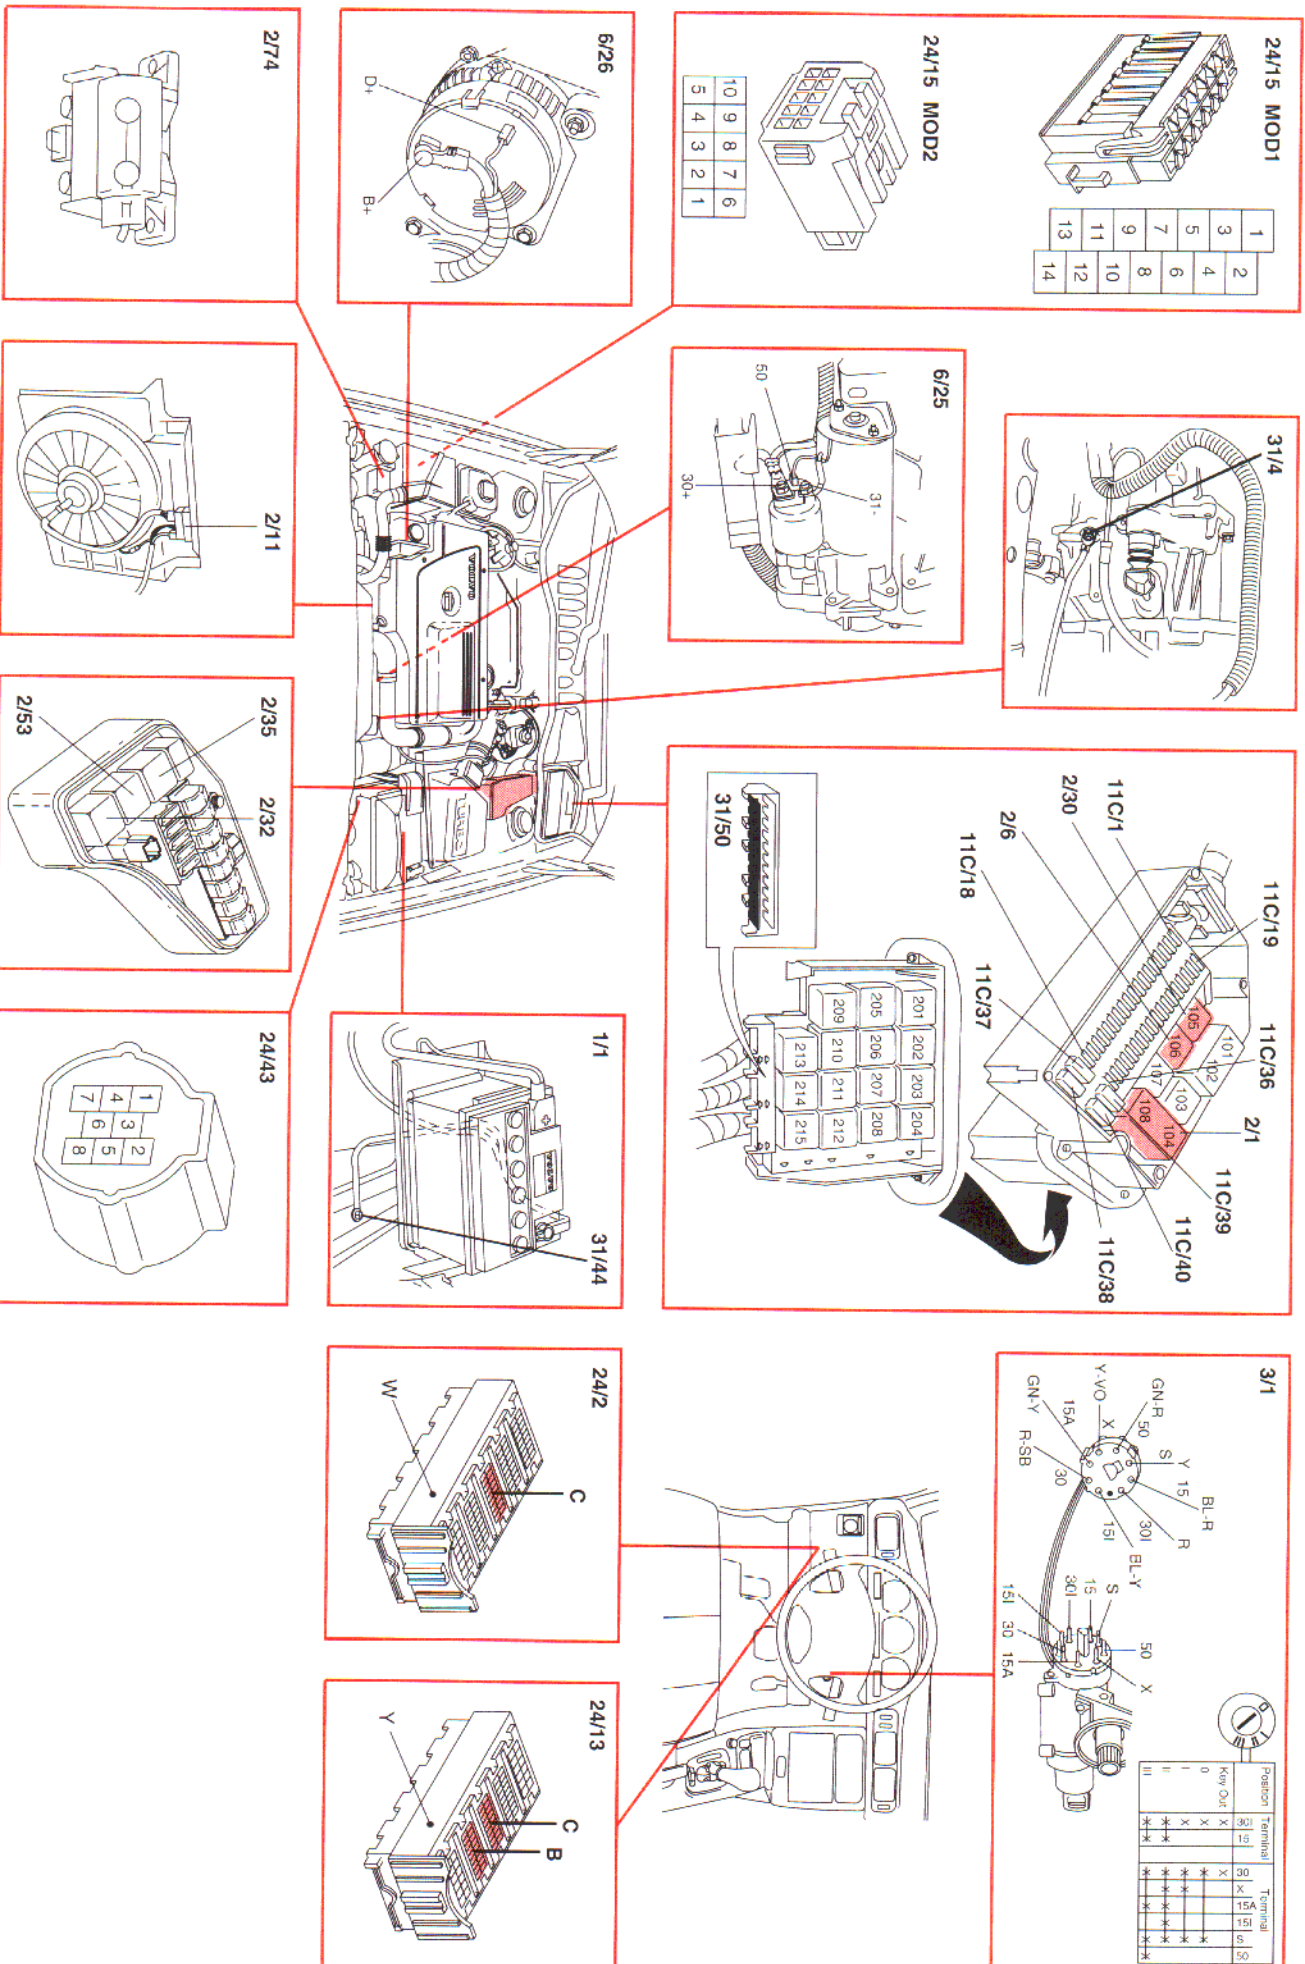


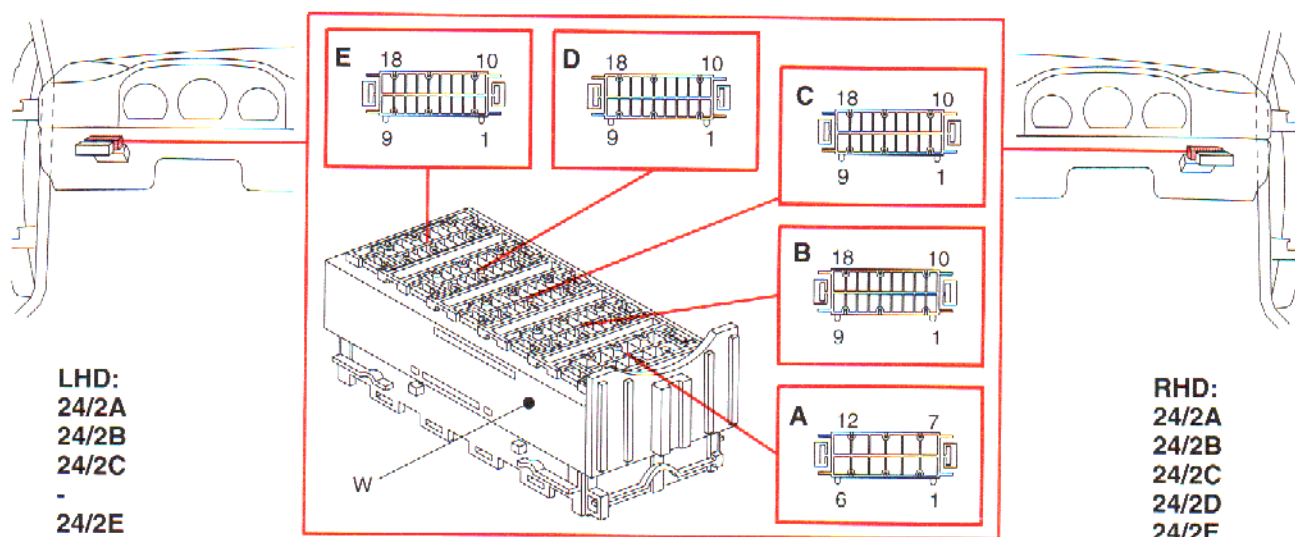

24/2A Green 12-pin Firewall cable harness - Engine compartment harness

Term.	Female	Male	Color
1	Connector 24/4C:1	Fuse 11C/40:2	GN
2	Junction point 23/412	Fuse 11C/37:2	BL
3	Connector 24/7A:2 (S70/V70) Connector 24/4C:12 (C70)	Fuse 11C/28:2 (S70/V70) Relay heated seat right :3 (C70)	BL-Y GN-BN
4	Connector 24/63:1	Fuse 11C/31:2	Y-VO
5	Connector 24/7B:1 Connector 24/63:4	Fuse 11C/5:2	R
6	Connector 24/4E:1 (C70 LHD) Connector 24/3E:5 (C70 LHD)	Junction point 23/227 (C70 LHD) Fuse 11C/9:2 (C70 RHD)	BL-R R
7	Connector 24/4C:5 (S70/V70) Connector 24/7A:5 (Not C70 RHD) Connector 24/3E:12 (C70 RHD)	Fuse 11C/36:2 (Not C70 RHD) Connector 24/14D:15 (S70/V70 LHD) relay heated seat left :3 (C70 RHD)	Y-W Y-R
8	Control module lock/alarm B:1 (Not C70 RHD) Connector 24/9A:8 (S70/V70) Connector 24/3E:4 (C70 RHD)	Fuse 11C/6:2 (Not C70 RHD) Fuse 11C/12:2 (C70 RHD)	GR-R R
9	Connector 24/3E:2 (RHD) Connector 24/4E:2 (C70 LHD)	Fuse 11C/39:2 (RHD) Engine control module (ECM) B:19 (C70 LHD)	GN-R BL-W
10	Connector 24/3E:6 (RHD) Connector 24/9A:10 (C70 LHD)	Fuse 11C/16:3 (RHD) Connector 24/14D:6 (C70 LHD)	GR-R BL
11	Connector 24/3E:1 (RHD)	Relay rear demist/door mirrors :3 (Not C70 LHD)	Y-R
12	Connector 24/7A:3 Connector 24/61:2	Fuse 11C/30:2	Y-VO

Connector 24/2

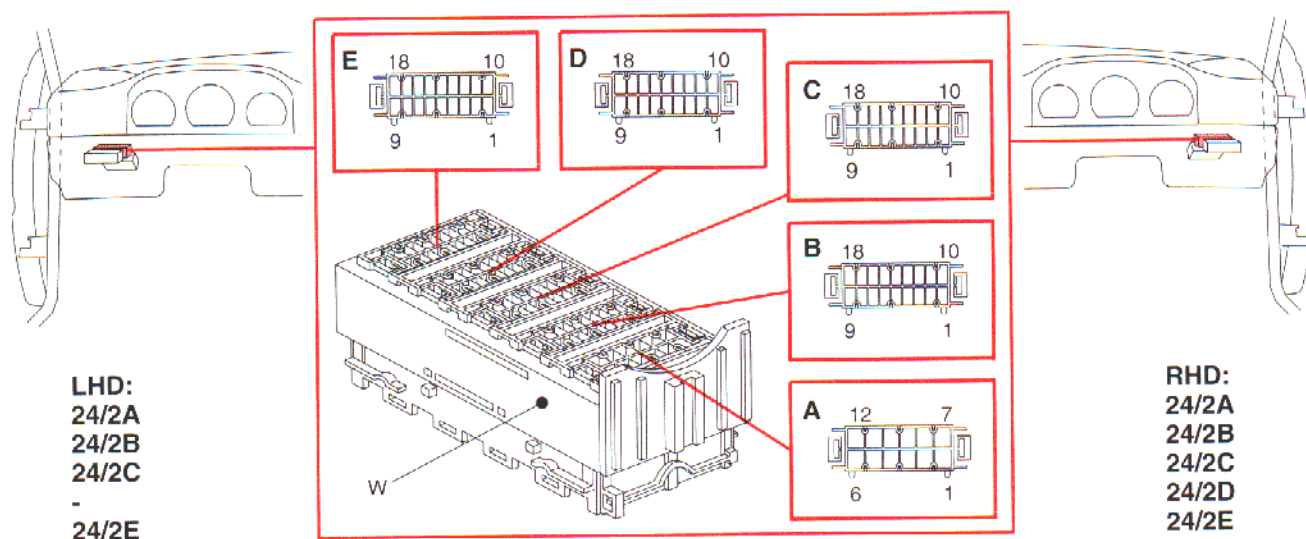


24/2B Light blue 18-pin Firewall cable harness - Engine compartment harness

Term.	Female	Male	Color
1	Connector 24/4B:1	Relay fuel pump (FP) :3	P
2	Connector 24/20A:3 (S70/V70) Connector 24/9A:5 (C70)	Connector 24/13C:17	W
3	Connector 24/20A:2 (S70/V70) Connector 24/9A:6 (C70)	Connector 24/13C:16	GN
4	Junction point 23/411	Fuse 11C/15:2 Antenna ring/Ignition lighting :1	R
5	Connector 24/9A:3	Relay seat belt reminder/key warning :5	GR
6	Connector 24/3B:5 (LHD, Not Diesel MOD2) Connector 24/4C:6 (RHD)	seat belt reminder/key warning relay :6 (Not Diesel LHD MOD2)	GR-SB
7	Control module lock/alarm B:10	Fuse 11C/18:1 Ignition switch :S (C70)	BL-GN Y
8	Lock/alarm control module B:9 Radio B:7	Connector 24/13C:3 Control module, cruise control S:8 (S70/V70) Engine control module (ECM) B:18 (S70/V70)	Y-SB
9	Control module lock/alarm A:11	Immobilizer :7	GR-OR
10	Control module lock/alarm B:14	Alarm siren :2	VO-W
11	Connector 24/9A:5 (S70/V70) control module lock/alarm A:22	Connector 24/13D:13 (S70/V70) Alarm siren :3	OR-W
12	Connector 24/9A:6 (S70/V70) control module lock/alarm B:15	connector 24/13D:12 (S70/V70) Alarm :5	P-W
13	Connector 24/4B:10	ABS control module :2	GN-R
14	Connector 24/4B:11	ABS control module :10	GN-Y
15	Connector 24/4B:12	ABS control module :1	GN-W
16	Connector 24/4B:13	ABS control module :17	GN-SB
17	Connector 24/7B:9 (Gasoline)	Control module cruise control S:4	Y-R
18	Control module lock/alarm A:14 (C70)	Fuse 11C/1:1 (C70)	P-SB

24/2C Yellow 18-pin**Firewall cable harness - Engine compartment harness**

Term.	Female	Male	Color
1	Connector 24/61:10 Connector 24/3D:6 (RHD)	Connector 24/15:7 (MOD1) Connector 24/15:6 (MOD2) Connector 24/14D:6 (LHD)	BL
2	Connector 24/63:3	A/C pressure switch (Pressostat) :1	BL-GR
3	Control module lock/alarm :5 (S70/V70 LHD) Junction point 23/424 (C70 RHD) Connector 24/7A:10 (C70 LHD)	Connector 24/14D:16 (LHD S70/V70) Fuse 11C/1:2 (C70) Relay left heated seat :2 (C70 LHD)	GR-SB P-SB Y-R
4	Connector 24/3C:9	Connector 24/13D:5	BL-BN
5	Connector 24/4E:4 (LHD) Control module lock/alarm A:19 (S70/V70 LHD) Connector 24/7A:2 (C70 RHD)	Engine control module (ECM) B:15 (LHD gasoline) 15l-rail (C70)	BL-GN BL-Y
6	Connector 24/4E:5 (LHD) Connector 24/7A:10 (C70 RHD)	Engine control module (ECM) B:31 (LHD gasoline) Left heated seat relay :2 (C70)	OR-SB Y-R
7	Connector 24/4E:6 (LHD) Connector 24/7A:8 (C70 RHD)	Junction point 23/221 (LHD gasoline) Right heated seat relay :1 (C70)	BN-P GN-BN
8	Connector 24/50:10 Control module lock/alarm A:23	Connector 24/13D:6 Relay seat belt reminder/key warning :3 (S70/V70)	W-SB
9	SRS Sensor module :5	Junction point 23/239	Y-VO
10	Junction point 23/428 (Not S70/V70 MOD2) Connector 24/50:18 (S70/V70 MOD2) Connector 24/60:18 (S70/V70 MOD2)	Rear demist/heated door mirrors relay :4 Connector 24/13A:11	Y-R
11	Connector 24/7A:1 (S70/V70) Control module lock/alarm B:1 (C70 RHD) Connector 24/7A:2 (C70 LHD)	Fuse 11C/9:2 (S70/V70) Fuse 11C/6:2 (C70) 15l-rail (C70 LHD)	R BL-Y
12	SRS Sensor module :10	Contact reel steering wheel SRS :1	OR
13	SRS Sensor module :11	Contact reel steering wheel SRS :2	SB
14	SRS Sensor module :12	Connector 24/13C:7 Connector 24/15:3 Engine coolant heater :4 (Diesel)	R-W
15	Connector 24/4E:1(S70/V70 LHD MOD2) Connector 24/9A:9 (C70)	Junction point 23/227 MOD2 S70/V70) Connector 24/13A:8 (C70)	BL-R BN-OR
16	Connector 24/4E:2 (S70/V70 LHD MOD2) Connector 24/7A:5 (C70 RHD) Connector 24/7A:8 (C70 LHD)	EVAP canister shut-off valve :2 Engine control module (ECM) B:19 (LHD MOD2 gasoline S70/V70) Fuse 11C/36:2 (C70) Right heated seat relay (C70 LHD)	BL-W Y-W GN-BN
17	Control module lock/alarm B:5 Connector 24/60:10	Connector 24/13D:10	Y-BN
18	Junction point 23/421	Junction point 23/222 (Not gasoline S70/V70) ABS control module :13 (C70) Immobilizer :3 (C70) Control module AW 50-42 B:22 (C70 LHD) Engine control module (ECM) LHD)	W

Connector 24/2

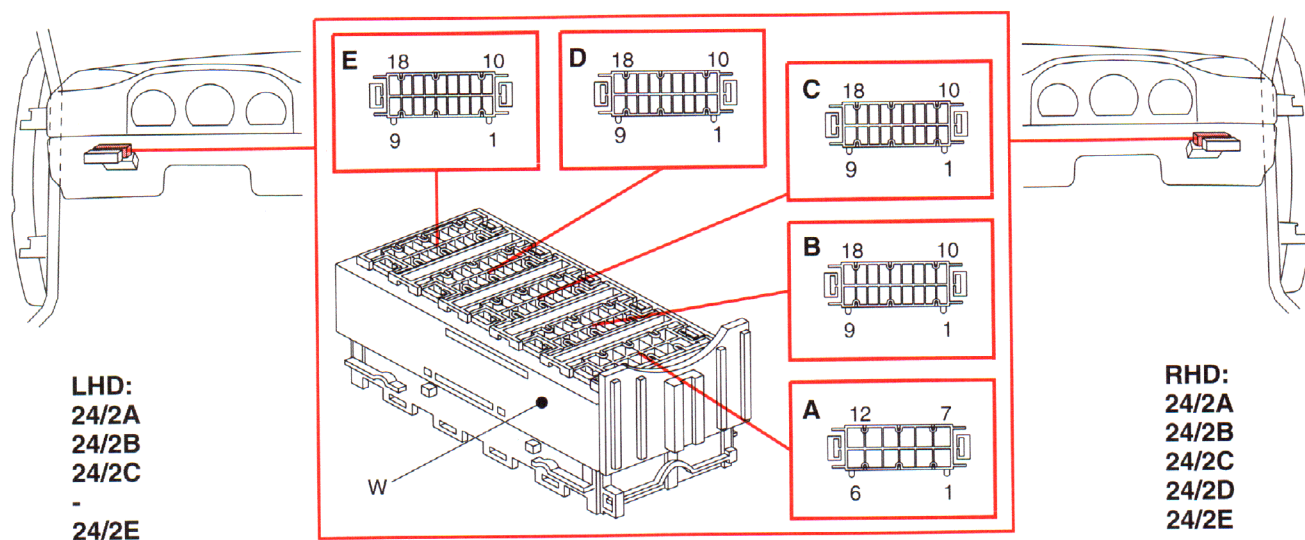


24/2D Red 18-pin (RHD) Firewall cable harness - Engine compartment harness

Term.	Female	Male	Color
1	Connector 24/3D:1	Fuse 11C/23:3 Left headlamp :4	W
2	Connector 24/3D:2	Fuse 11C/24:3	GR
3	Connector 24/3D:3	Junction point 23/201	Y
4	Connector 24/3D:4	Connector 24/13D:7 Left headlamp :7	GN-W
5	Connector 24/3D:5	15l-rail	BL-Y
6	-	-	
7	Connector 24/3D:7	Fuse 11C/25:2	VO-W
8	Connector 24/3D:8	Junction point 23/207	GN
9	Connector 24/3D:9	Junction point 23/208	BL-GN
10	Connector 24/3D:10	Connector 24/13B:14	BL-W
11	Connector 24/3D:18 (S70/V70)	X-rail (S70/V70)	Y-VO
12	Connector 24/3D:17 (S70/V70)	Intermittent relay tailgate wiper :1 (S70/V70)	GN-OR
13- 18	-	-	

24/2E White 18-pin
Firewall cable harness - Engine compartment harness

Term.	Female	Male	Color
1	Shift lock solenoid :1	Stop (brake) lamp switch :3	GN
2	Mode selector AW 50-42 :2	Control module AW 50-42 :17	BN-GR
3	Mode selector AW 50-42 :1	Control module AW 50-42 :16	GN-OR
4	Mode selector AW 50-42 :5	Connector 24/13C:2 Control module AW 50-42 :7 (S70/V70)	GR-OR
5	Connector 24/3C:2 (LHD) Junction point 23/421	Connector 24/13B:9	W
6	Connector 24/7B:3	Immobilizer :1 (Gasoline)	Y-BN
7	Control module lock/alarm A:24 Connector 24/9A:2	Antenna ring/Key lighting :5	P-SB
8	Catalytic converter thermocouple :1	Exhaust temperature sensor relay :1	W-SB
9	Catalytic converter thermocouple :2	Exhaust temperature sensor relay :5	BN
10	Connector 24/50:12	Ground rail, power ground	SB
11	Junction point 23/440 Mode selector AW 50-42 :4 (MOD2) Control module lock/alarm B:8 (MOD2)	Fuse 11C/2:2	BL-R
12	Control module lock/alarm A:26	Fuse 11C/13:3 Connector 24/13D:18	R-SB R
13	Control module lock/alarm B:21	Relay starter motor :4	SB
14	Control module lock/alarm A:13	Junction point 23/208	BL-GN
15	Control module lock/alarm A:12	Junction point 23/207	GN
16	Control module lock/alarm A:3	Hood alarm switch :1	Y-SB
17	Control module lock/alarm B:18	Relay alarm horn :4	Y-R
18	Control module lock/alarm B:4	Connector 24/13D:11	R

Connector 24/3

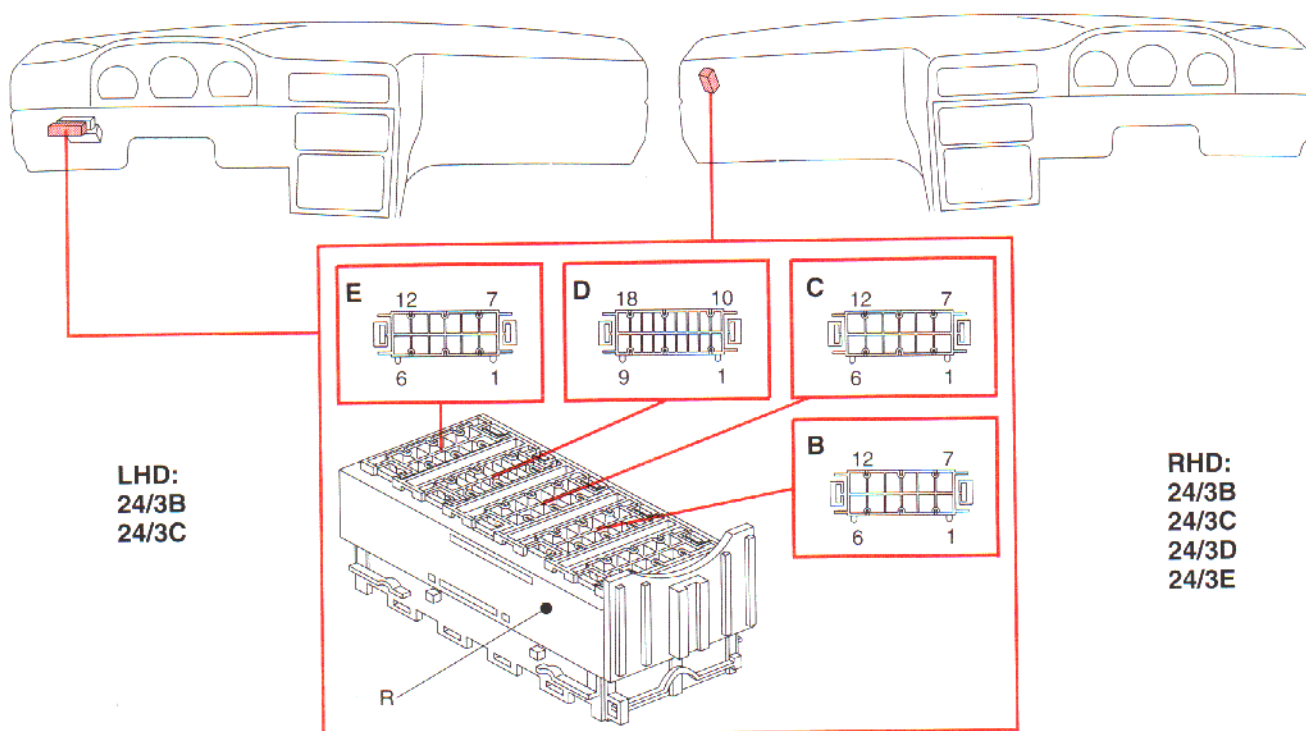

24/3B Light blue 12-pin Left door sill harness - Firewall cable harness

Term.	Female	Male	Color
1	Connector 24/21:1 (S70/V70)	Connector 24/7A:10 (S70/V70)	Y-R
2	Connector 24/17:8 (S70/V70)	Junction point 23/408 (S70/V70)	Y-BN
3	Connector 24/17:9 (S70/V70)	Junction point 23/409 (S70/V70)	Y
4	Connector 24/17:6 (S70/V70)	Junction point 23/419 (S70/V70 MOD1) Connector 24/50:4 (S70/V70 MOD2) Control module lock/alarm A:2 (S70/V70 MOD2)	VO VO VO-W
5	Connector 24/21:6 (MOD1)	Connector 24/2B:6 (LHD MOD1)	GR-SB
6	Connector 24/17:11 (S70/V70)	Control module lock/alarm B:6 (S70/V70)	GR-W
7	Connector 24/17:4 (S70/V70) Cargo compartment lighting (C70)	Junction point 23/411 Connector 24/61:13 (C70 LHD)	R R / GR-R
8	Connector 24/17:2 (S70/V70) Left-hand side parcel shelf loudspeaker :2 (S70/V70) Amplifier B:2 (C70)	Radio B:1 (S70/V70) Connector 24/1A:5 (C70) Connector 24/50:5 (C70 LHD) Connector 24/60:5 RHD)	BN-SB BN-SB/GN-SB GN-SB
9	License plate lighting :1 (S70) Connector 24/25:5 (V70 MOD2)	Control module lock/alarm A:7 (S70/V70)	Y
10	Tailgate lock unit :2 (S70) Connector 24/25:3 (V70)	Control module lock/alarm A:14 (S70/V70)	P-SB
11	Central locking motor fuel tank filler cover (S70/V70)	Control module lock/alarm B:12 (S70/V70)	Y-W
12	Connector 24/17:1 (S70/V70) Amplifier B:1 (C70)	Radio :2 (S70/V70) Connector 24/1A:6 (C70) Connector 24/50:7 (C70 LHD) Connector 24/60:7 (C70 RHD) Connector 24/61:7 (C70 LHD)	BN-W GN-W GR-SB

24/3C Yellow 12-pin**Left door sill harness - Firewall cable harness**

Term.	Female	Male	Color
1	Right-hand side parcel shelf loudspeaker (S70) Right-hand side D-post loudspeaker (V70) Amplifier B:3 (C70)	Junction point 23/426 (S70/V70) Connector 24/1A:11 (C70) Connector 24/60:7 (C70 LHD) Connector 24/50:7 (C70 RHD) Connector 24/61:7 (C70 LHD)	P-SB P-SB / R-W R-W GR-SB
2	Control module left seat A:4 (S70/V70) Control module left seat :4 (C70)	Junction point 23/421 Connector 24/2E:5 (LHD)	W
3	Connector 24/17:7 (S70/V70)	Connector 24/60:13 (S70/V70)	GN-GR
4	Connector 24/17:10 (S70/V70)	Connector 24/60:22 (S70/V70)	Y-SB
5	Connector 24/17:3 (S70/V70)	Junction point 23/423 (S70/V70 MOD1) Connector 24/4C:4 (S70/V70 MOD2) Connector 24/50:2 (S70/V70 MOD2)	GR-R
6	Right-hand side D-post loudspeaker (V70) Right-hand side parcel shelf loudspeakers (S70) Amplifier B:4 (C70)	Junction point 23/427 (S70/V70) Connector 24/1A:12 (C70) Connector 24/60:5 (C70 LHD) Connector 24/50:5 (C70 RHD) Connector 24/61:13 (C70 LHD)	P-W P-W / R-SB R-W / R-SB R-SB GR-R
7	Igniter seat belt tensioner left-hand side + (S70/V70) Seat belt tensioner igniter left-hand side + (C70)	Control module SRS :1	BL / VO BL-P
8	Seat belt tensioner igniter left-hand side - (S70/V70) Seat belt tensioner igniter left-hand side - (C70)	Control module SRS :2	P / Y BL-P
9	Cargo compartment lighting :2 (C70/S70) Lock unit tailgate :1 (S70) Connector 24/25:13 (V70) Connector 24/67:1 (C70)	Control module lock/alarm A:19 Connector 24/2C:4	BL-BN
10	Lock unit tailgate :3 (S70) Connector 24/25:6 (V70) Connector 24/67:3 (C70)	Control module lock/alarm A:20	GN-BN
11	Car tilt sensor :2	Control module lock/alarm B:3	Y-GR
12	Car tilt sensor :3	Control module lock/alarm A:17	Y-BN


Connector 24/3

24/3D Red 18-pin (RHD)

Left door sill harness - Firewall cable harness

Term.	Female	Male	Color
1	Rear bulb failure warning sensor :3 (S70/V70) License plate lighting :2 (S70/V70) Junction point 23/434 (C70)	Connector 24/2D:1	W
2	Bulb failure warning sensor rear :4 and :7 (S70/V70) Junction point 23/435 (C70)	Connector 24/2D:2	GR
3	Bulb failure warning sensor rear :12 Connector 24/70A:3 (C70)	connector 24/2D:3	Y
4	Bulb failure warning sensor rear :11	Connector 24/2D:4	GN-W
5	Bulb failure warning sensor rear :8 Connector 24/70B:2 (C70)	Connector 24/2D:5	BL-Y
6	Connector 24/81:4 (S70) Right tail lamp :6 (C70), B:6 (S70), A:5 (V70) Left tail lamp :2 (C70), B:6 (S70), A:5 (V70) Connector 24/70B:3 (C70)	Connector 24/2C:1 Connector 24/9A:10 (C70)	BL
7	Connector 24/81:3 (S70) Right tail lamp B:1 (S70), A:3 (V70) Left tail lamp B:1 (S70), A:3 (V70) Connector 24/70B:4 (C70)	Connector 24/2D:7	VO-W
8	Connector 24/81:1 (S70) Left tail lamp :6 (C70), K:6 (S70), B:3 (V70) Connector 24/70A:1 (C70)	Connector 24/2D:8	GN
9	Connector 24/81:2 (S70) Right tail lamp :2 (C70), K:6 (S70), B:3 (V70) Connector 24/70A:2 (C70)	Connector 24/2D:9	BL-GN
10	Power antenna/Antenna amplifier :3	Connector 24/2D:10	BL-W
11-14	-	-	
15	Control module left seat A:2 (S70/V70)	Connector 24/2A:7 (S70/V70) Connector 24/7A:5 (S70/V70)	Y-W / GN-R GN-R
16	Glass breakage sensor :1 (V70)	Control module lock/alarm A:5 (S70/V70)	GR-SB
17	Connector 24/25:8 (S70/V70)	Connector 24/2D:12 (S70/V70)	GN-OR
18	Connector 24 /25:9 (S70/V70)	Connector 24/2D:11 (S70/V70)	Y-R

Connector 24/3

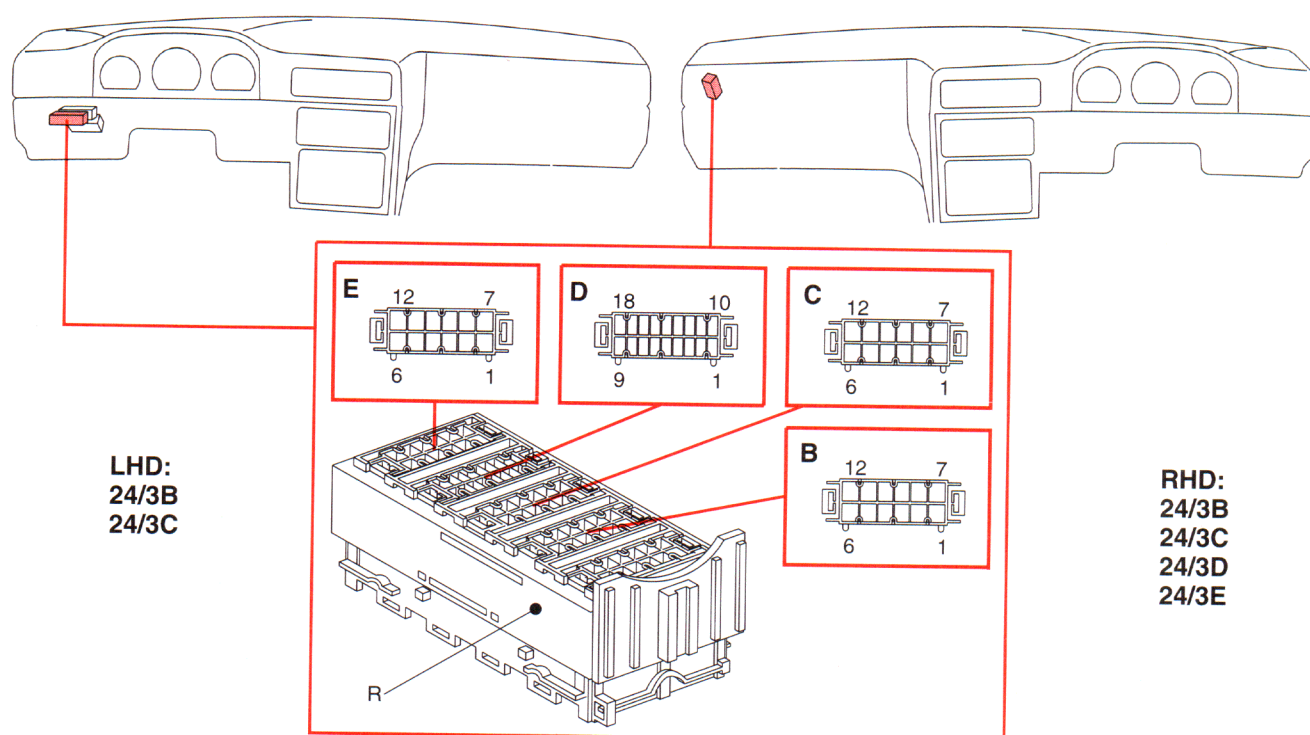


24/3E 12-pin (RHD)

Left door sill harness - Firewall cable harness

Term.	Female	Male	Color
1	Rear demist :1	Connector 24/2A:11	Y-R
2	Control module left seat :1	Connector 24/2A:9	GN-R
3	Connector 24/67:2 (C70)	Connector 24/2C:3 (C70)	P-SB
4	Amplifier + (C70)	Connector 24/2A:8 (C70)	R
5	Amplifier + (C70)	Connector 24/2A:6 (C70)	R
6	Power antenna (S70) CD player :1 (S70/V70) Junction point 23/242 (C70)	Connector 24/2A:10	GR-R
7-11	-	-	
12	Connector 24/21:1 (C70)	Connector 24/2A:7 (C70)	Y-R

Connector 24/4

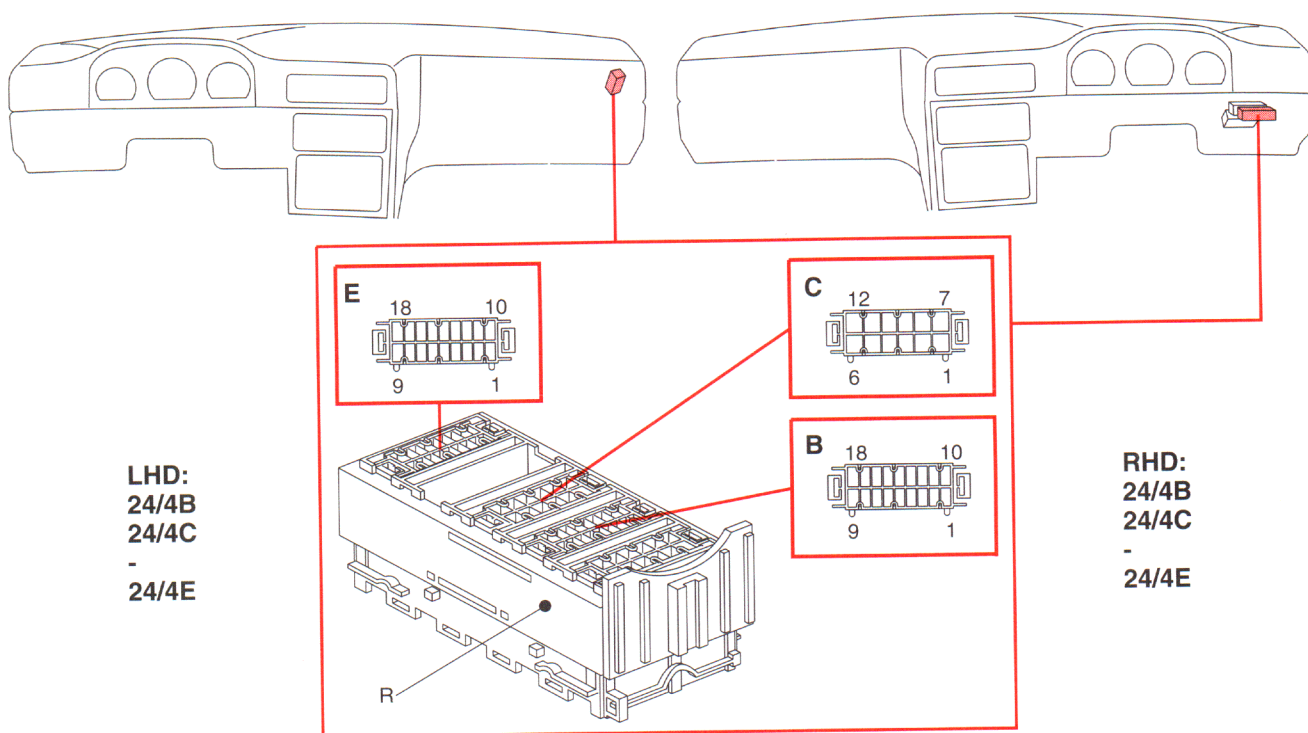

24/4B Light blue 18-pin Right door sill harness - Firewall cable harness

Term.	Female	Male	Color
1	Fuel pump (FP)/Fuel injection pump :1	Connector 24/2B:1	P
2	Fuel level sensor :1	Connector 24/1E:6	Y-GR
3	Fuel level sensor :2	Connector 24/1E:7	Y-R
4	Antenna amplifier (MOD1)	Junction point 23/427 (MOD1)	P-W
5	Connector 24/18:1 (MOD1)	Junction point 23/426 (MOD1)	P-SB
6	Connector 24/18:4 (S70/V70)	Junction point 23/411 (S70/V70)	R
7	Connector 24/18:11 (S70/V70)	Control module lock/alarm B:7 (S70/V70)	Y-W
8	Connector 24/22:1 (S70/V70)	Connector 24/7A:8 (S70/V70)	GN-BN
9	Control module right seat A:4	Junction point 23/421	W
10	Connector 24/19:1	Connector 24/2B:13	GN-R
11	Connector 24/19:3	Connector 24/2B:14	GN-Y
12	Connector 24/19:2	Connector 24/2B:15	GN-W
13	Connector 24/19:4	Connector 24/2B:16	GN-SB
14-16	-	-	-
17	Seat belt tensioner igniter right-hand side +	Control module SRS :3	BL
18	Seat belt tensioner igniter right-hand side -	Control module SRS :4	P



24/4C Yellow 12-pin
Right door sill harness - Firewall cable harness

Term.	Female	Male	Color
1	Control module right seat A:1	connector 24/2A:1	GN
2	Connector 24/18:7 (S70/V70) Central locking motor fuel tank filler cover :1 (C70)	Connector 24/50:24 (S70/V70) Control module lock/alarm B:12 (C70)	BL-GN Y-W
3	Connector 24/18:10 (S70/V70)	Connector 24/50:23 (S70/V70)	BL-SB
4	Connector 24/18:3 (S70/V70)	Junction point 23/423 (S70/V70 MOD1) Connector 24/3C:5 (S70/V70 MOD2)	GR-R
5	Control module right seat A:2 (S70/V70)	Connector 24/2A:7 (S70/V70 LHD) Connector 24/7A:5 (S70/V70 LHD)	Y-W
6	Connector 24/22:6	Connector 24/2B:6 (RHD)	GR-SB
7	Connector 24/18:2 (S70/V70 MOD2)	Connector 24/3C:6 (S70/V70 MOD2) Radio :5 (S70/V70 MOD2)	P-W
8	Connector 24/18:2 (S70/V70 MOD2)	Connector 24/3C:1 (S70/V70 MOD2) Radio :6 (S70/V70 MOD2)	P-SB
9	-	-	
10	Connector 24/18:8 (S70/V70)	Junction point 23/408 (S70/V70)	Y-BN
11	Connector 24/18:9 (S70/V70)	Junction point 23/409 (S70/V70)	Y
12	Connector 24/18:6 (S70/V70) Connector 24/22:1 (C70)	Junction point 23/425 (S70/V70 MOD1) Control module lock/alarm A:15 (S70/V70 MOD2) Connector 24/60:4 (S70/V70 MOD2) Connector 24/2A:3 (C70)	VO GN-BN

24/4E White 18-pin
Right door sill harness - Firewall cable harness



Term.	Female	Male	Color
1	EVAP canister shut-off valve :1 (MOD2)	Connector 24/2C:15 (S70/V70 MOD2 LHD) Connector 24/2A:6 (C70 LHD)	BL-R
2	EVAP canister shut-off valve :2 (MOD2)	Connector 24/2C:16 (S70/V70 MOD2 LHD) Connector 24/2A:9 (C70 LHD)	BL-W
3	-	-	
4	Fuel tank pressure sensor :1 (MOD1) Fuel tank pressure sensor :3 (MOD2)	Connector 24/2C:5 (LHD)	BL-GN
5	Fuel tank pressure sensor :3 (MOD1) Fuel tank pressure sensor :2 (MOD2)	Connector 24/2C:6 (LHD)	OR-SB
6	Fuel tank pressure sensor :2 (MOD1) Fuel tank pressure sensor :1 (MOD2)	Connector 24/2C:7 (LHD)	BN-P
7-18	-	-	

Connector 24/7

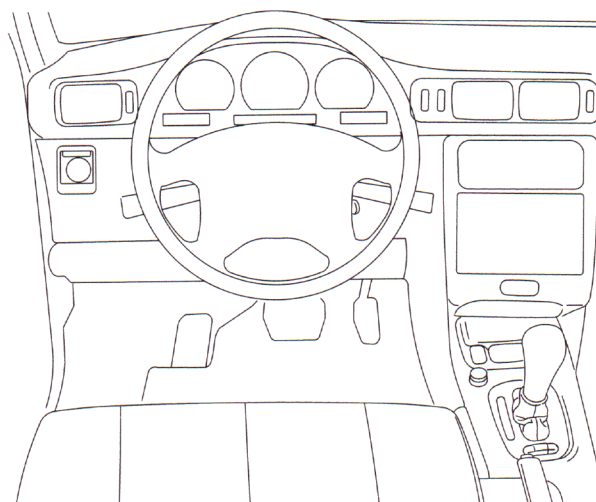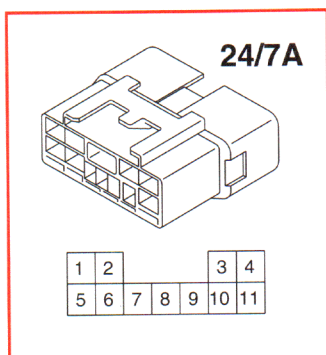

24/7A Natural 11-pin Tunnel cable harness - Firewall cable harness


Term.	Female	Male	Color
1	Heated rear seat relay :2 (S70/V70)	Connector 24/2C:11 (S70/V70)	R
2	Junction point 23/503 (S70/V70) Left heated seat switch :3 (C70)	Connector 24/2A:3 (S70/V70) Connector 24/2C:11 (C70)	BL-Y
3	Cigarette lighter/12V outlet front :1	Connector 24/2A:12 Control module RTI :2 (S70/V70) Connector 24/61:2 (C70)	Y-VO
4	Junction point 23/502	Junction point 23/416	SB
5	Cigarette lighter/12V outlet rear :1	Connector 24/2A:7 Connector 24/4C:5 (S70/V70 LHD) Connector 24/3D:15 (S70/V70 RHD)	Y-W
6	-	-	,
7	Left heated seat switch :2 Right heated seat switch :2 Right heated seat switch :3 (C70)	Junction point 23/414	P BL-Y
8	Right heated seat switch :4	Connector 24/4B:8 (S70/V70) Connector 24/2C:16 (C70)	GN-BN
9	-	-	
10	left heated seat switch :4	Connector 24/3B:1 (S70/V70) Connector 24/2C:3 (C70)	Y-R
11	-	-	

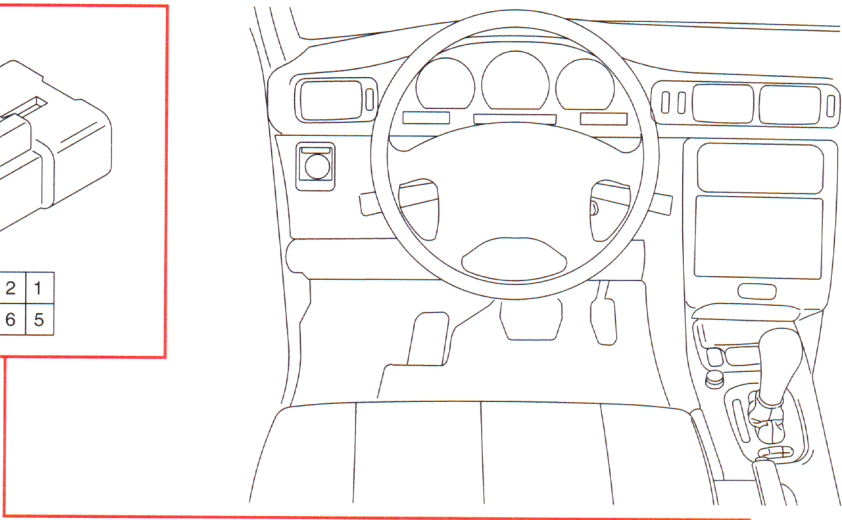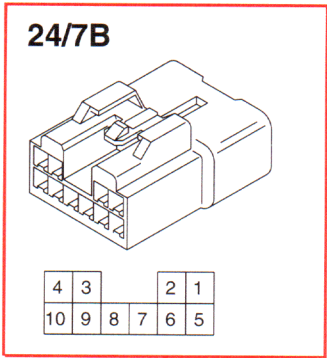

24/7B Natural 10-pin
Tunnel cable harness - Firewall cable harness


Term.	Female	Male	Color
1	Data link connector (DLC) :16	Connector 24/2A:5 Connector 24/63:4	R
2	-	-	
3	Data link connector (DLC) :3	Connector 24/2E:6	Y-BN
4	Data link connector (DLC) :5	Ground terminal 31/15	BN
5	-	-	
6	-	-	
7	Data link connector (DLC) :7	Junction point 23/421	W
8	-	-	
9	Data link connector (DLC) :13	Connector 24/2B:17	Y-R
10	Data link connector (DLC) :4	Junction point 23/416	SB

Connector 24/9

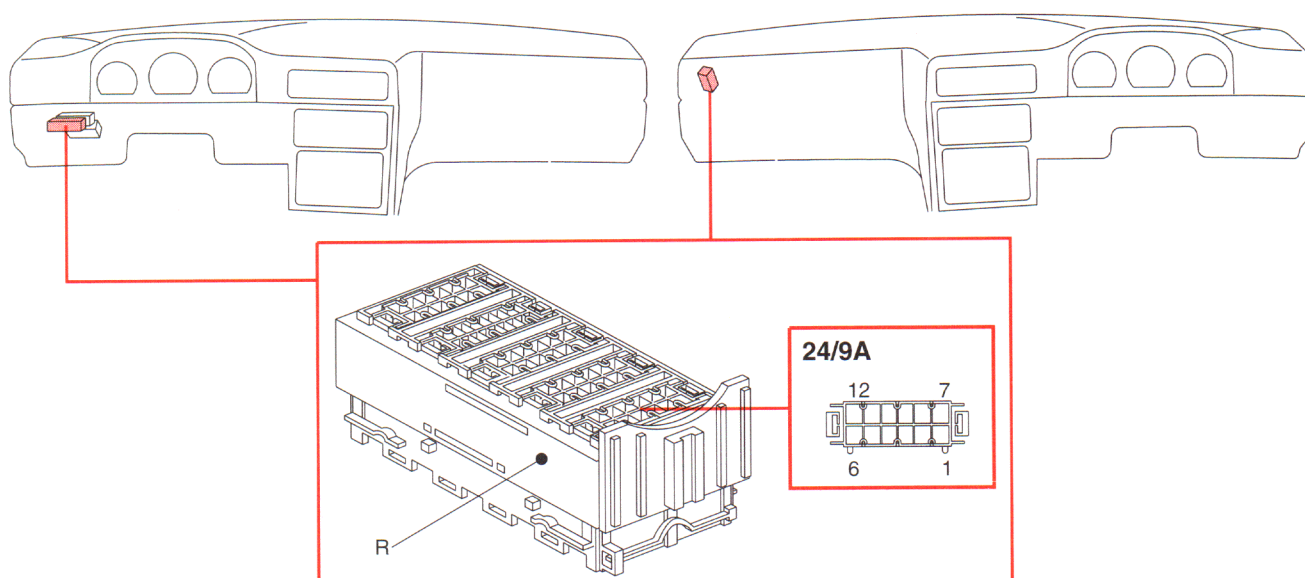

24/9A Green 12-pin Roof harness - Firewall cable harness


Term.	Female	Male	Color
1	Roof lamp passenger compartment :1	Junction point 23/411	R
2	Roof lamp passenger compartment :5	Connector 24/2E:7 Control module lock/alarm A:24	P-SB
3	Roof lamp passenger compartment :4	Connector 24/2B:5	GR
4	Junction point 23/702	Ground terminal 31/7 (LHD) [via 23/405] Ground terminal 31/15 (RHD) [via 23/416]	SB
5	Movement detector left :2 (S70/V70) Movement detector right :2 (S70/V70) power sun roof control module :3 (C70)	Connector 24/2B:11 (S70/V70) Control module lock/alarm A:22 (S70/V70 LHD) Connector 24/2B:2 (C70)	OR-W W
6	Movement detector left :5 (S70/V70) Power sun roof control module :2 (C70)	Connector 24/2B:12 (S70/V70) Control module lock/alarm B:15 (S70/V70 LHD) Connector 24/2B:3 (C70)	P-W GN
7	-	-	
8	Movement detector left :6 (S70/V70) Movement detector right :6 (S70/V70)	Connector 24/2A:8 (S70/V70) Control module lock/alarm B:1 (S70/V70)	GR-R
9	Rear view mirror :1 (C70)	Connector 24/2C:15 (C70)	BN-OR
10	Rear view mirror :2 (C70)	Connector 24/2A:10 (C70)	BL
11	Control module power sun roof :4 (C70)	Junction point 23/405 (C70)	SB
12	Control module power sun roof :1 (C70)	Junction point 23/412 (C70)	BL

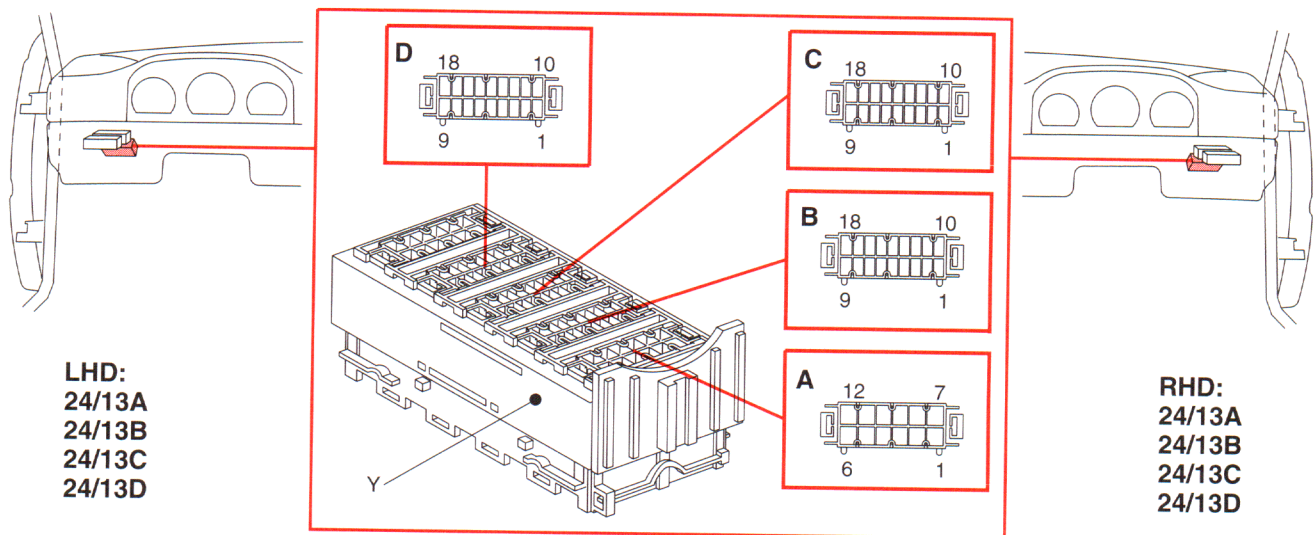

24/13A Green 12-pin Dashboard harness - Engine compartment harness

Term.	Female	Male	Color
1	Radio A:4 and A:12	Fuse 11C/7:2	GN-BN / R-SB
2	Radio A:13	Fuse 11C/32:2	Y-VO
3	-	-	
4	Junction point 23/301	Ground rail, power ground	SB
5-7	-	-	
8	Power sun roof switch :4 Rheostat :1	fuse 11C/35:2 Connector 24/2C:15 (C70)	BN-OR
9	-	-	
10	TRACS switch :1 Combined instrument panel A:29	ABS control module :15	GN
11	Rear demist/heated door mirrors switch :6	Rear demist/heated door mirrors :4 Connector 24/2C:10	Y-R
12	Rear demist/heated door mirrors switch :1	Rear demist/heated door mirrors :9	BL-SB

Connector 24/13

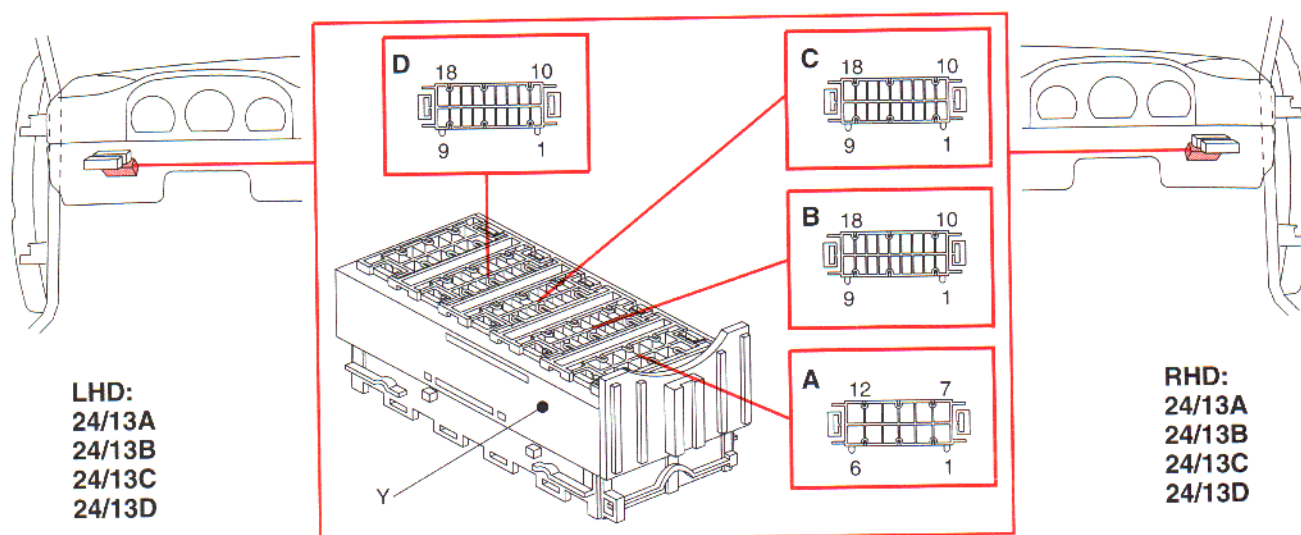

24/13B Light blue 18-pin Dashboard harness - Engine compartment harness


Term.	Female	Male	Color
1	Switch front fog lamps :1	Fog lamp relay :4	BN-P
2	Switch front fog lamps :6	Fog lamp relay :5	GN-OR
3	Switch fog tail lamp :4	Fuse 11C/25:1	VO-W
4	Light switch :9	Headlamp relay with bulb failure warning sensor A:9	Y
5	Light switch :7	Fuse 11C/26:2	BL-Y
6	Light switch :5	Headlamp relay with bulb failure warning sensor B:9	GN-R
7	Light switch :6	Fuse 11C/8:2	R-SB
8	Light switch :2	Fuse 11C/23:1	W
9	Rheostat :3 (C70)		
9	Combined instrument panel B:4	Connector 24/2E:5	W
10	Junction point 23/300	Connector 24/35:6	P
11	Headlamp range adjuster :5 (Not S70/V70 USA/CDN)	Ground rail, signal ground	OR-SB
12	Headlamp range adjuster :4	Left actuator motor headlamp range adjustment :2 Right actuator motor headlamp adjustment :2	BL
13	Headlamp range adjuster :3 (Not S70/V70 USA/CDN)	X-rail Left actuator motor headlamp range adjustment :3	OR-W
14	Radio A:3	Connector 24/2D:10 (RHD) Connector 24/14D:10 (LHD)	BL-W
15	Combined instrument panel B:5	Junction point 23/239	Y-VO
16	-	-	
17	-	-	
18	Junction point 23/302	Fuse 11C/15:3	R

24/13C Yellow 18-pin

Dash-board harness - Engine compartment harness



Term.	Female	Male	Color
1	Combined instrument panel A:3	ABS control module :6	BL
2	Combined instrument panel A:12	Connector 24/2E:4 control module AW 50-42 B:7	GR-OR
3	Combined instrument panel A:7	Connector 24/2B:8 Control module, cruise control S:8 (gasoline) Engine control module (ECM) B:18 (Diesel)	Y-SB
4	Combined instrument panel A:9	Engine control module (ECM) B:39	GR-R
5	Combined instrument panel A:11	Engine control module (ECM) B:21	W-SB
6	-	-	
7	Combined instrument panel A:13 Control module ECC C:3	Connector 24/15:3 Connector 24/2C:14 Engine coolant heater :4 (Diesel)	R-W
8	Combined instrument panel A:14	Engine coolant level switch :1	Y
9	Combined instrument panel A:15	Ground rail, signal ground	BN
10	Combined instrument panel A:18	Fuse 11C/2:1	BL-R
11	Combined instrument panel A:24	Outside temperature sensor Combined instrument panel :1	GR-SB
12	Combined instrument panel A:25	Outside temperature sensor Combined instrument panel :2	GN-SB
13	Combined instrument panel A:26 Control module ECC C:2	Engine control module (ECM) B:23	GN-GR
14	Combined instrument panel A:28	Brake fluid level switch :1	GR
15	Combined instrument panel A:30	Connector 24/15:4	BN-SB
16	Power sun roof switch :6	Connector 24/2B:3	GN
17	Power sun roof switch :3	Connector 24/2B:2	W
18	-	-	

Connector 24/13

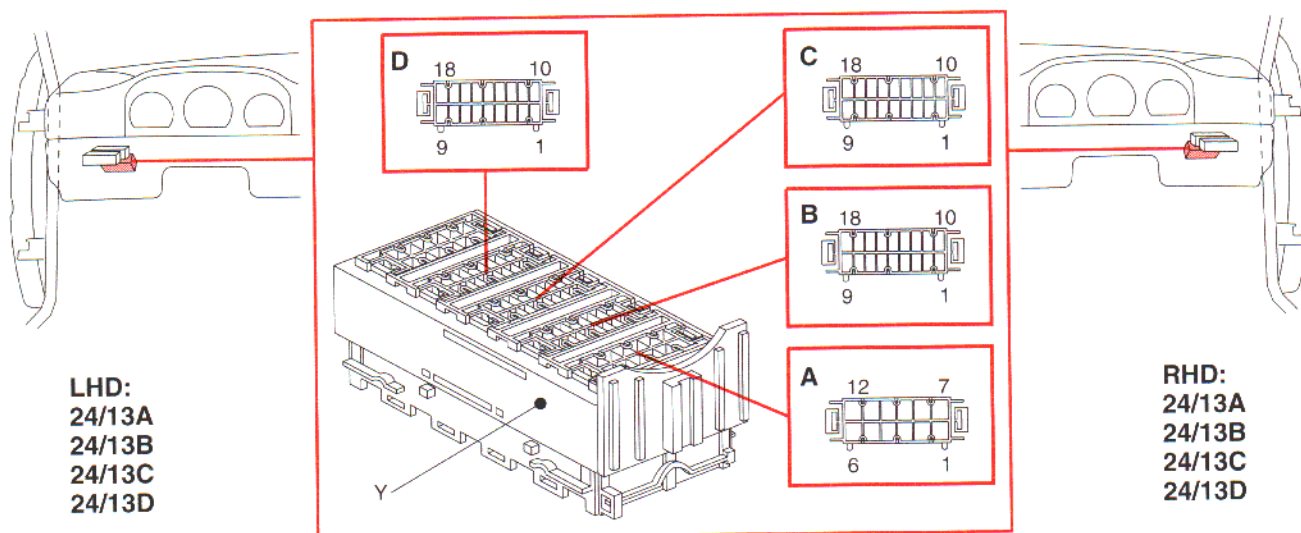

24/13D Red 18-pin Dashboard harness - Engine compartment harness

Term.	Female	Male	Color
1	Combined instrument panel B:1	engine control module (ECM) B:8 (Diesel) relay exhaust temperature sensor :3 (Gasoline)	P
2	Combined instrument panel B:2	Fuse 11C/20:3	BL-W
3	Combined instrument panel B:6	ABS control module :16	VO
4	Combined instrument panel B:8	fuse 11C/25:3	VO-W
5	Combined instrument panel B:14	Connector 24/2C:4	BL-BN
6	Entry lighting driver's side :2	Relay seat belt reminder/key warning :3 Connector 24/2C:8	W-SB
7	Combined instrument panel B:10	Headlamp relay with bulb failure warning sensor B:7 Connector 24/14D:4 (LHD) Connector 24/2D:4 (RHD)	GN-W
8	Combined instrument panel B:11	Engine control module (ECM) B:7 (S70/V70) Engine control module (ECM) B:27 (C70)	BN-W
9	Combined instrument panel B:12	Washer fluid level switch :2	BL-P
10	Entry lighting passenger side :2	Connector 24/2C:17	Y-BN
11	Indicator LED alarm/electronic park/neutral position (PNP) switch :1 Sun sensor ECC and indicator LED Alarm/electronic park/neutral position (PNP) switch :1 (C70)	Connector 24/2E:18	R
12	Glass breakage sensor :3 (S70/V70)	Connector 24/2B:12 (S70/V70) Alarm siren :5 (S70/V70)	P-W
13	Glass breakage sensor :4 (S70/V70)	Connector 24/2B:11 (S70/V70) Alarm siren :3 (S70/V70)	OR-W
14	Switch hazard warning signal flasher :7	Switch turn signal lamp/ High and low beam :5	GN-R
15	Switch hazard warning signal flasher :4 Combined instrument panel A:1	Junction point 23/208	BL-GN
16	Switch hazard warning signal flasher :5 Combined instrument panel B:7	Junction point 23/207	GN
17	Switch hazard warning signal flasher :9	Fuse 11C/27:2	BL-GR
18	Junction point 23/312	Fuse 11C/13:3 Connector 24/2E:12	R R-SB

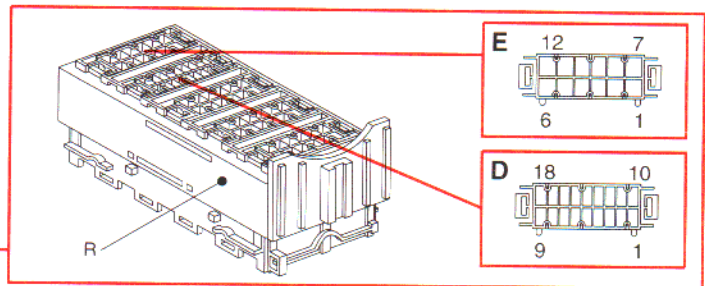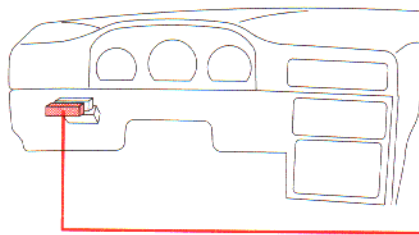

24/14D Red 18-pin (LHD)

Left door sill harness - Engine compartment harness



Term.	Female	Male	Color
1	Bulb failure warning sensor rear :3 License plate lighting :2	Fuse 11C/23:3 Left headlamp :4 (C70)	W
2	Bulb failure warning sensor rear :4 and :7	Fuse 11C/24:3	GR
3	Bulb failure warning sensor rear :12	Junction point 23/201	Y
4	Bulb failure warning sensor rear :11	Connector 24/13D:7 Headlight relay with bulb failure warning sensor B:7 (S70/V70)	GN-W
5	Bulb failure warning sensor rear :8	15l-rail	BL-Y
6	Connector 24/81:4 (S70) Right tail lamp B:6 (S70), A:5 (V70) Left tail lamp B:6 (S70), A:5 (V70)	Connector 24/2C:1 Connector 24/15 :7 (MOD1), :6 (S70/V70 MOD2) Connector 24/2A:10 (C70)	BL
7	Connector 24/81:3 (S70) Right tail lamp B:1 (S70), A:3 (V70) Left tail lamp B:1 (S70), A:3 (V70)	Fuse 11C/25:2	VO-W
8	Connector 24/81:1 (S70) left tail lamp K:6 (S70), B:3 (V70)	Junction point 23/207	GN
9	Connector 24/81:2 (S70) Right tail lamp K:6 (S70), B:3 (V70)	Junction point 23/208	BL-GN
10	Power antenna :3	Connector 24/13B:14	BL-W
11	Connector 24/21:6	Relay seat belt reminder/key warning :6 (S70/V70)	GR-SB
12-14	-	-	-
15	Control module left seat A:2	Connector 24/2A:7 (S70/V70) Fuse 11C/36:2 (S70/V70)	GN-R/Y-W
16	Glass breakage sensor :1 (V70)	Connector 24/2C:3 (S70/V70)	GR-SB
17	Connector 24/25:8	Intermittent relay tailgate wiper :1 (S70/V70)	GN-OR
18	Connector 24/25:9	X-rail (S70/V70)	Y-R

24/14E White 12-pin (LHD)

Left door sill harness - Engine compartment harness


Term.	Female	Male	Color
1	Connector 24/25:1	rear demist/heated door mirrors relay :3	Y-R
2	Left seat control module :1	Fuse 11C/39:2	GN-R
3	-	Fuse 11C/1:2 (C70)	P-SB
4	-	Fuse 11C/12:2 (C70)	R
5	-	Fuse 11C/9:2 (C70)	R
6	Power antenna CD player :1	Fuse 11C/16:3	GR-R
7-11	-	-	-
12	-	Relay heated seat left :3 (C70)	Y-R

Connector 24/15

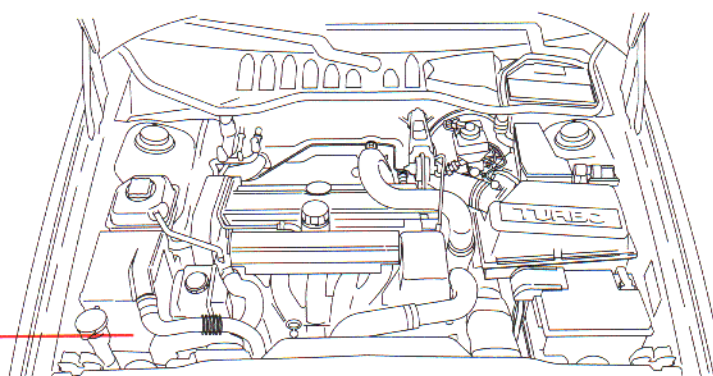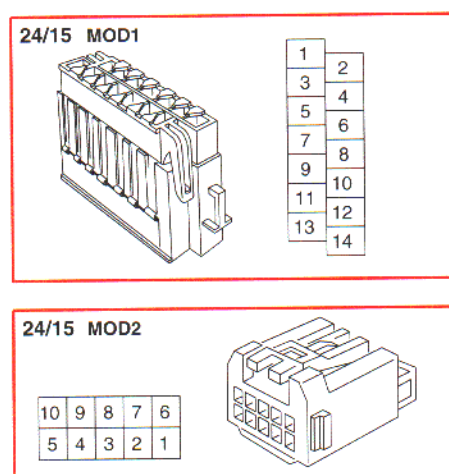

24/15 Black 14-pin (MOD1), Light gray 10 pin (MOD2) Engine harness - Engine compartment harness

Term.	Male	Female	Color
1	Engine control module (ECM) A:12 (gasoline) Engine control module (ECM) A:12 (Diesel) Connector 24/15:5 (Fenix)	Ignition switch :15	BL-R BN-R
2	Connector 24/53:9 (AUTO, Not Fenix) Solenoids AW 50-42 (AUTO Fenix) Back-up (reversing) lamp switch :1 (MAN)	Fuse 11C/27:3	BL-GR
3	Generator	Connector 24/13C:7 Connector 24/2C:14 (S70/V70)	R-W
4	Connector 24/15:4 (Not Fenix) Oil pressure switch (Fenix)	Connector 24/13C:15	BN-SB
5	Connector 24/43:4 (Motronic) Engine control module (ECM) A:26 (MAN Motronic) Control module AW 50-42 :9 (AUTO Motronic) Connector 24/15:1 (Fenix)	Main relay fuel injection system :2	R BL-R
6	Back-up (reversing) lamp switch :2 (MAN MOD2) Connector 24/53:5 (AUTO MOD2, Not Fenix) Solenoids AW 50-42 :5 (MOD2 Fenix)	Connector 24/2C:1 (MOD2)	BL
7	Connector 24/53:5 (AUTO MOD1, Not Fenix) Back-up (reversing) lamp switch :2 (MAN MOD1) Solenoids AW 50-42 :5 (AUTO MOD1 Fenix) Magnetic clutch A/C (MOD2 Fenix) A/C relay :5 (MOD2, Not Fenix)	Connector 24/2C:1 (MOD1) Connector 24/14D:6 (LHD MOD1) Relay A/C :5 (MOD2)	BL GR
8	Engine control module (ECM) A:17 (Diesel MOD2)	Boost pressure sensor :1 (Diesel MOD2)	Y-SB
9	A/C relay :5 (MOD1, Not Fenix) Magnetic clutch A/C (MOD1 Fenix) Engine control module (ECM) A:2 (Diesel MOD2)	Relay A/C :5 (MOD1) Boost pressure sensor :2 (Diesel MOD2)	GR
10	Engine control module (ECM) A:32 (Diesel MOD2)	Boost pressure sensor :3 (Diesel MOD2)	BL-GN
11	-	-	
12	Engine control module (ECM) A:17 (Diesel MOD1)	Boost pressure sensor :1 (Diesel MOD1)	Y-SB
13	Engine control module (ECM) A:2 (Diesel MOD1)	Boost pressure sensor :2 (Diesel MOD1)	Y-GR
14	Engine control module (ECM) A:32 (Diesel MOD1)	Boost pressure sensor :3 (Diesel MOD1)	BL-GN

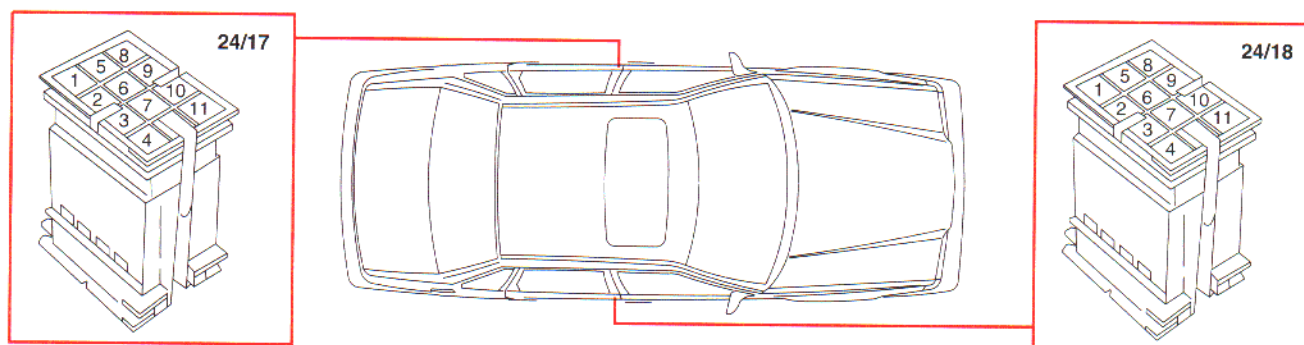


24/17 Natural 11-pin Cable harness left rear door - Left door sill harness

Term.	Male	Female	Color
1	Loudspeakers :1	Connector 24/3B:12 Left-hand side parcel shelf loudspeaker :1 (S70) Left-hand side D-post loudspeaker :1 (V70)	BN-W
2	Loudspeakers :2	Connector 24/3B:8 Left-hand side parcel shelf loudspeaker :2 (S70) Loudspeakers D-post left-hand side :2 (V70)	BN-SB
3	Power window switch :3	Connector 24/3C:5	GR-R
4	Door open warning lamp :1	Cargo compartment lighting :1 Connector 24/3B:7	R
5	Lock unit B:3	Ground terminal 31/47	SB
6	Lock unit A:4	Connector 24/3B:4	VO
7	Power window switch :1	Connector 24/3C:3	GN-GR
8	Lock unit A:1	Connector 24/3B:2	Y-BN
9	Lock unit A:3	Connector 24/3B:3 (S70) Connector 24/17:9 (V70)	Y
10	Power window switch :6	Connector 24/3C:4	Y-SB
11	Lock unit B:4 Door open warning lamp :2	Connector 24/3B:6	GR-W

24/18 Natural 11-pin Right rear door cable harness - Right door sill harness


Term.	Male	Female	Color
1	Loudspeakers :1	Connector 24/4B:5 (MOD1) Connector 24/4C:8 (MOD2)	Y-SB / P-SB
2	Loudspeaker :2	Connector 24/4B:4 (MOD1) Connector 24/4C:7 (MOD2)	Y-GR / P-W
3	Power window switch :3	Connector 24/4C:4	GR-R
4	Door open warning lamp :1	Connector 24/4B:6	R
5	Lock unit B:2	Ground terminal 31/48	SB
6	Lock unit A:1	Connector 24/4C:12	VO
7	Power window switch :1	Connector 24/4C:2	BL-GN
8	Lock unit A:4	Connector 24/4C:10	Y-BN
9	Lock unit A:2	Connector 24/4C:11	Y
10	Power window switch :6	Connector 24/4C:3	BL-SB
11	Lock unit B:1 Door open warning lamp :2	Connector 24/4B:7	Y-W

Connectors 24/19 and 24/20

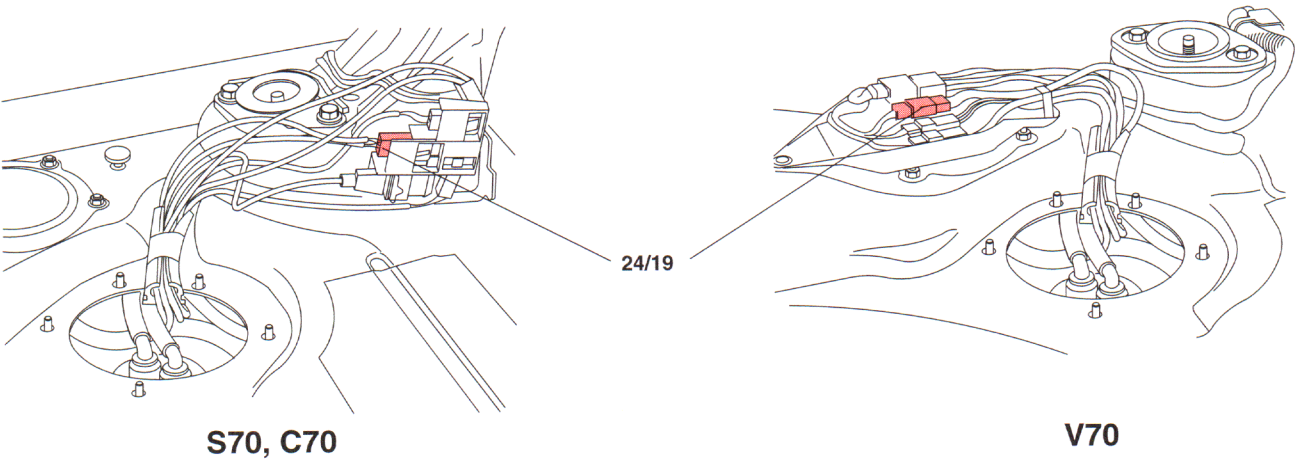



24/19 Yellow 4-pin
Right door sill harness - Rear wheel sensor harness

Term.	Female	Male	Color
1	Connector 24/4B:10	ABS left rear sensor	GN-R
2	Connector 24/4B:12	ABS right rear sensor	GN-W
3	Connector 24/4B:11	ABS left rear sensor	GN-Y
4	Connector 24/4B:13	ABS right rear sensor	GN-SB

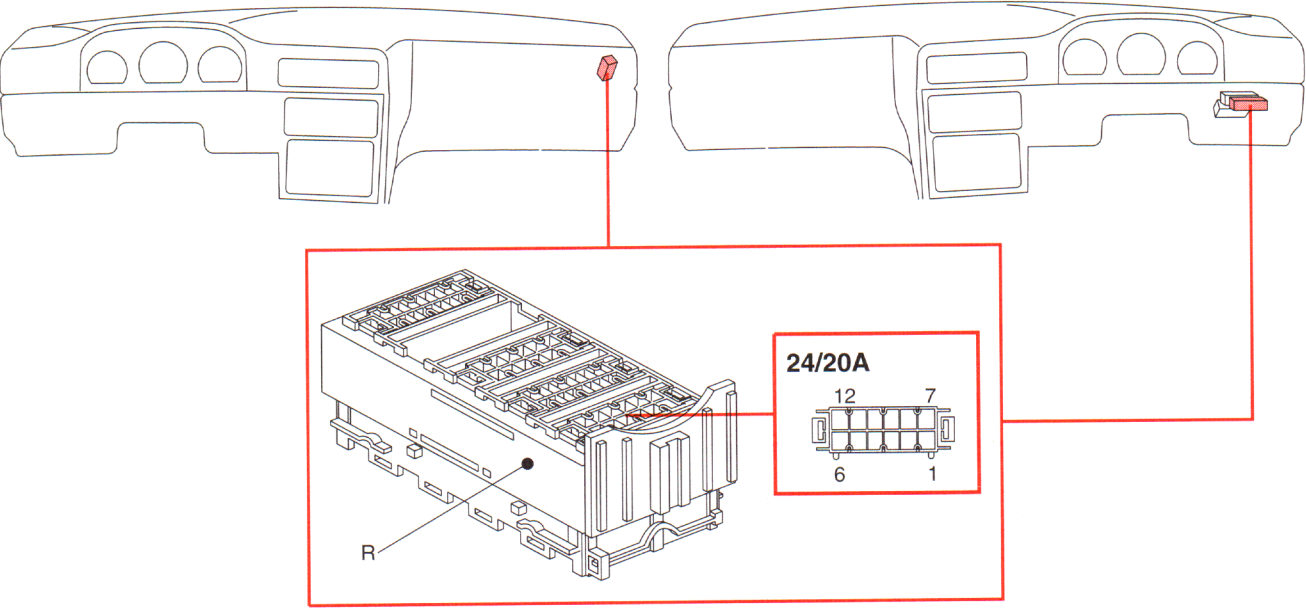



24/20A Green 12-pin
Power sun roof cable harness - Firewall cable harness

Term.	Female	Male	Color
1	Control module power sun roof :1	Junction point 23/412	BL
2	Power sun roof control module :2	Connector 24/2B:3	GN
3	Power sun roof control module :3	Connector 24/2B:2	W
4	Power sun roof control module :4	Junction point 23/405	SB
5-12	-	-	

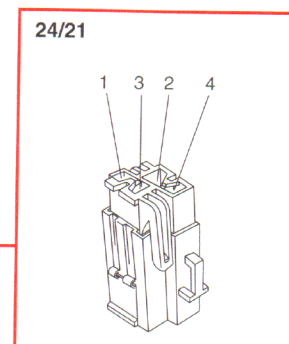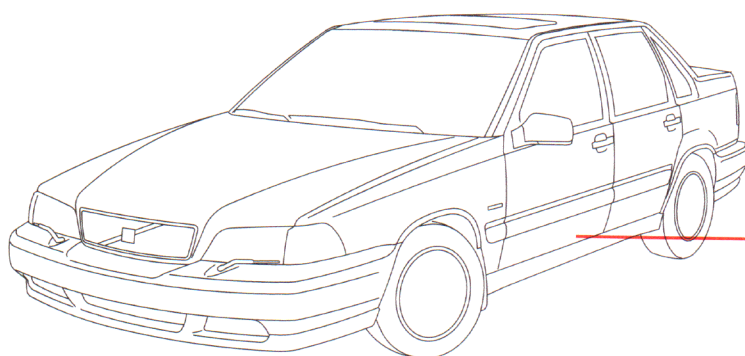

24/21 Natural 6-pin Left door sill harness - left seat harness


Term.	Female	Male	Color
1	Connector 24/3B:1 (S70/V70) Connector 24/3E:12 (C70)	Cushion heater pad left seat	Y-R
2	-	-	
3	-	-	
4	Connector 24/21:5	Seat belt lock left seat	SB
5	Ground terminal 31/47 Connector 24/21:4	Backrest heater pad left seat	SB
6	Connector 24/3B:5 (Not S70/V70 MOD2) Connector 24/14D:11 (S70/V70 MOD2)	Seat belt lock left seat	GR-SB

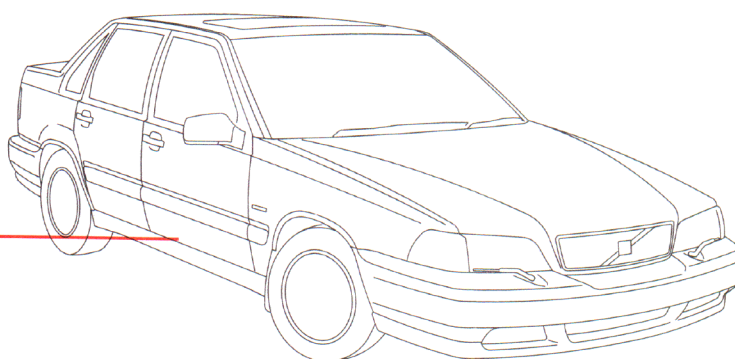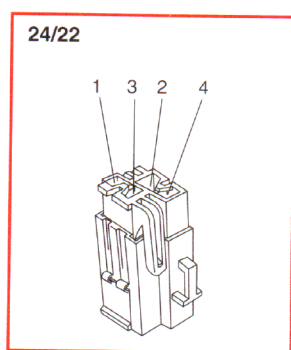

24/22 Natural 6-pin Right door sill harness - right seat harness

Term.	Female	Male	Color
1	Connector 24/4B:8 (S70/V70) Connector 24/4C:12 (C70)	Cushion heater pad left seat	GN-BN
2	-	-	
3	-	-	
4	Connector 24/22:5	Seat belt lock right seat	SB
5	Ground terminal 31/48 Connector 24/22:4	Backrest heater pad left seat	SB
6	Connector 24/4C:6	Seat belt lock	GR-SB


Connector 24/25

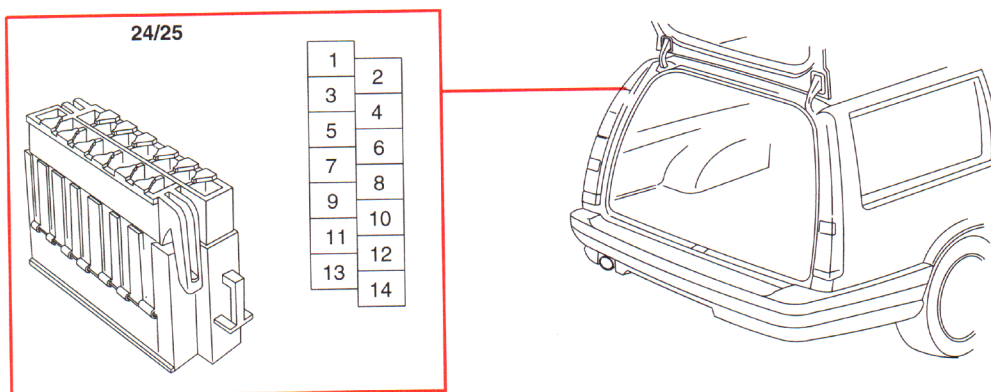


24/25 Black 14-pin Tailgate cable harness - Left door sill harness

Term.	Female	Male	Color
1	Rear demist	Connector 24/14E:1	Y-R
2	Rear demist	Alarm wire right rear window :2	GN-Y
3	Tailgate lock unit :6	Connector 24/3B:10	P-SB
4	Tailgate lock unit :7	Junction point 23/401	Y
5	-	Connector 24/3B:9 (V70)	Y
6	Tailgate lock unit :5	Connector 24/3C:10	GN-BN
7	Tailgate wiper motor :3	Junction point 23/417	OR-SB
8	Tailgate wiper motor :1	Connector 24/3D:17 (RHD) Connector 24/14D:17 (LHD)	GN-OR
9	Tailgate wiper motor :2	Connector 24/3D:18 (RHD) Connector 24/14D:18 (LHD)	Y-VO
10	Junction point 23/601	Junction point 23/417	SB
11	License plate lighting :1	Bulb failure warning sensor rear :3 Connector 24/14D:1	W
12	High-mounted stop (brake) lamps :1	Bulb failure warning sensor rear :10	GR-SB
13	Tailgate lock unit :1	Cargo compartment lighting :2 Connector 24/3:9	BL-BN
14	Rear demist	Junction point 23/417	SB

Connectors 24/43 and 24/46

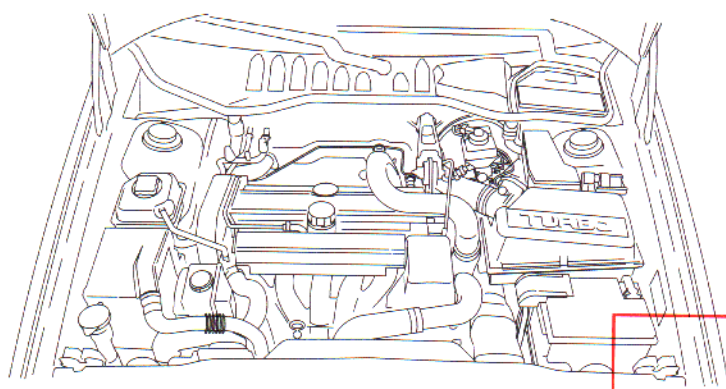



24/43

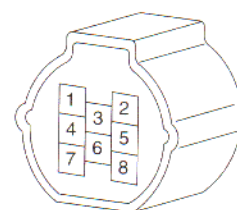

24/43 Black 8-pin Engine compartment harness - engine harness

Term.	Female	Male	Color
1	Fuel injection system main relay :4 (Gasoline) Fuse 11B/2 (Diesel)	Engine control module (ECM) A:41 (Gasoline) Junction point 23/17 (Diesel)	OR-SB GN-W
2	Junction point 23/227 (Motronic) Main relay fuel injection system :4 (Diesel)	Junction point 23/6 (Motronic) Front heated oxygen sensor (HO2S) :1 (Fenix) Engine control module (ECM) A:41 (Diesel)	GN-OR OR-SB
3	Fuse 11B/2	Junction point 23/11 (Gasoline)	GN
4	Fuse 11B/1 (Gasoline) Fuse 11B/2 (Diesel) Ignition switch :30l	Connector 24/15:5 (Motronic) Engine control module (ECM) :26 (Fenix) Control module AW 50-42 :10 (Not Motronic)	R GN-W/R R
5	Fuse 11B/3 (Diesel)	Junction point 23/18 (Diesel)	GN-Y
6	Starter motor relay :3	Starter motor (MAN) Connector 24/53:6 (AUTO, Not Fenix) Solenoids AW 50-42 :6 (Fenix)	GN-R
7	Fuse 11B/4	Control module AW 50-42 :30 (Not Fenix)	GN-W
8	Glow plug relay (diesels) :4 (Diesel)	Engine control module (ECM) A:9 (Diesel)	GR-R

24/46

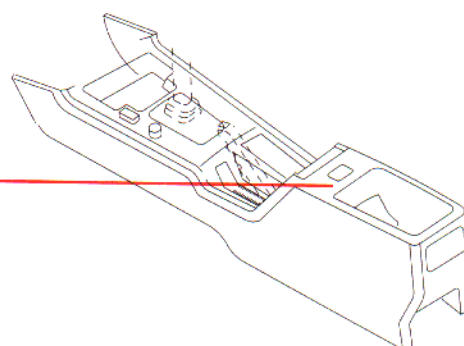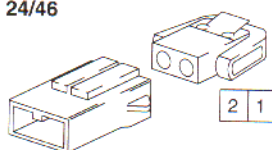





24/46 Yellow 2-pin Heated rear seat cable harness - Tunnel cable harness

Term.	Male	Female	Color
1	Cushion heater pad right-hand side :1 Cushion heater pad left-hand side :1	Heated rear seat relay :4	VO-W
2	-	-	

Connector 24/50

24/50 Black 24-pin Driver's door cable harness - Firewall cable harness



Term.	Female	Male	Color
1	Left front door open warning lamp :1	Junction point 23/411	R
2	Power window switch B:5 (S70/V70)	Junction point 23/423 (MOD1) Connector 24/3C:5 (S70/V70 MOD2)	GR-R
3	Power window switch A:2 (LHD), A:1 (RHD) Junction point 23/609 (RHD)	Junction point 23/412	BL SB
4	Lock unit A:4 (LHD), A:1 (RHD)	Junction point 23/419 (MOD1) Connector 24/3B:4 (S70/V70 MOD2) Control module lock/alarm A:2 (MOD2)	VO VO-W
5	Loudspeakers (S70/V70) Splitting filter right door :2 (C70 RHD) Splitting filter right door :2 (C70 LHD)	Connector 24/61 :8 (S70/V70), :14 (C70) Radio B:4 (S70/V70 LHD) Radio B:10 (S70/V70 RHD) Connector 24/3B:12 (C70 LHD) Connector 24/3C:6 (C70 RHD)	GN-W R-SB GN-SB R-SB
6	Junction point 23/603	Ground terminal 31/7 [via 23/405]	SB
7	Loudspeakers Splitting filter right door :1 (C70 RHD) Splitting filter right door :1 (C70 LHD)	Connector 24/61 :14 (S70/V70), :8 (C70) Radio B:3 (S70/V70 LHD) Radio B:9 (S70/V70 RHD) Connector 24/3C:1 (C70 RHD) Connector 24/3B:12 (C70 LHD)	GN-BN R-W GN-W
8	Power window switch A:5 (LHD), A:3 (RHD) Power window motor driver's door :1 (C70 RHD) Power window motor driver's door :2 (C70 LHD)	Connector 24/60:22	W GN BL-GN
9	Power window switch A:6 (LHD), A:4 (RHD)	Connector 24/60:13	BL-W
10	Junction point 23/604	Connector 24/2C:8 Control module lock/alarm A:23	W-SB
11	Power window switch C:1 Switch trunk lid/fuel tank filler cover :1 (LHD), :5 (RHD)	Junction point 23/424	Y-W
12	Junction point 23/609	Connector 24/2E:10	SB
13	Power window switch B:2 (S70/V70)	Connector 24/3C:3 (S70/V70)	GN-GR
14	Lock unit A:1 (LHD), A:4 (RHD)	Control module lock/alarm B:13	BL-BN
15	Lock unit A:3 (LHD), A:2 (RHD)	Junction point 23/409	Y
16	Power window switch C:2 Lock unit B:1 (LHD), B:4 (RHD)	Control module lock/alarm A:18	GR-R
17	Power window switch C:4 Lock unit B:2 (LHD), B:3 (RHD)	Junction point 23/406	Y-GR
18	Rear-view mirror switch :5	Junction point 23/428 (Not S70/V70 MOD2) Connector 24/2C:10 (S70/V70 MOD2)	Y-R
19	Power door mirror switch :7 (LHD), :10 (RHD)	Connector 24/60:19	GR
20	Power door mirror switch :2	Connector 24/60:20	BN-W
21	Power door mirror switch :8 (LHD), :6 (RHD)	Connector 24/60:21	BN-SB
22	Power window switch B:6 (S70/V70)	Connector 24/3C:4 (S70/V70)	Y-SB
23	Power window switch B:3 (S70/V70)	Connector 24/4C:3 (S70/V70)	BL-SB
24	Power window switch B:1 (S70/V70)	Connector 24/4C:2 (S70/V70)	BL-GN

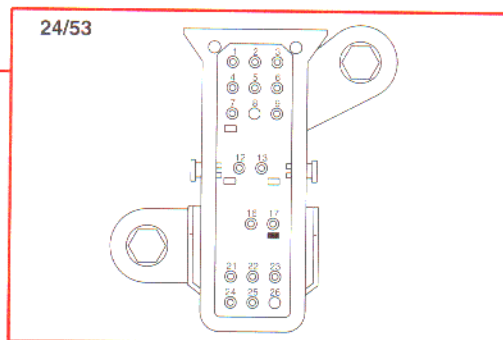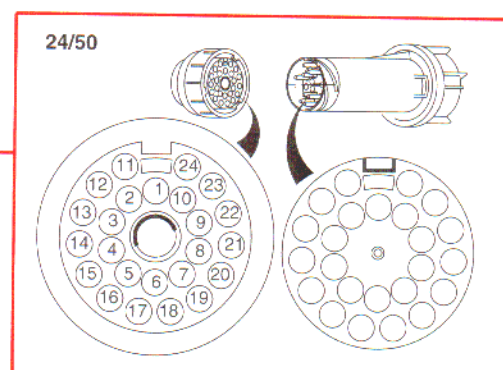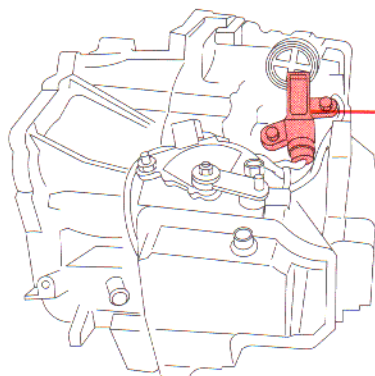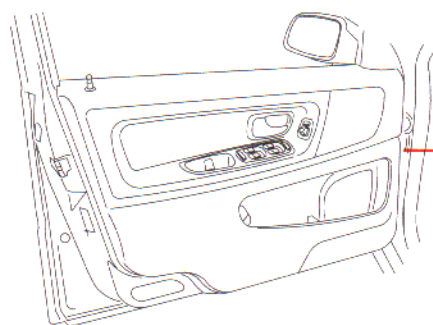

24/53 Black 26-pin Engine harness - AW 50-42


Term.	Female	Male	Color
1	Control module AW 50-42 :3	Gear-shift position sensor (A)	W
2	Control module AW 50-42 :4	Gear-shift position sensor (B)	Y
3	Control module AW 50-42 :5	Gear-shift position sensor (C)	GN
4	Control module AW 50-42 :6	Gear-shift position sensor (PA)	BL
5	Connector 24/15:7 (MOD1) Connector 24/15:6 (MOD2)	Gear-shift position sensor (BL)	BL
6	Connector 24/43:6	Gear-shift position sensor (50)	GN-R
7	Starter motor :2	Gear-shift position sensor (50S)	GN
8	-	Gear-shift position sensor (SG)	
9	Connector 24/15:2	Gear-shift position sensor (15I)	BL-GR
10	-	-	
11	-	-	
12	Control module AW 50-42 :14	Oil temperature sensor AW 50-42	BL-GN
13	Control module AW 50-42 :15	Oil temperature sensor AW 50-42	BL-SB
14	-	Engine speed (RPM) sensor	
15	-	Engine speed (RPM) sensor	
16	Control module AW 50-42 :1	-	Y-W
17	Control module AW 50-42 :2	-	Y-BN
18	-	-	
19	-	-	
20	-	-	
21	Control module AW 50-42 :27	Shift solenoid 1	GN-W
22	Control module AW 50-42 :28	Shift solenoid 2	BN-W
23	Control module AW 50-42 :9	Lock-up solenoid	BN-SB
24	Control module AW 50-42 :22	Pressure solenoid	VO
25	Control module AW 50-42 :23	Pressure solenoid	VO-W
26	-	-	

Connector 24/59

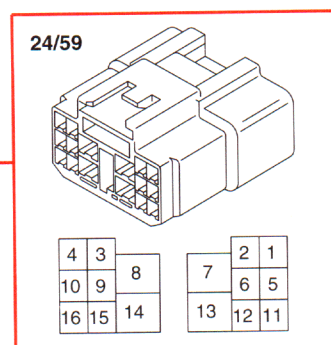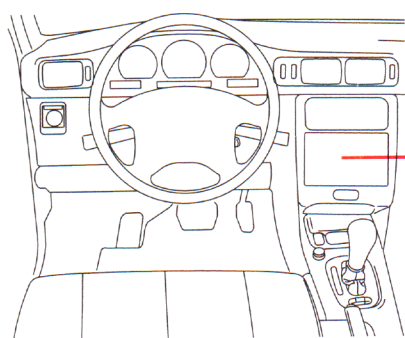

24/59 Natural 16-pin Cable harness RTI - Display RTI



Term.	Male	Female	Color
1	Control module RTI A:27	Display RTI :7	BL
2	Control module RTI A:11	Display RTI :6	P
3	Control module RTI A:12	Display RTI :5	W
4	Control module RTI A:29	Display RTI :4	GN
5	Control module RTI A:13	Display RTI :3	GR
6	Control module RTI A:30	Display RTI :2	Y
7	Control module RTI A:14	Display RTI :1	BN
8	Driver's side A-post ground terminal[via 23/316]	Display RTI :16	SB
9	Driver's side A-post ground terminal[via 23/316]	Display RTI :15	SB
10	Control module RTI B:4 Connector 24/61:4	Display RTI :14	P
11	Junction point 23/315	Display RTI :13	Y-VO
12	Junction point 23/314	Display RTI :12	R
13	Junction point 23/314	Display RTI :11	R
14	Control module RTI A:28	Display RTI :8	SB
15	-	-	
16	-	-	

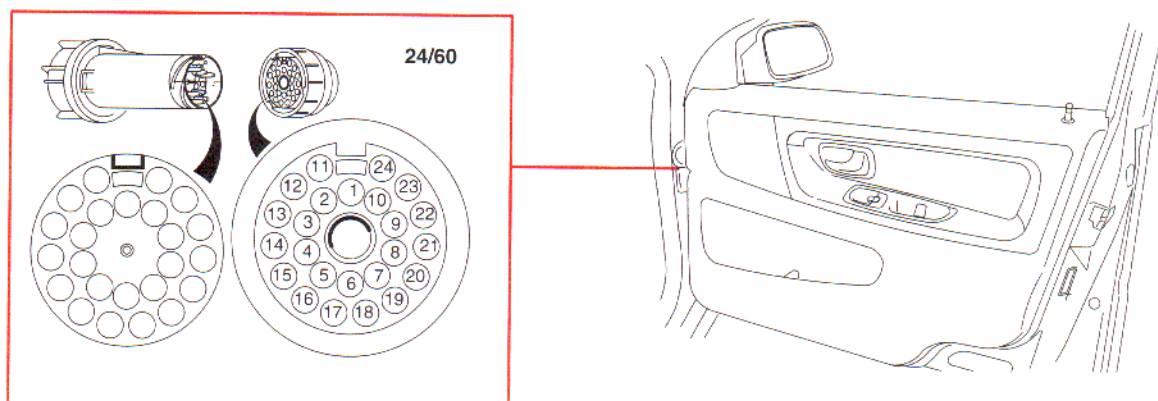

24/60 Black 24-pin Passenger door cable harness - Firewall cable harness



Term.	Female	Male	Color
1	Right front door open warning lamp :1	Junction point 23/411	R
2	-	-	
3	Front passenger door power window switch A:1	Junction point 23/412	BL
4	Lock unit A:1 (LHD), A:4 (RHD)	Junction point 23/425 (S70/V70 MOD1) Connector 24/4C:12 (S70/V70 MOD2) Control module lock/alarm A:15 (C70)	VO
5	Loudspeakers (S70/V70) Splitting filter :2 (C70 RHD), :1 (C70 LHD)	Radio B:4 (S70/V70 RHD) Radio B:10 (S70/V70 LHD) Connector 24/3C:6 (C70 LHD) Connector 24/3B:8 (C70 RHD)	GN-W R-SB GN-SB
6	Junction point 23/606	Ground terminal 31/7 [via 23/405]	SB
7	Loudspeakers (S70/V70) Splitting filter :1 (C70 RHD), :2 (C70 LHD)	Radio B:3 (S70/V70 RHD) Radio B:9 (S70/V70 LHD) Connector 24/3C:1 (C70 LHD) Connector 24/3B:12 (C70 RHD)	GN-BN R-W GN-W
8-9	-	-	
10	Junction point 23/605	Connector 24/2C:17 Control module lock/alarm B:5	Y-BN
11	Power window switch C:5	Junction point 23/424	Y-W
12	Power door mirror :3	Ground terminal 31/15 [via 23/416]	SB
13	Power window switch A:2	Connector 24/50:9	BL-W
14	Lock unit A:4 (RHD), A:1 (LHD)	Junction point 23/408 (S70/V70) Control module lock/alarm B:2 (C70)	Y-BN
15	Lock unit A:2 (RHD), A:3 (LHD)	Junction point 23/409	Y
16	Power window switch C:3	Control module lock/alarm A:6	BL-P
17	Power window switch C:6	Junction point 23/406	Y-GR
18	Rear-view mirror switch :5	Junction point 23/428 (Not S70/V70 MOD2) Connector 24/2C:10 (S70/V70 MOD2)	Y-R
19	Power door mirror :2	Connector 24/50:19	GR
20	Power door mirror :1	Connector 24/50:20	BN-W
21	Power door mirror :4	Connector 24/50:21	BN-SB
22	Power window switch A:3	Connector 24/50:8	W
23	-	-	
24	-	-	

Connector 24/61

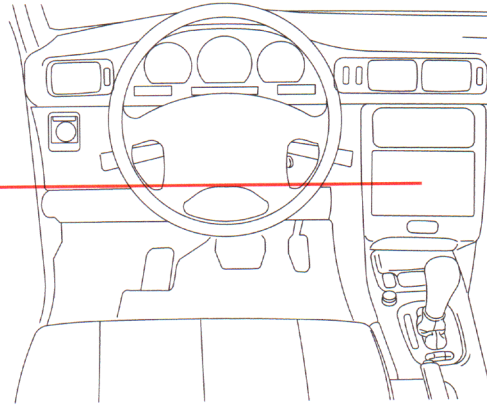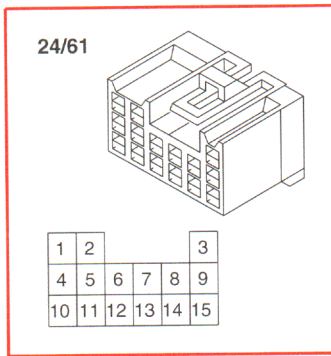

24/61 White 15-pin Firewall cable harness - RTI cable harness


Term.	Female	Male	Color
1	Junction point 23/411	Junction point 23/314	R
2	Connector 24/2A:12 Connector 24/7A:3	Junction point 23/315	Y-VO
3	Radio B:7 Connector 24/2B:8 Control module lock/alarm B:9	Control module RTI B:3	Y-SB
4	Junction point 23/414	Connector 24/59:10	P
5	Connector 24/1E:1 Parking brake switch	Control module RTI B:9	Y
6	-	-	
7	Radio :10 (S70/V70 RHD) Radio :4 (S70/V70 LHD) Connector 24/50:5 (S70/V70) Connector 24/3B:12 (C70)	Control module RTI A:9	GR-R GR-SB
8	Connector 24/50:5 (S70/V70) Connector 24/50:7 (C70)	Control module RTI A:10	GN-W GN-BN
9	-	-	
10	Connector 24/2C:1 Connector 24/3D:6 (S70/V70 RHD)	Control module RTI A:14	BL
11	Junction point 23/440	Control module RTI B:2	BL-R
12	Junction point 23/421	Control module RTI B:13	W
13	Radio :9 (S70/V70 RHD) Radio :3 (S70/V70 LHD) Connector 24/50:7 (S70/V70) Connector 24/3B:8 (C70 LHD) Connector 24/3C:6 (C70 RHD)	Control module RTI A:25	GR-SB GR-R GN-BN
14	Connector 24/50:7 (S70/V70) Connector 24/50:5 (C70)	Control module RTI A:26	GR-BN GN-W
15	Junction point 23/405	Junction point 23/316	SB

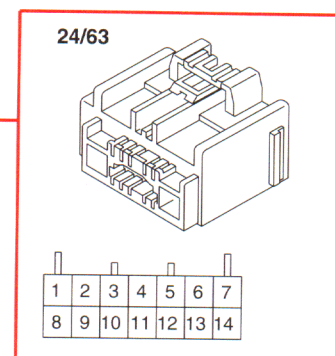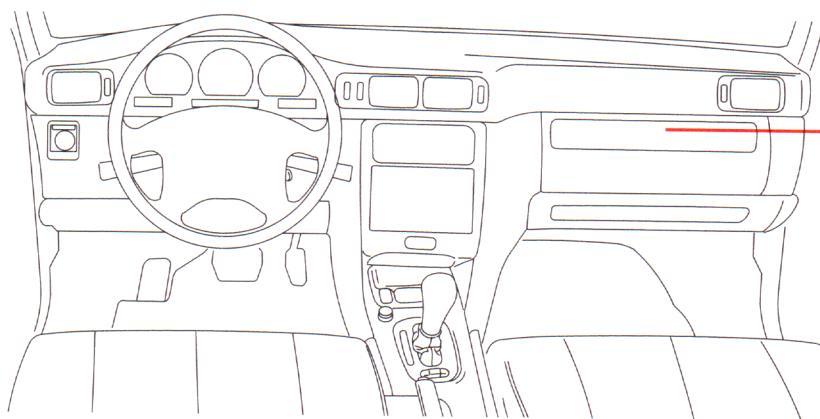

24/63 Light gray 14-pin Climate control cable harness - Firewall cable harness

Term.	Male	Female	Color
1	Junction point 23/305	Connector 24/2A:4	Y-VO
2	-	-	
3	Climate control system B:22 (MCC) Control module ECC A:3	Connector 24/2C:2	BL-GR
4	Climate control system B:17 (Not ECC)	Connector 24/2A:5	R
5	Climate control system B:18 (Not ECC) Control module ECC A:16	Junction point 23/414	P
6	Control module ECC A:30	Junction point 23/421	W
7-13	-	-	
14	Junction point 23/304	Ground terminal 31/15 [via 23/416]	SB

Connectors 24/67 and 24/81

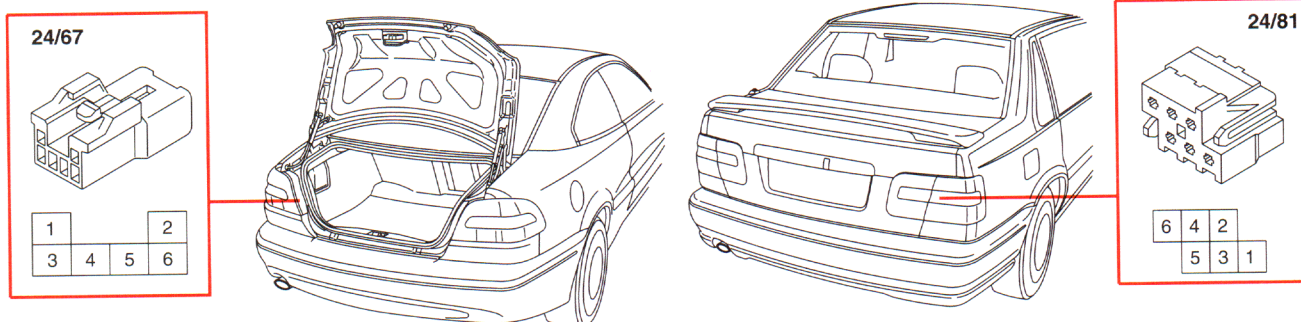

24/67 Natural 6-pin (C70) Left door sill harness - Tailgate harness

Term.	Female	Male	Color
1	Cargo compartment lighting :2 Connector 24/3C:9	Lock unit tailgate :1	BL-BN / BL-R BL-BN
2	Connector 24/3E:2	Lock unit tailgate :1	P-SB / BL-BN
3	Connector 24/3C:10	Lock unit tailgate :1	GN-BN/GN-GR
4	-	-	
5	Junction point 23/434	License plate lighting left :A License plate lighting right :A	W GR-W
6	Junction point 23/422	License plate lighting left :B Lock unit tailgate :4 License plate lighting right :B	SB BN

24/81 Yellow 6-pin (S70) Left door sill harness - Accessories

Term.	Female	Male	Color
1	Connector 24/3D:8 (RHD) Connector 24/14D:8 (LHD) Left tail lamp K:6	-	GN
2	Connector 24/3D:9 (RHD) Connector 24/14D:9 (LHD) Right tail lamp K:6	-	BL-GN
3	Connector 24/3D:7 (RHD) Connector 24/14D:7 (LHD) Left tail lamp B:1 Right tail lamp B:1	-	VO-W
4	Connector 24/3D:6 (RHD) Connector 24/14D:6 (LHD) Left tail lamp B:6 right tail lamp B:6	-	BL
5-6	-	-	

Junction points

23/12 (Engine harness, diesel)

To/from		Color	Note
31/4	Ground terminal engine	SB	
4/46:42	Engine control module (ECM)	SB	
4/46:28	Engine control module (ECM)	SB	
4/46:13	Engine control module (ECM)	SB	
7/47:2	PTC resistor preheating	SB	
4/28:20	Control module AW 50-42	BN	
4/28:29	Control module AW 50-42	SB	

23/16 (Engine harness, diesel)

To/from		Color	Note
4/46A:11	Engine control module (ECM)	W-SB	
4/46A:26	Engine control module (ECM)	W-SB	
4/46A:27	Engine control module (ECM)	W-SB	
6/31:6	Fuel injection pump	W	

23/17 (Engine harness, diesel)

To/from		Color	Note
24/43:1	Engine compartment harness + (fuse 11B/2)	GN-W	
4/46A:14	Engine control module (ECM)	GN-W	
4/46A:29	Engine control module (ECM)	GN-W	
4/46A:43	Engine control module (ECM)	GN-W	
6/31:5	Fuel injection pump	GN-W	
8/50:3	Injection timing valve	GN	

23/18 (Engine harness, diesel)

To/from		Color	Note
24/43:5	Engine compartment harness (fuse 11B/3)	GN-Y	
4/47:1	PTC resistor preheating of air	GN-Y	
2/74:2	Engine coolant preheating relay	GN-Y	
8/28:2	Turbocharger (TC) control valve	GN-Y	
8/17:2	EGR converter	GN-Y	

23/201 (Engine compartment harness)

To/from	Color	Note
24/14D:3 Left door sill harness	Y	LHD
24/2D:3 Firewall cable harness	Y	RHD
4/16:12 ABS control module	Y	S70/V70
4/28B:26 Control module AW 50-42	Y	
4/3S:6 Control module, cruise control	Y	
3/9:2 Stop (brake) lamp switch	Y	
4/46:26 Engine control module (ECM)	Y	

23/203 (Engine compartment harness)

To/from	Color	Note
31/50 Ground rail, power ground	GR-SB	S70/V70
31/51 Ground rail, signal ground	GR-SB	C70
10/2:1 Right headlamp	GR-SB	
10/10:2 Right parking lamps and turn signal lamp front	SB	C70
7/5:1 Washer fluid level sensor	SB	
7/73:2 Engine coolant level switch	SB	
10/6:2 Right front fog lamps	BN-SB	
10/16:2 Right side turn signal flasher	SB	
6/2:2 Front washer motor	SB	
6/1:3 Windshield wiper motor	GR-SB	
6/30:2 Washer motor rear windshield	SB	S70/V70
6/3:3 Right headlamp wiper motor	BN-SB	
3/72:1 Kickdown switch (KD) throttle mechanism	SB	RHD AUTO

23/207 (Engine compartment harness)

To/from	Color	Note
10/9:1 Front left parking lamps and turn signal lamp	GN	
24/2E:15 Firewall cable harness	GN	
24/14D:8 Left door sill harness	GN	LHD
3/3:3 Turn signal lamp/high and low beam switch	GN	
10/15:1 Left side turn signal flasher	GN	
24/13D:16 Dashboard harness	GN	
24/2D:8 Firewall cable harness	GN	RHD

Junction points

23/208 (Engine compartment harness)

To/from	Color	Note
24/2E:14 Firewall cable harness (control module lock/alarm)	BL-GN	
24/14D:9 Left door sill harness	BL-GN	LHD
10/9:7 Front left parking lamps and turn signal lamp	BL-GN	S70/V70
24/13D:15 Dashboard harness	BL-GN	
10/16:1 Right side turn signal flasher	BL-GN	
3/3:7 Turn signal lamp/high and low beam switch	BL-GN	C70
10/15:1 Left side turn signal flasher	BL-GN	
24/2D:9 Firewall cable harness	BL-GN	RHD

23/221 (Engine compartment harness, in the control module box)

To/from	Color	Note
4/46B:28 Engine control module (ECM)	BN-P	
7/95:2 Altitude sensor	BN-P	
7/79:2 Accelerometer	BN-P	
24/2C:7 Firewall cable harness	BN-P	
7/8:1 Air conditioning (A/C) pressure sensor	BN-P	

23/222 (Engine compartment harness)

To/from	Color	Note
24/2C:18 Firewall cable harness	W	
4/22:3 Immobilizer	W	
4/16:13 ABS control module	W	
4/28B:22 Control module AW 50-42	W	
9/31:6 Engine coolant heater	W	Diesel

23/223 (Engine compartment harness)

To/from	Color	Note
2/32:1 Main relay fuel injection system	R	
11A/8:2 Fuse	R	
11B/1:1 Fuse	R	

23/224 (Engine compartment harness)

To/from	Color	Note
11A/3:2 Main fuse	R	
2/53:1 Relay pulsed secondary air injection system (PAIR) pump	R	
2/35:1 Relay starter motor	R	

23/226 (Engine compartment harness)

To/from		Color	Note
11A/4:2	Main fuse	R	
4/16:9	ABS control module	R	
4/16:25	ABS control module	R	

23/227 (Engine compartment harness, gasoline)

To/from		Color	Note
11B/5:2	Fuse	R	
24/43:2	Engine harness	GN-OR	
2/53:2	Relay pulsed secondary air injection system (PAIR) pump	R	LHD
2/22:1	Air conditioning (A/C) relay	R	
8/28:1	Turbocharger (TC) control valve	GR-SB	
8/44:1	EVAP canister shut-off valve	BL-R	S70/V70
24/2A:6	Firewall cable harness	BL-R	LHD
24/2C:15	Connector, firewall cable harness	BL-R	

23/228 (Engine compartment harness)

To/from		Color	Note
3/12:8	Windshield wiper/washer switch	Y-W	
6/2:1	Washer motor front	Y-W	
2/4:4	Intermittent relay windshield wiper	Y-W	
6/3:1	Right headlamp wiper motor	Y-W	
6/4:1	Left headlamp wiper motor	Y-W	

23/229 (Engine compartment harness)

To/from		Color	Note
11C/34:2	Fuse	Y-VO	
6/3:2	Right headlamp wiper motor	Y-VO	
6/4:2	Left headlamp wiper motor	Y-VO	
16/10:2	Horn 1	Y-VO	
16/11:2	Horn 2	Y-VO	

Junction points

23/230 (Engine compartment harness)

To/from	Color	Note
11A/2:2 Main fuse	R	
2/6:1 Overload relay 15I-supply	R	
2/30:1 Overload relay X-supply	R	

23/234 (Engine compartment harness)

To/from	Color	Note
4/16:11 ABS control module	BN-W	
7/31:1 ABS sensor, left front	BN	

23/235 (Engine compartment harness)

To/from	Color	Note
4/16:4 ABS control module	W-SB	
7/31:2 ABS sensor left front	SB	

23/236 (Engine compartment harness)

To/from	Color	Note
4/16:18 ABS control module	BN	
7/32:1 ABS sensor right front	BN	

23/237 (Engine compartment harness)

To/from	Color	Note
4/16:3 ABS control module	SB	
7/32:2 ABS sensor right front	SB	

23/239 (Engine compartment harness)

To/from	Color	Note
3/1 Ignition switch	Y-VO	
2/30:2 Overload relay X-supply	Y-VO	
24/2C:9 Firewall cable harness	Y-VO	
24/13B:15 Dashboard harness	Y-VO	

23/240 (Engine compartment harness)

To/from		Color	Note
11A/6:2	Main fuse	R	
11C/6:1	Fuse	R	
11C/9:1	Fuse	R	

23/241 (Engine compartment harness)

To/from		Color	Note
11A/7:2	Main fuse	R-W	
11C/12:1	Fuse	R-W	
11C/16:1	Fuse	R-W	

23/242 (Left door sill harness, C70)

To/from		Color	Note
11C/16:3	Fuse [via 24/3E and 24/2A]	GR-R	
24/70B:1	Fog lamp cable harness	GR-R	
24/3E:6	Firewall cable harness	GR-R	
6/34:1	Power antenna	GR-R	
16/15:1	CD player	GR-R	

23/249 (Engine compartment harness)

To/from		Color	Note
31/52	Left spring strut turret ground terminal	SB	
10/1:1	Left headlamp	SB	
10/9:2	Left parking lamps and turn signal lamp front	SB	
10/5:2	Left front fog lamp	SB	
10/15:2	Left side turn signal flasher	SB	
6/4:3	Left headlamp wiper motor	SB	
9/31:3	Engine coolant heater	SB	Diesel
3/72:1	kickdown switch (KD) throttle mechanism	SB	AUTO (Not C70)
7/4:2	Brake fluid level switch	SB	
3/62:2	Alarm switch hood	SB	
16/35:6	Alarm siren	SB	

Junction points

23/300A (Dashboard harness)

To/from	Color	Note
24/13B:10 Engine compartment harness	P	
5/1A:10 Combined instrument panel	P	
3/2:1 Light switch	P	
3/58:2 Fog tail lamp switch	P	
3/99:2 Front fog lamps switch	P	
3/59:2 Headlamp range adjuster	P	
4/4:4 Rheostat	P	
24/1E:10 Firewall cable harness	P	
23/300B Junction point	P	

23/300B (Dashboard harness)

To/from	Color	Note
23/300A Junction point	P	
3/95:2 TRACS switch	P	
3/25:2 Power sun roof switch	P	
16/1A:10 Radio	P	
3/6:2 Hazard warning signal flasher switch with flash relay	P	
10/72 Ashtray lighting	P	
3/8:2 Rear demist/heated door mirrors switch	P	

23/301A (Dashboard harness)

To/From	Color	Note
24/13A:4 Engine compartment harness (power ground)	SB	
23/301B Junction point	SB	
5/1A:17 Combined instrument panel	SB	
7/12:2 ECC sun sensor and indicator LED alarm/immobilizer	SB	S70/V70
3/2:10 Light switch	SB	
3/99:5 Front fog lamps switch	SB	
3/58:5 Fog tail lamp switch	SB	
4/4:2 Rheostat	SB	
10/113:2 Indicator LED alarm/electronic park/neutral position (PNP) switch	SB	C70

23/301B (Dashboard harness)

To/from		Color	Note
23/301A	Junction point	SB	
3/95:5	TRACS switch	SB	
7/64:2	Passenger compartment temperature sensor	SB	
3/25:5	Power sun roof switch	SB	
3/6:3	Switch hazard warning signal flasher with blink relay	SB	
3/8:5	Rear demist/heated door mirrors switch	SB	
10/29:2	Glove compartment lighting	SB	
10/72	Ashtray lighting	SB	
16/1E:2	Radio	SB	C70

23/302 (Instrument panel harness)

To/from		Color	Note
24/13B:18	Engine compartment harness (fuse 11C/15:3)	R	
10/29:1	Glove compartment lighting	R	
10/97:1	Driver's side courtesy lighting	R	
10/102:1	Passenger side courtesy lighting	R	

23/304 (Climate control cable harness)

To/from		Color	Note
24/63:14	Firewall cable harness (ground 31/15)	SB	
4/31B:2	Blower fan power unit -	SB	ECC
4/30A:23	ECC control module	SB	ECC
3/57B:16	Climate control system	SB	Not ECC
6/28:2	Blower fan	SB	Not ECC

23/305 (Climate control cable harness)

To/from		Color	Note
24/63:1	Firewall cable harness (fuse 11C/31:2)	Y-VO	
4/31A:4	Blower fan power unit	Y-VO	ECC
6/28:1	Blower fan	Y-VO	ECC
3/57B:6	Climate control system	Y-VO	Not ECC
3/57A:4	Climate control system	Y-VO	Not ECC

Junction points

23/306 (Climate control cable harness, ECC)

To/from		Color	Note
4/30A:22	ECC control module	BN	
6/48:1	Servo motor recirculation shutter	BN	
6/95:1	Servo motor temperature shutter left-hand side	BN	
6/96:1	Servo motor temperature shutter right-hand side	BN	
6/69:1	Servo motor floor, defroster and ventilation shutters	BN	
7/11:4	ECC outside temperature sensor	BN	

23/307 (Climate control cable harness, ECC)

To/from		Color	Note
4/30A:7	ECC control module	P-W	
6/48:2	Servo motor recirculation shutter	P-W	
6/95:2	Servo motor temperature shutter left-hand side	P-W	
6/96:2	Servo motor temperature shutter right-hand side	P-W	
6/69:2	Servo motor floor, defroster and ventilation shutters	P-W	

23/311 (Instrument panel harness)

To/from		Color	Note
4/30C:10	ECC control module	BN-W	
7/64:3	Passenger compartment temperature sensor	BN-W	S70/V70
10/113:5	Indicator LED alarm	BN-W	S70/V70
7/12:5	ECC sun sensor and indicator LED alarm/electronic park/neutral position (PNP) switch	BN-W	C70
7/64:3	Passenger compartment temperature sensor	BN-W	C70

23/312 (Instrument panel harness)

To/from		Color	Note
24/13D:18	Engine compartment harness (fuse 11C/13:3)	R	
4/19:5	Remote control module central locking/anti theft alarm	R	
7/101:1	Glass breakage sensor	R	S70/V70
3/6:8	Hazard warning signal flasher switch with flash relay	R	

23/313 (Climate control cable harness, not ECC)

To/from		Color	Note
3/57A:6	Climate control system	GN-GR	
6/28:1	Blower fan	GN-R	
20/18:3	Blower fan resistor	GN-W	

23/314 (RTI cable harness, not shown)

To/from	Color	Note
24/61:1 Firewall cable harness (30-rail, central electrical unit)	R	
24/59:13 Display RTI	R	
24/59:12 Display RTI	R	
16/48:16 CD player RTI	R	
16/45B:1 Control module RTI	R	

23/315 (RTI cable harness, not shown)

To/from	Color	Note
24/61:2 Firewall cable harness (fuse 11C/30:2)	Y-VO	
24/59:11 Display RTI	Y-VO	
16/48:7 CD player RTI	Y-VO	
16/45B:2 RTI control module	Y-VO	

23/316 (RTI cable harness, not shown)

To/from	Color	Note
24/61:15 Firewall cable harness (ground)	SB	
16/45B:8 Control module RTI	SB	
24/59:9 Display RTI	SB	
24/59:8 Display RTI	SB	
16/48:15 CD player RTI	SB	

23/320 (Instrument panel harness)

To/from	Color	Note
24/1E:8 Firewall cable harness (ground terminal A-post)	SB	
16/1:14 Radio	SB	
16/1:6 Radio	SB	

23/321 (Radio cable harness, MOD2 4x50W, not displayed in illustration)

To/from	Color	Note
16/1A:14 Connector dashboard harness	GN-BN	
16/1A:6 Connector, dashboard harness	GN-BN	
16/2A:10 Amplifier	GN-BN	
16/2A:9 Amplifier	GN-BN	
16/1E:6 Radio	GN-BN	
16/1E:14 Radio	GN-BN	

Junction points

23/322 (Radio cable harness, MOD2 4x50W, not displayed in illustration)

To/from		Color	Note
16/1A:12	Connector, dashboard harness	GN-BN	
16/1A:4	Connector, dashboard harness	GN-BN	
16/2A:4	Amplifier	GN-BN	
16/2A:3	Amplifier	GN-BN	
16/1E:4	Radio	GN-BN	
16/1E:12	Radio	GN-BN	

23/401 (Left door sill harness V70)

To/from		Color	Note
24/3B:3	Firewall cable harness (lock unit A:1)	Y	
24/17:9	Left rear door	Y	
24/25:4	Tailgate	Y	

23/405 (Firewall harness)

To/from		Color	Note
31/7	Ground terminal A-post driver's side	SB	
24/50:6	Driver's door cable harness	SB	
24/60:6	Passenger door cable harness	SB	
24/1E:2	Dashboard harness	SB	
24/9A:4	Roof harness	SB	LHD
24/9A:11	Roof harness	SB	C70 LHD
2/76A:1	Control module central locking/anti theft alarm	SB	
24/61:15	RTI cable harness	SB	
24/4A:4	Right door sill harness	SB	S70/V70 RHD
10/114:2	Vanity mirror lighting left-hand side	SB	Not C70 RHD
10/115:2	Vanity mirror lighting right-hand side	SB	RHD
24/20A:4	Power sun roof cable harness	SB	S70/V70 RHD

23/406 (Firewall harness)

To/from		Color	Note
2/76A:16	Control module central locking/anti theft alarm	Y-GR	
24/60:17	Passenger door cable harness	Y-GR	
24/50:17	Driver's door cable harness	Y-GR	

23/408 (Firewall harness)

To/from		Color	Note
2/76B:2	Control module central locking/anti theft alarm	Y-BN	
24/4C:10	Right door sill harness	Y-BN	
24/60:14	Passenger door cable harness	Y-BN	
24/3B:2	Left door sill harness	Y-BN	

23/409 (Firewall harness)

To/from		Color	Note
2/76B:11	Control module central locking/anti theft	Y	S70/V70
2/76A:14	Control module central locking/anti theft	Y	C70
24/50:15	Cable harness driver's door	Y	
24/60:15	Passenger door cable harness	Y	
24/4C:11	Right door sill harness	Y	S70/V70
24/3B:3	Left door sill harness	Y	S70/V70

23/411 (Firewall harness)

To/from		Color	Note
24/2B:4	Engine compartment harness (30-rail, central electrical unit)	R	
24/9A:1	Roof cable harness	R	
24/3B:7	Left door sill harness	R	
24/50:1	Driver's door cable harness	R	
24/60:1	Passenger door cable harness	R	
24/4B:6	Right door sill harness	R	S70/V70
10/114:1	Vanity mirror lighting left-hand side	R	
10/115:1	Vanity mirror lighting right-hand side	R	
24/61:1	RTI cable harness	R	

Junction points

23/412 (Firewall harness)

To/from	Color	Note
24/2A:2 Engine compartment harness (fuse 11C/40:2)	BL	
24/60:3 Passenger door cable harness	BL	
24/4A:1 Right door sill harness	BL	S70/V70
24/50:3 Driver's door cable harness	BL	
24/9A:12 Roof harness	BL	C70

23/414 (Firewall harness)

To/from	Color	Note
24/1E:10 Dashboard harness	P	
24/63:5 Climate control cable harness	P	
10/40:1 Gear selector light	P	
24/7A:7 Tunnel cable harness	P	
24/61:4 RTI cable harness	P	

23/416 (Firewall harness)

To/from	Color	Note
31/15 Ground terminal A-post passenger side	SB	
24/7A:4 Tunnel cable harness	SB	
24/7B:10 Tunnel cable harness	SB	
3/63:6 Mode selector AW 50-42	SB	
8/36:2 Shift lock solenoid	SB	
7/122:5 Movement detector	SB	C70 RHD
24/63:14 Climate control cable harness	SB	
24/4A:4 Right door sill harness	SB	S70/V70 LHD
24/9A:11 Roof harness	SB	C70 RHD
24/60:12 Passenger door cable harness	SB	
10/114:2 Vanity mirror lighting left-hand side	SB	RHD
10/115:2 Vanity mirror lighting right-hand side	SB	LHD
10/40:2 Gear selector light	SB	
24/9A:4 Roof harness	SB	RHD

23/417 (Left door sill harness V70)

To/from		Color	Note
31/11	Cargo compartment left-hand side ground terminal	SB	
24/25:14	Tailgate cable harness	SB	
7/100:1	Car tilt sensor	SB	
7/1:9	Bulb failure warning sensor rear	SB	
10/18:1A	Left tail lamp	SB	
10/18:1B	Left tail lamp	SB	
16/15:2	CD player	SB	
6/34:4	Power antenna	SB	
24/25:10	Tailgate cable harness	SB	
24/25:7	Tailgate cable harness	SB	

23/419 (Firewall cable harness MOD1)

To/from		Color	Note
2/76A:2	Control module central locking/anti theft alarm	VO-W	
24/50:4	Driver's door cable harness	VO	
24/3B:4	Left door sill harness	VO	

23/421 (Firewall harness)

To/from		Color	Note
24/7B:7	Tunnel harness (data link connector (DLC))	W	
24/2C:18	Engine compartment harness	W	
4/9:9	Supplemental Restraint System Crash Sensor	W	
24/2E:5	Engine compartment harness	W	RHD
24/63:6	Climate control cable harness	W	
2/76B:19	Control module central locking/anti theft alarm	W	
24/4B:9	Engine compartment harness	W	
24/3C:2	Left door sill harness	W	
24/61:12	Cable harness RTI	W	

Junction points

23/422 (Left door sill harness)

To/from		Color	Note
31/11	Ground terminal	SB	S70/V70
31/12	Ground terminal	SB	C70
7/1:9	Rear bulb failure warning sensor	SB	C70
24/67:6	Tailgate cable harness	SB	C70
10/18B:3	Left tail lamp	SB	S70/V70
10/3:3	License plate lighting	SB	S70/V70
10/18K:3	Left tail lamp	SB	S70/V70
3/78:4	Lock unit tailgate	SB	S70/V70
7/100:1	Car tilt sensor	SB	S70/V70
16/15:2	CD player	SB	
6/34:4	Power antenna	SB	

23/423 (Firewall cable harness MOD1)

To/from		Color	Note
24/3C:5	Left door sill harness	GR-R	
24/4C:4	Right door sill harness	GR-R	
24/50:2	Driver's door cable harness	GR-R	

23/424 (Firewall harness)

To/from		Color	Note
2/76A:4	Control module central locking/anti theft alarm	Y-W	
24/50:11	Driver's door cable harness	Y-W	
24/60:11	Passenger door cable harness	Y-W	

23/425 (Firewall cable harness MOD1)

To/from		Color	Note
2/76A:15	Control module central locking/anti theft alarm	VO	
24/60:4	Passenger door cable harness	VO	
24/4C:12	Right door sill harness	VO	

23/426 (Firewall cable harness MOD1)

To/from		Color	Note
16/1:6	Radio	P-SB	
24/4B:5	Right door sill harness	P-SB	
24/3C:1	Left door sill harness	P-SB	

23/427 (Firewall cable harness MOD1)

To/from		Color	Note
16/1:5	Radio	P-W	
24/4B:4	Right door sill harness	P-W	
24/3C:6	Left door sill harness	P-W	

23/428 (Firewall cable harness, not S70/V70 MOD2)

To/from		Color	Note
24/2C:10	Engine compartment harness	Y-R	
24/60:18	Passenger door cable harness	Y-R	
24/50:18	Driver's door cable harness	Y-R	

23/434 (Left door sill harness, C70)

To/from		Color	Note
24/70A:4	Fog lamp cable harness	W	
24/3D:1	Firewall cable harness	W	
7/1:3	Bulb failure warning sensor rear	W	
24/67:5	Tailgate cable harness	W	

23/435 (Left door sill harness, C70)

To/from		Color	Note
24/70A:5	Fog lamp cable harness	GR	
24/3D:2	Firewall cable harness	GR	
7/1:7	Rear bulb failure warning sensor	GR	
7/1:4	Rear bulb failure warning sensor	GR	

23/440 (Firewall harness)

To/from		Color	Note
24/2E:11	Engine compartment harness (fuse 11C/2:2)	BL-R	
3/63:4	Mode selector AW 50-42	BL-R	
2/76B:8	Control module central locking/anti theft alarm	BL-R	
24/61:11	RTI cable harness	BL-R	

Junction points

23/502 (Tunnel harness)

To/from	Color	Note
24/7A:4 Tunnel cable harness (ground terminal A-post)	SB	
3/65:5 Switch heated rear seat	SB	S70/V70
2/43:6 Heated rear seat relay	SB	S70/V70
9/1:2 Cigarette lighter/12V outlet front	SB	
3/91:5 Left heated seat switch	SB	
3/92:5 Right heated seat switch	SB	
9/25:2 Cigarette/12V outlet rear	SB	

23/503 (Tunnel harness, S70/V70)

To/from	Color	Note
24/7:2 Tunnel cable (fuse 11C/28:2)	BL-Y	
2/43:1 Heated rear seat relay	BL-Y	
3/65:2 Heated rear seat switch	BL-Y	
3/91:3 Heated left seat switch	BL-Y	
3/92:3 Rear right heated seat switch	BL-Y	

23/601 (tailgate cable harness, V70)

To/from	Color	Note
24/25:10 Left door sill harness (ground terminal)	SB	
3/78:2 Tailgate lock unit	SB	
3/78:8 Tailgate lock unit	SB	
10/19:5 High-mounted stop (brake) lamps	SB	
10/3:2 License plate lighting	SB	

23/603 (Driver door harness)

To/from	Color	Note
24/50:6 Firewall cable harness (ground 31/7)	SB	
3/100B:3 Driver's door lock unit	SB	LHD
3/100B:2 Driver's door lock unit	SB	RHD
3/109:3 Trunk lid/fuel tank filler cover switch	SB	
3/97C:5 Power window switch	SB	

23/604 (Driver door harness)

To/from		Color	Note
24/50:10	Firewall cable harness (control module lock/alarm)	W-SB	
3/100B:1	Driver's door lock unit	W-SB	RHD
3/100B:4	Driver's door lock unit	W-SB	LHD
10/30:2	Door open warning lamp left front	W-SB	

23/605 (Passenger door cable harness)

To/from		Color	Note
24/60:10	Firewall cable harness (control module lock/alarm)	Y-BN	
3/110B:4	Passenger door lock unit	Y-BN	LHD
3/110B:1	Passenger door lock unit	Y-BN	RHD
10/31	Door open warning lamp right front	Y-BN	

23/606 (Passenger door cable harness)

To/from		Color	Note
24/60:6	Firewall cable harness (ground 31/7)	SB	
3/110B:3	Passenger door lock unit	SB	RHD
3/110B:2	Passenger door lock unit	SB	LHD
3/20C:4	Power window switch front passenger door	SB	

23/609 (Driver door harness)


To/from		Color	Note
24/50:12	Firewall cable harness (ground 31/50)	SB	
3/97A:1	Power window switch	SB	LHD
3/97A:2	Power window switch driver's door	SB	RHD
3/41:5	Power door mirrors switch	SB	
6/13:3	Power door mirror driver's side	SB	

23/702 (Roof cable harness)


To/from		Color	Note
24/9A:4	Firewall cable harness (Ground terminal)	SB	
7/96:7	Movement detector left	SB	S70/V70
7/97:7	Movement detector right	SB	S70/V70
10/22:6	Passenger compartment roof lamp	SB	
10/26:2	Left rear reading lamp	SB	S70/V70
10/26:3	Left rear reading lamp	SB	C70
10/27:2	Right rear reading lamp	SB	S70/V70
10/27:3	Right rear reading lamp	SB	C70
8/48:3	Rear view mirror	SB	C70

Routing of cable harnesses in the car

Firewall harness

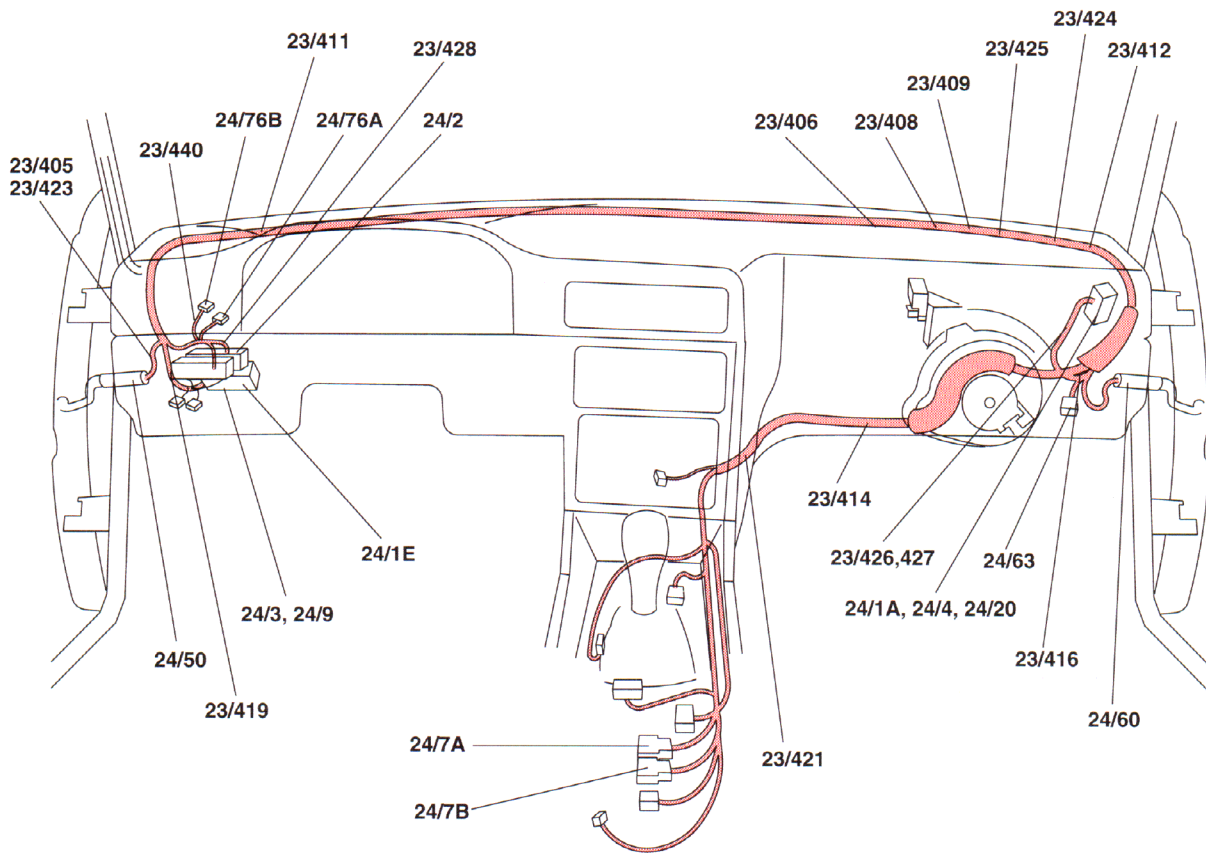


Instrument panel harness

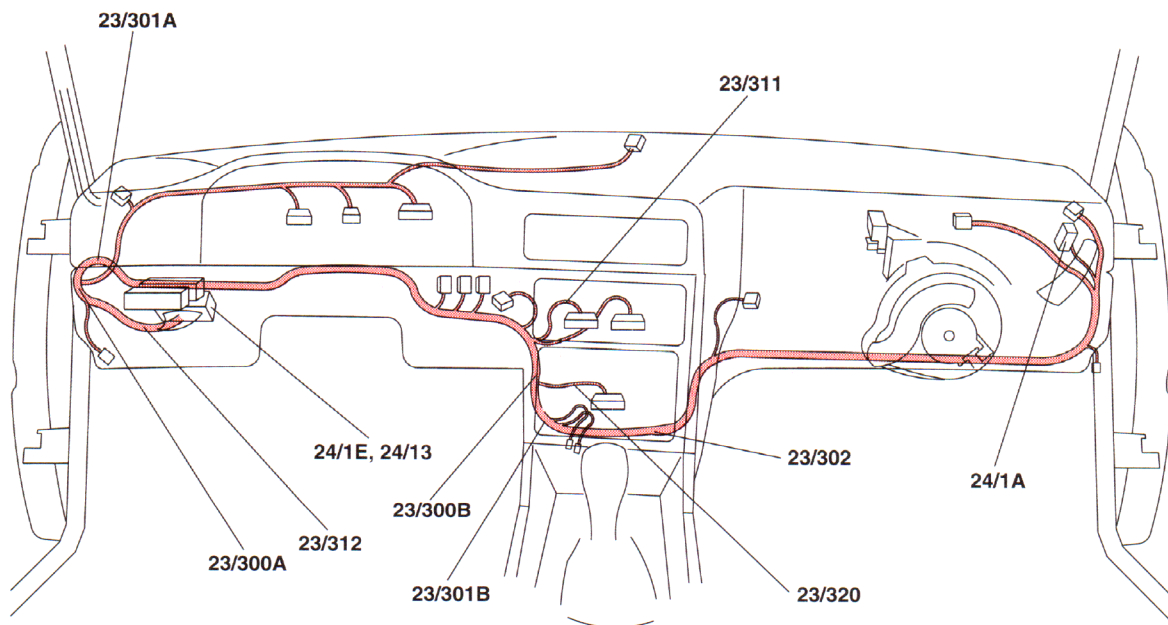


Routing of cable harnesses in the car

ECC harness

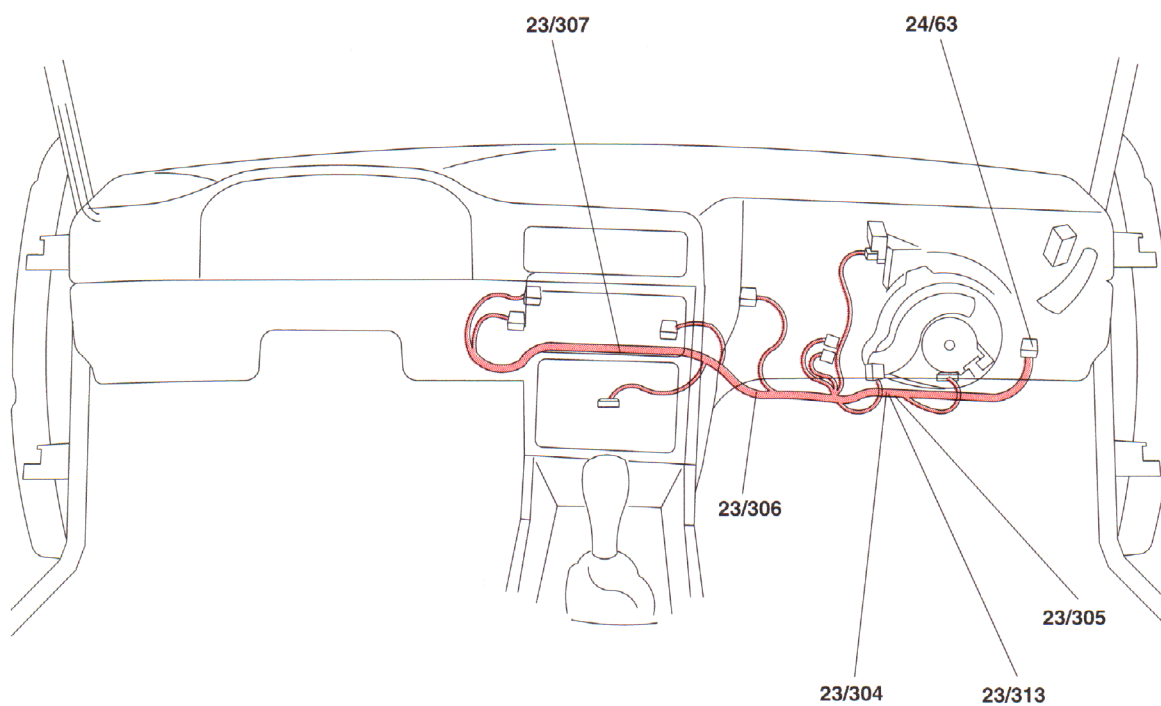


Routing of cable harnesses in the car

Left door sill harness, C70

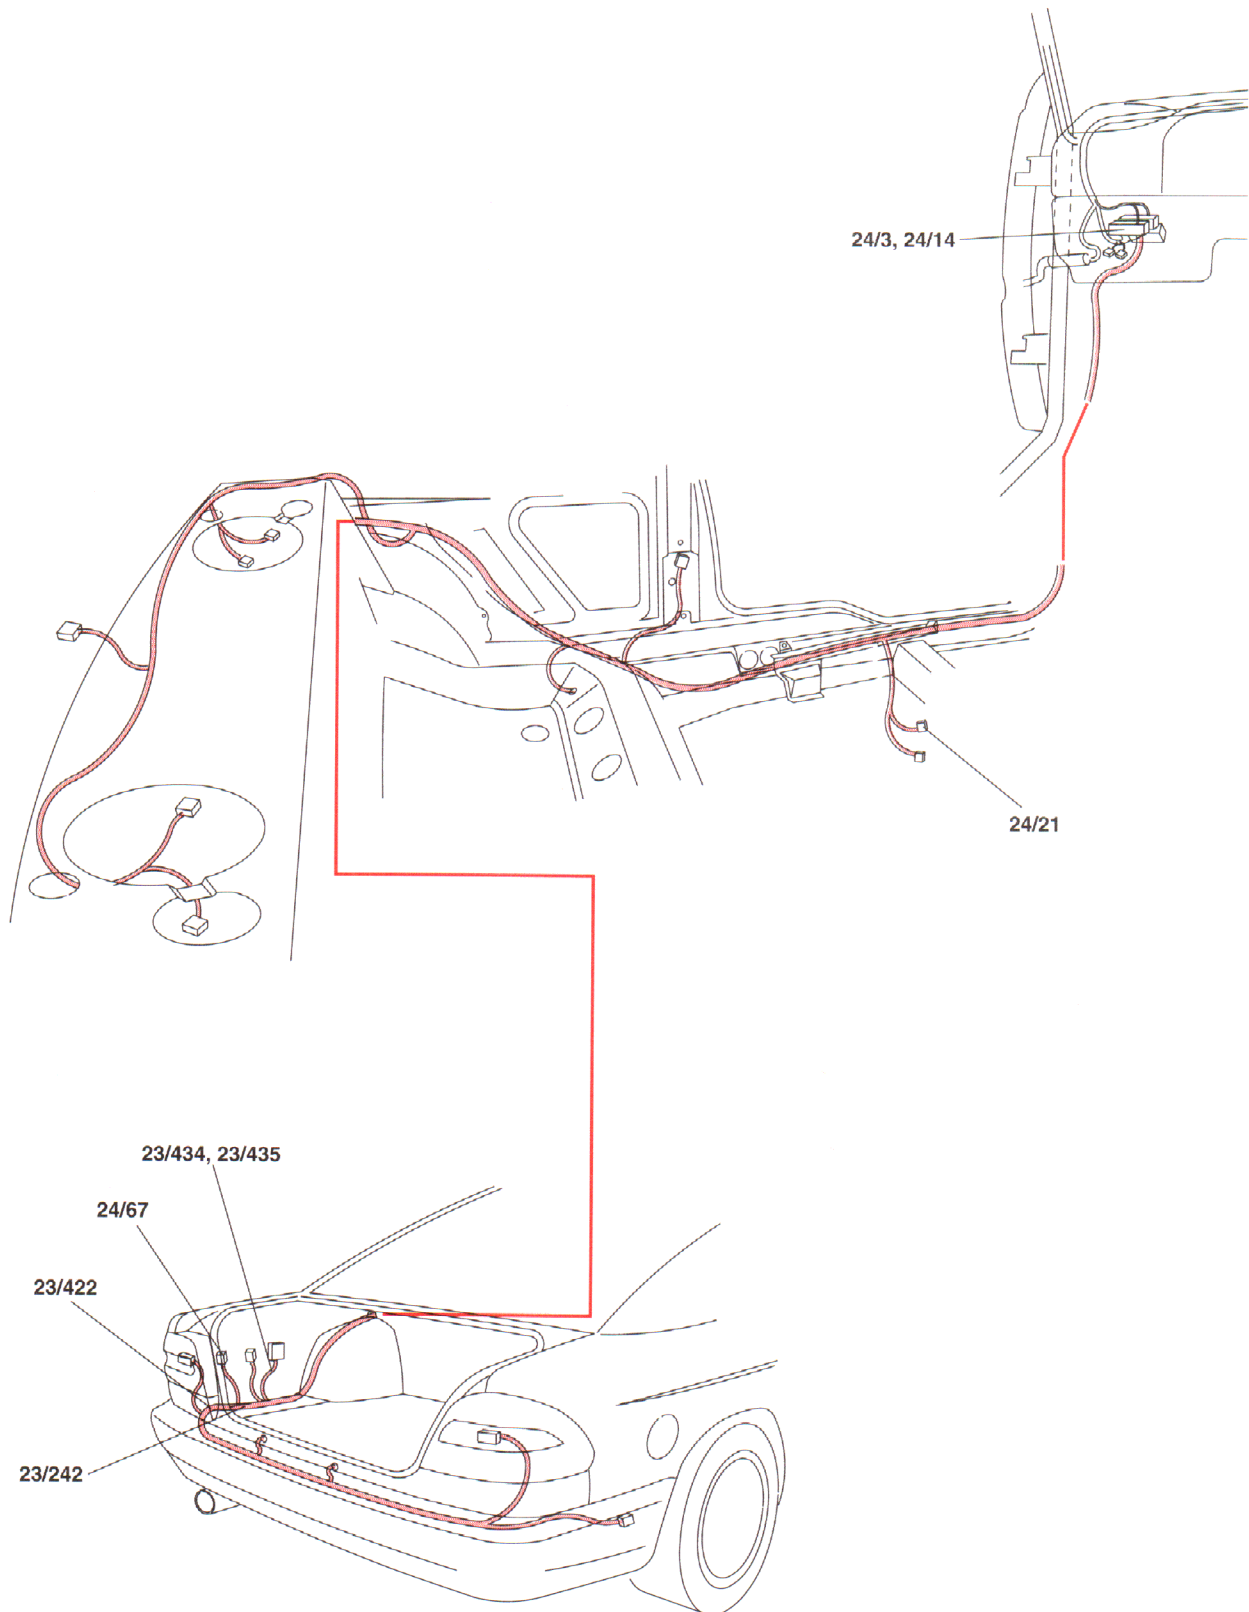


Routing of cable harnesses in the car

Left door sill harness, S70/V70

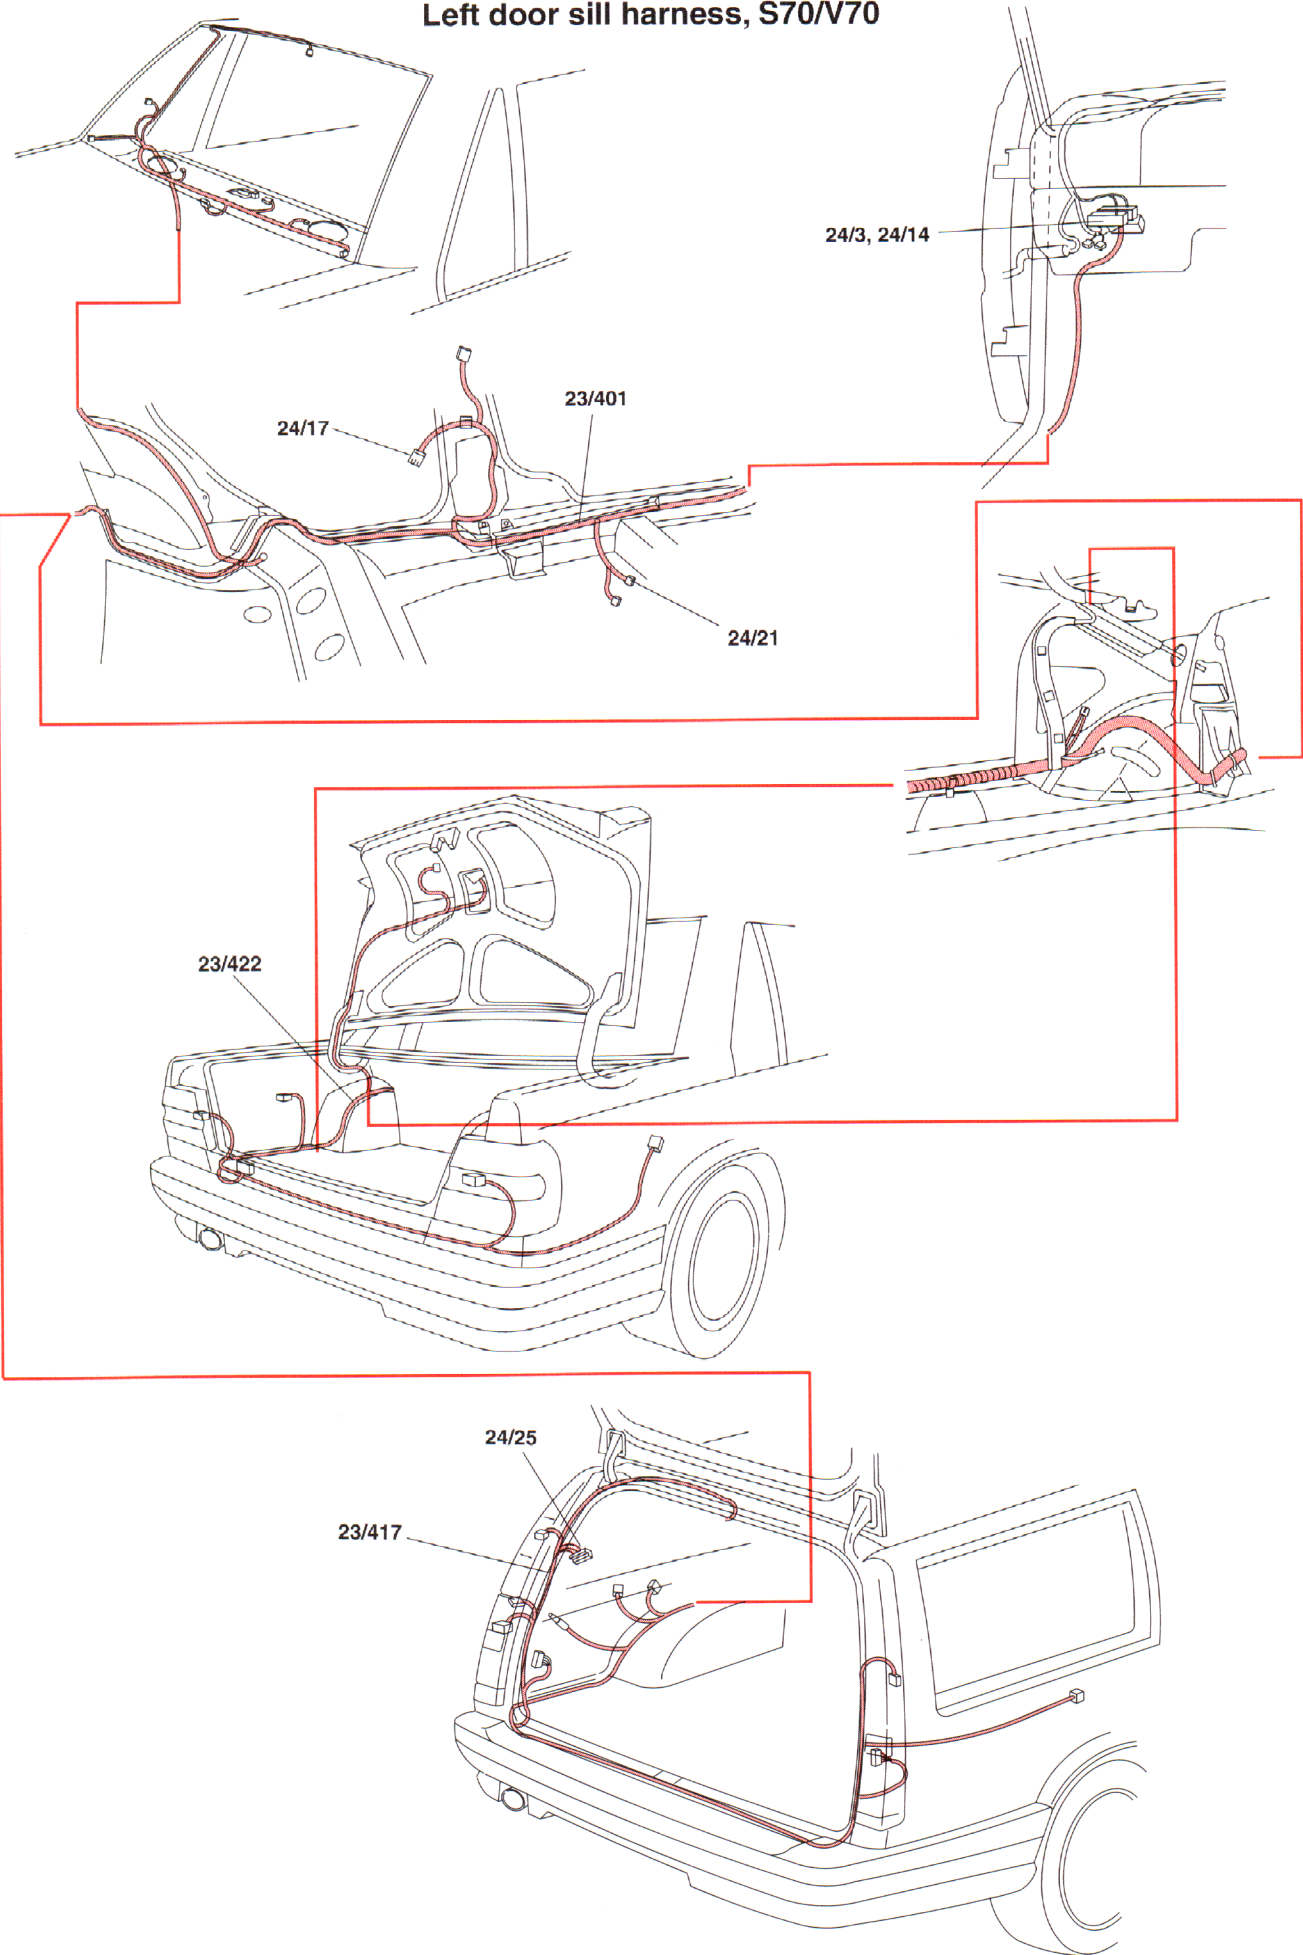


Right door sill harness, C70

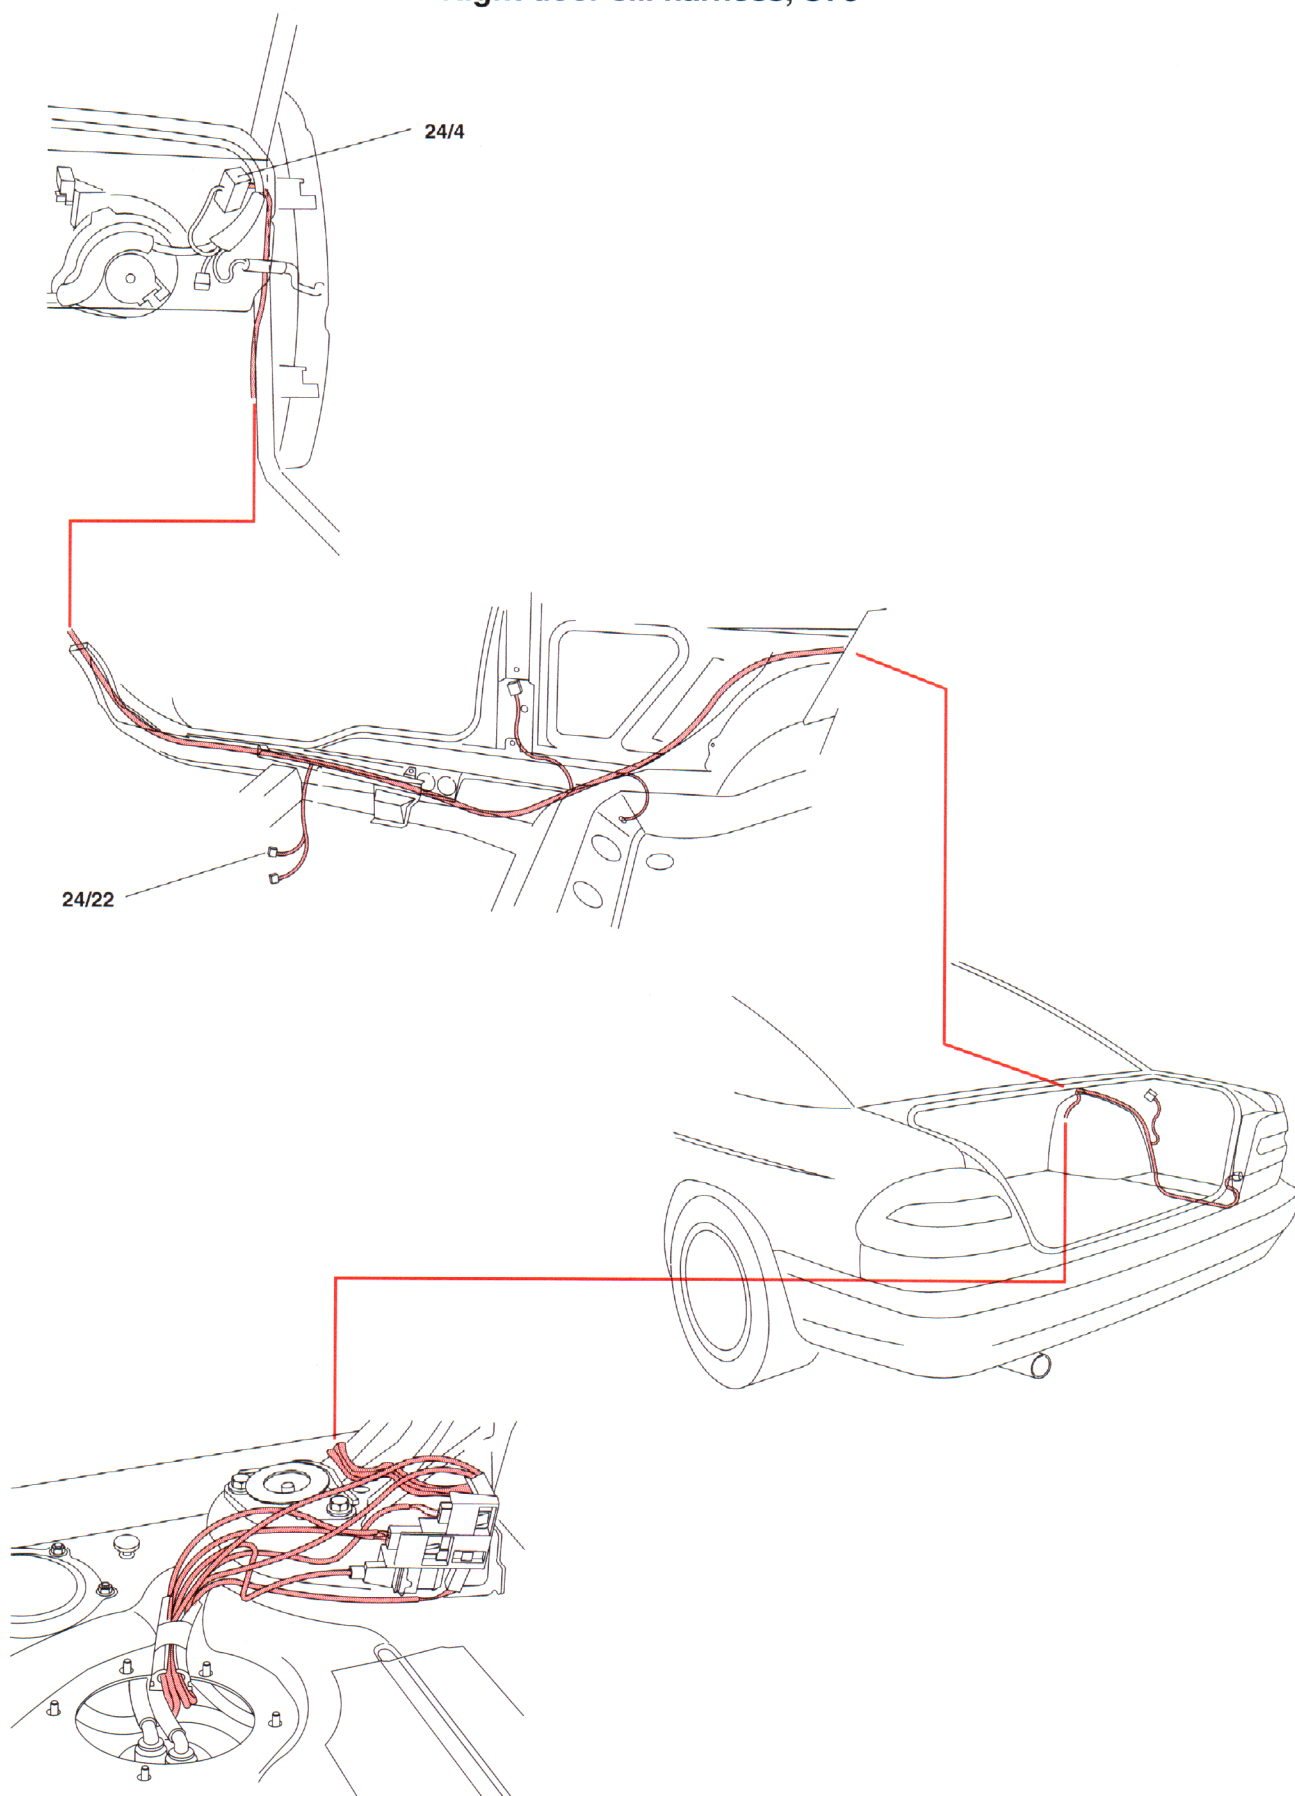


Routing of cable harnesses in the car

Right door sill harness, S70/V70

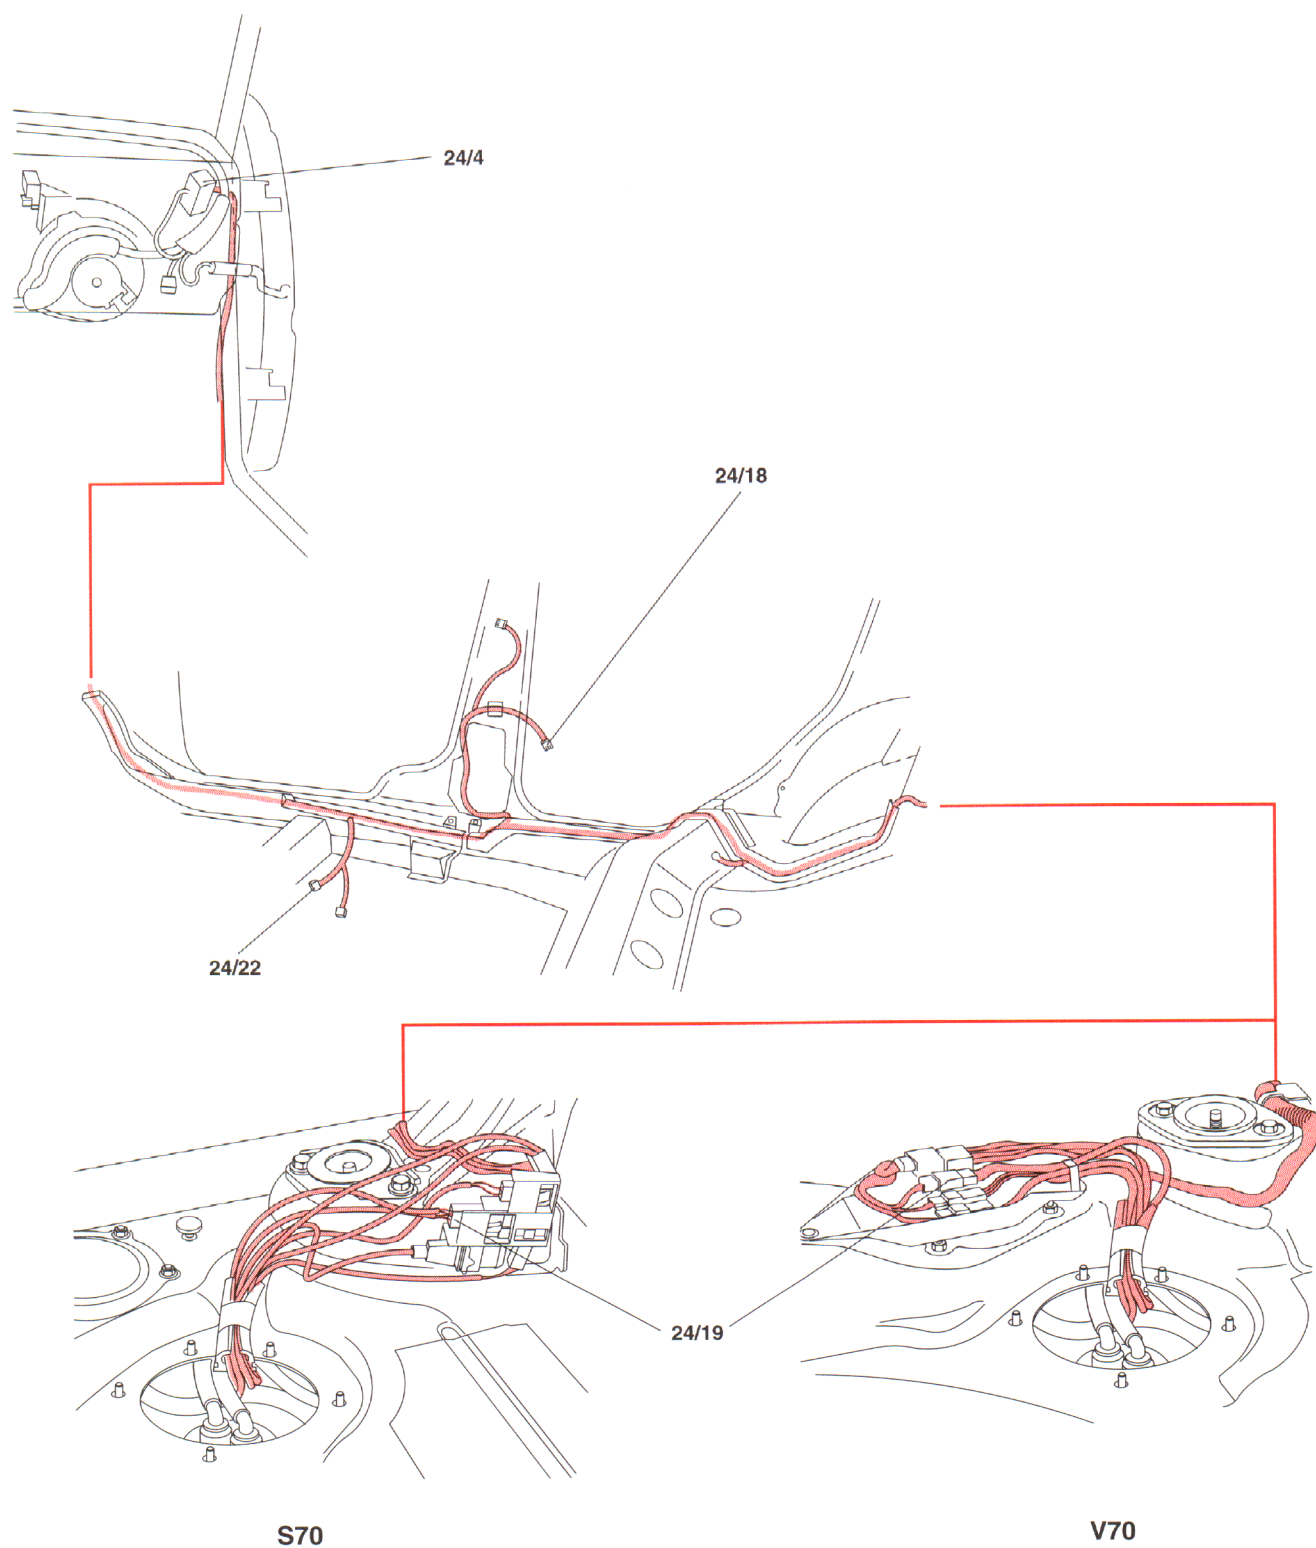


Routing of cable harnesses in the car

Tunnel harness

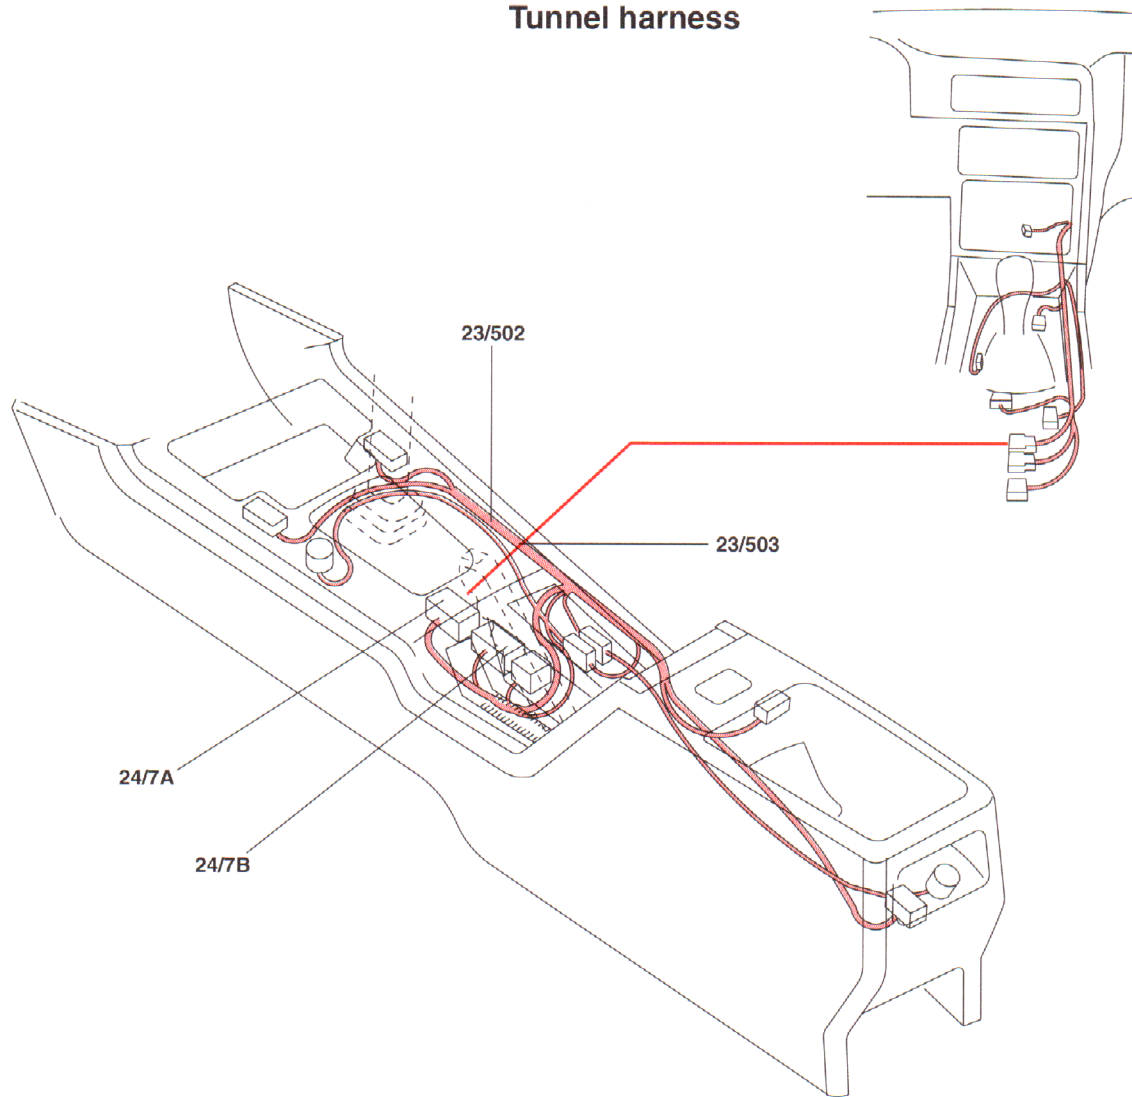


Power sunroof harness


Roof harness

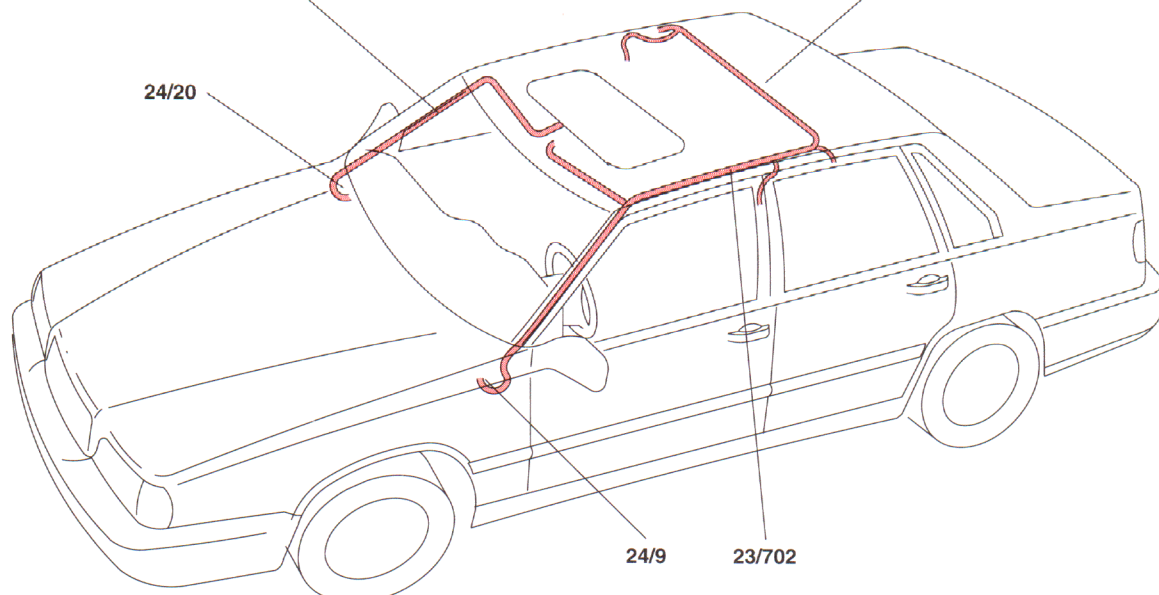


Routing of cable harnesses in the car

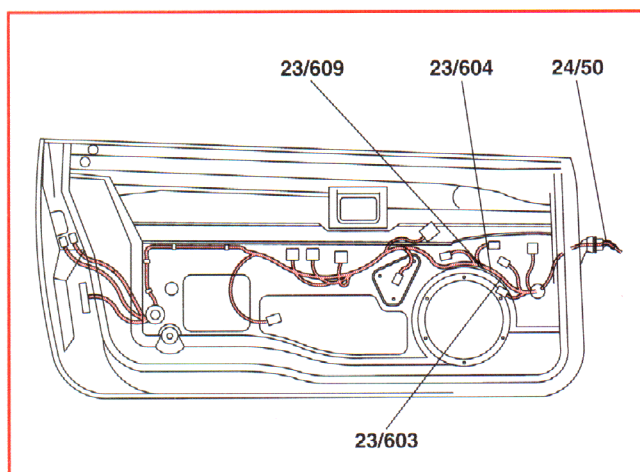

Driver door harness

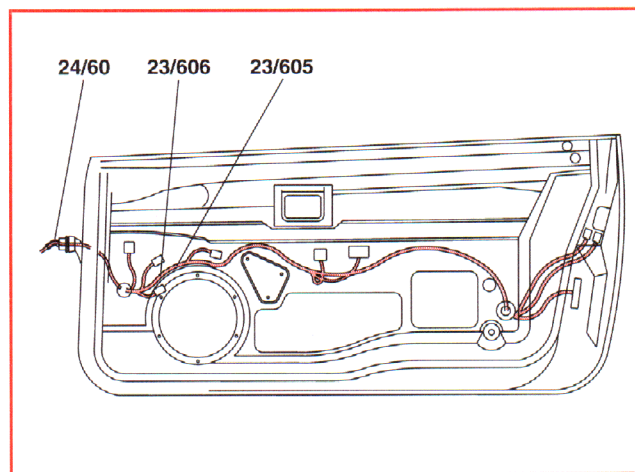


Passenger door harness

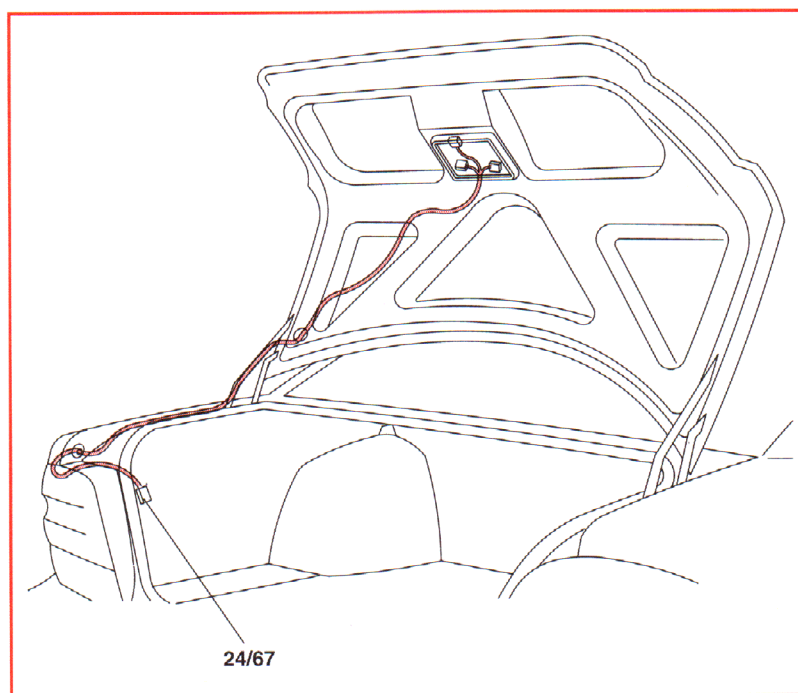


Tailgate harness


Routing of cable harnesses in the car

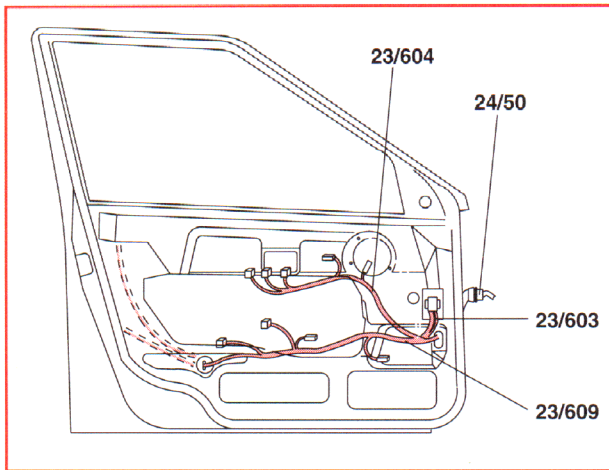


Driver door harness

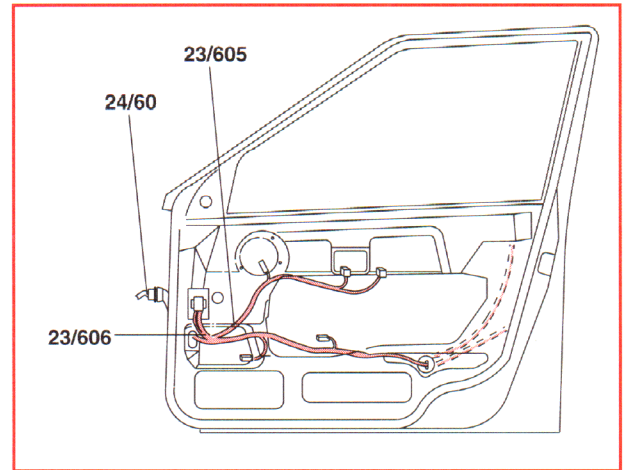


Passenger door harness

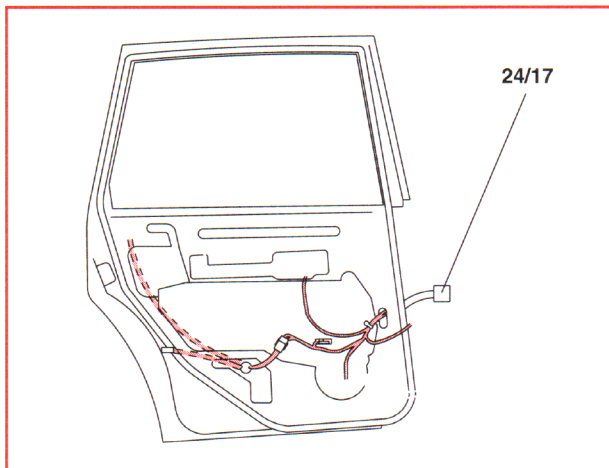

Left rear door harness

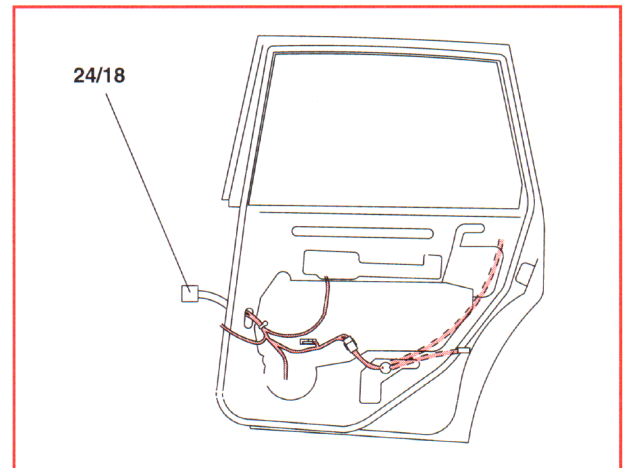


Right rear door harness

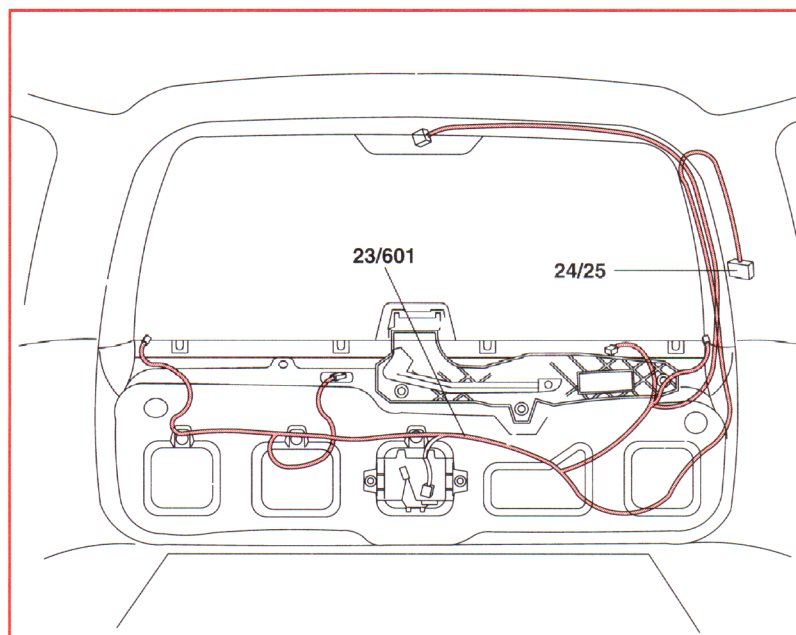


Tailgate harness


Fuel and ignition system Fenix 5.2

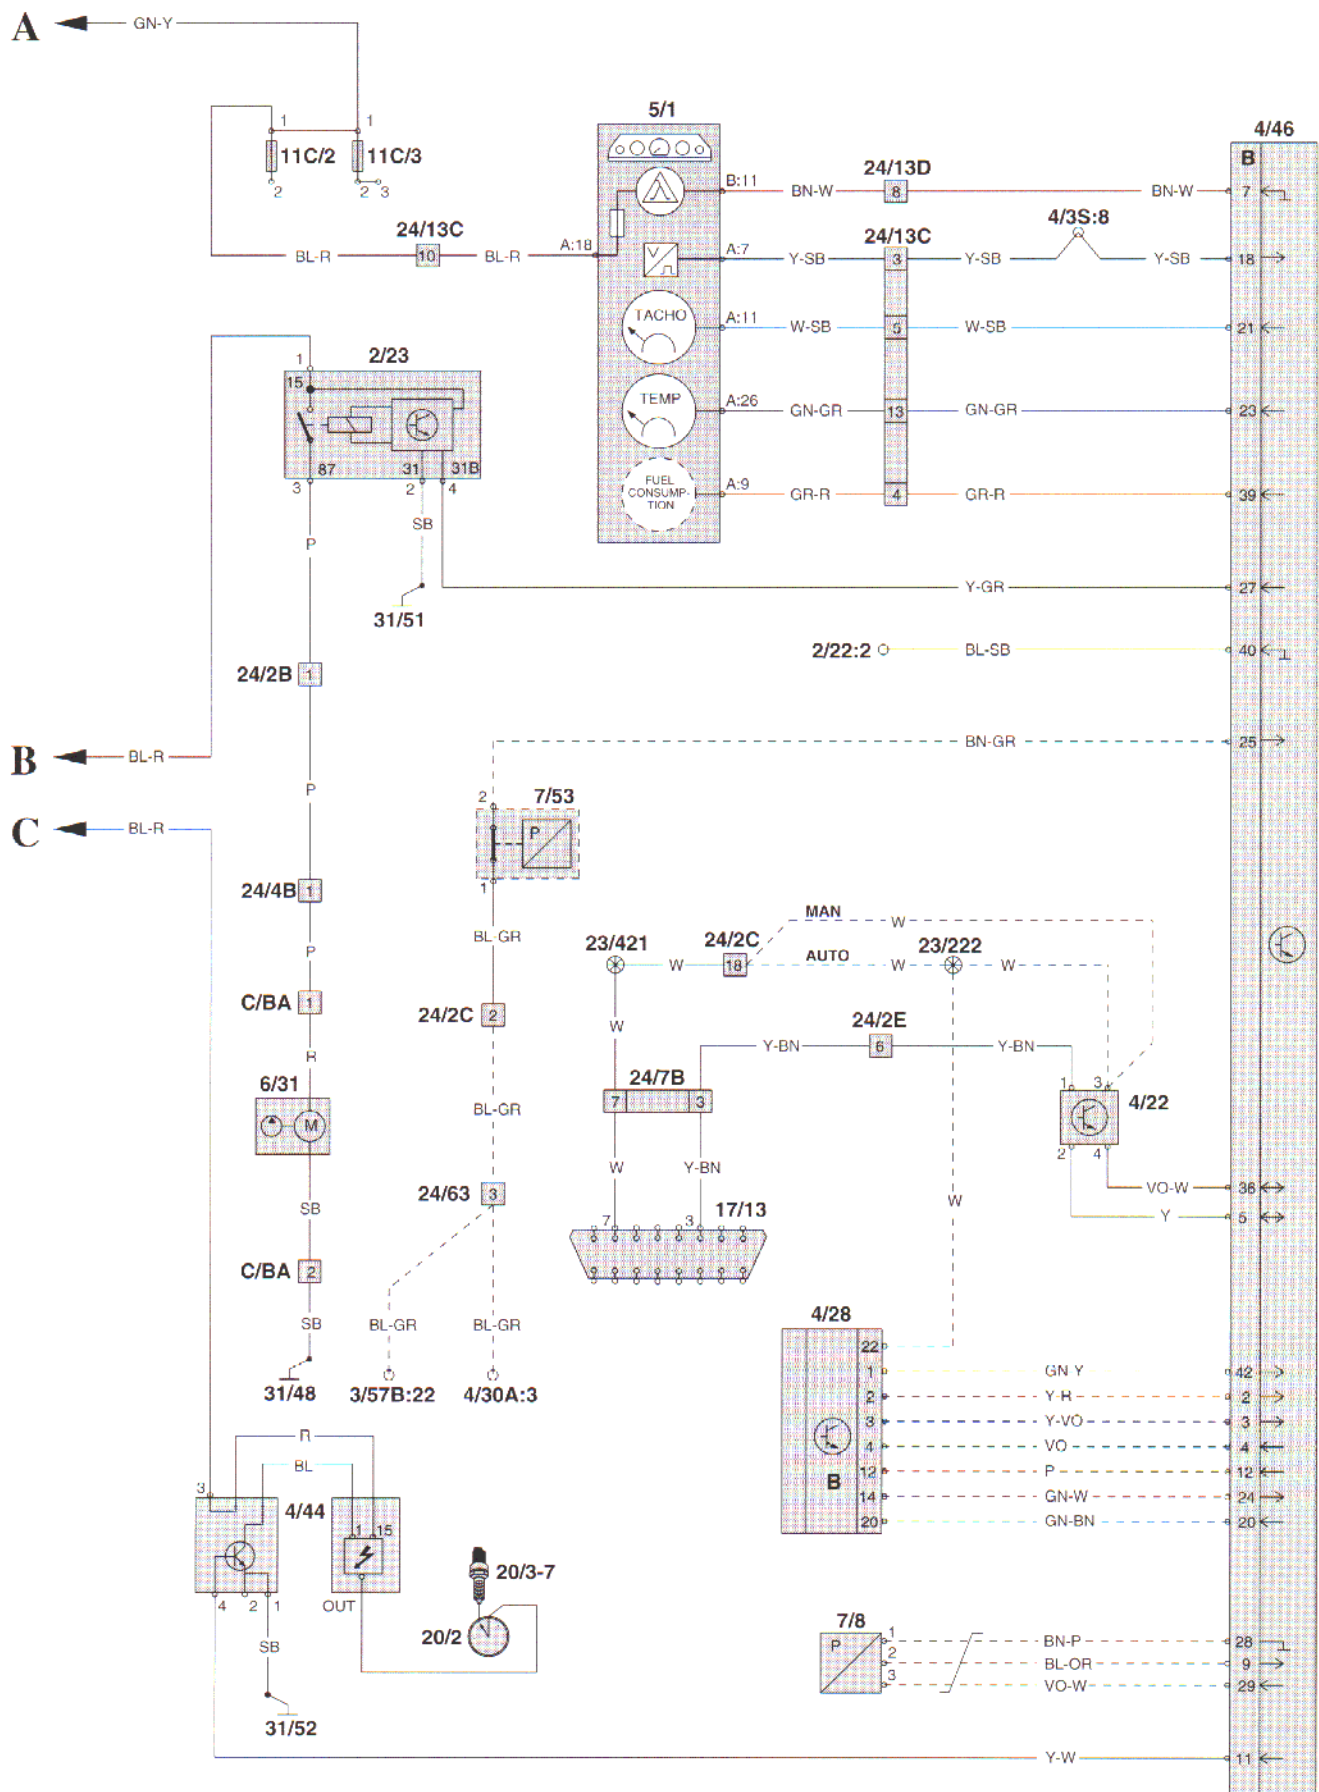


Fuel and ignition system

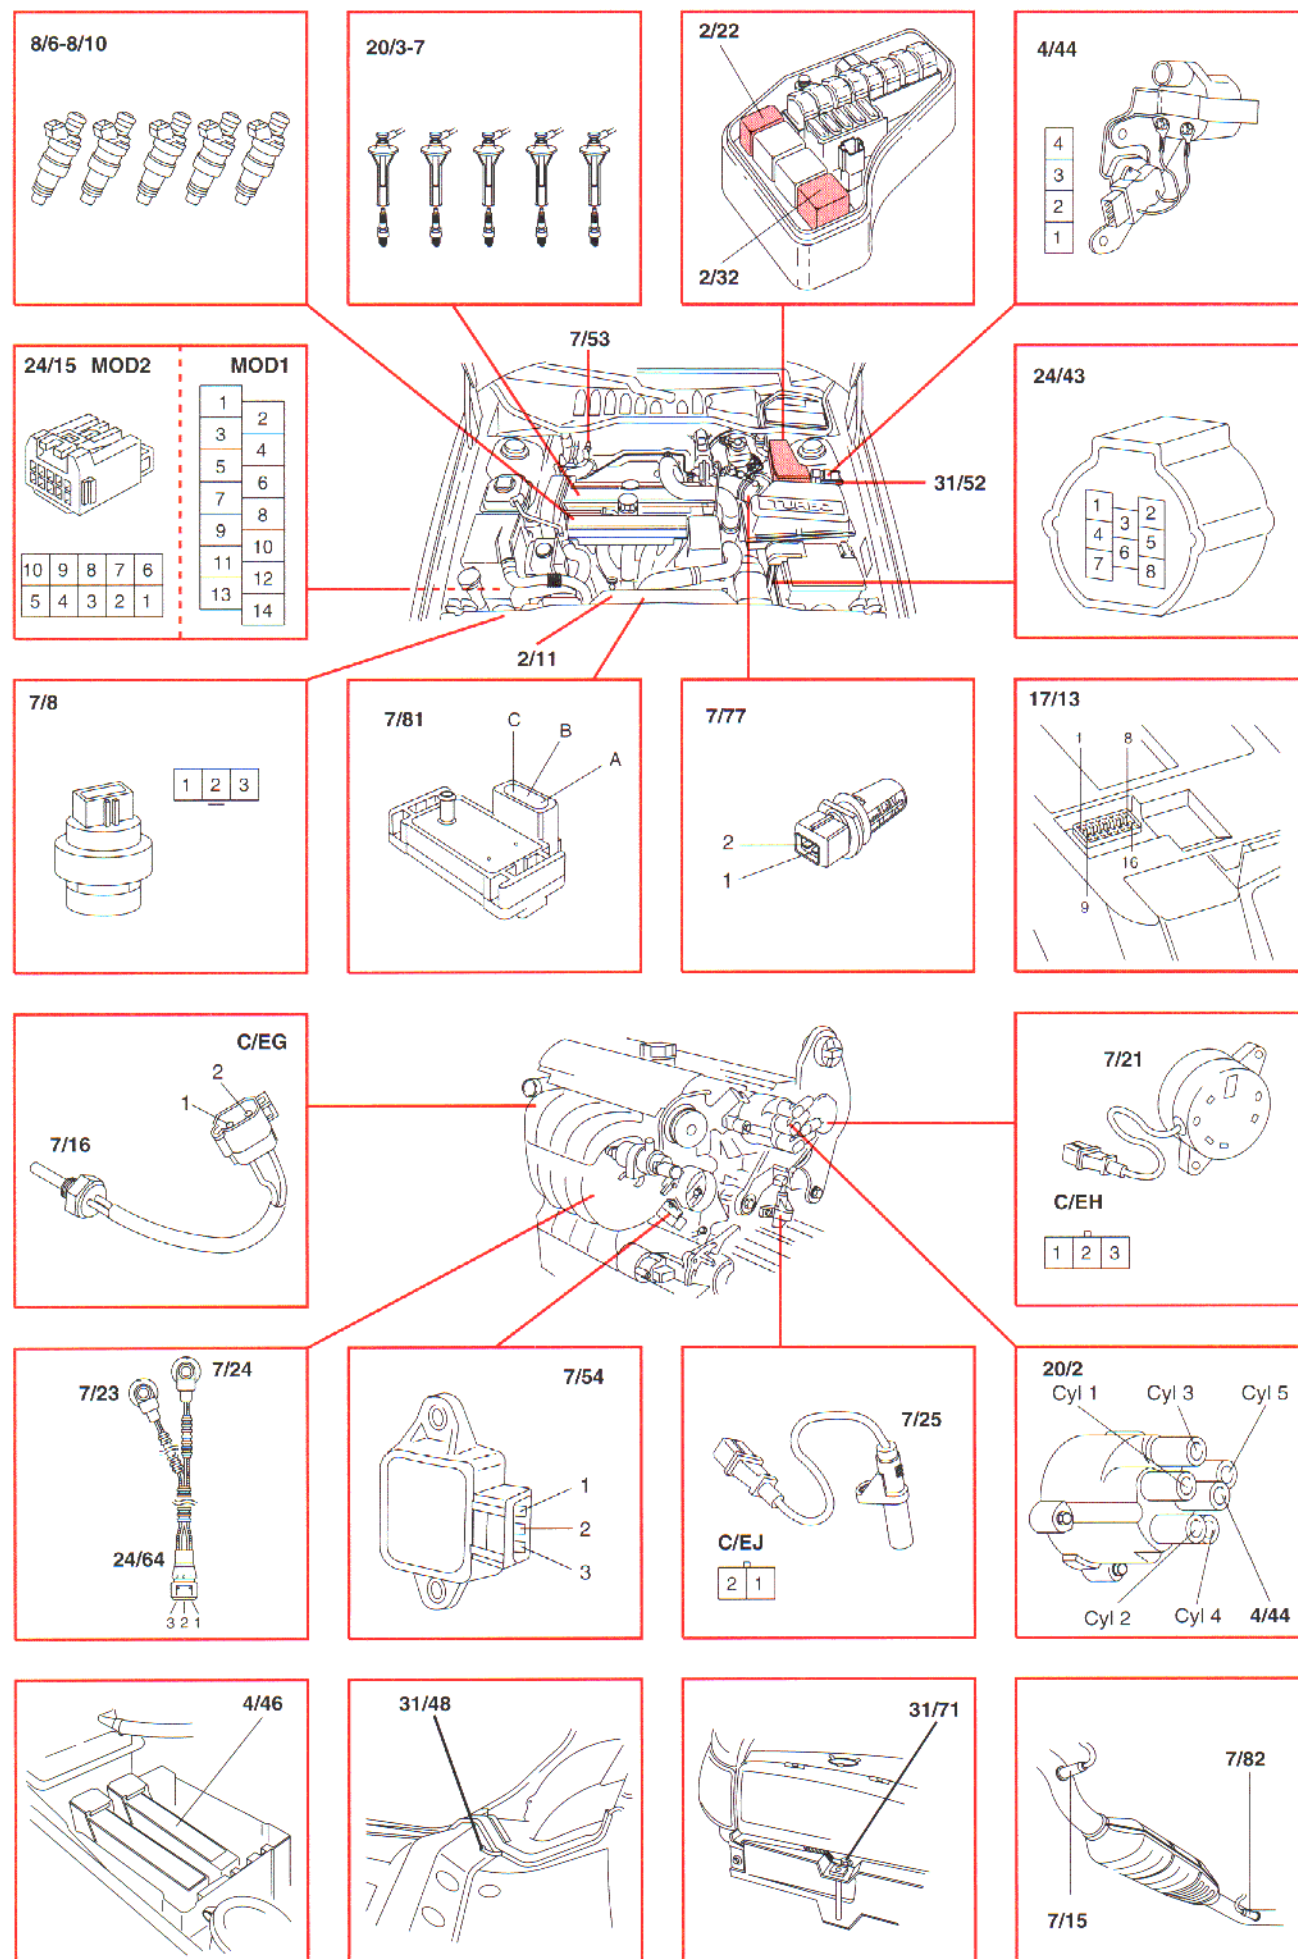


Fuel and ignition system Fenix 5.2

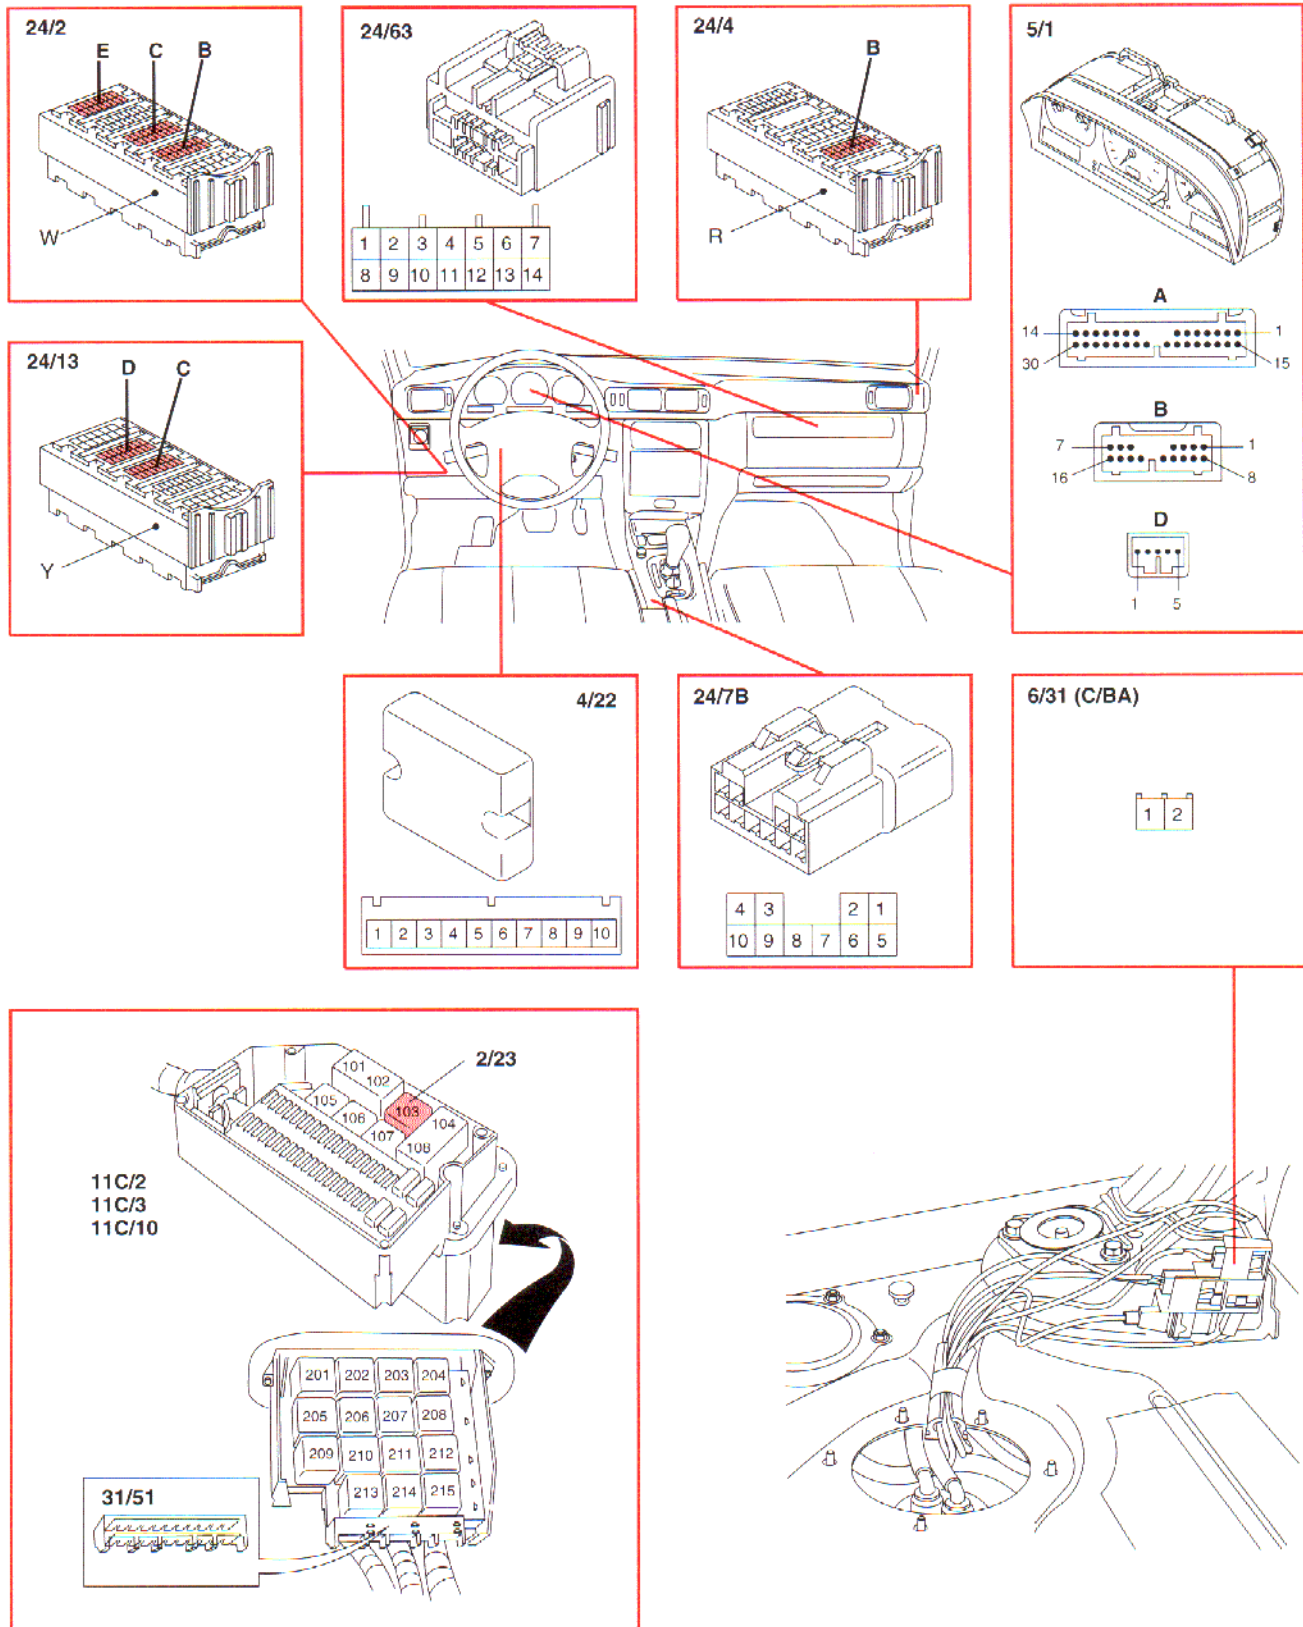



















Fuel and ignition system Motronic 4.3/4.4

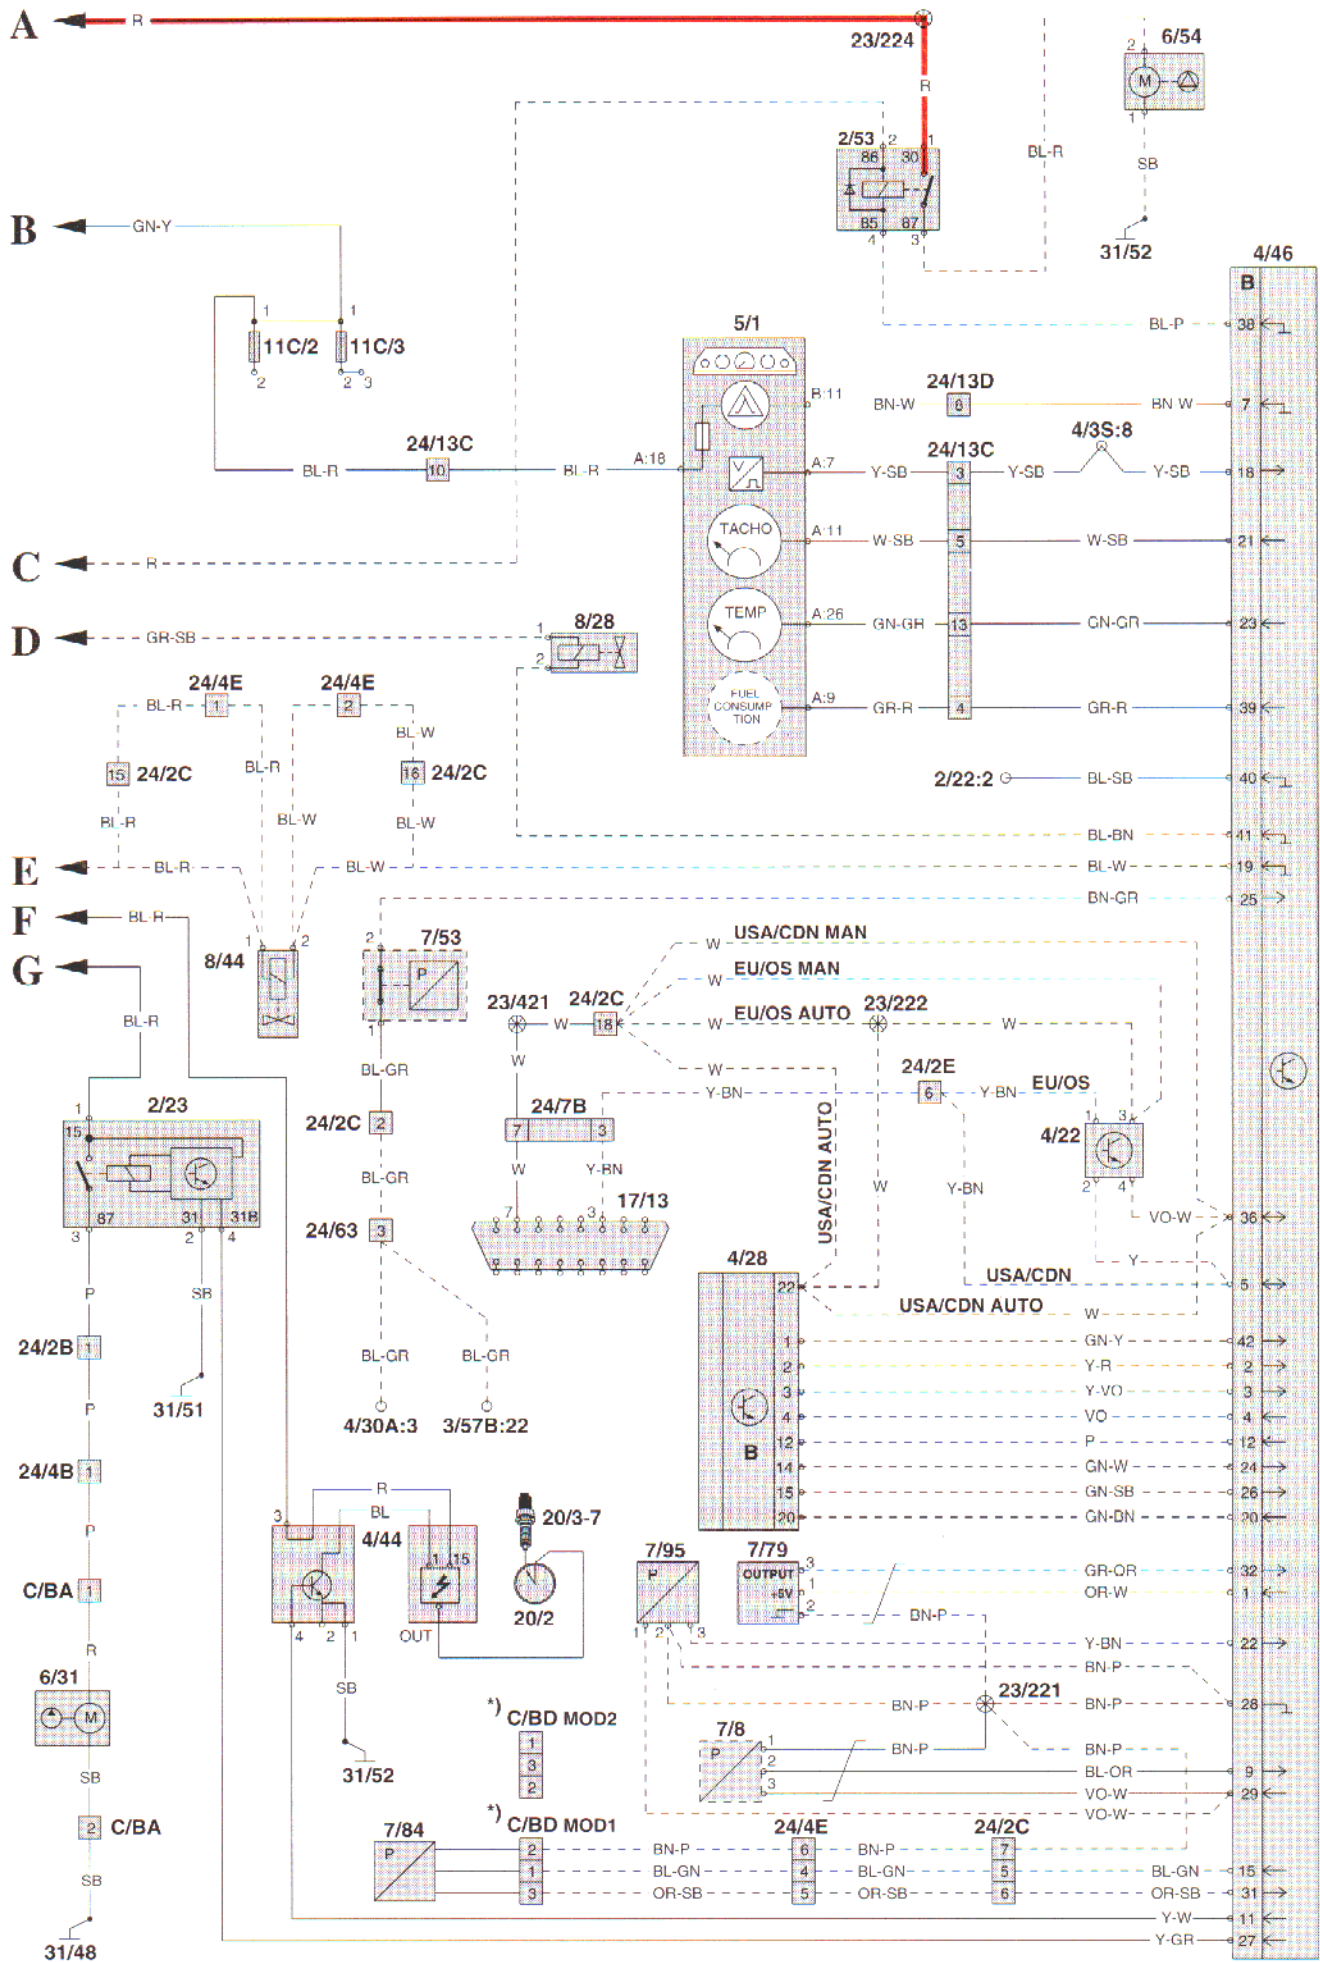


Fuel and ignition system Motronic 4.3/4.4

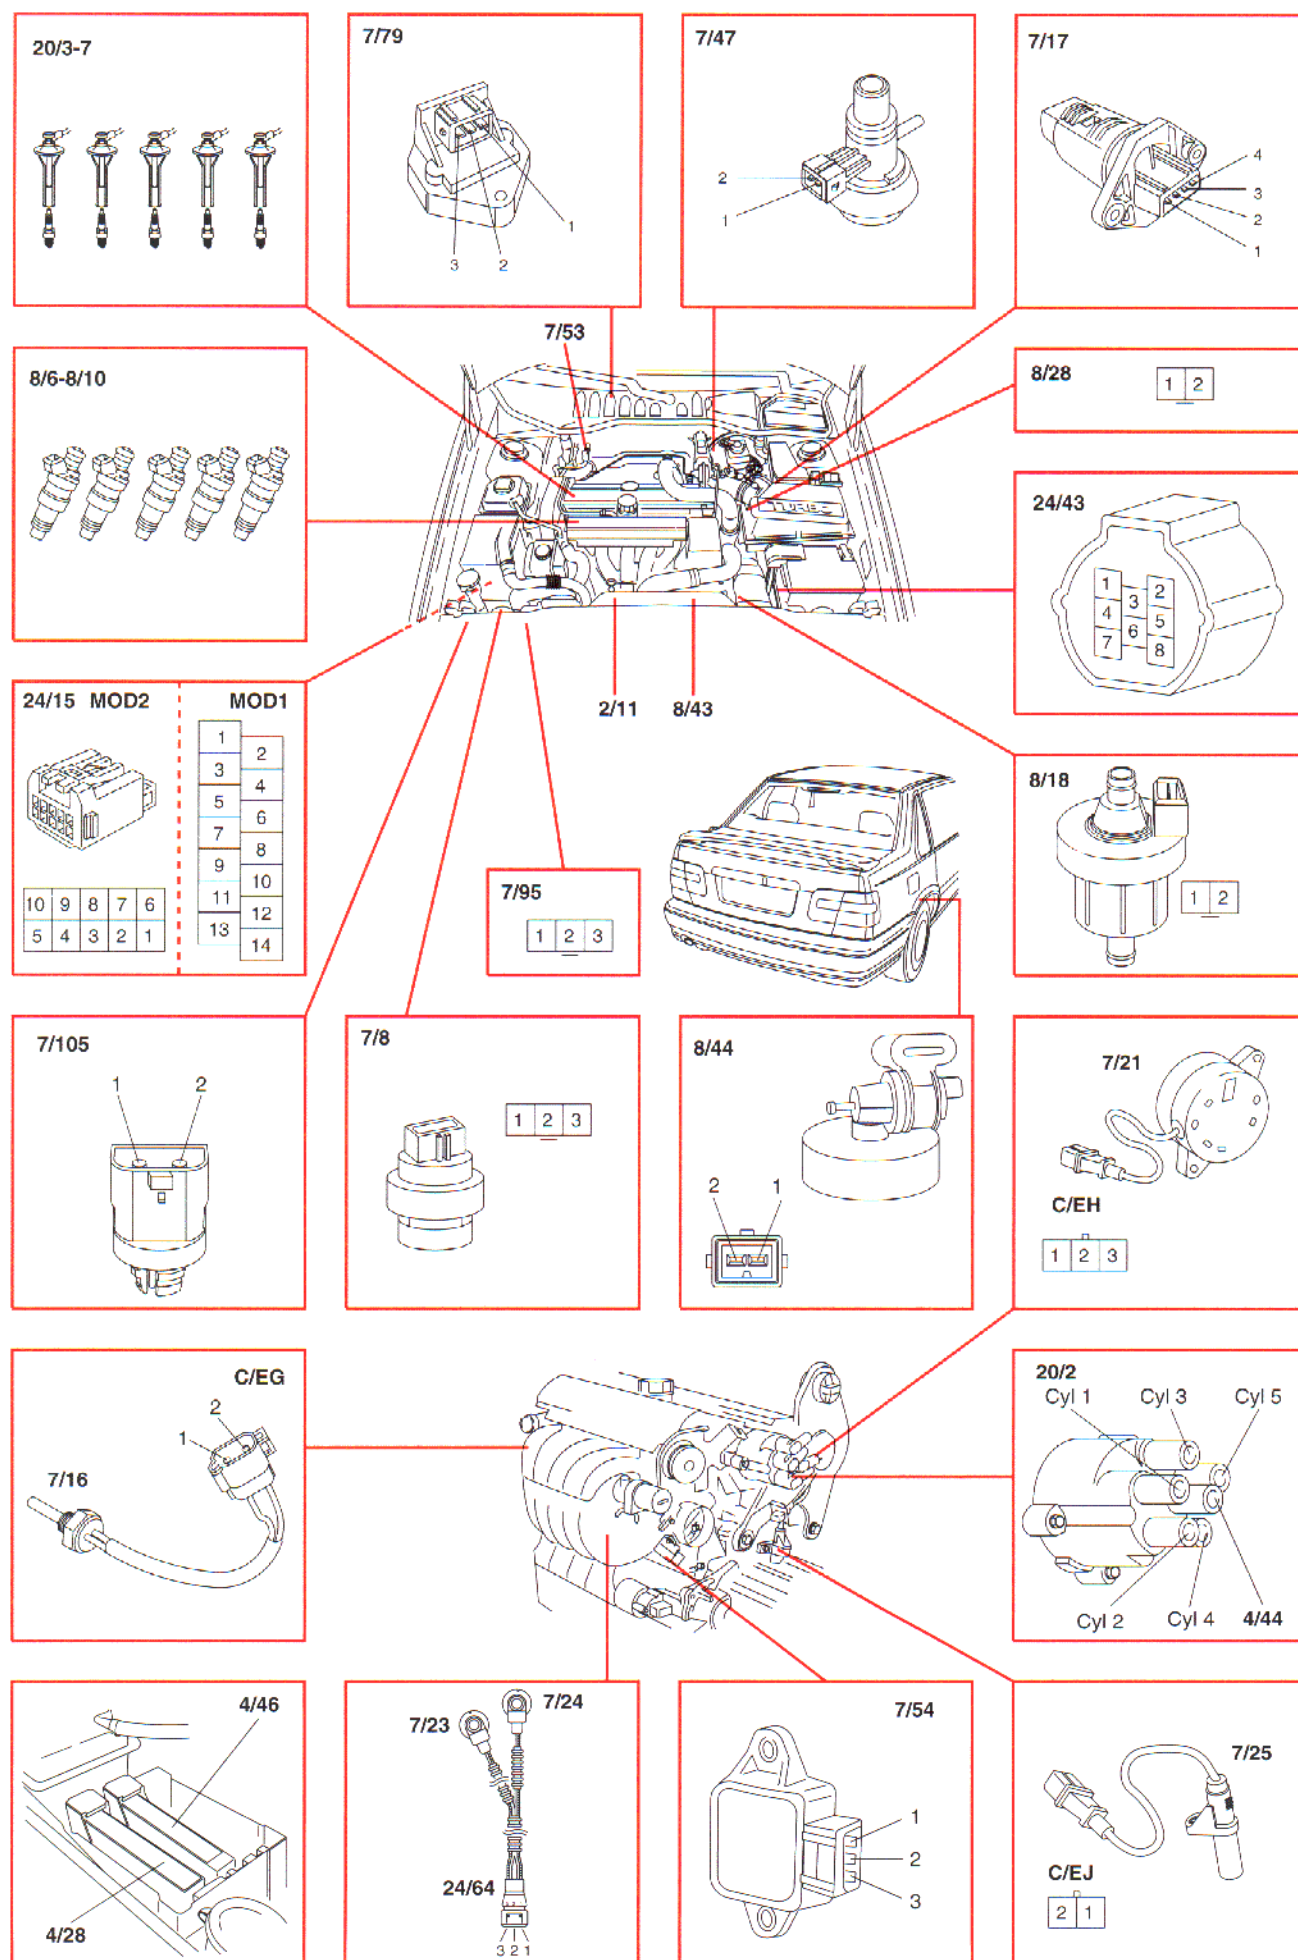


Fuel and ignition system Motronic 4.3/4.4

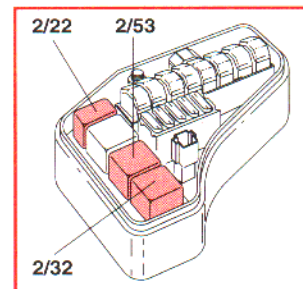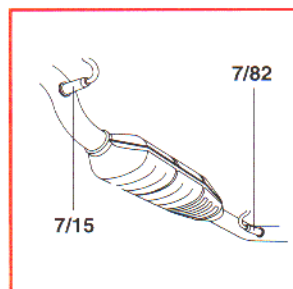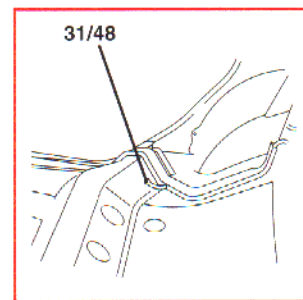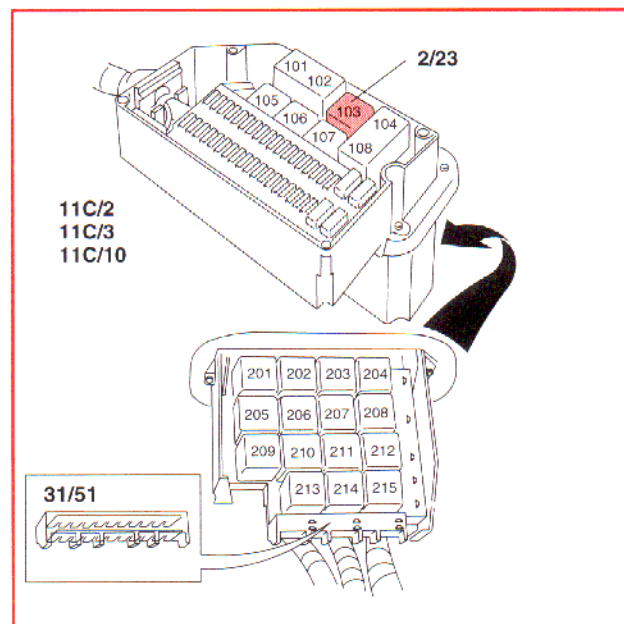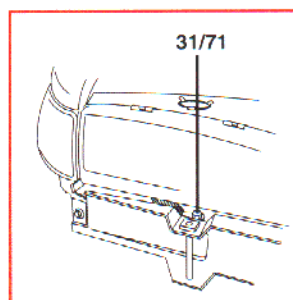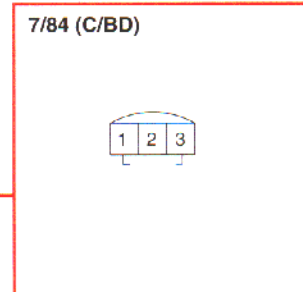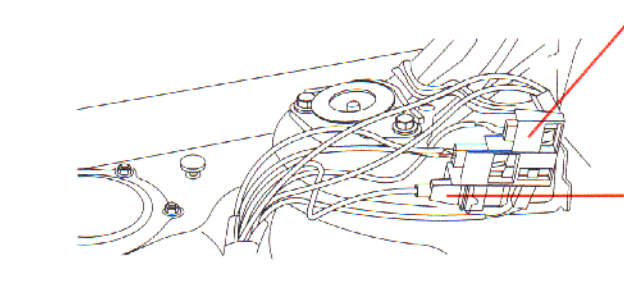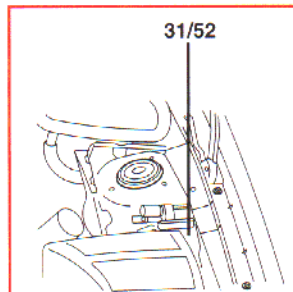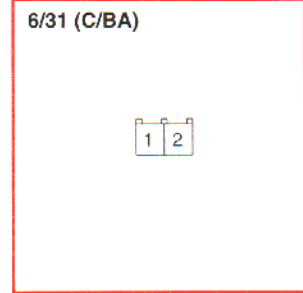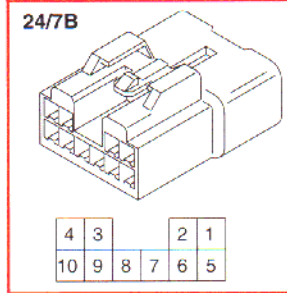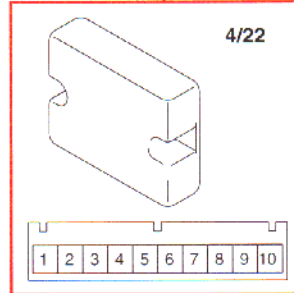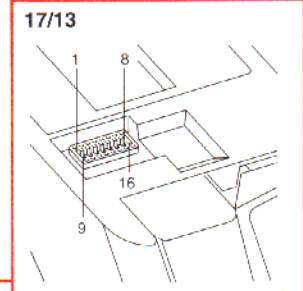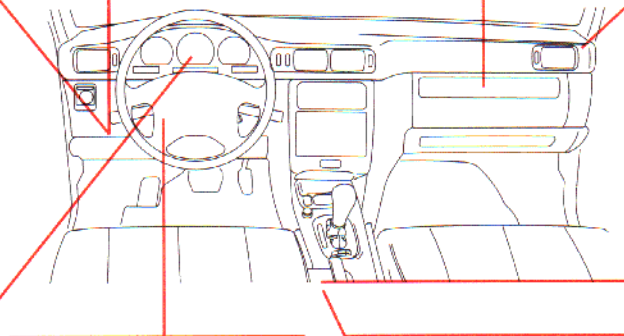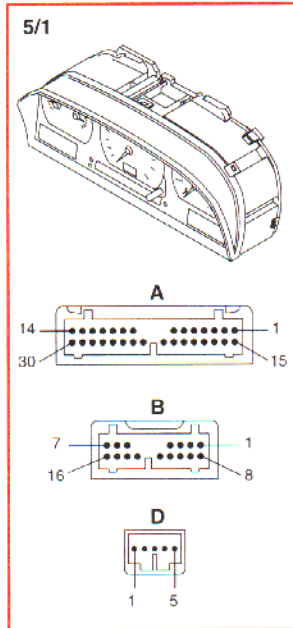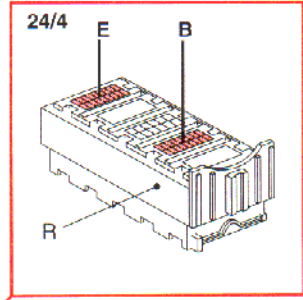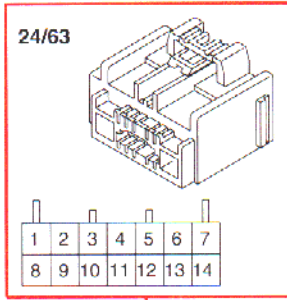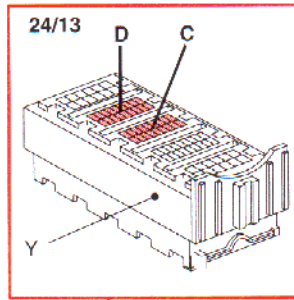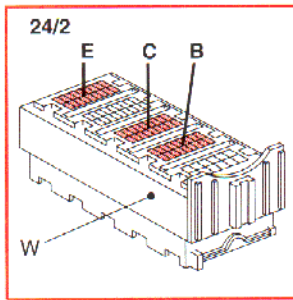














Engine management system
MSA 15.7

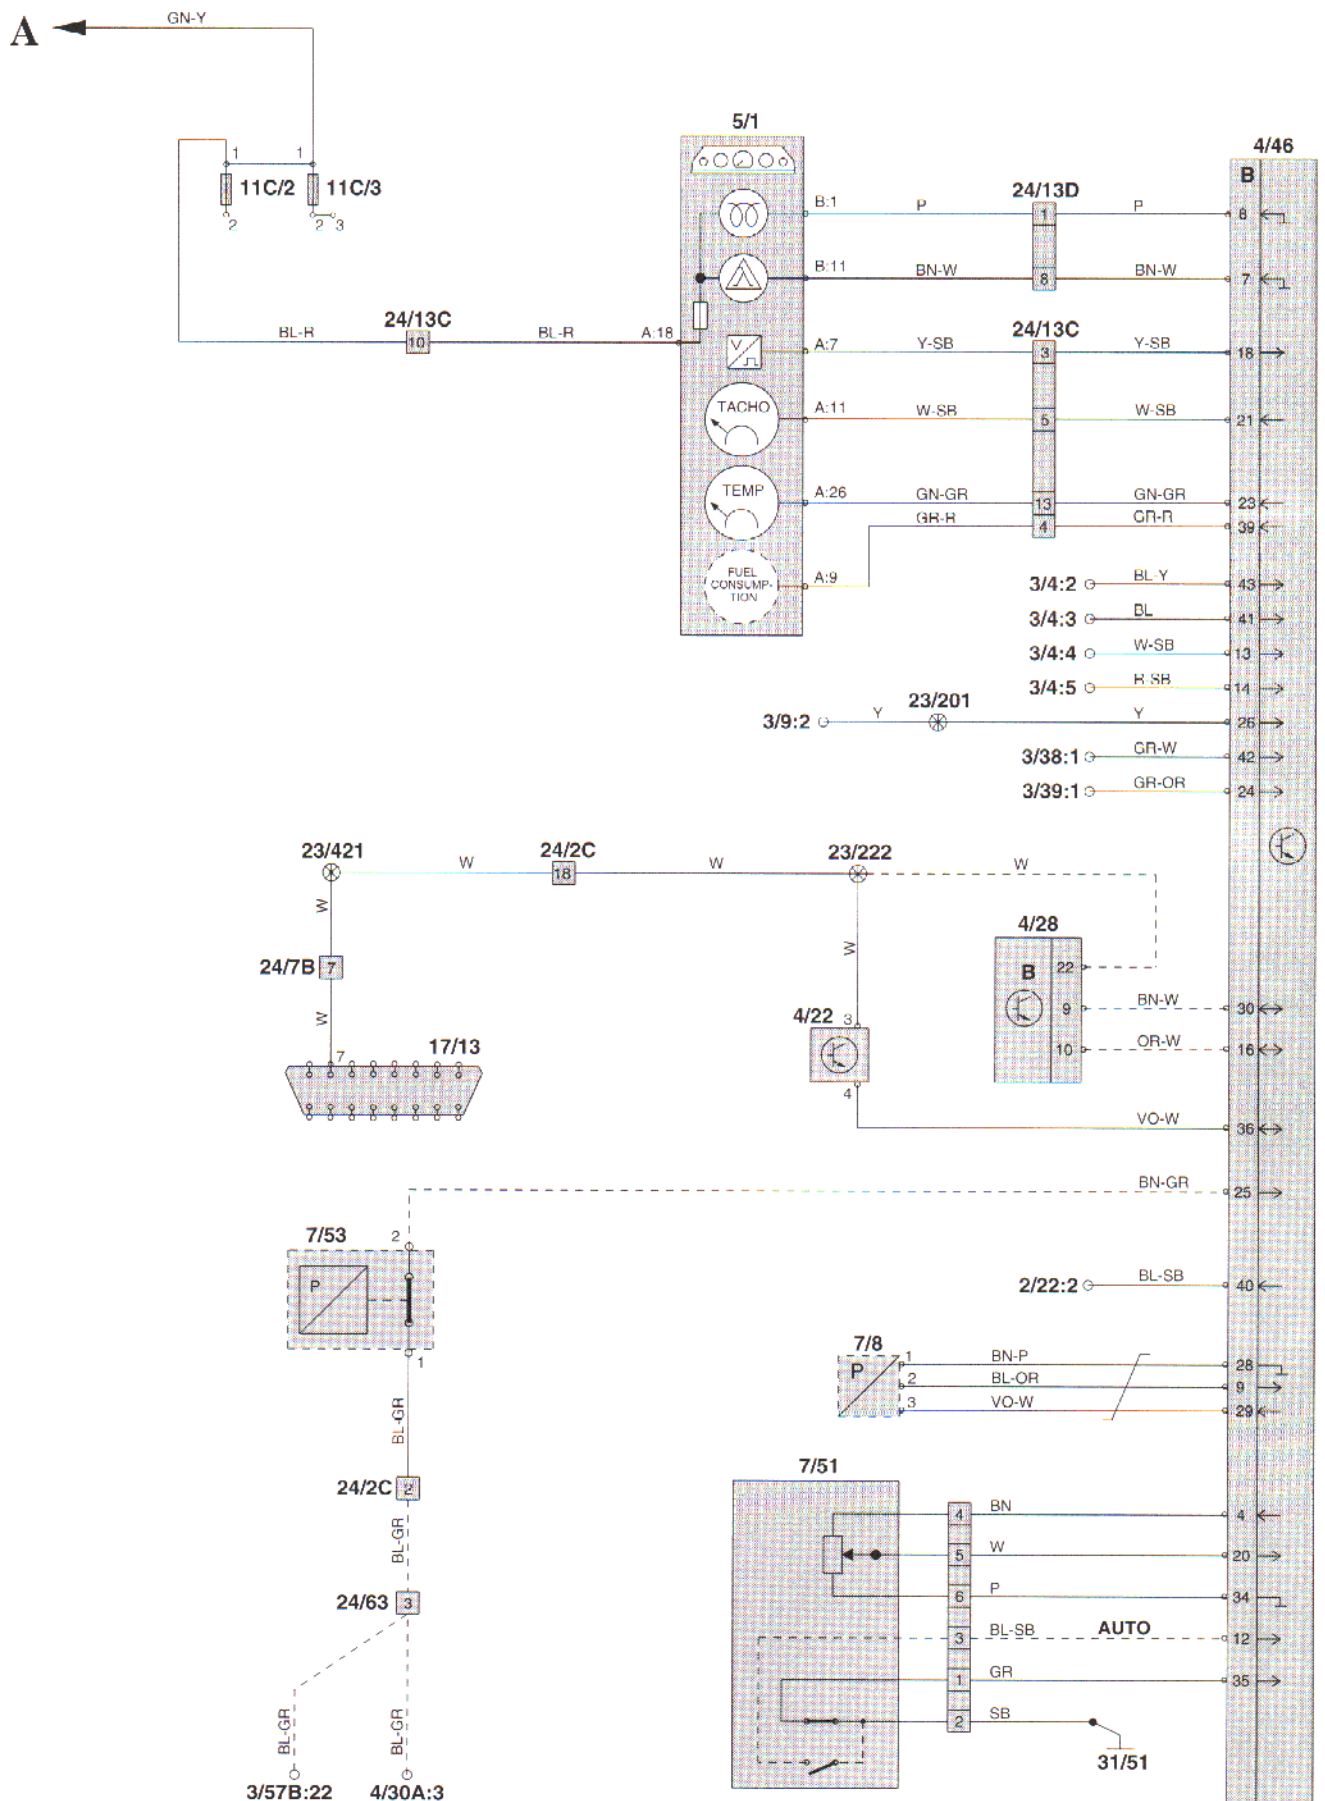

Engine management system MSA 15.7

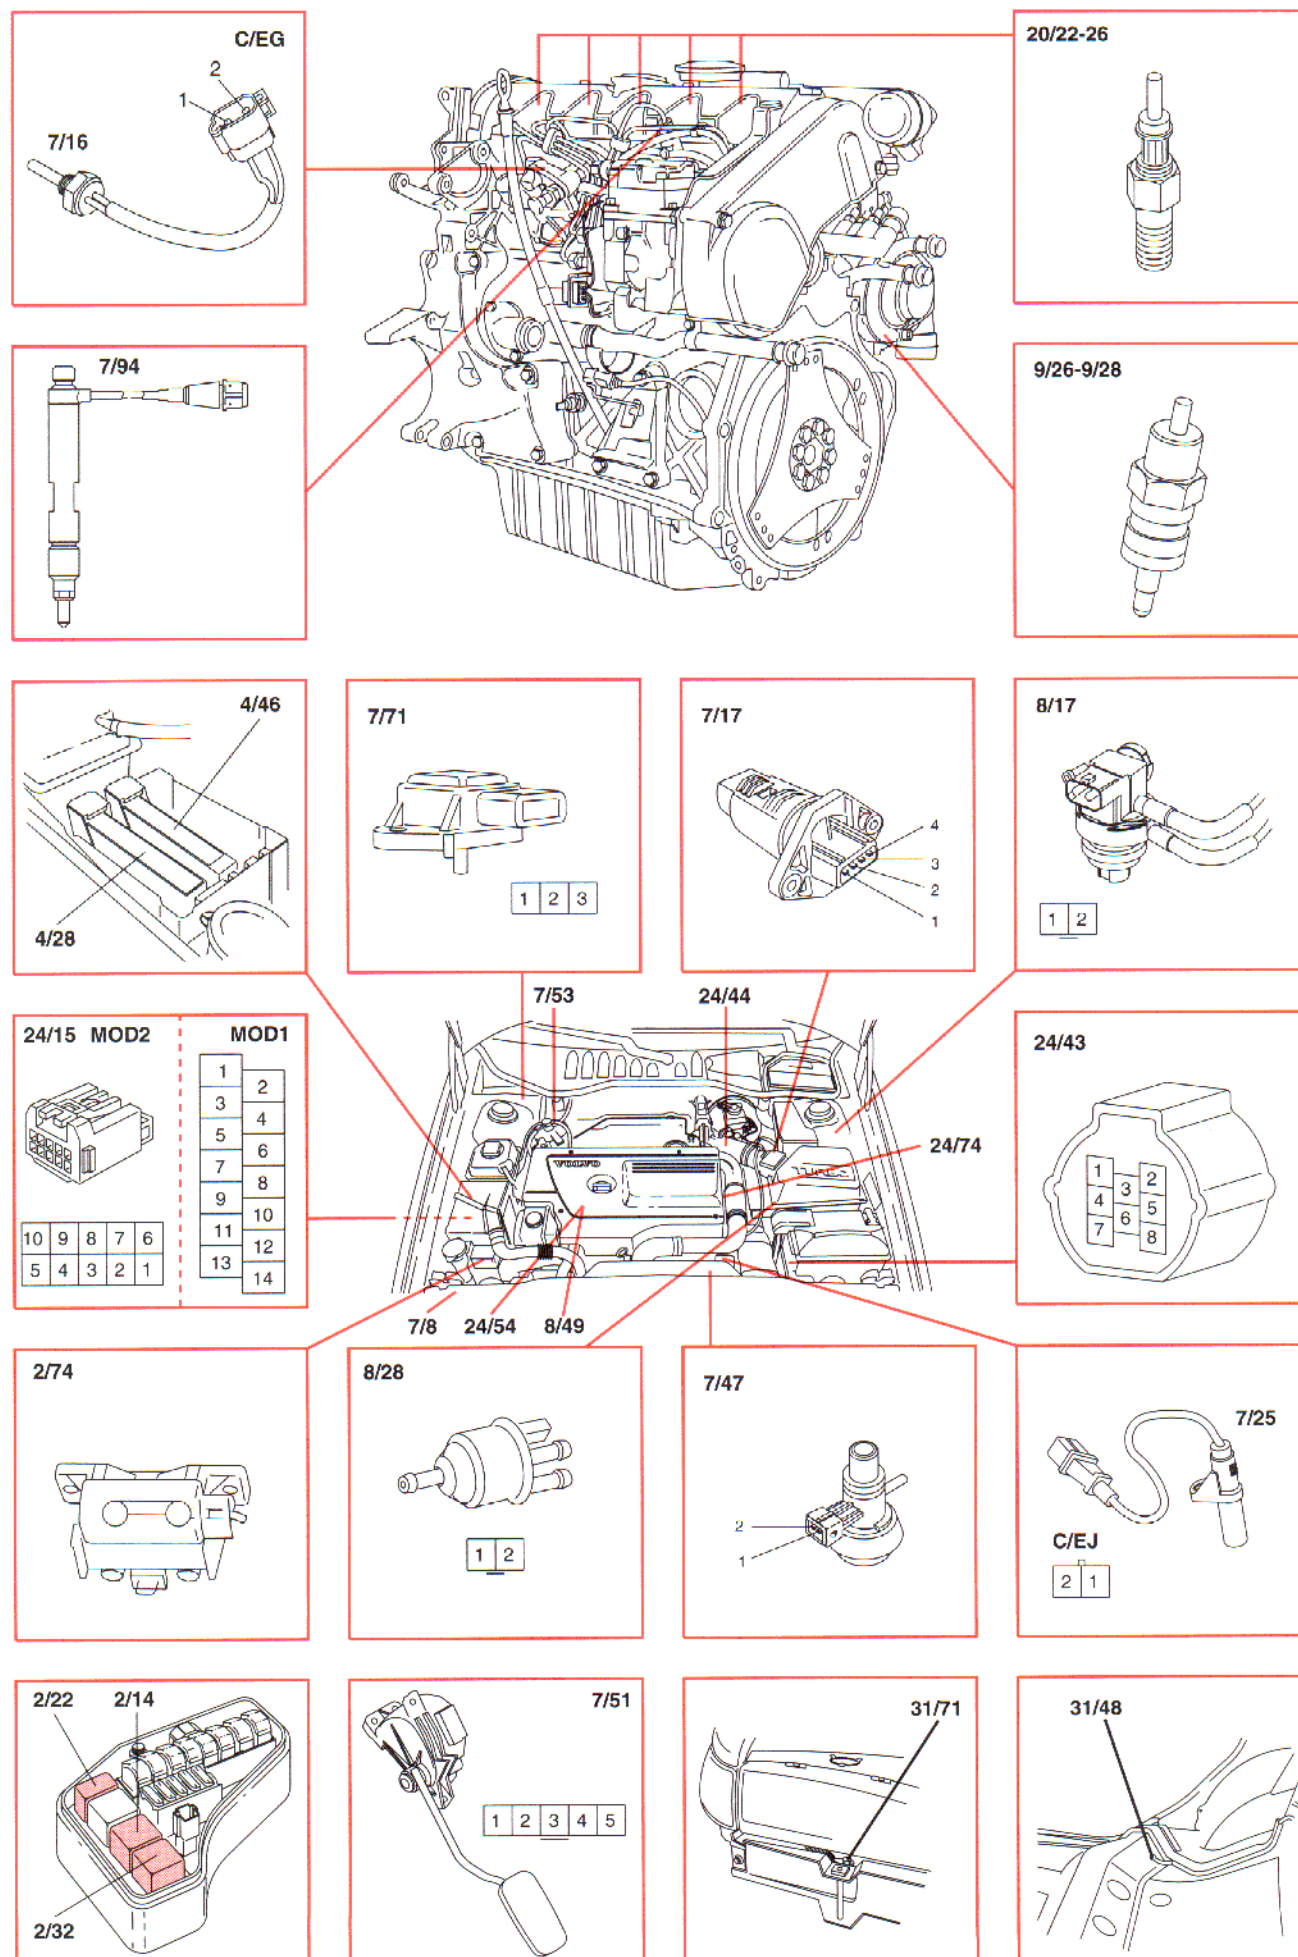


Engine management system MSA 15.7

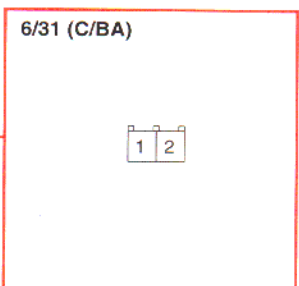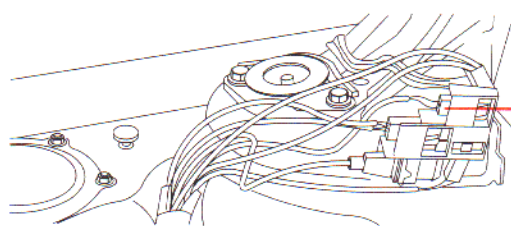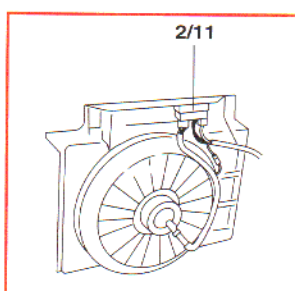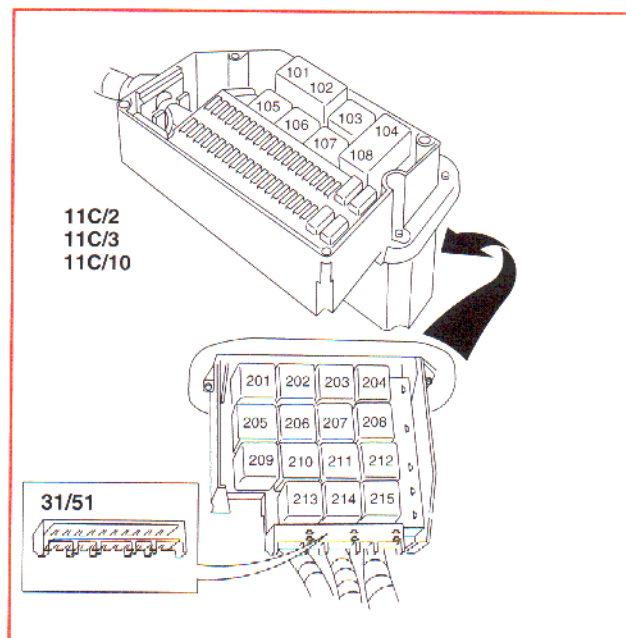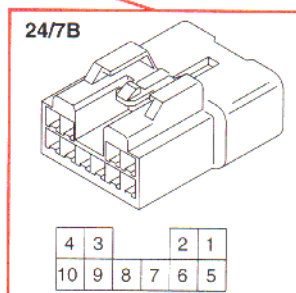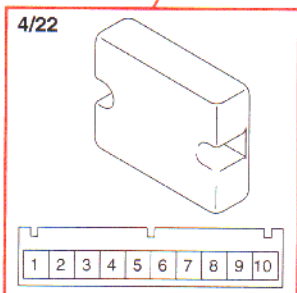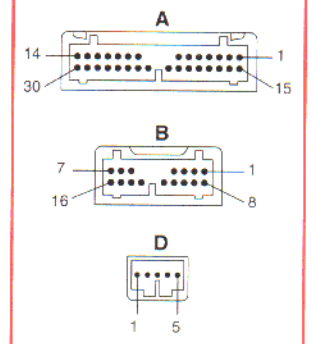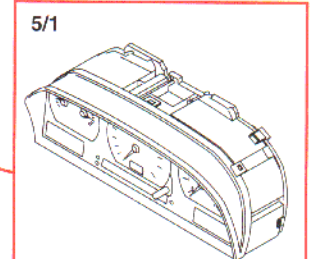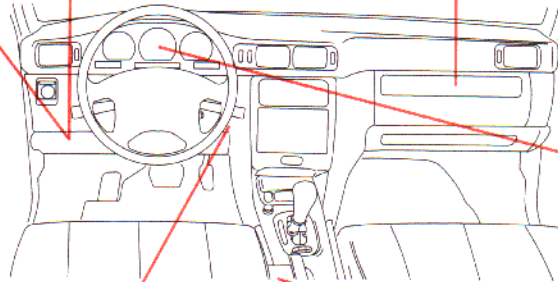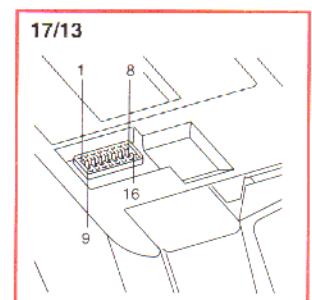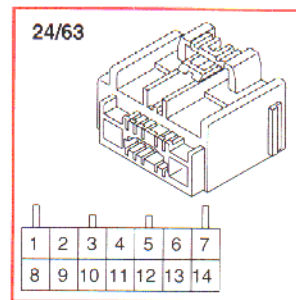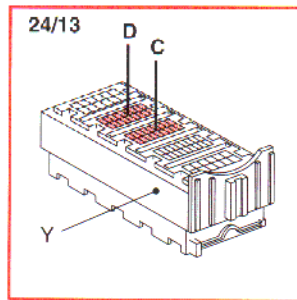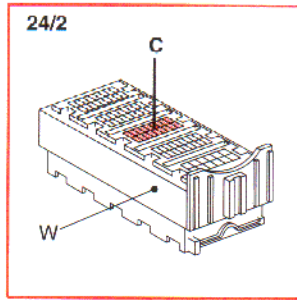


Engine cooling fan (FC) Fenix 5.2, Motronic 4.3/4.4



24/2

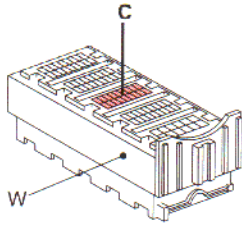


4/30

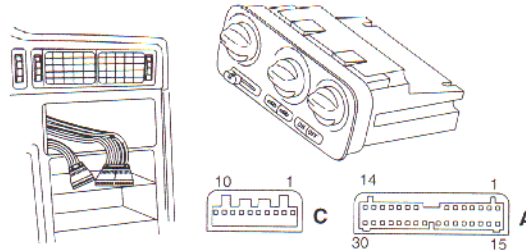


24/63

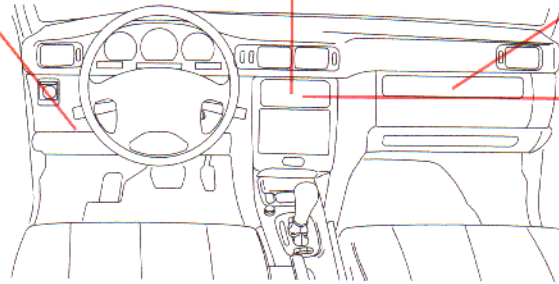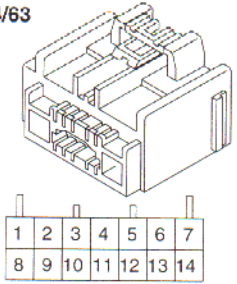


3/57

 

11C/5

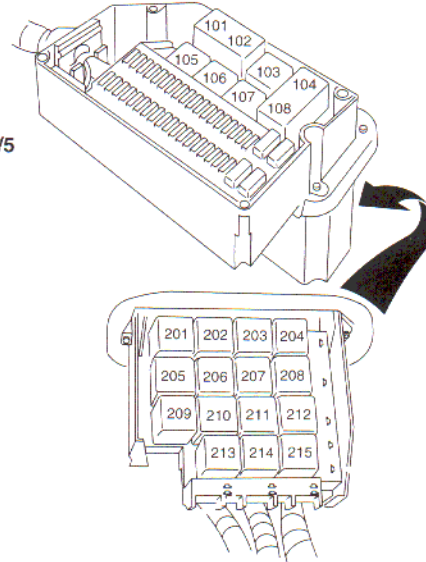


24/15 MOD1

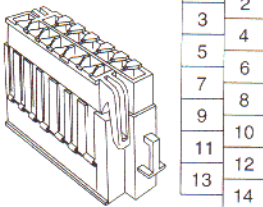


8/3


C/EC

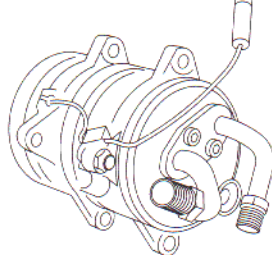

7/53

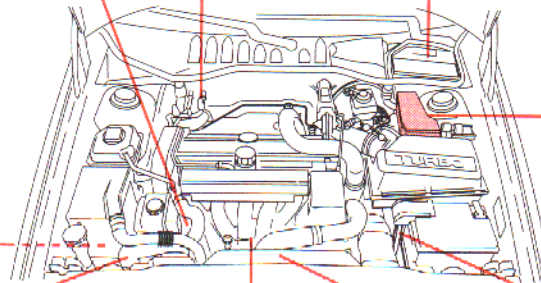


24/15 MOD2

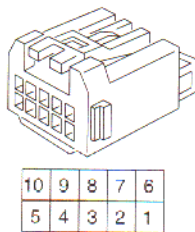


2/22


2/32

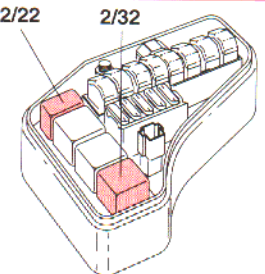

7/8

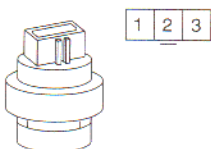


31/55

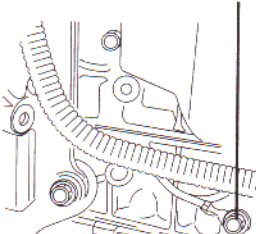


6/29

2/11















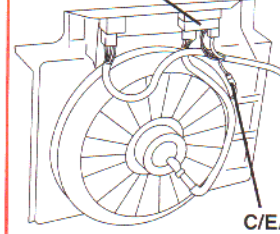


C/EA



















24/43

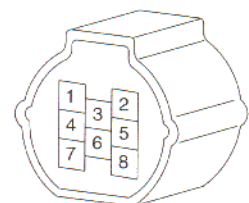










Engine cooling fan (FC)
MSA 15.7

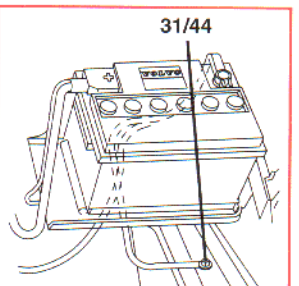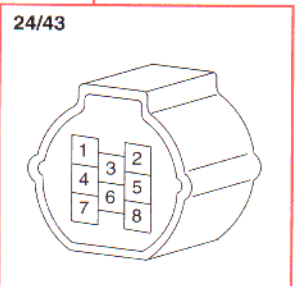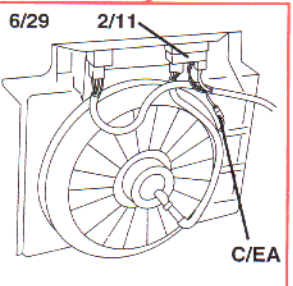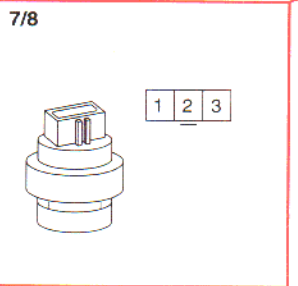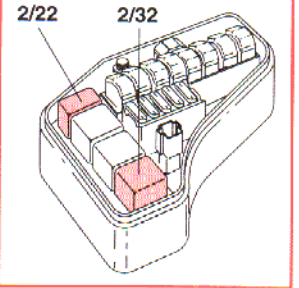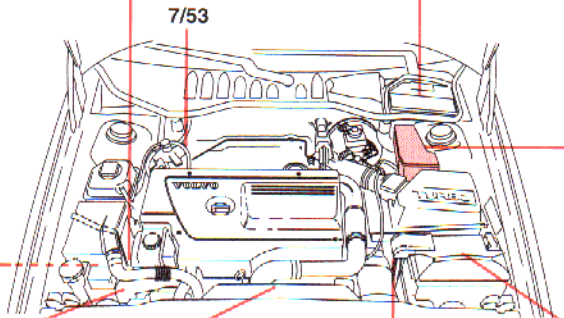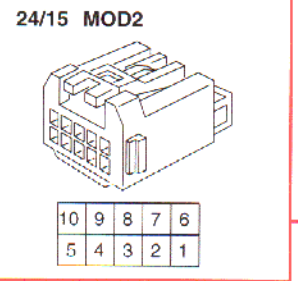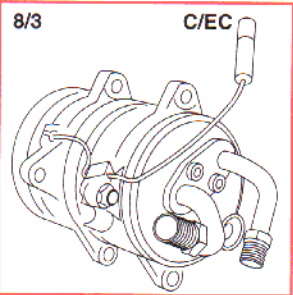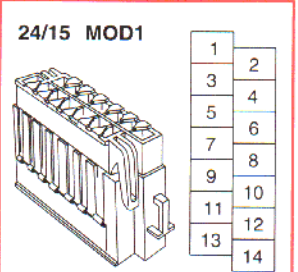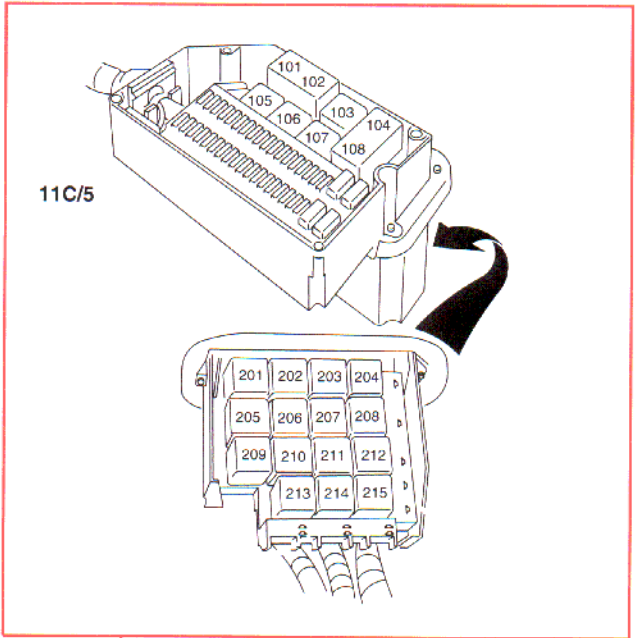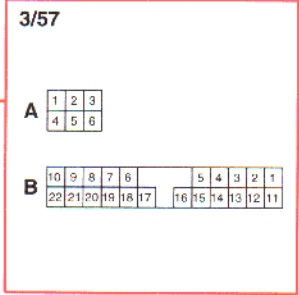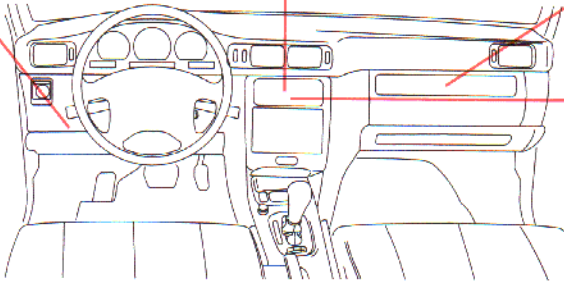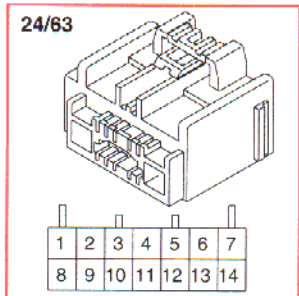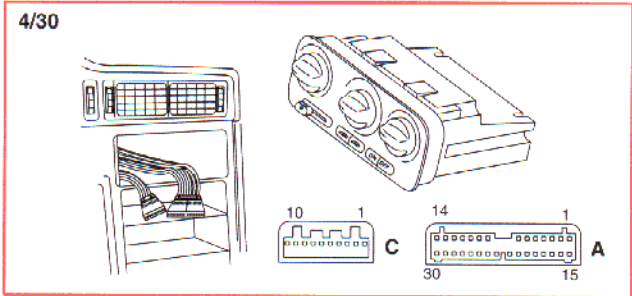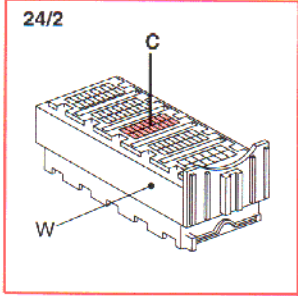

















Cruise control Fenix 5.2, Motronic 4.3/4.4

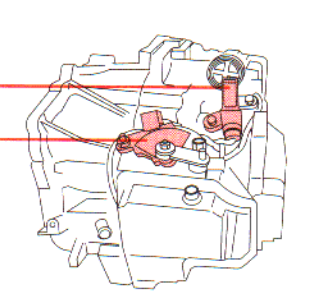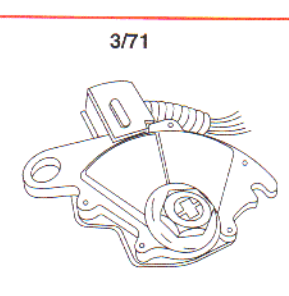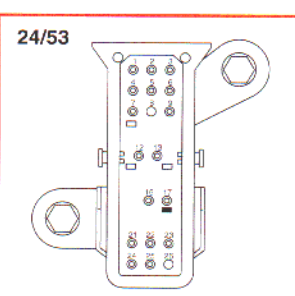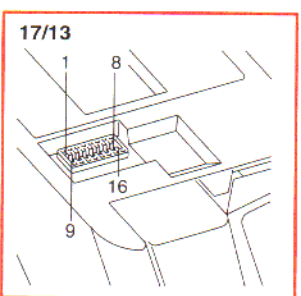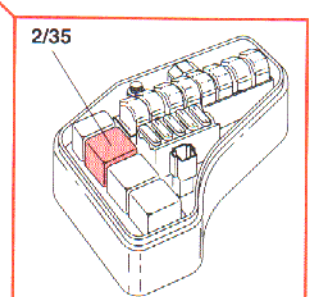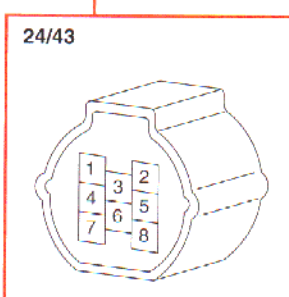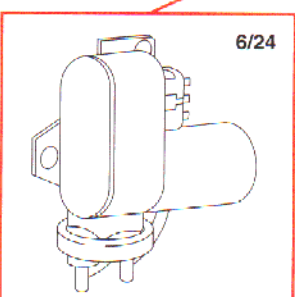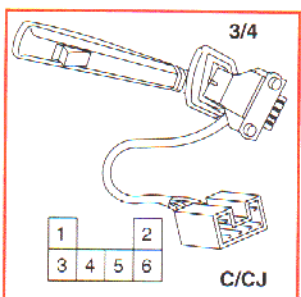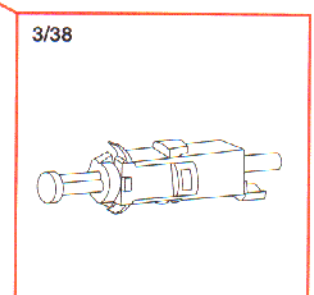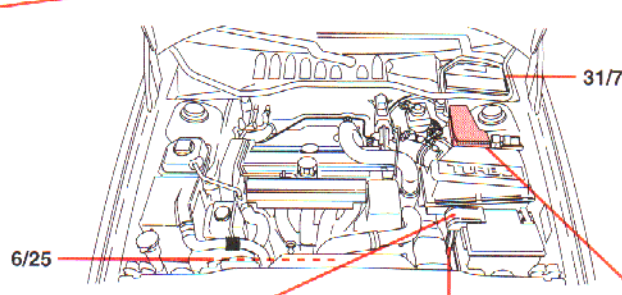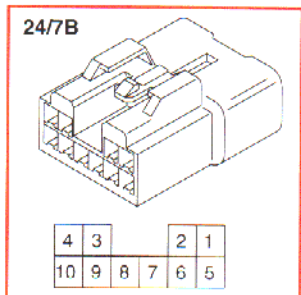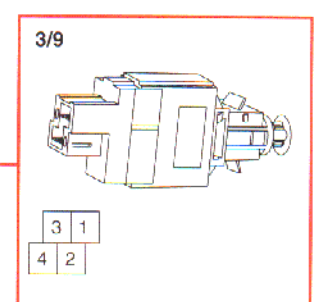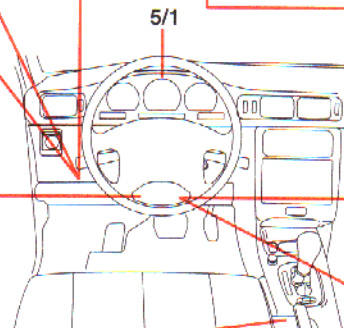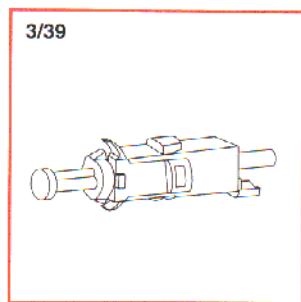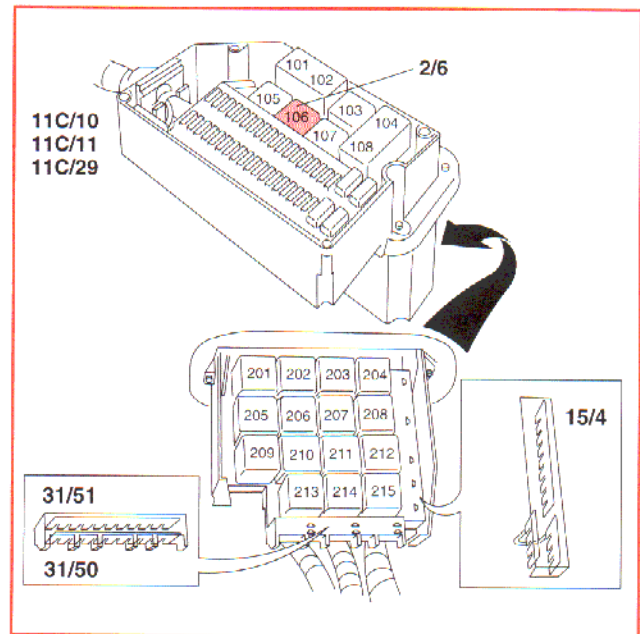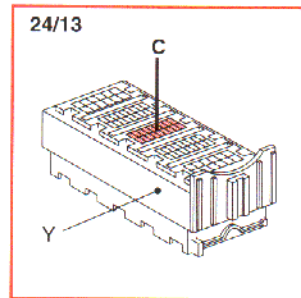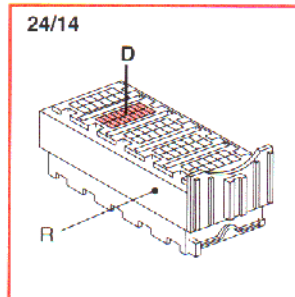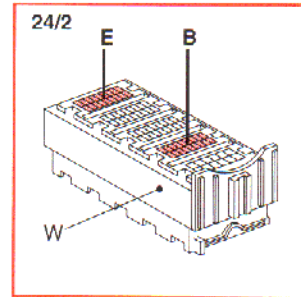











Cruise control
MSA 15.7

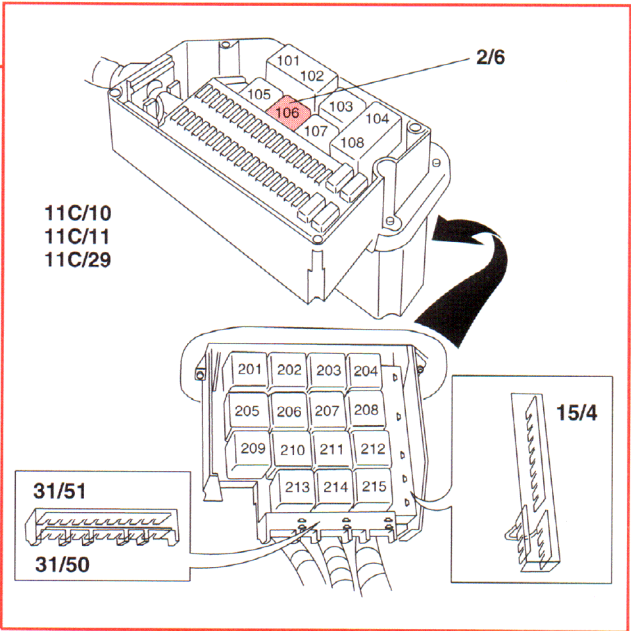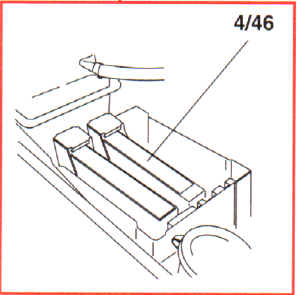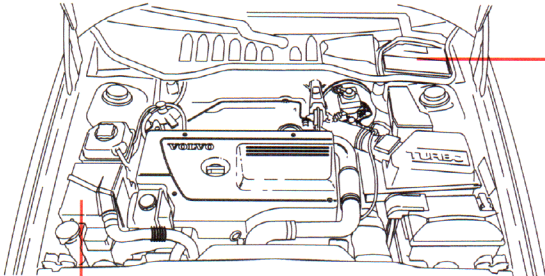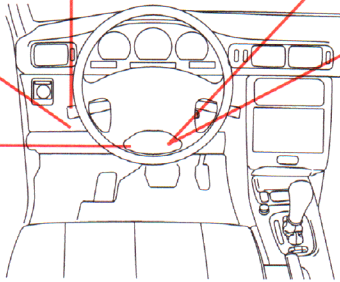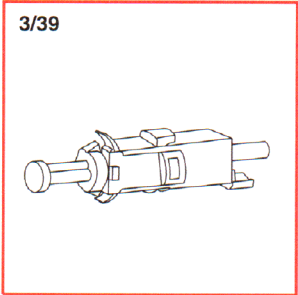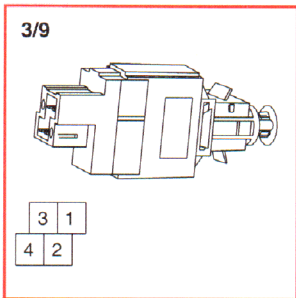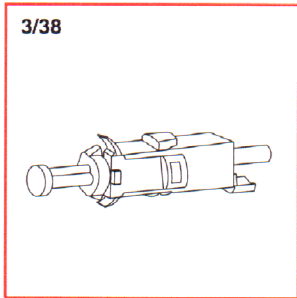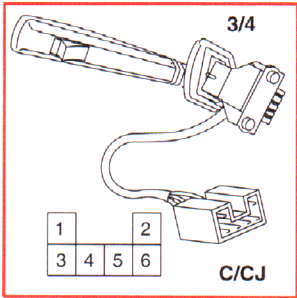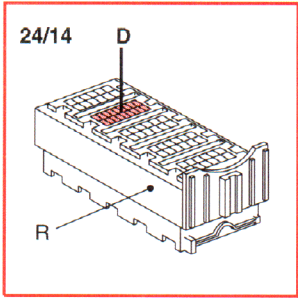








Power supply and starter system

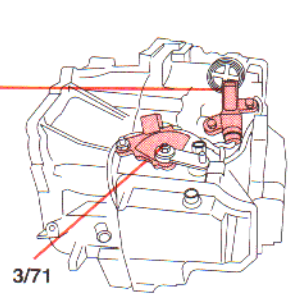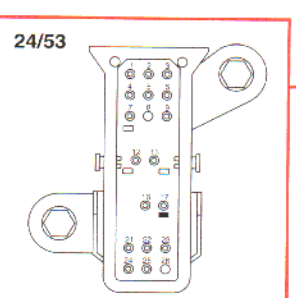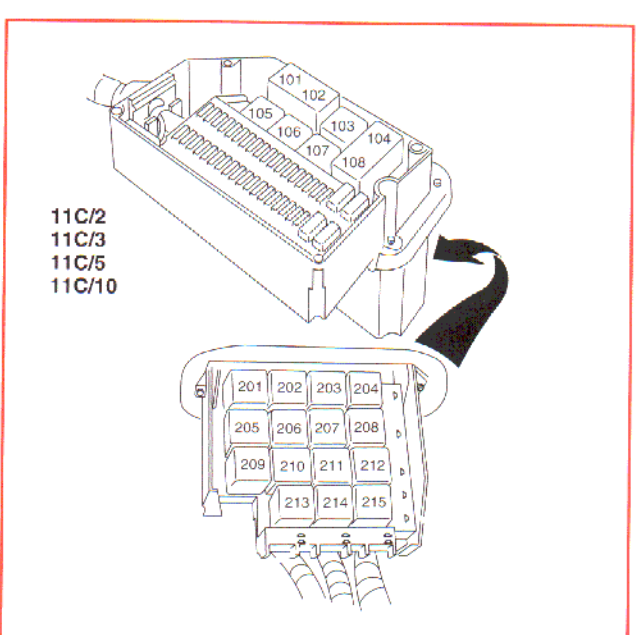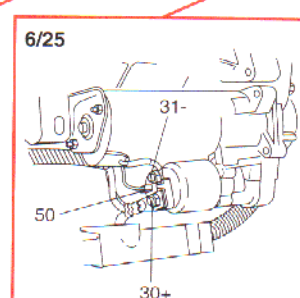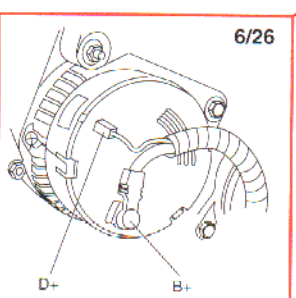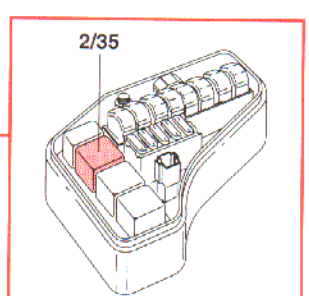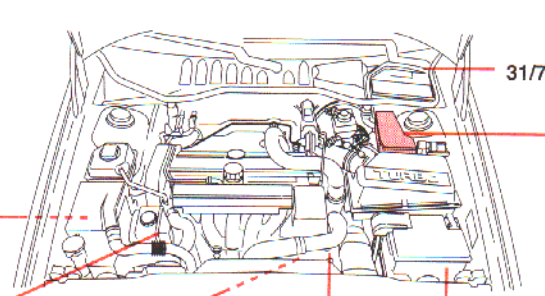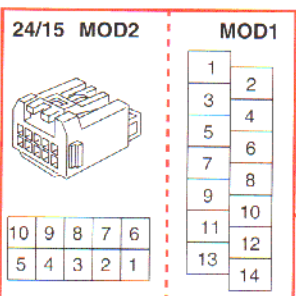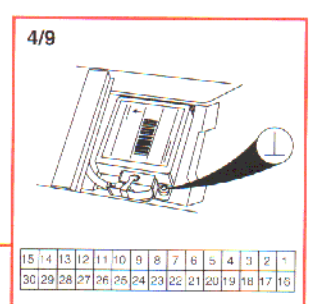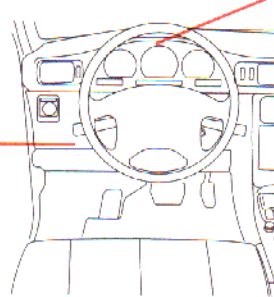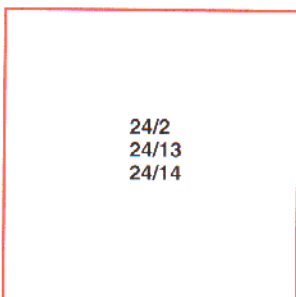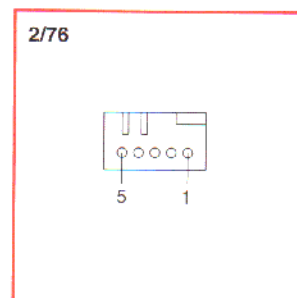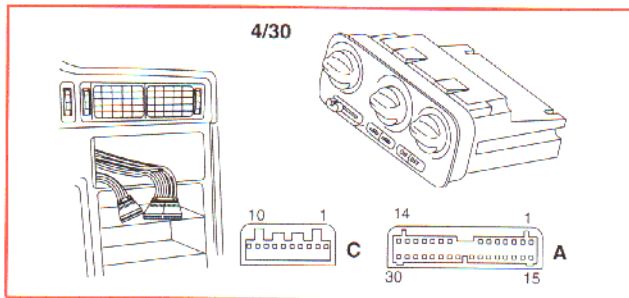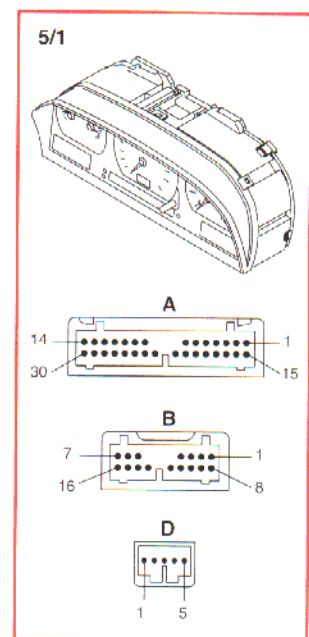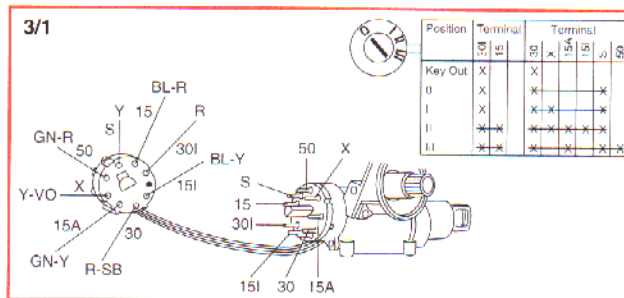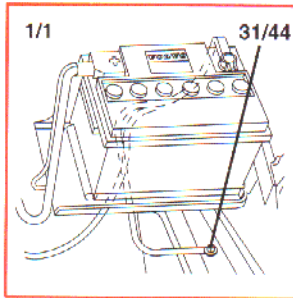


High and low beams









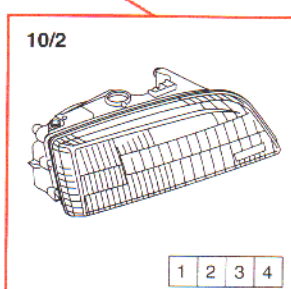
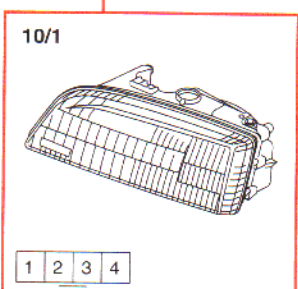
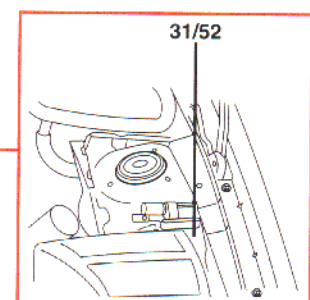
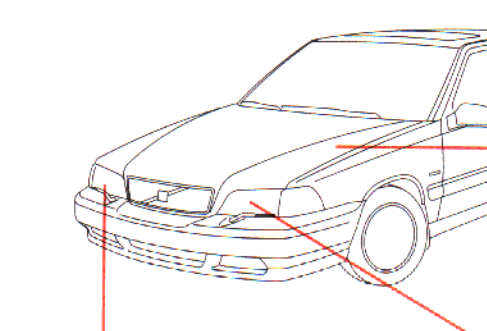
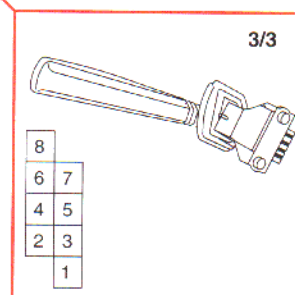
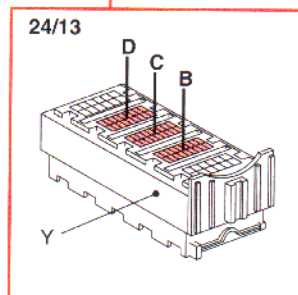
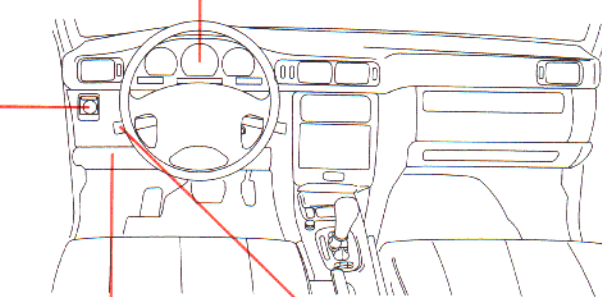
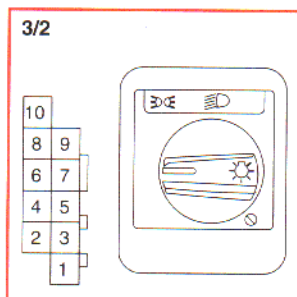
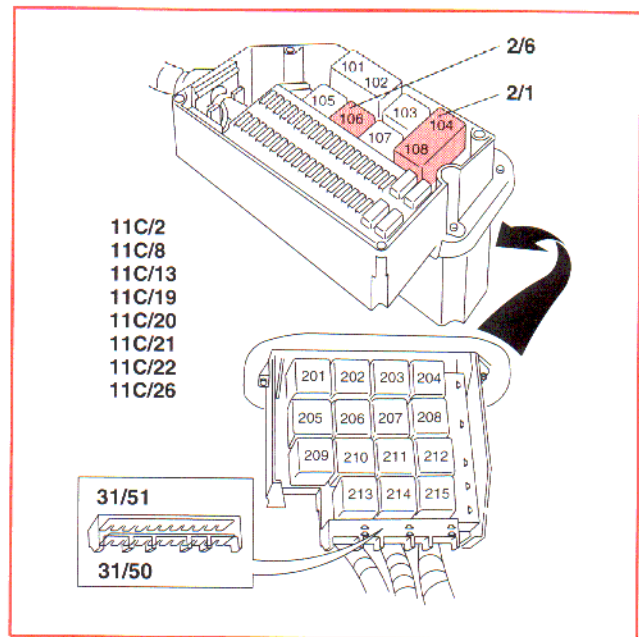
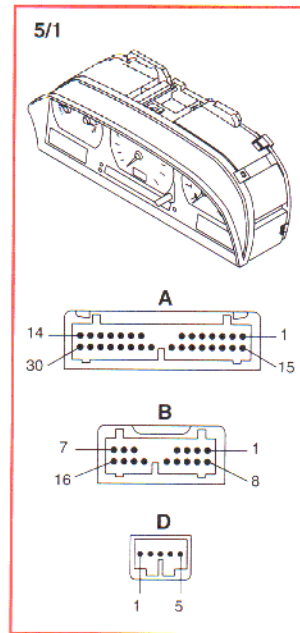


Headlamp range adjustment











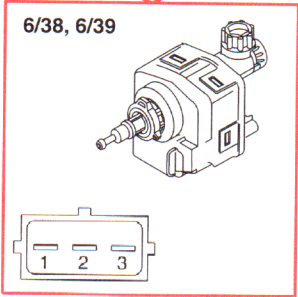
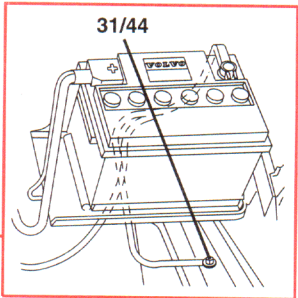
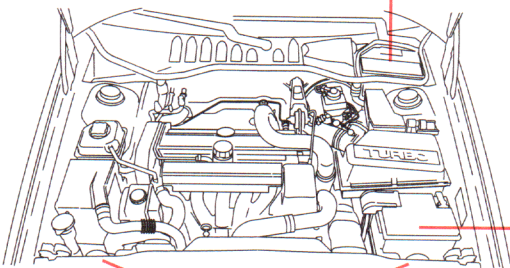
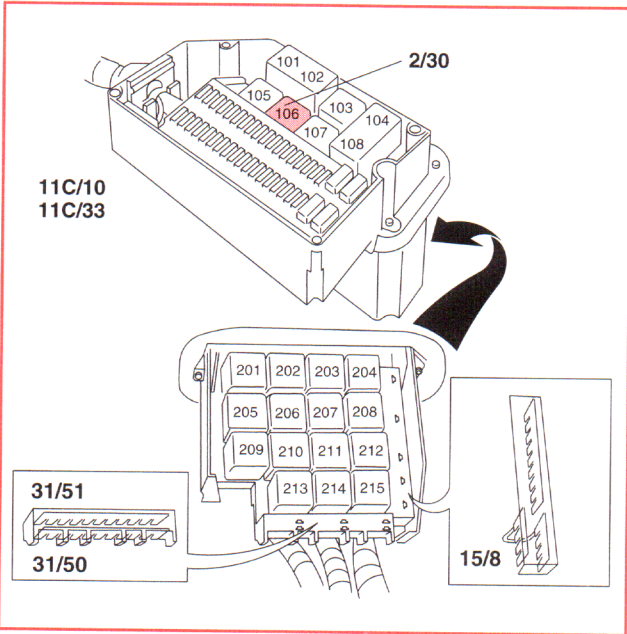
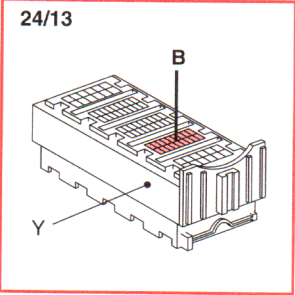
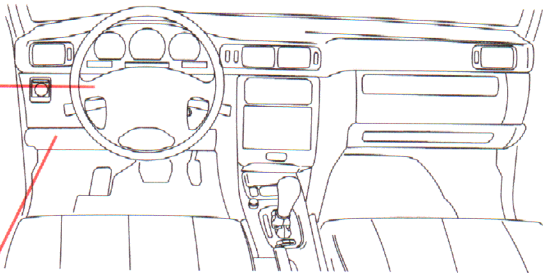
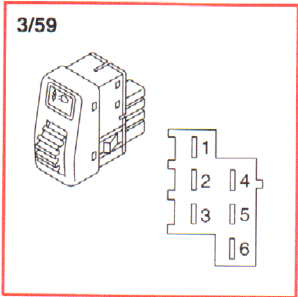


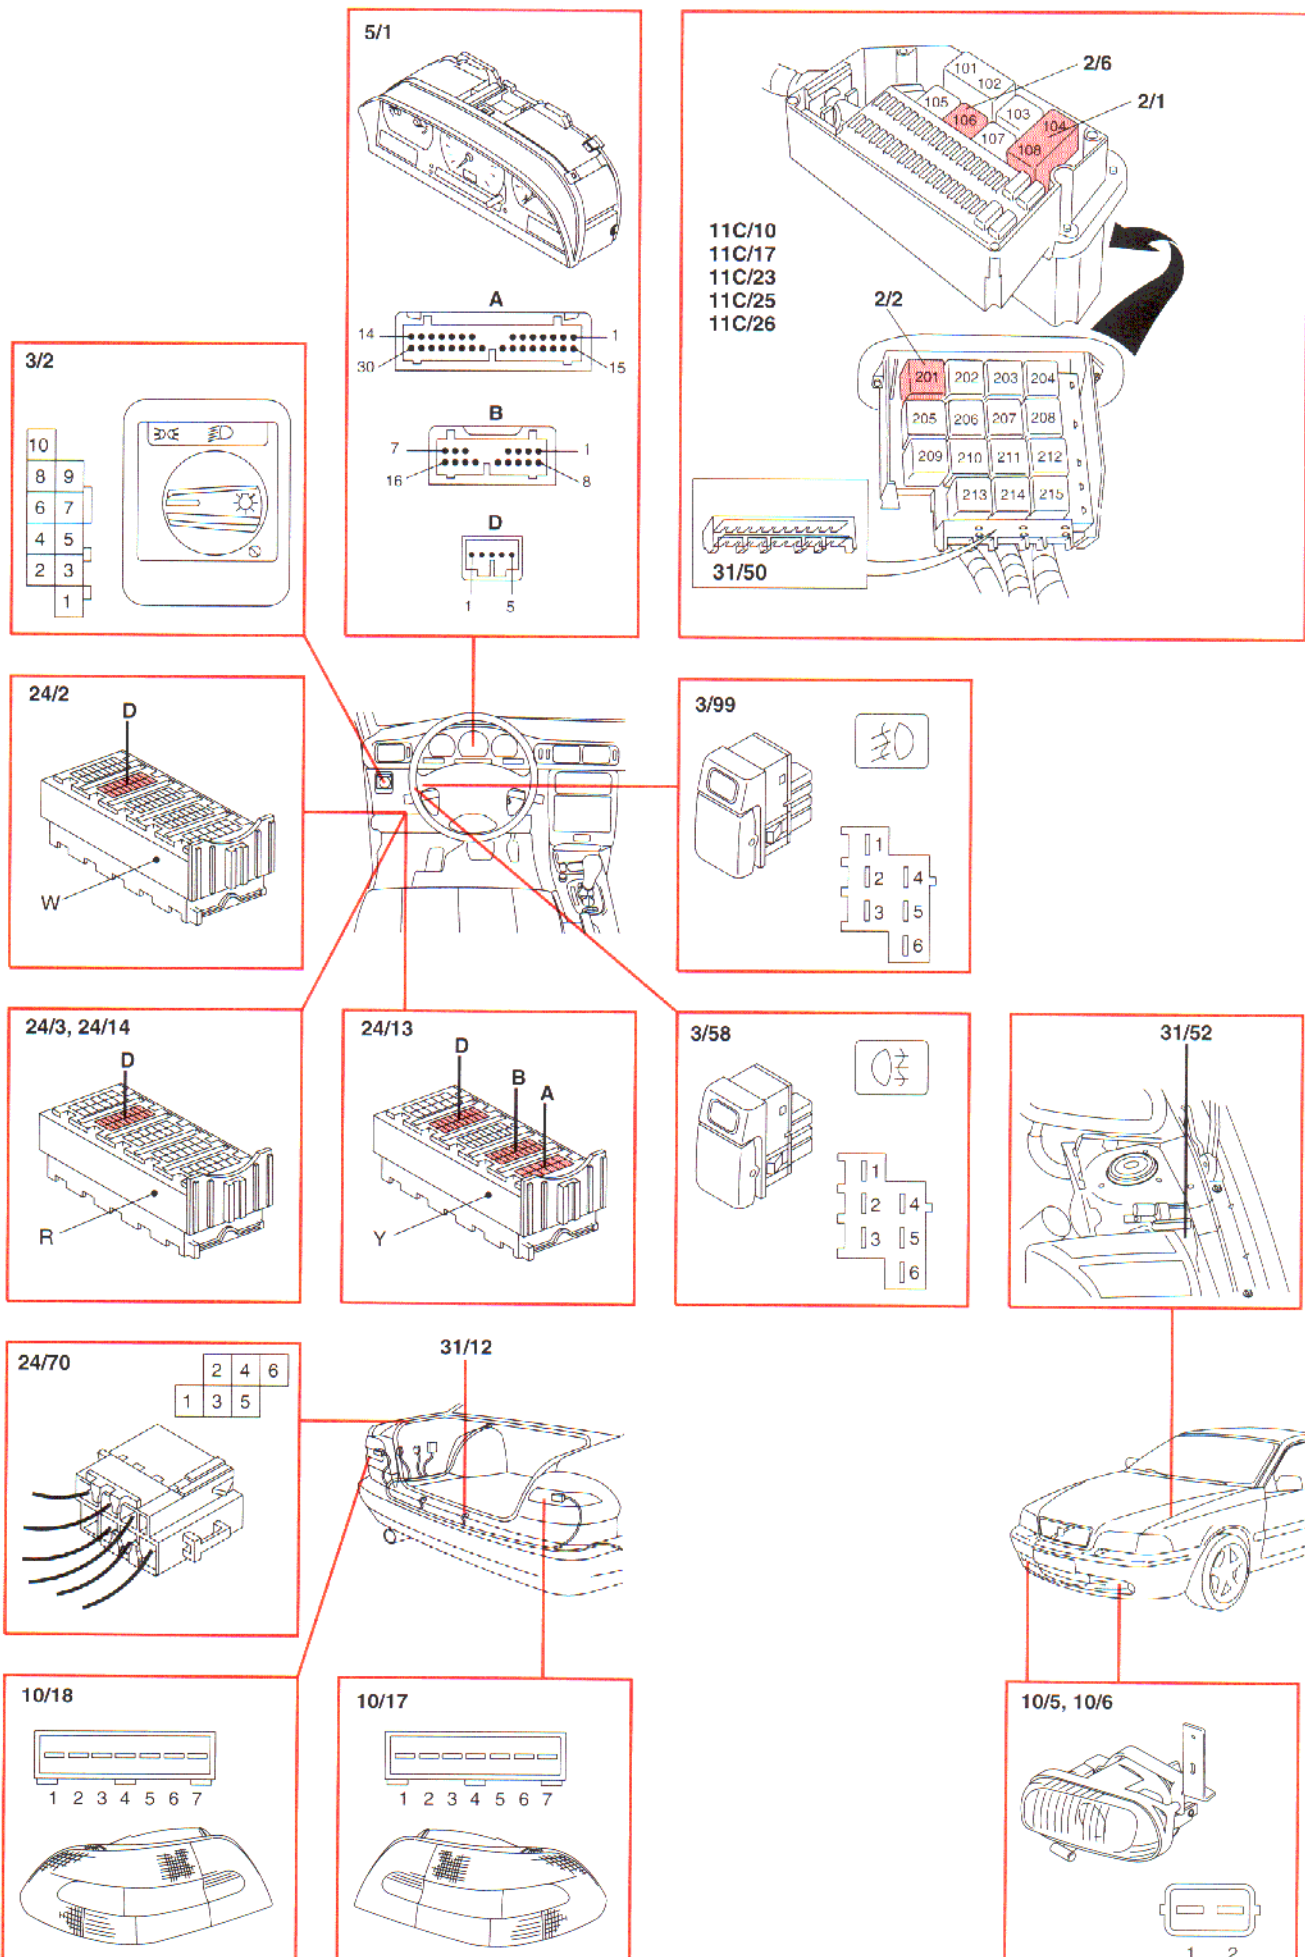















Fog lamps S70/V70

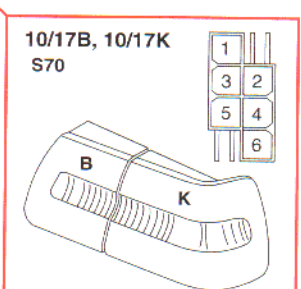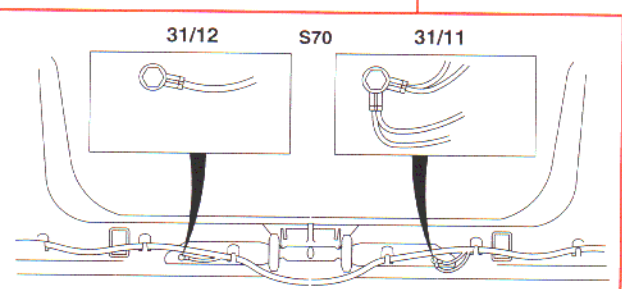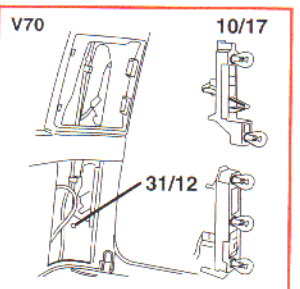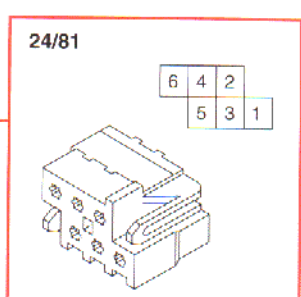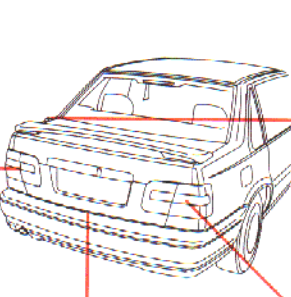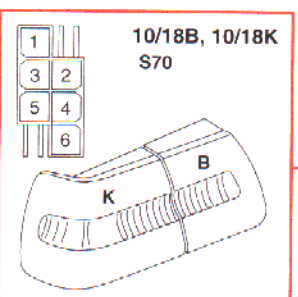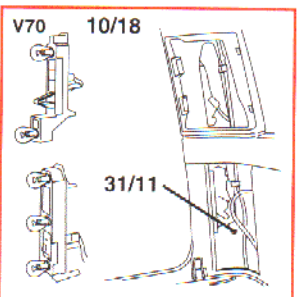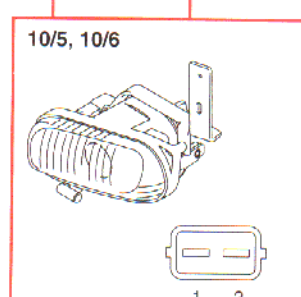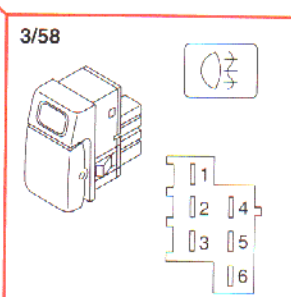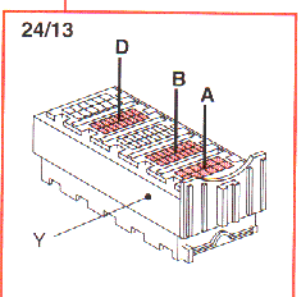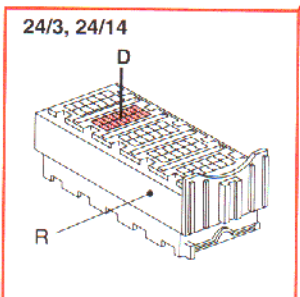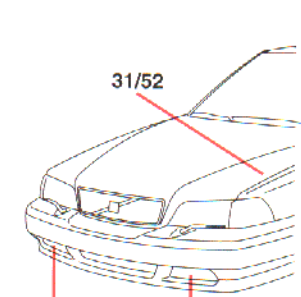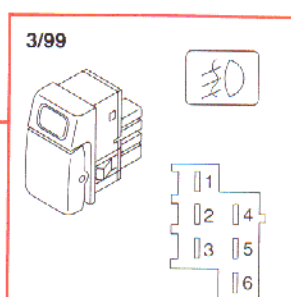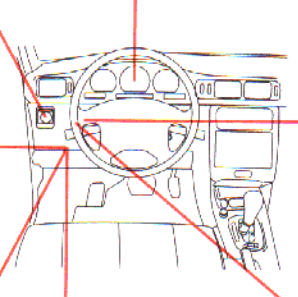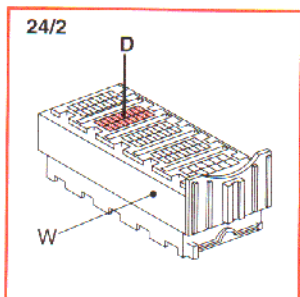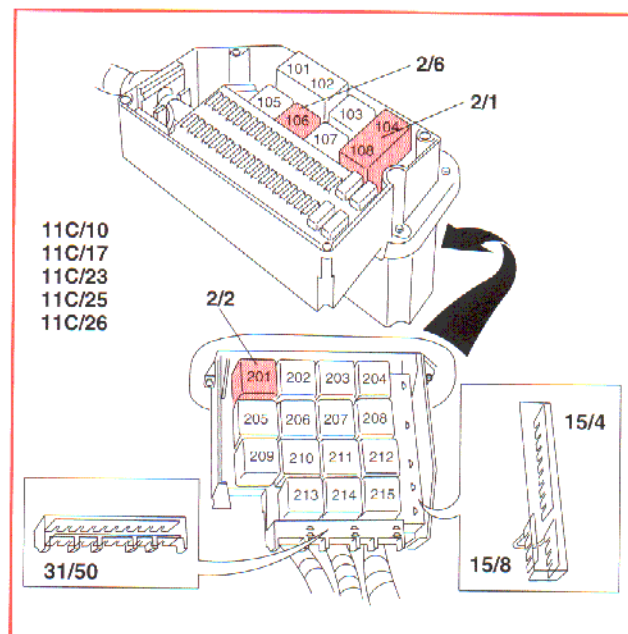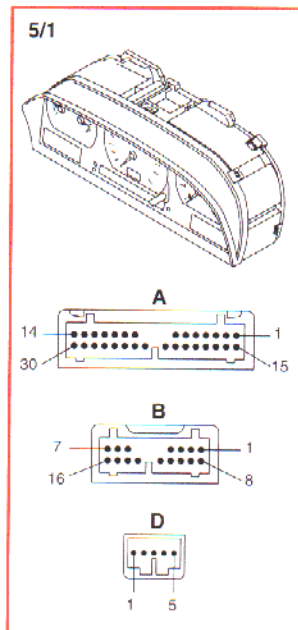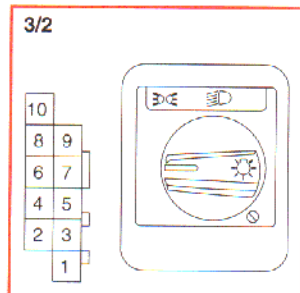
















Parking lamps, tail lamps and license (number) plate lighting C70

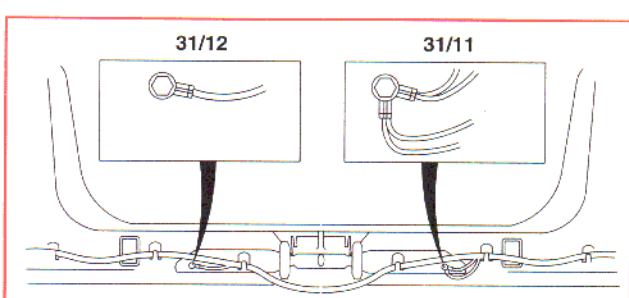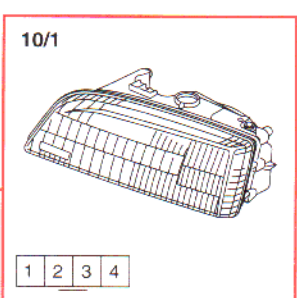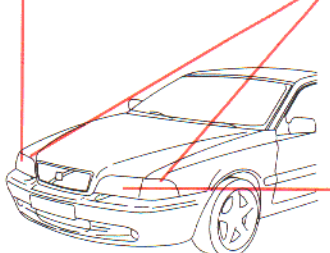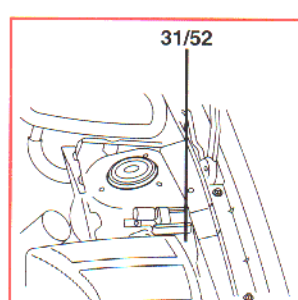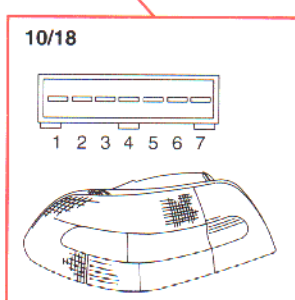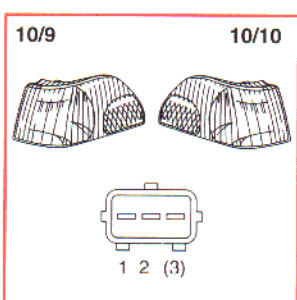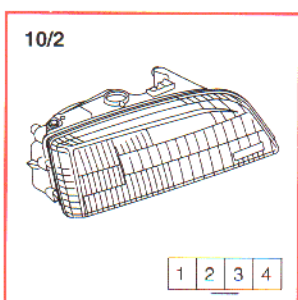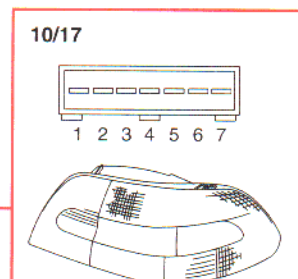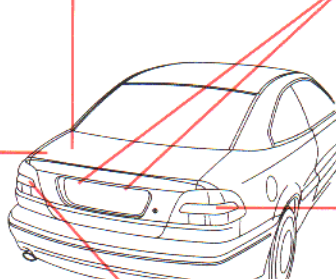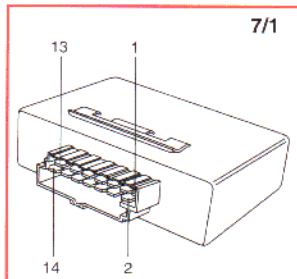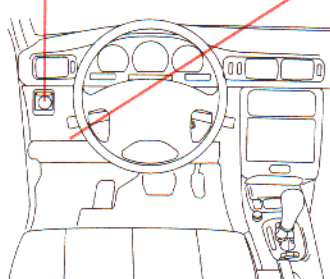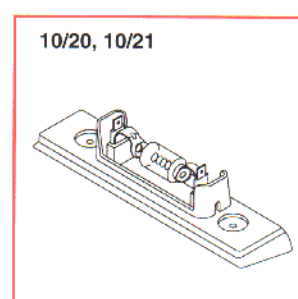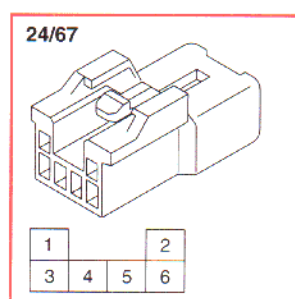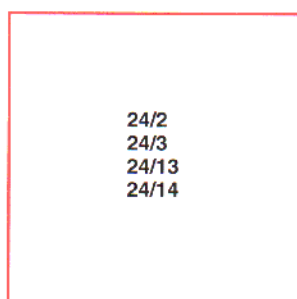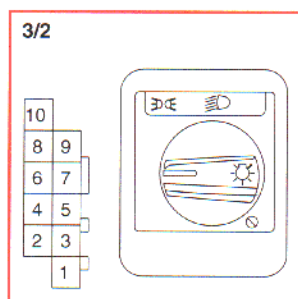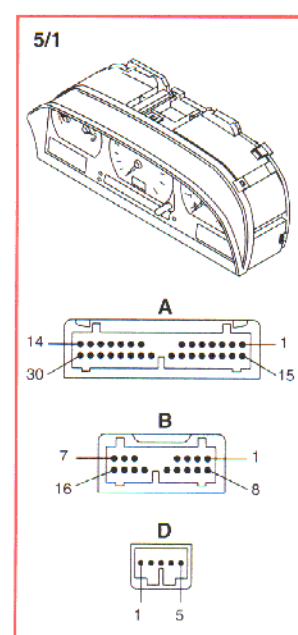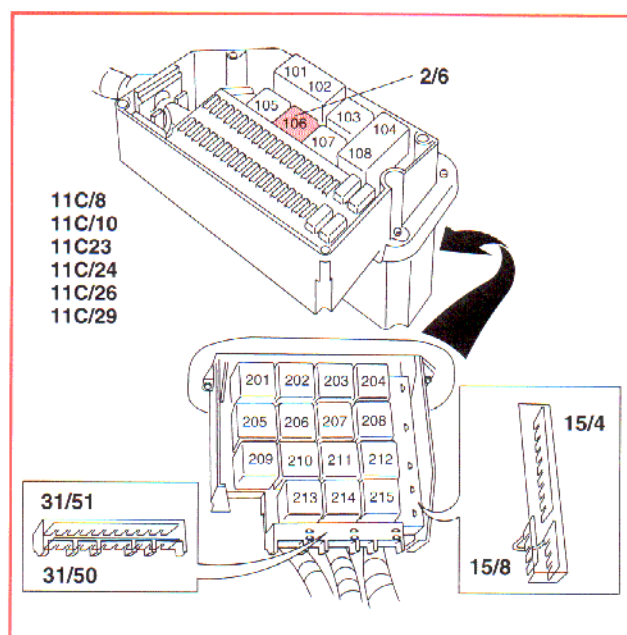















Parking lamps, tail lamps and license (number) plate lighting S70

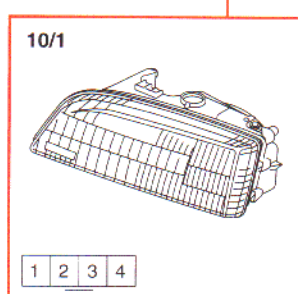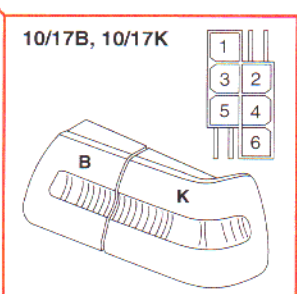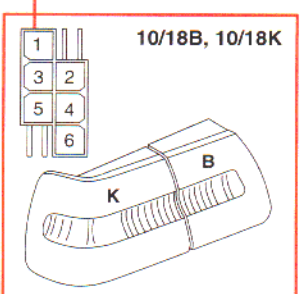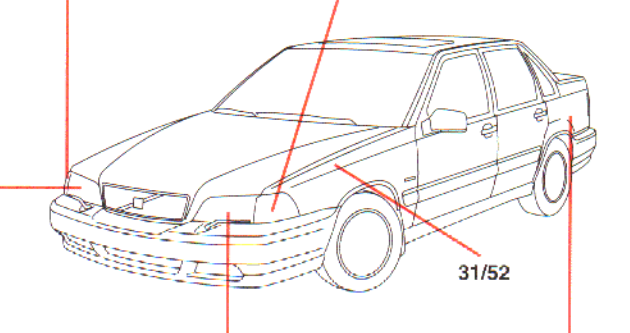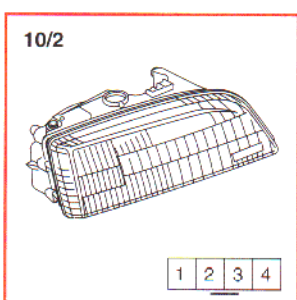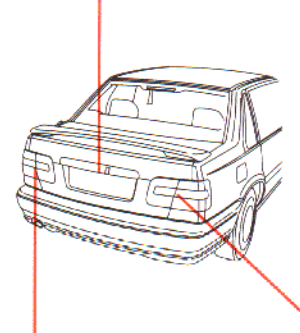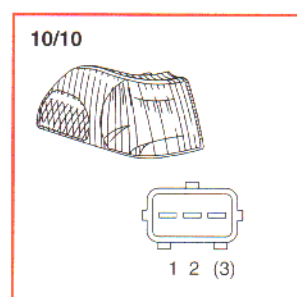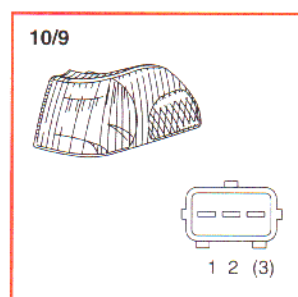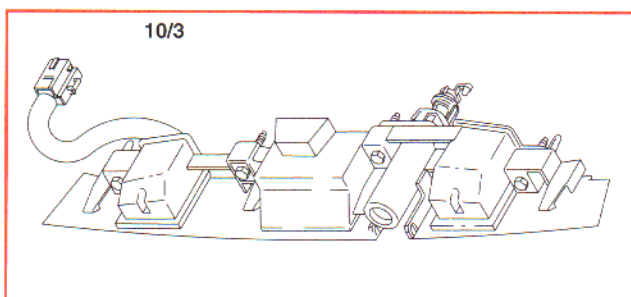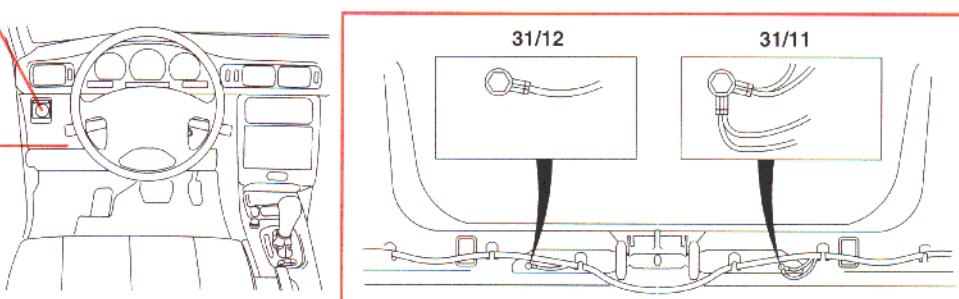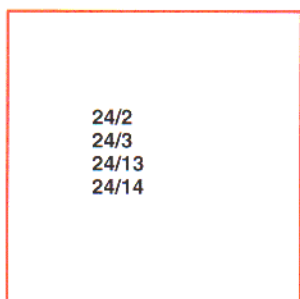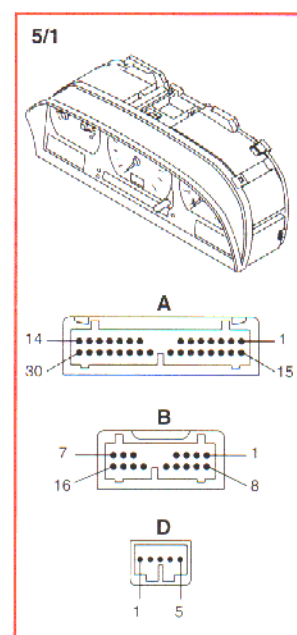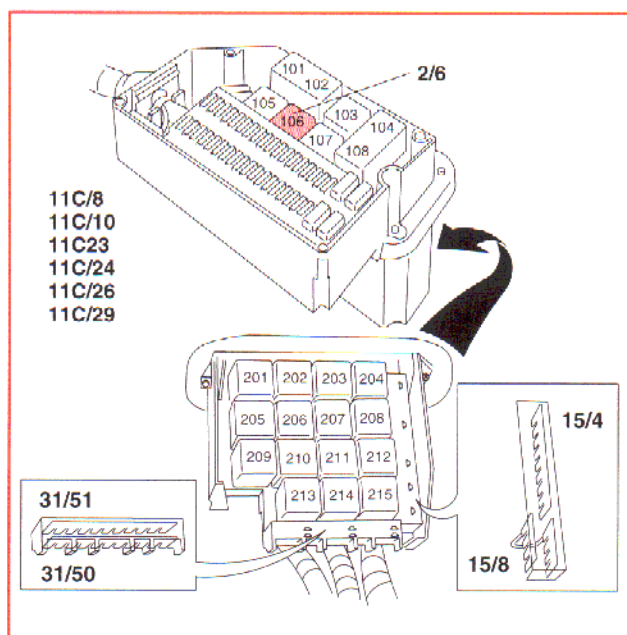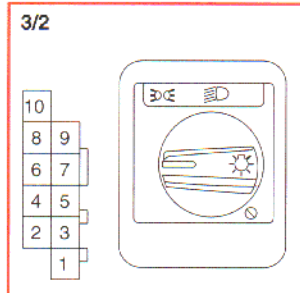


















Parking lamps, tail lamps and license (number) plate lighting V70

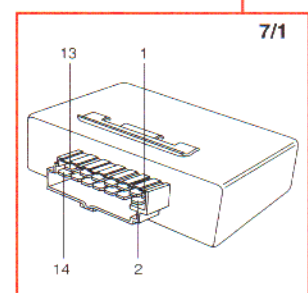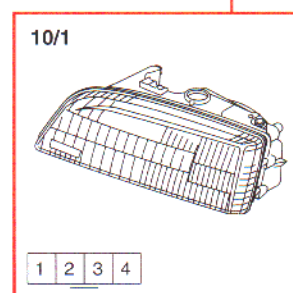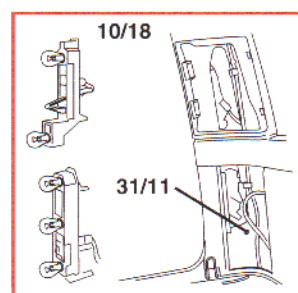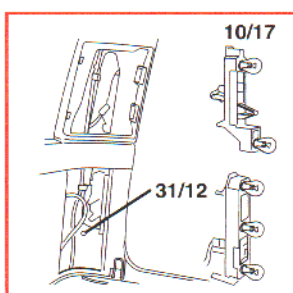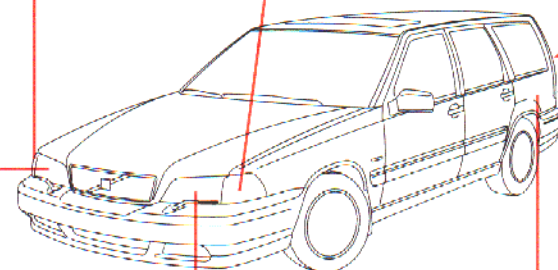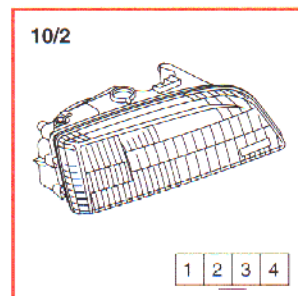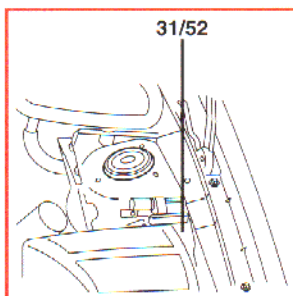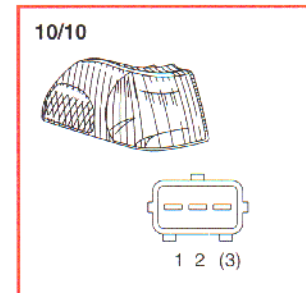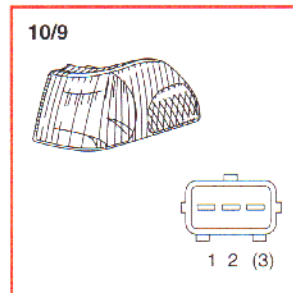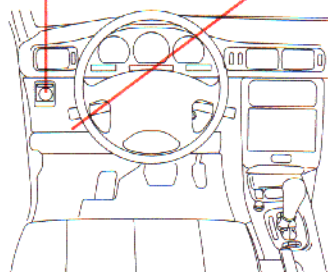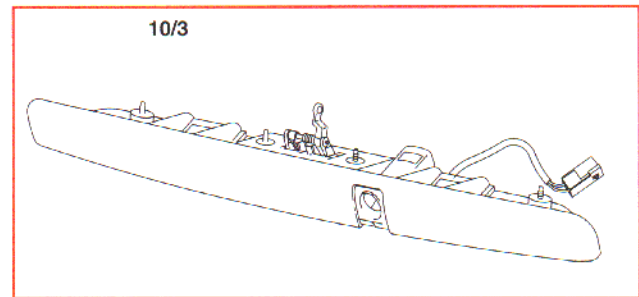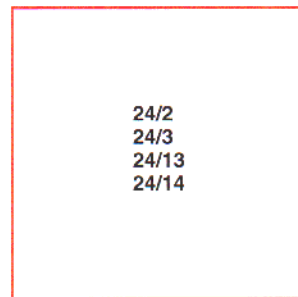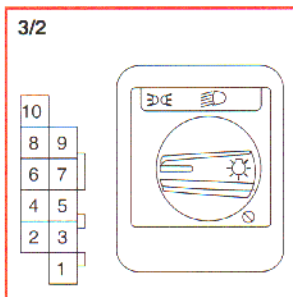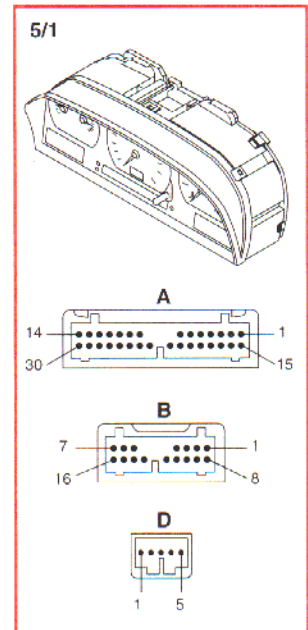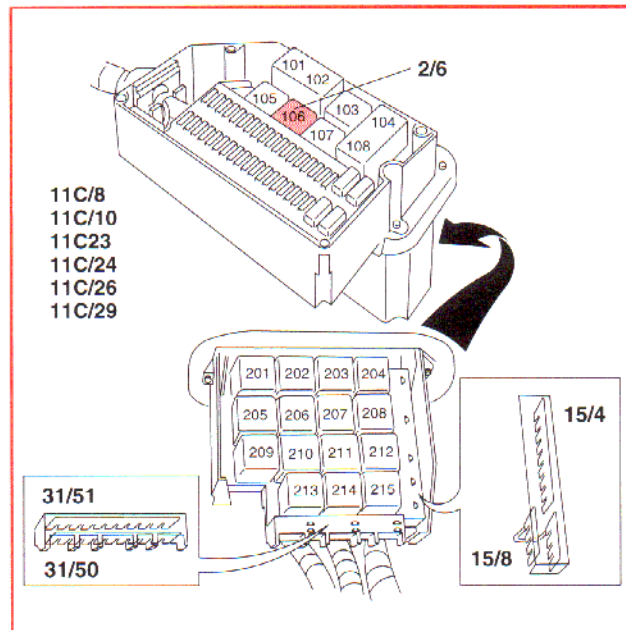














Stop (brake) lamps C70

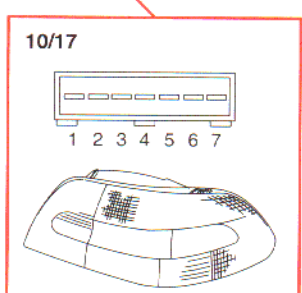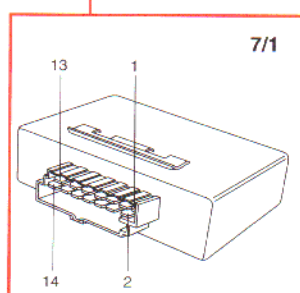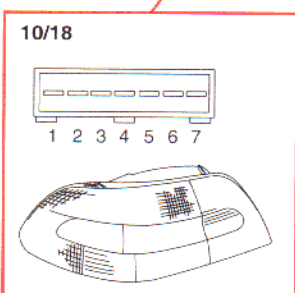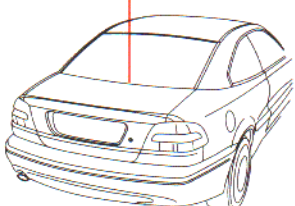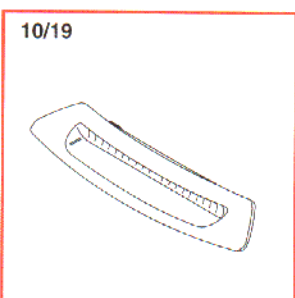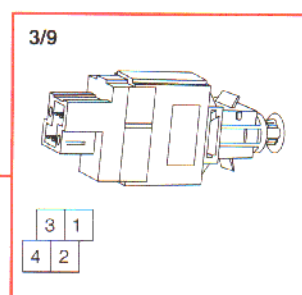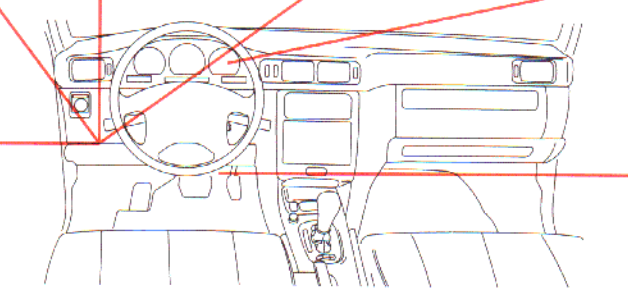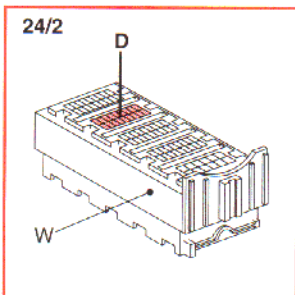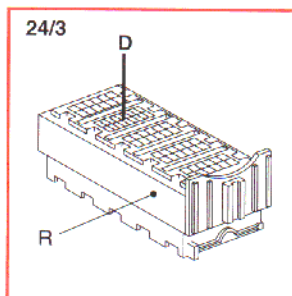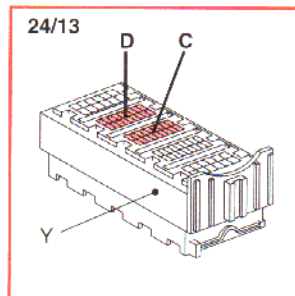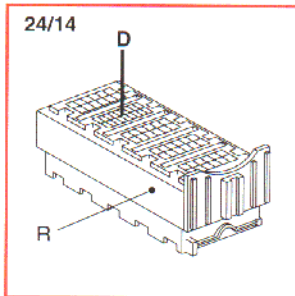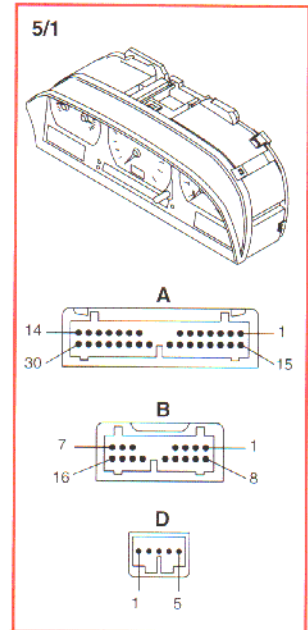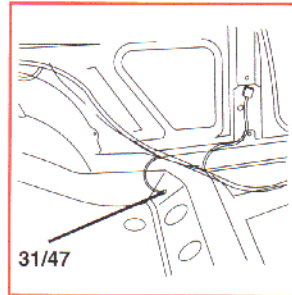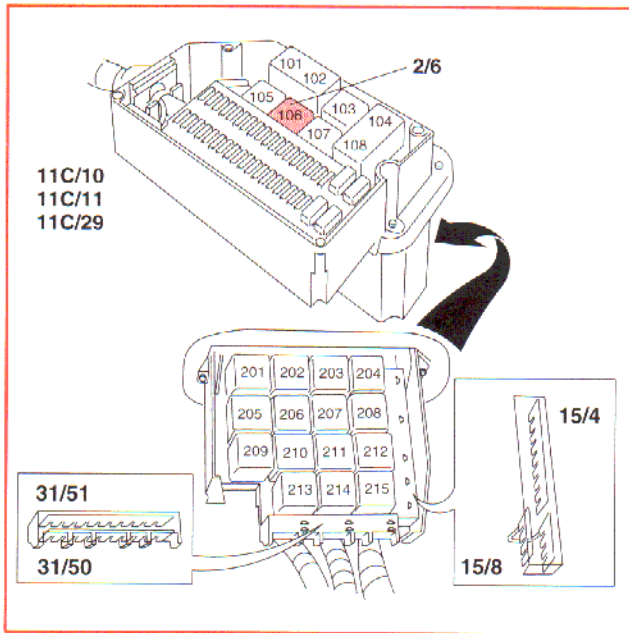

Stop (brake) lamps S70

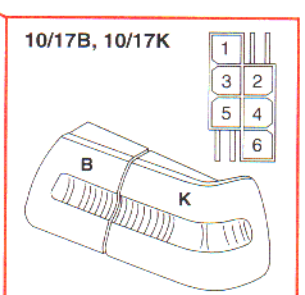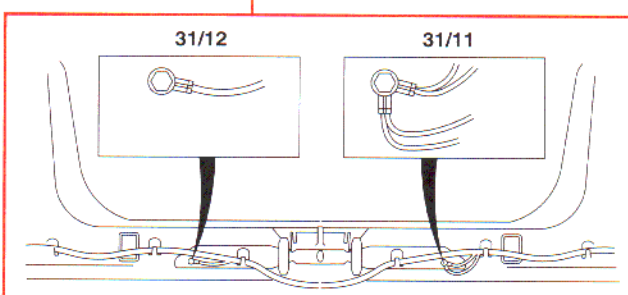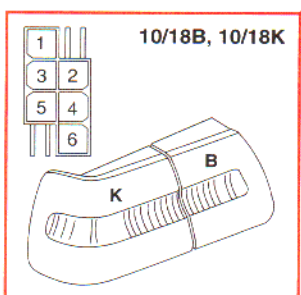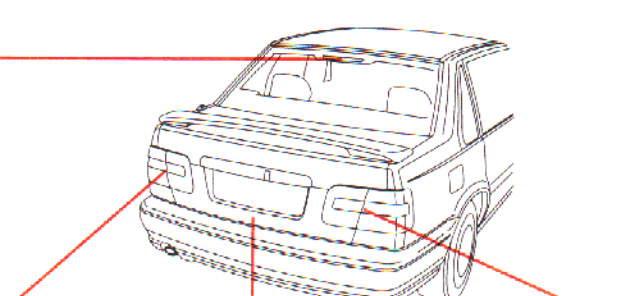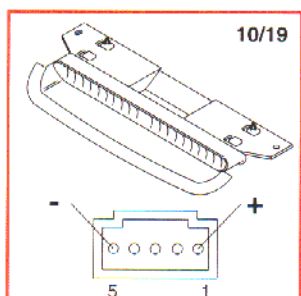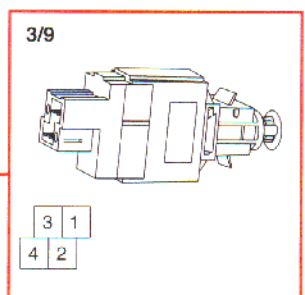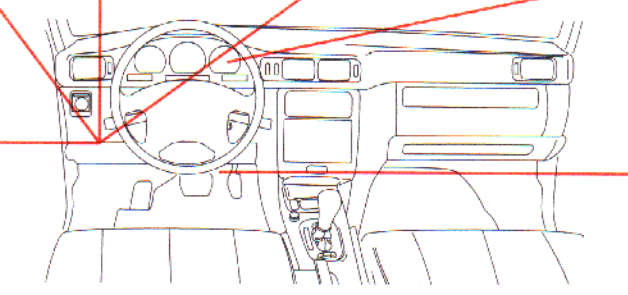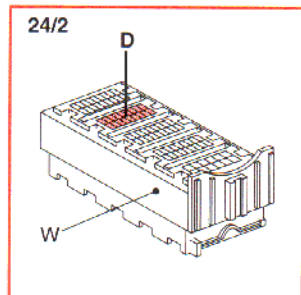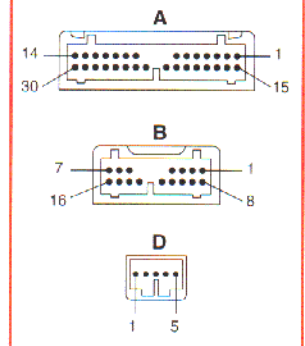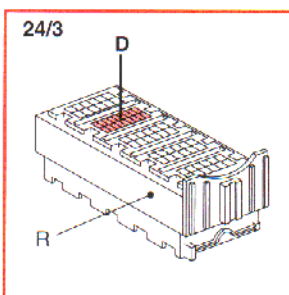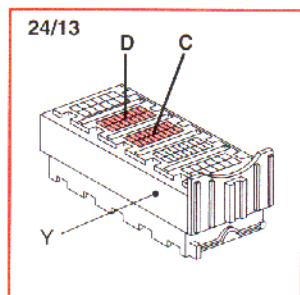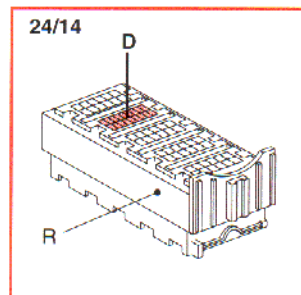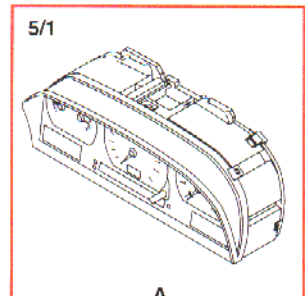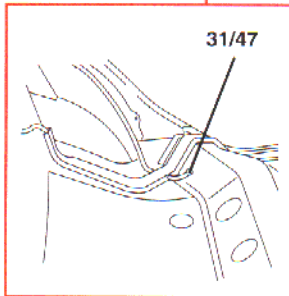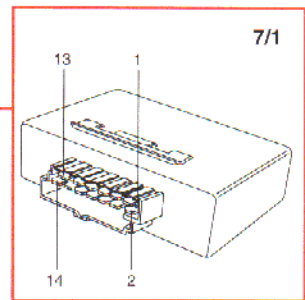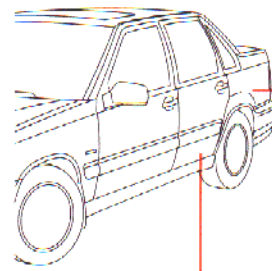
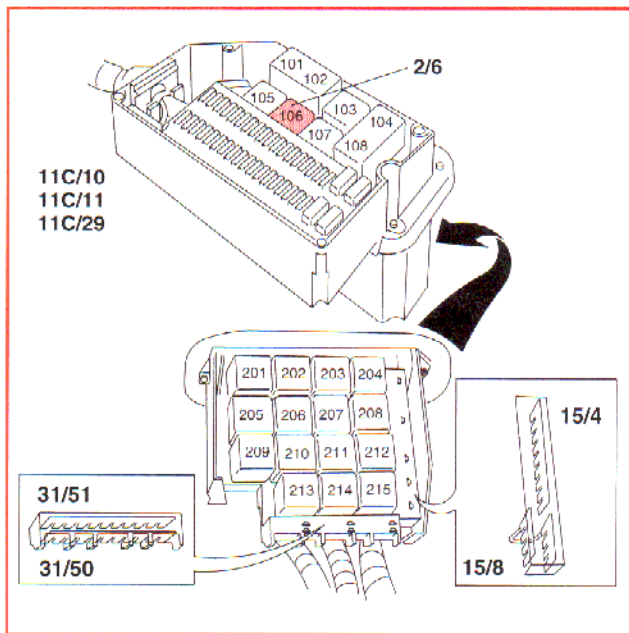


Stop (brake) lamps V70

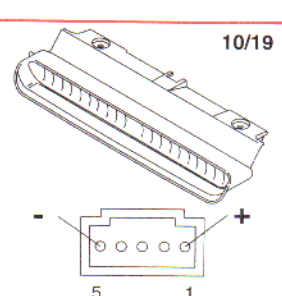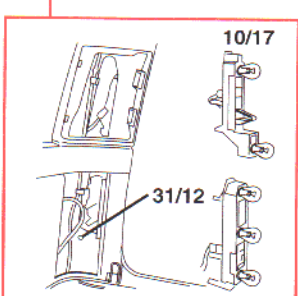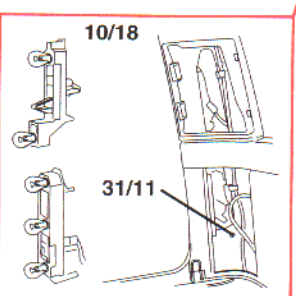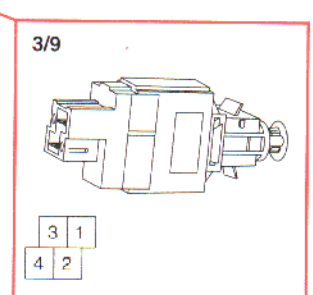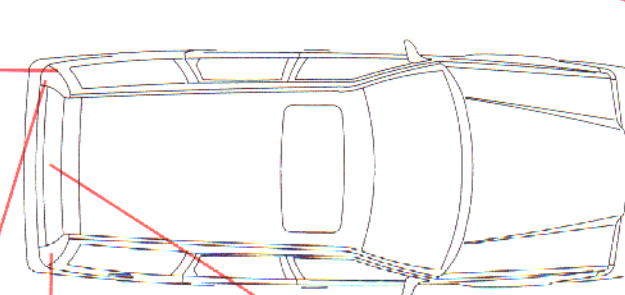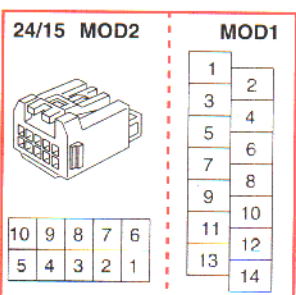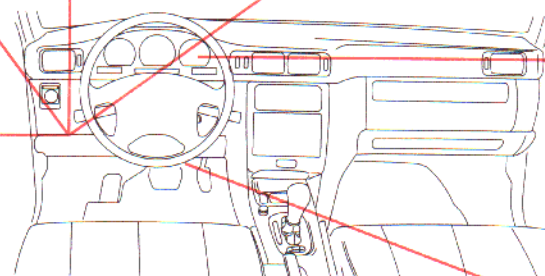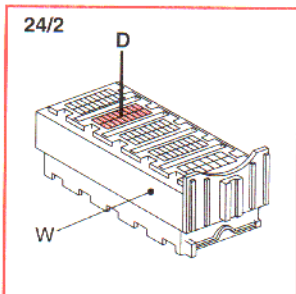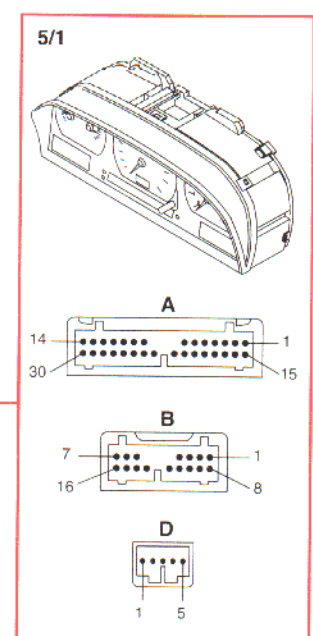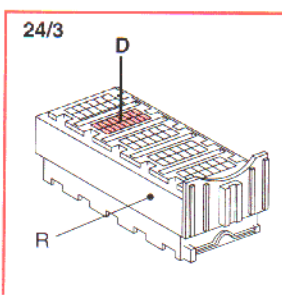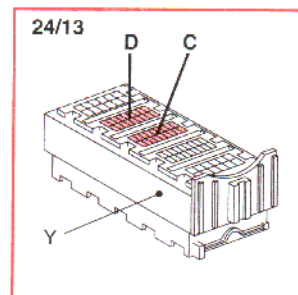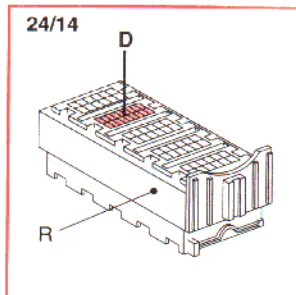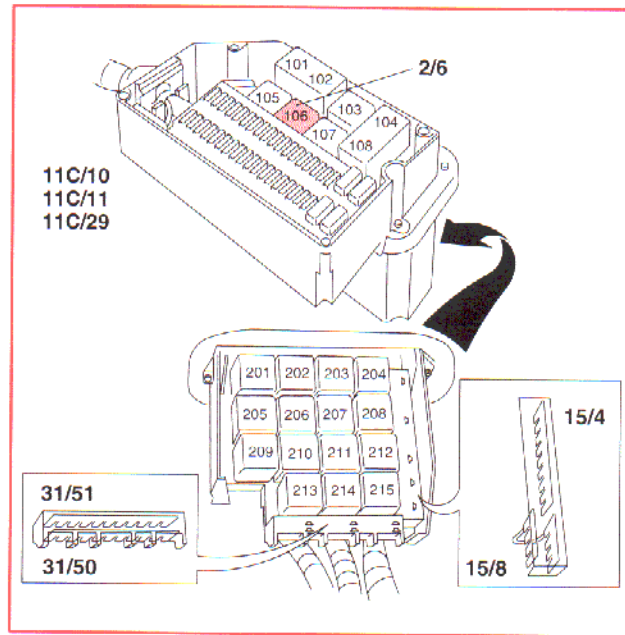


Back-up (reversing) lamps


24/53

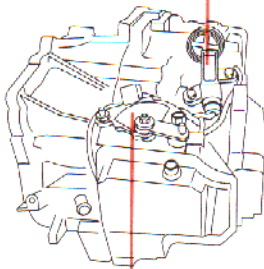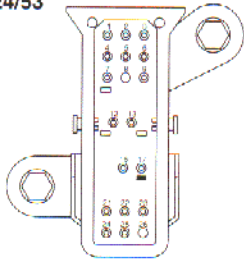


11C/10
11C/27

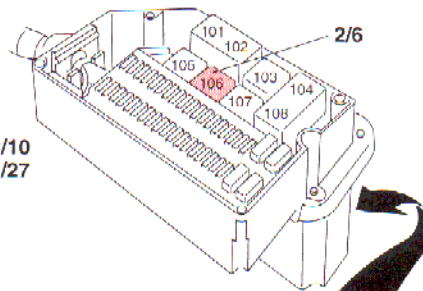


31/51
31/50

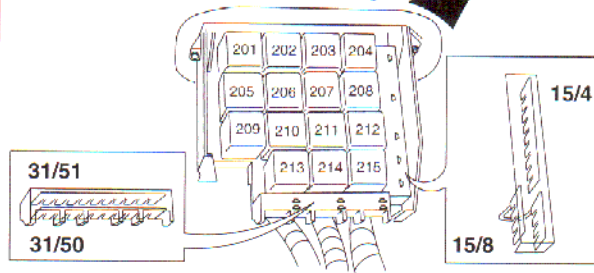


24/3D
24/2C
24/9A
24/13
24/14

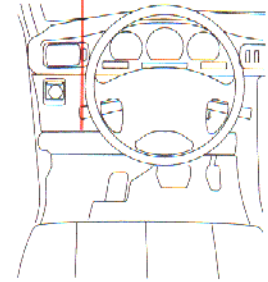


3/71

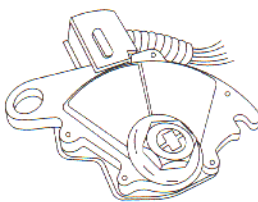


V70 10/18

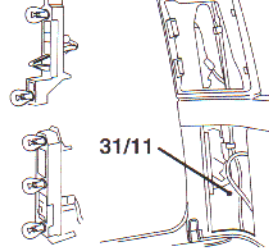


V70 10/17

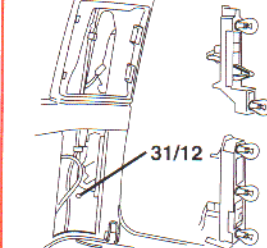


3/10

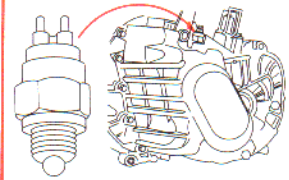


10/18 C70

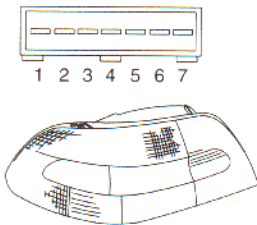


10/17 C70

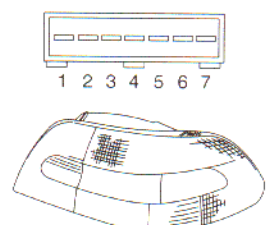


10/18B, 10/18K
S70

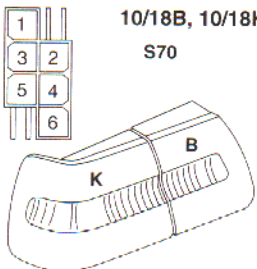

10/17B, 10/17K
S70

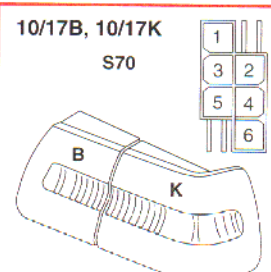


24/81

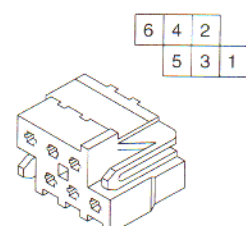



















31/12

31/11



















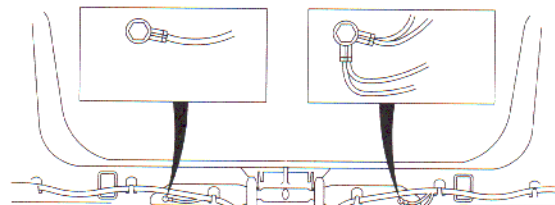
















24/15

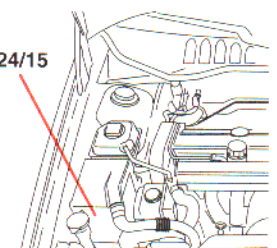

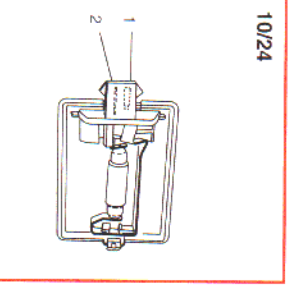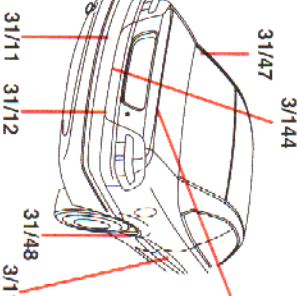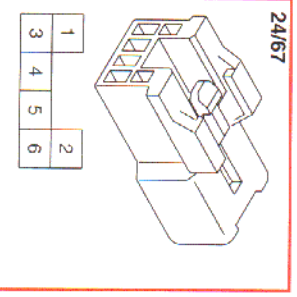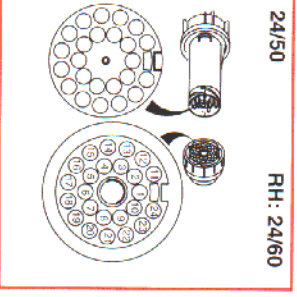
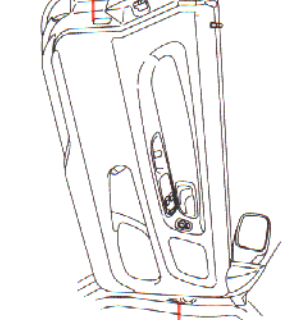
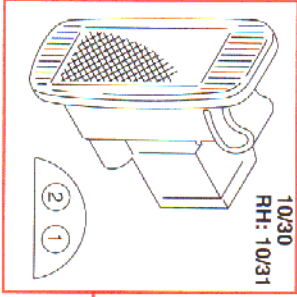
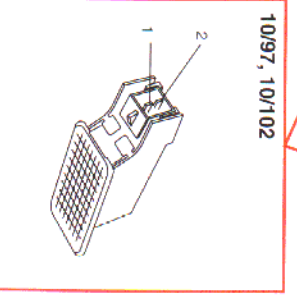
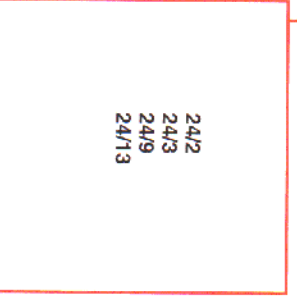
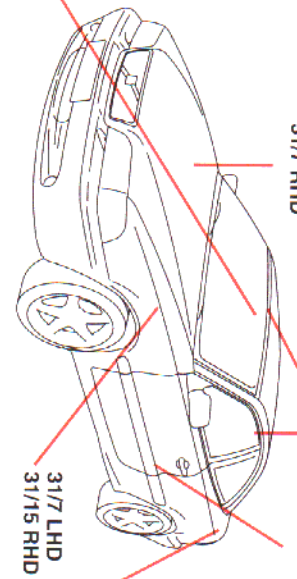
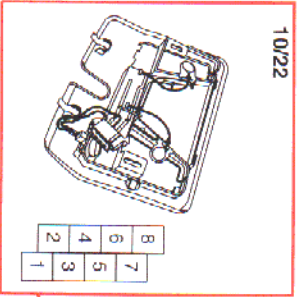
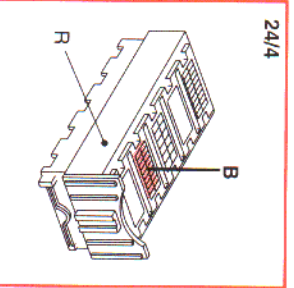
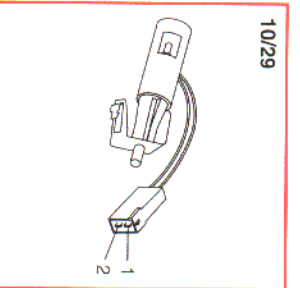
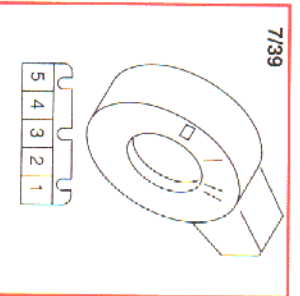
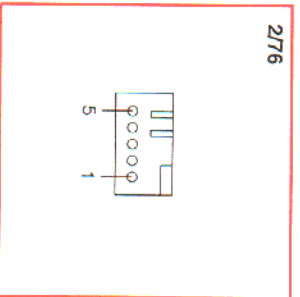
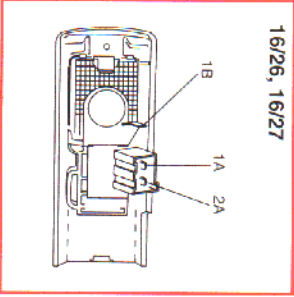
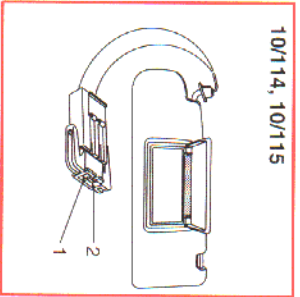
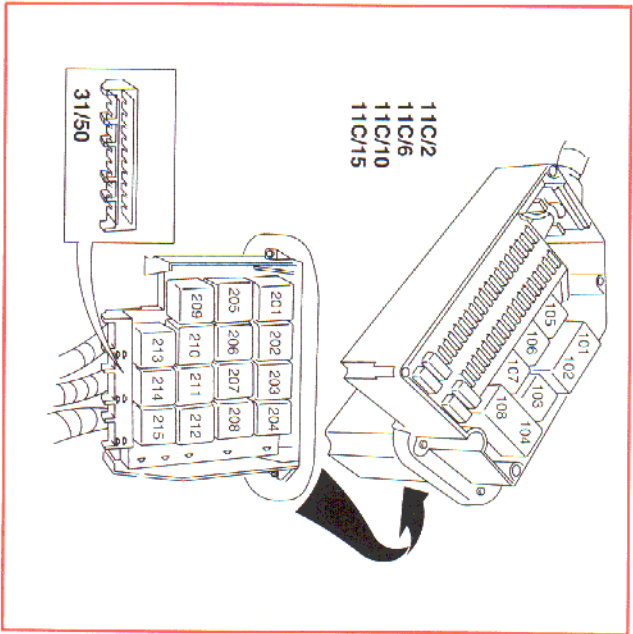


Courtesy lighting S70/V70

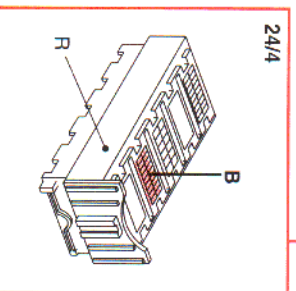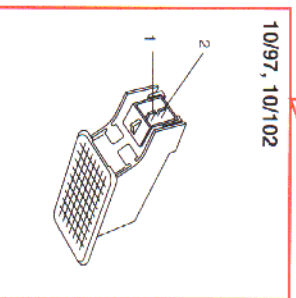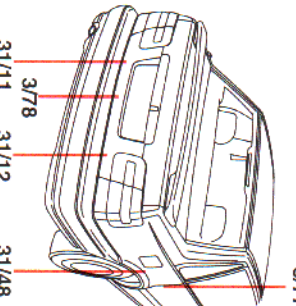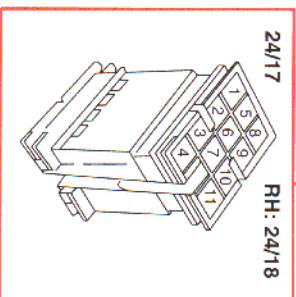
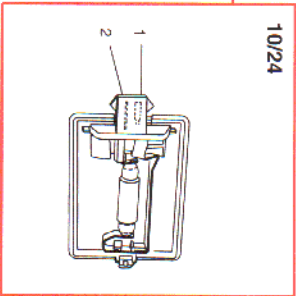
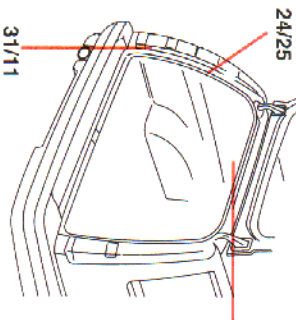
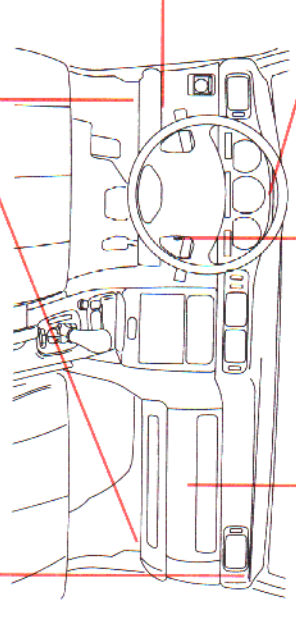
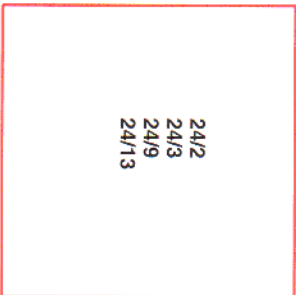
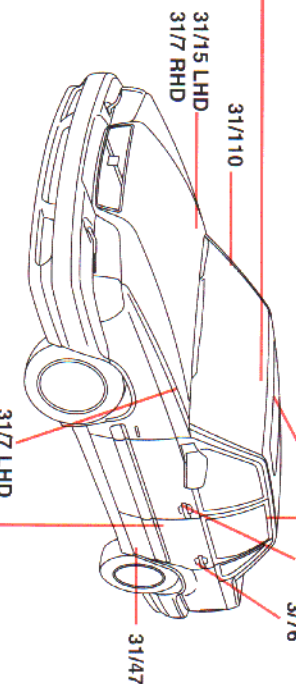
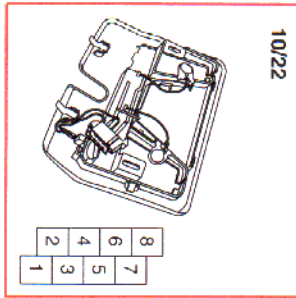
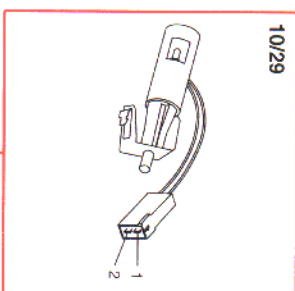
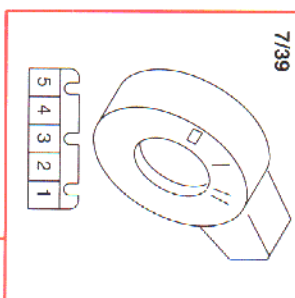
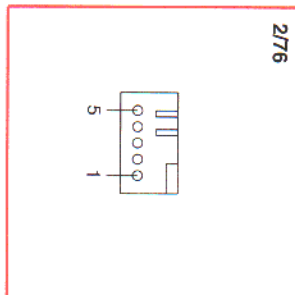
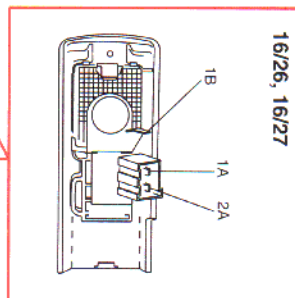
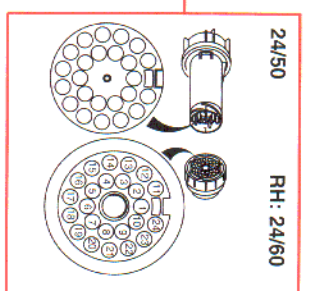
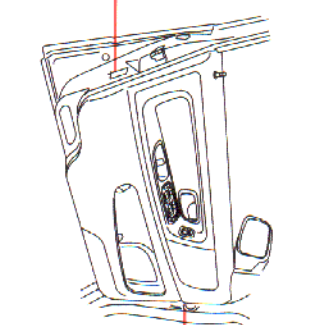
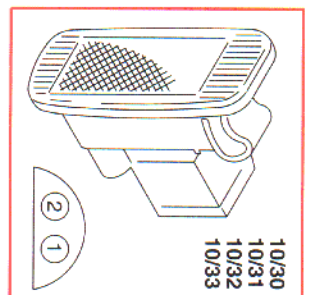
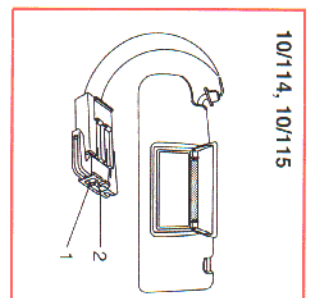
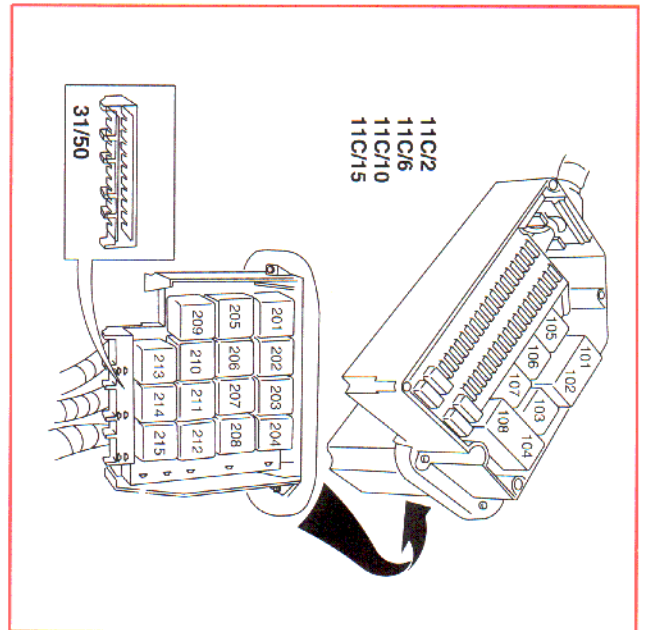


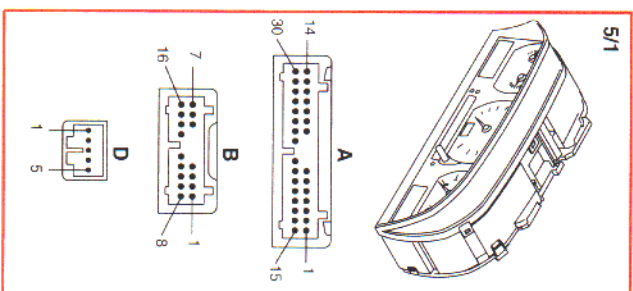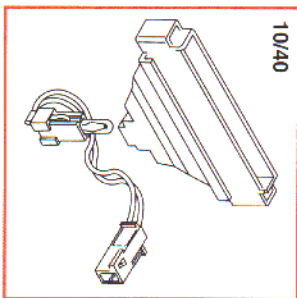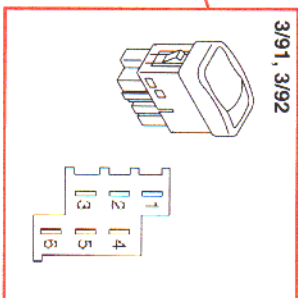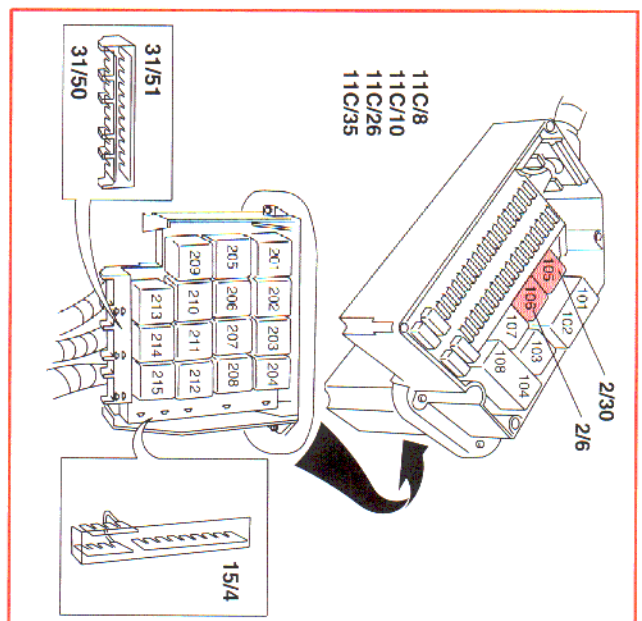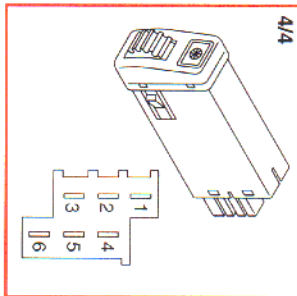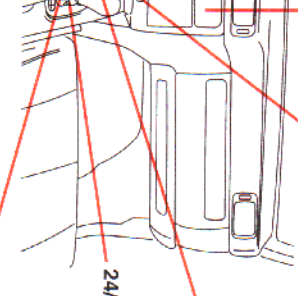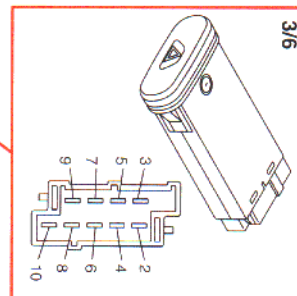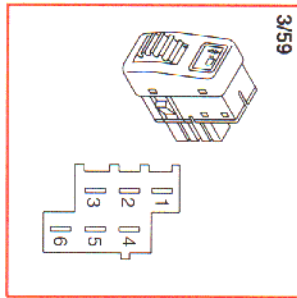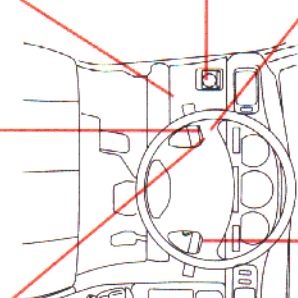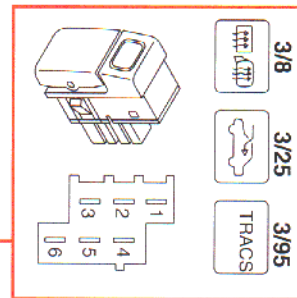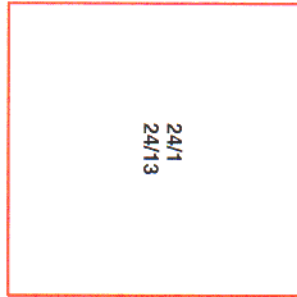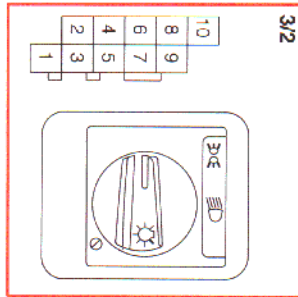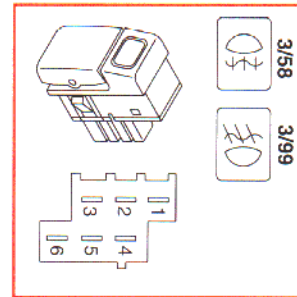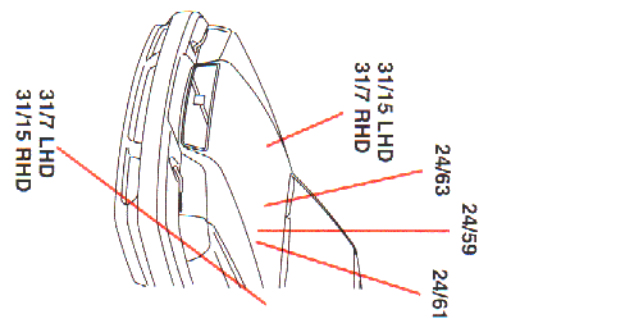
















Turn signal lamp and hazard warning signal flasher C70

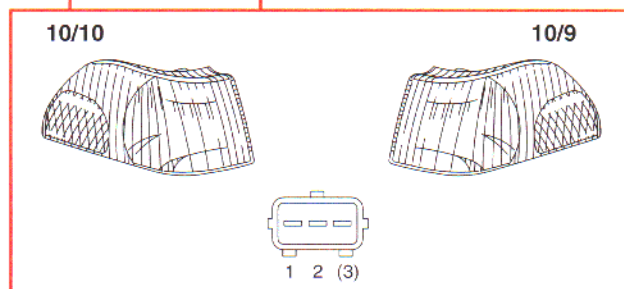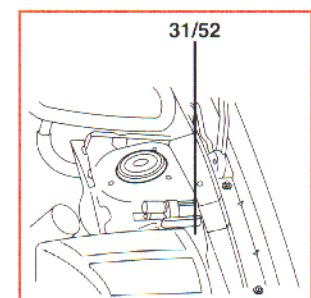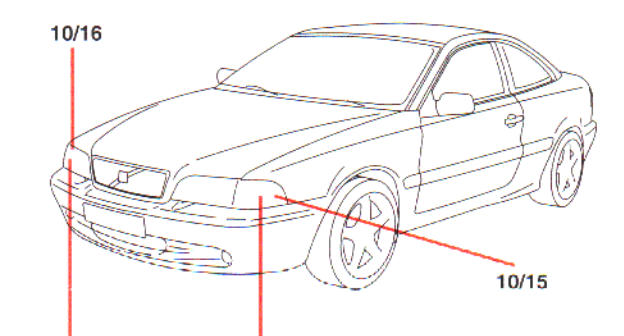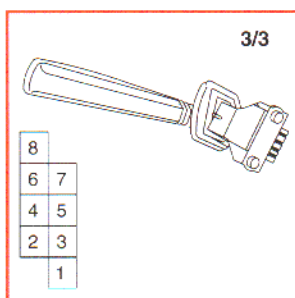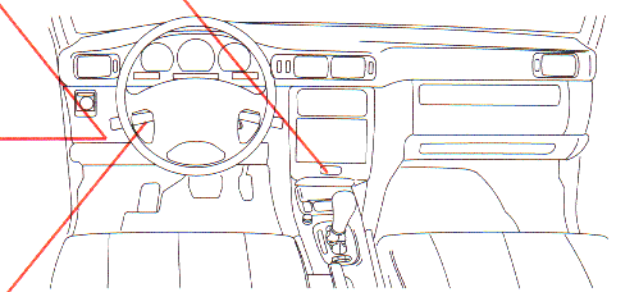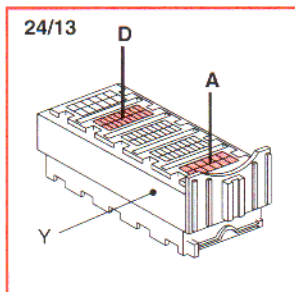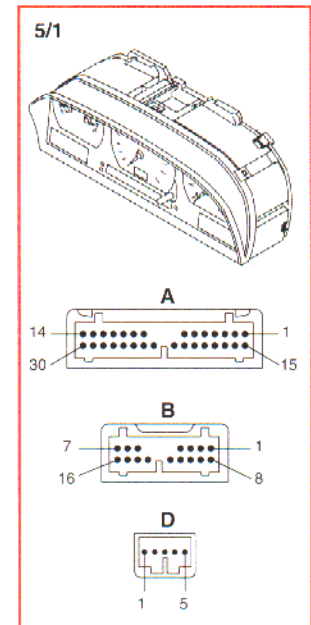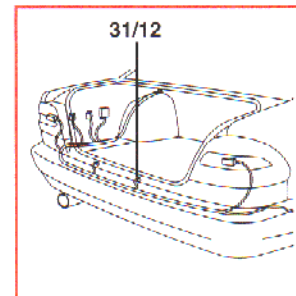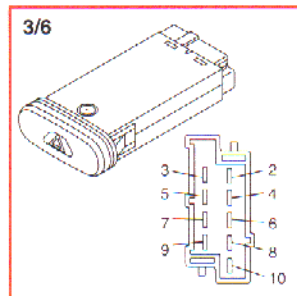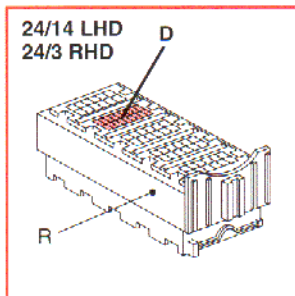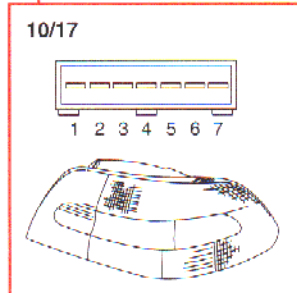
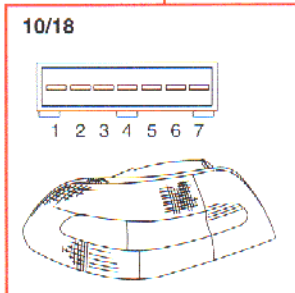
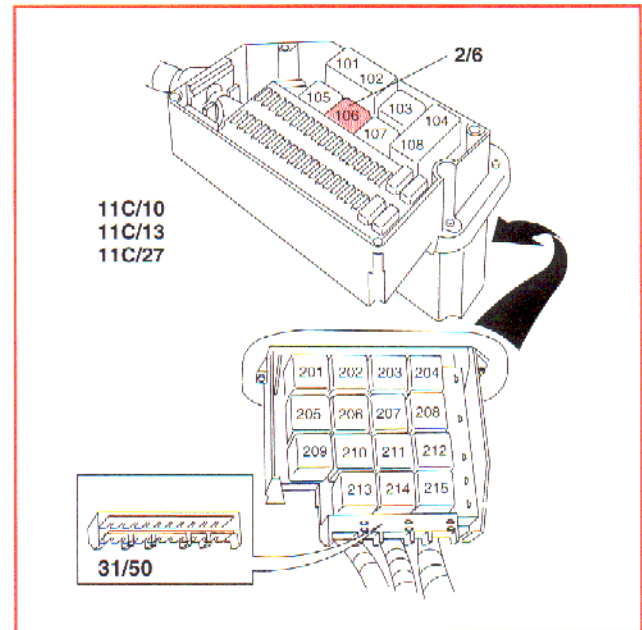
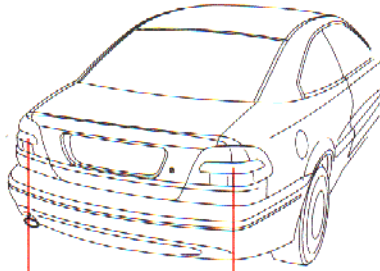


Turn signal lamp and hazard warning signal flasher S70

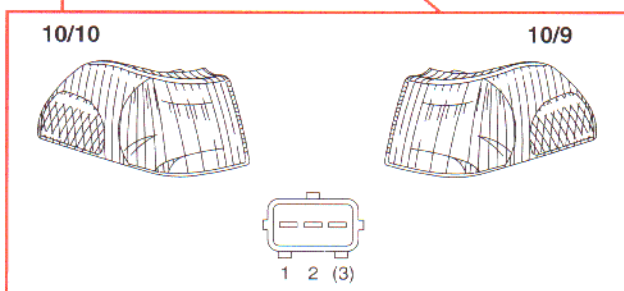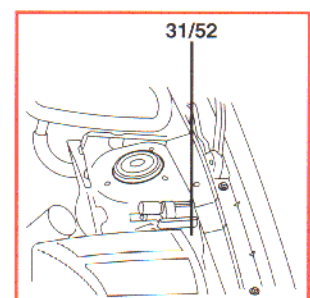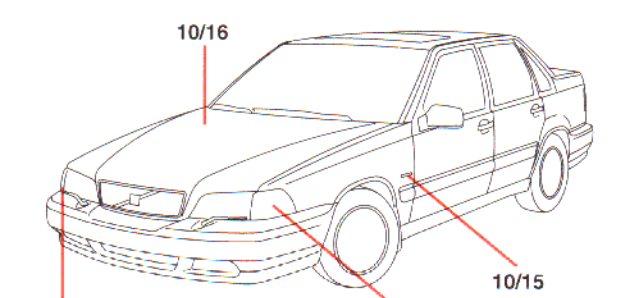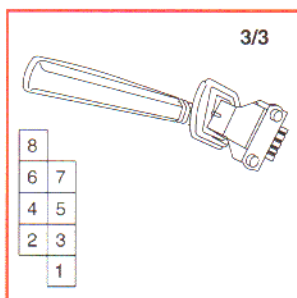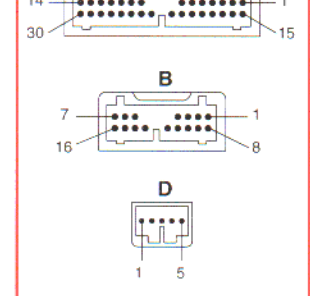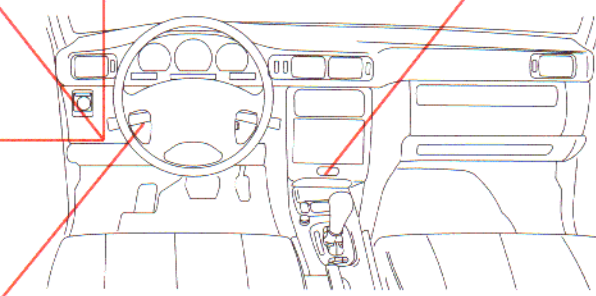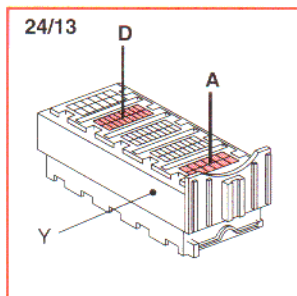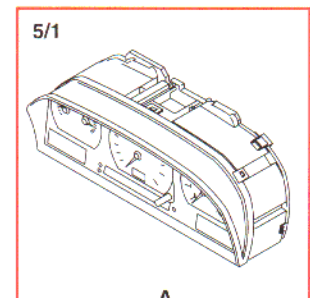
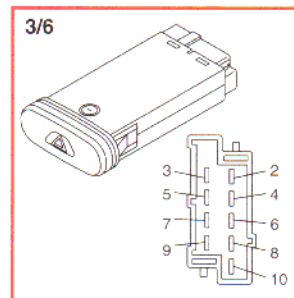
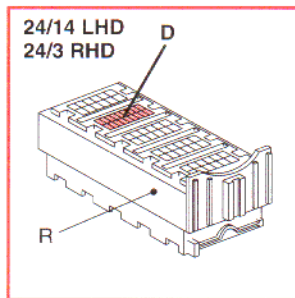
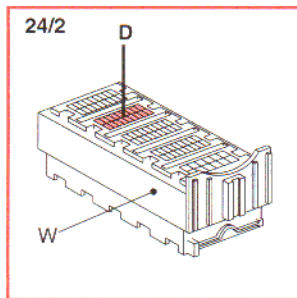
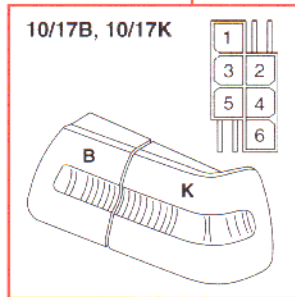
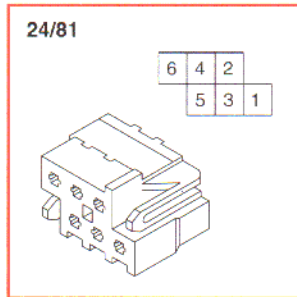
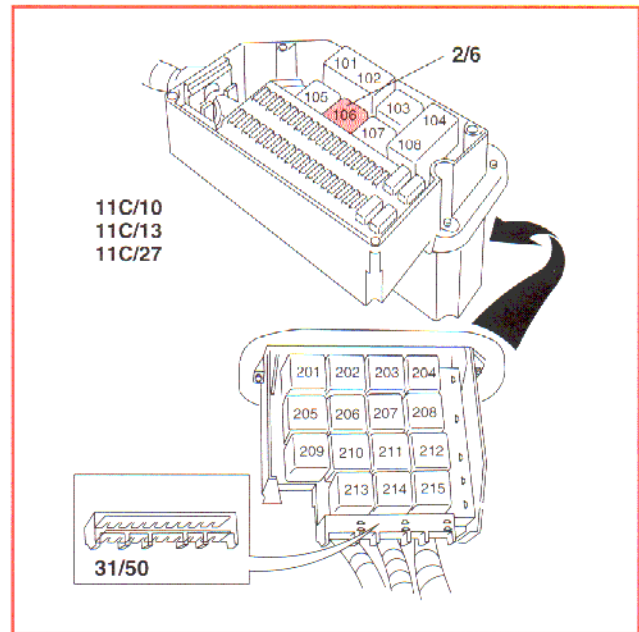
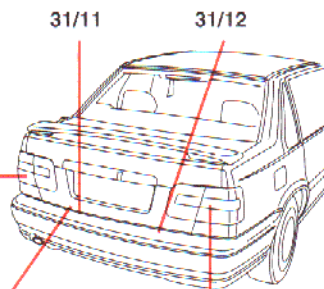
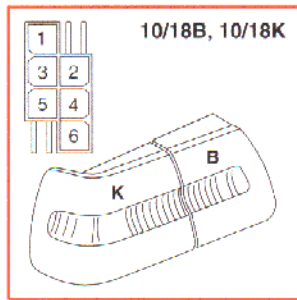


Turn signal lamp and hazard warning signal flasher V70

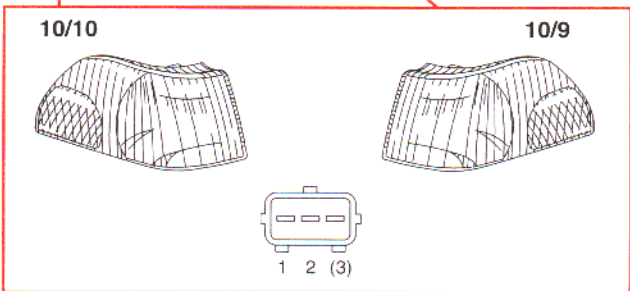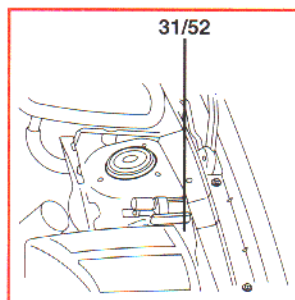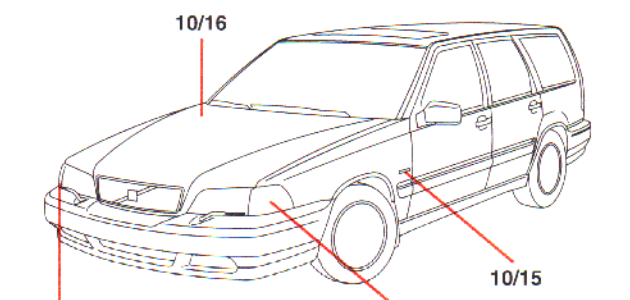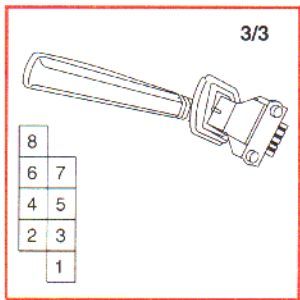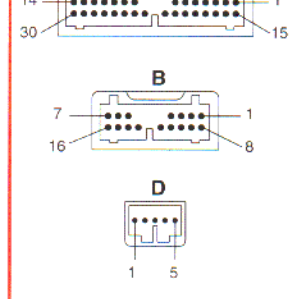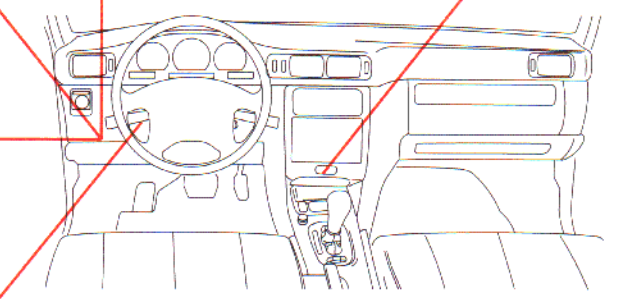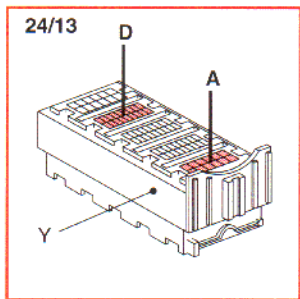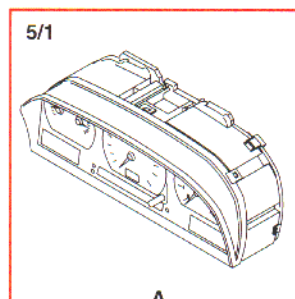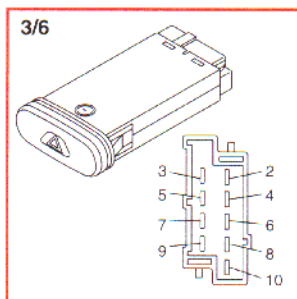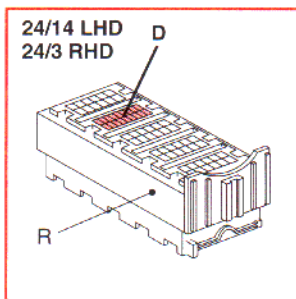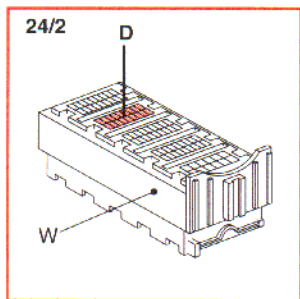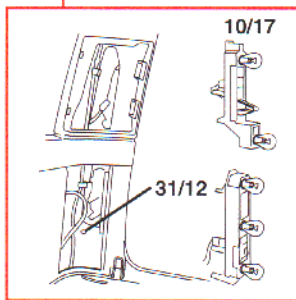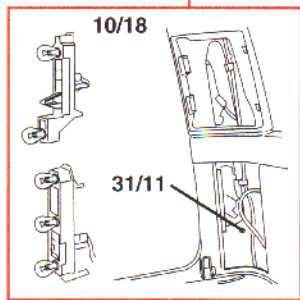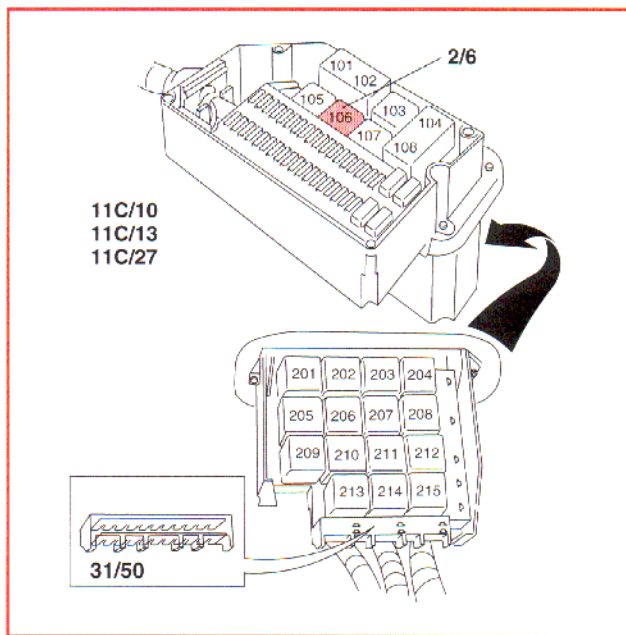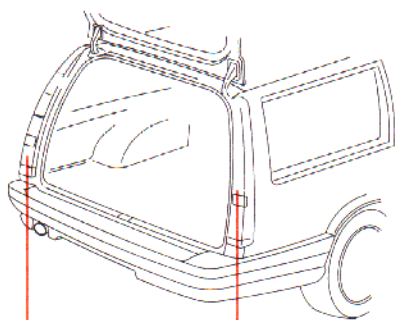

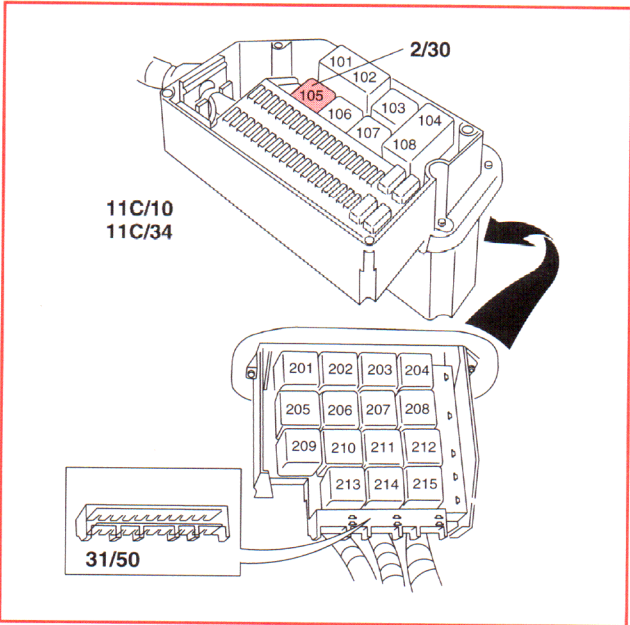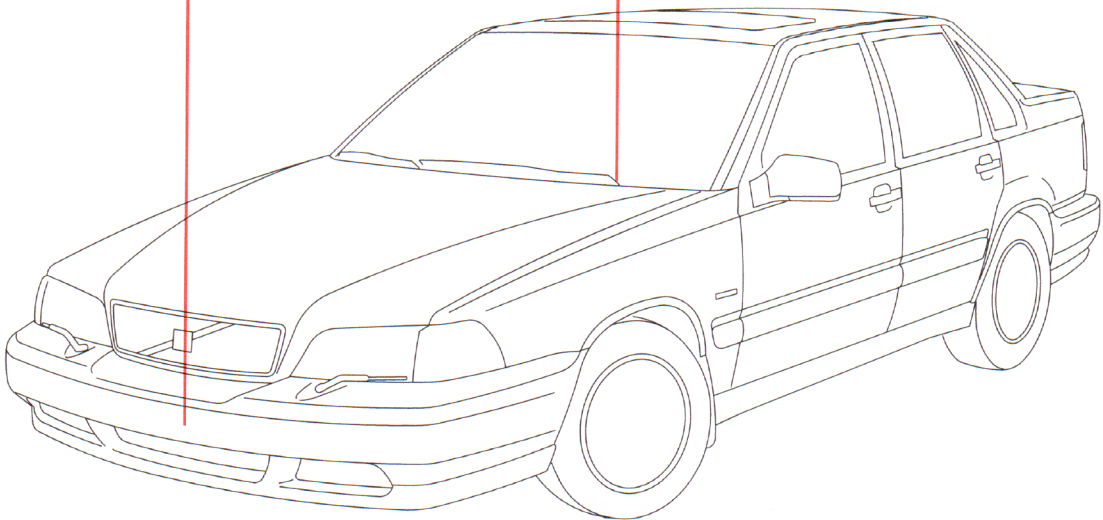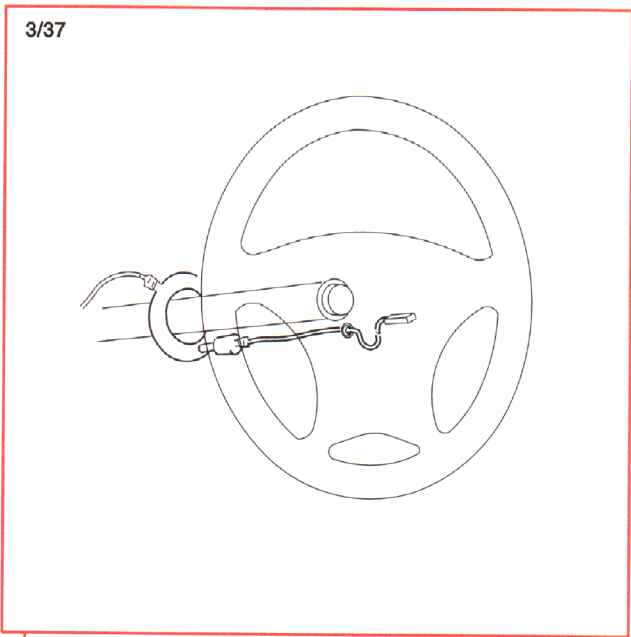
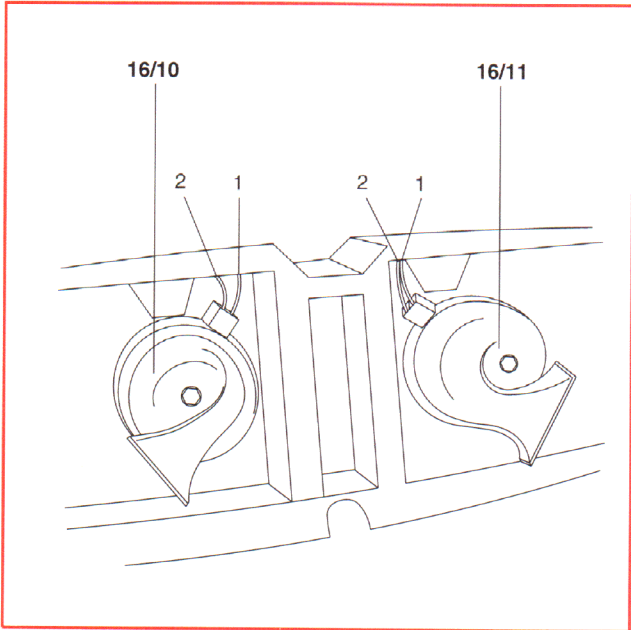


Washer windshield and headlamp

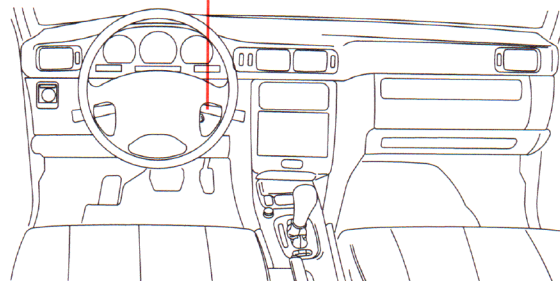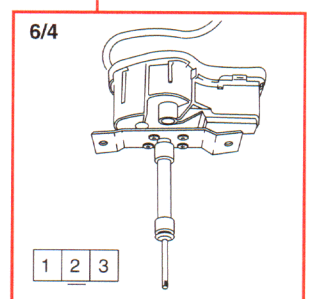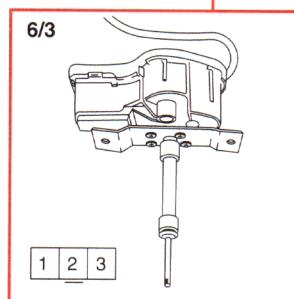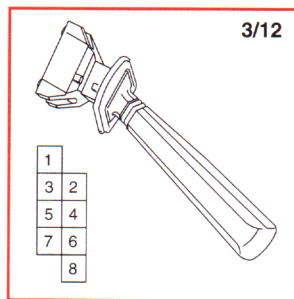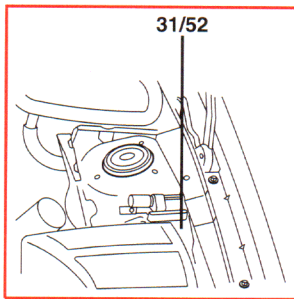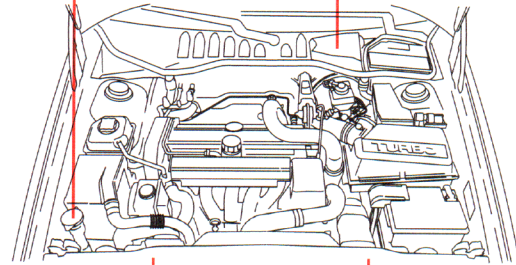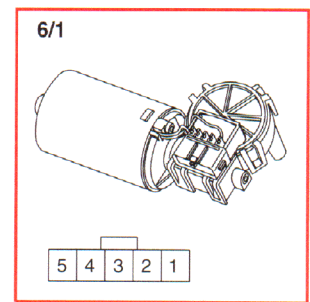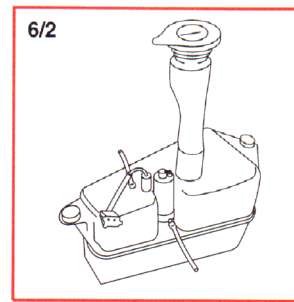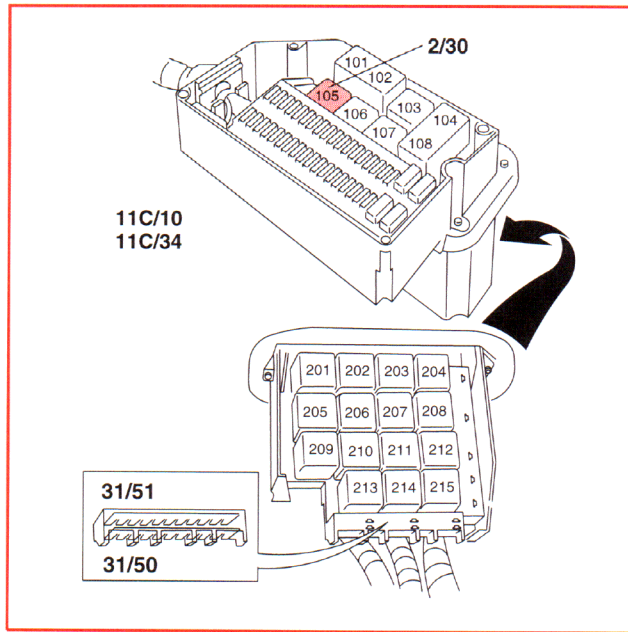


Washer rear windshield


24/25

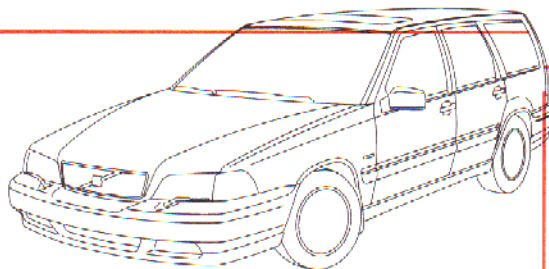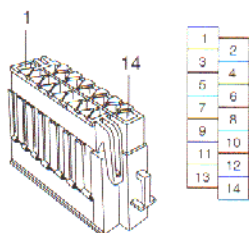

6/32

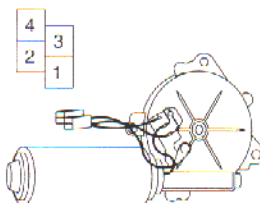


11C/10
11C/33

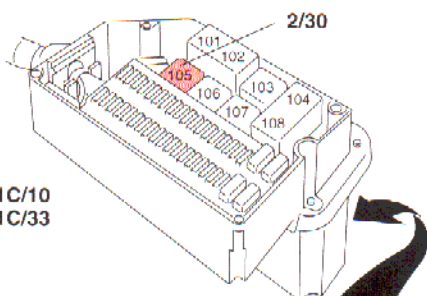


31/51

31/50

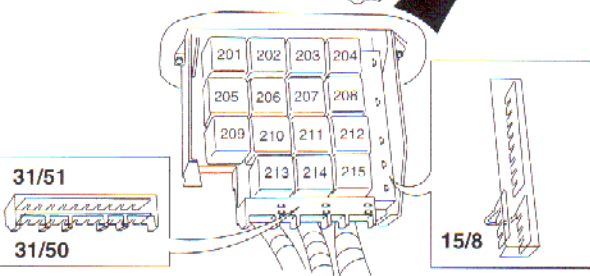


15/8



31/11

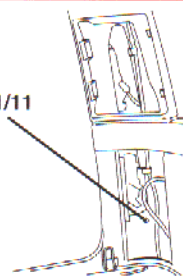


3/13

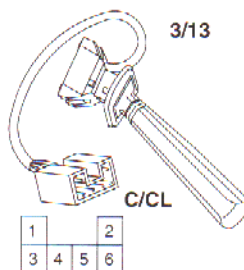


C/CL

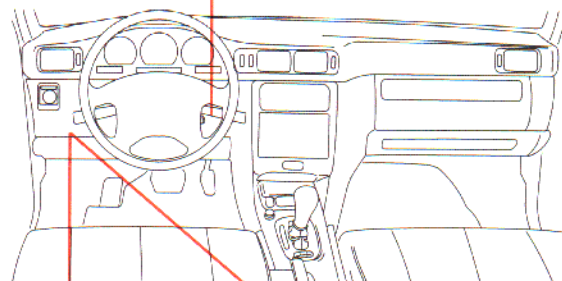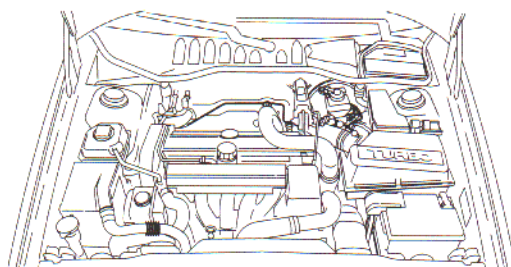


6/30

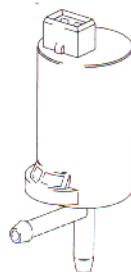









24/2














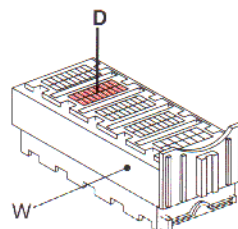


24/3 RHD
24/14 LHD
















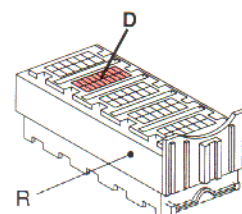


Cigarette lighter/ 12V-output

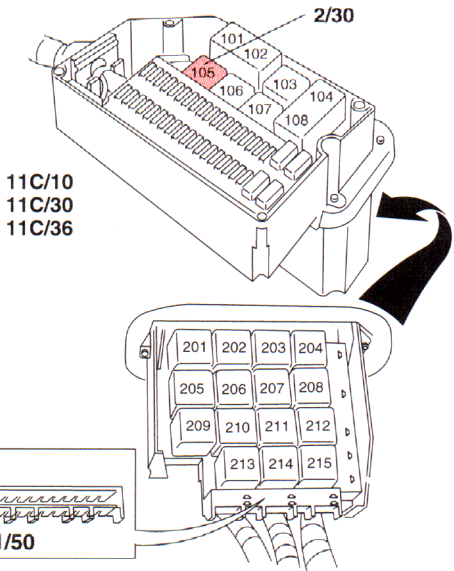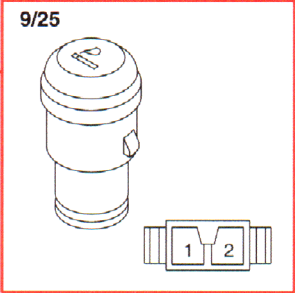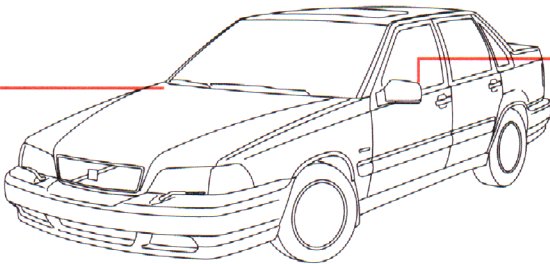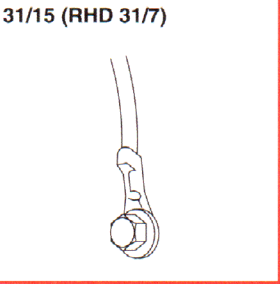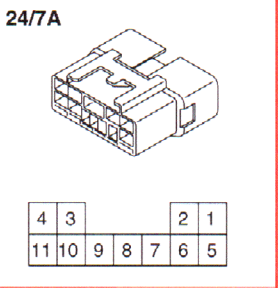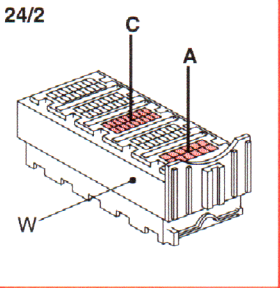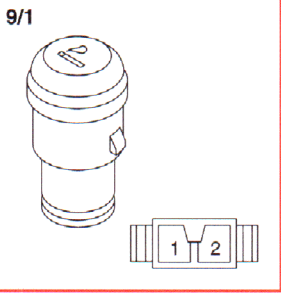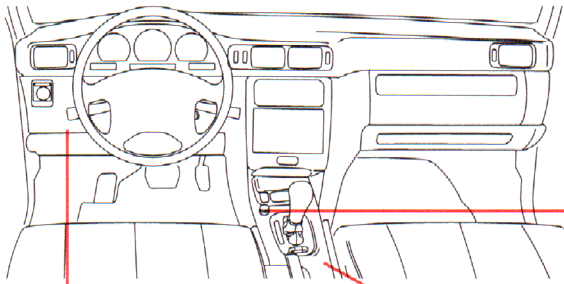

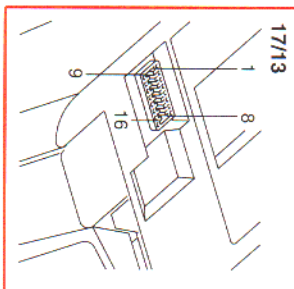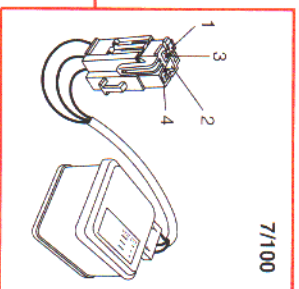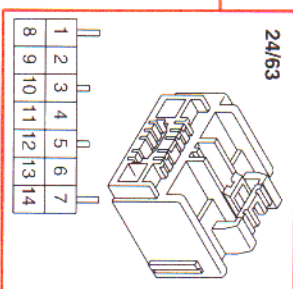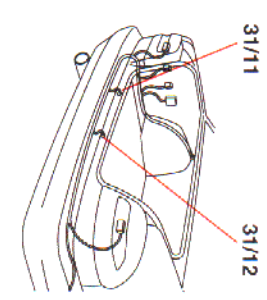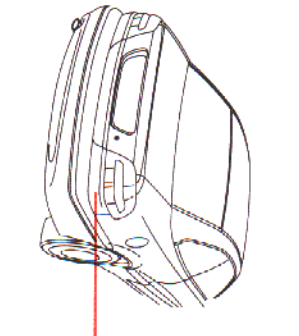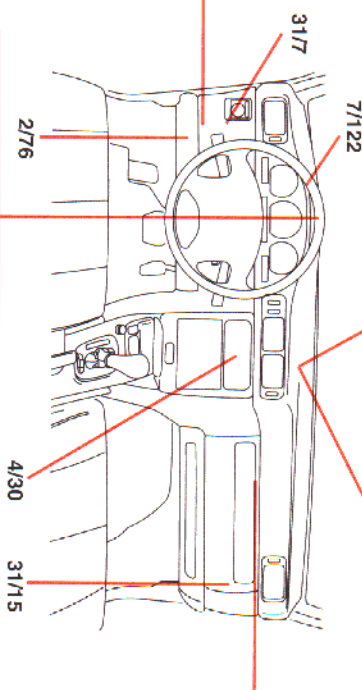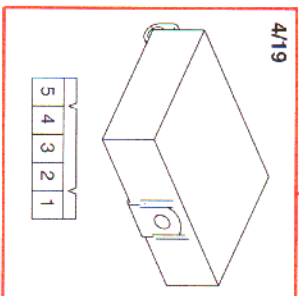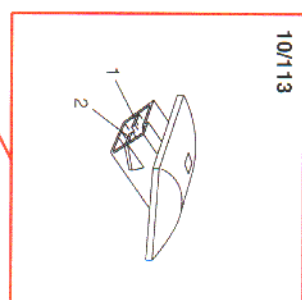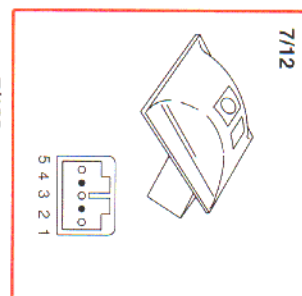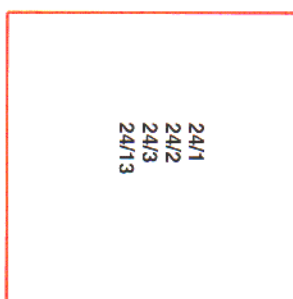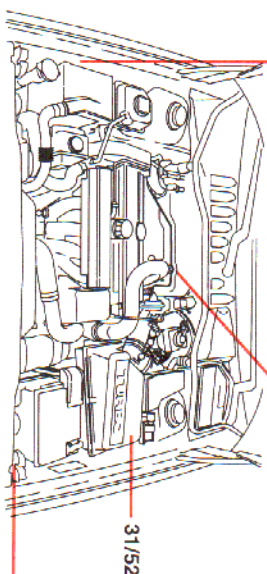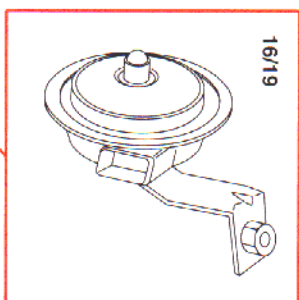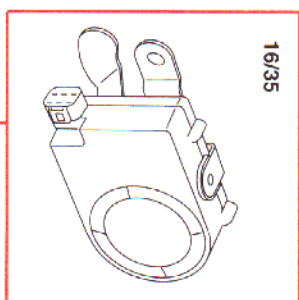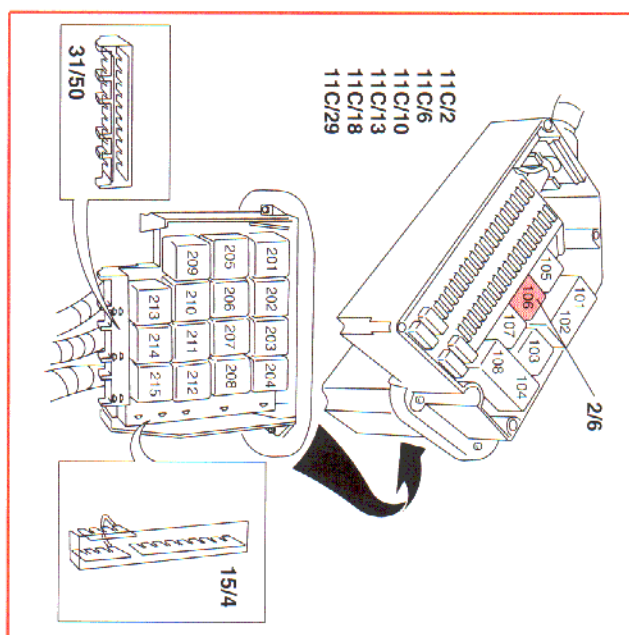


Alarm S70/V70

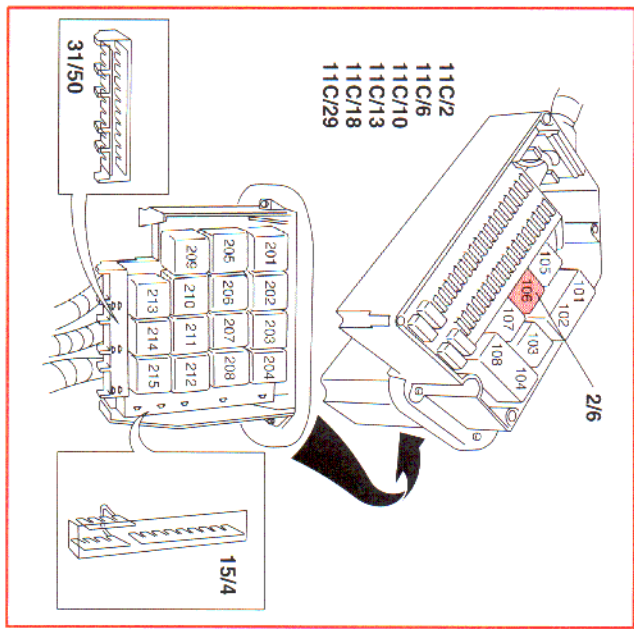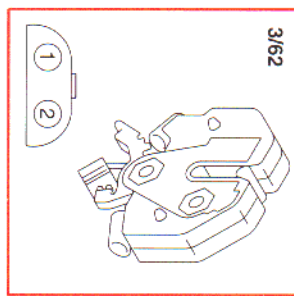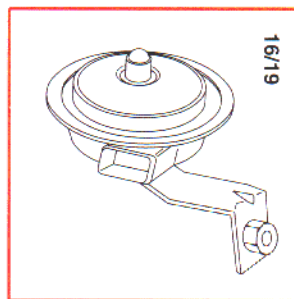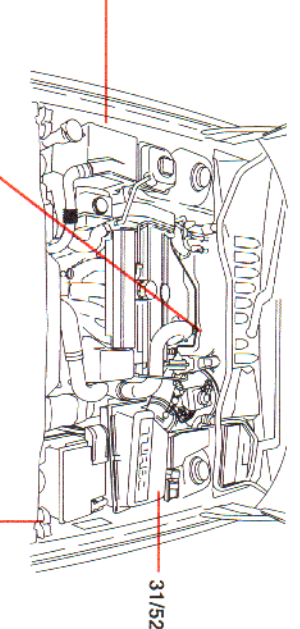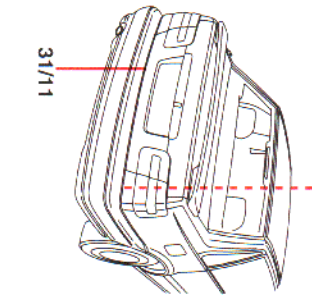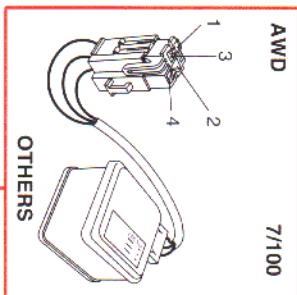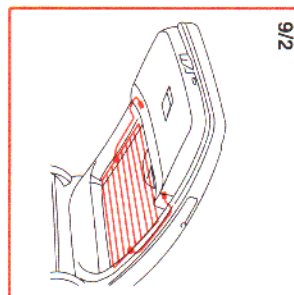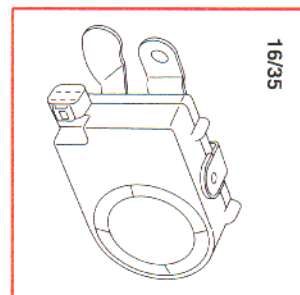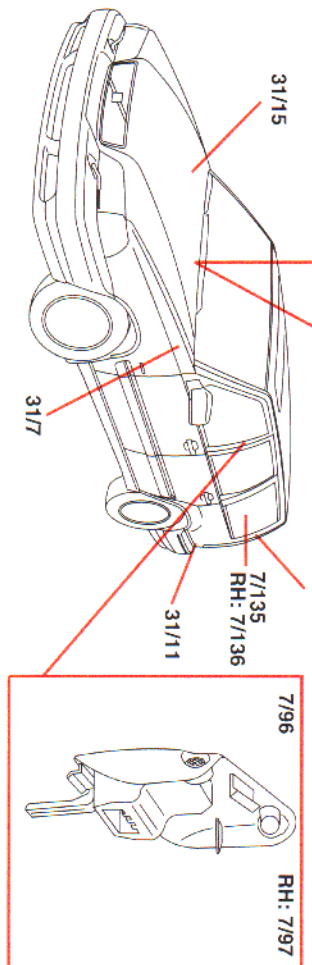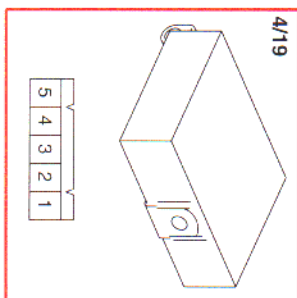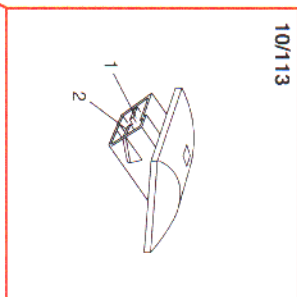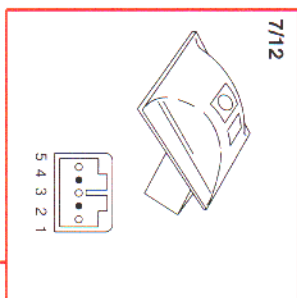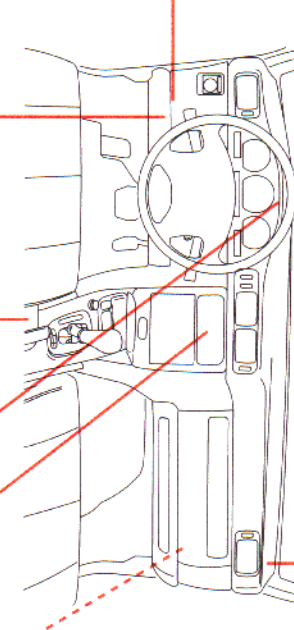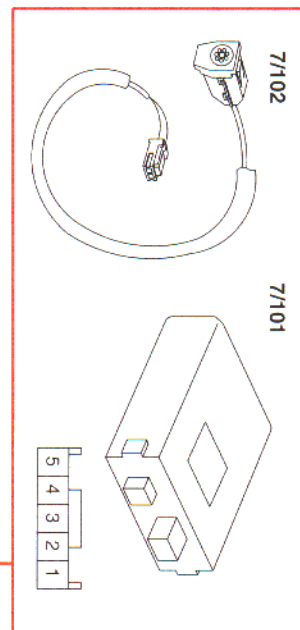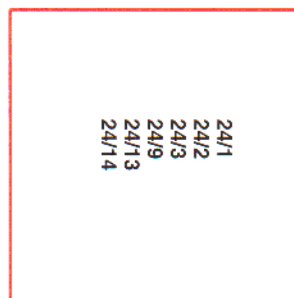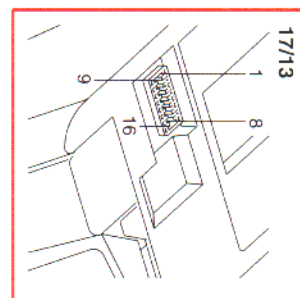


Immobilizer Fenix 5.2, Motronic 4.3/4.4


31/15 (RHD 31/7)

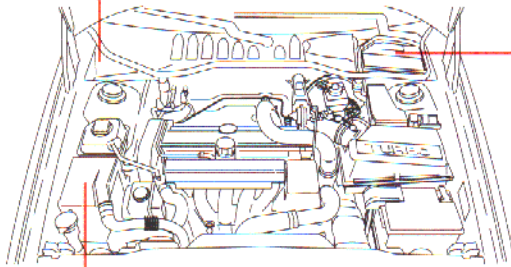


11C/4
11C/8
11C/10

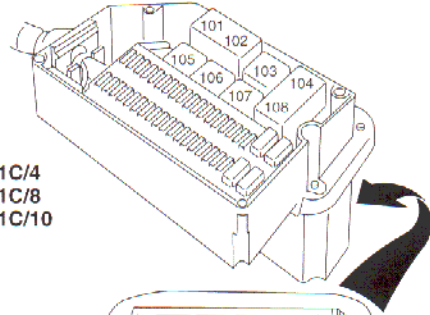


31/51
31/50

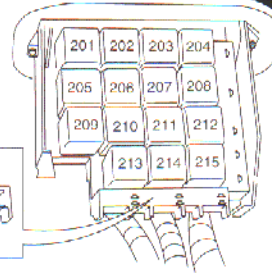


4/46

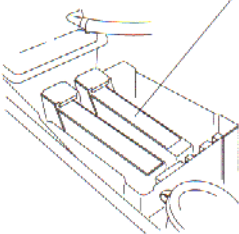


4/30

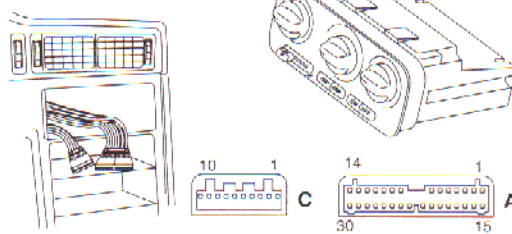


7/12

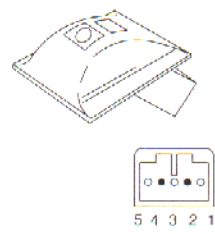


24/2

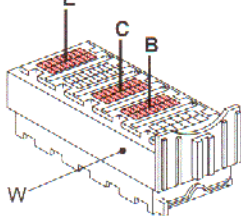


12/76

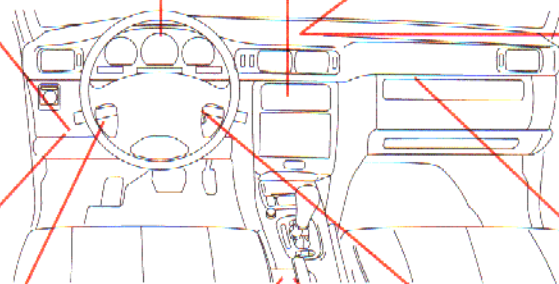


10/113

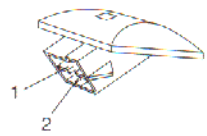


24/13

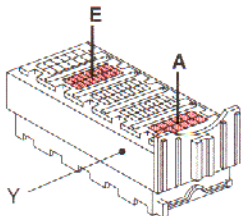


24/63

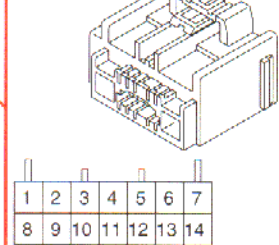


4/22

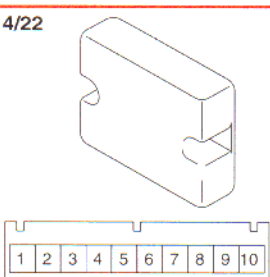


24/7B

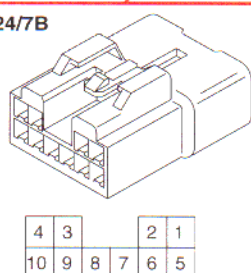



17/13

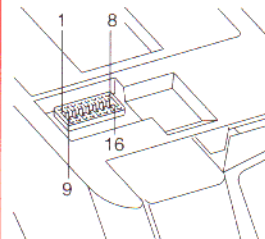


7/39

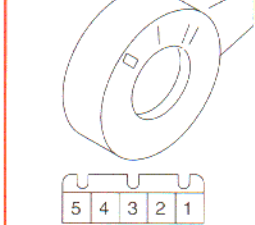

31/15 (RHD 31/7)

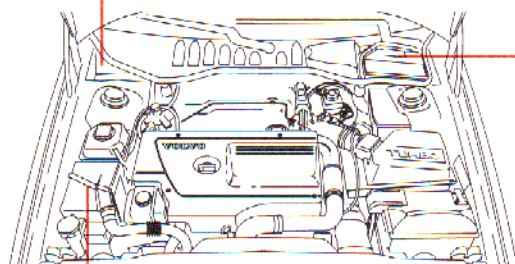 


11C/4
11C/8
11C/10

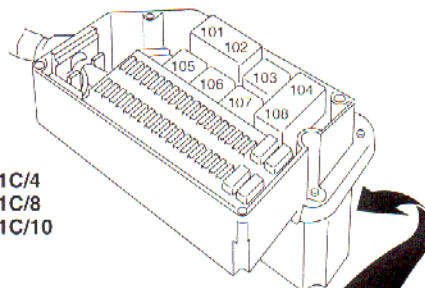


31/51


31/50

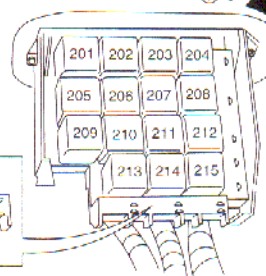


4/46

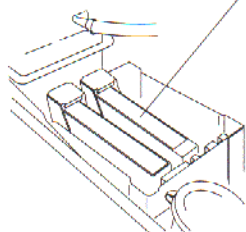


4/30

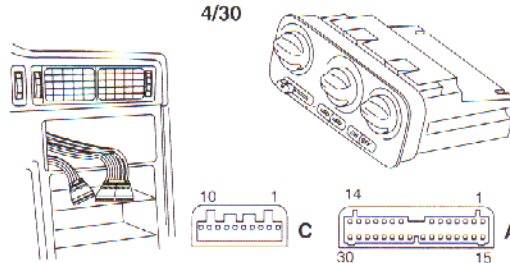


7/12

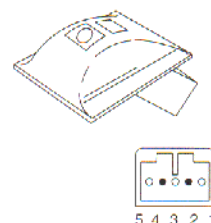


24/2

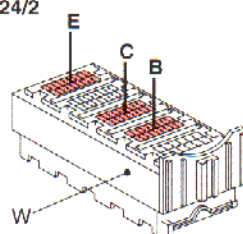


12/76

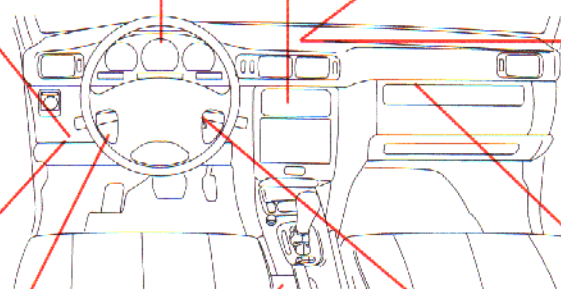


10/113

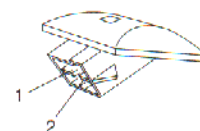


24/13

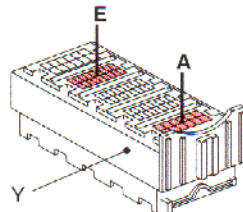


24/63

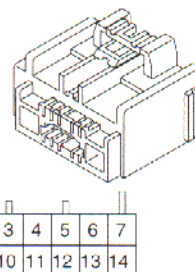


4/22

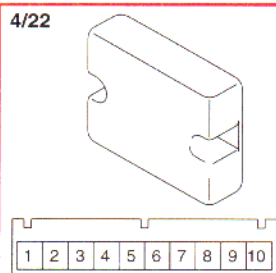


24/7B

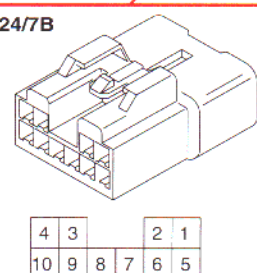

















17/13

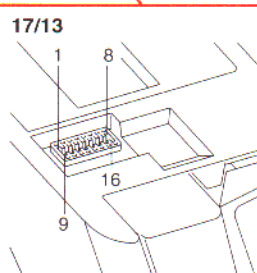

















7/39

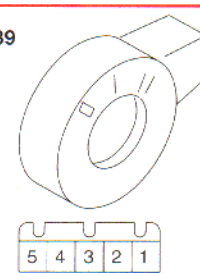












On-board diagnostic system (OBD system) Fenix 5.2, Motronic 4.3/4.4

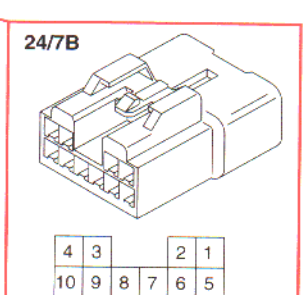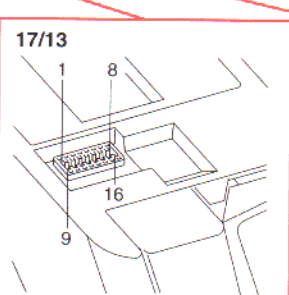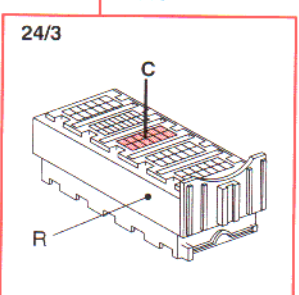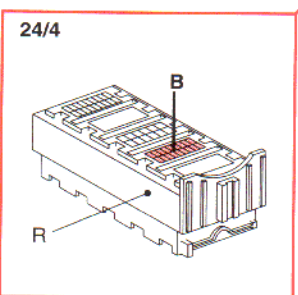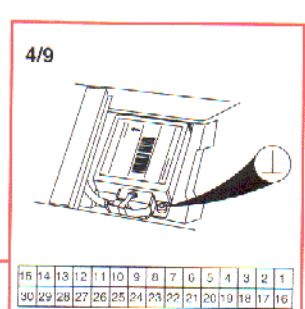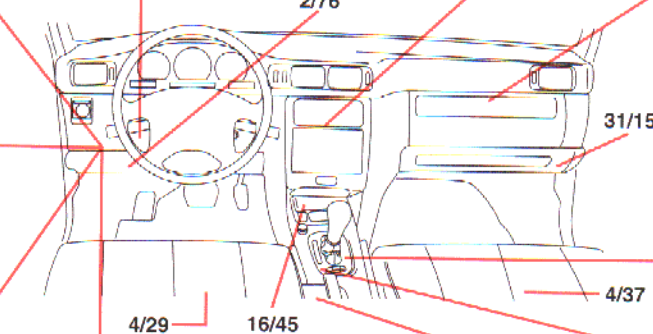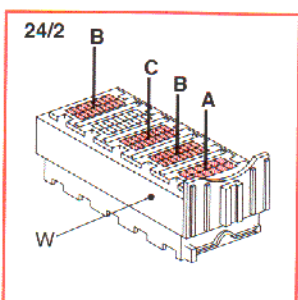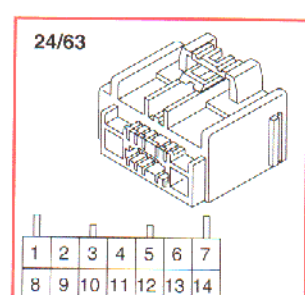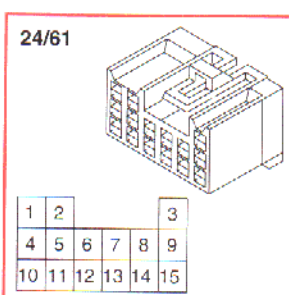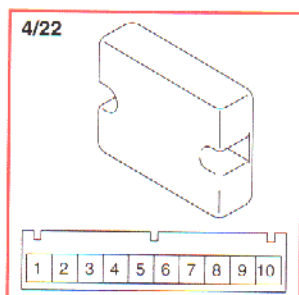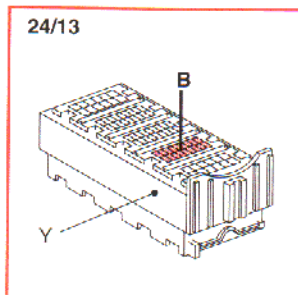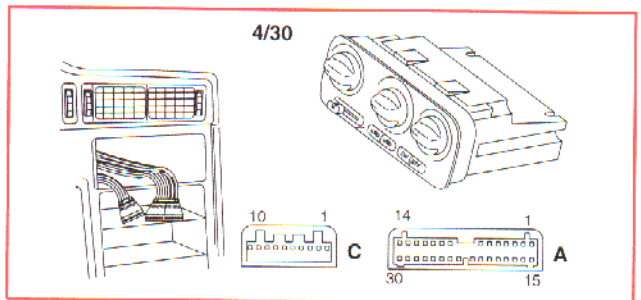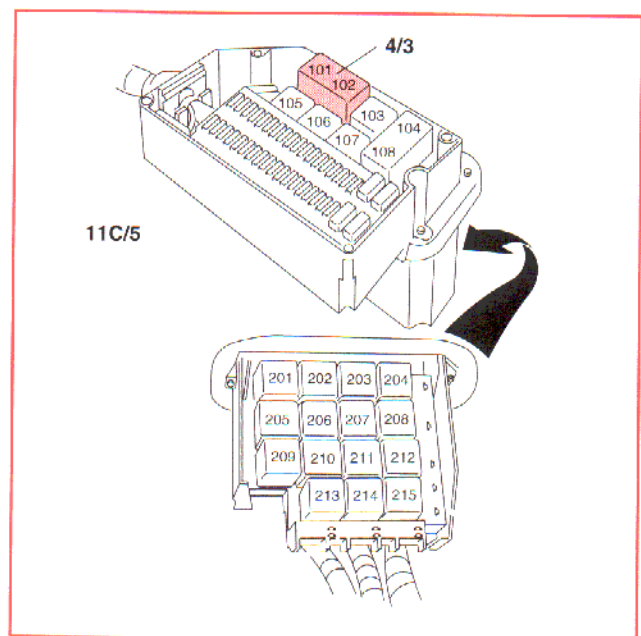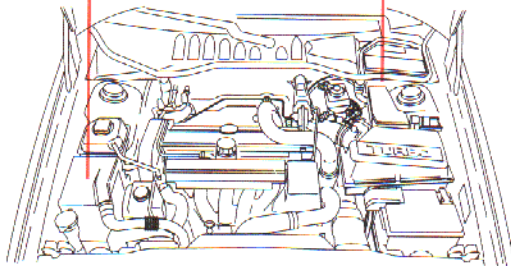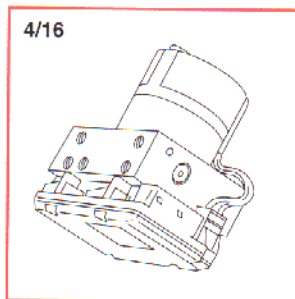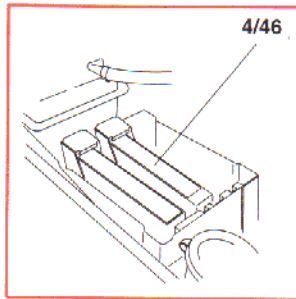










On-board diagnostic system (OBD system) MSA 15.7

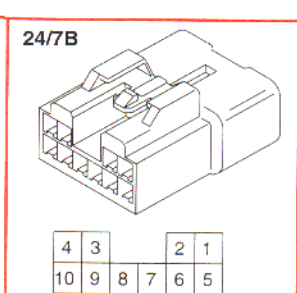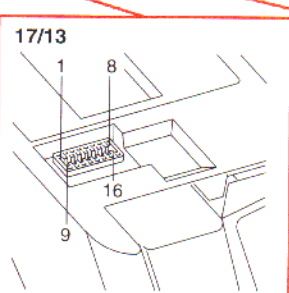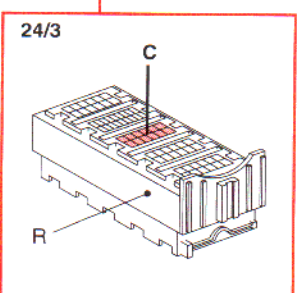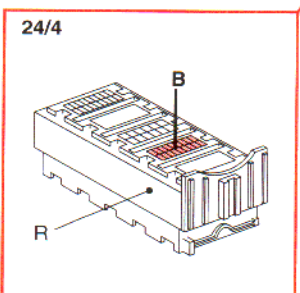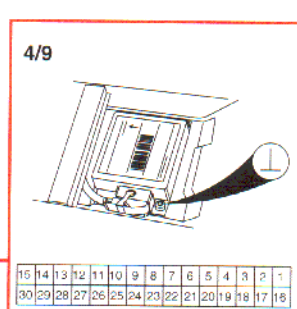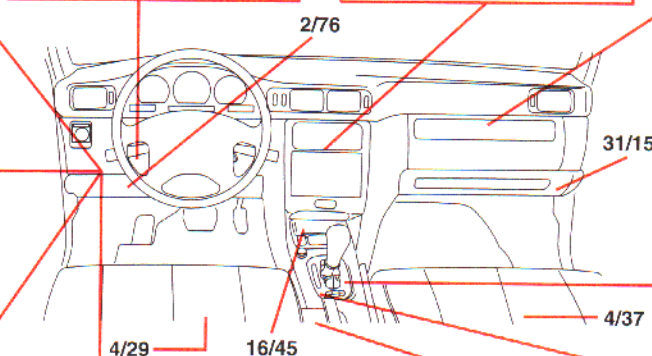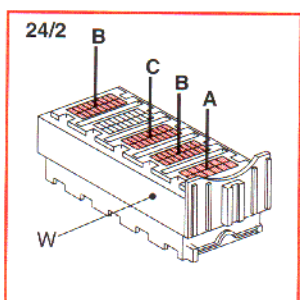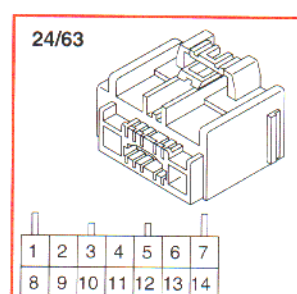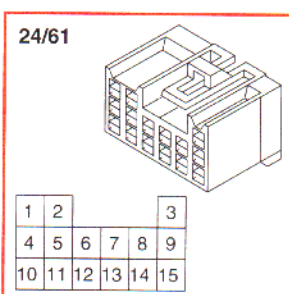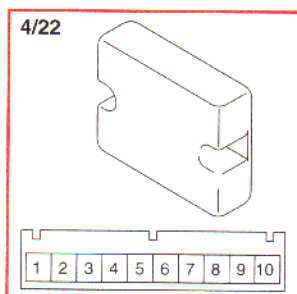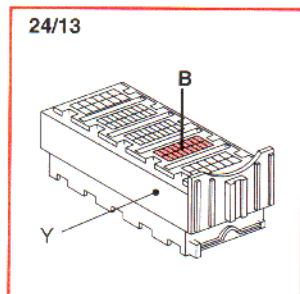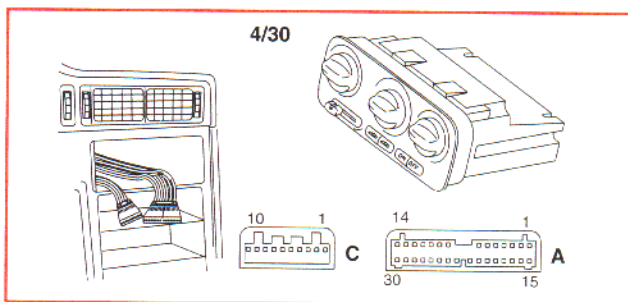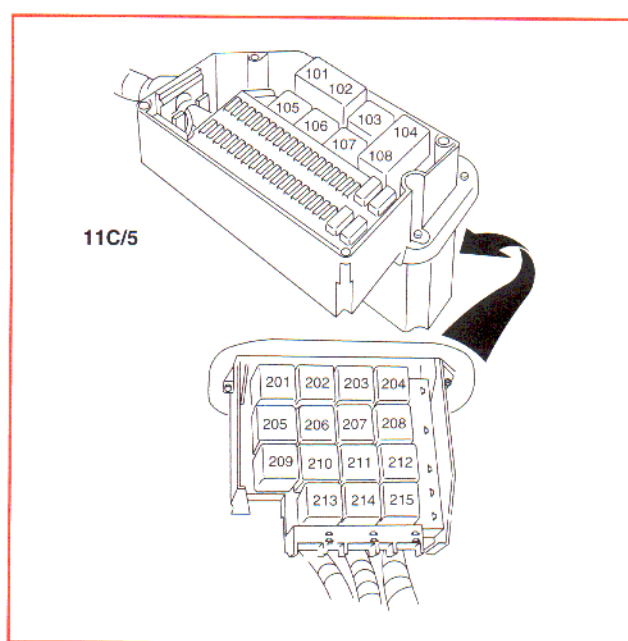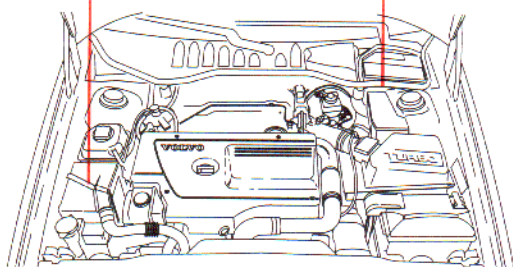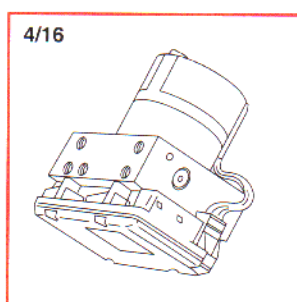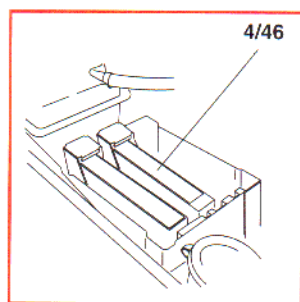


Tow hitch cable harness C70

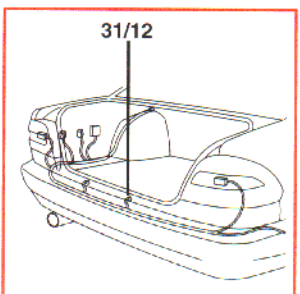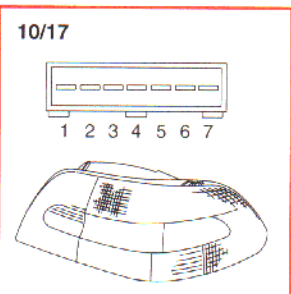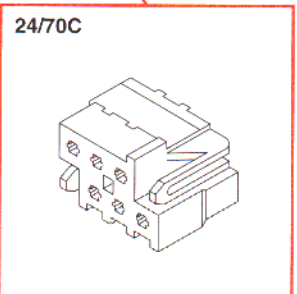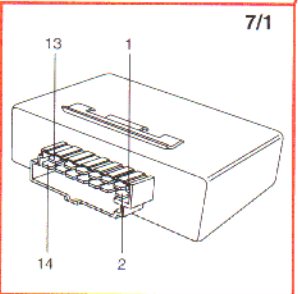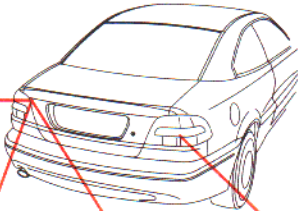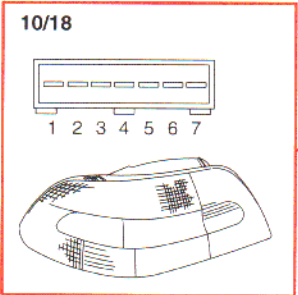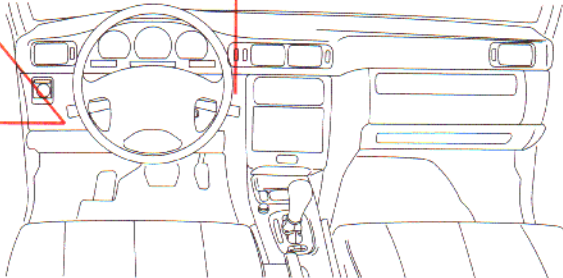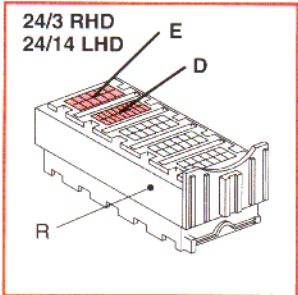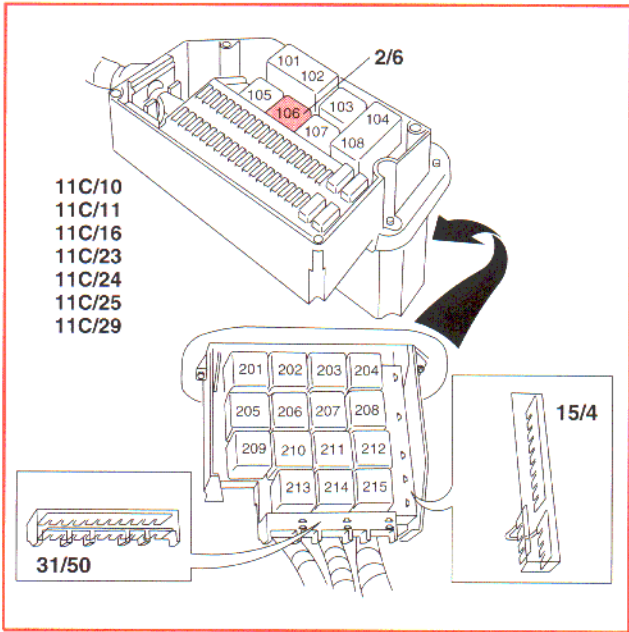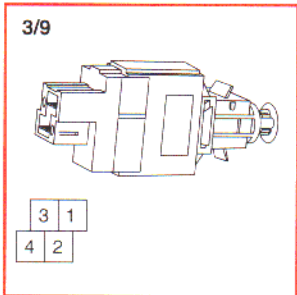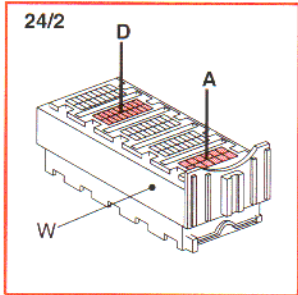


Accessory wiring





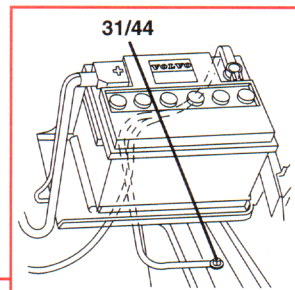
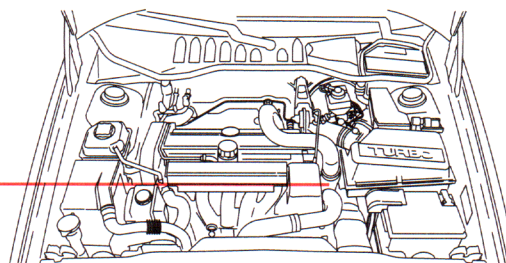
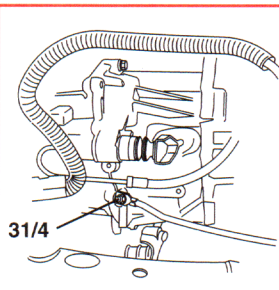
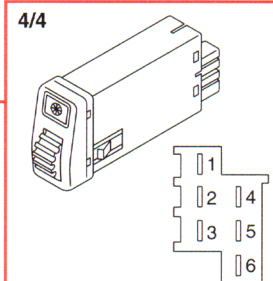
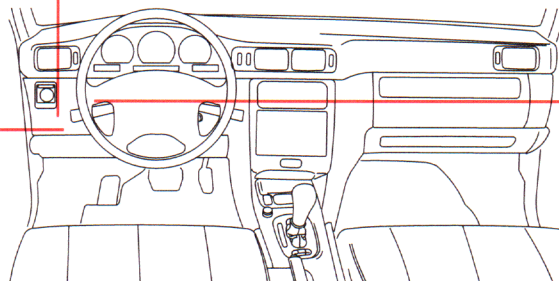
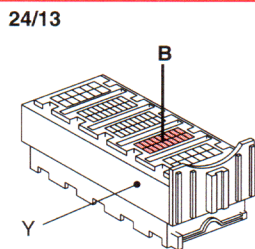
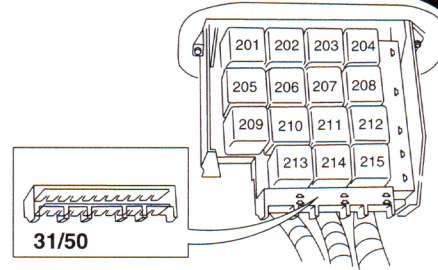
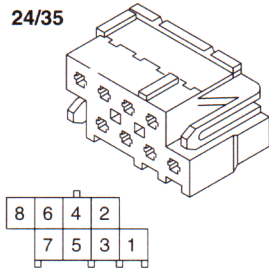
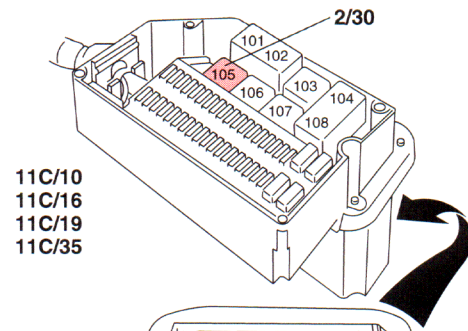


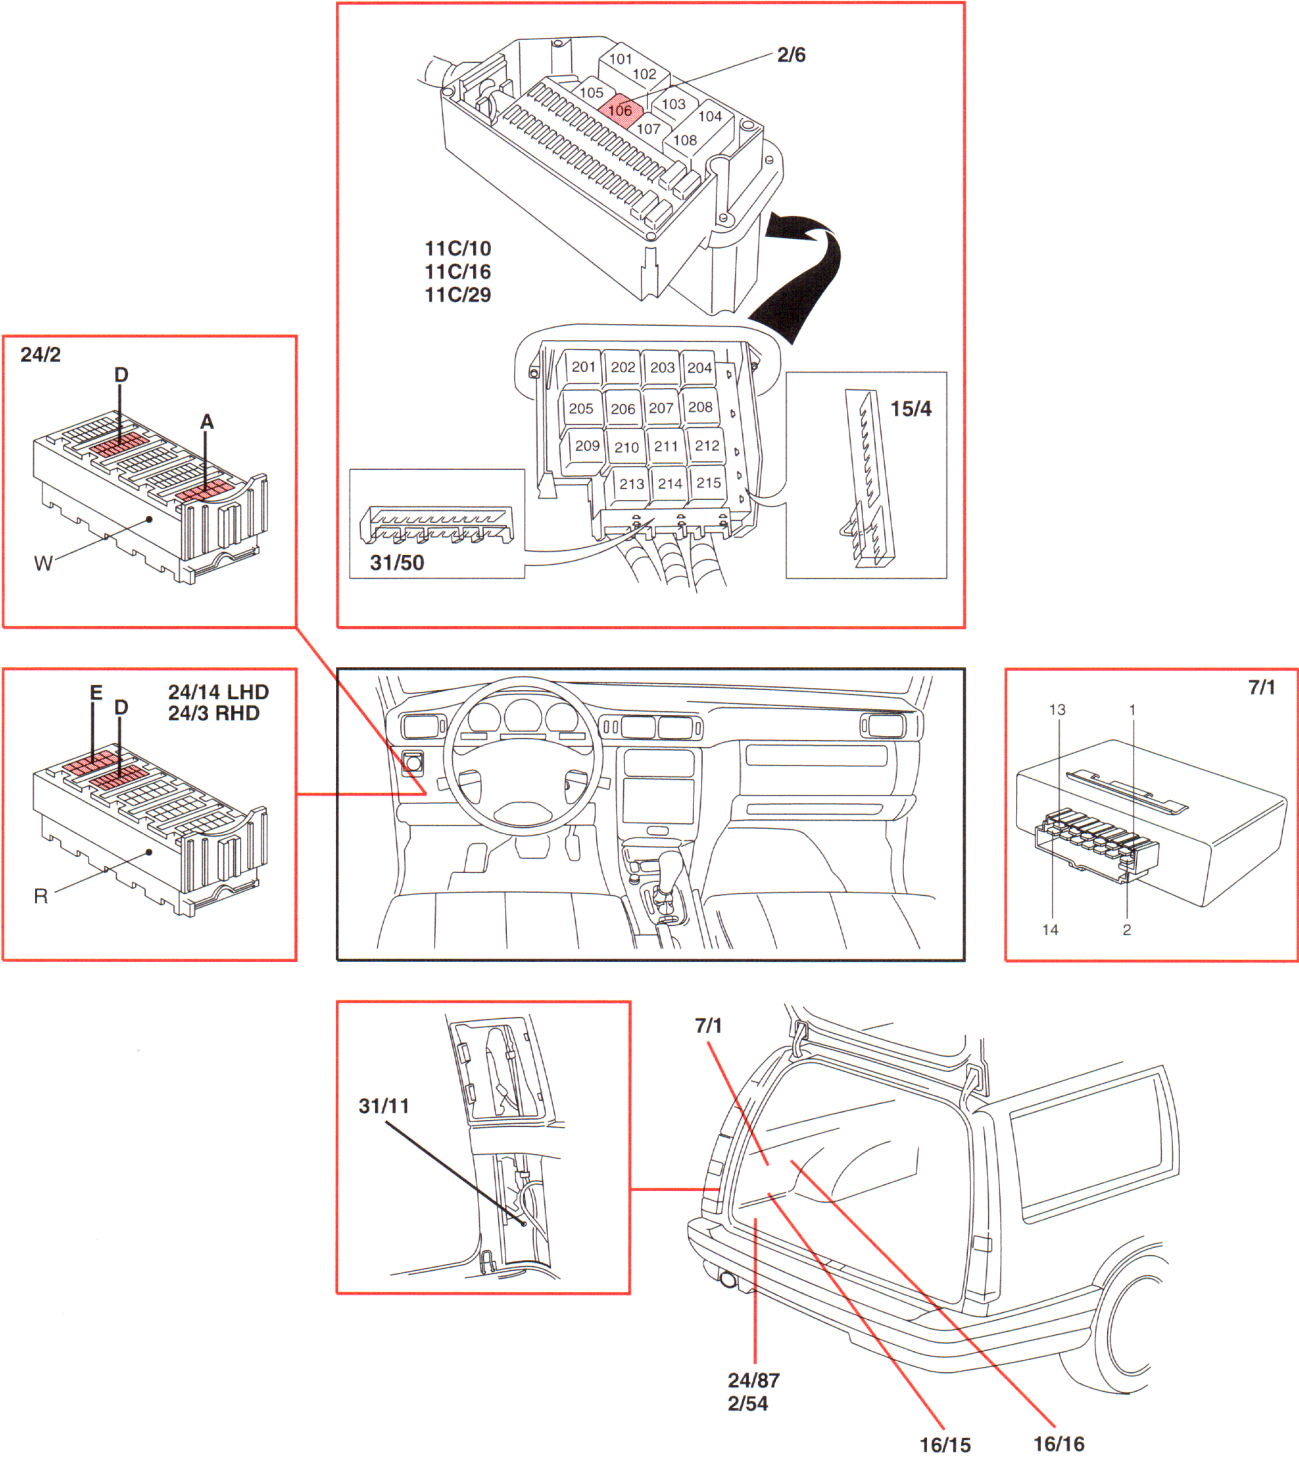














Seat belt reminder

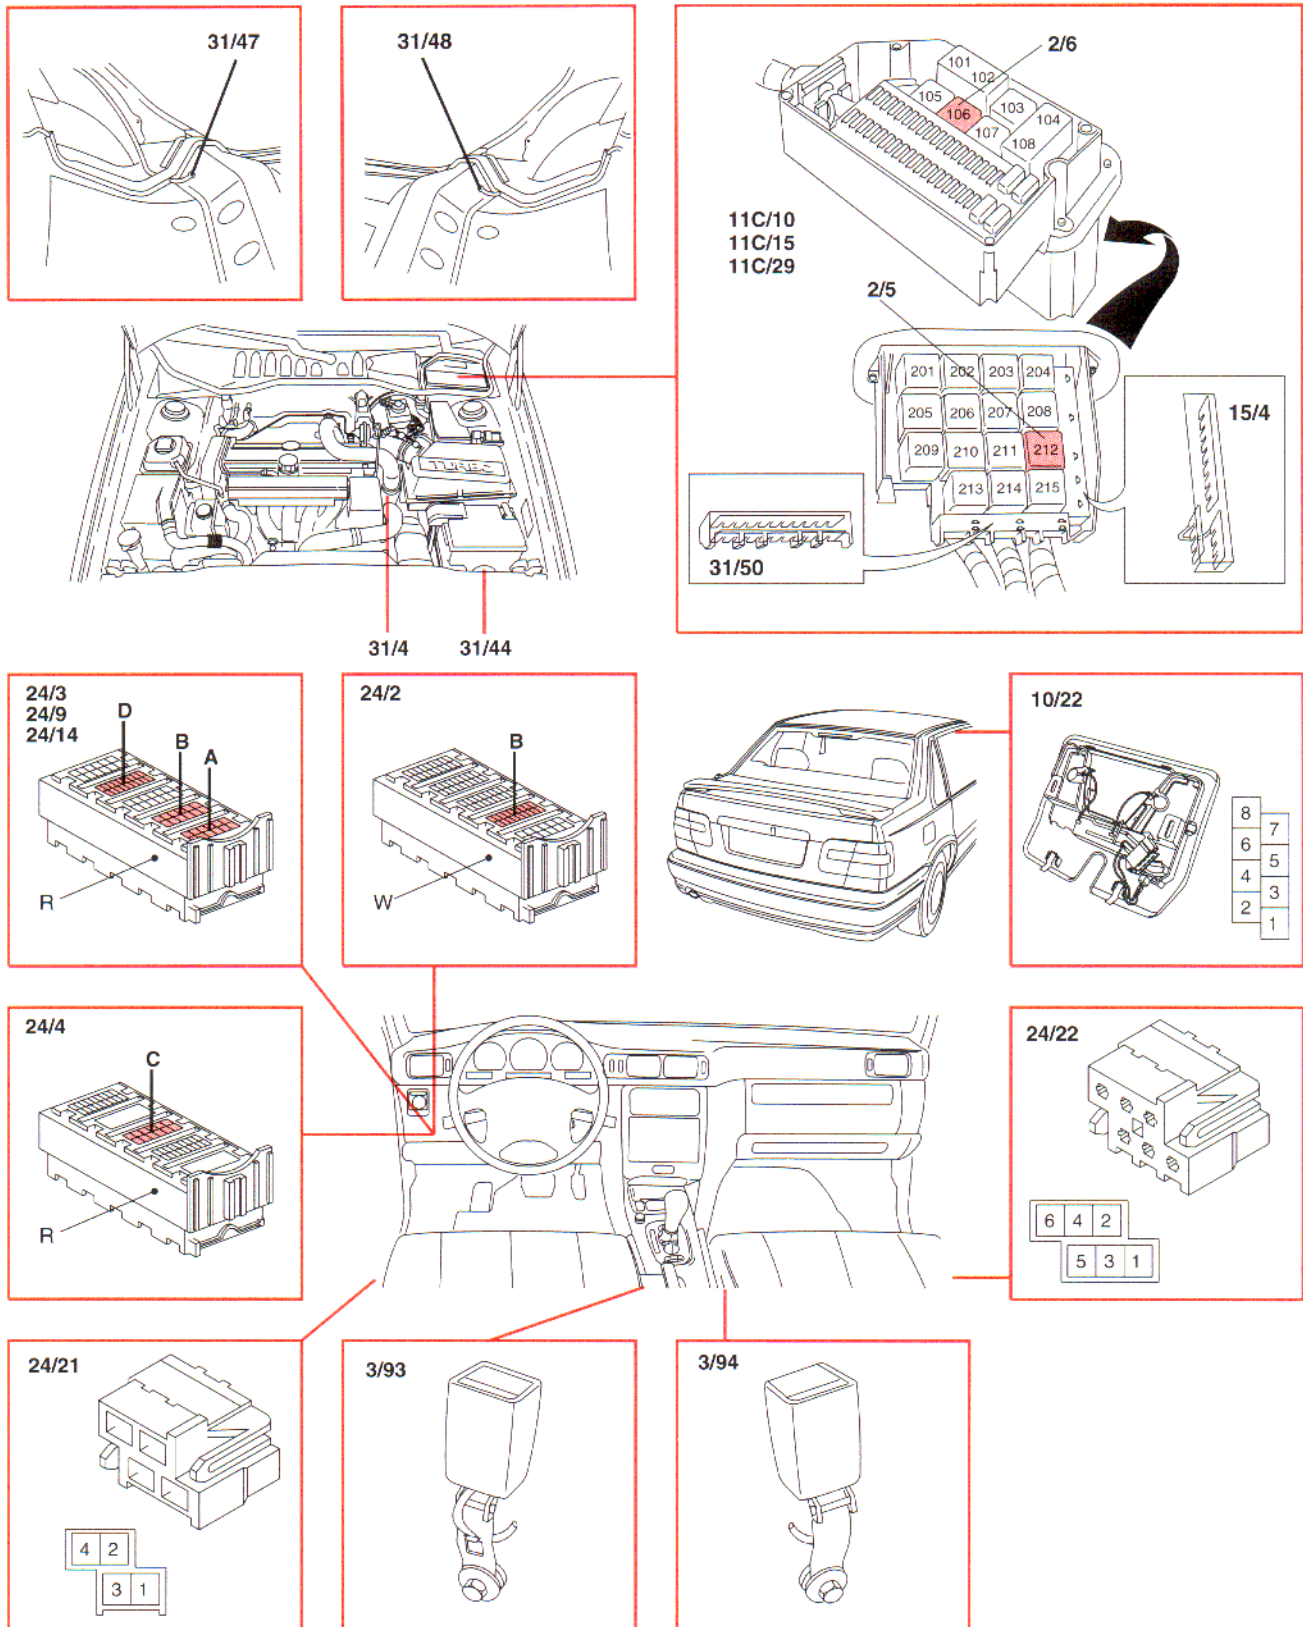


Seat belt reminder and ignition warning USA, Canada and Korea

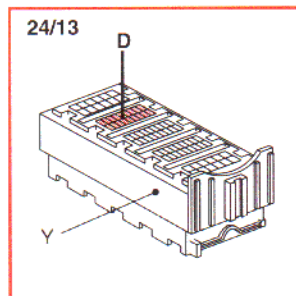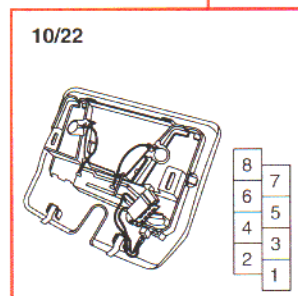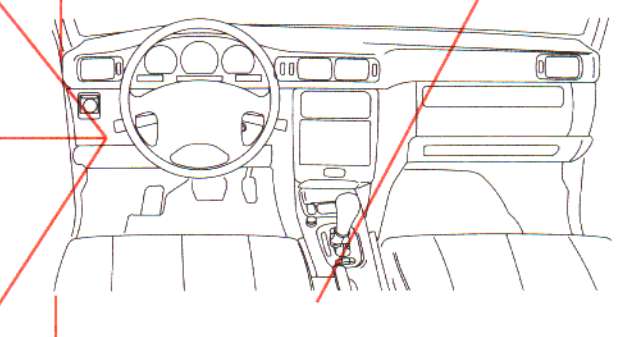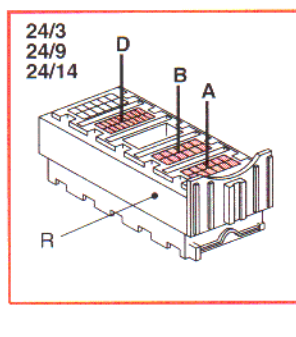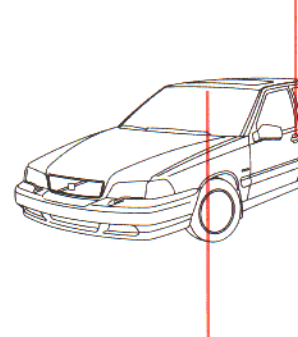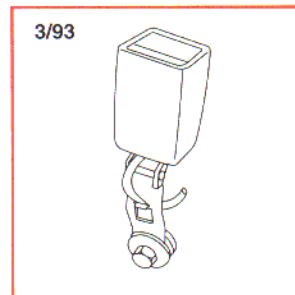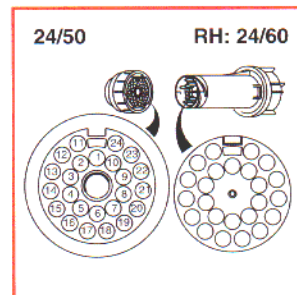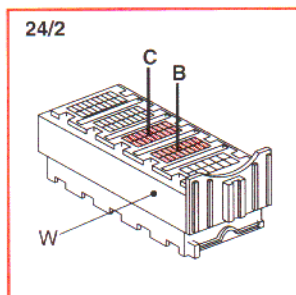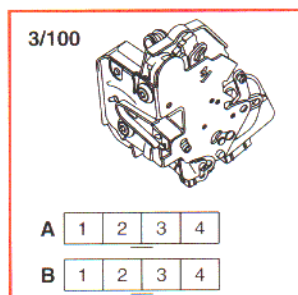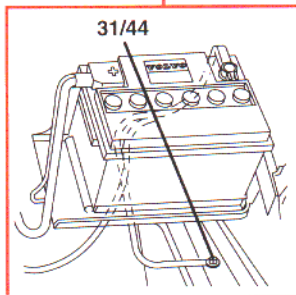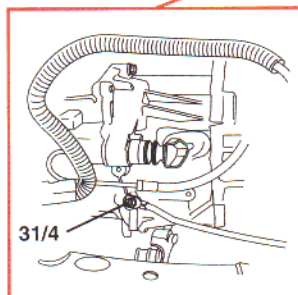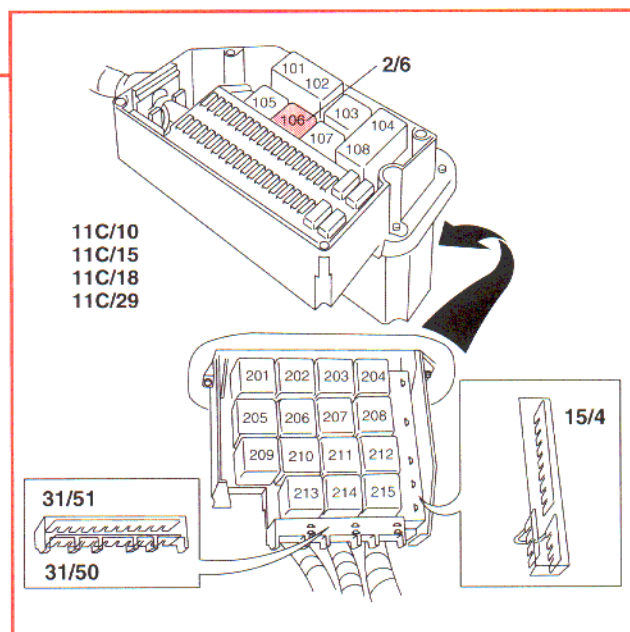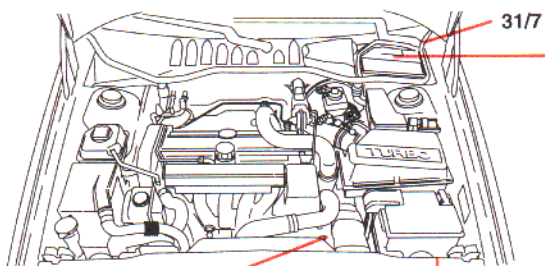















Seat belt reminder and ignition warning Australia

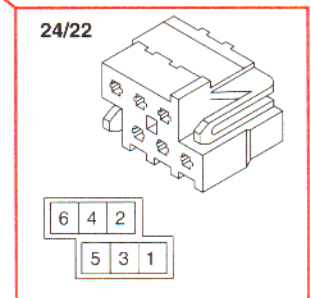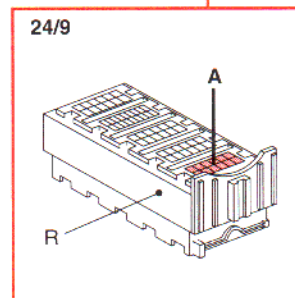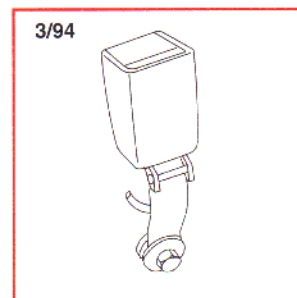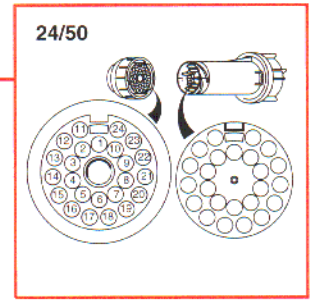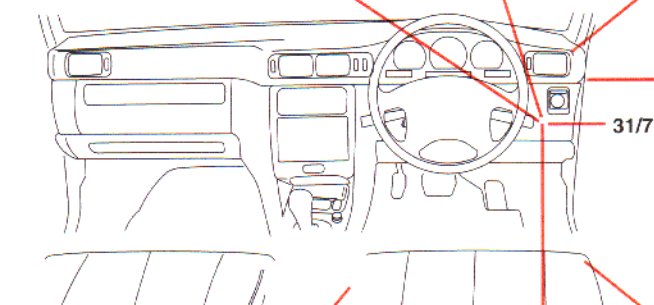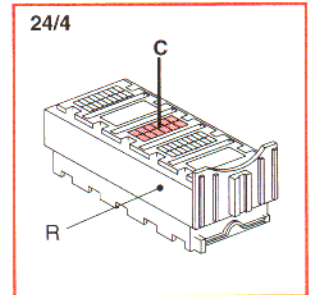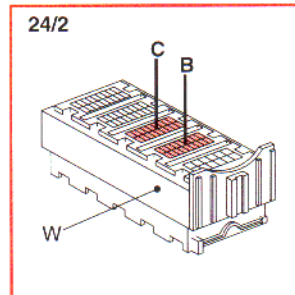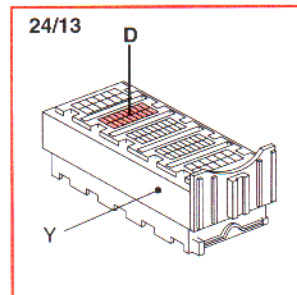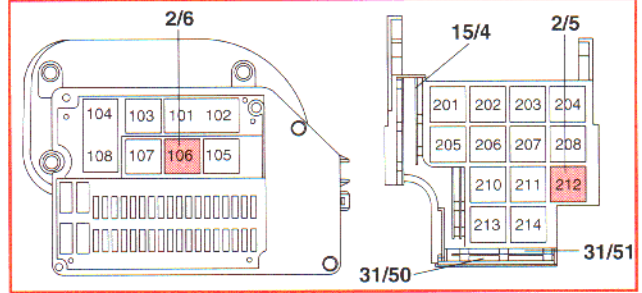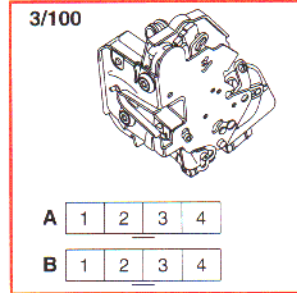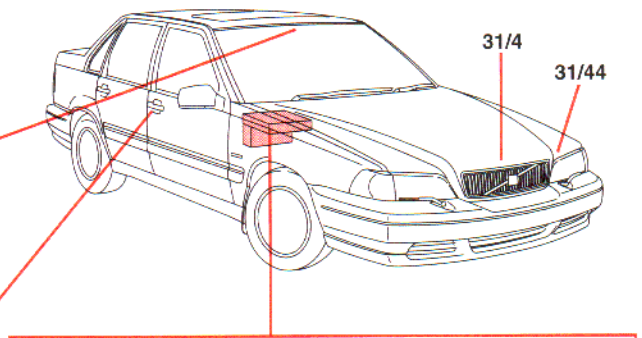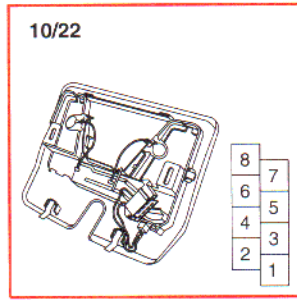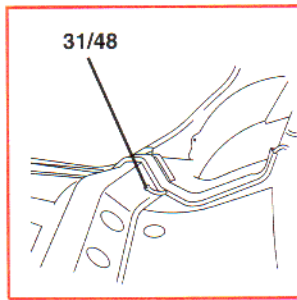


Combined instrument panel

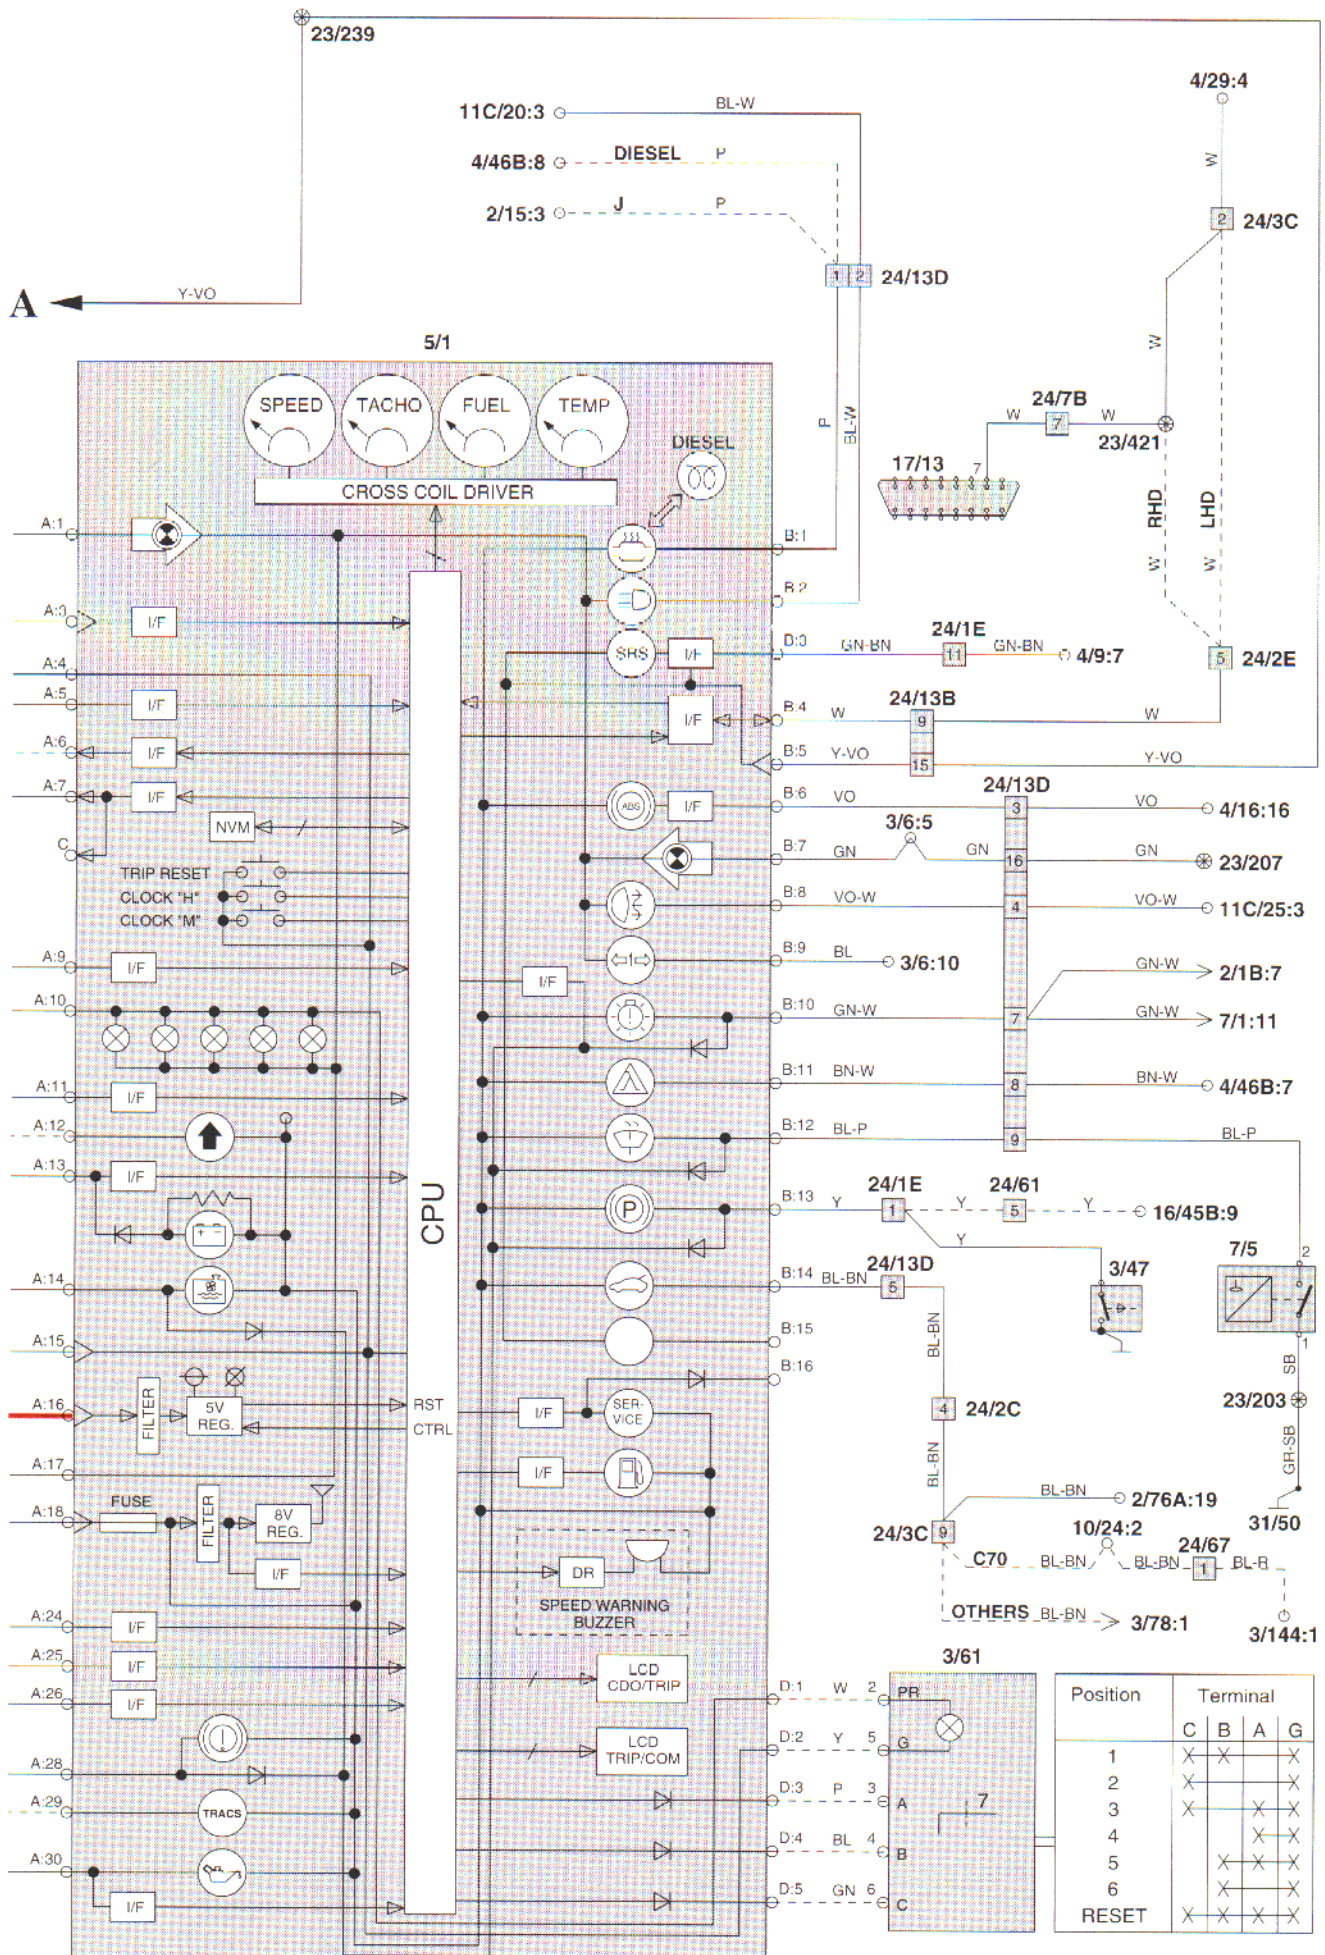

Combined instrument panel

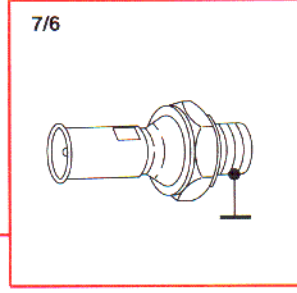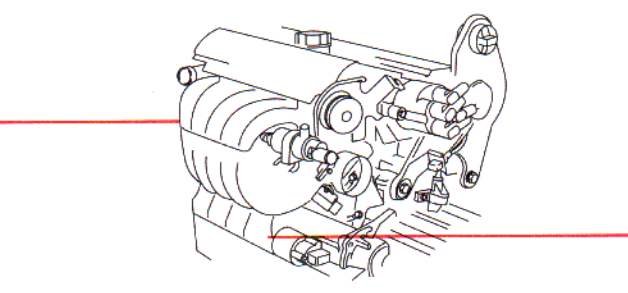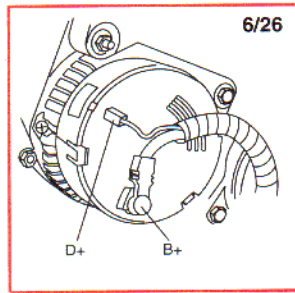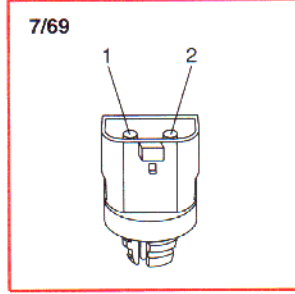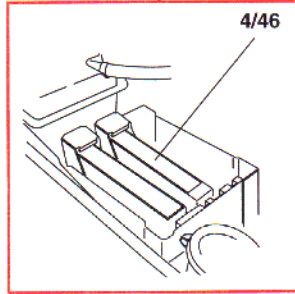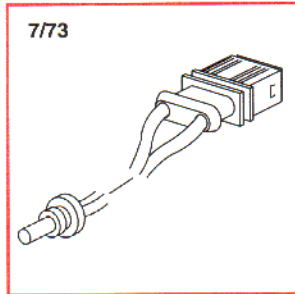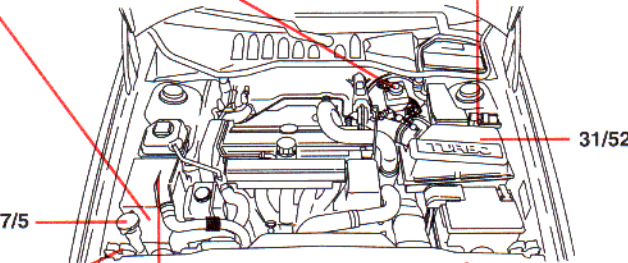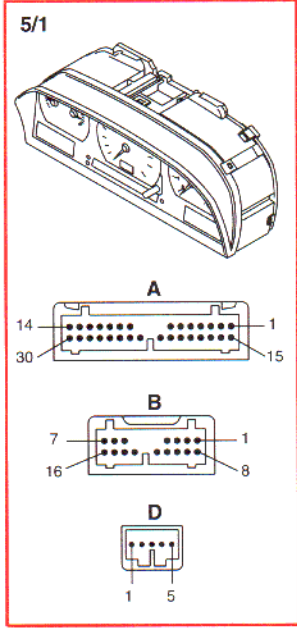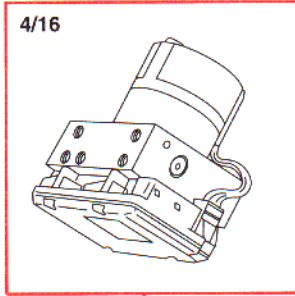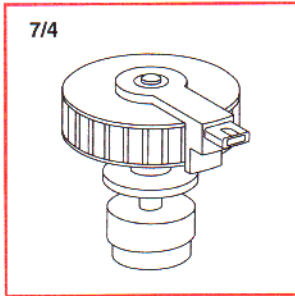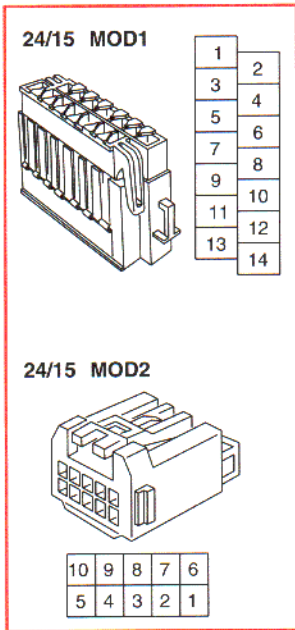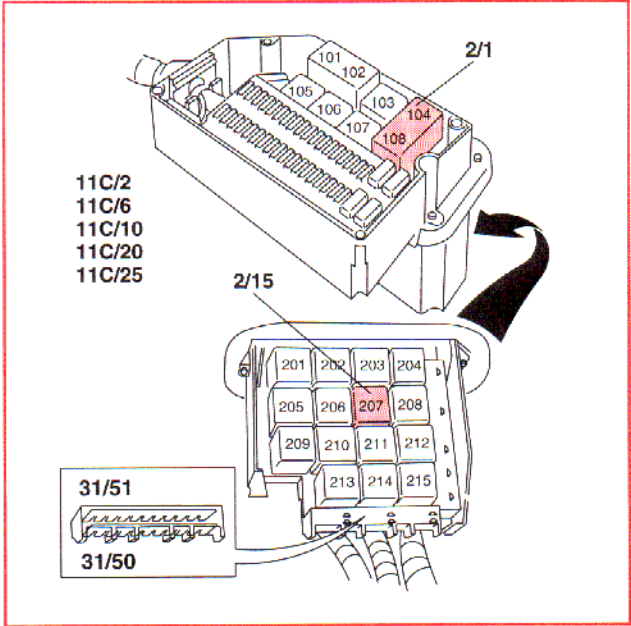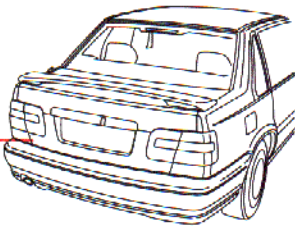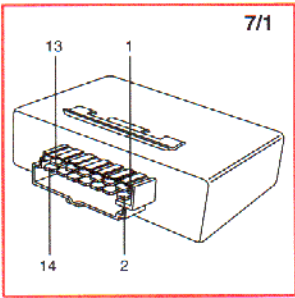

Combined instrument panel

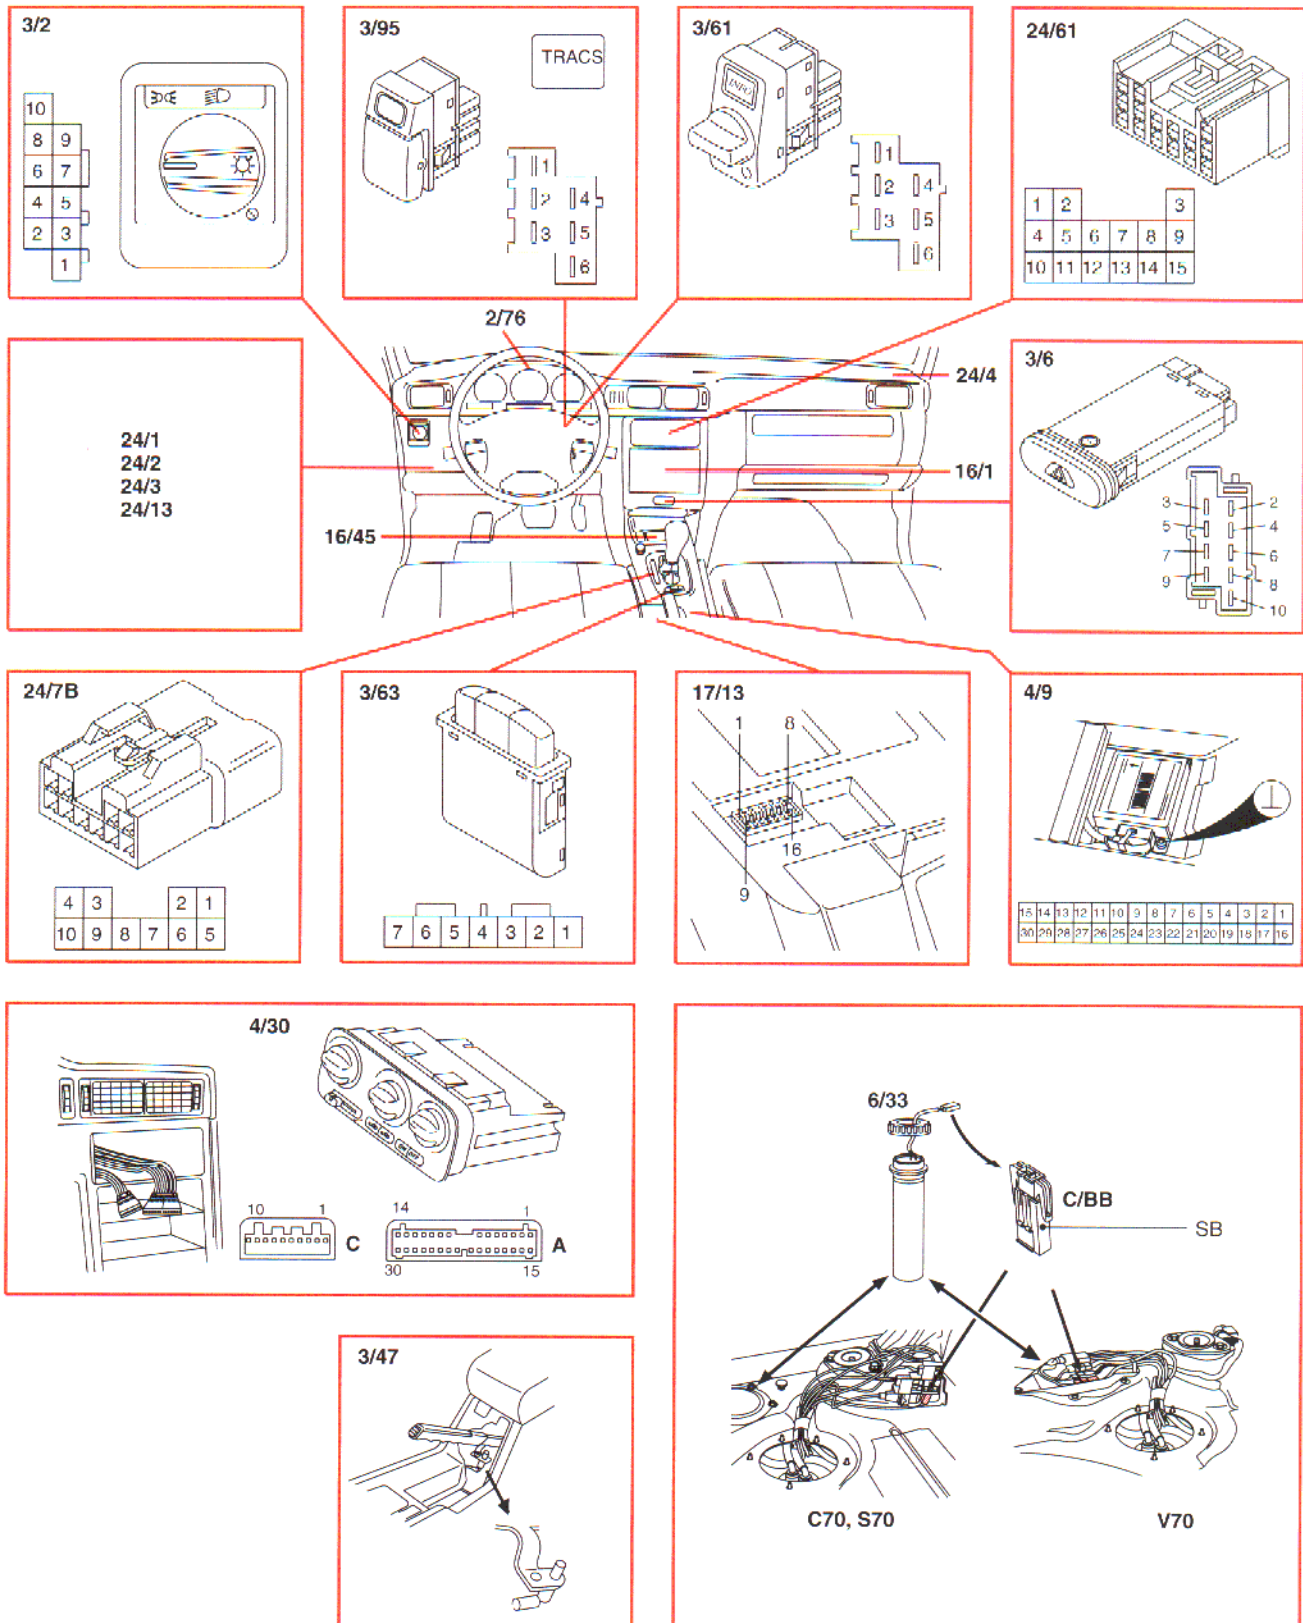

Combined instrument panel

Connectors in combined instrument panel

A 30-pin connector

- 1 turn signal lamp, right (+)
- 2 -
- 3 Speedometer, input signal
- 4 Fuel level sensor (-)
- 5 Fuel level sensor (+)
- 6 Digital speedometer output 48 pulses/revolution
- 7 Digital speedometer output 12 pulses/revolution
- 8 -
- 9 Fuel consumption
- 10 Instrument lighting, Rheostat (+)
- 11 Tachometer, input signal
- 12 Winter program and low gear position (automatic transmission)
- 13 Generator signal, D+
- 14 Engine coolant level switch
- 15 Signal ground (31/51)
- 16 30-supply
- 17 Power ground (31/50)
- 18 15-supply
- 19-23 -
- 24 Outside temperature sensor (+)
- 25 Outside temperature sensor (-)
- 26 Engine Coolant Temperature (ECT) sensor
- 27 -
- 28 Brake fluid level switch (-)
- 29 TRACS
- 30 Oil pressure switch (-)

B 16-pin connector

- 1 Exhaust temperature sensor (-), Diesel pre-heating
- 2 High beam (+)
- 3 SRS Sensor
- 4 Data link connector (DLC)
- 5 X-supply
- 6 ABS brake system
- 7 Turn signal lamp, left (+)
- 8 Fog tail lamp (+)
- 9 Turn signal lamp trailer (+)
- 10 Bulb failure warning sensor (-)
- 11 Check engine (-)
- 12 Washer fluid level switch (-)
- 13 Parking brake switch (-)
- 14 Tailgate open
- 15-16 -

C 1-pin connector

Digital speedometer output, 12 pulses/revolution (for accessories)


D 5-pin connector




















- 1 Instrument lighting, Rheostat (+)
- 2 Signal ground (31/51)
- 3 Function signal
- 4 Function signal
- 5 Function signal


















Instrument lamps

- 1 Exhaust temperature indicator lamp
- 2 SRS indicator lamp
- 3 Winter program indicator lamp/shift indicator
- 4 ABS warning lamp
- 5 Parking brake indicator lamp
- 6 Brake warning lamp
- 7 High beam warning lamp
- 8 Oil pressure indicator lamp
- 9 Ignition light
- 10 Bulb failure warning lamp
- 11 Fog tail lamp indicator lamp
- 12 Windshield washer reservoir level indicator lamp
- 13 Service reminder indicator (SRI)
- 14 Tailgate indicator lamp
- 15 Fuel level indicator lamp
- 16 Check engine indicator lamp
- 17 TRACS indicator lamp
- 18 Engine coolant level indicator lamp
- 19 Trailer indicator lamp



Combined instrument panel

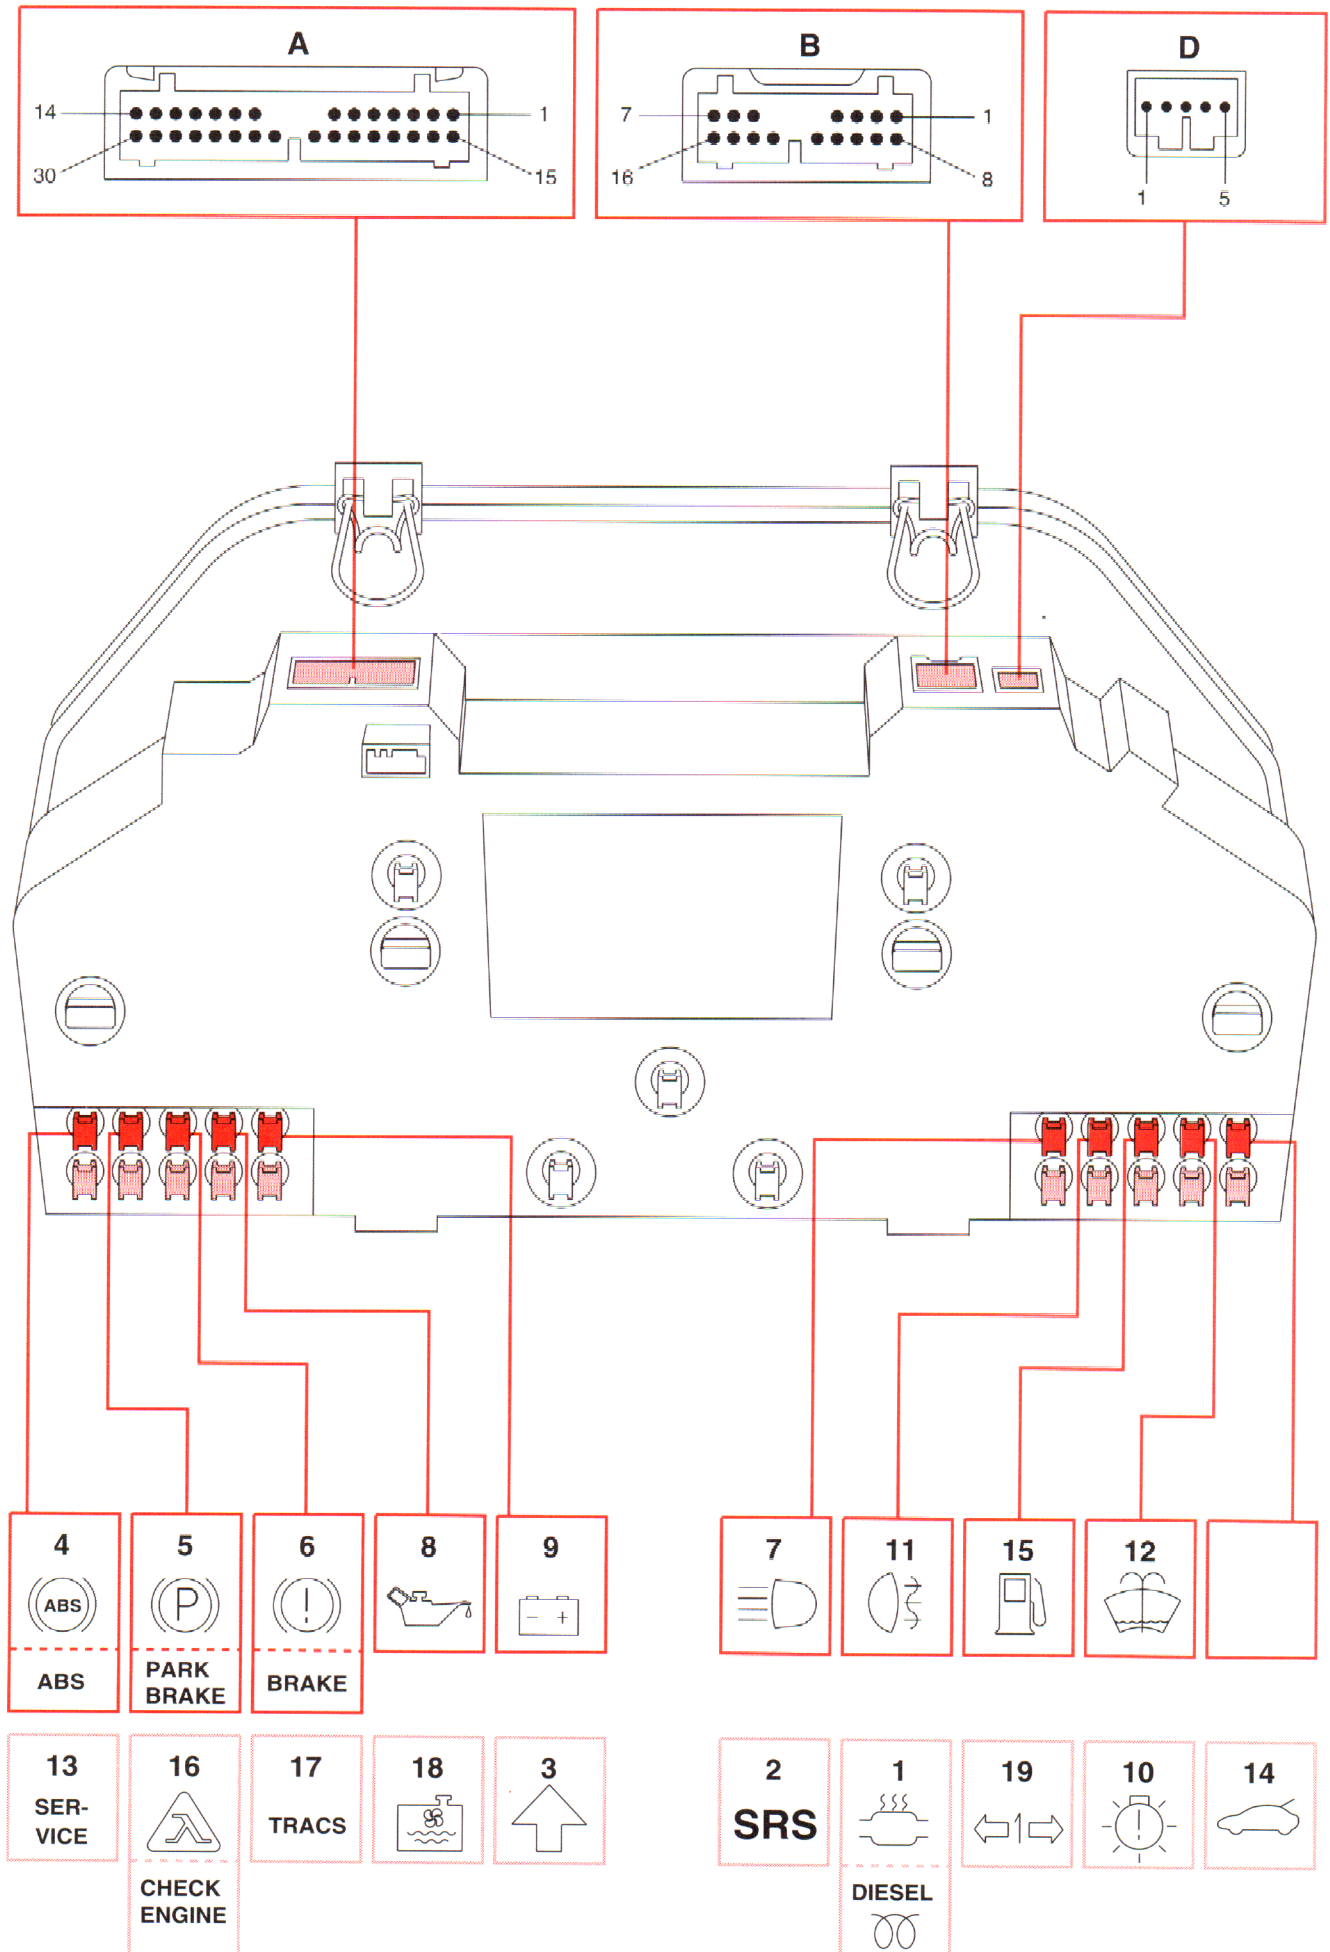

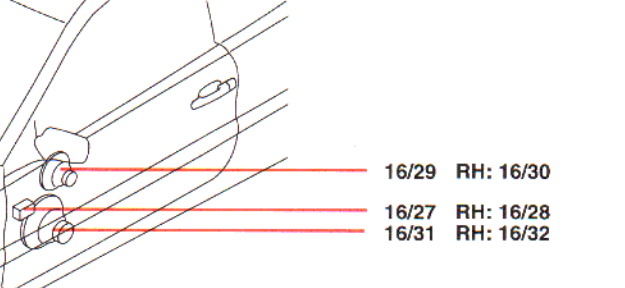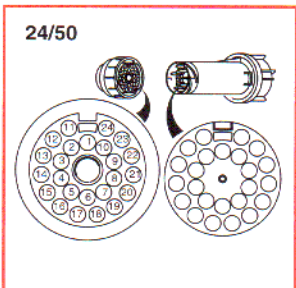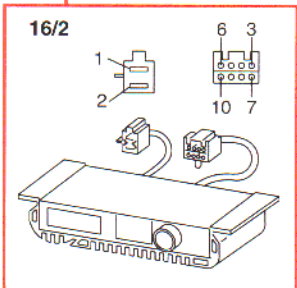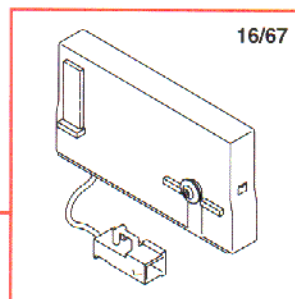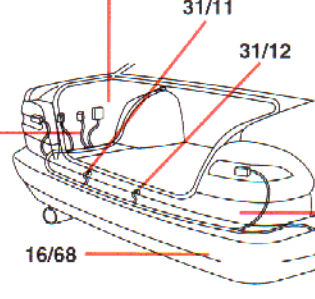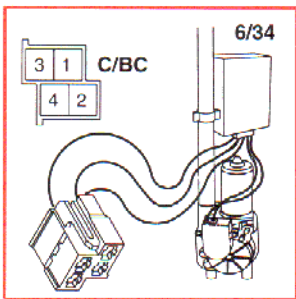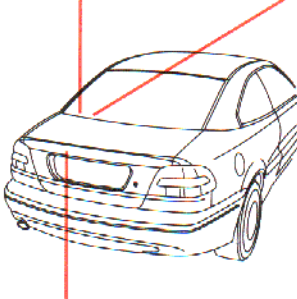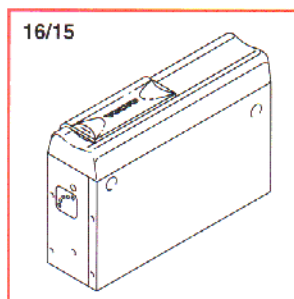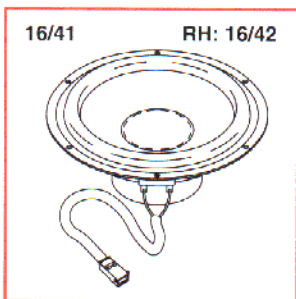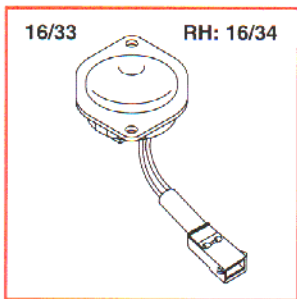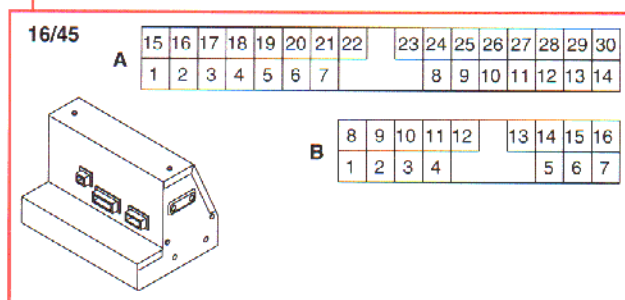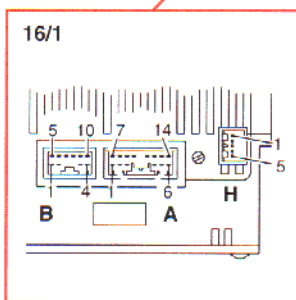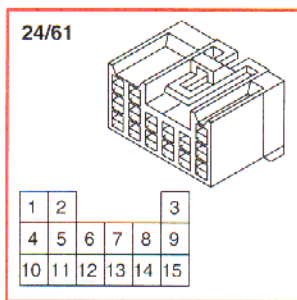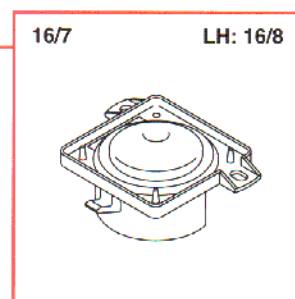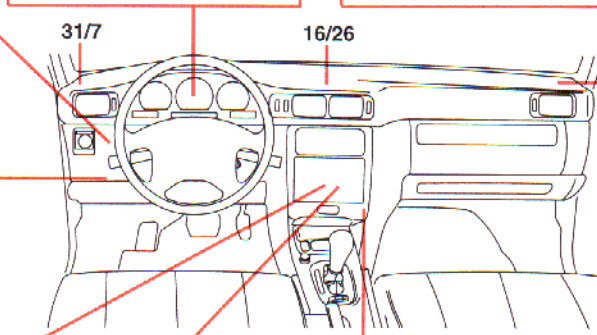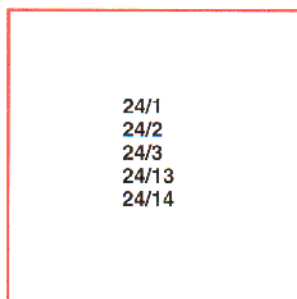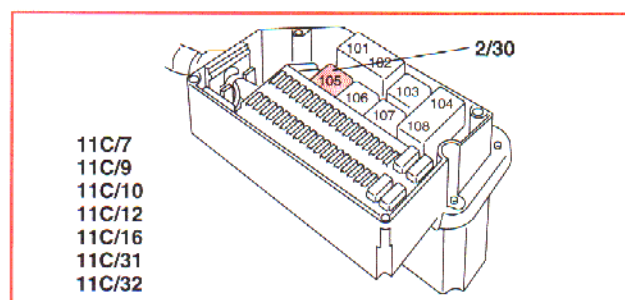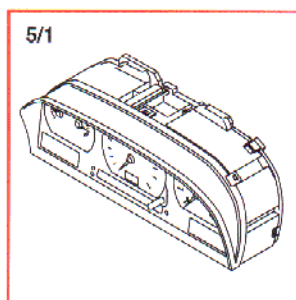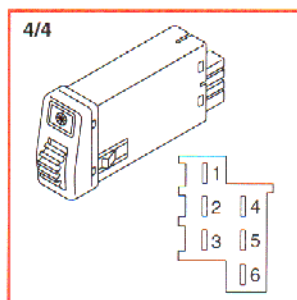


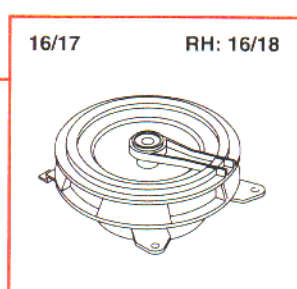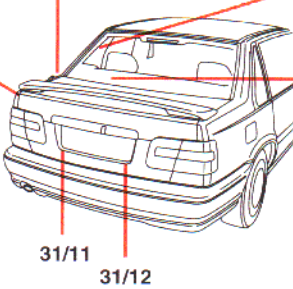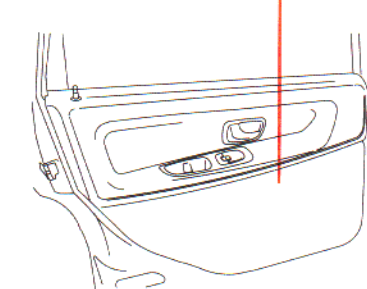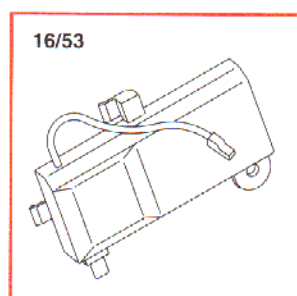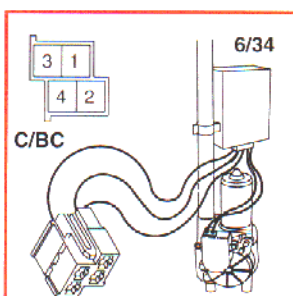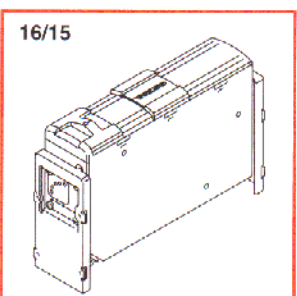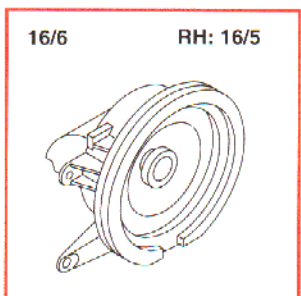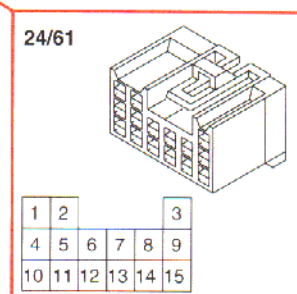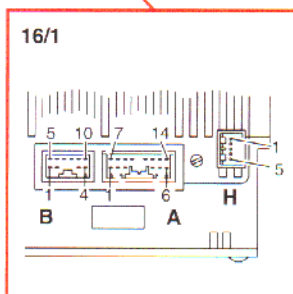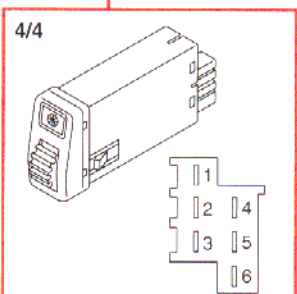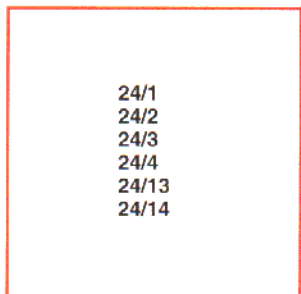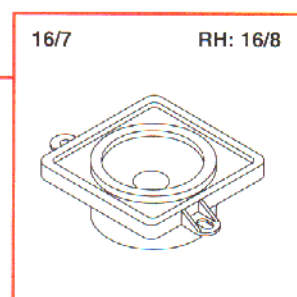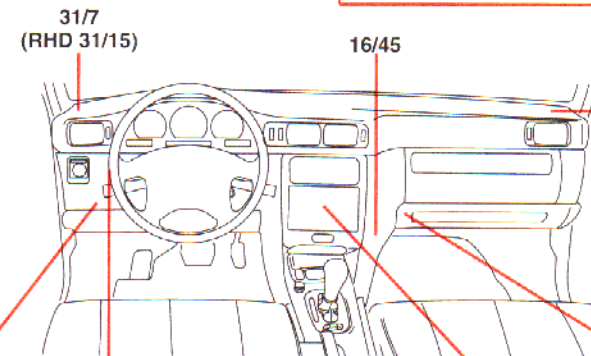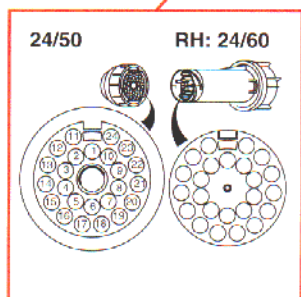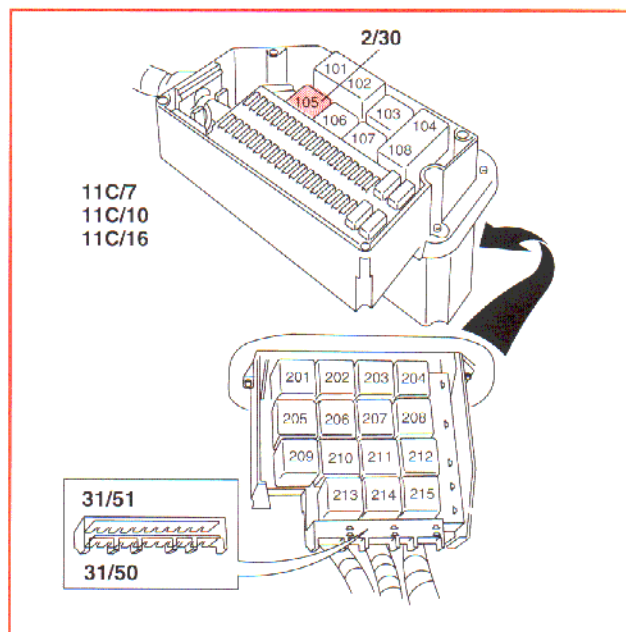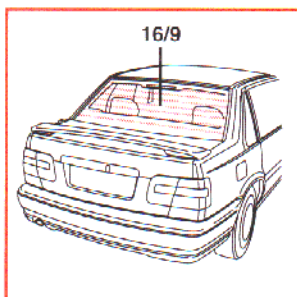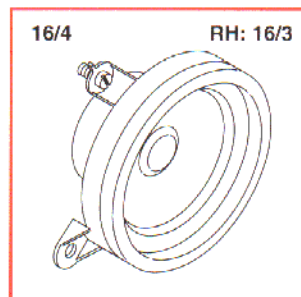


16/4 RH: 16/3

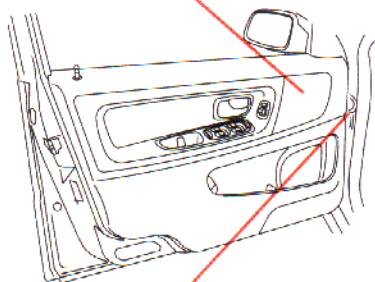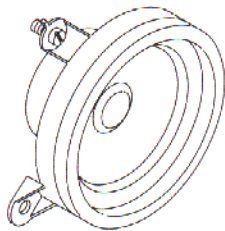


11C/7
11C/10
11C/16
11C/32

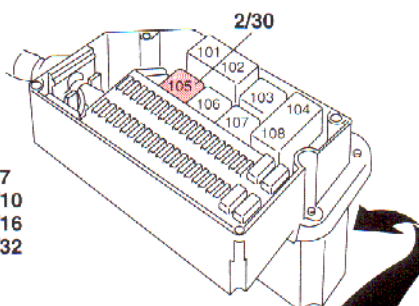



31/51
31/50

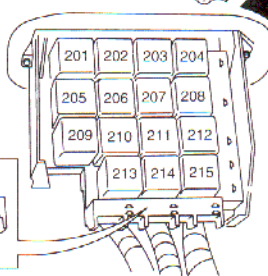


16/7 LH: 16/8

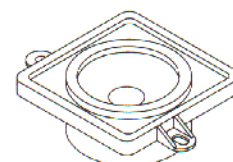

24/50 RH: 24/60

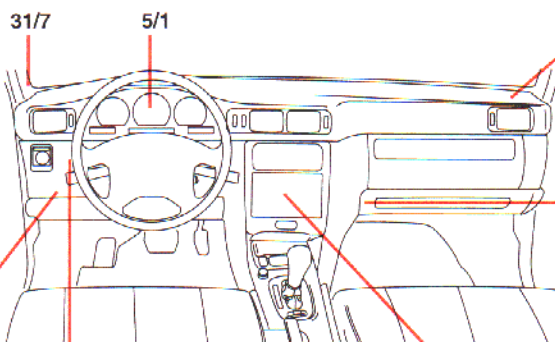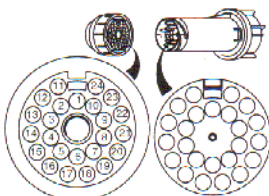


24/61

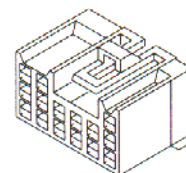


1	2	3
4	5	6
7	8	9
10	11	12
13	14	15

24/1
24/2
24/3
24/4
24/13
24/14


4/4

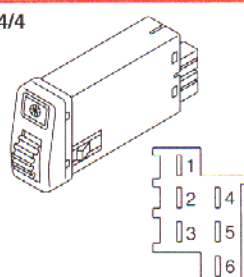


16/1

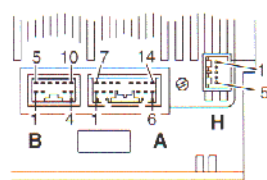


24/17 RH: 24/18

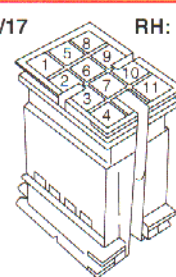



16/15

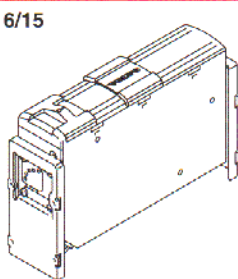

16/16

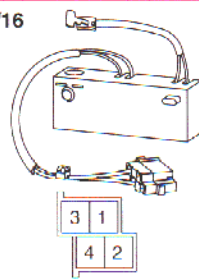


16/9

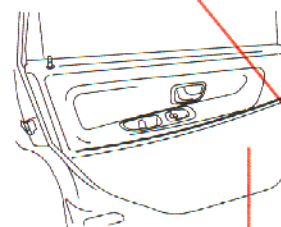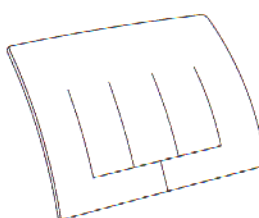


16/57


RH: 16/58

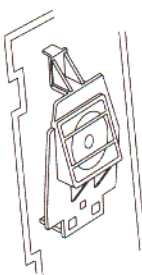

31/11

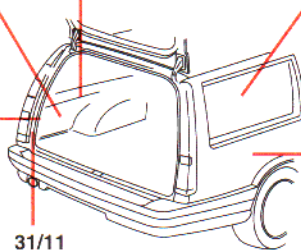


16/53

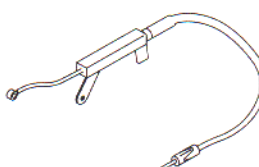


16/6



















RH: 16/5

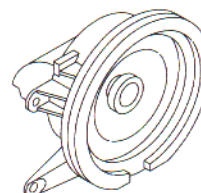


Radio with 4x50 W extra amplifier
S70 MOD2

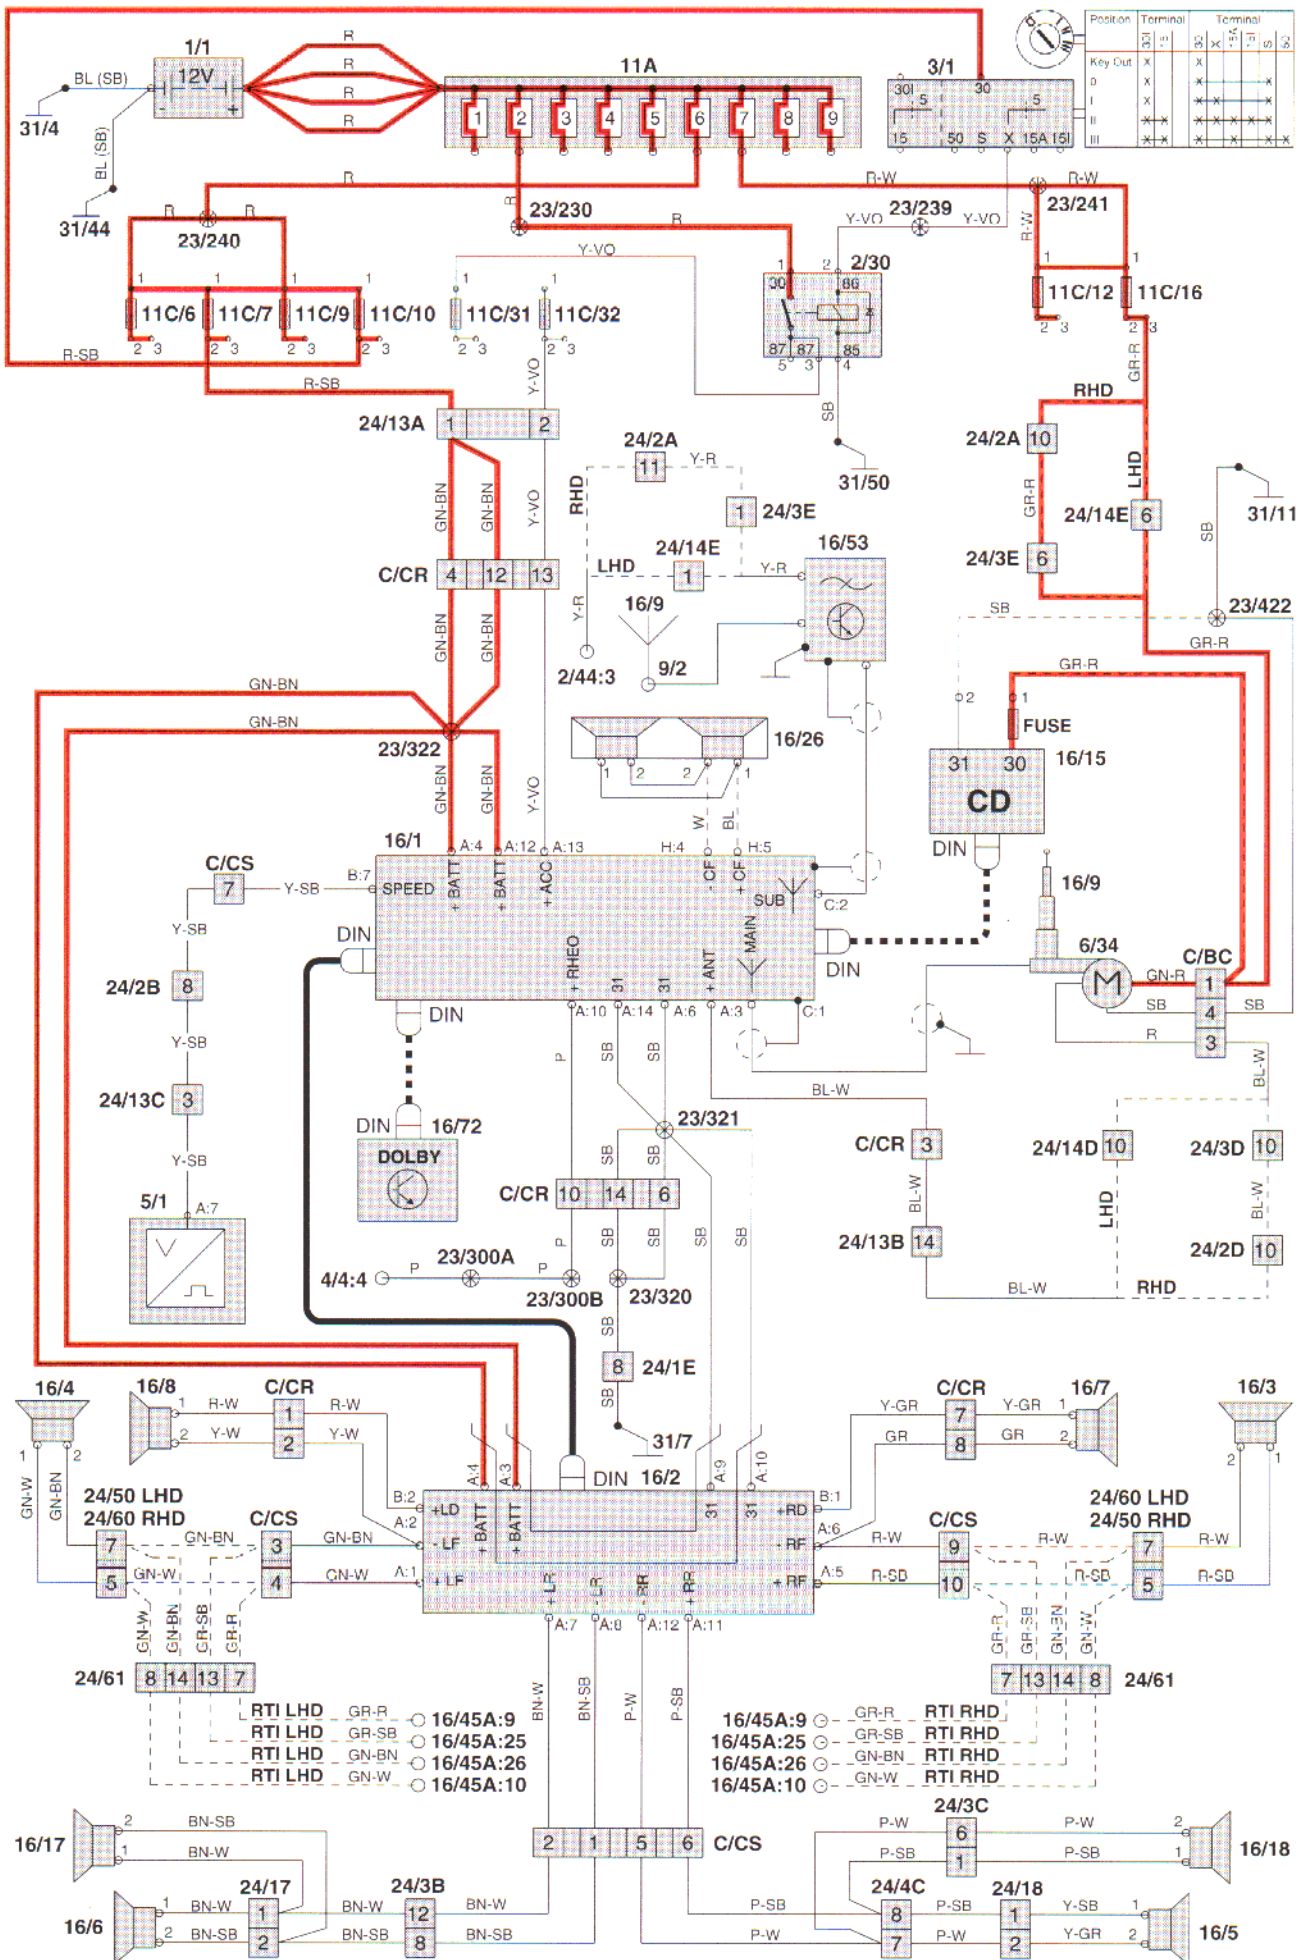


Radio with 4x50 W extra amplifier S70

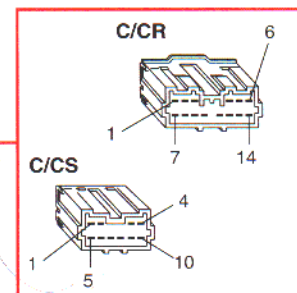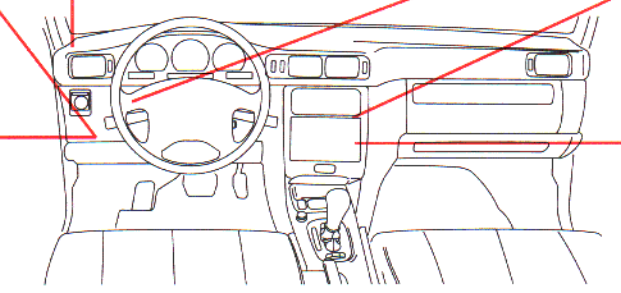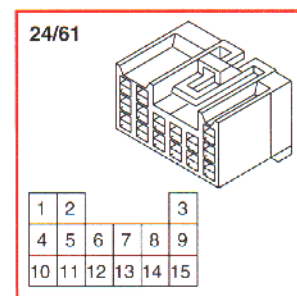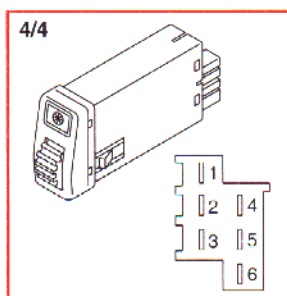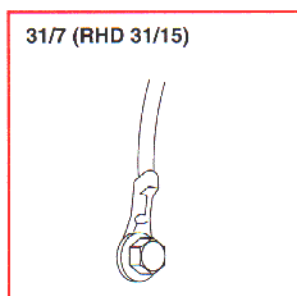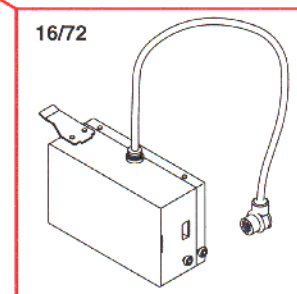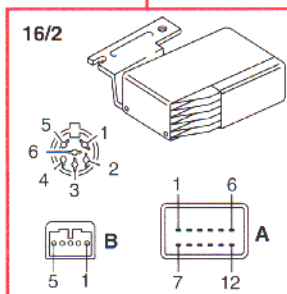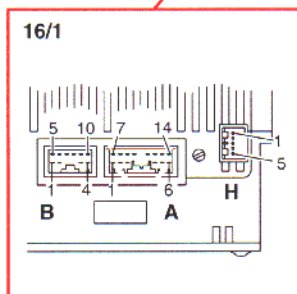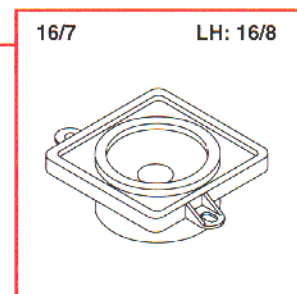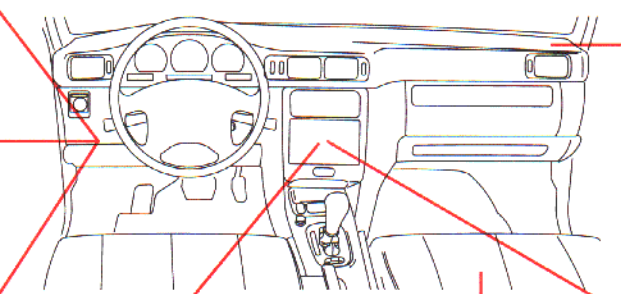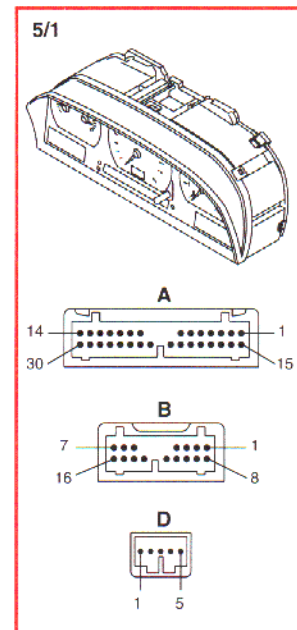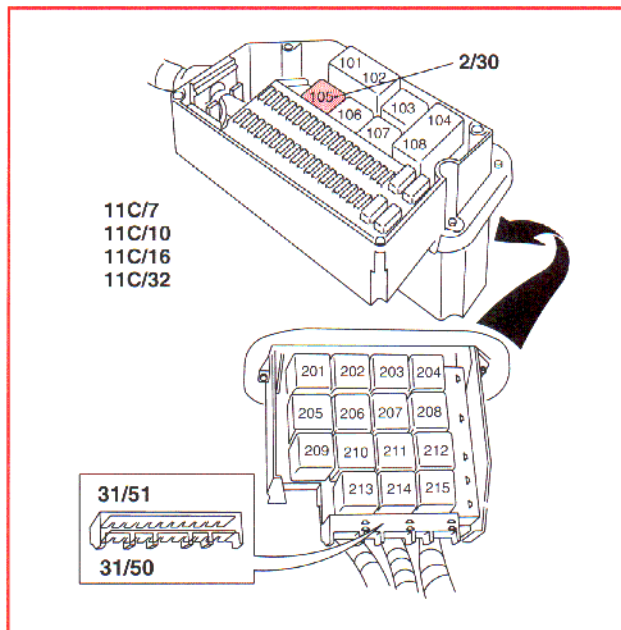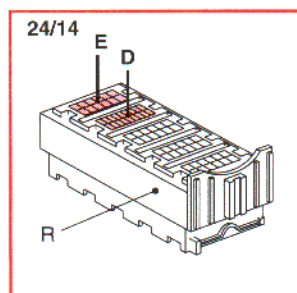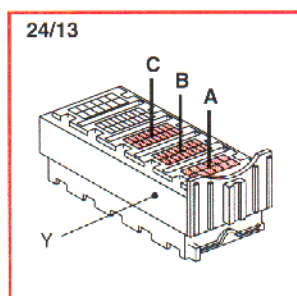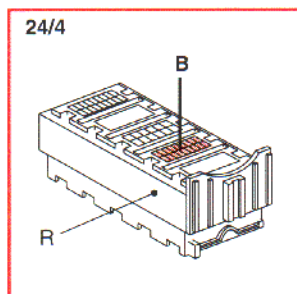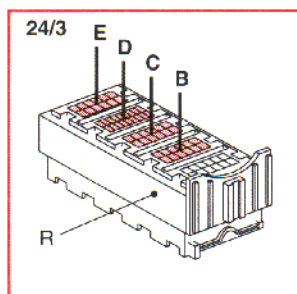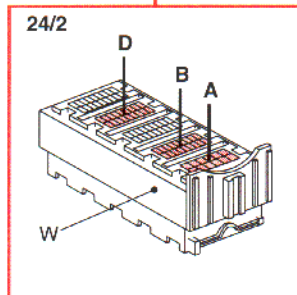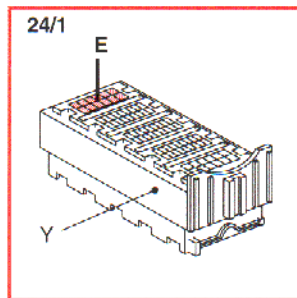



















Radio with 4x50 W extra amplifier S70

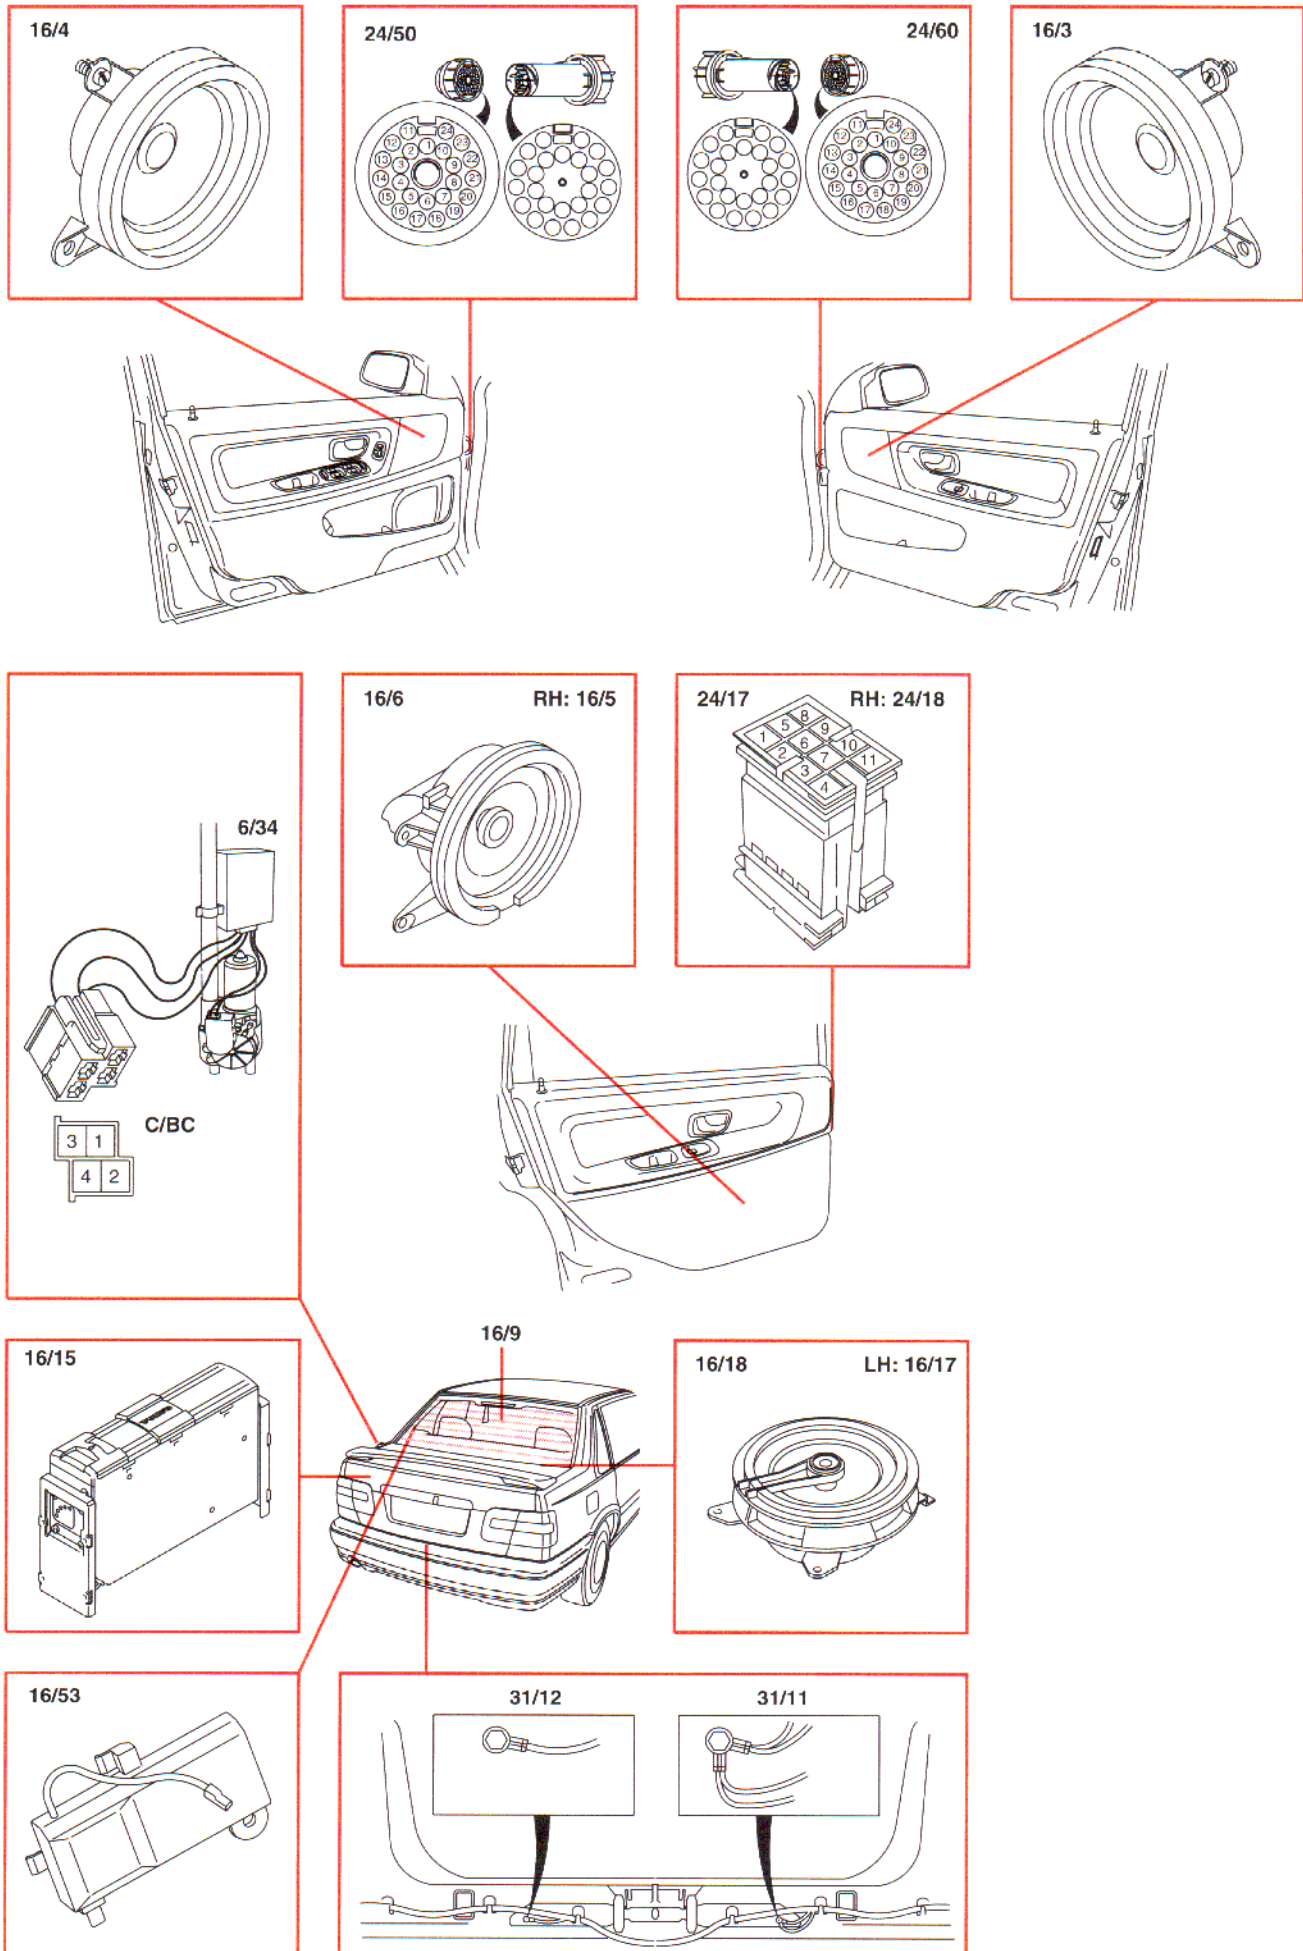


**Radio with 4x50 W extra amplifier
V70 MOD2**

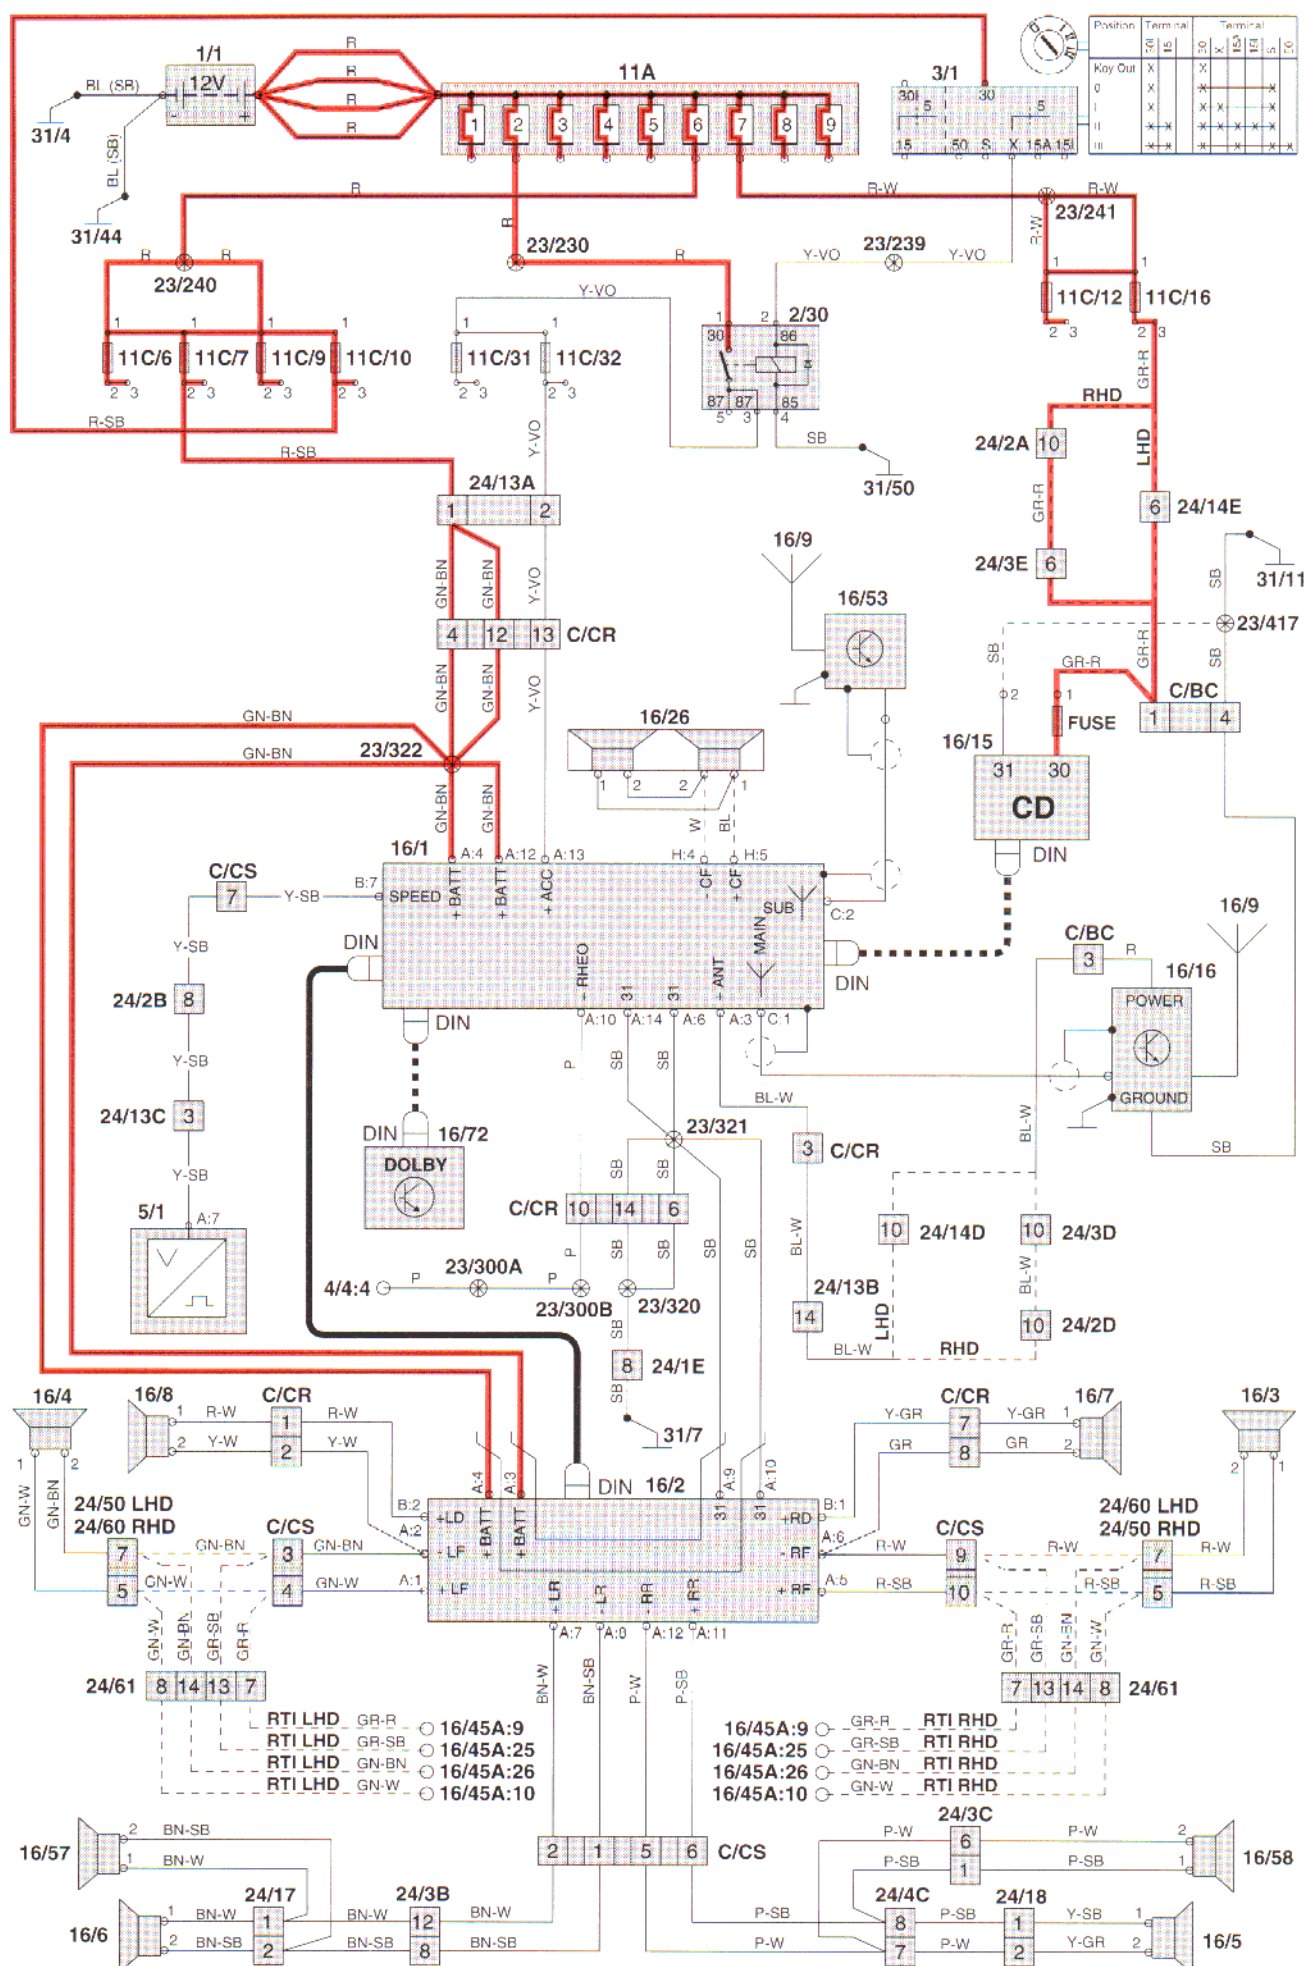

Radio with 4x50 W extra amplifier V70

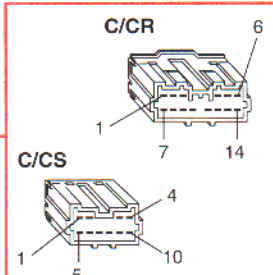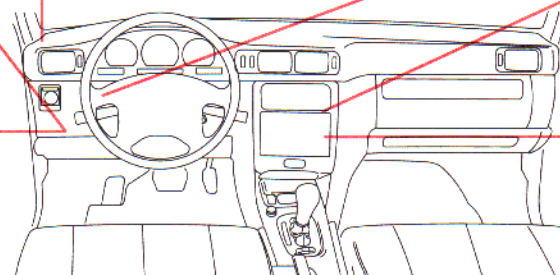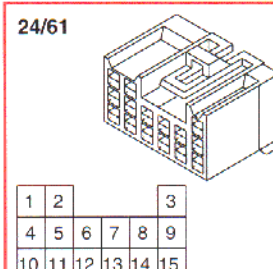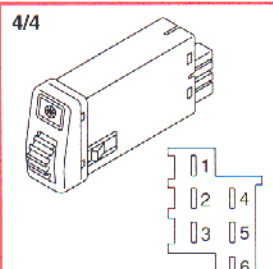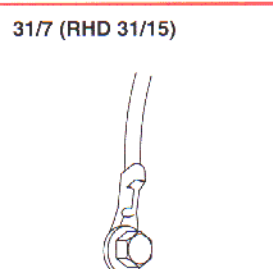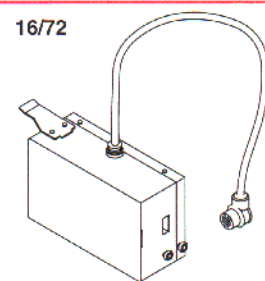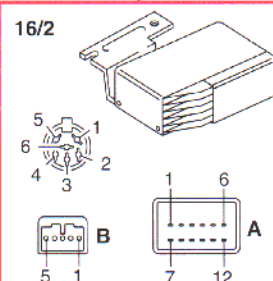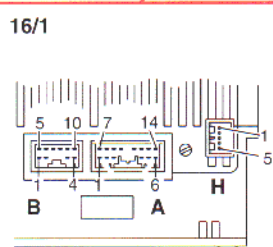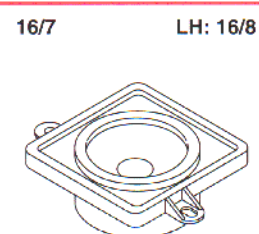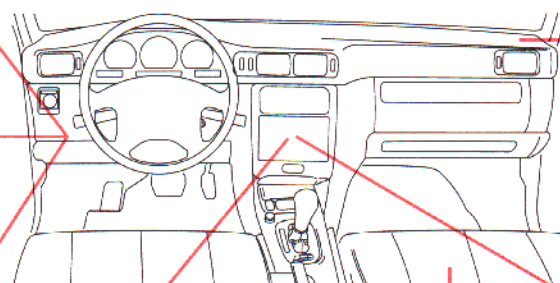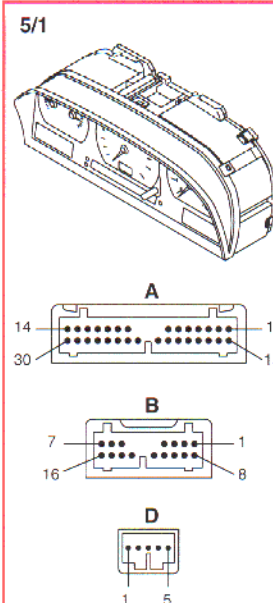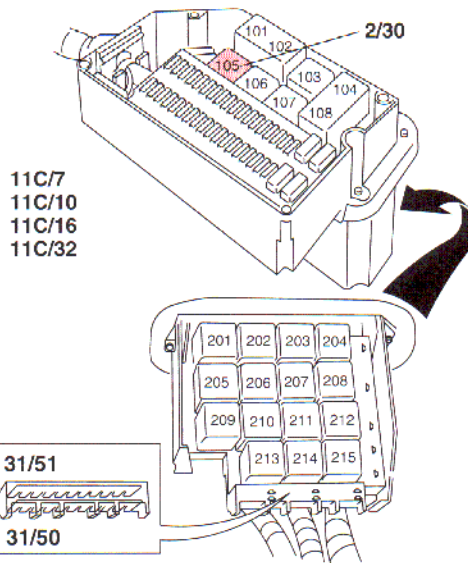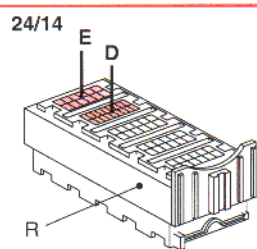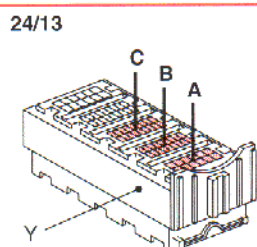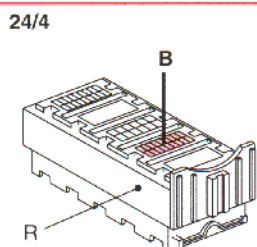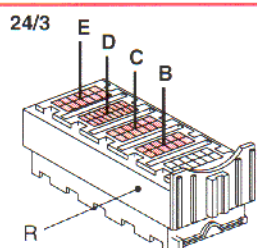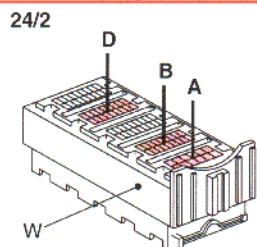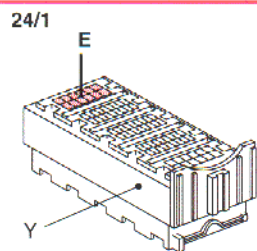

Radio with 4x50 W extra amplifier V70

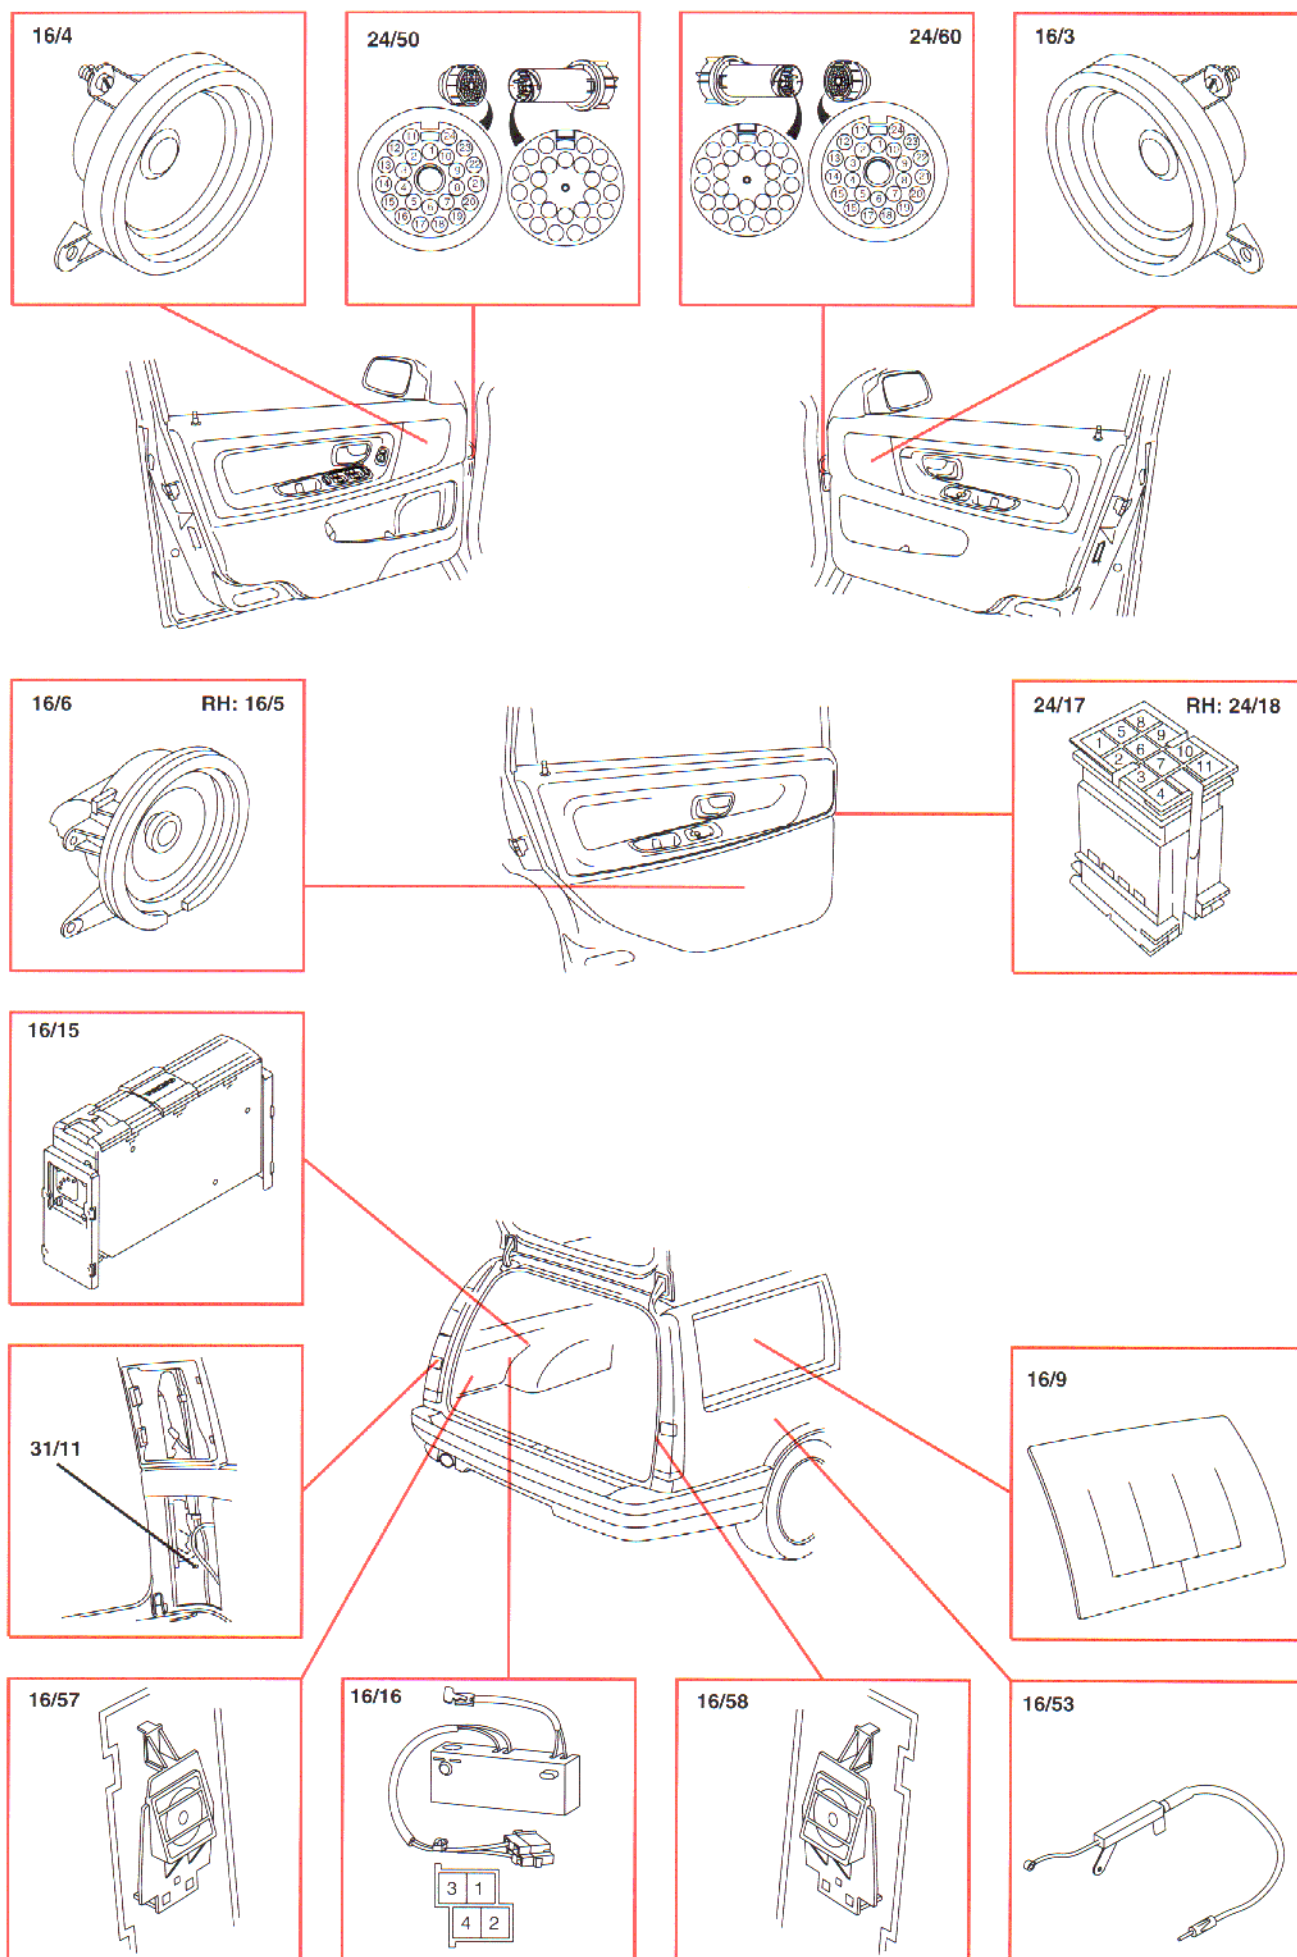















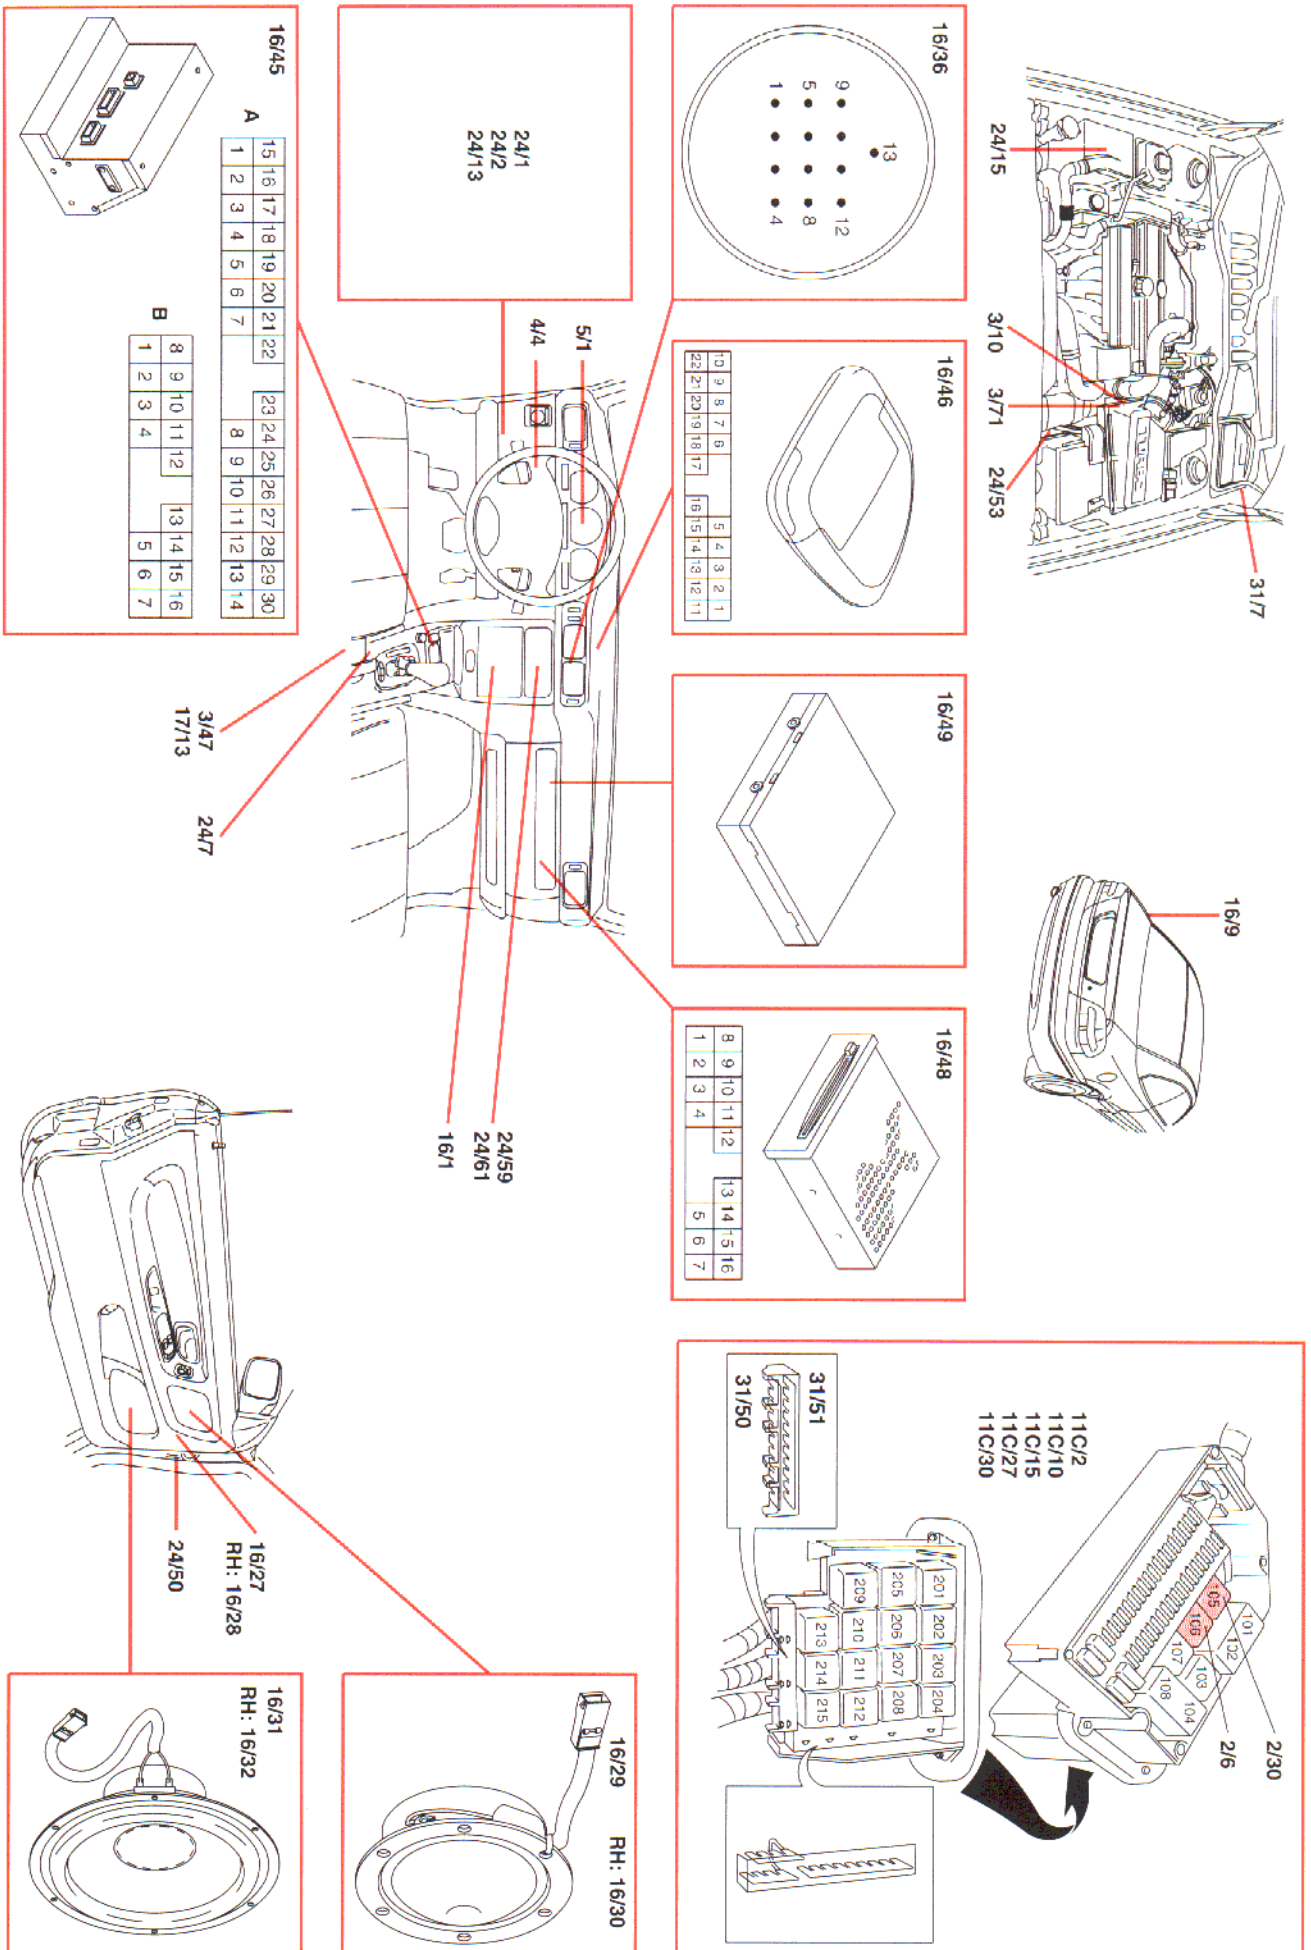




Diagram illustrating the removal of the 31/50 connector from the back of the unit. The 31/50 connector is shown being pulled away from the back panel. A large arrow indicates the removal of the 31/50 connector, leaving the 11C/2, 11C/10, 11C/11, and 11C/27 connectors exposed.

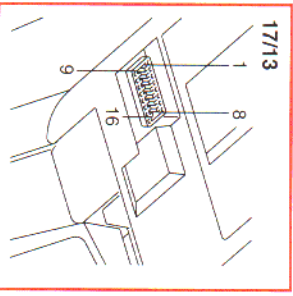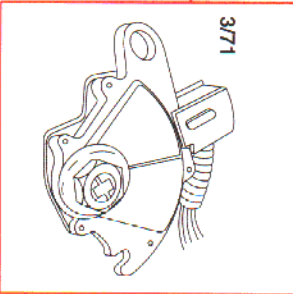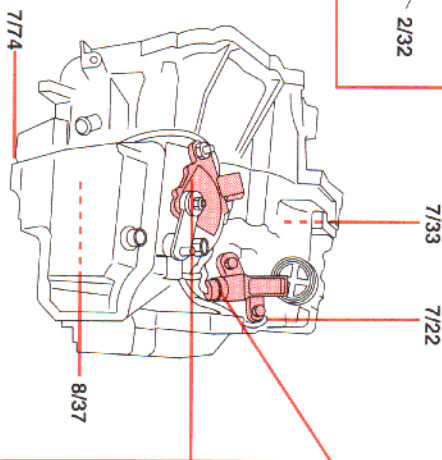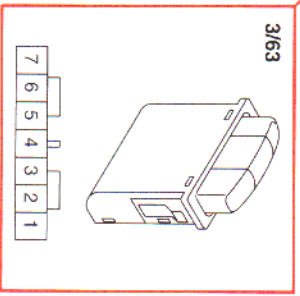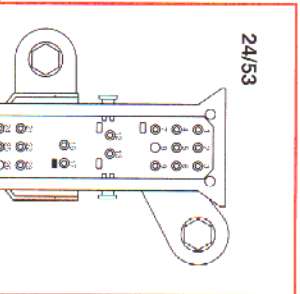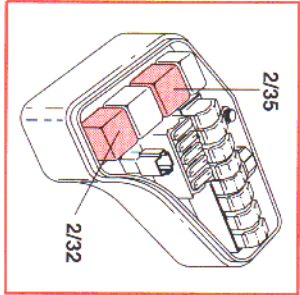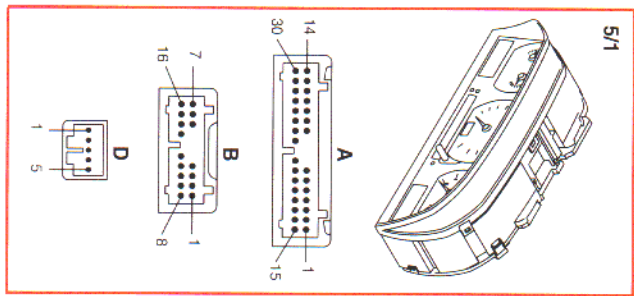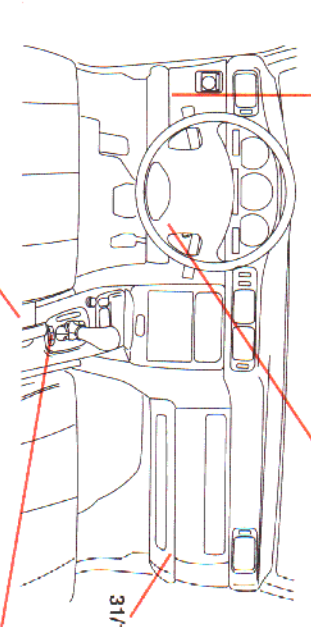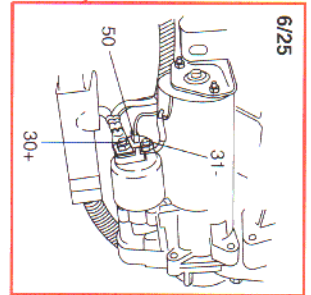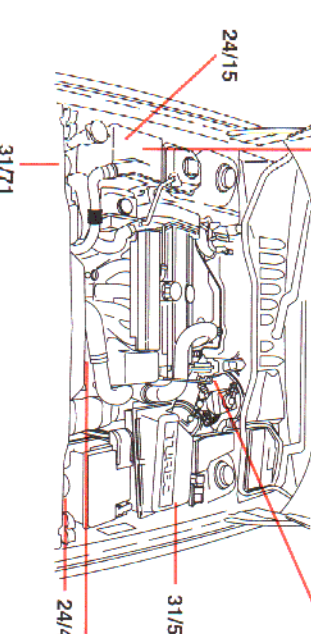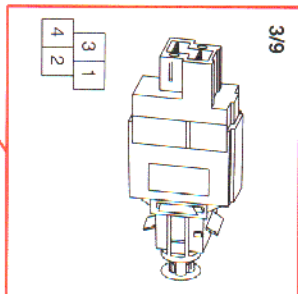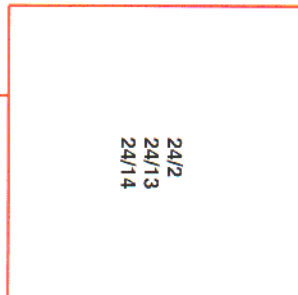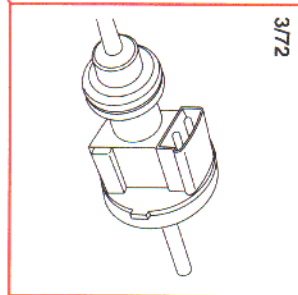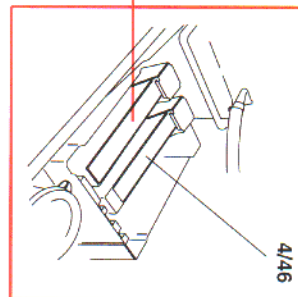

The diagram illustrates the electrical system of a vehicle, showing the engine compartment, dashboard, and various electrical components. The components are labeled with part numbers and connector types, and are connected by a network of wires.

Engine Compartment:

- 4/28:** Connector for the engine control system.
- 24/15:** Connector for the engine control system.
- 31/71:** Connector for the engine control system.
- 24/43:** Connector for the engine control system.
- 11C/2, 11C/10, 11C/11, 11C/27:** Connectors for the engine control system.
- 31/50:** Connector for the engine control system.


Dash Area:

- 4/46:** Connector for the dashboard system.
- 3/72:** Connector for the dashboard system.
- 24/2, 24/13, 24/14:** Connectors for the dashboard system.
- 3/9:** Connector for the dashboard system.
- 5/1:** Connector for the dashboard system.
- 3/63:** Connector for the dashboard system.
- 17/13:** Connector for the dashboard system.

Other Components:


- 2/35, 2/32:** Connectors for the engine control system.
- 6/25:** Connector for the engine control system.
- 7/33, 7/22:** Connectors for the engine control system.
- 8/37:** Connector for the engine control system.
- 24/53:** Connector for the engine control system.
- 3/71:** Connector for the engine control system.
- 7/74:** Connector for the engine control system.
- 30, 29, 28, 27, 26, 25, 24, 23, 22, 21, 20, 19, 18, 17, 16, 15, 14, 13, 12, 11, 10, 9, 8, 7, 6, 5, 4, 3, 2, 1:** Connectors for the engine control system.
- 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30:** Connectors for the engine control system.
- 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30:** Connectors for the engine control system.

P-shift lock, automatic transmission

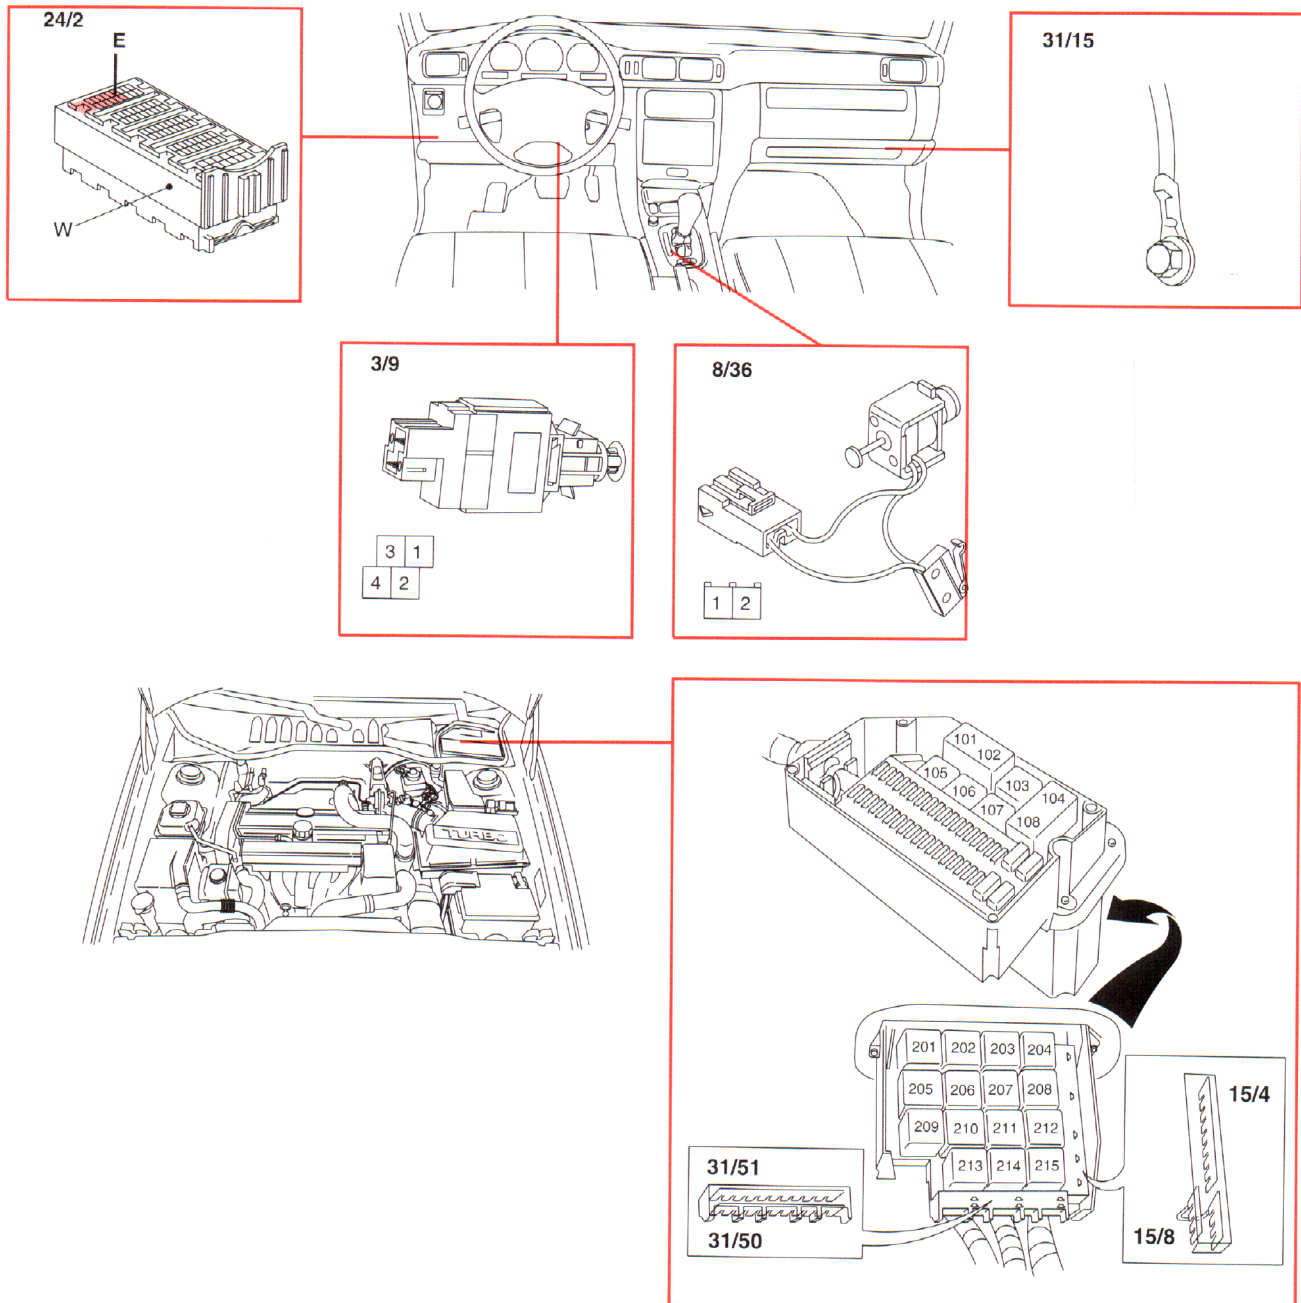


ABS Brake system and TRACS


7/4

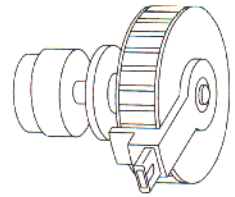


4/16

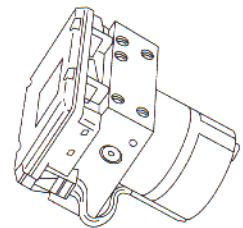


5/1

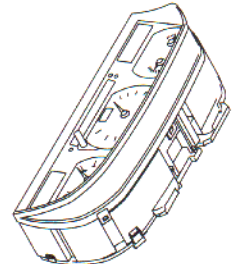





3/9

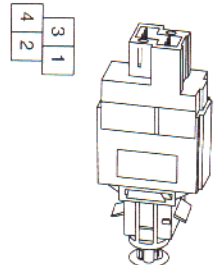


3/95

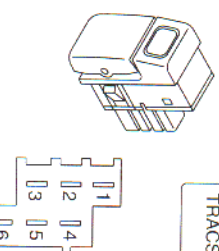

3/47

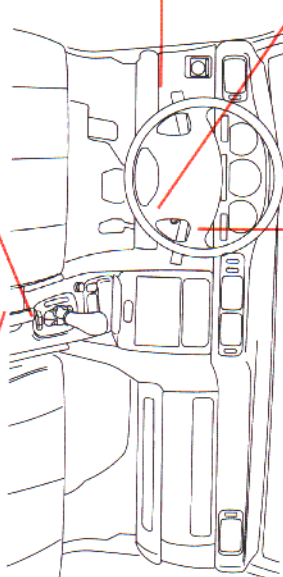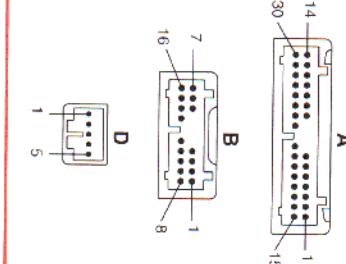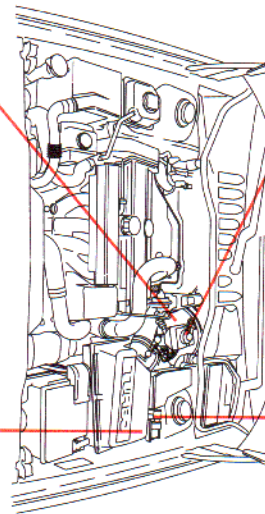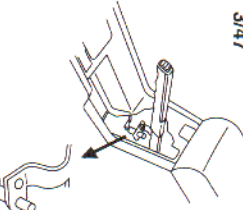

7/85

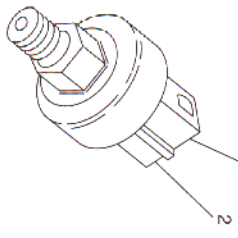


7/31




RH: 7/32

7/57

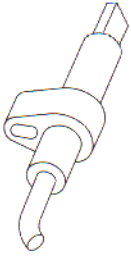


LH: 7/56


24/19

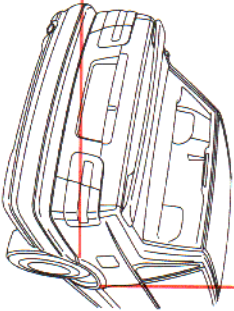


11C/3
11C/10
11C/11

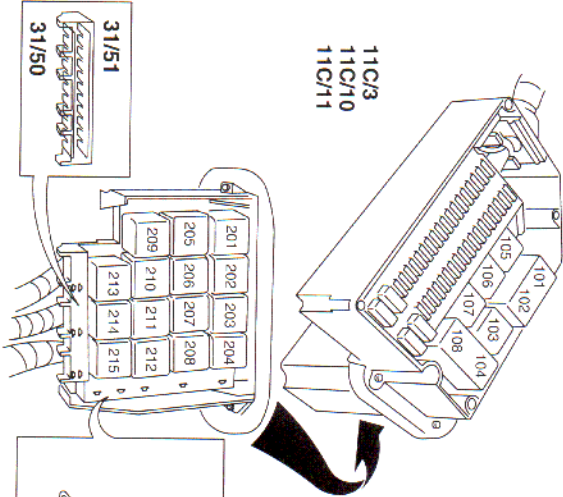

24/7B

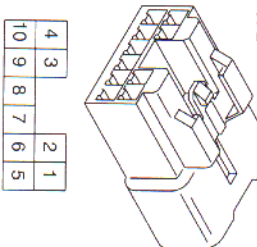


17/13

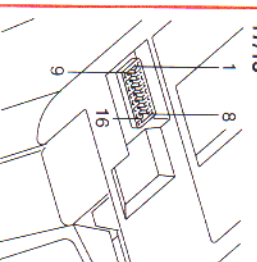



Power windows C70




24/50

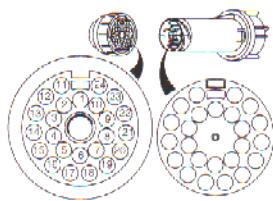

24/60

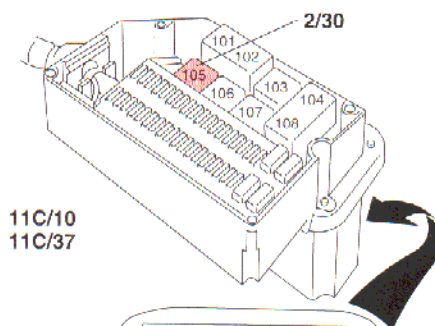
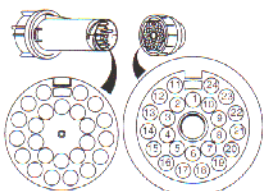


11C/10
11C/37


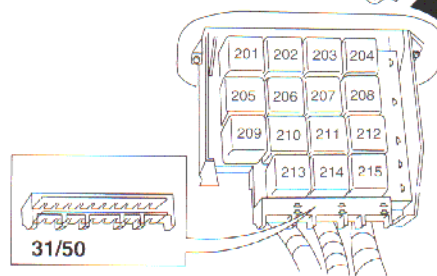


31/50


24/2

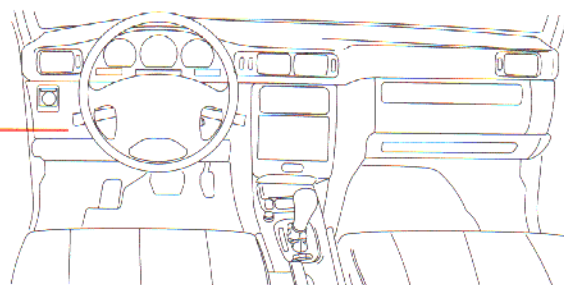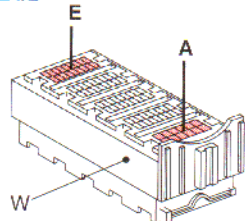



3/97

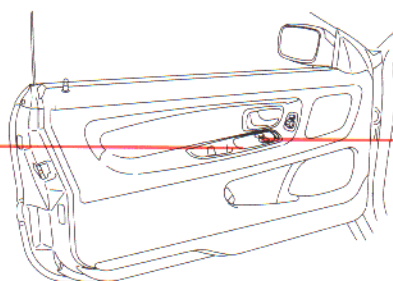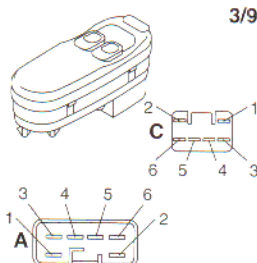


6/9

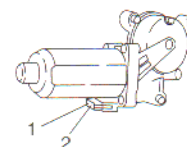


6/11

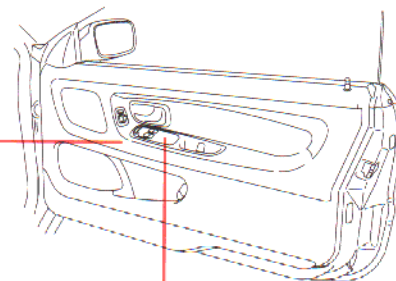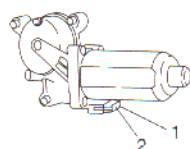




3/20

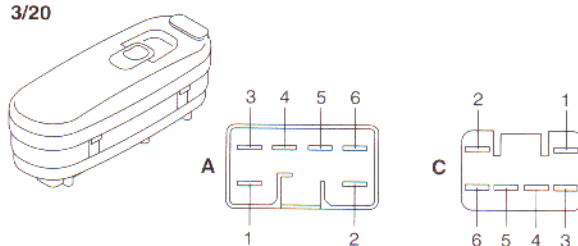

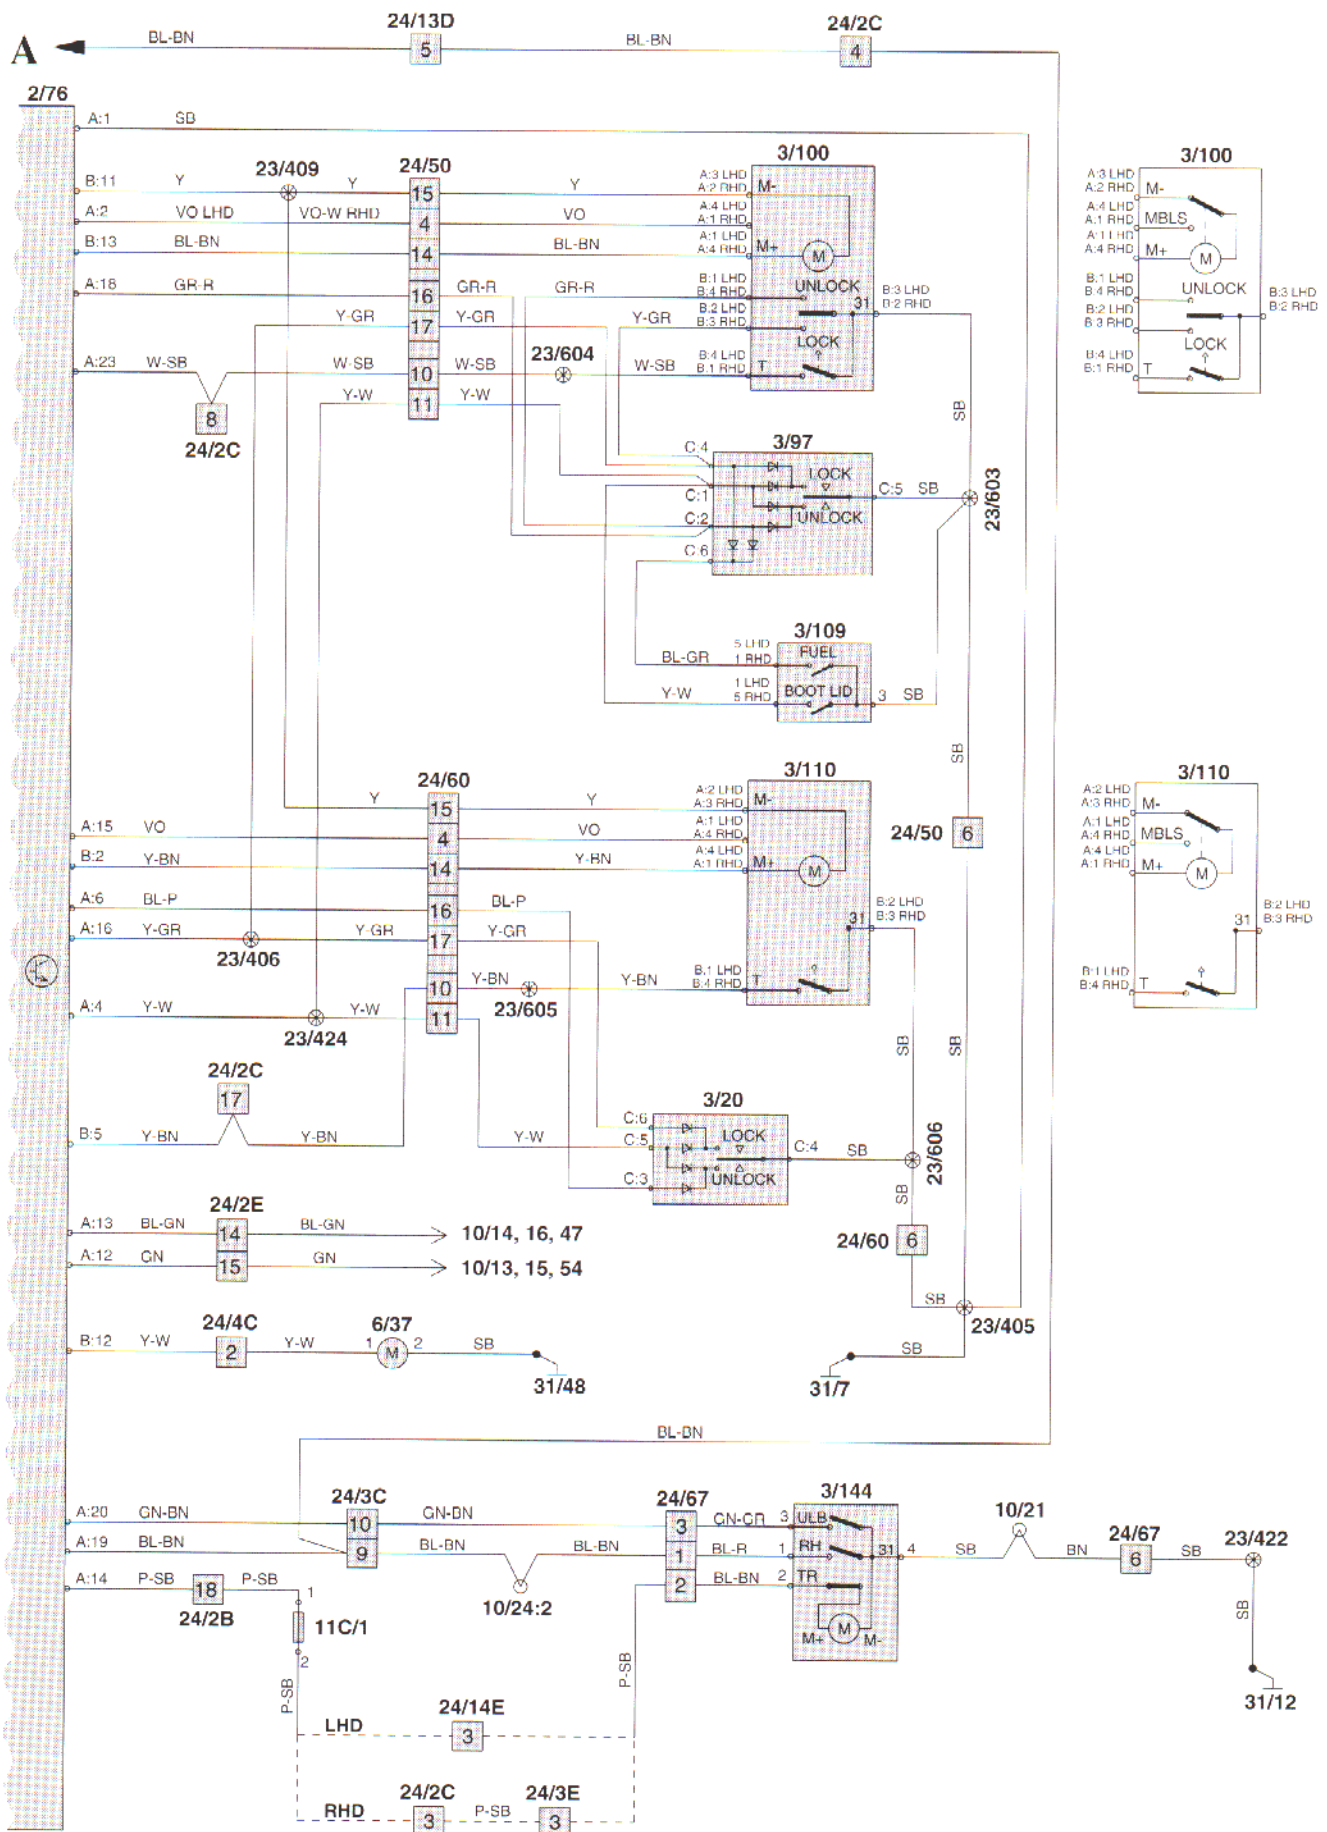


Central locking C70

5/1

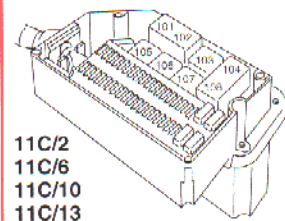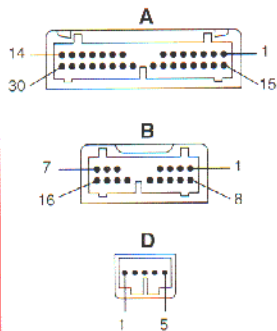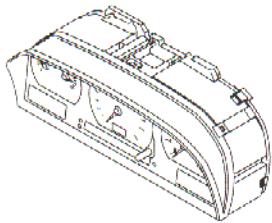


11C/2
11C/6
11C/10
11C/13
11C/18


24/50

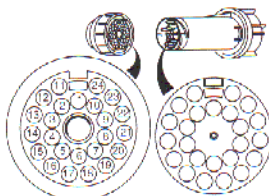


31/7

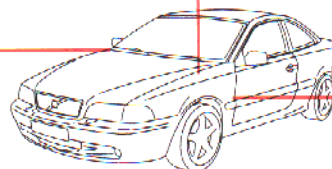


24/60

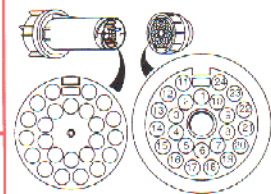

24/3
24/14

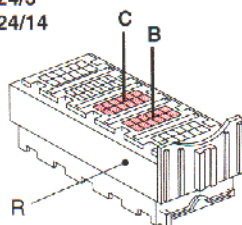

4/19

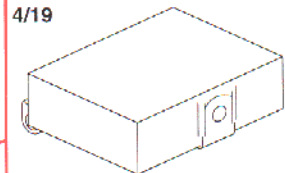


5	4	3	2	1
---	---	---	---	---


31/7 (RHD 31/15)




24/4

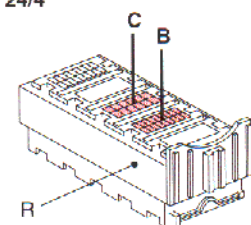


24/2

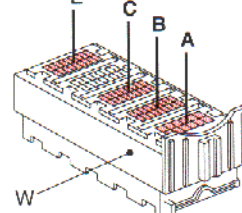


24/1
24/13

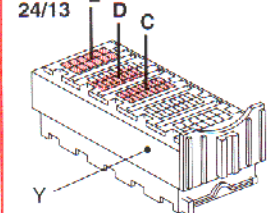













17/13

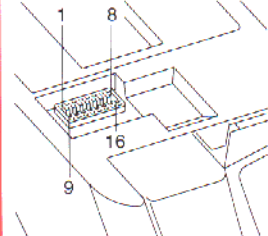


24/7B

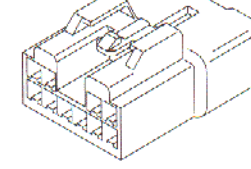


4	3			2	1
10	9	8	7	6	5





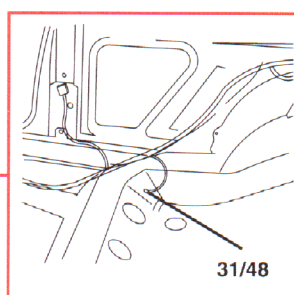
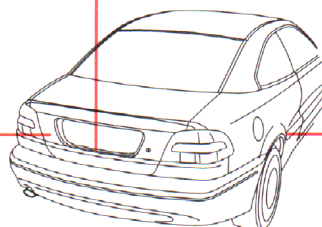
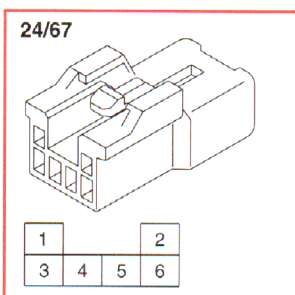
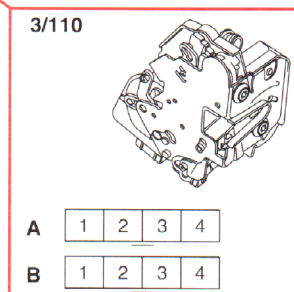
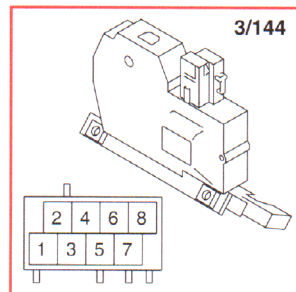
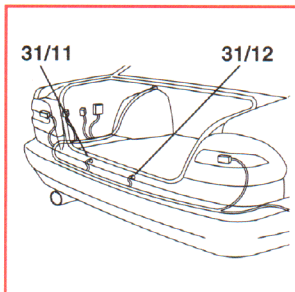
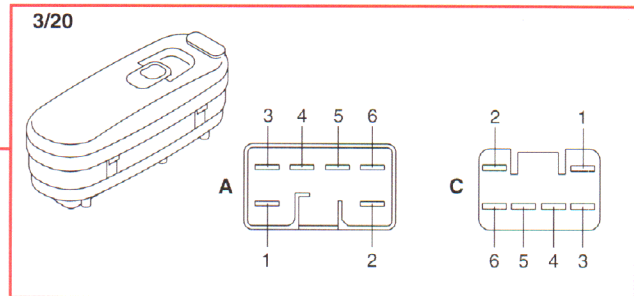
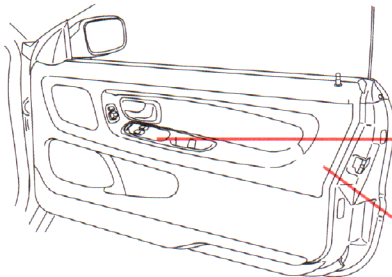
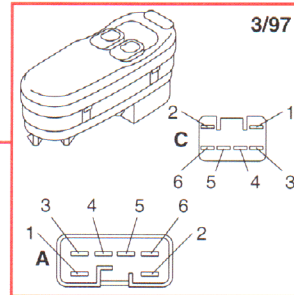
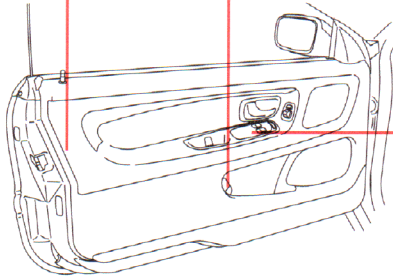
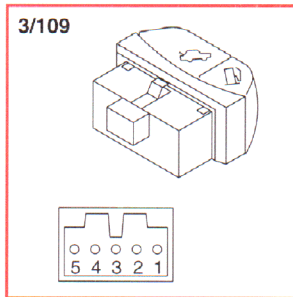
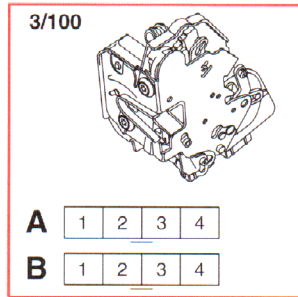


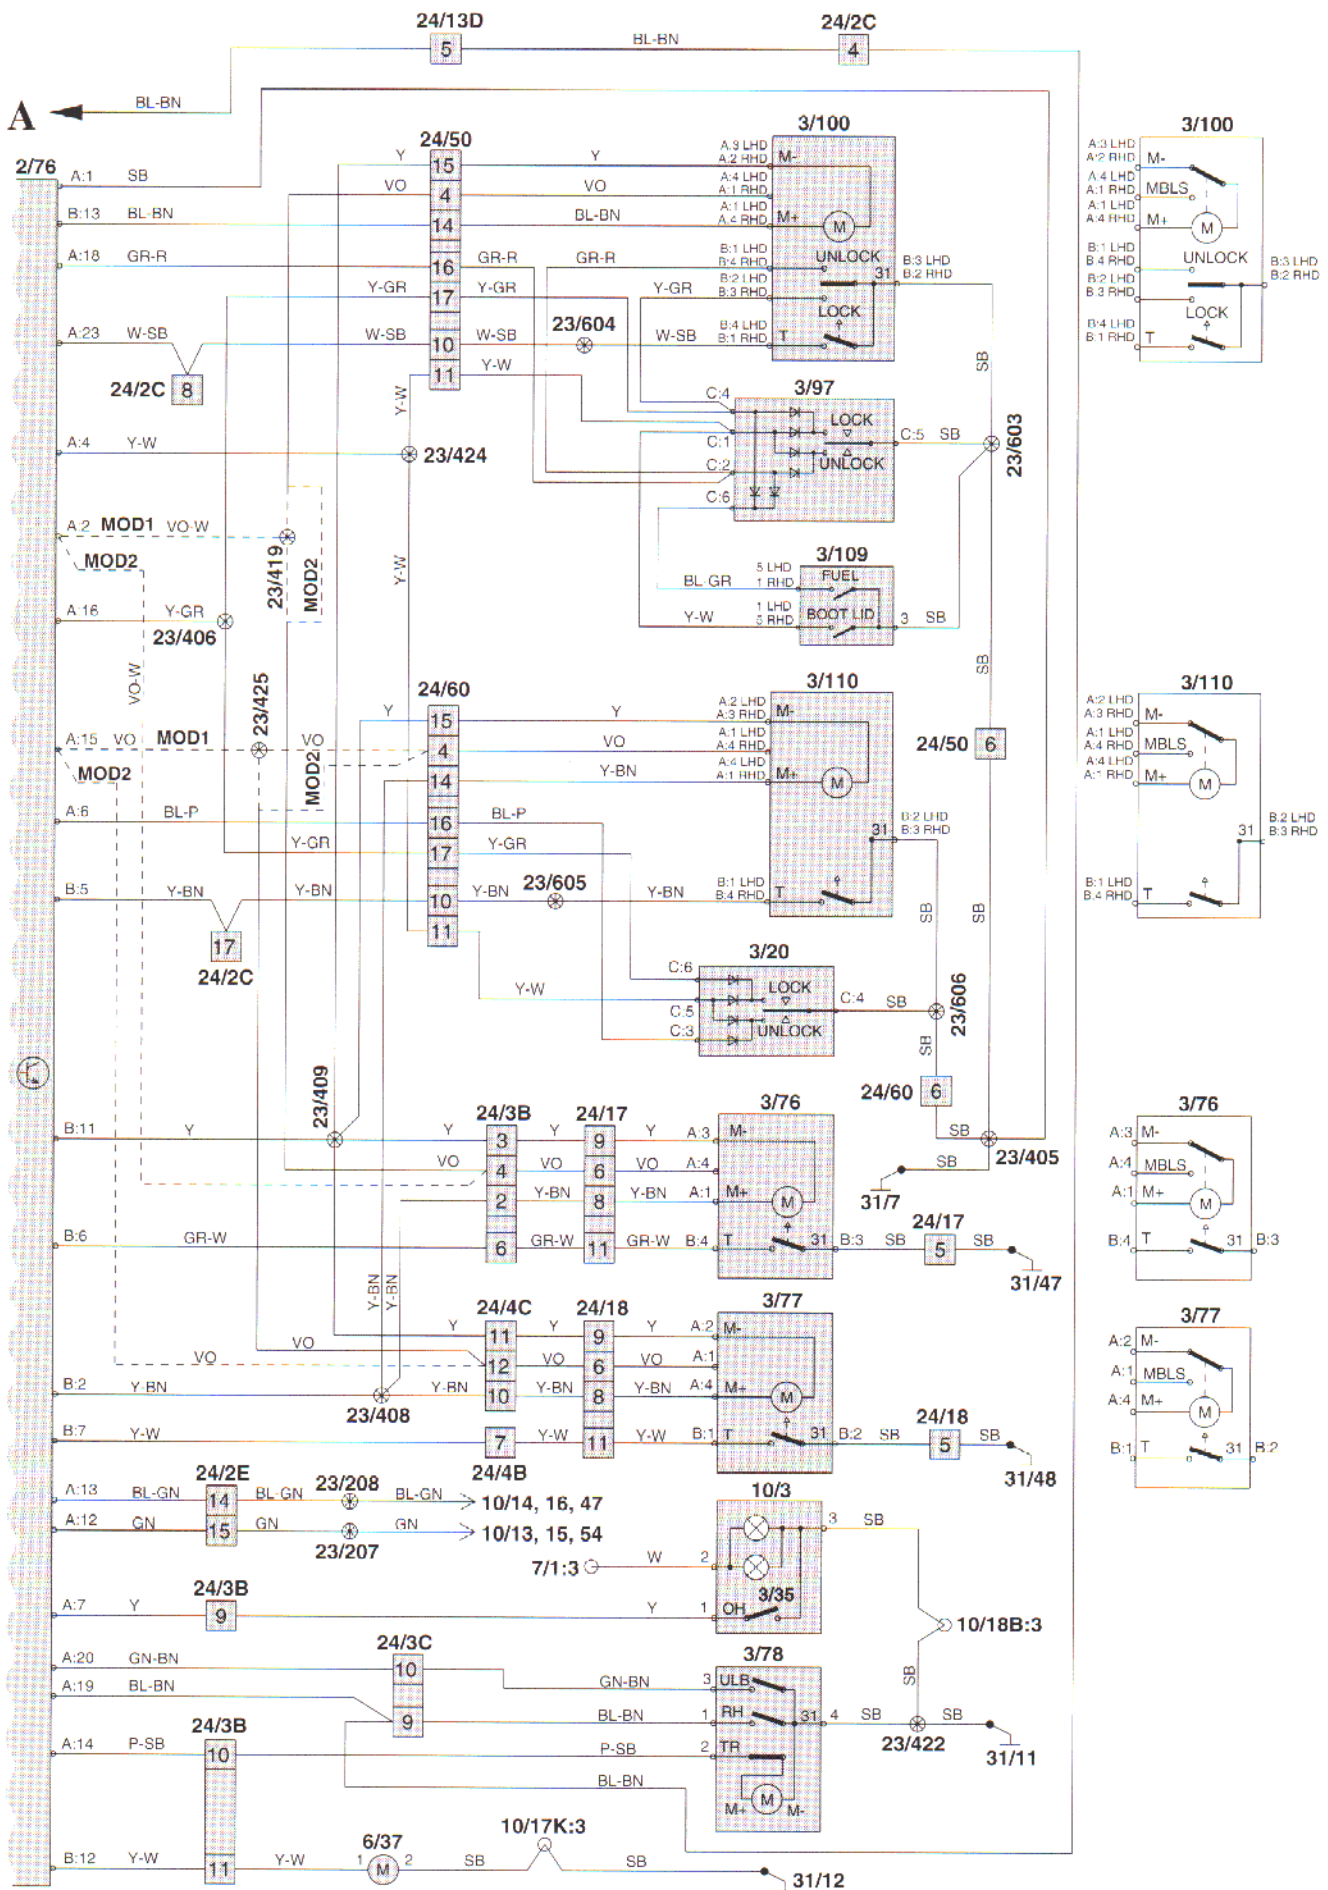


Central locking S70

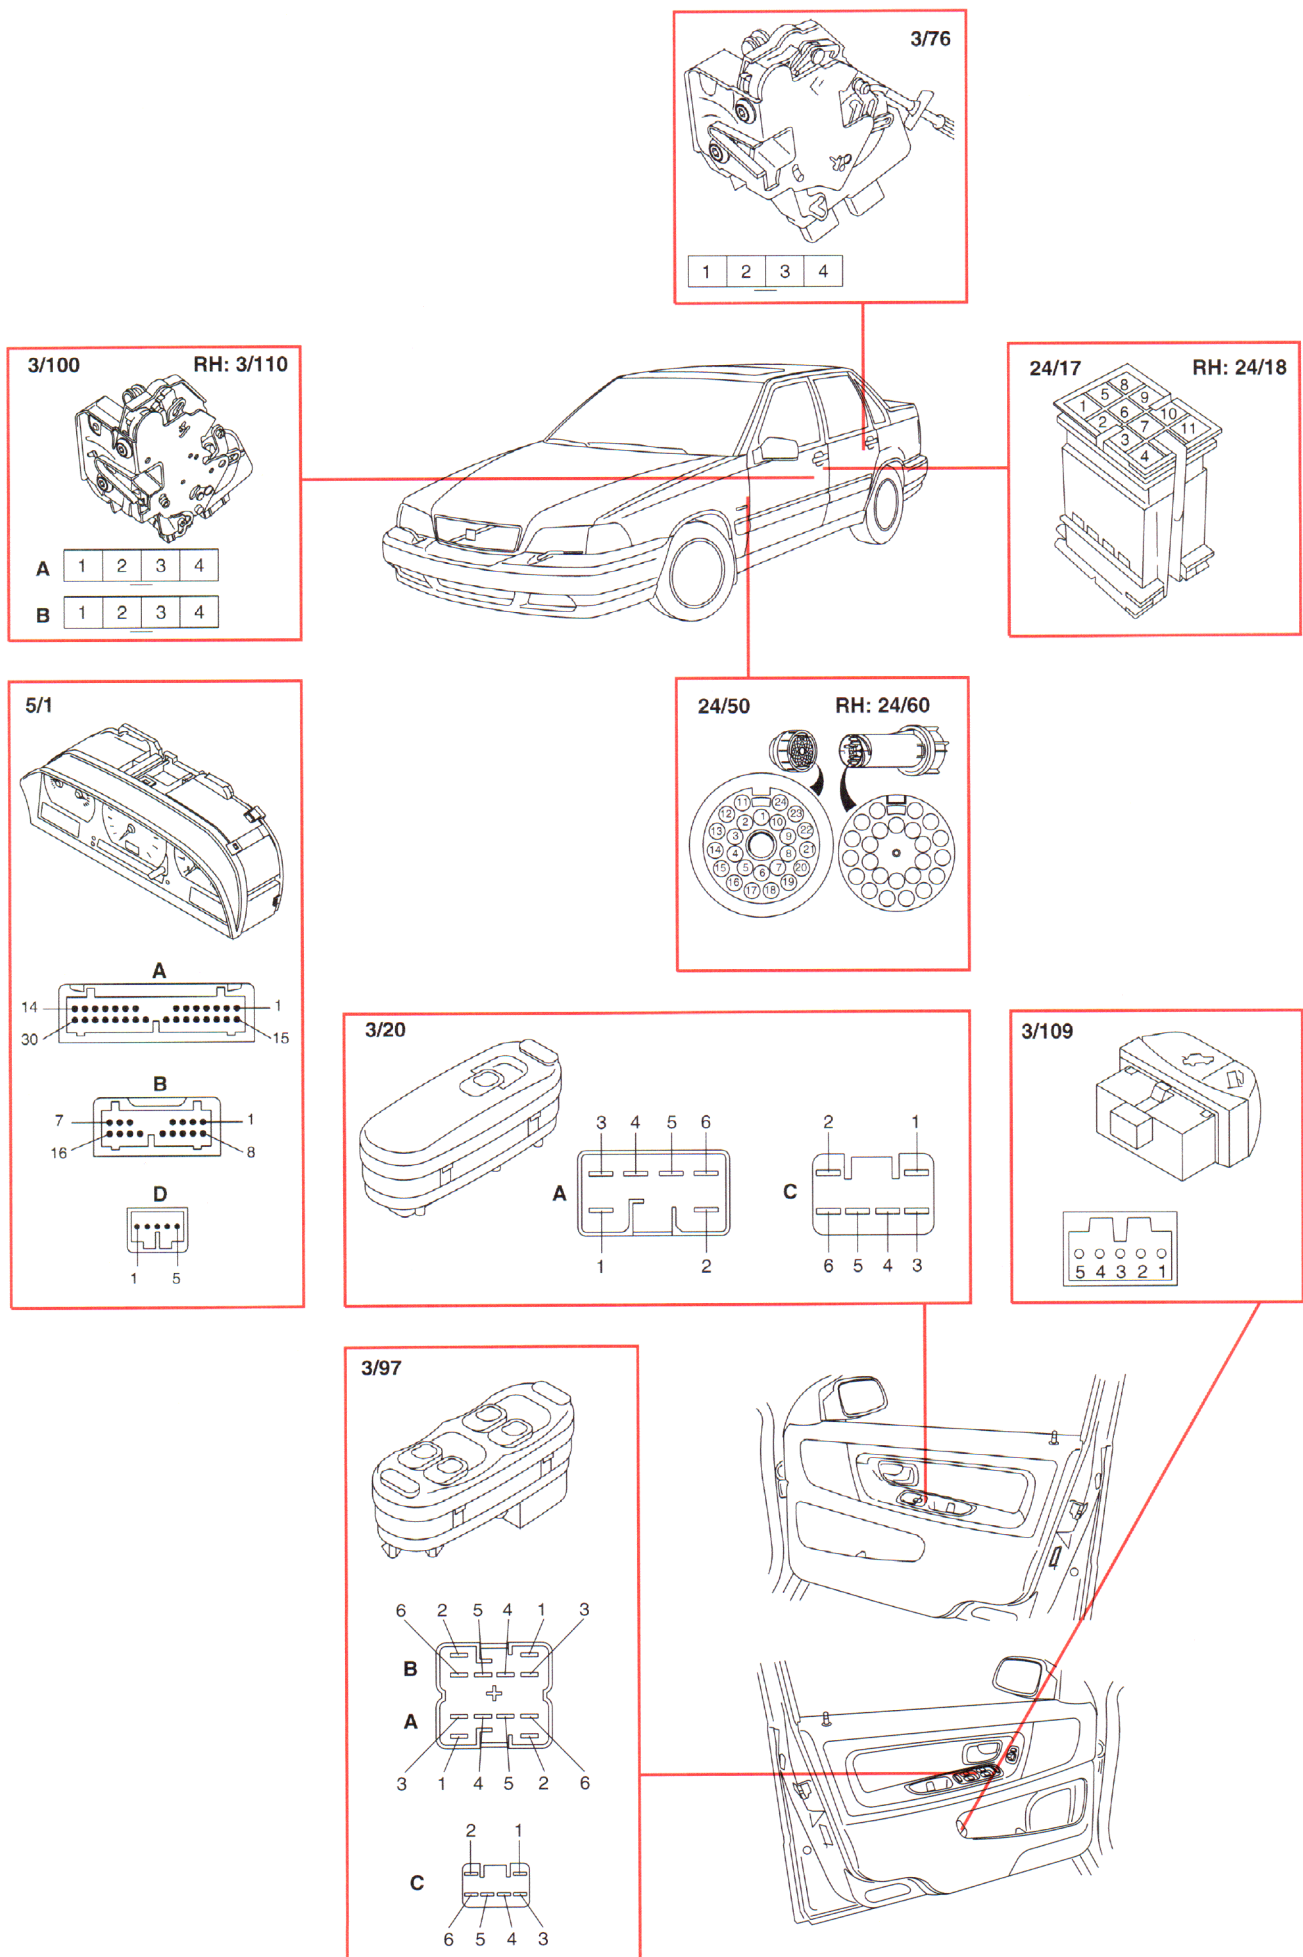


Central locking S70


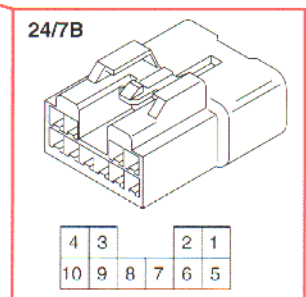
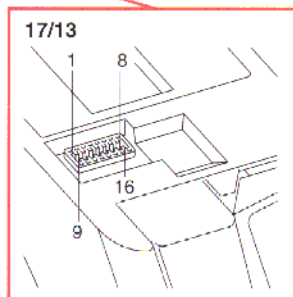
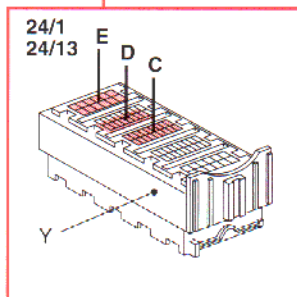
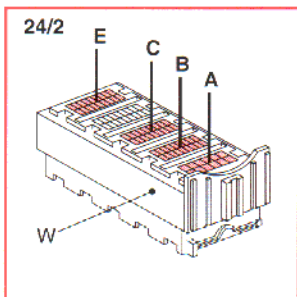
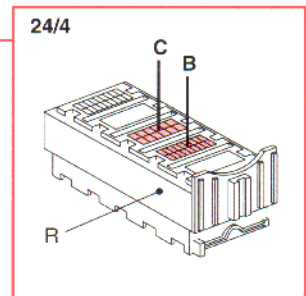
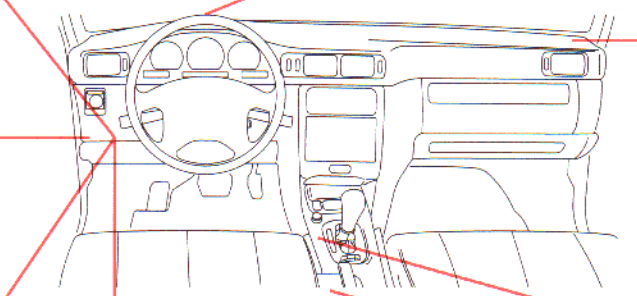
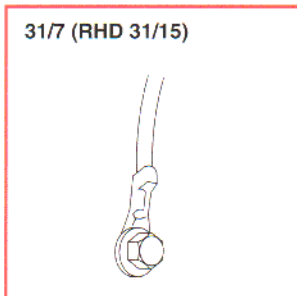
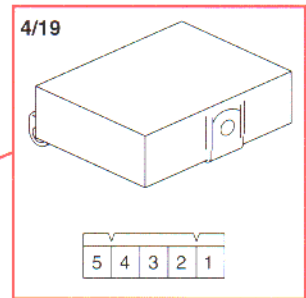
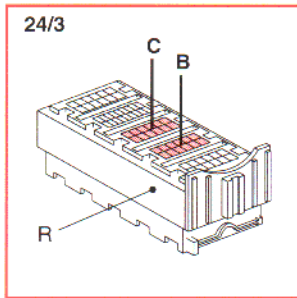
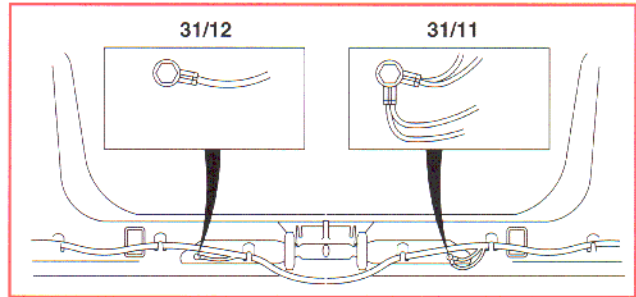
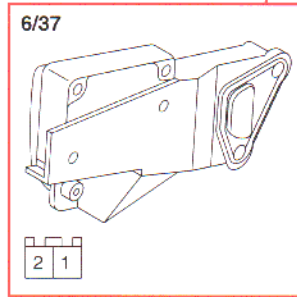
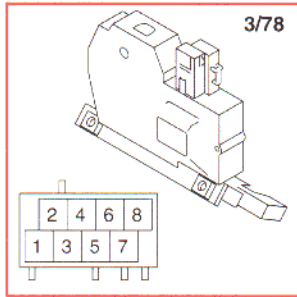
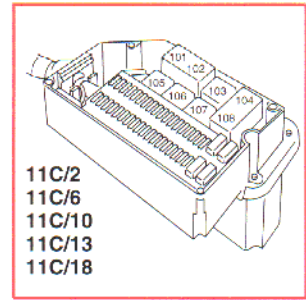
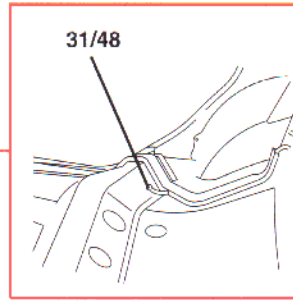
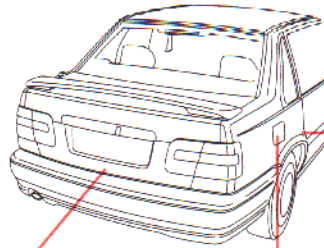
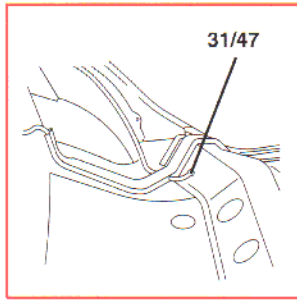


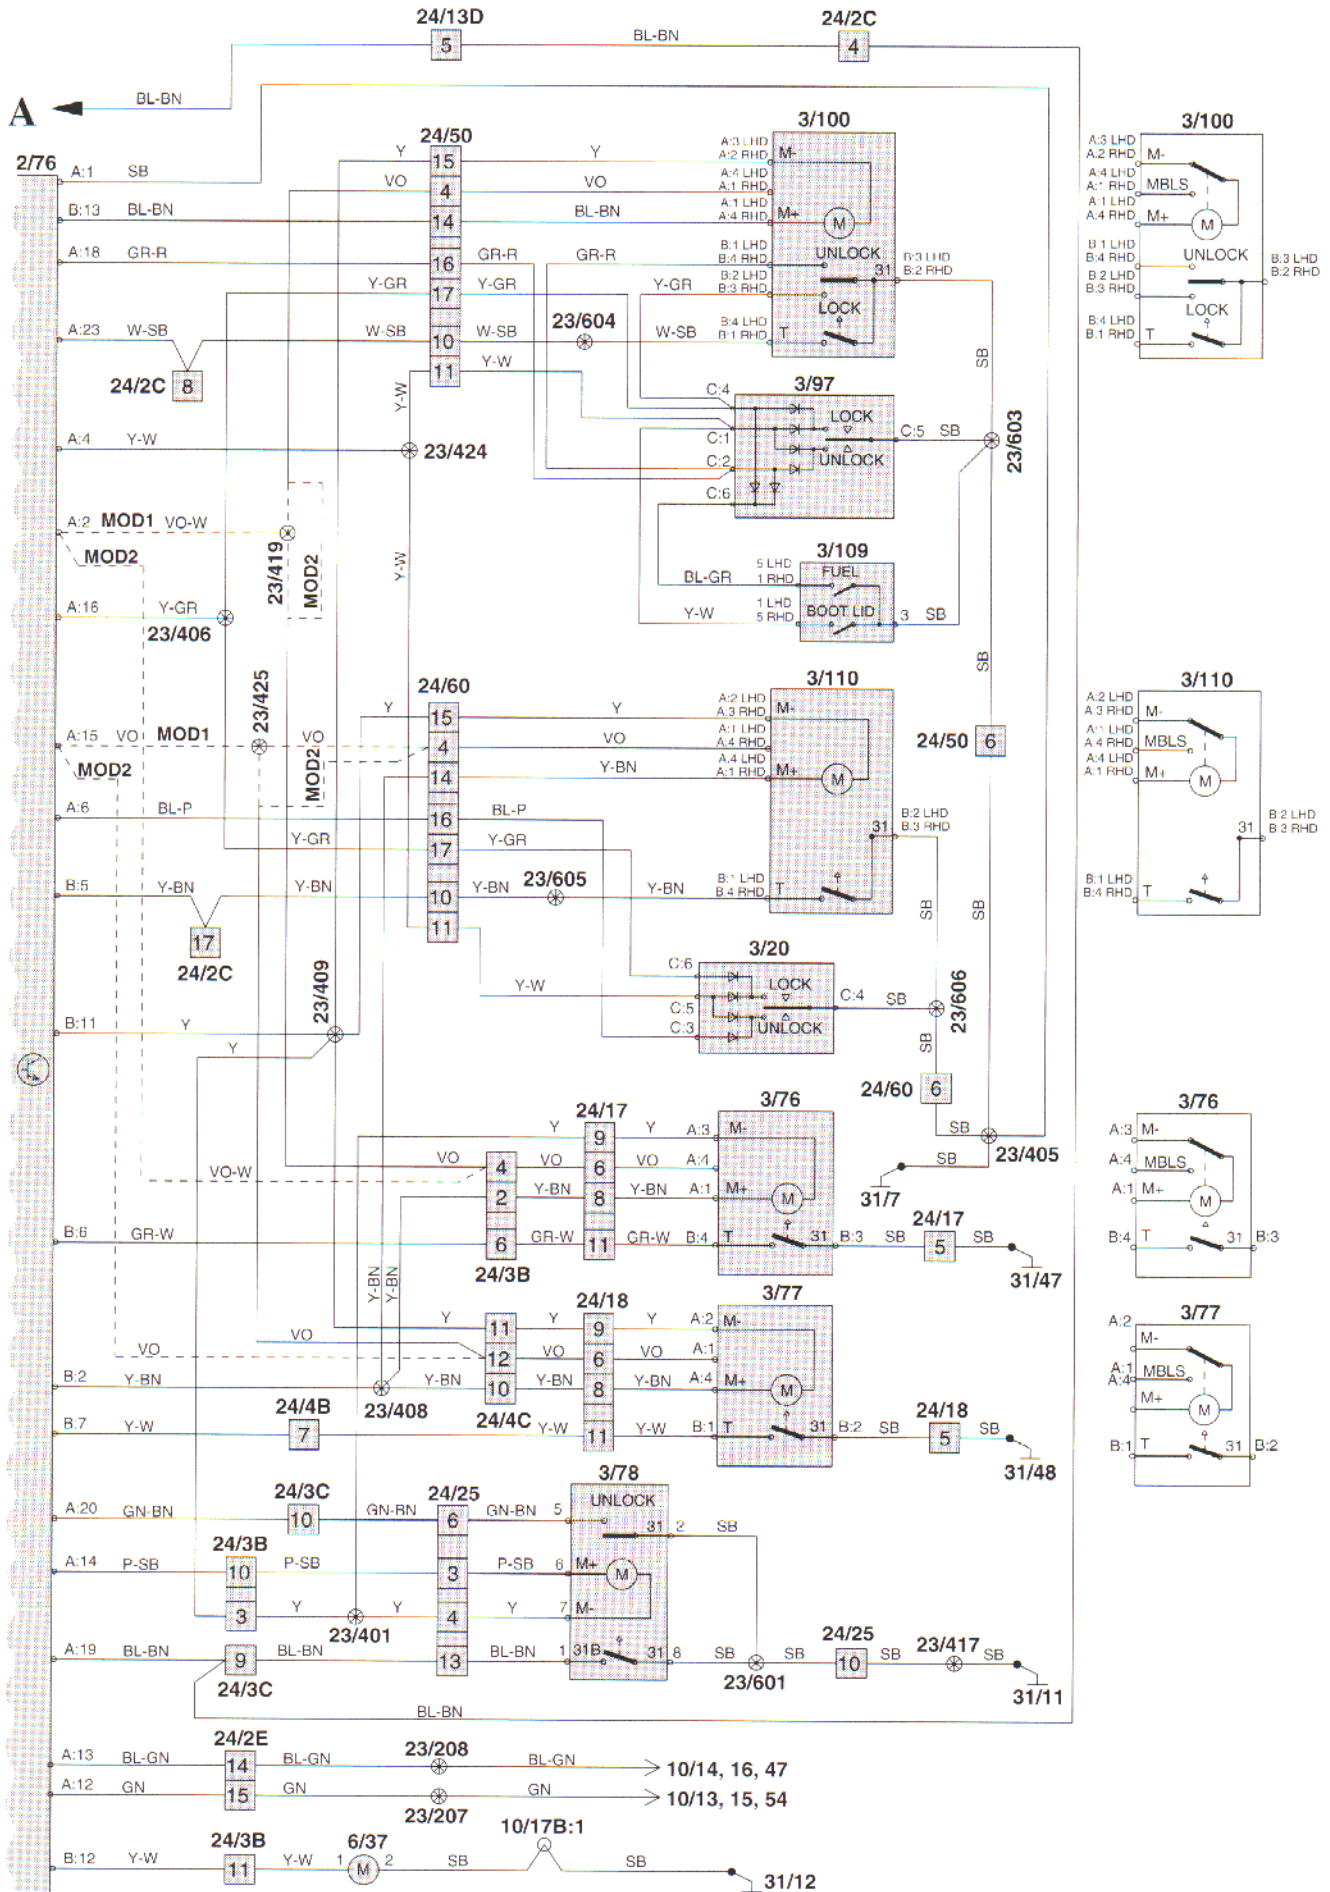











Central locking V70

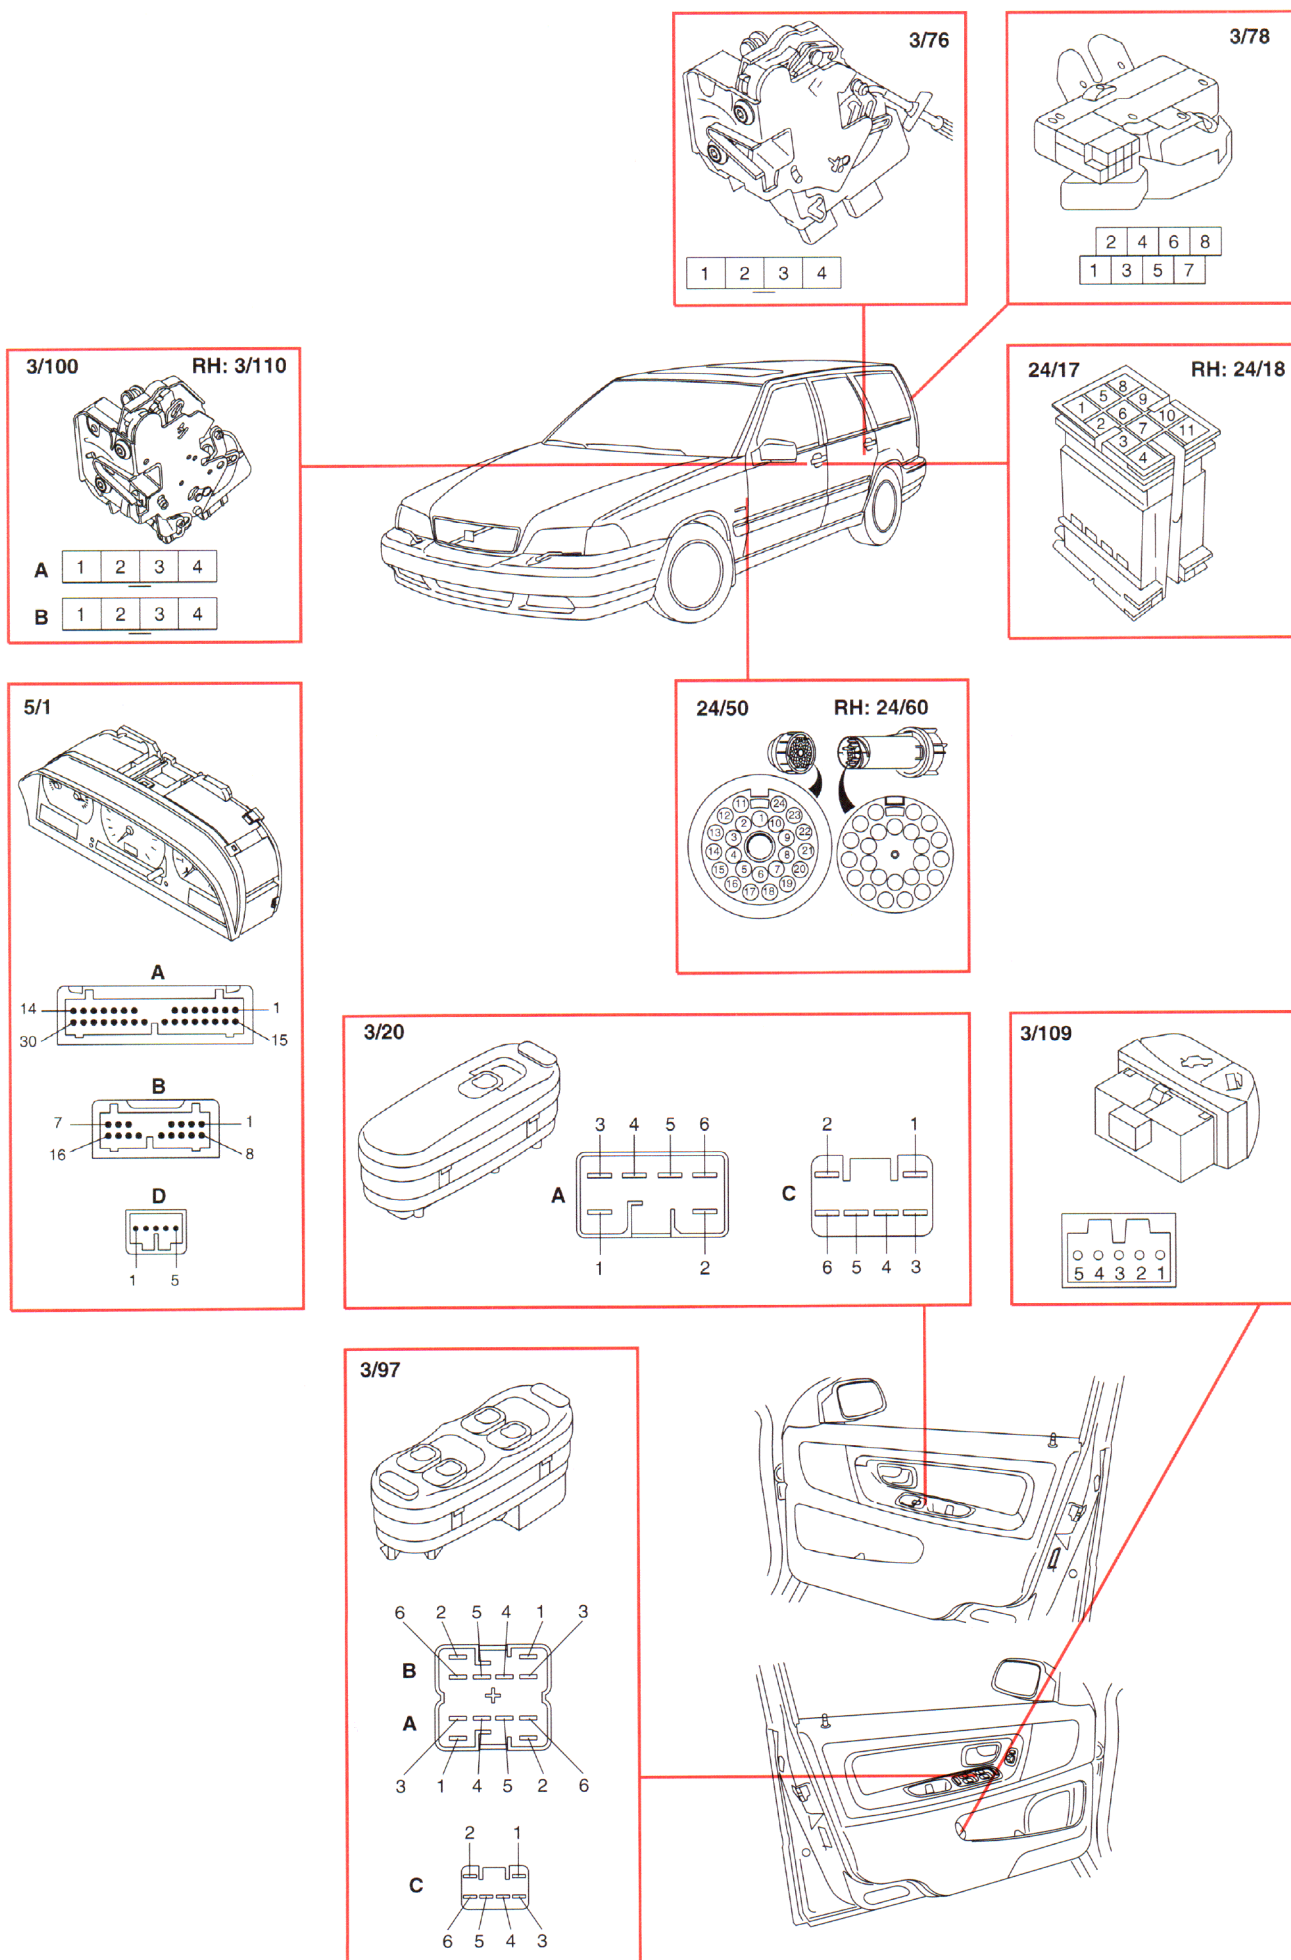
















Central locking V70

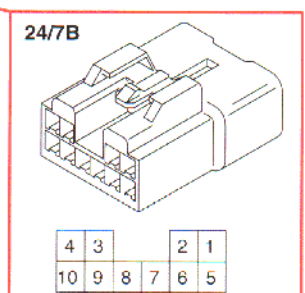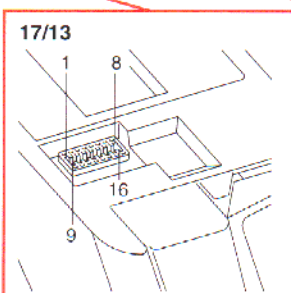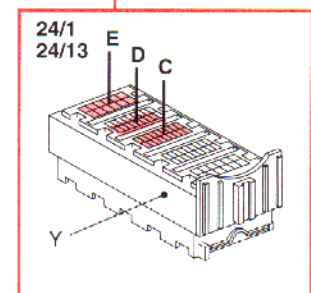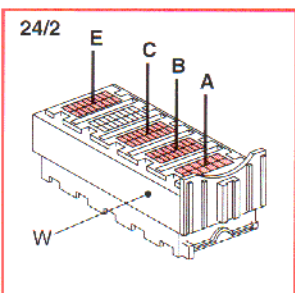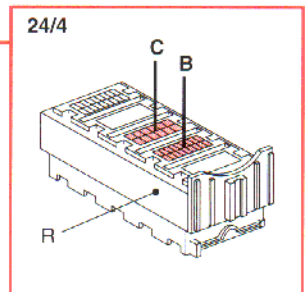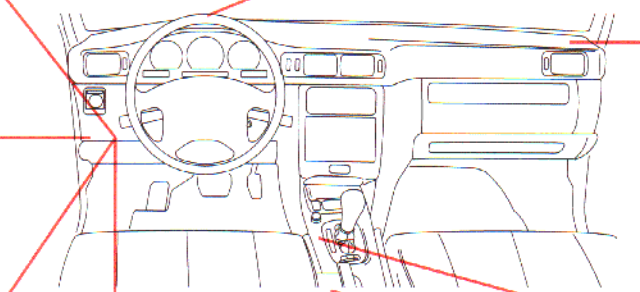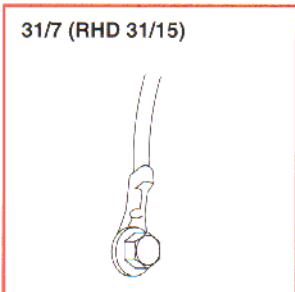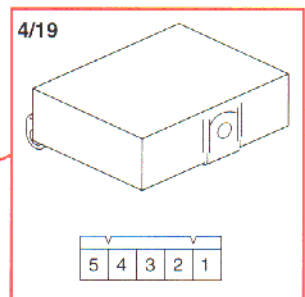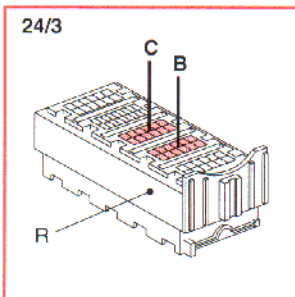
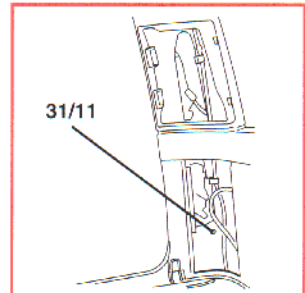
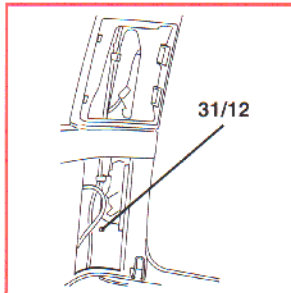
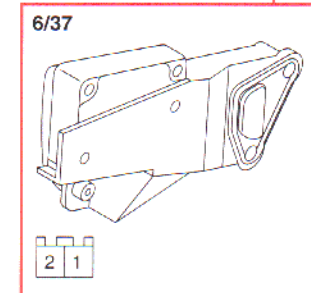
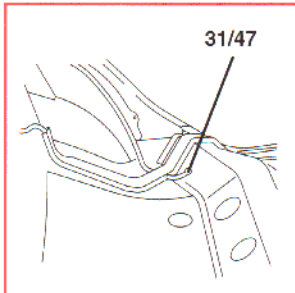
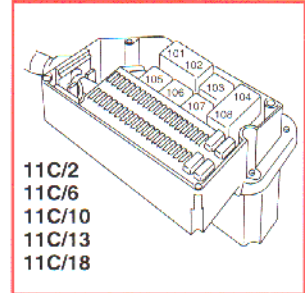
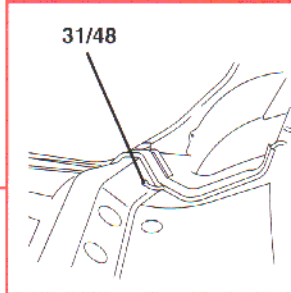
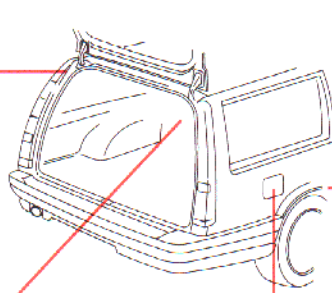
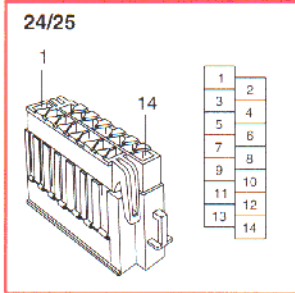


Power sunroof

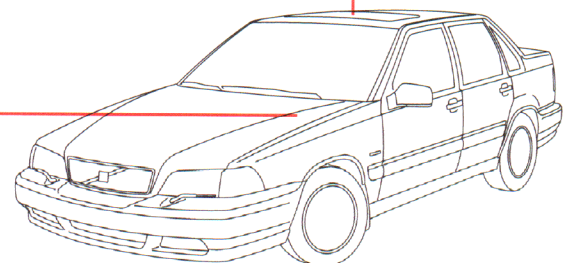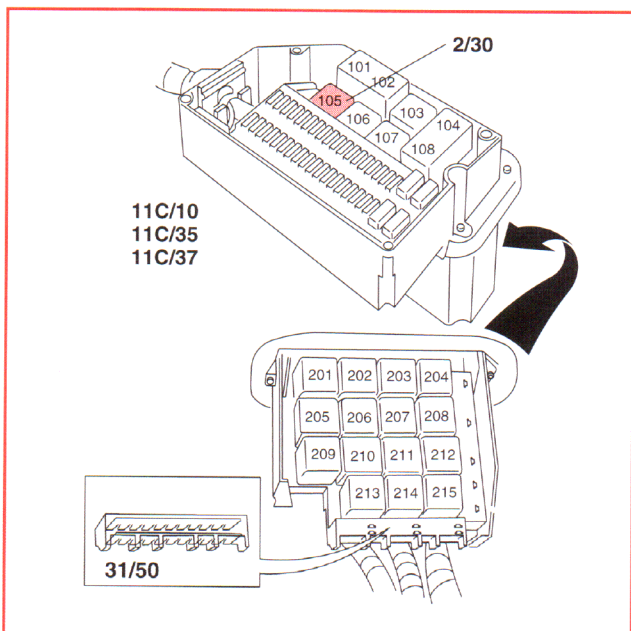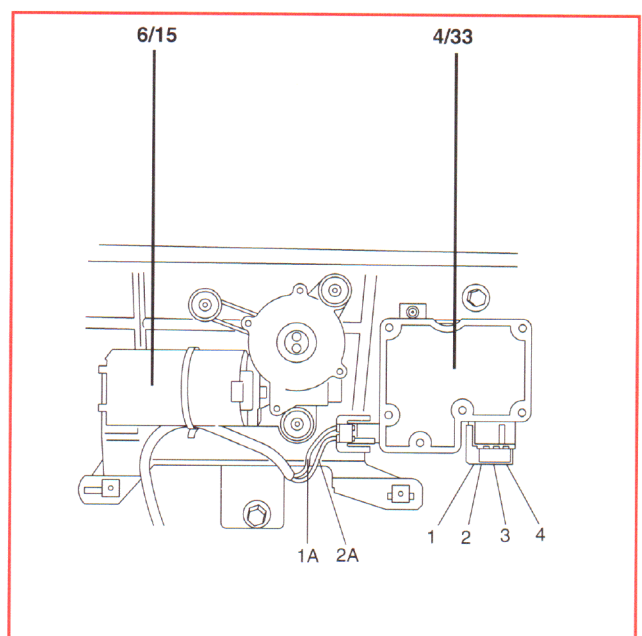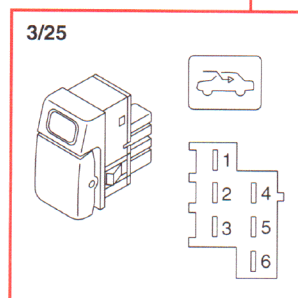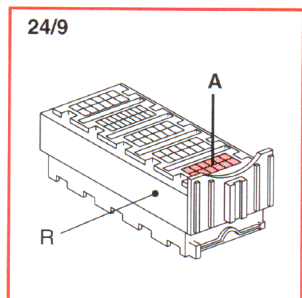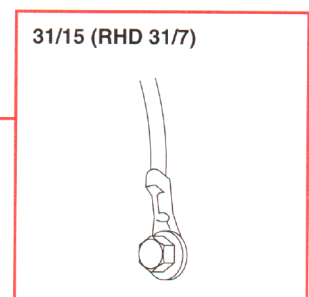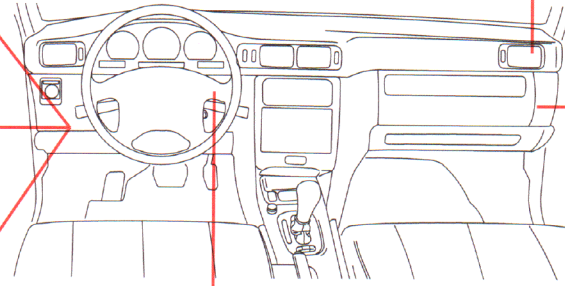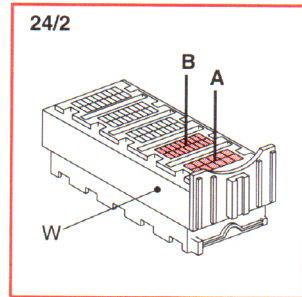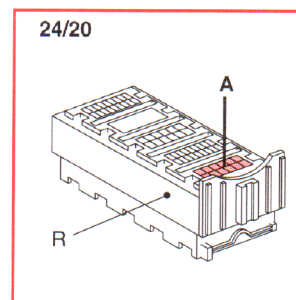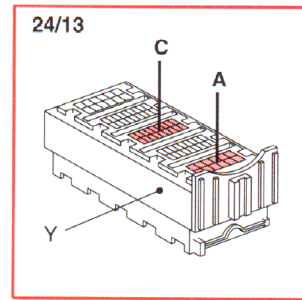


Heated rear window and heated door mirrors

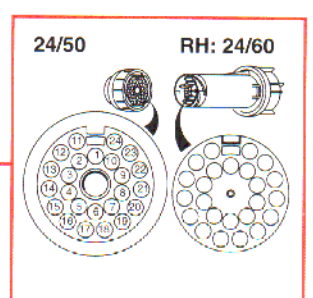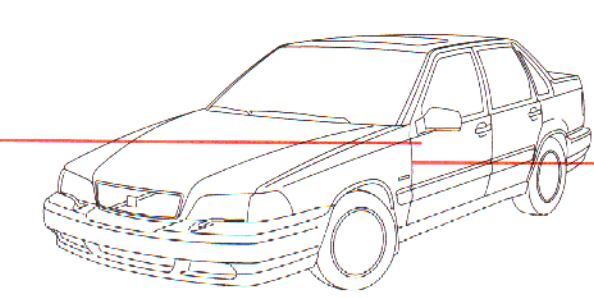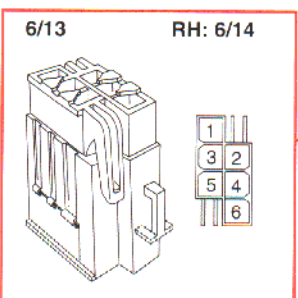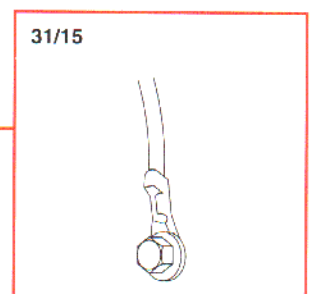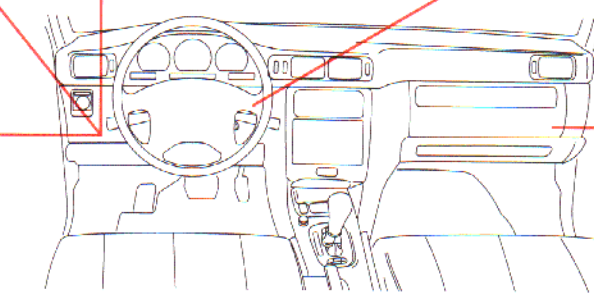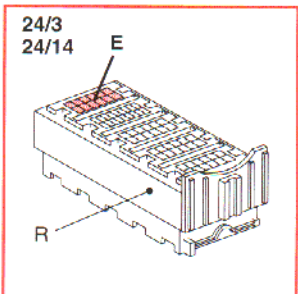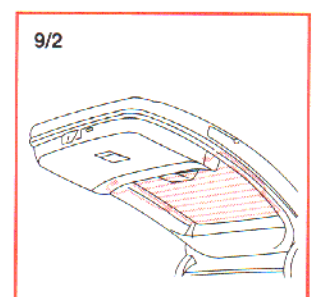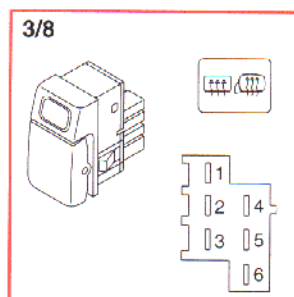
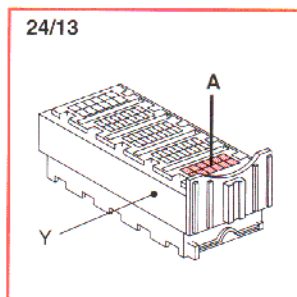
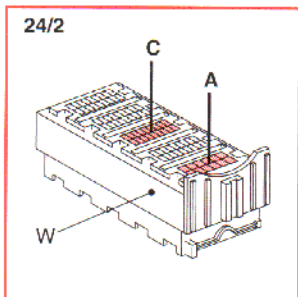
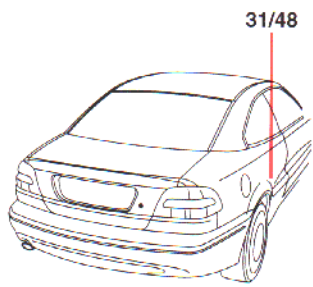
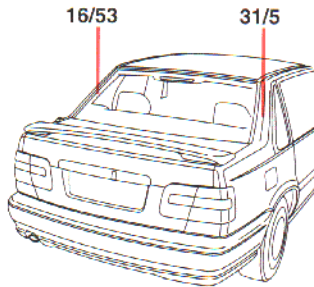
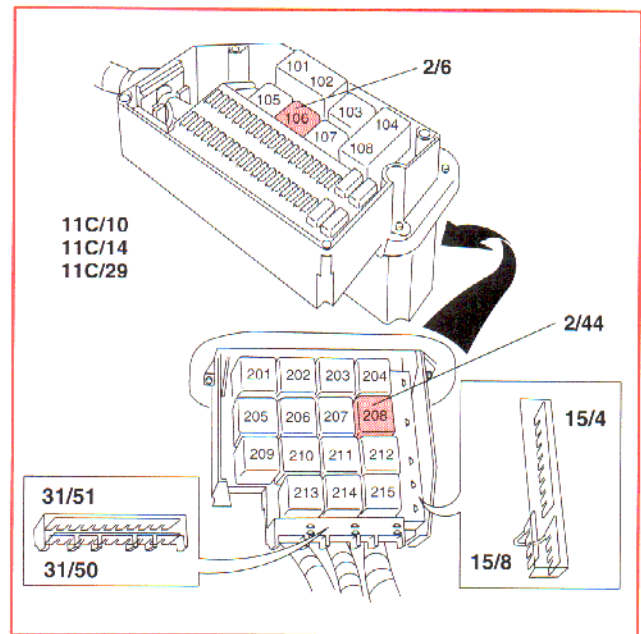
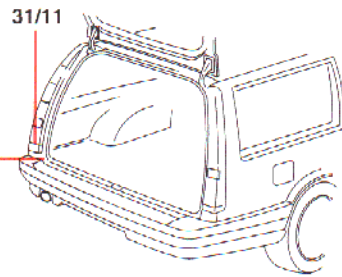
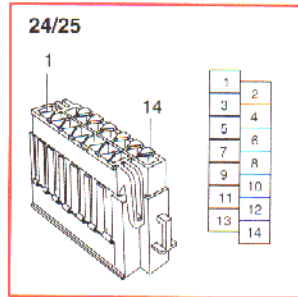









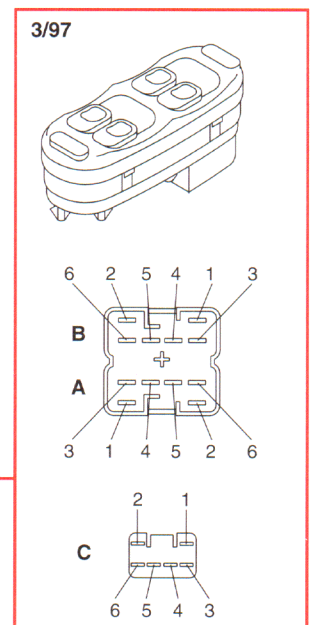
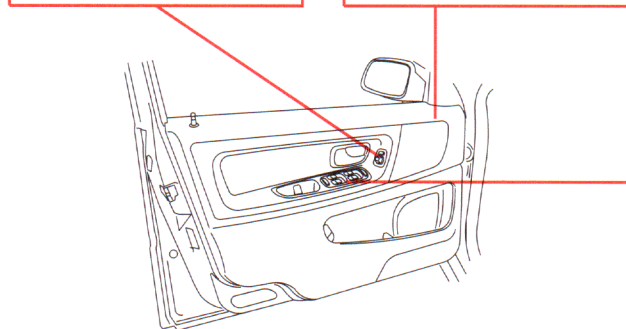
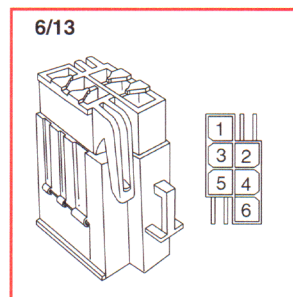
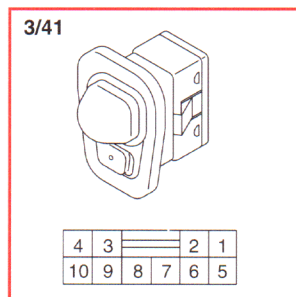
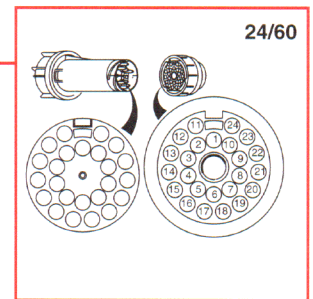
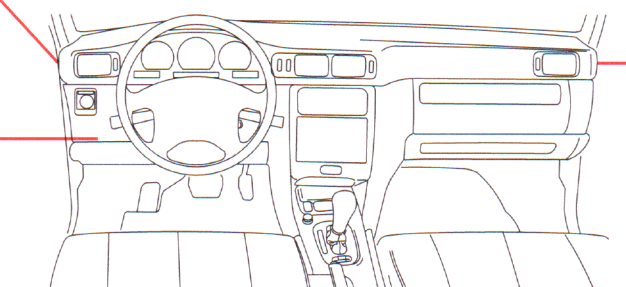
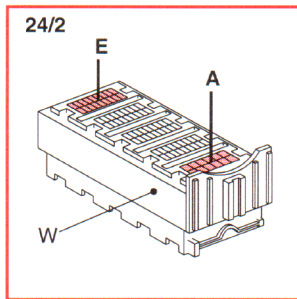
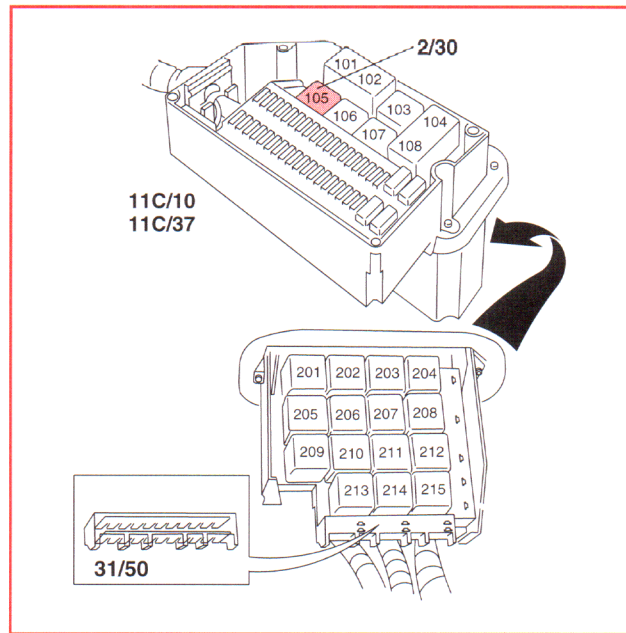
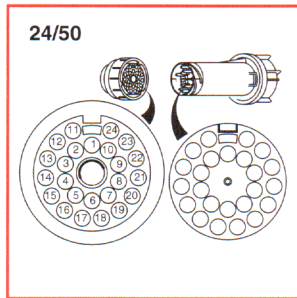


Electrically heated seats


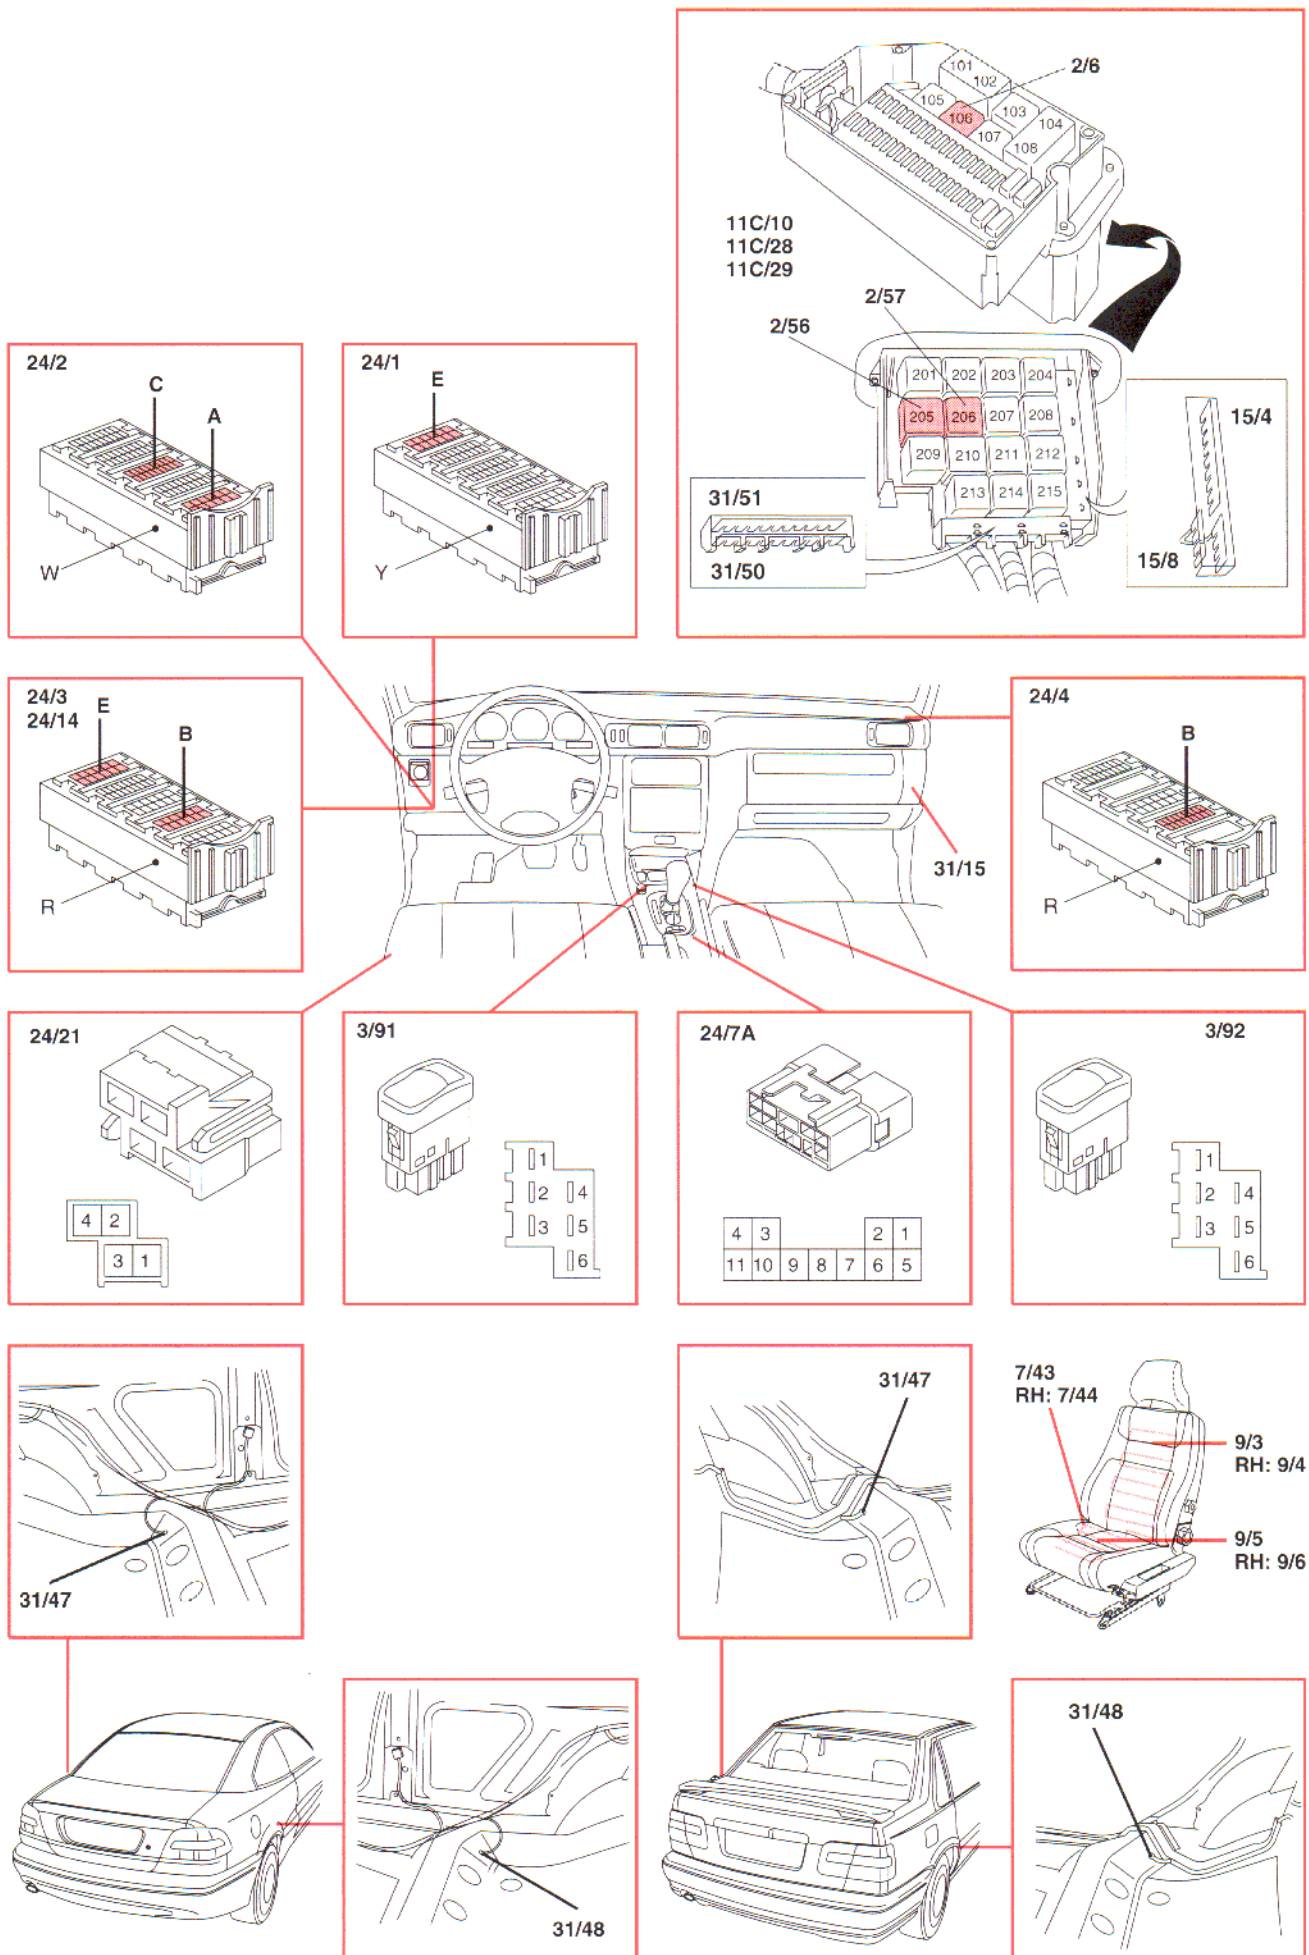


Heated rear seat


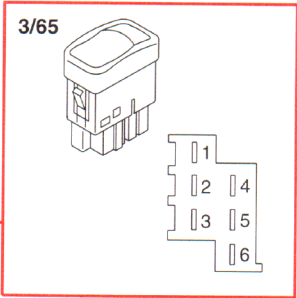
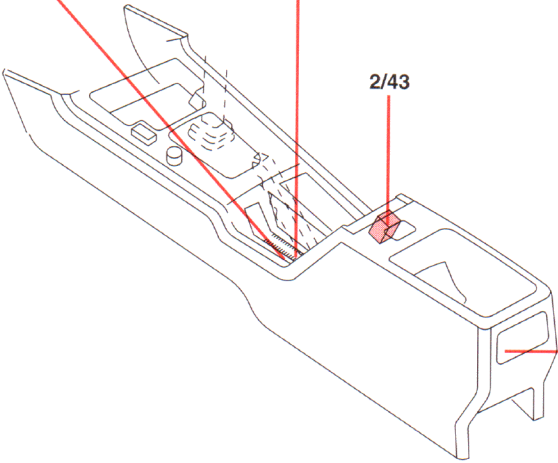
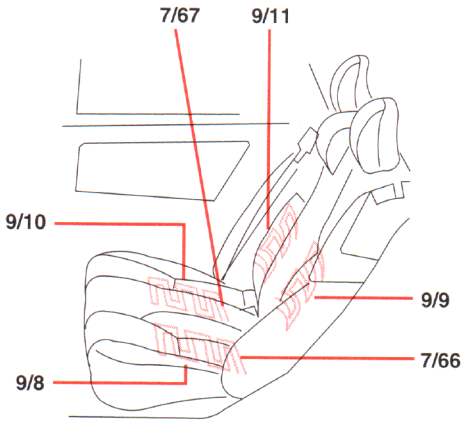
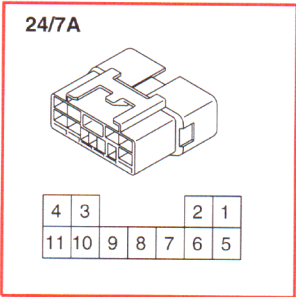
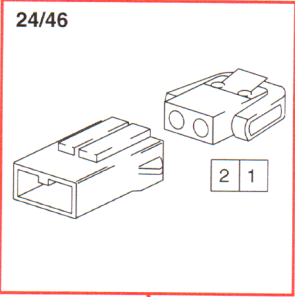
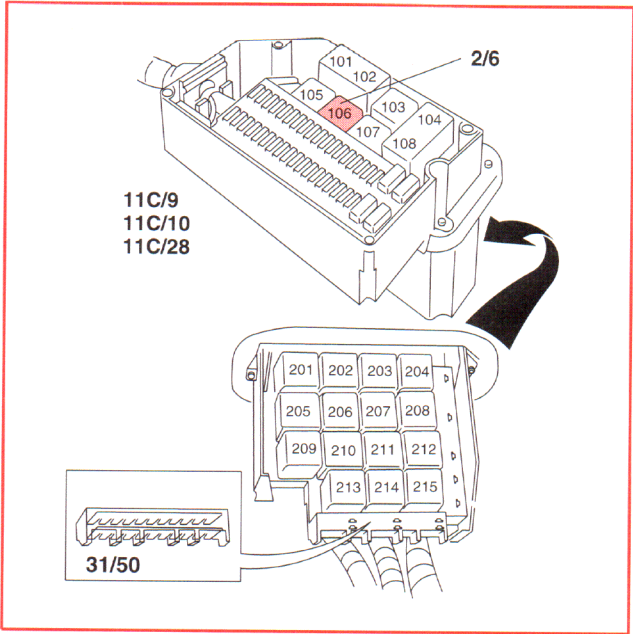
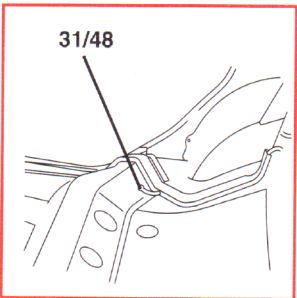
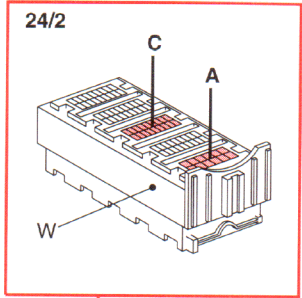


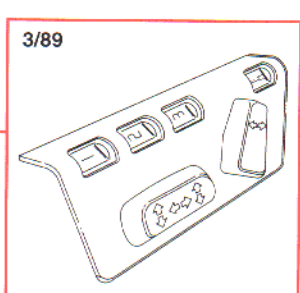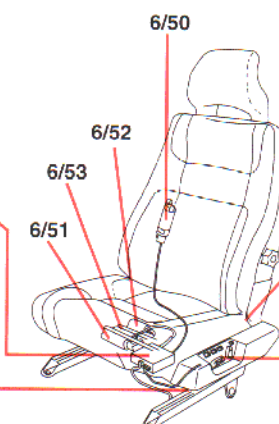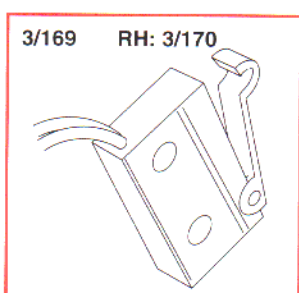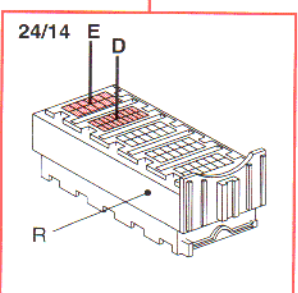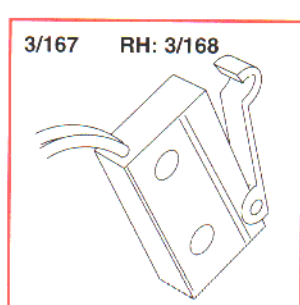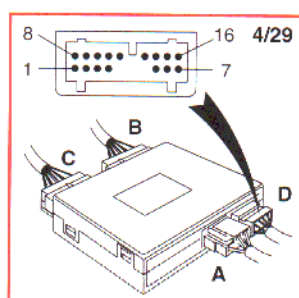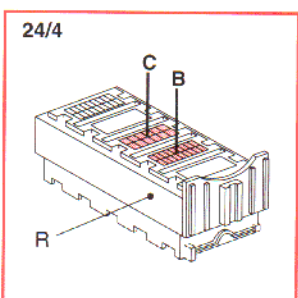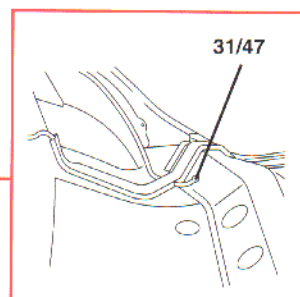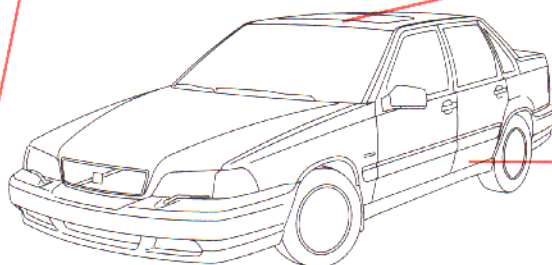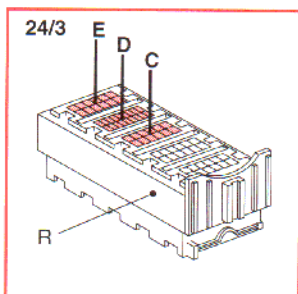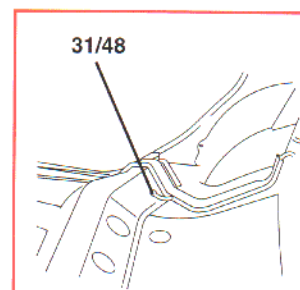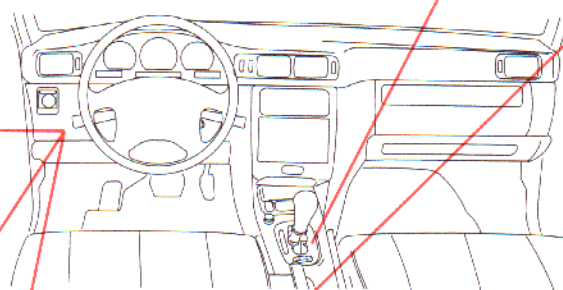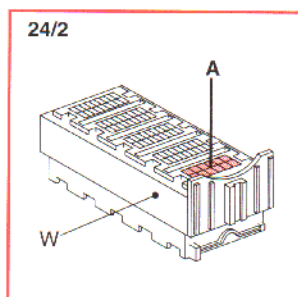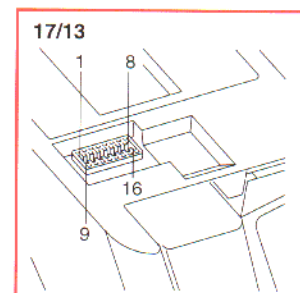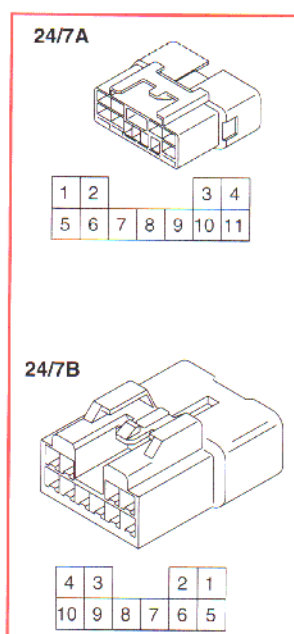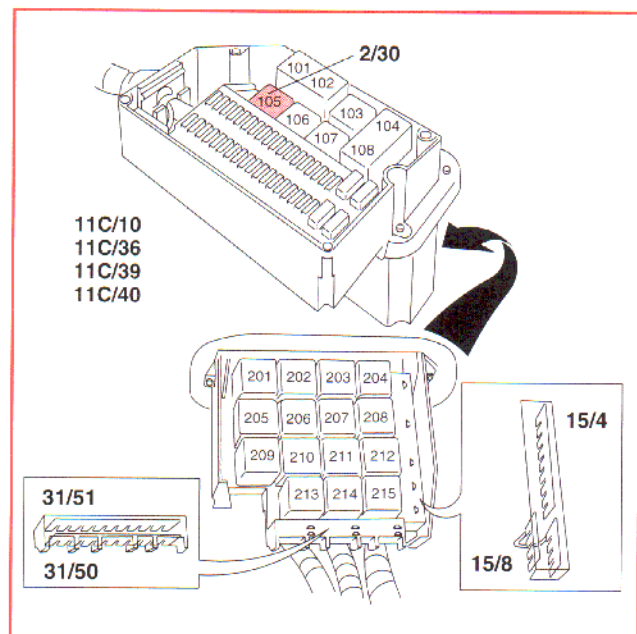

















Standard heater

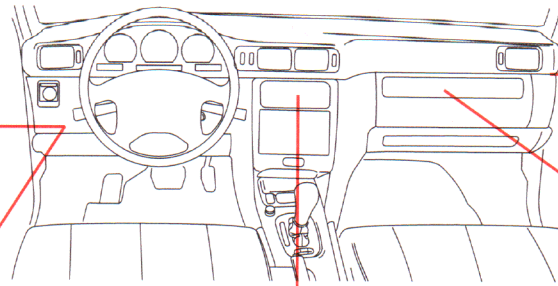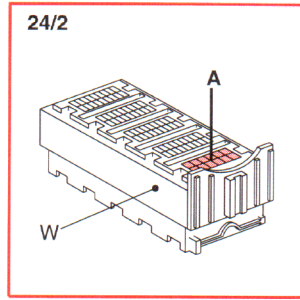
















31/15

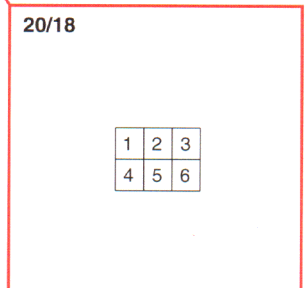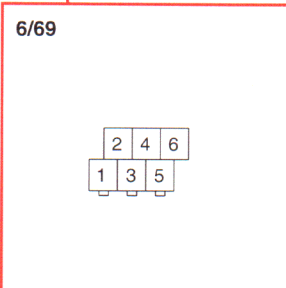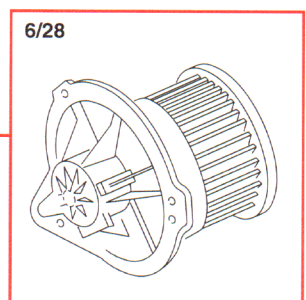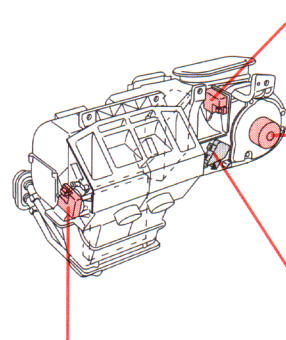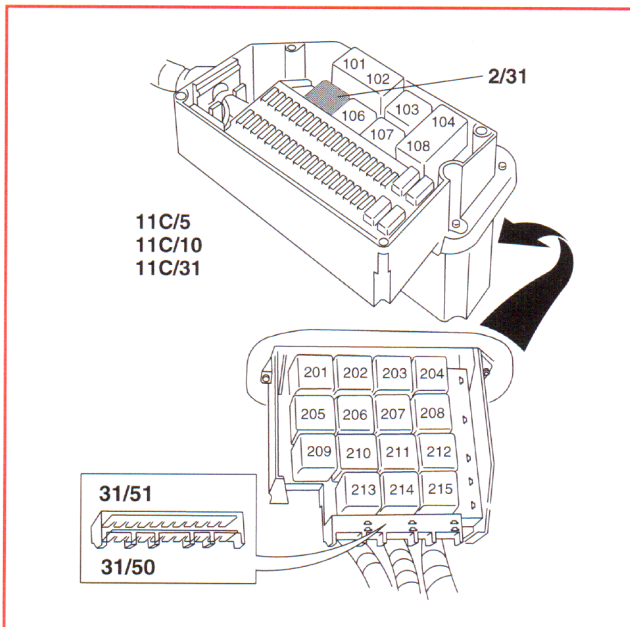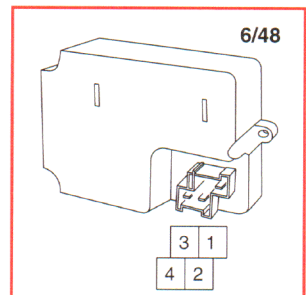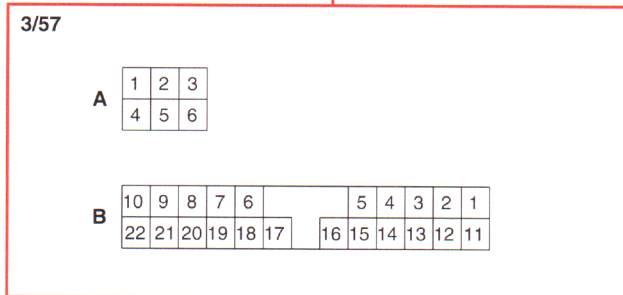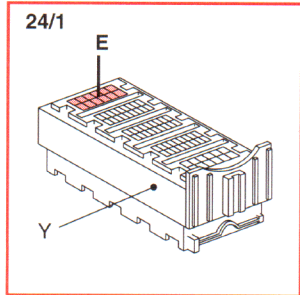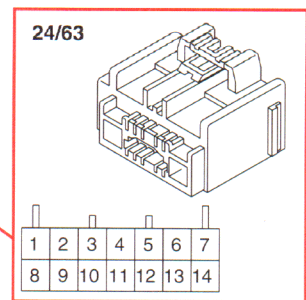


















Manual Climate Control unit MCC Fenix 5.2, Motronic 4.3/4.4

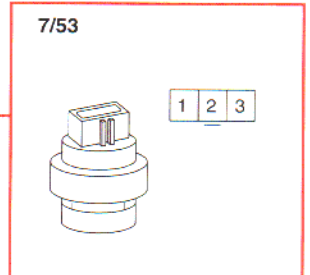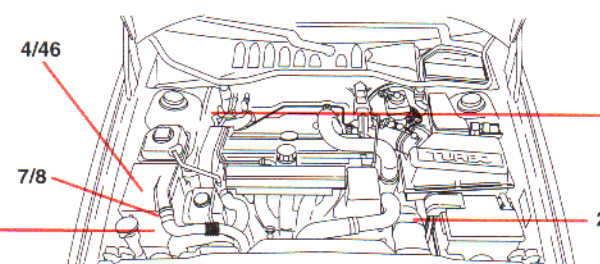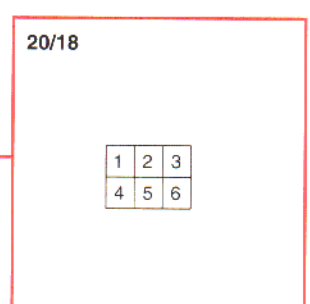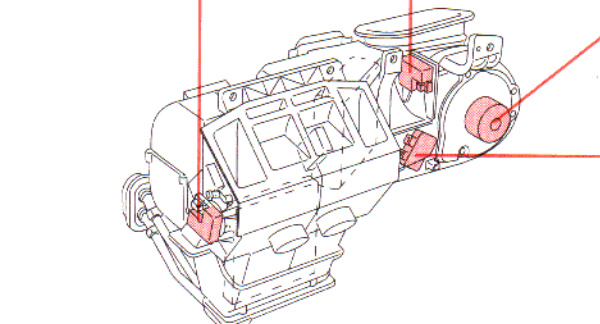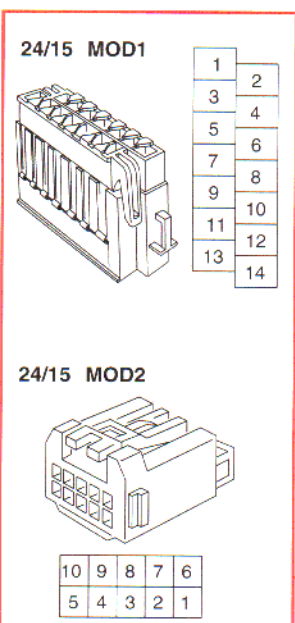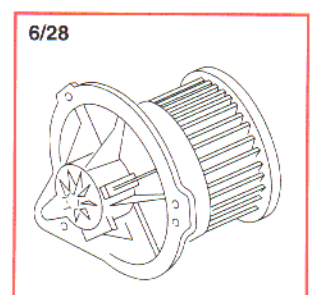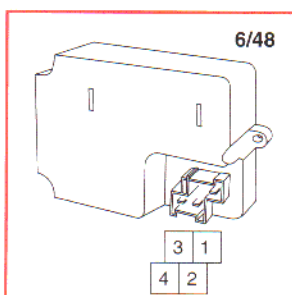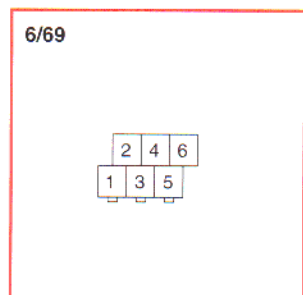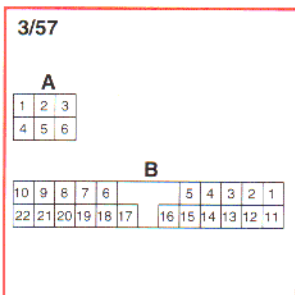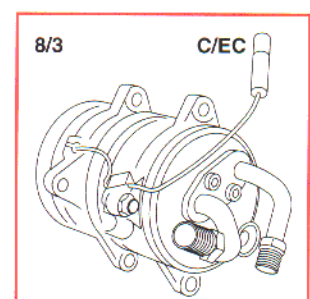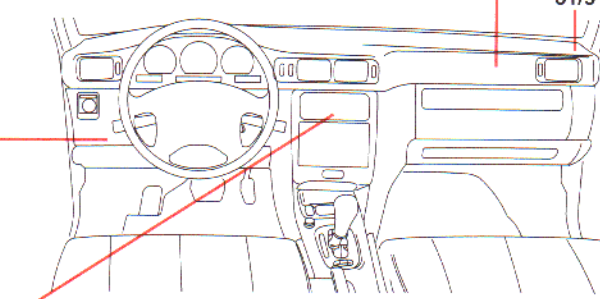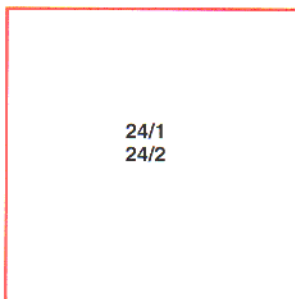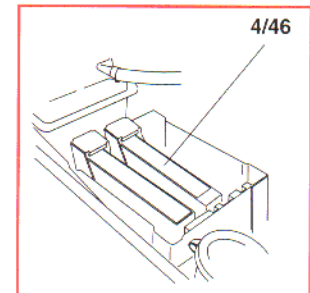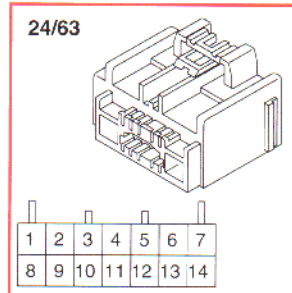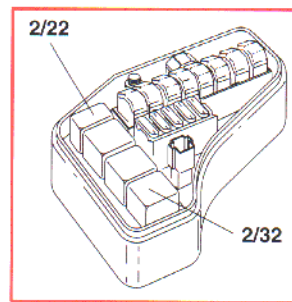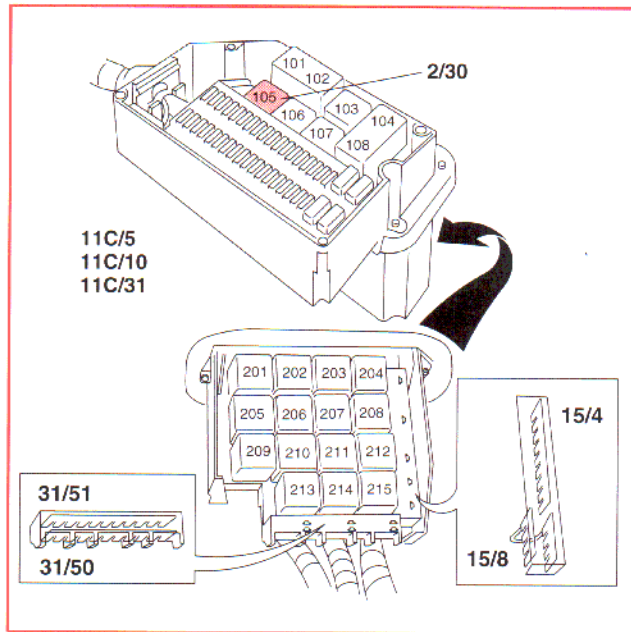















Manual Climate Control unit MCC MSA 15.7

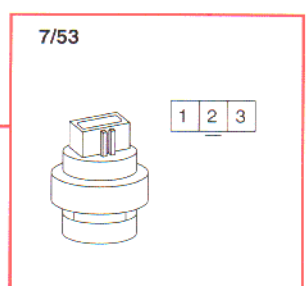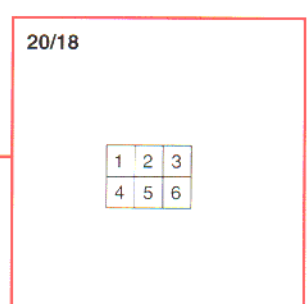
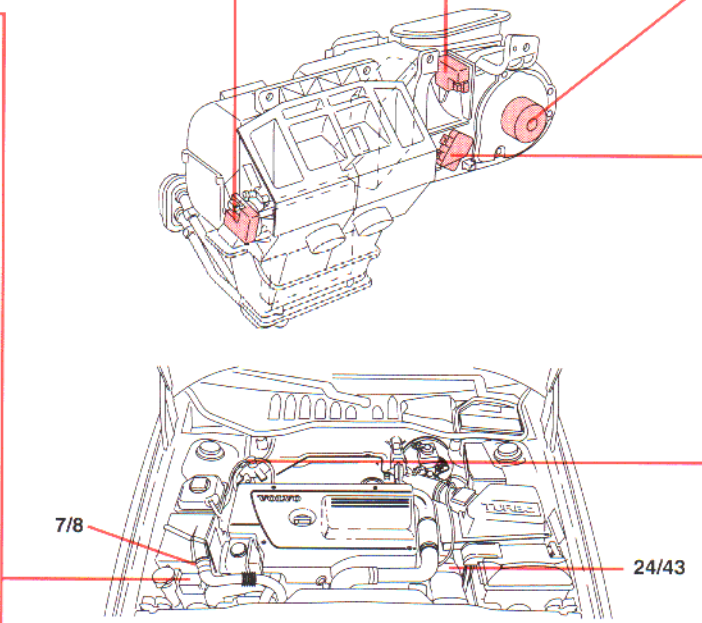
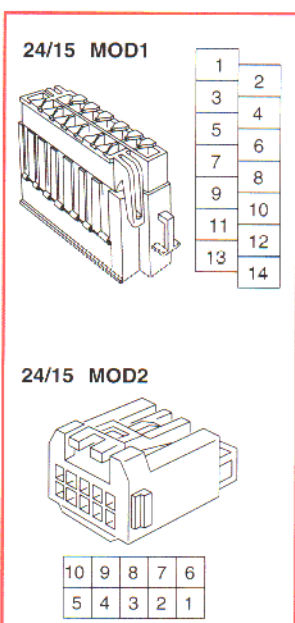
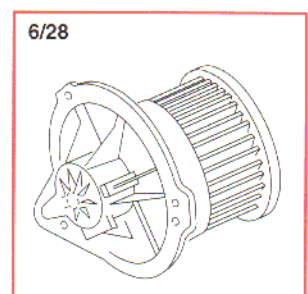
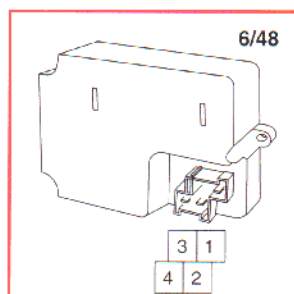
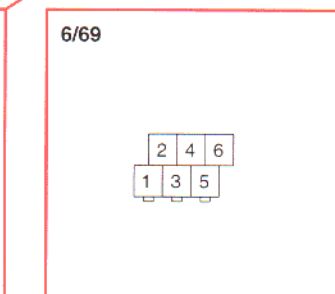
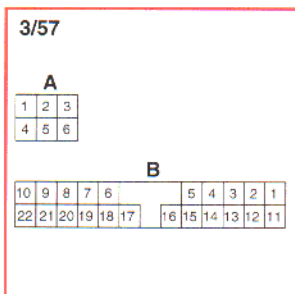
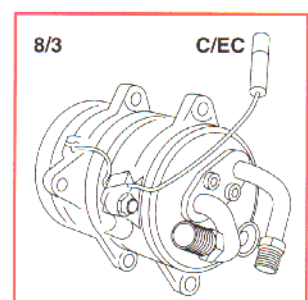
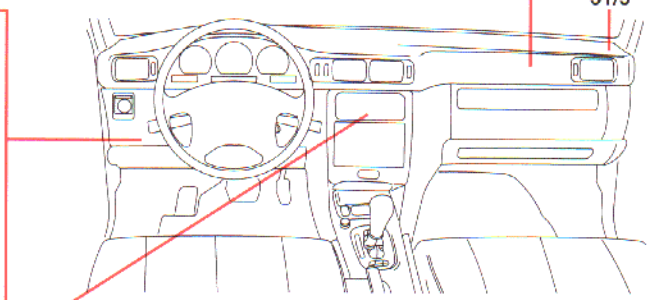
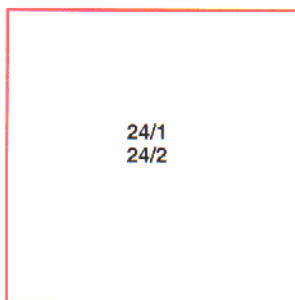
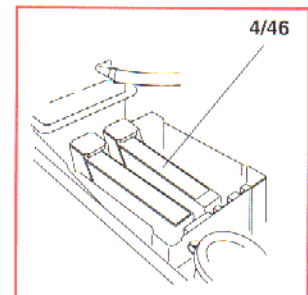
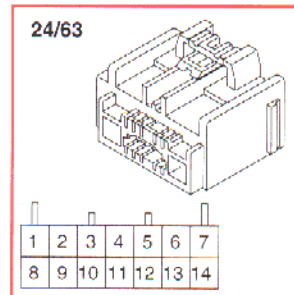
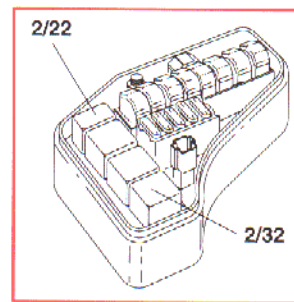
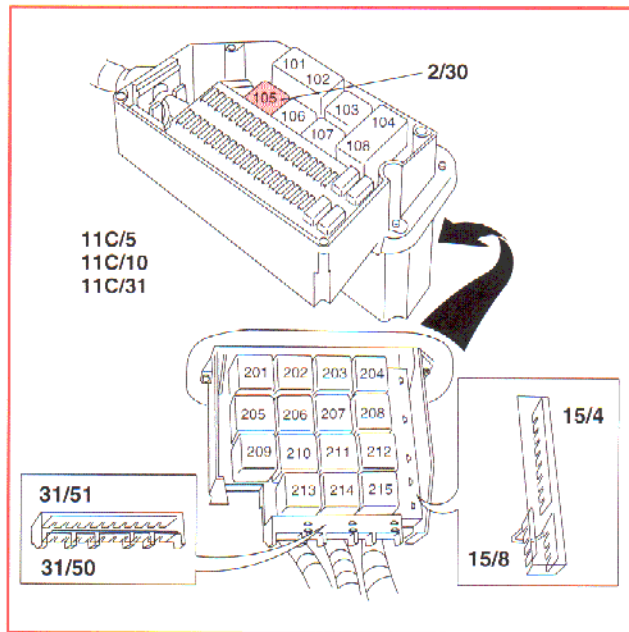


Electronic climate control ECC Fenix 5.2, Motronic 4.3/4.4

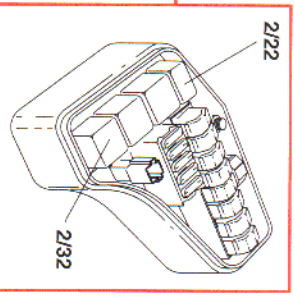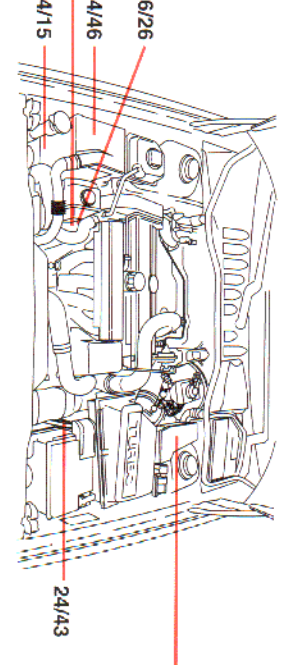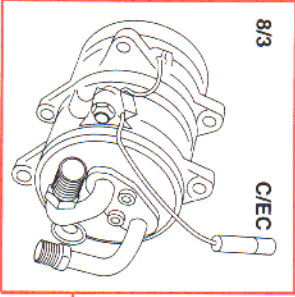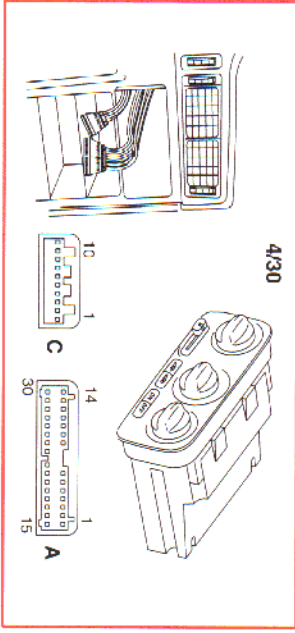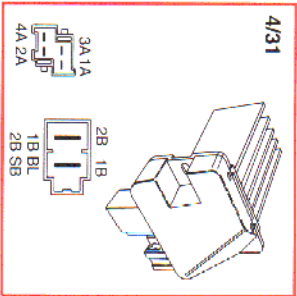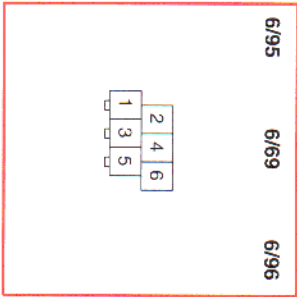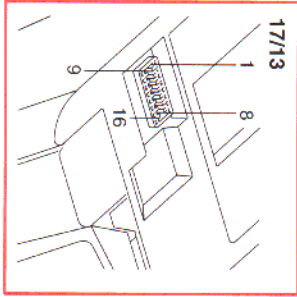
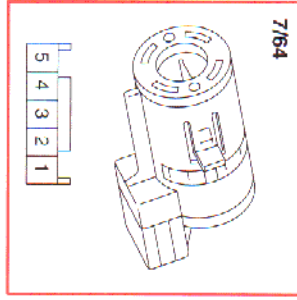
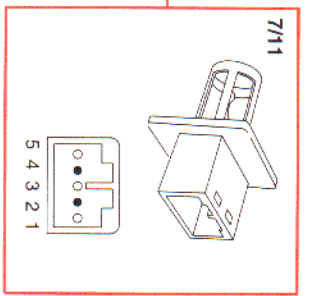
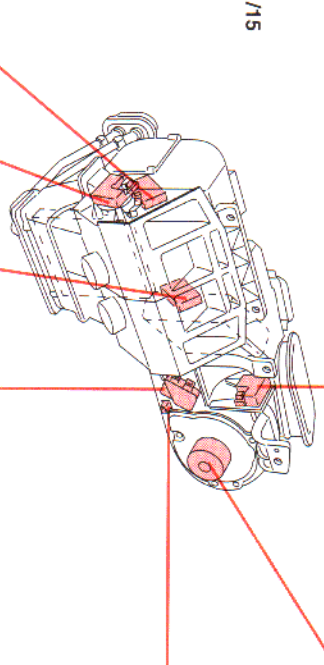
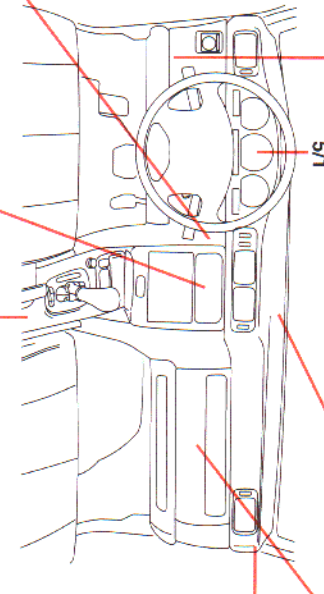
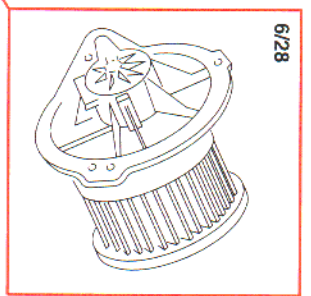
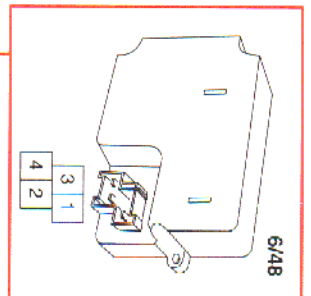
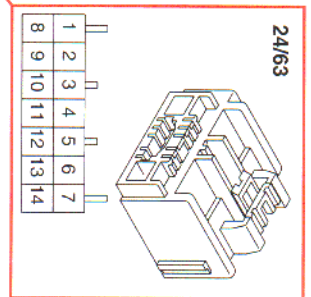
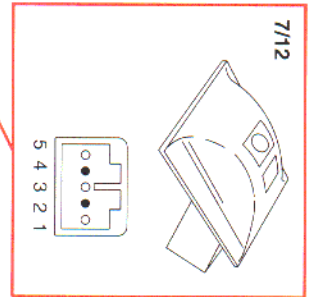
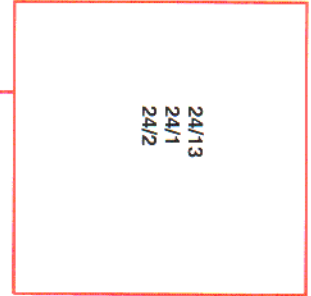
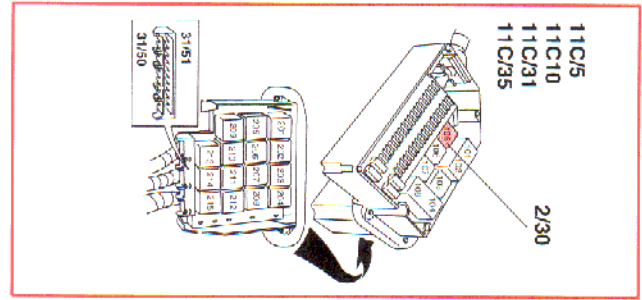


Electronic climate control ECC
MSA 15.7

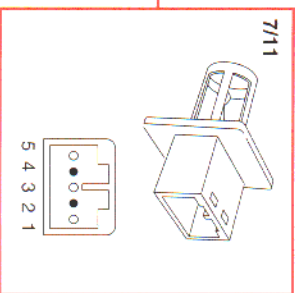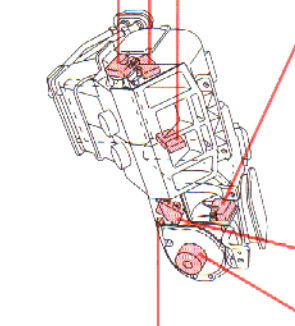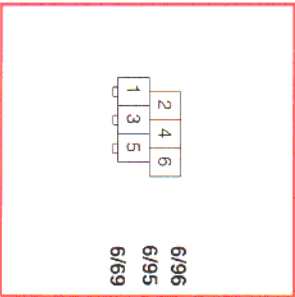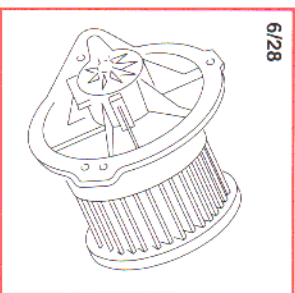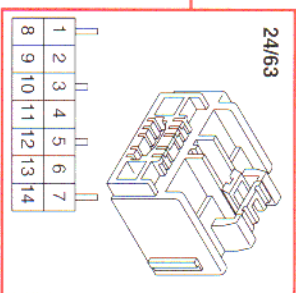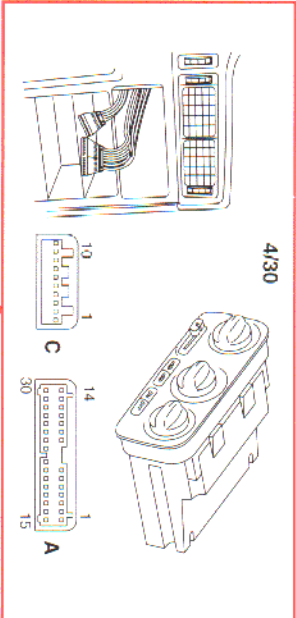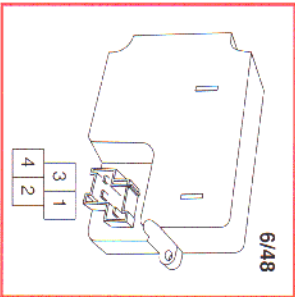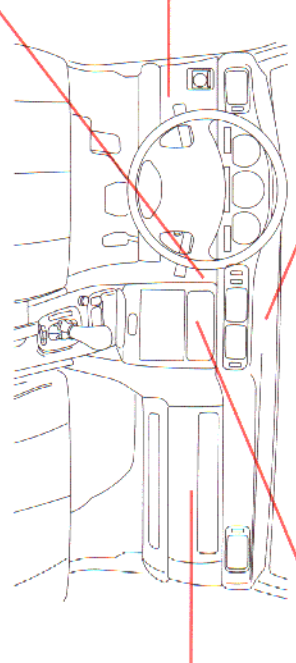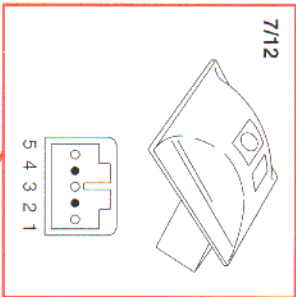
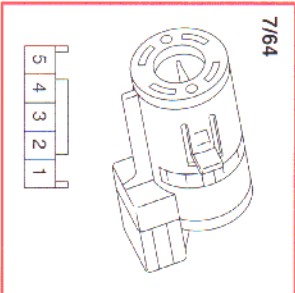
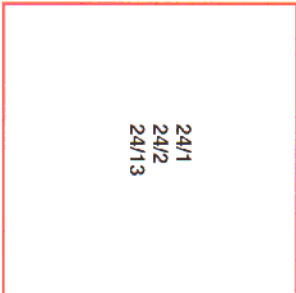
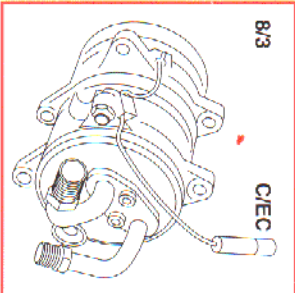
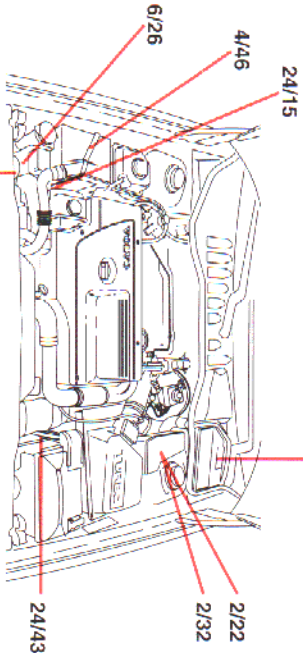
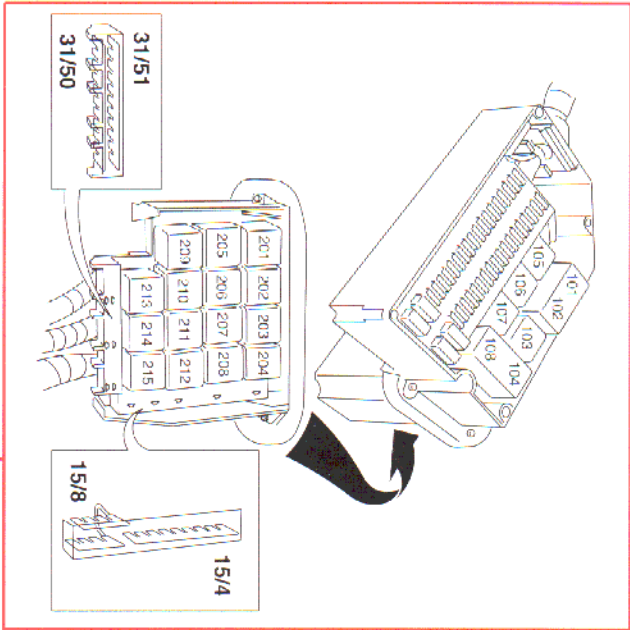


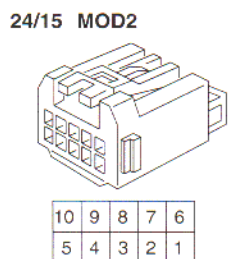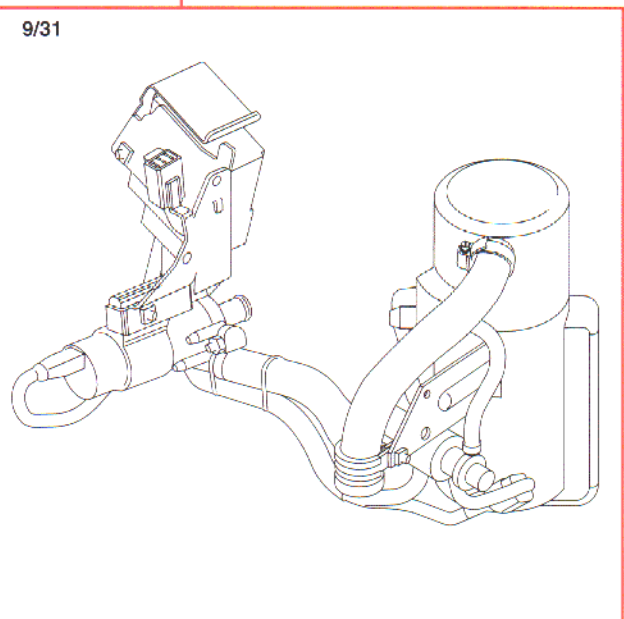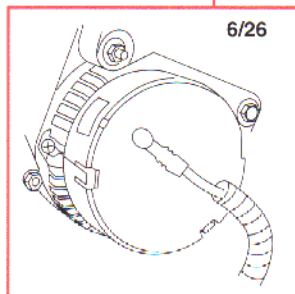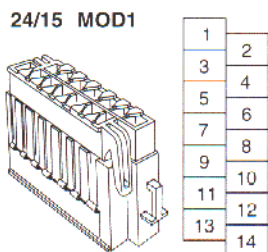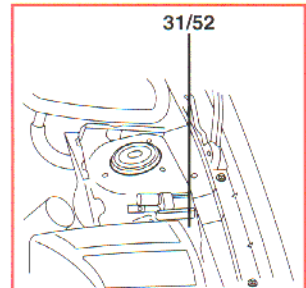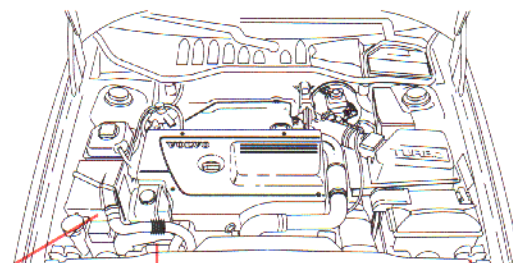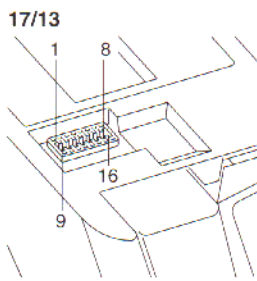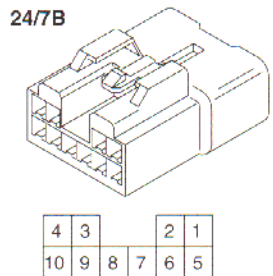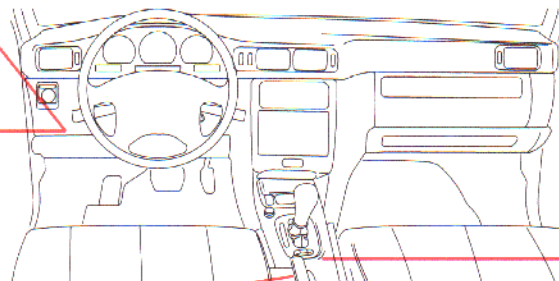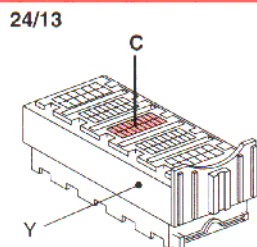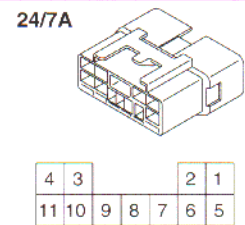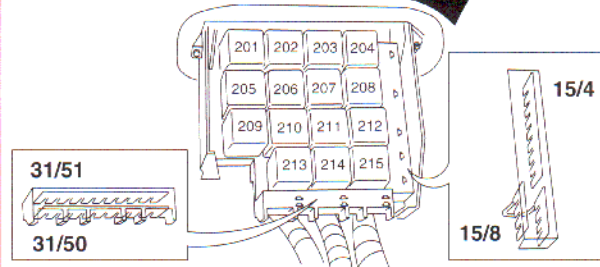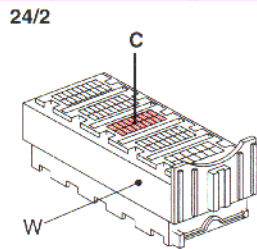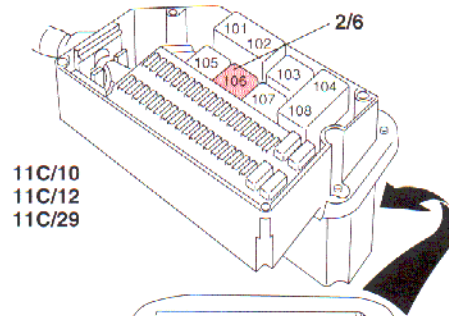

Cargo compartment fans

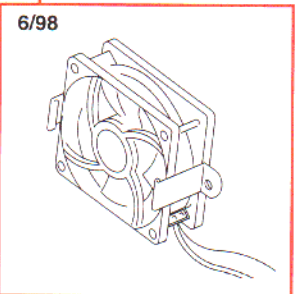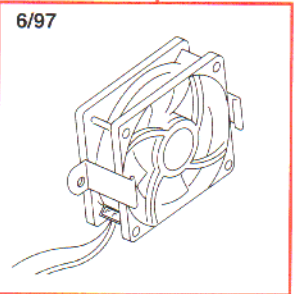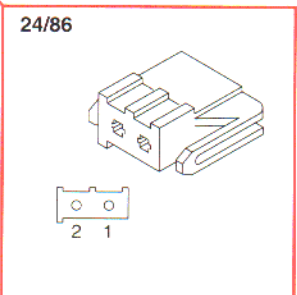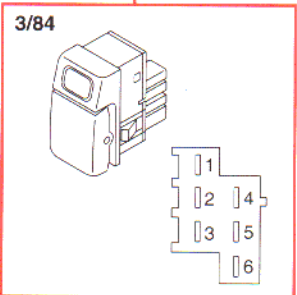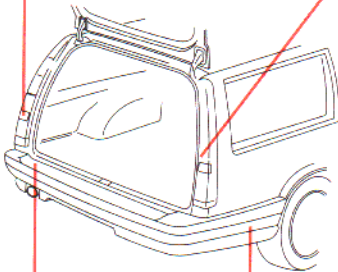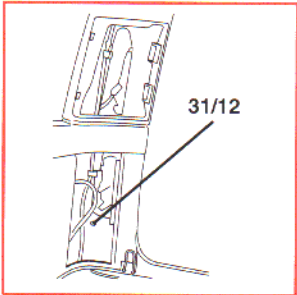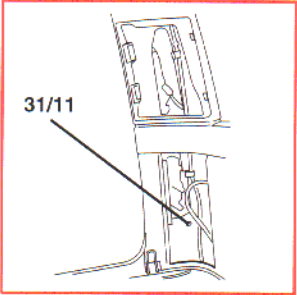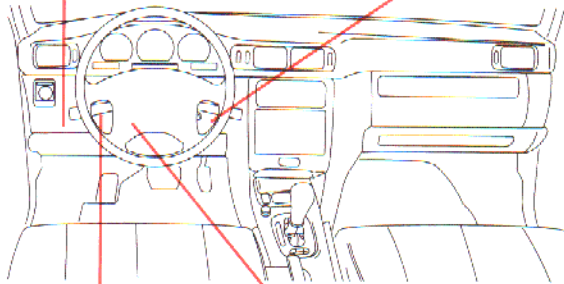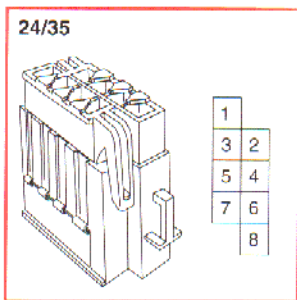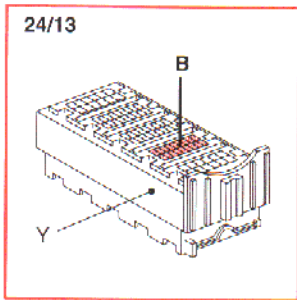
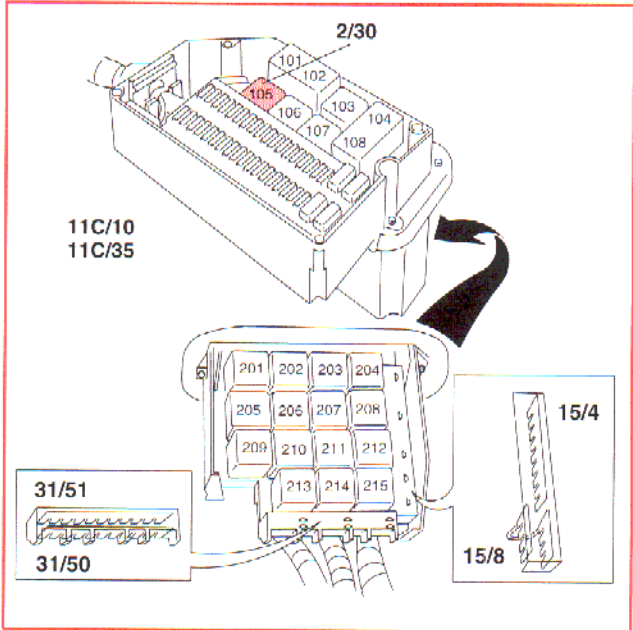


Exhaust temperature switch

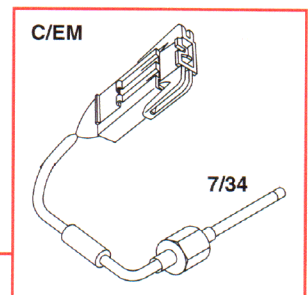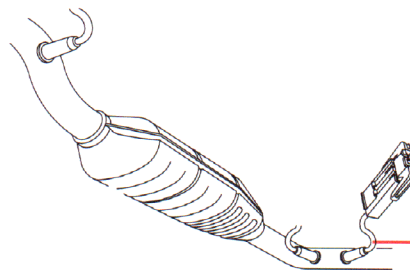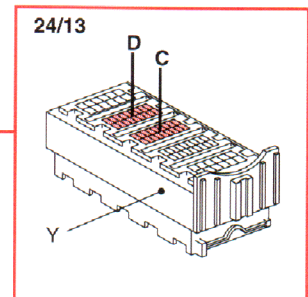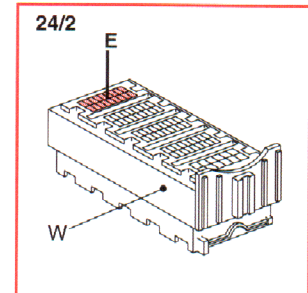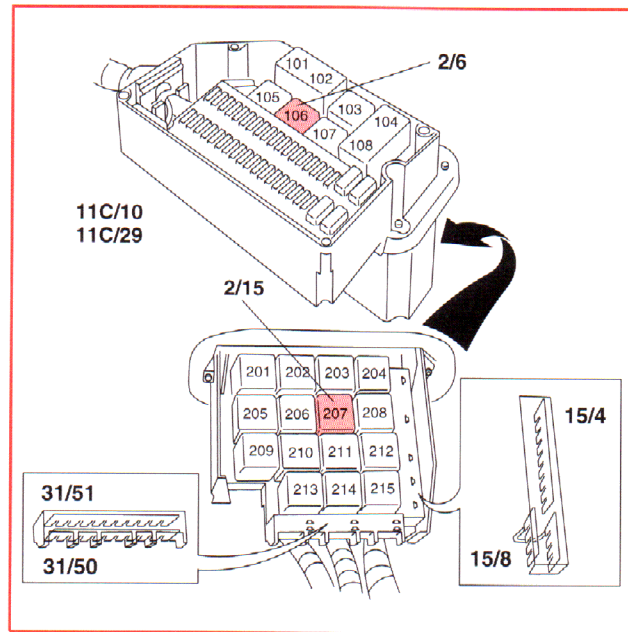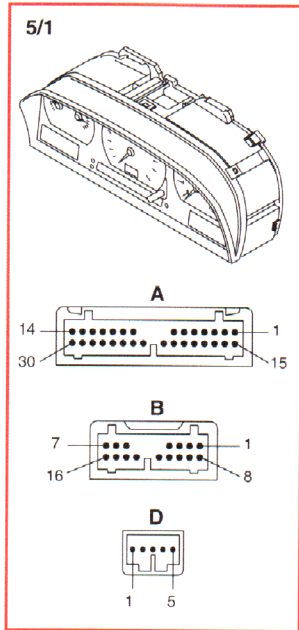


Rear view mirror with automatic dimming


8/48

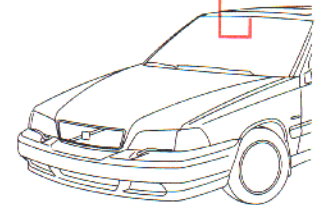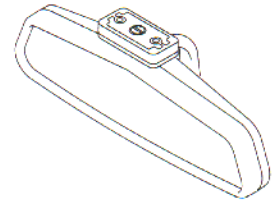

11C/10
11C/27
11C/35

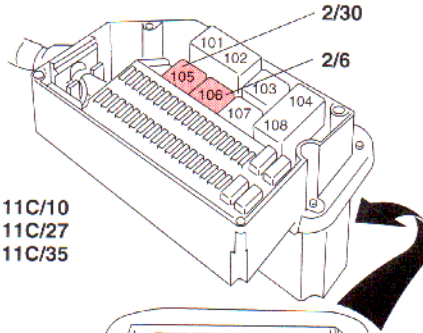



31/51
31/50

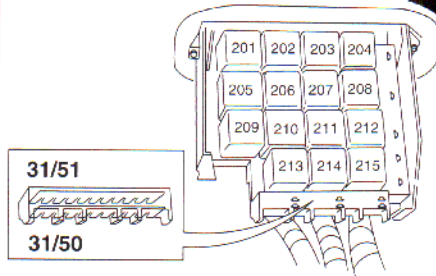


31/7 (RHD 31/15)




24/2

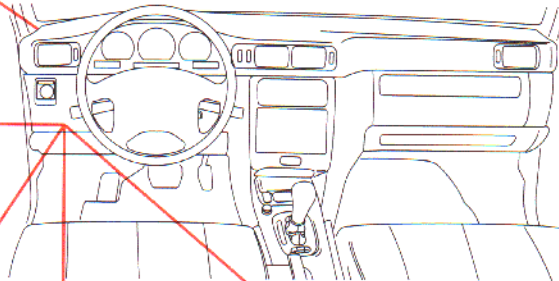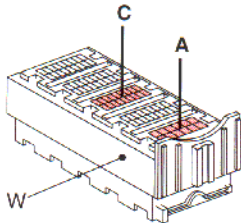


24/53

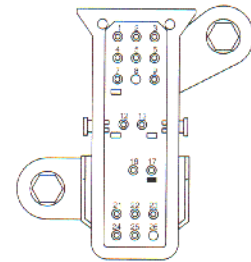


24/3

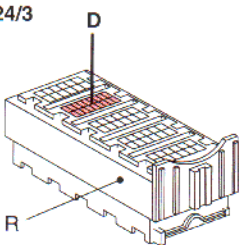


24/9

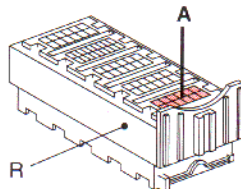


24/14

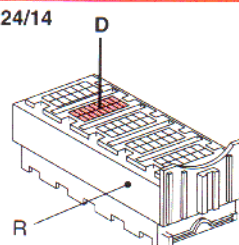


3/71

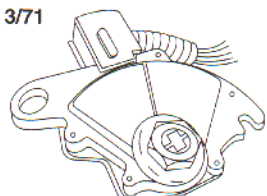



24/13

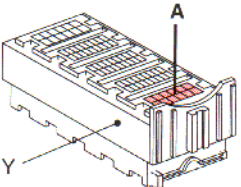


24/15 MOD1

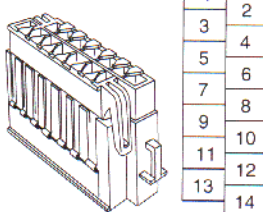


24/15 MOD2

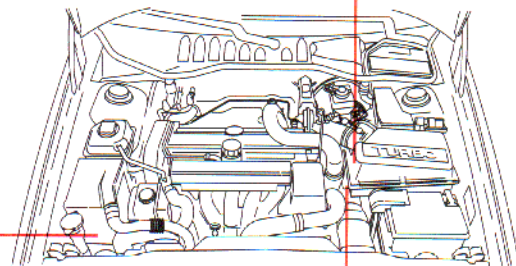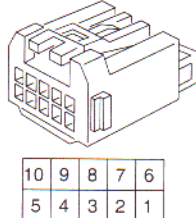

3/10

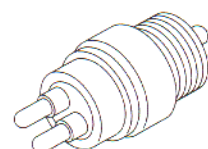

Cruise control (Fenix 4.4 Motronic 5.2/4.3) Function diagram

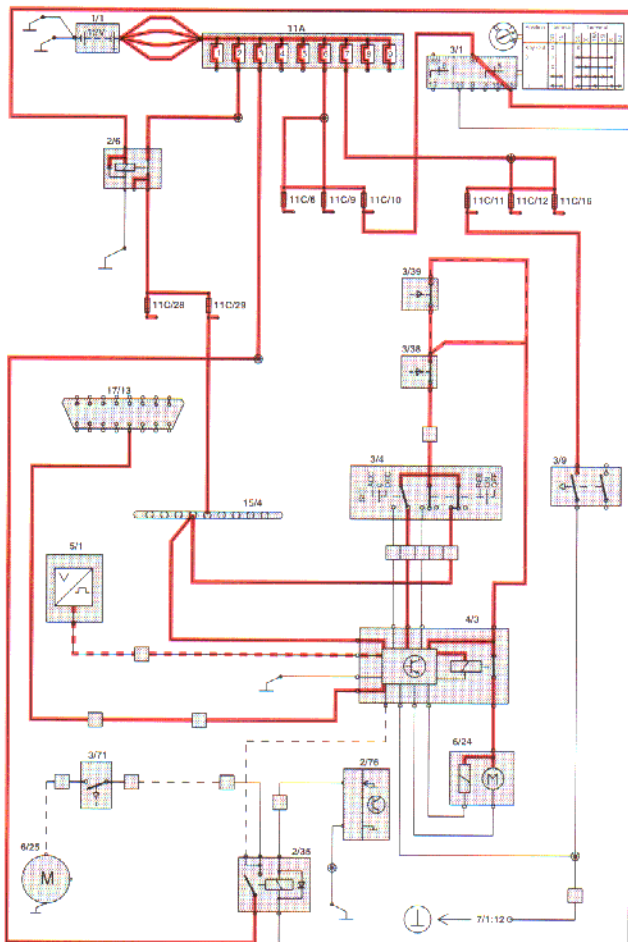


Reducing speed.

Switch in the ON position.

Cruise control controls speed reduction.

If the SET button is held depressed for more than 0.5 seconds the speed will sink slowly until the SET button is released.

If the SET button is held depressed for more than 0.5 seconds the speed reduces to less than 1.6 km/h (1 mph).

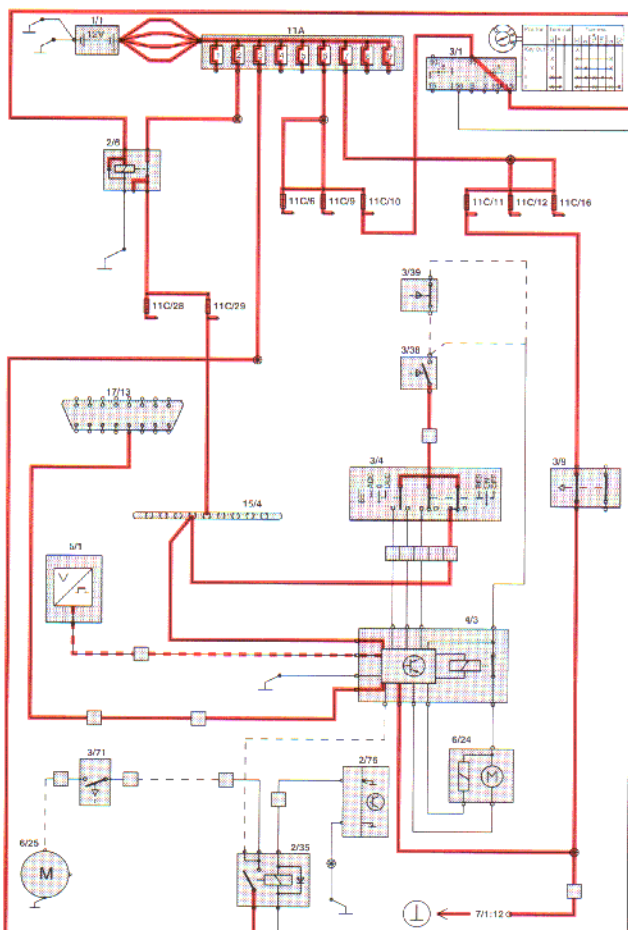


Braking.

Switch in the ON position.

Brake pedal pressed down.

The brake valve breaks the voltage to terminal T:9 and the stop (brake) lamp switch closes and passes battery voltage to terminal S:6. This disconnects the cruise control.

Cruise control (Fenix 5.2 Motronic 4.3/4.4) Function diagram

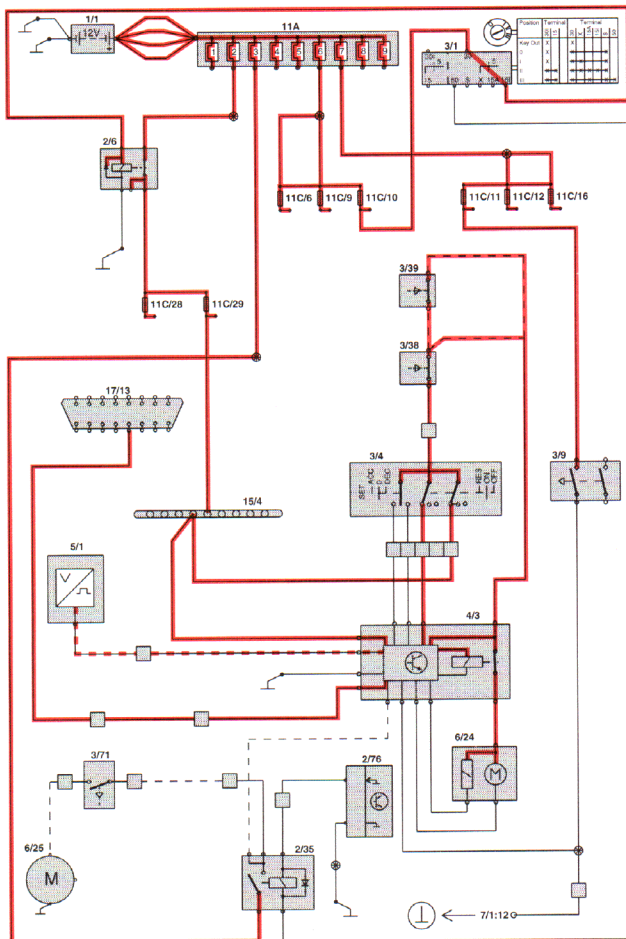


Resuming the set speed.

Switch in RESUME position.

The car will resume the speed previously set.

Cruise control (MSA 15.7) Function diagram

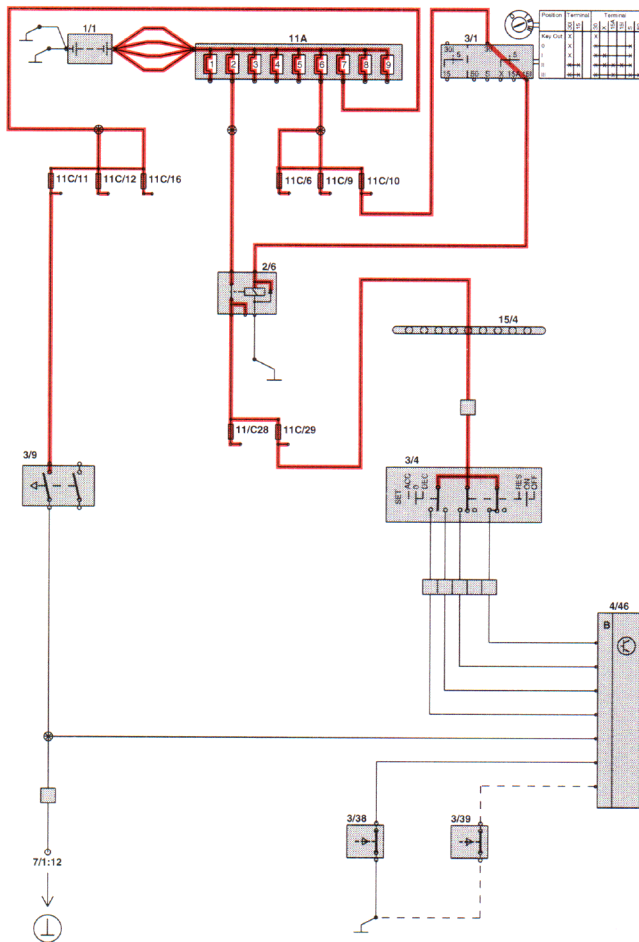


Speed setting.

Switch in the ON position.
SET-button pressed in and then released.
Speed above 35 km/h (20 mph)
and brake pedal not depressed.

Retaining speed.

Switch in the ON position.
Speed above 35 km/h (20 mph)
and brake pedal not depressed.

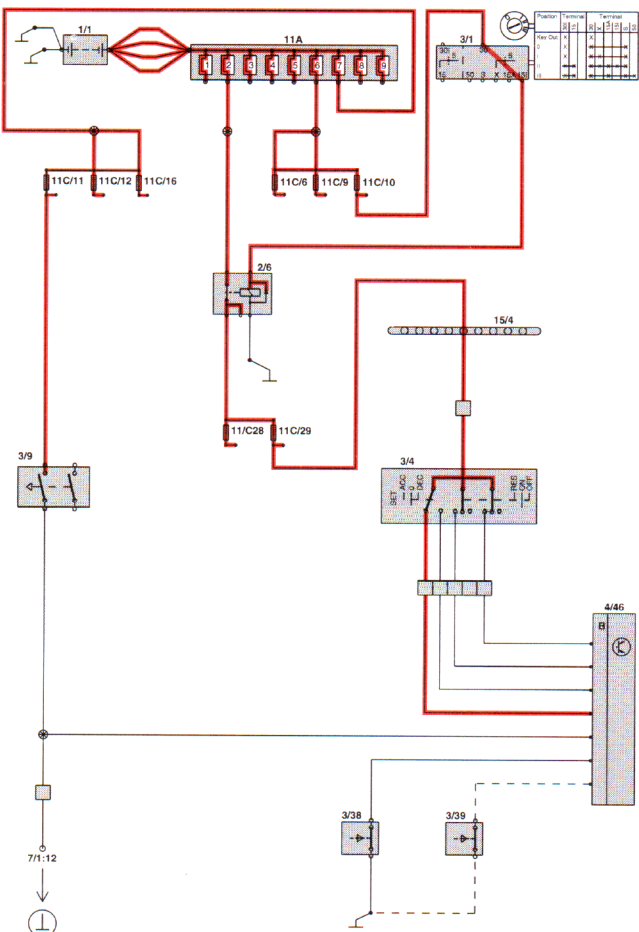


Increasing the set speed.

Switch in the ON position.

If the SET button is depressed for more than 0.5 seconds the speed will slowly increase until the SET button is released.

If the SET button is depressed for less than 0.5 seconds the speed increases by less than 1.6 km/h (1 mph).

Cruise control (MSA 15.7) Function diagram

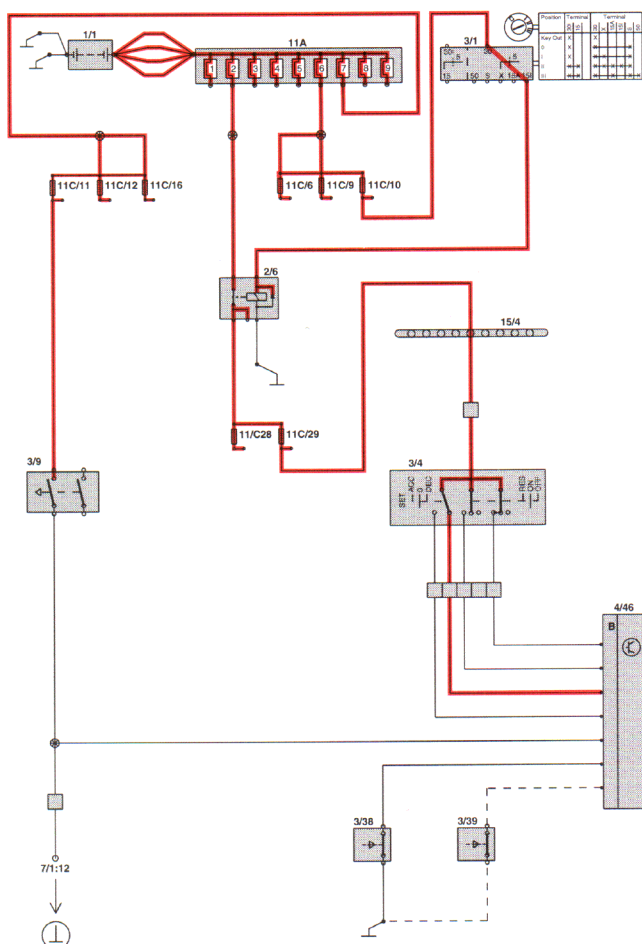


Reducing speed.

Switch in the ON position.

If the SET button is held depressed for more than 0.5 seconds the speed will sink slowly until the SET button is released.

If the SET button is held depressed for more than 0.5 seconds the speed reduces to less than 1.6 km/h (1 mph).

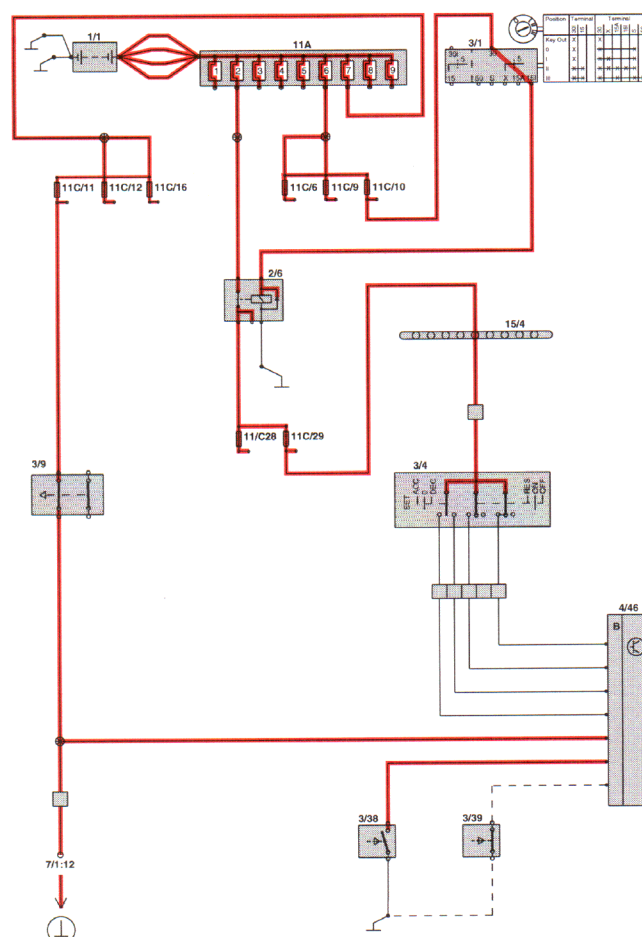


Braking.

Switch in the ON position.

Brake pedal pressed down.

The brake pedal breaks the voltage and stop (brake) lamp switch closes passing voltage to terminal 26. This disconnects the cruise control.

Cruise control (MSA 15.7) Function diagrams

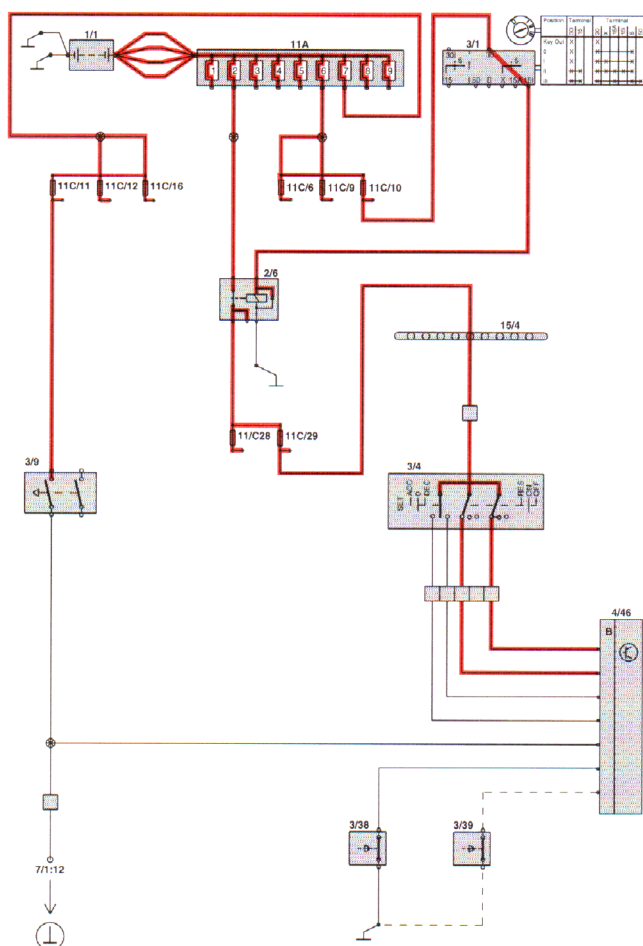


Resuming the set speed.


Switch in RESUME position.

The car will resume the speed previously set.


Windshield and headlight wash/wipe Function diagram

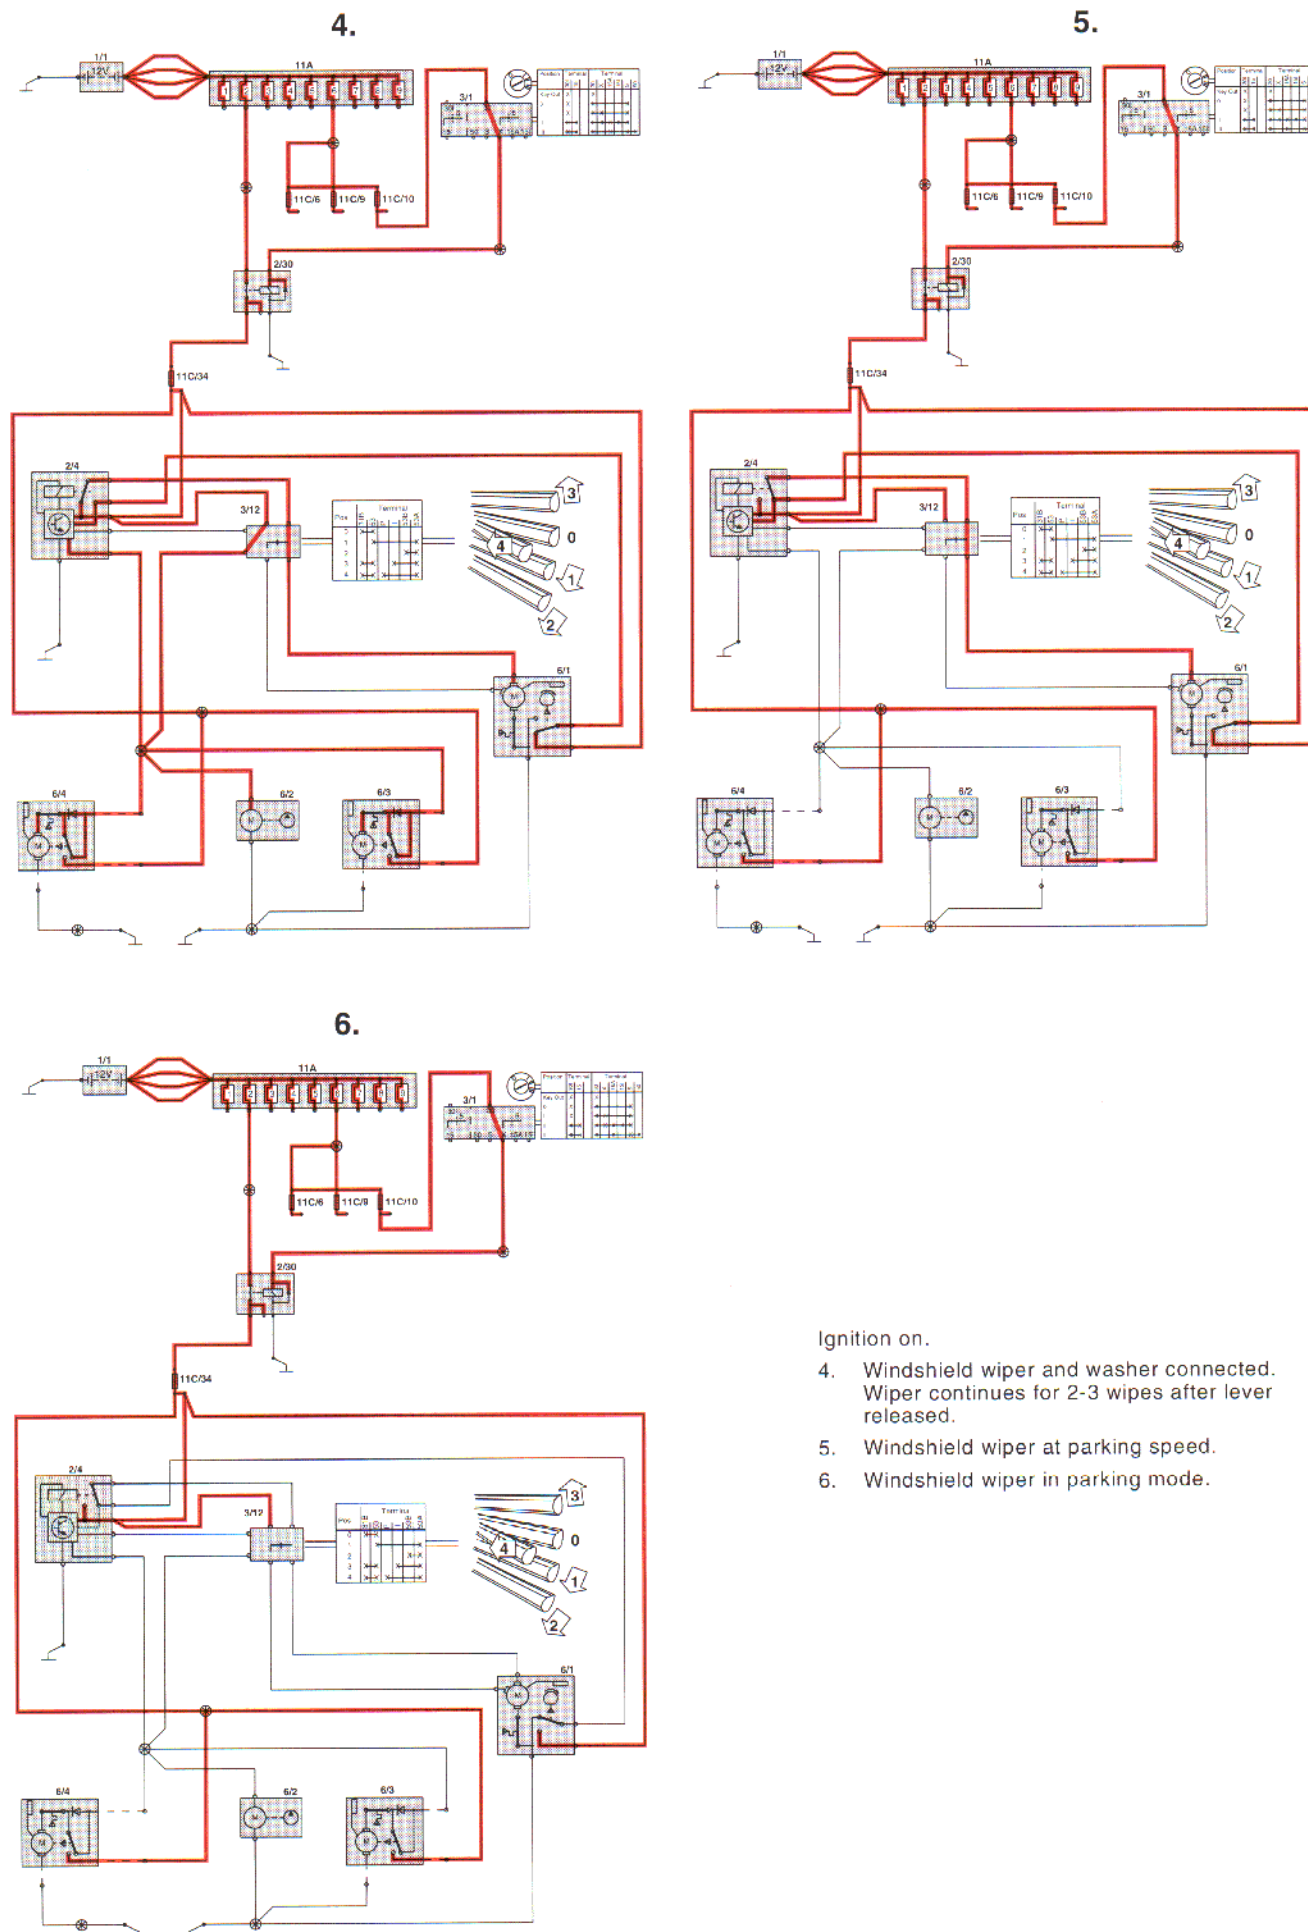

Power windows, C70 Function diagram

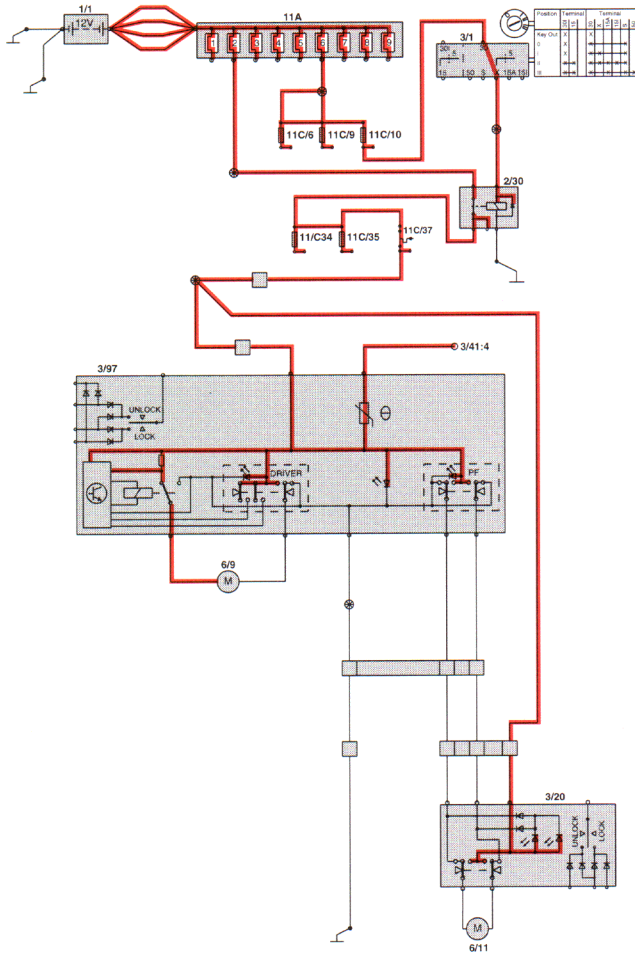


Ignition on.
When the power window switch for driver's door is located in Down position for a short period the voltage to the power windows is held by the autodown relay until the window has reached the lowest position.

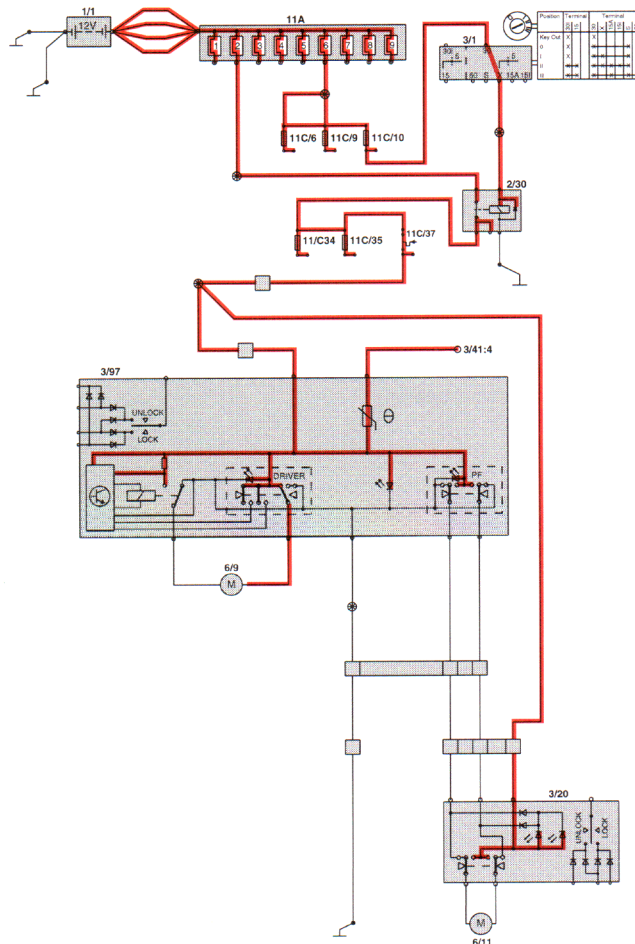


Ignition on.
The driver door power window switch in the Up position.
The driver's door window goes up until the power window switch is released or the window has reached the upper position.

Power windows, C70
Function diagram

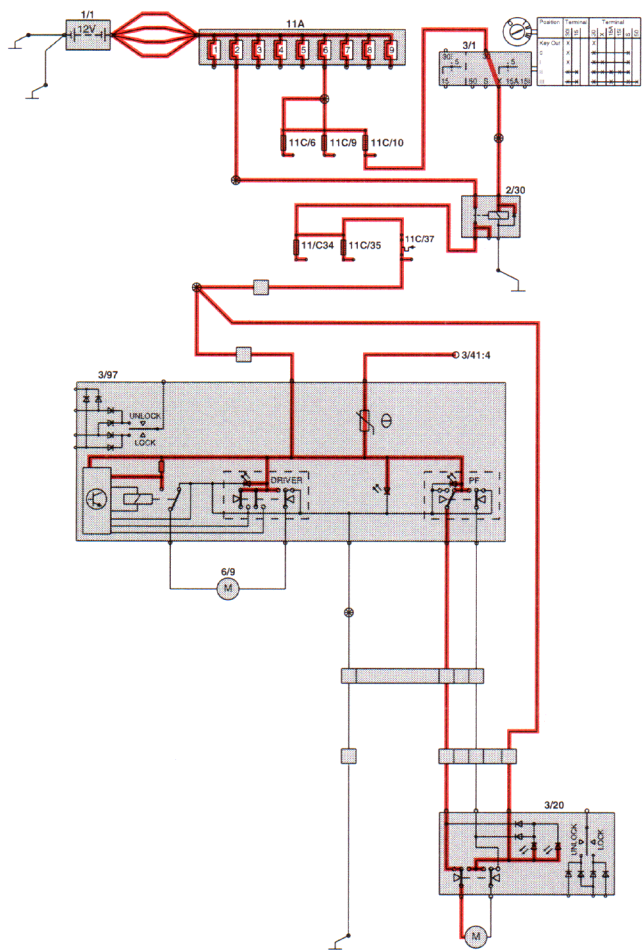


Ignition on.
Opening passenger door window
with driver's door power window
switch.

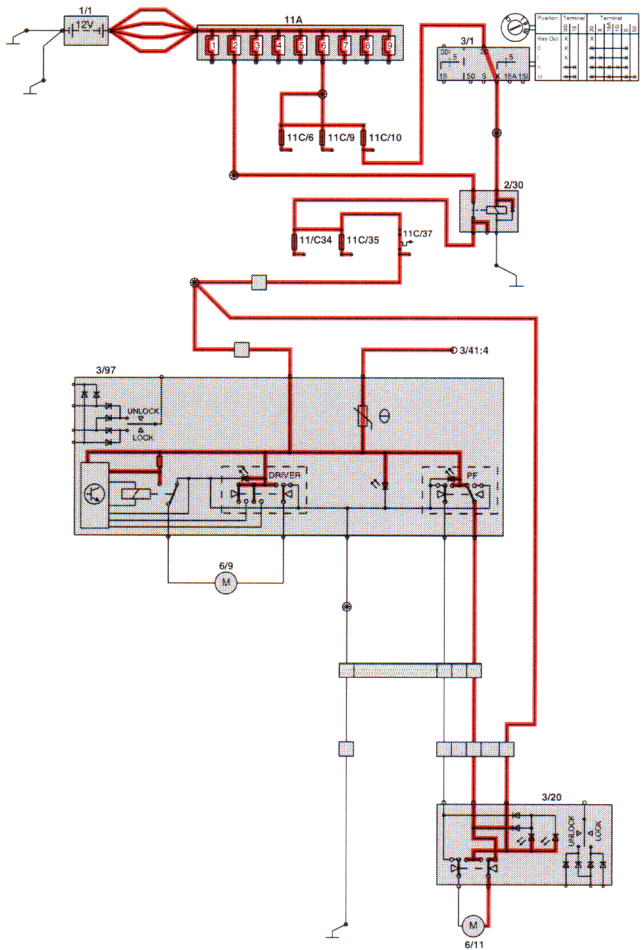


Ignition on.
Closing passenger door window
with driver's door power window
switch.

Power windows, C70

Function diagram

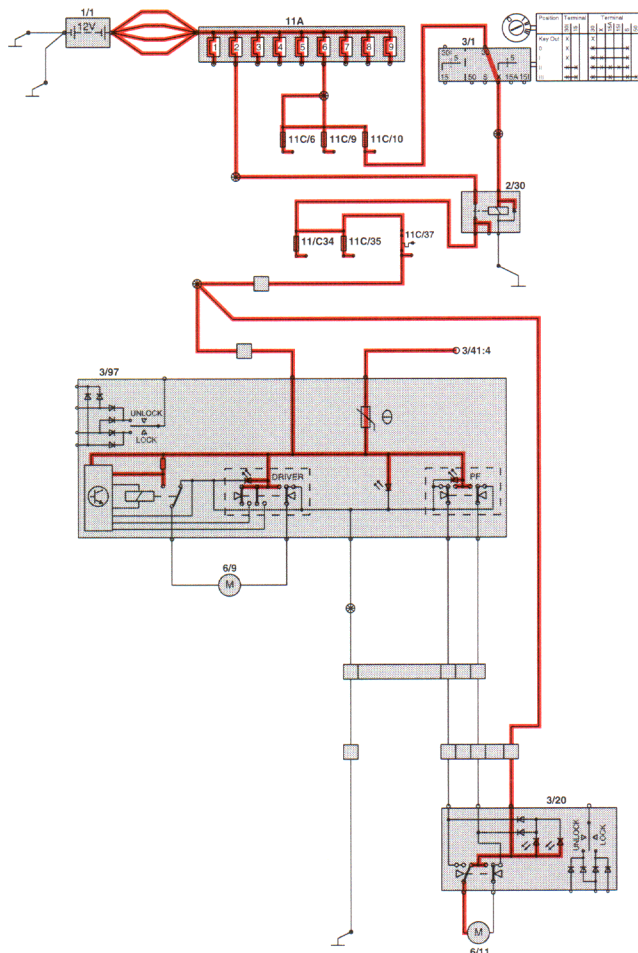


Ignition on.
Opening passenger door window with
passenger door power window switch.

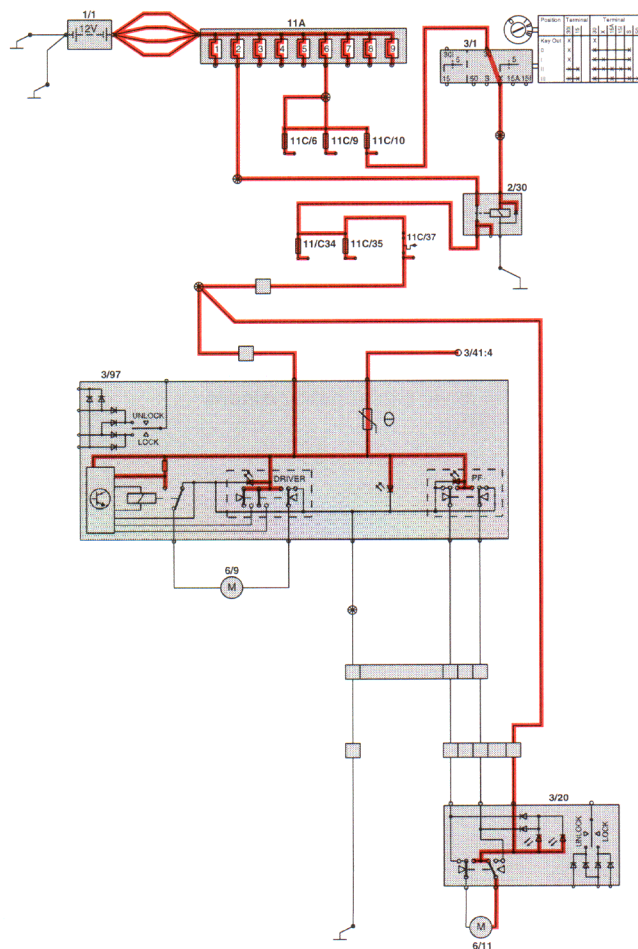


Ignition on.
Closing passenger door window with
passenger door power window switch.

Power windows, S70/V70 Function diagram

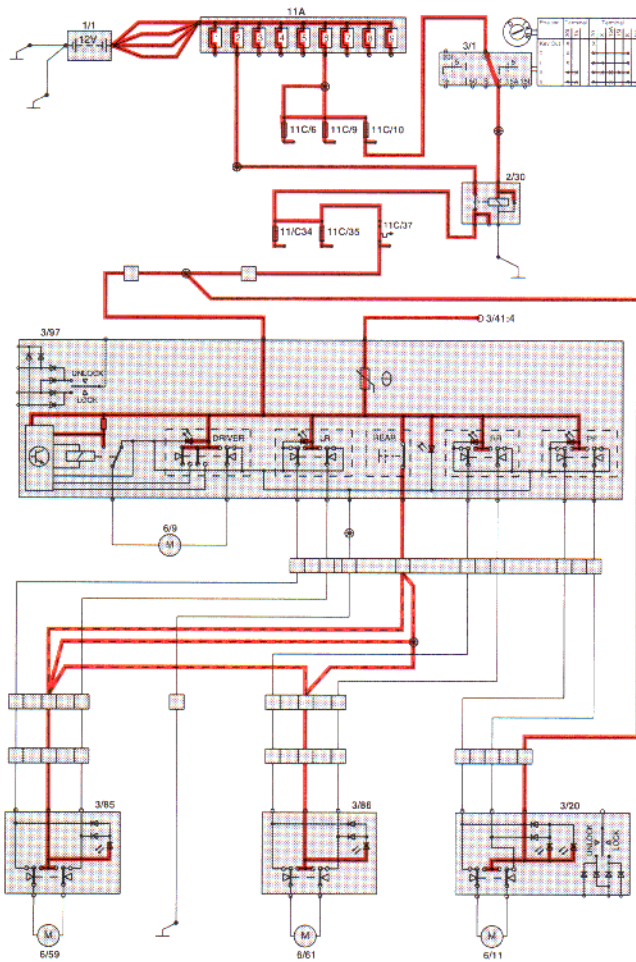


Ignition on.
Power windows not activated.

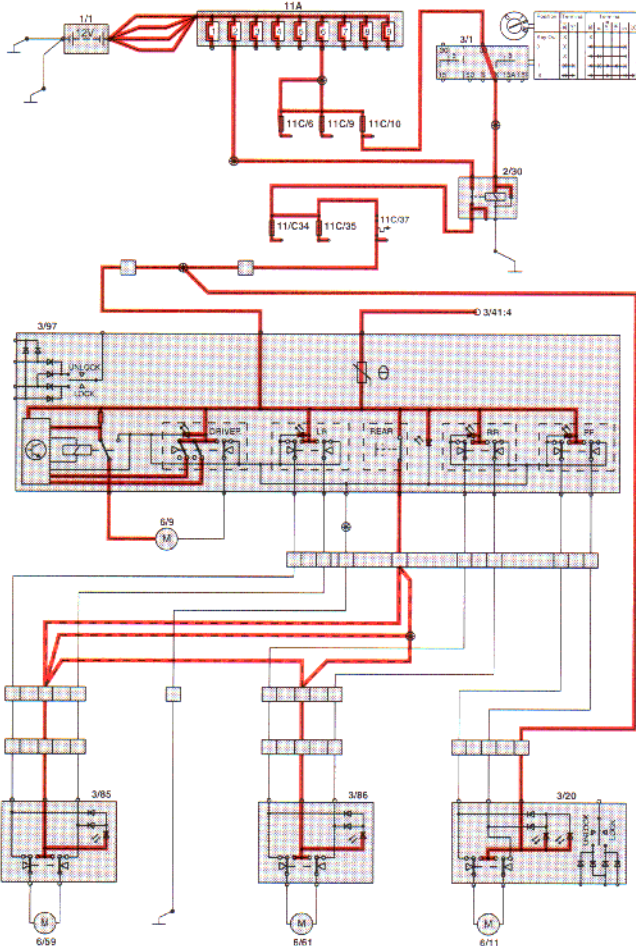


Ignition on.
The driver door power window
switch in
Down position.

Power windows, S70/V70

Function diagram

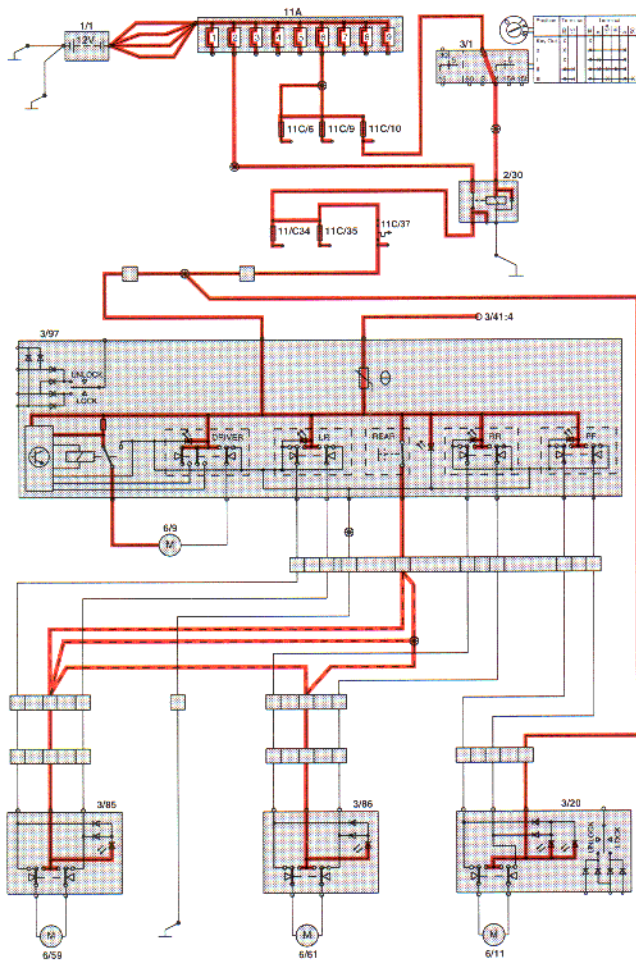


Ignition on.
When the power window switch for driver's door is located in Down position for a short period the voltage to the power windows is held by the autowindow relay until the window has reached the lowest position.

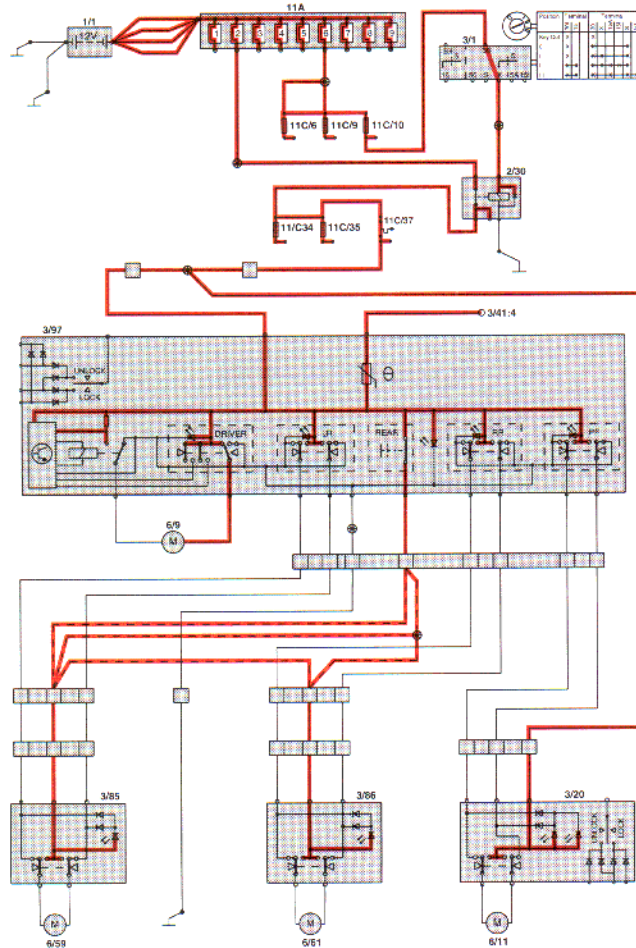

Ignition on.
The driver door power window switch in the Up position.
The driver's door window goes up until the power window switch is released or the window has reached the upper position.


Power windows, S70/V70 Function diagram

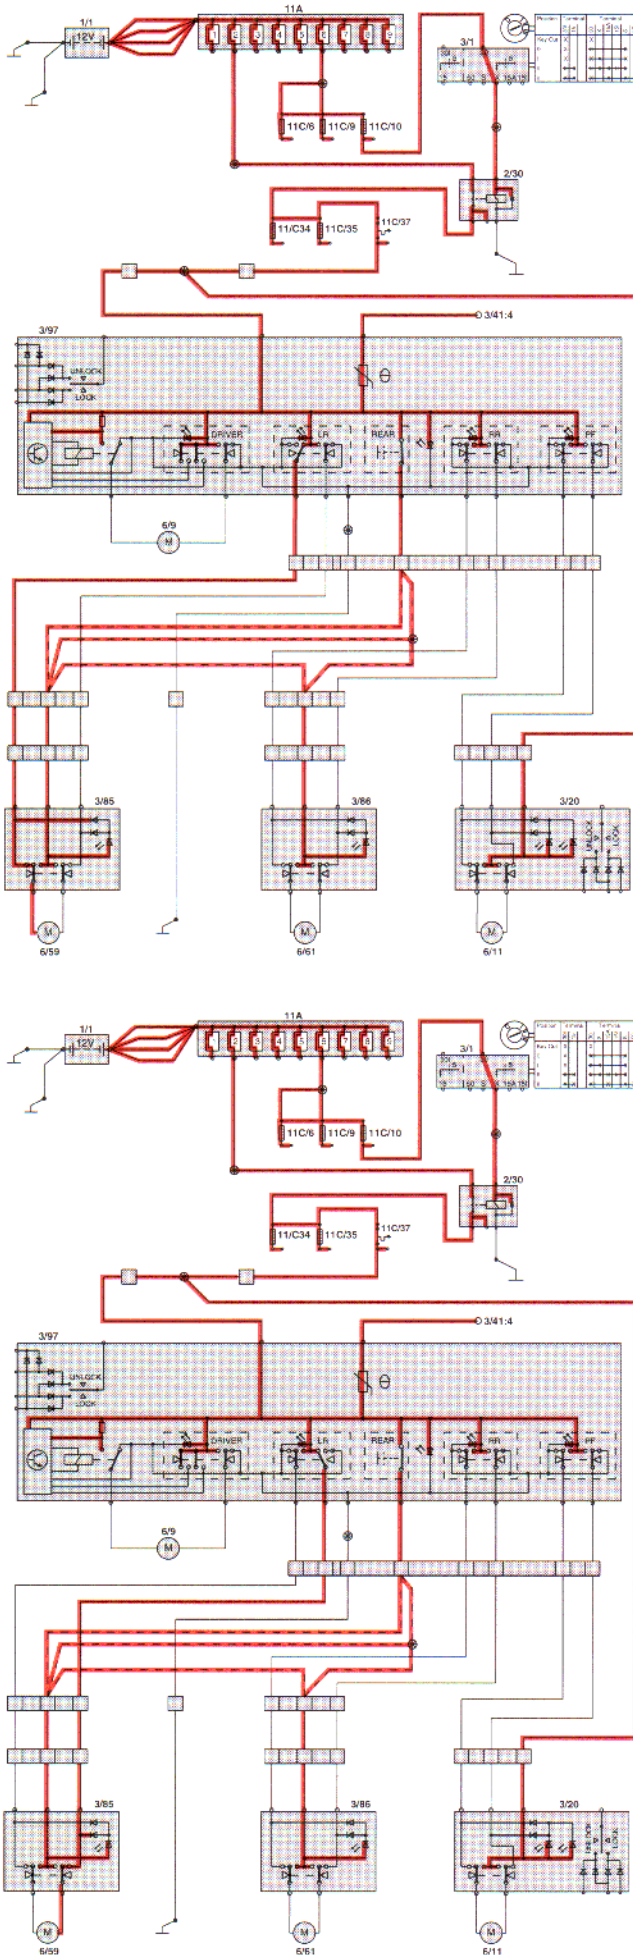


Ignition on.
Opening left rear door window with
driver's door power window switch.

Ignition on.
Closing left rear door window with
driver's door power window switch.

Power windows, S70/V70 Function diagram

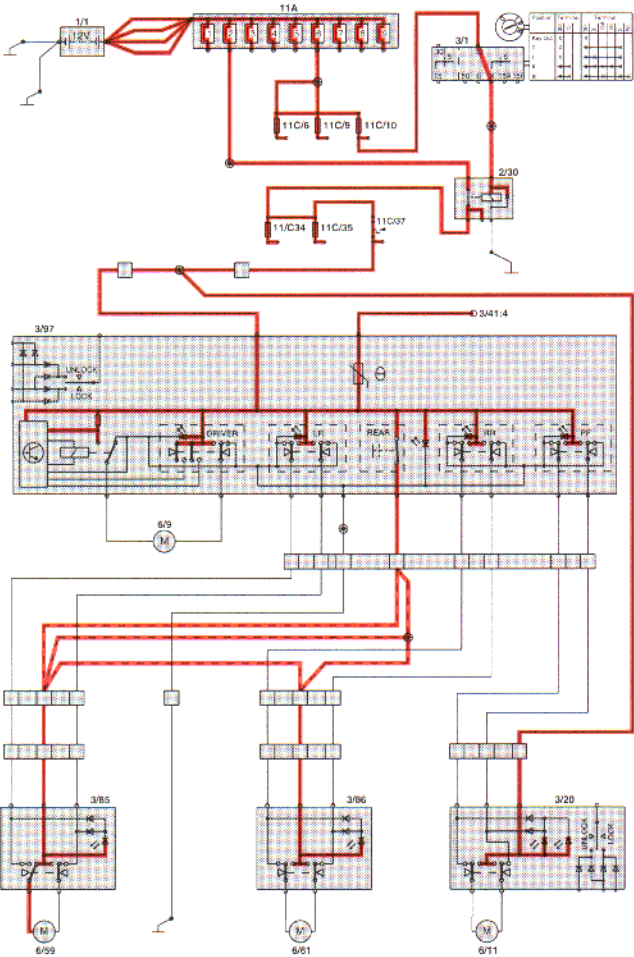


Ignition on.
Opening left rear door window with
left rear door power window switch.

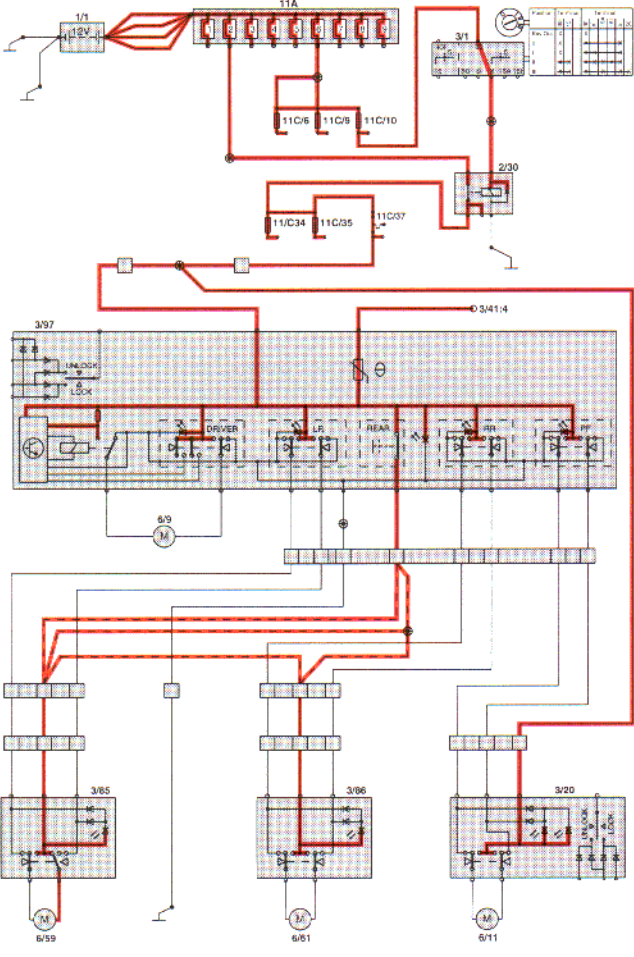

Ignition on.
Closing left rear door window with
left rear door power window switch.


Power windows, S70/V70 Function diagrams

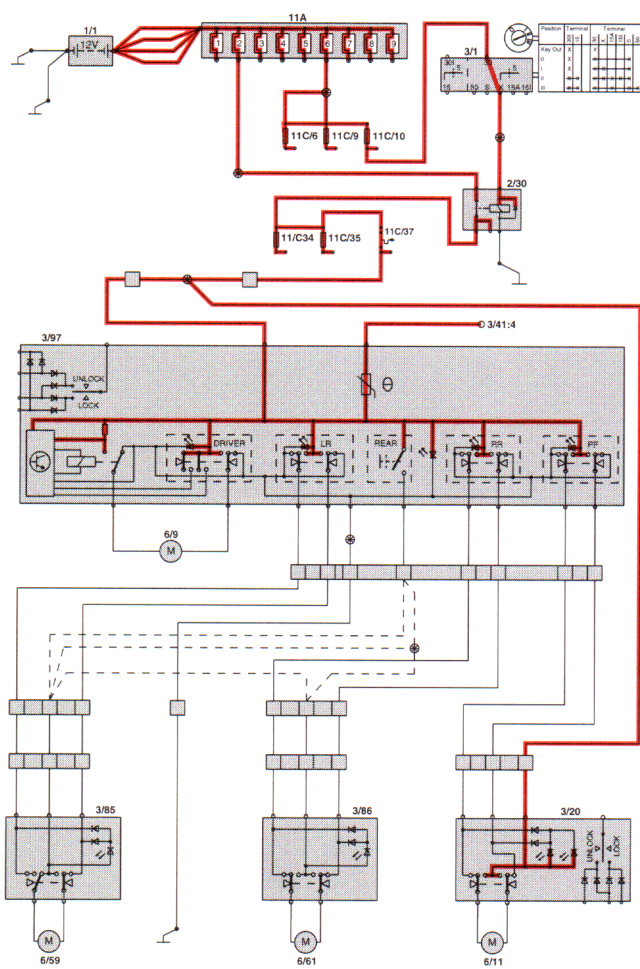


Ignition on.
Blocking rear door power windows
with driver's door switch.

Central locking, S70 Function diagrams

Unlocking with key at driver's door.

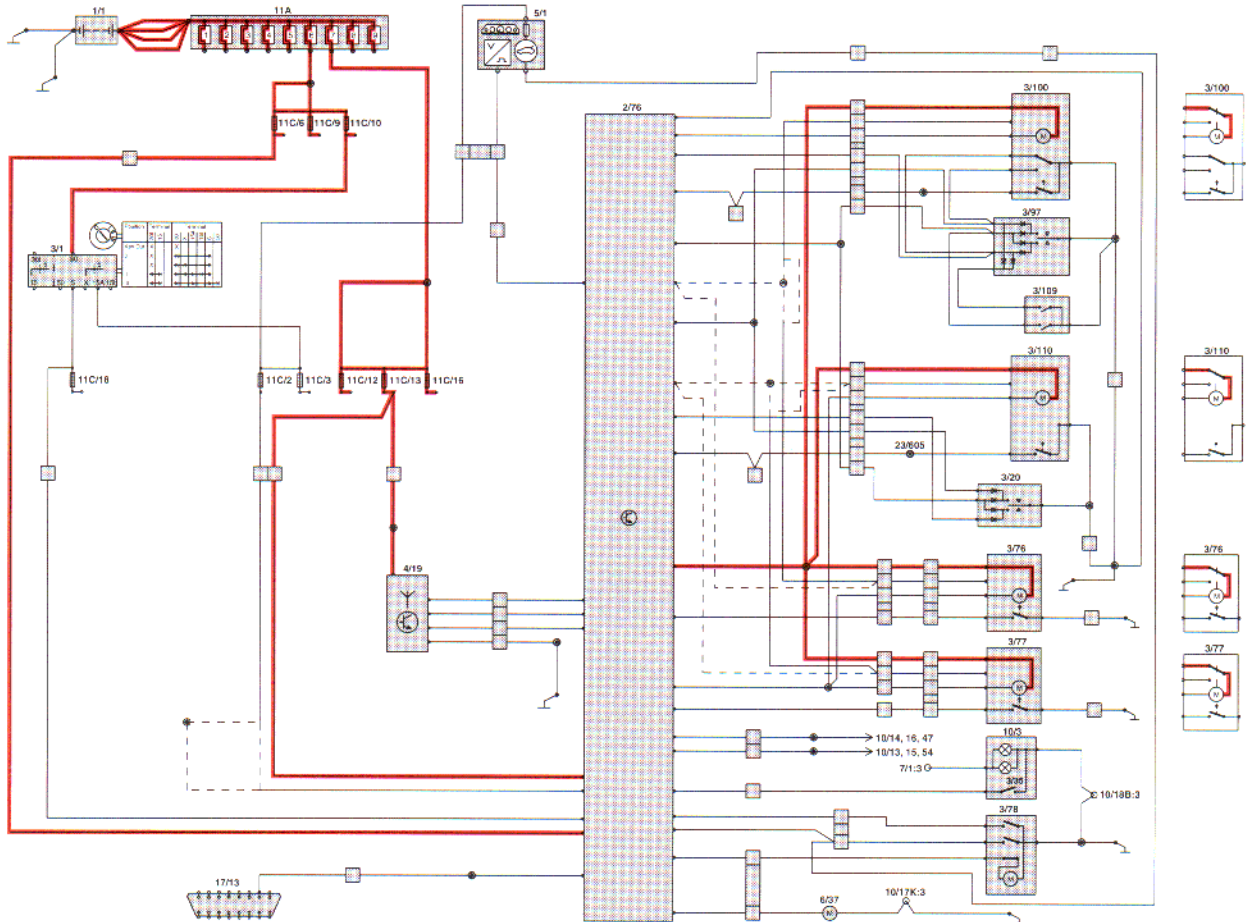


Locking with key at driver's door

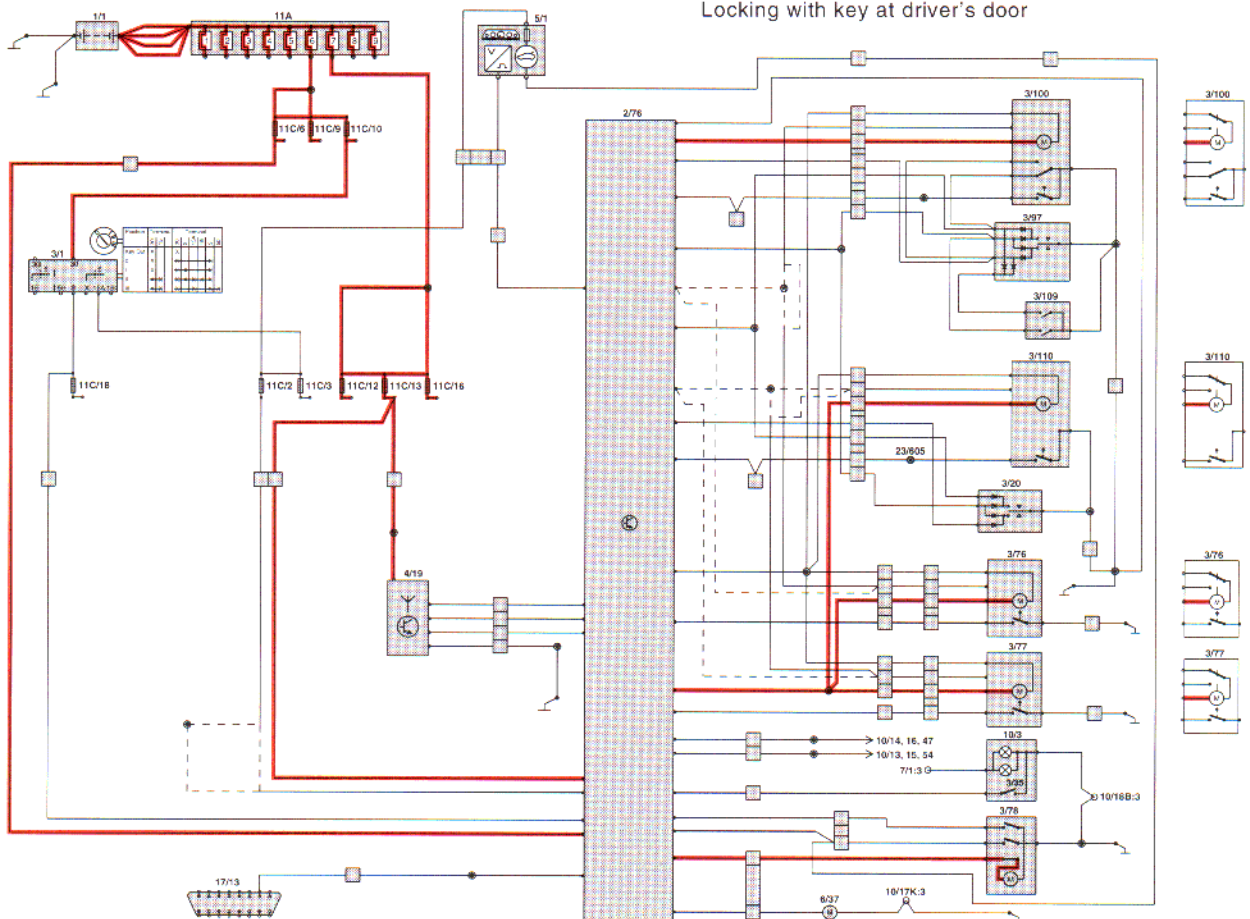

Central locking, V70 Function diagrams

Unlocking with key at driver's door.

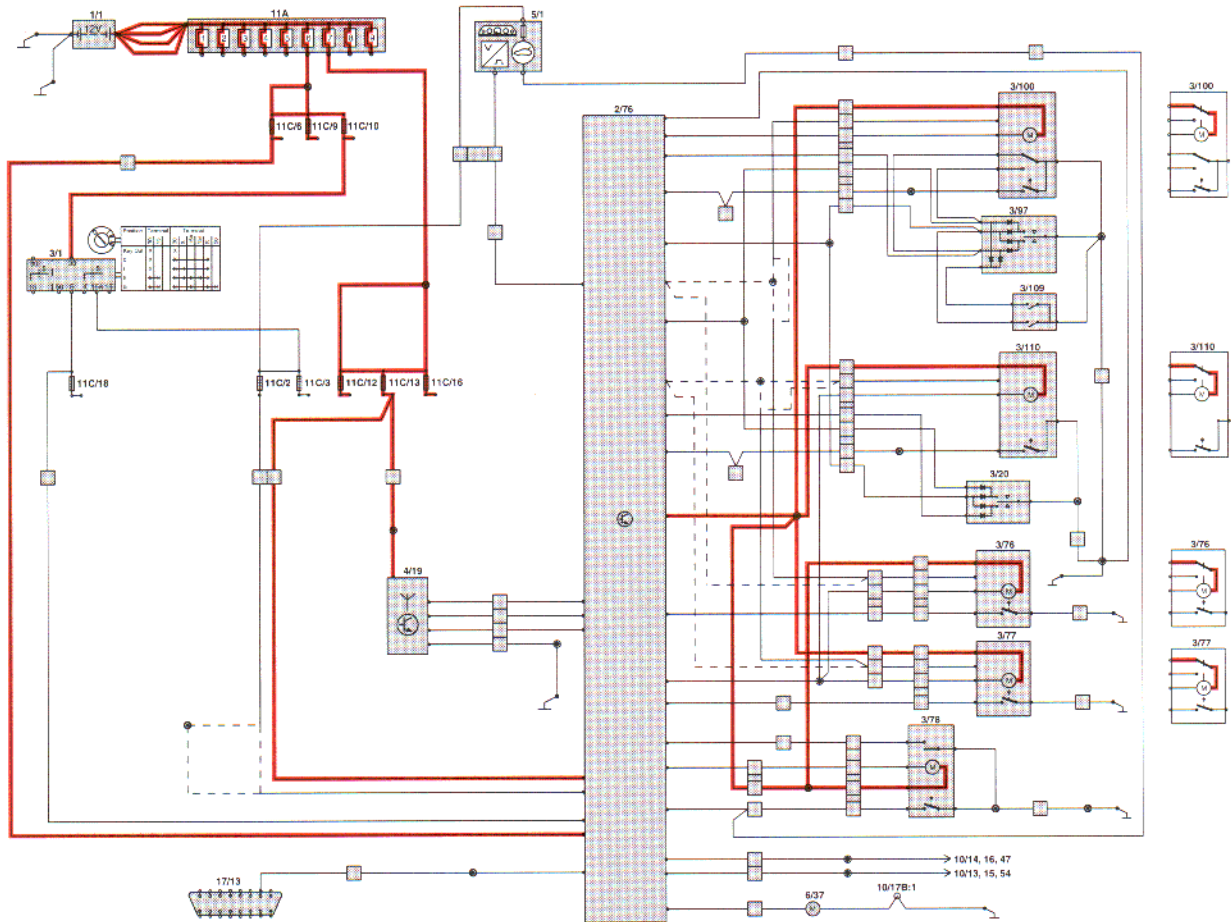

Locking with key at driver's door

