
Flushing and filling oil

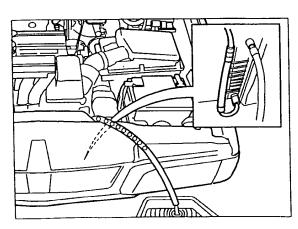

- Install a transparent plastic hose on the oil return hose connector.
- Place a container beneath the hose to catch the oil. Temporarily reassemble battery tray and battery.
- Set the parking brake and move the gear selector to position P.
- Add approximately 3 litres of oil
- Start the engine and idle it.
- Stop engine when air bubbles appear in hose.
- Add approximately 3 litres of oil.
- Start the engine again and idle it.
- Turn the engine off when air bubbles become visible in the hose.
- Remove battery and battery shelf. Remove hose from connector.
- Reinstall oil return hose to transmission cover, and reassemble battery tray and battery.
- Add approximately 2 litres of oil
- Set parking brake.
- Start the engine and idle it.
- Select each gear position in turn, remaining in each for 4-5 seconds.