

Service Manual Cars

Section 3 (39)
Wiring diagrams
C70/S70/V70 1999

TP 3938202

VOLVO

Cars with SRS (Air bag)/SIPS bag

Warning!

Cars equipped with a Supplemental Restraint System (SRS)/SIPS bag must be treated extra carefully when repairs are being made. This is to help prevent:

1. Injuries when carrying out a repair.
2. Damage or malfunction of the SRS/SIPS bag system. Repair to either the SRS/SIPS bag itself or a related system or component must be carried out by an authorized Volvo workshop. Refer to the appropriate SRS and SIPS bag service manual for complete system information.

Is the car equipped with SRS?

Cars with SRS are most easily recognized by the SRS letters on the steering wheel pad. If the car is also equipped with an air bag on the passenger side, the letters 'SRS' will be embossed on the instrument panel above the glove compartment. On models from 1993 on, cars with SRS will also be equipped with pyrotechnical seat belt tensioners in the B-posts.

The SIPS bags are only installed in cars equipped with SRS systems, 1995-. Cars with SIPS bags can be recognized by the identifying labels on the windshield and on seat storage tray.

Dashboard or around steering column

Take care to avoid the SRS wiring being pinched, frayed or pierced by screws when working on the firewall, knee bolster, ignition switch, steering column casings, glove compartment, instrument panel, door sills and B-posts.

Center console

The SRS collision sensor is located between the handbrake and gear lever (selector) in the center console. Never install accessories on or near the sensor.

Repairs to steering gear and column

When carrying out repairs to the steering wheel, steering gear or column always follow the repair procedures given in the appropriate SRS service manual. Read the relevant section! The contact reel in the steering column will be damaged if the steering wheel is turned more than three turns in either direction.

Seats

The SIPS bag sensor is located in the front section of the seat storage tray. The SIPS-bag can be activated by a blow or pressure on the tray or if an object is caught between the tray and the door when the door is closed. Refer to the SIPS bag Service manual when carrying out work on the front seats.

Test terminal

Data Link Connector socket in passenger compartment.

Modifications introduced up to and including August 1998

Any modifications made to the car after this are not included in this book. Refer to the Service Bulletins if necessary.

Volvos are sold in versions adapted for different markets. These adaptations depend on many factors including legal, taxation and market requirements. This manual may therefore show illustrations and text which do not apply to cars in your country.

Contents

Abbreviations	3	Fog lamp	154
How to use the diagrams	4	C70	156
Fuses	6	S70, V70	156
Rails in the central electrical unit	10	Parking lamps, tail lamps and license (number) plate lighting	158
Ignition switch	10	C70	160
Relays	11	S70	162
Ground terminals	13	V70	162
Electrical distribution		Brake (stop) lamps	164
Fenix 5.2	24	C70	166
Denso, ME7	26	S70	168
MSA 15.7	28	V70	170
Data communication	30	Reversing lamp	172
Connectors	32	Interior lighting	172
Junction points	78	C70 convertible	174
Routing of cable harnesses in the car	103	C70 coupe	176
		S70, V70	178
		Instrument and control lighting	178
Group 23/28		Group 36	
Engine management system		Turn signal lamps and hazard warning signal flashers	180
Fenix 5.2	114	C70	182
Denso	118	S70	184
ME7	122	V70	186
Emissions control		Signal horn	188
Fenix 5.2	126	Washers	188
Denso	128	Windshield	188
ME7	130	Headlamp	190
Engine management system		Rear windshield	192
MSA 15.7	132	Cigarette lighter/12V-output	194
		Anti-theft alarm	196
Group 26		C70 convertible	198
Engine cooling fan (FC)		C70 coupe	200
Fenix 5.2	136	S70, V70	202
Denso, ME7	138	Immobilizer	
MSA 15.7	140	Fenix 5.2, Denso, ME7	204
		MSA 15.7	206
Group 27		Tow hitch wiring	208
Cruise control		COUP	210
Fenix 5.2	142	Accessories wiring	212
Denso, ME7	144	Coolbox wiring	218
MSA 15.7	146		
Group 32/33		Group 37	
Power supply and starter system	148	Diagnostics	204
		Fenix 5.2, Denso, ME7	206
Group 35		MSA 15.7	208
High and low beams	150	Tow hitch wiring	210
Headlamp range adjustment	152	COUP	212
		Accessories wiring	218
		Coolbox wiring	218
		Group 38	
		Seat belt reminder	214
		Seat belt and key reminder	216
		USA, Canada, Korea and Australia	218
		Combined instrument panel	218

Continued on next page

Order number TP 3938202
Supersedes book TP 3938201

We reserve the right to make alterations without prior notification

Contents

Group 39

Radio	
C70 convertible	224
C70 coupe	226
S70	228
V70	230
Radio with 4x50 W extra amplifier	
S70	232
V70	234
RTI Road Traffic Information	
C70	236
S70, V70	238

Group 43

Electronically controlled automatic transmission	
AW 50-42	
Fenix 5.2, MSA 15.7	240
Denso, ME7	242
P-shift lock, automatic transmission	244

Group 59

ABS Anti-lock braking system	246
------------------------------	-----

Group 83

Central locking	
C70 convertible	248
C70 coupe	252
S70	256
V70	260
Soft top operation	264
Power windows	
C70 convertible	268
C70 coupe	270
S70, V70	272
Power sunroof	274

Group 84

Rear demist and heated door mirrors	
C70 convertible	276
C70 coupe, S70 and V70	278

Power door mirrors	280
Electrical retracting door mirrors	
C70 convertible	282
C70 coupe, S70 and V70	284

Group 85

Electrically heated seats	286
Heated rear seat	288
Power seats	
with memory	290
without memory	292

Group 87


Standard heater STD	294
Manual climate control MCC	
Fenix 5.2, MSA 15.7	296
Denso, ME7	298
Electronic climate control ECC	
Fenix 5.2, MSA 15.7	300
Denso, ME7	302
Additional heater	304
Cargo compartment fans	306

Group 88


Roll over protection ROPS	308
SRS Supplemental Restraint System	310
Remote controlled garage door opener	312
Rear view mirror with automatic dimming	
C70 convertible	314
C70 coupe	316

Index	318
Component list (fold-out)	see end of manual
Feedback	last page of this manual


Radio C70 Convertible

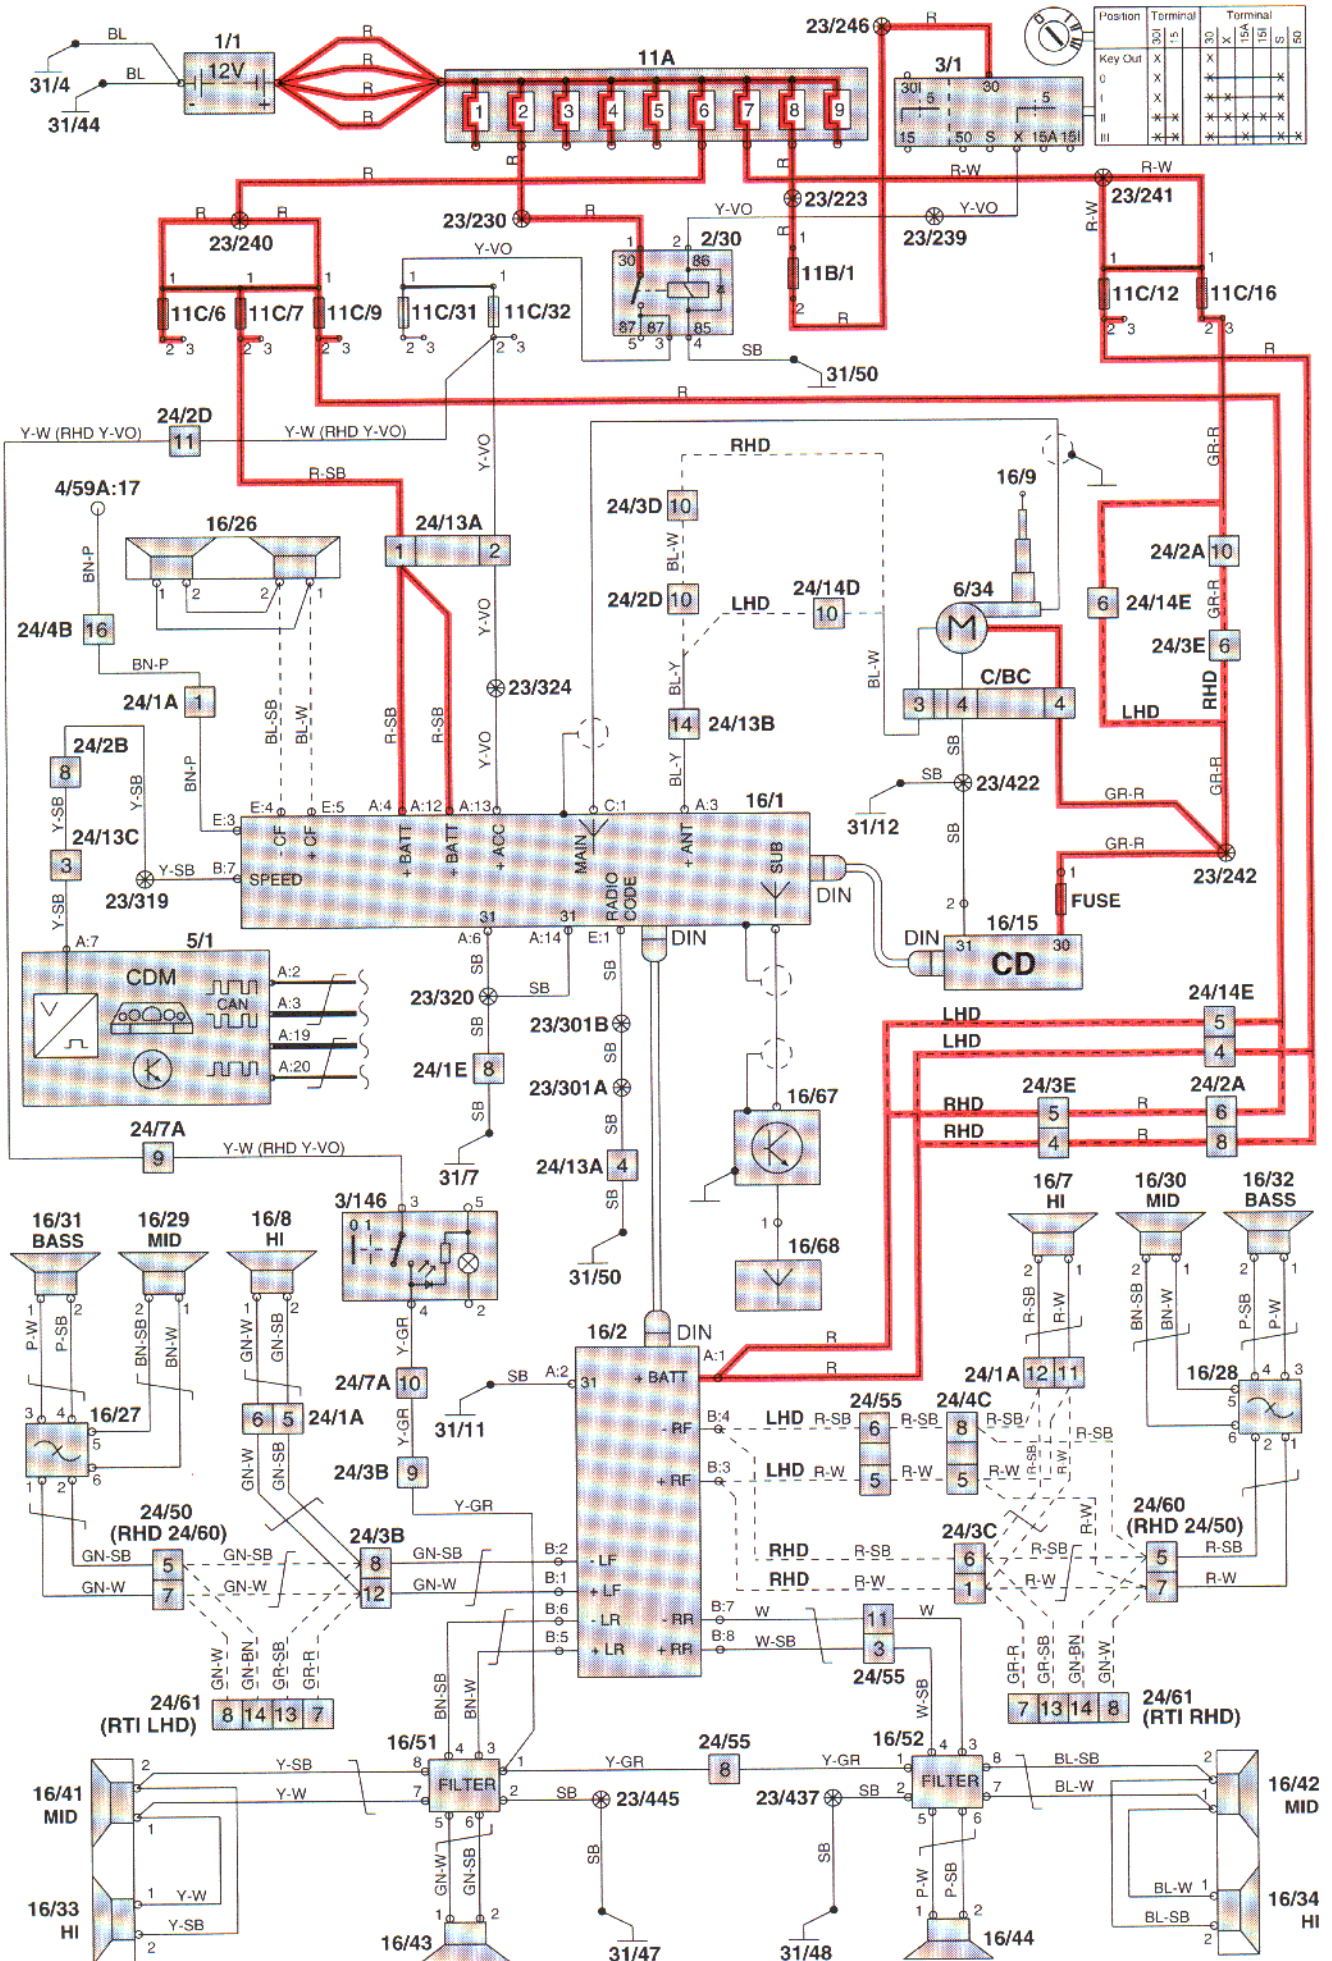


Radio C70 coupé

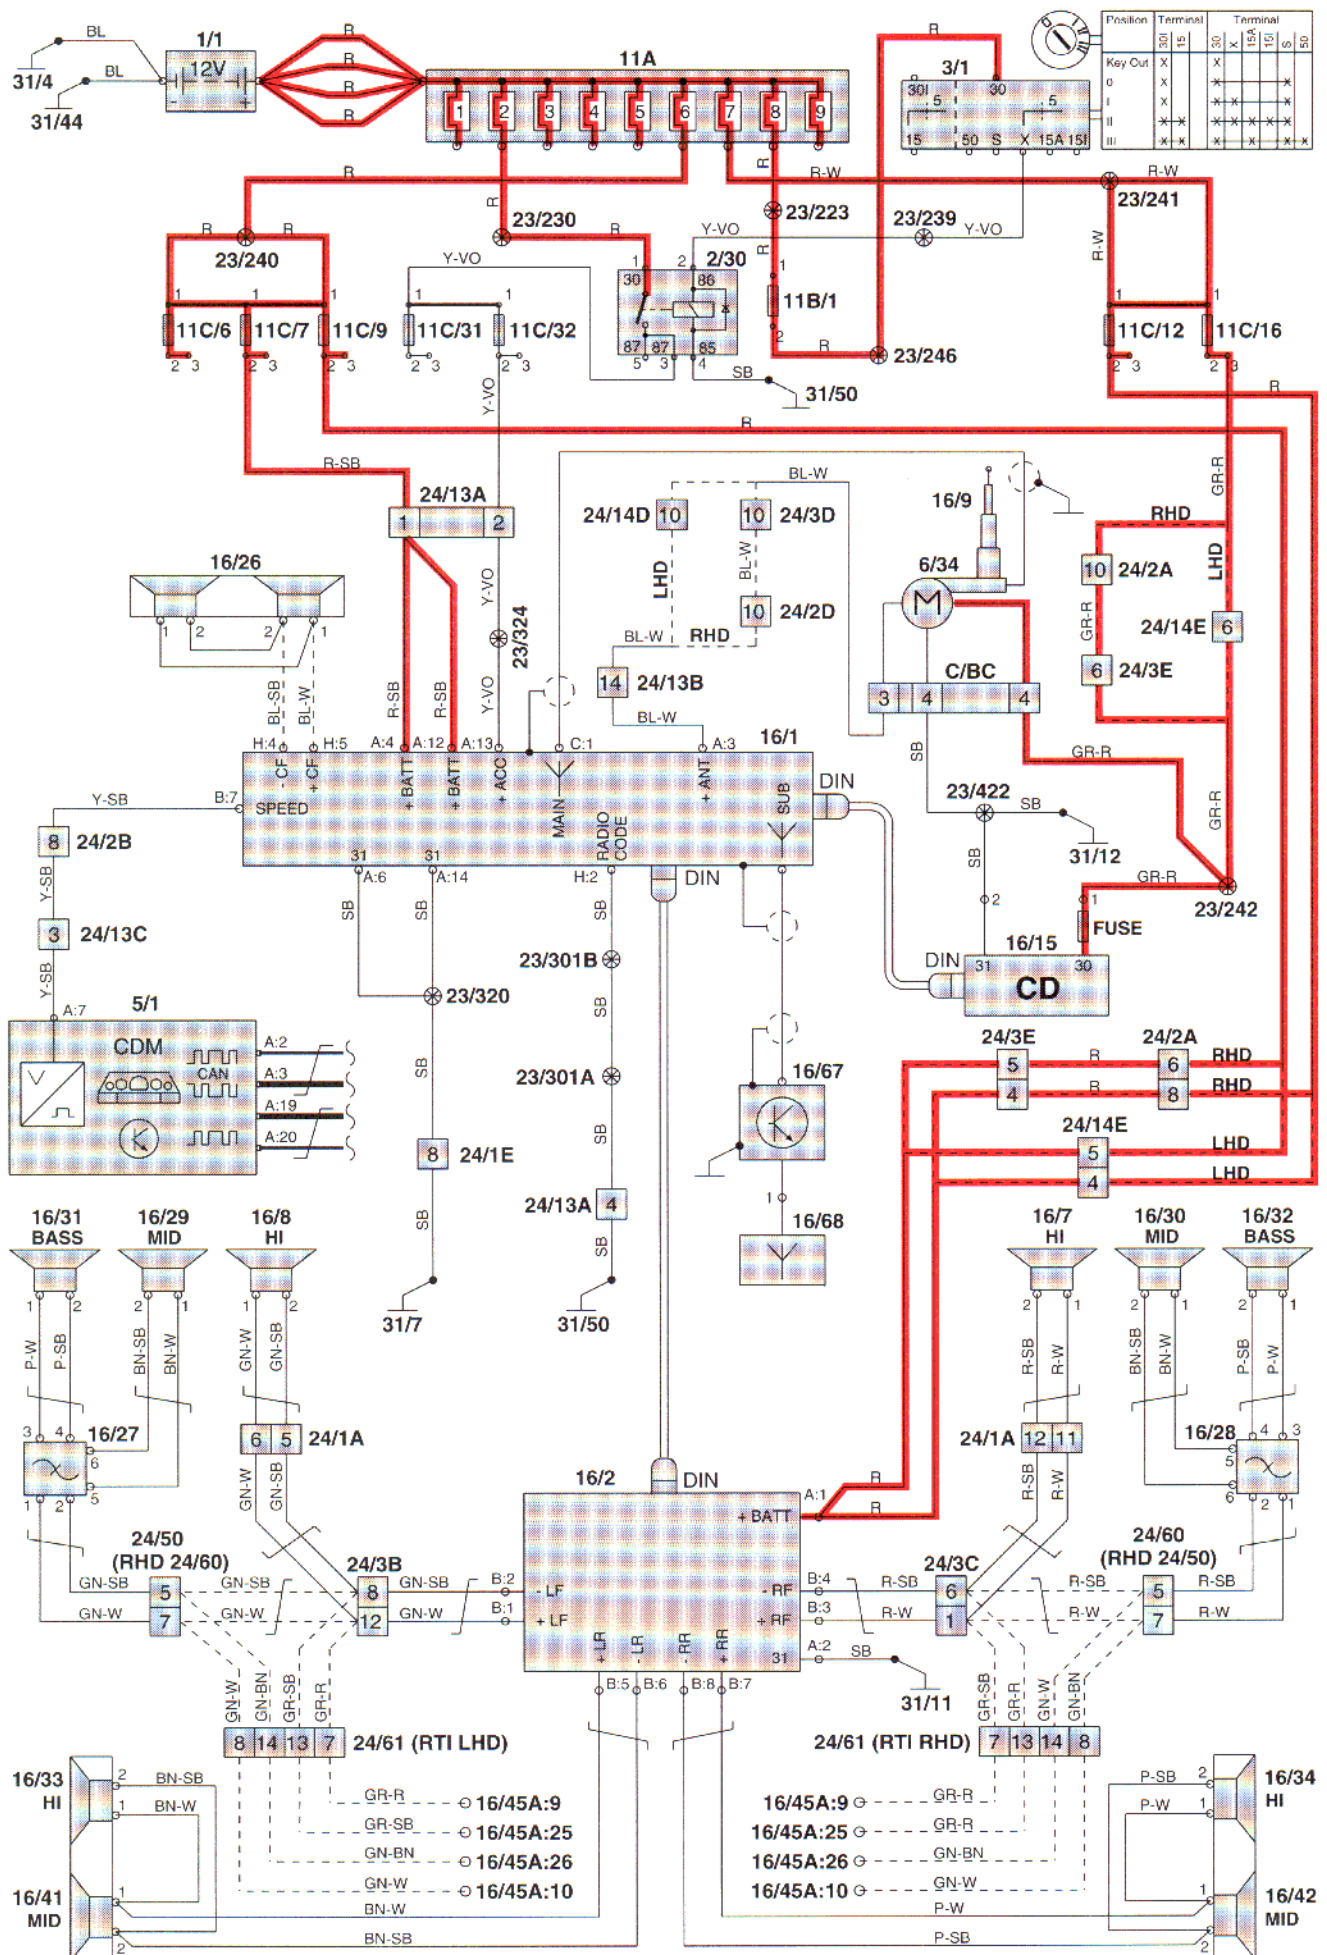


Radio S70

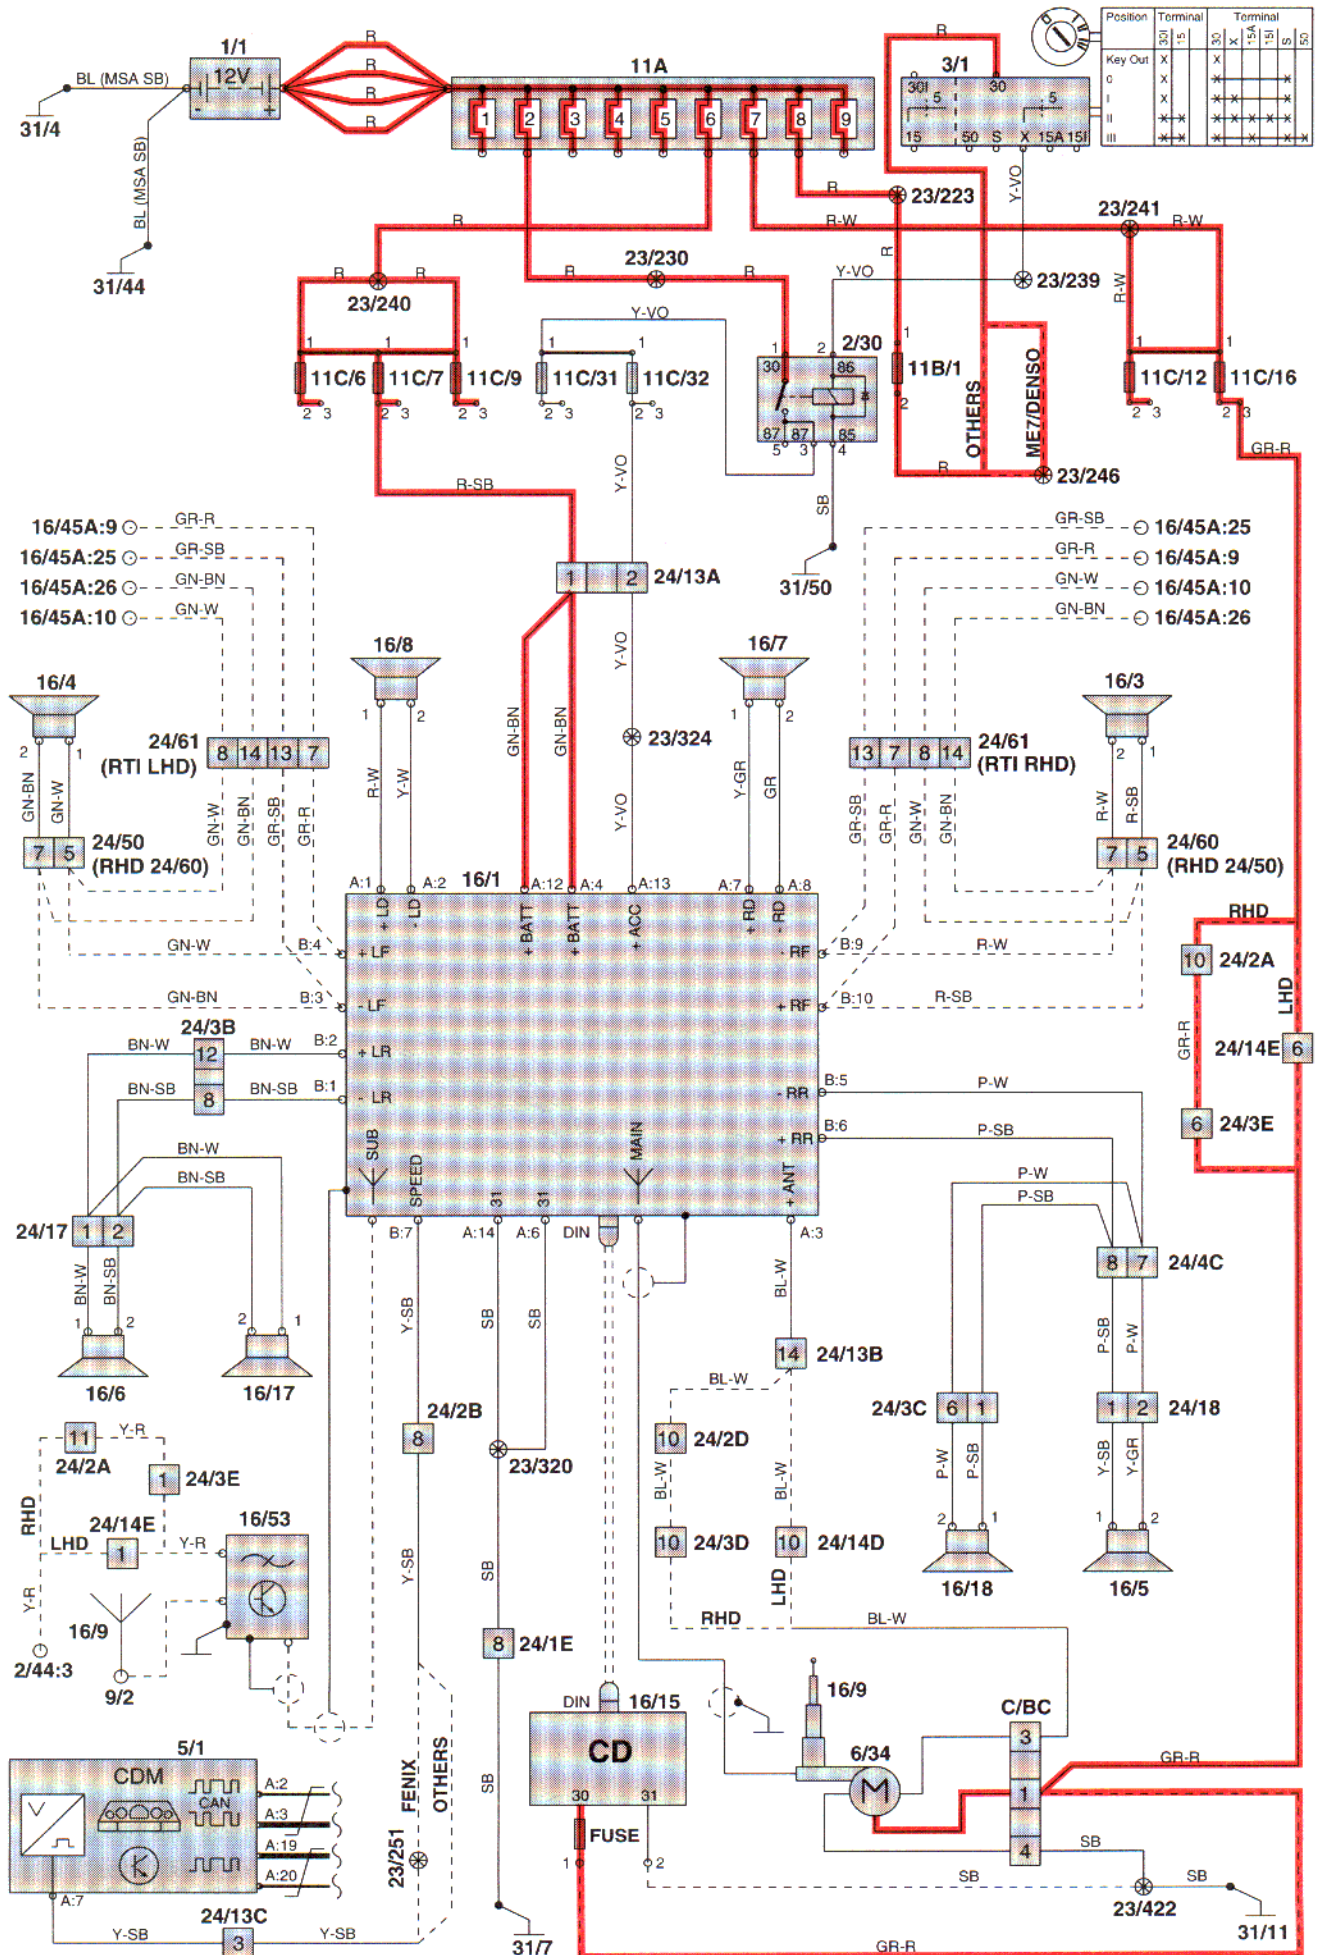


Radio V70

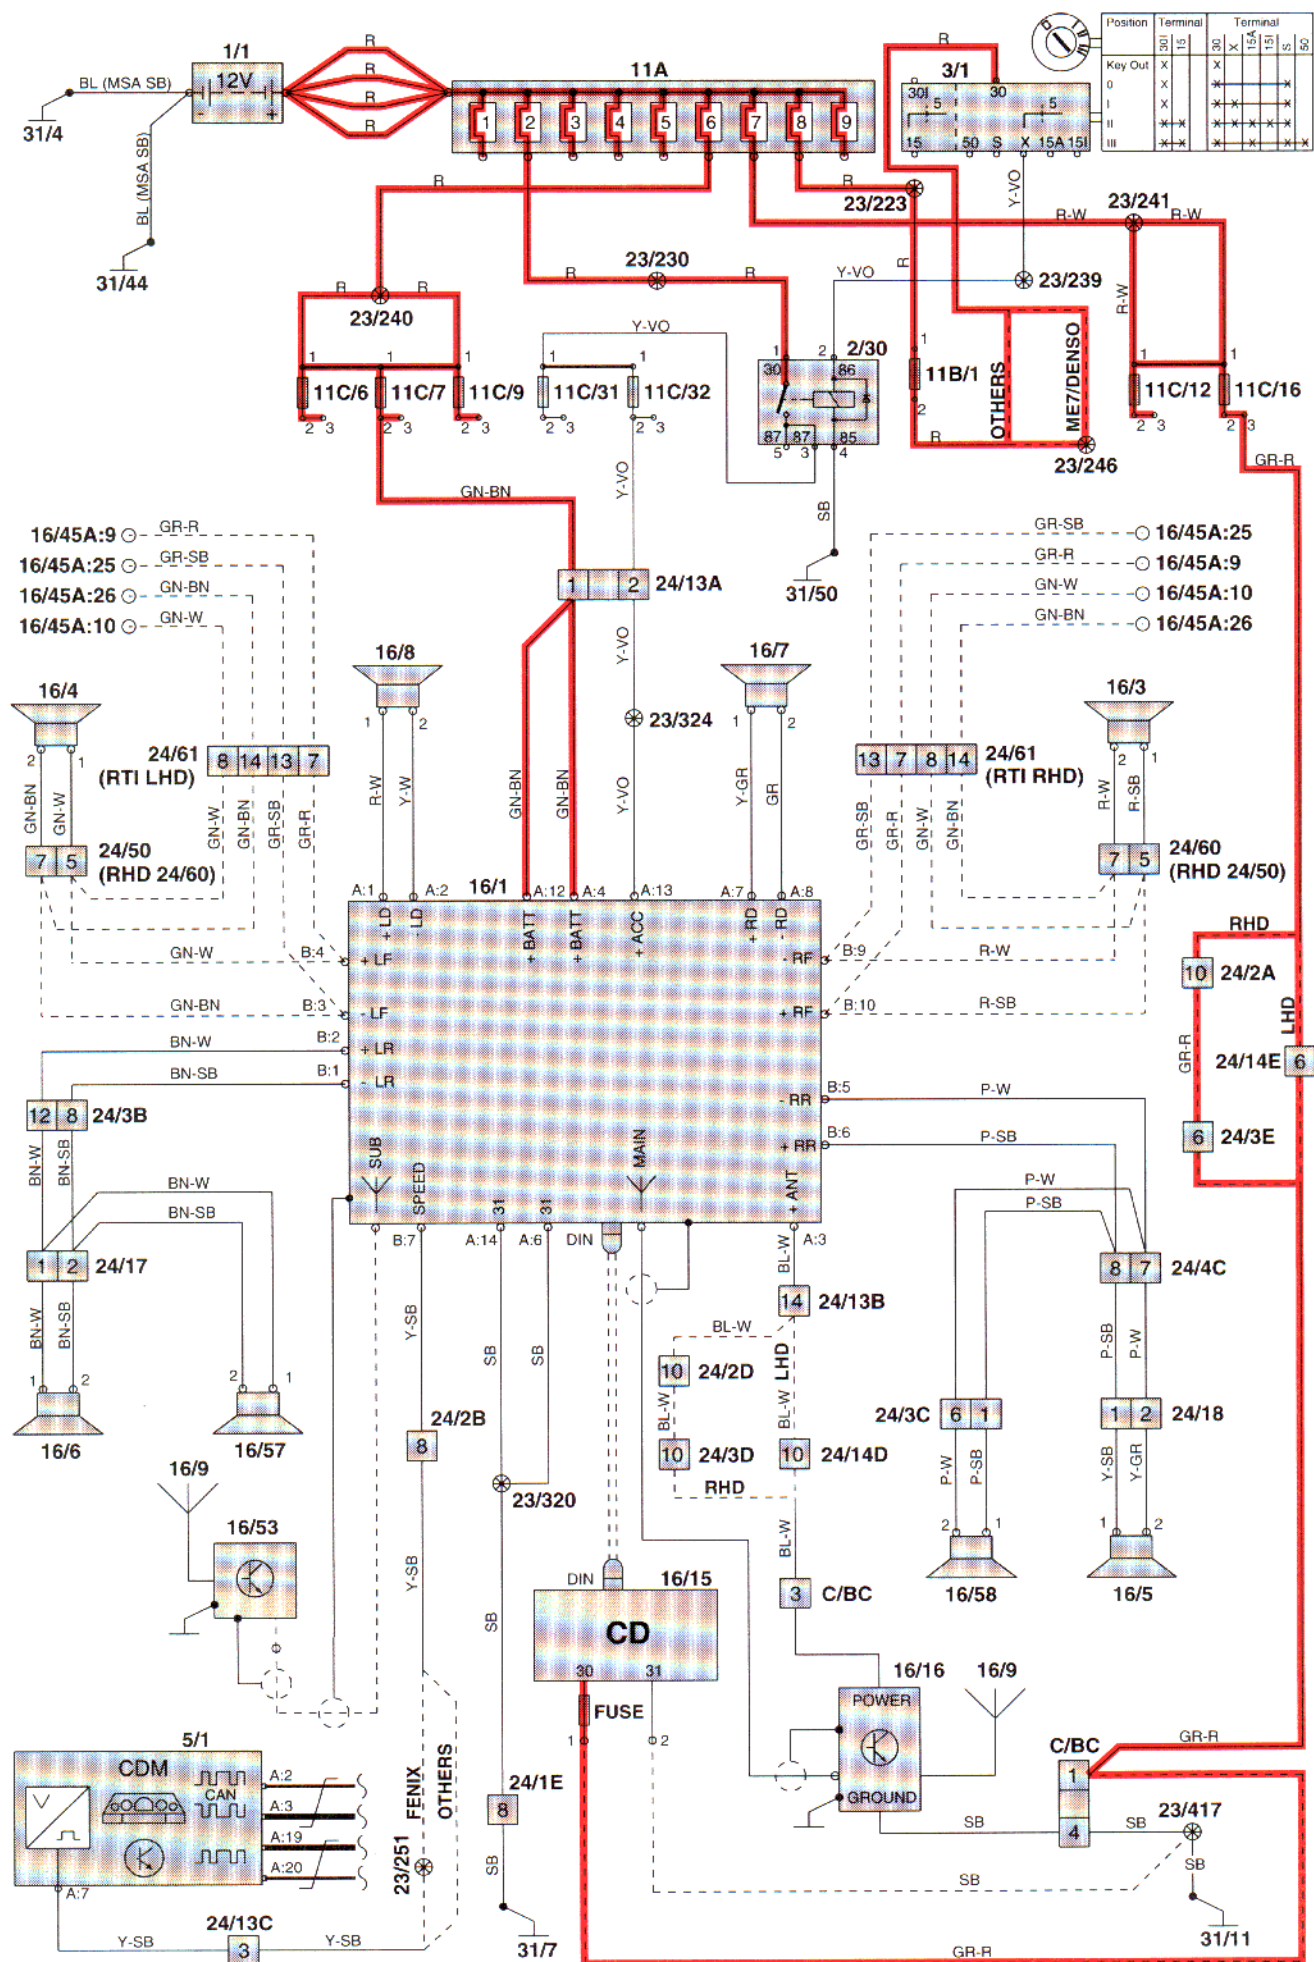


Radio with 4x50 W extra amplifier
S70

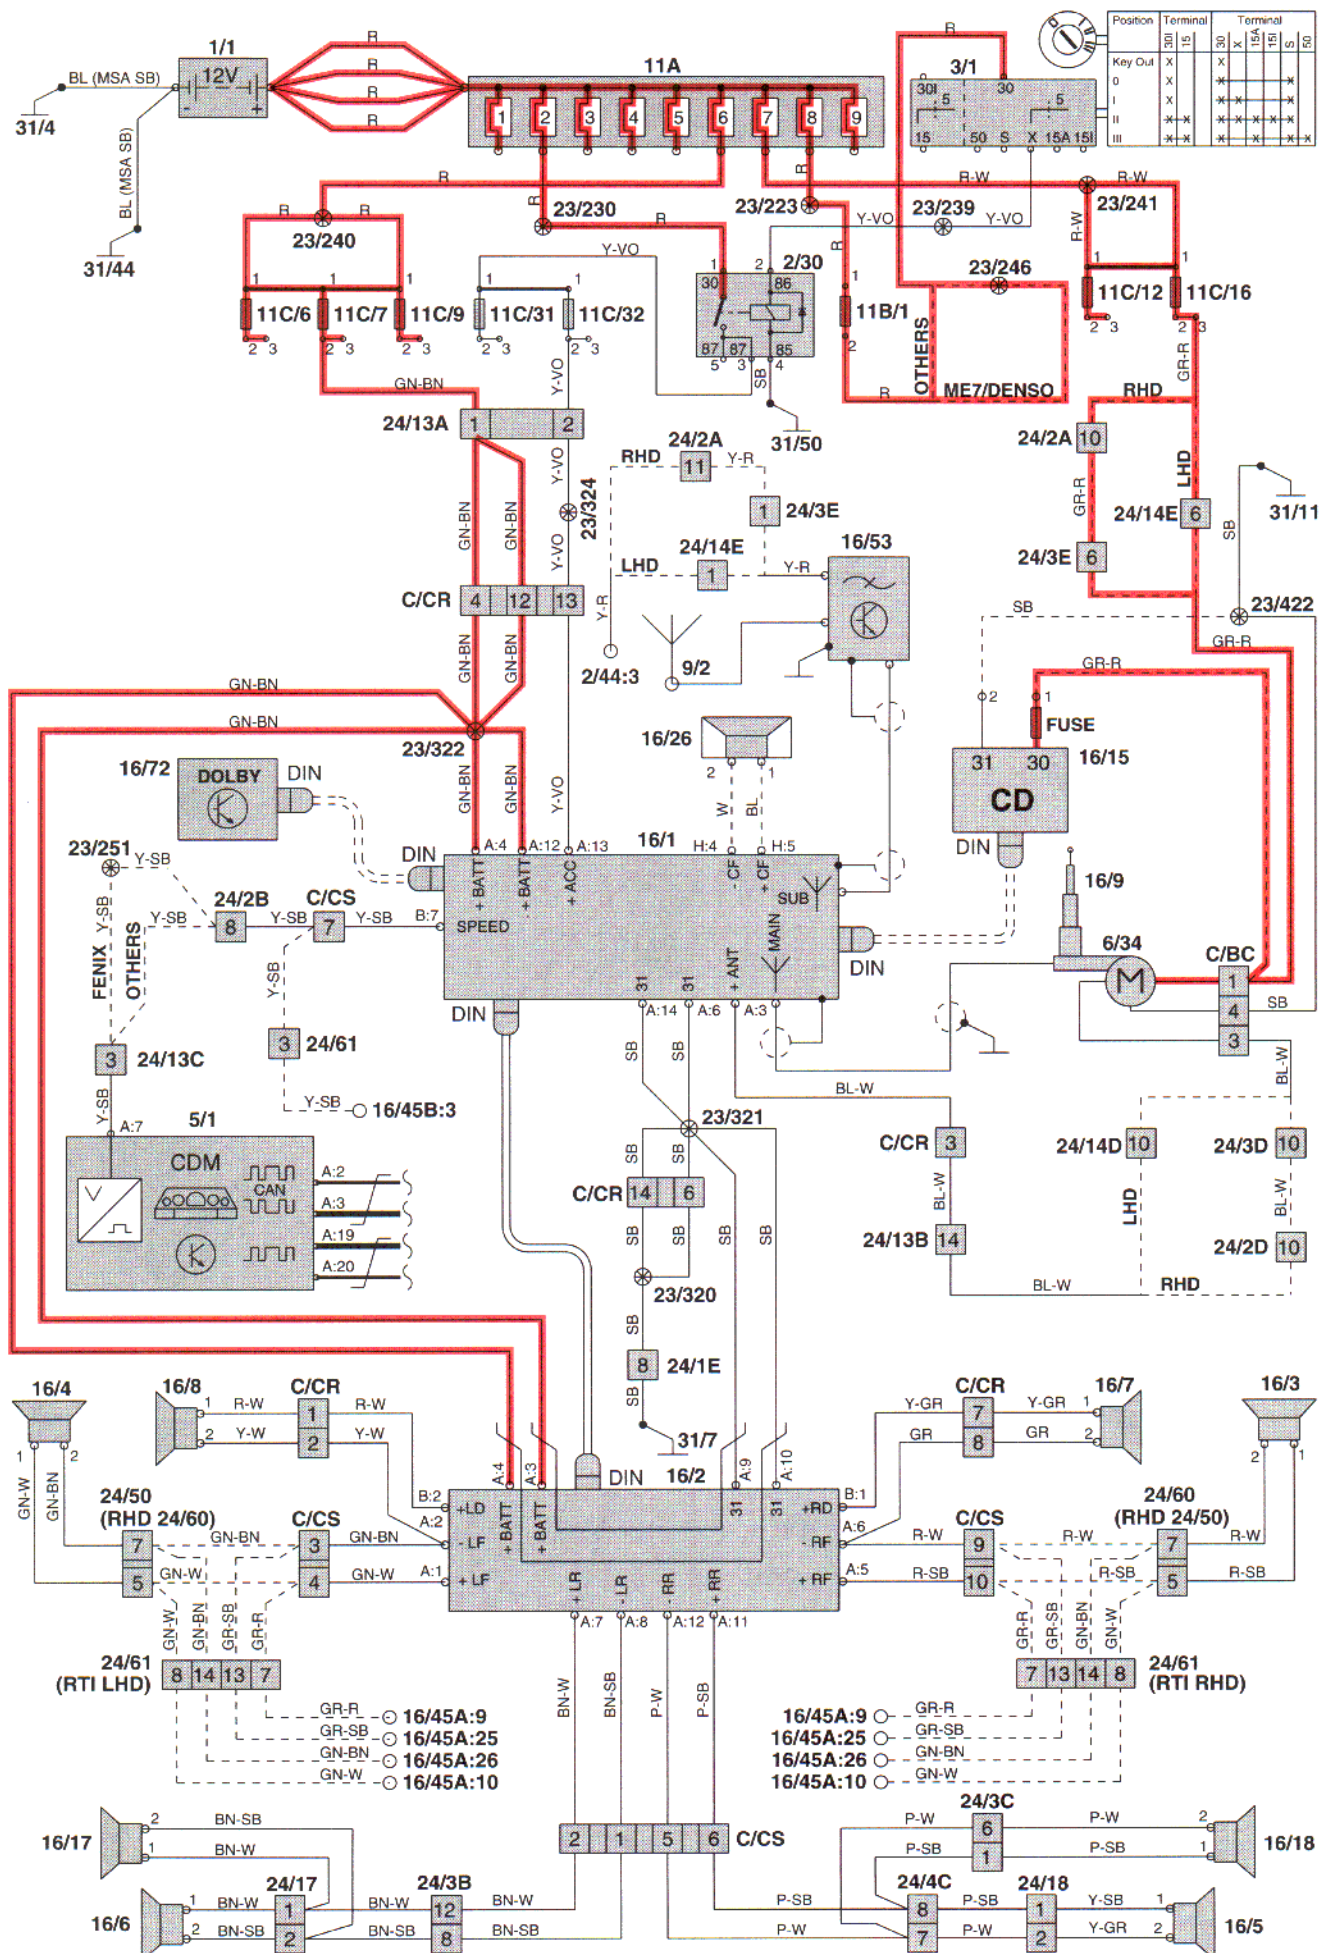


Radio with 4x50 W extra amplifier V70

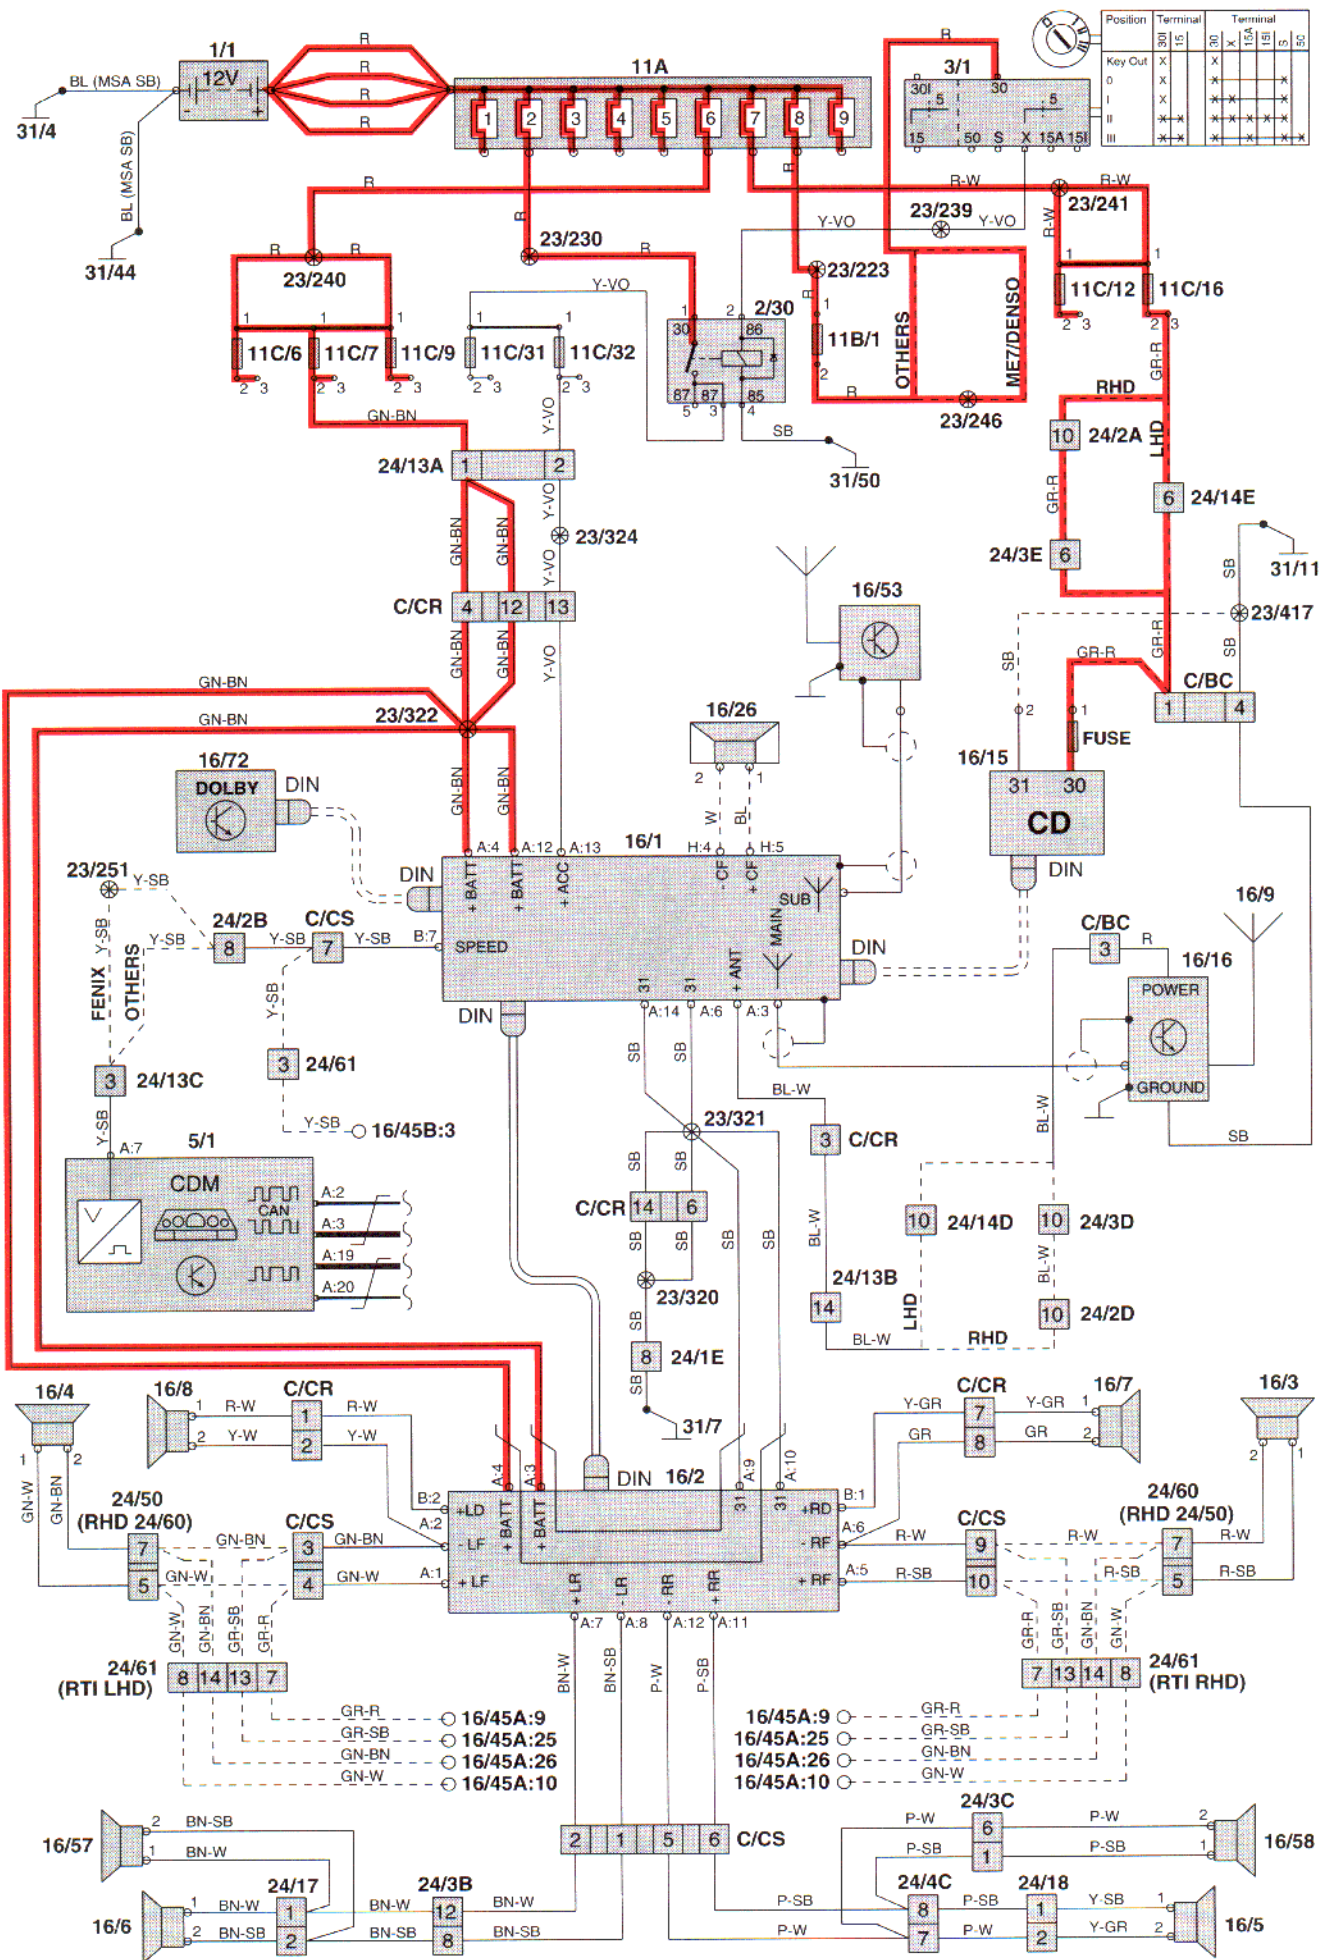


RTI Road Traffic Information
C70

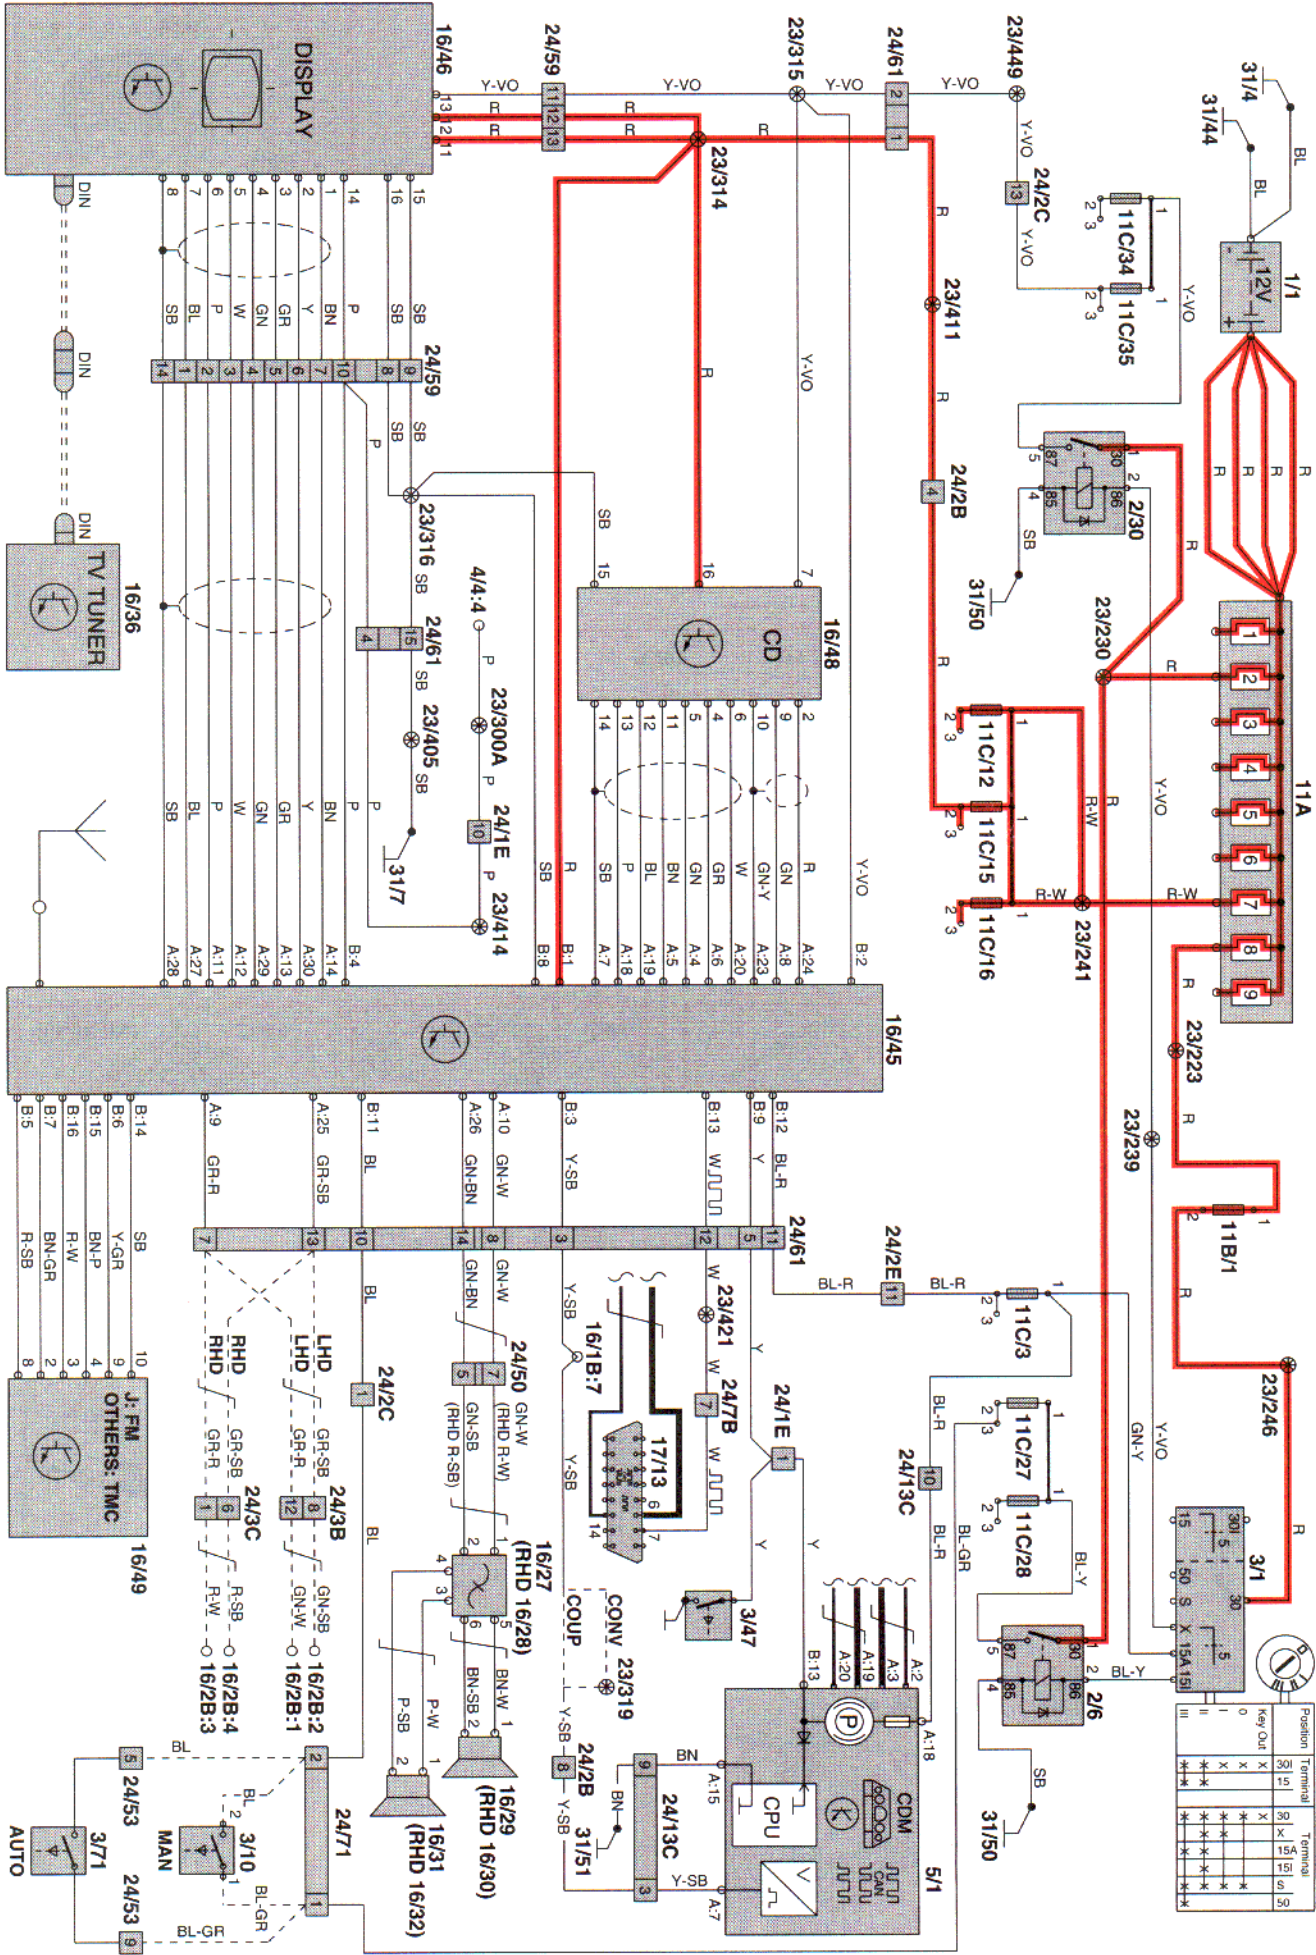


RTI Road Traffic Information
S70, V70

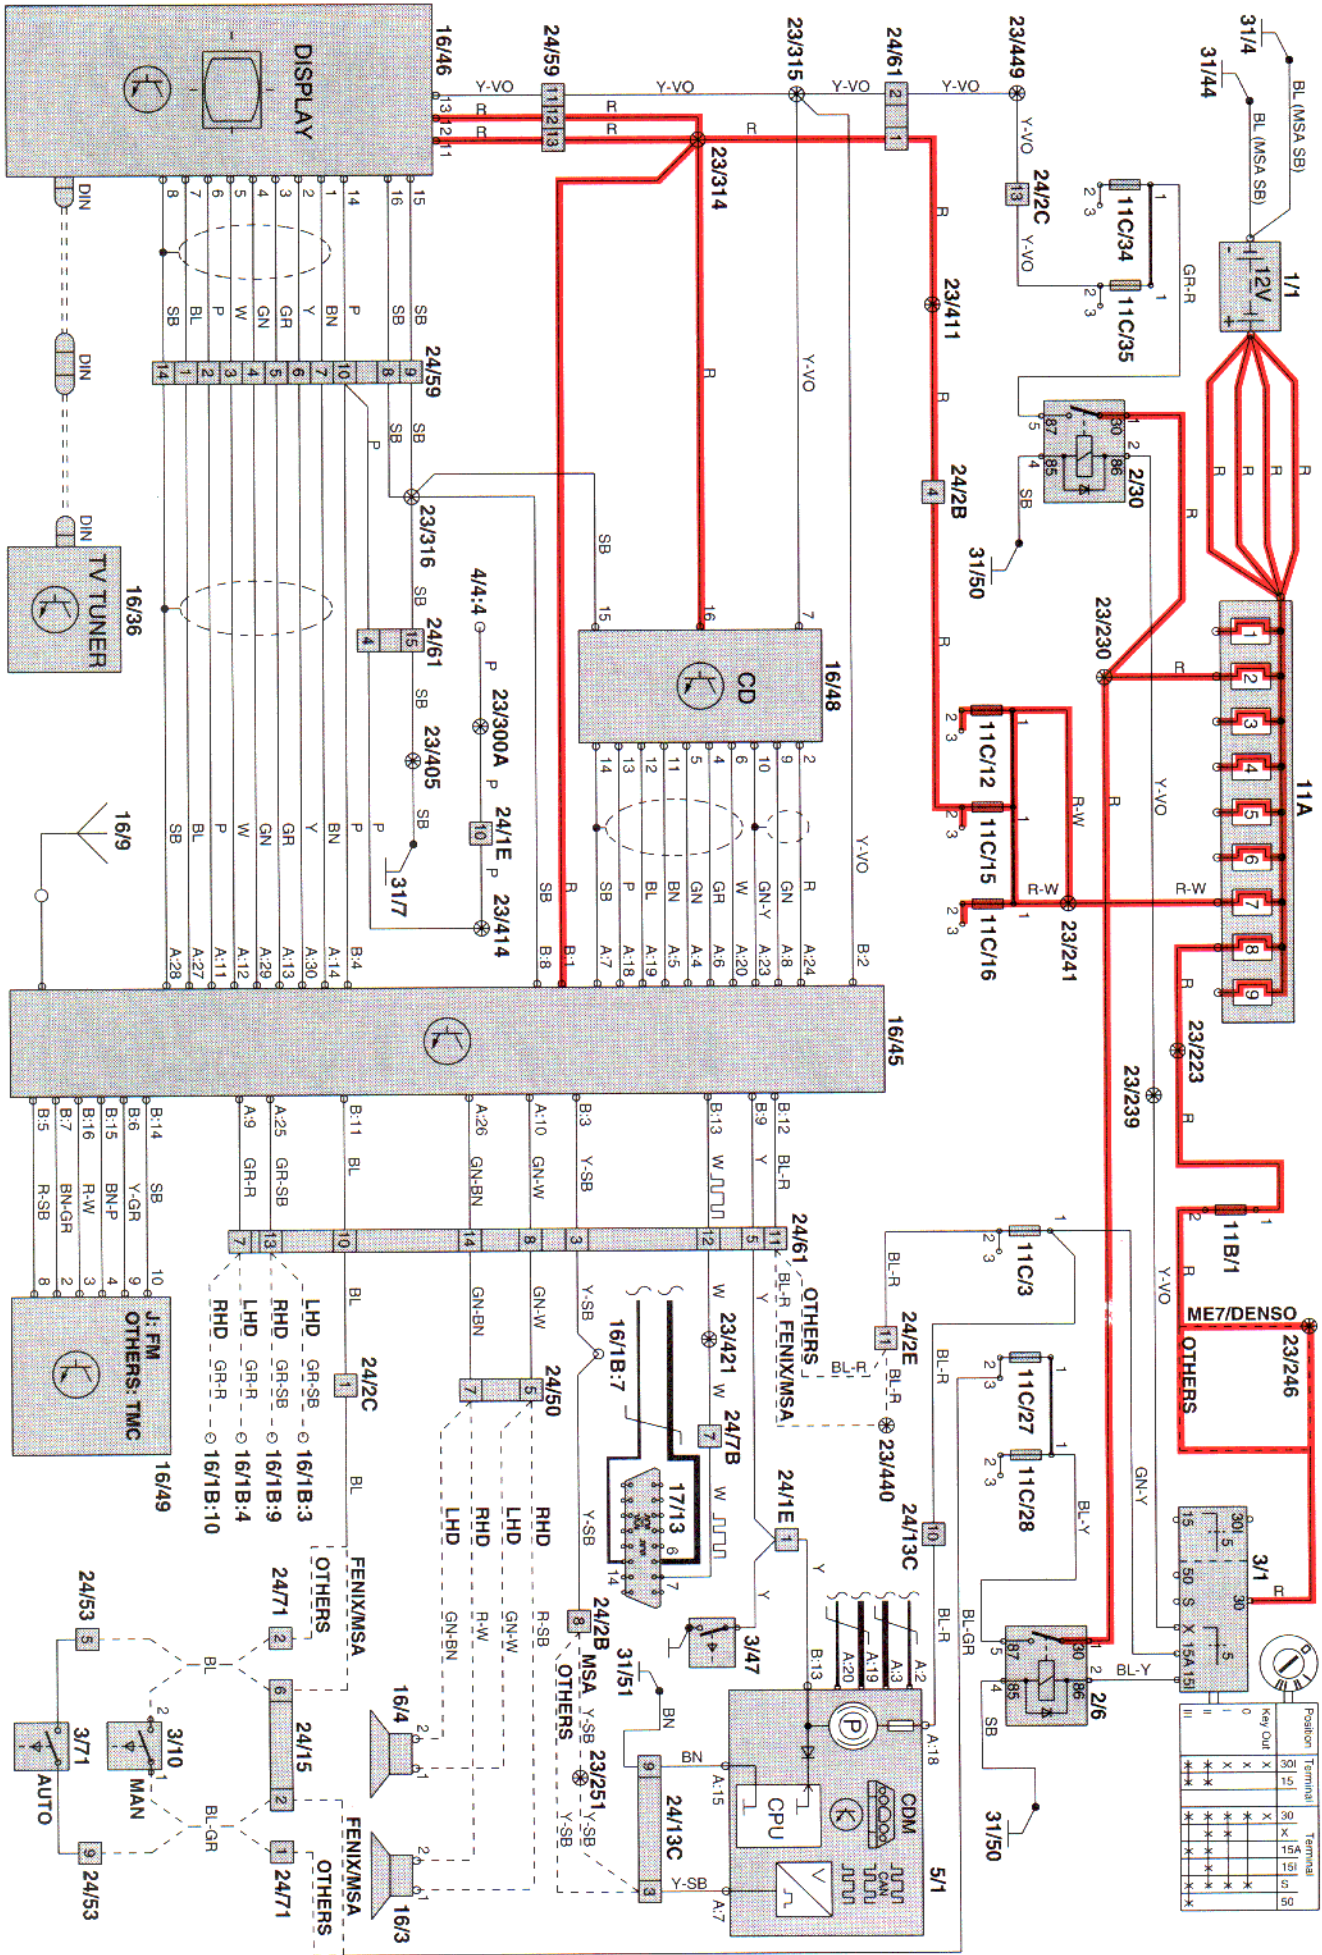


**Electronically controlled automatic transmission AW 50-42
Fenix 5.2, MSA 15.7**

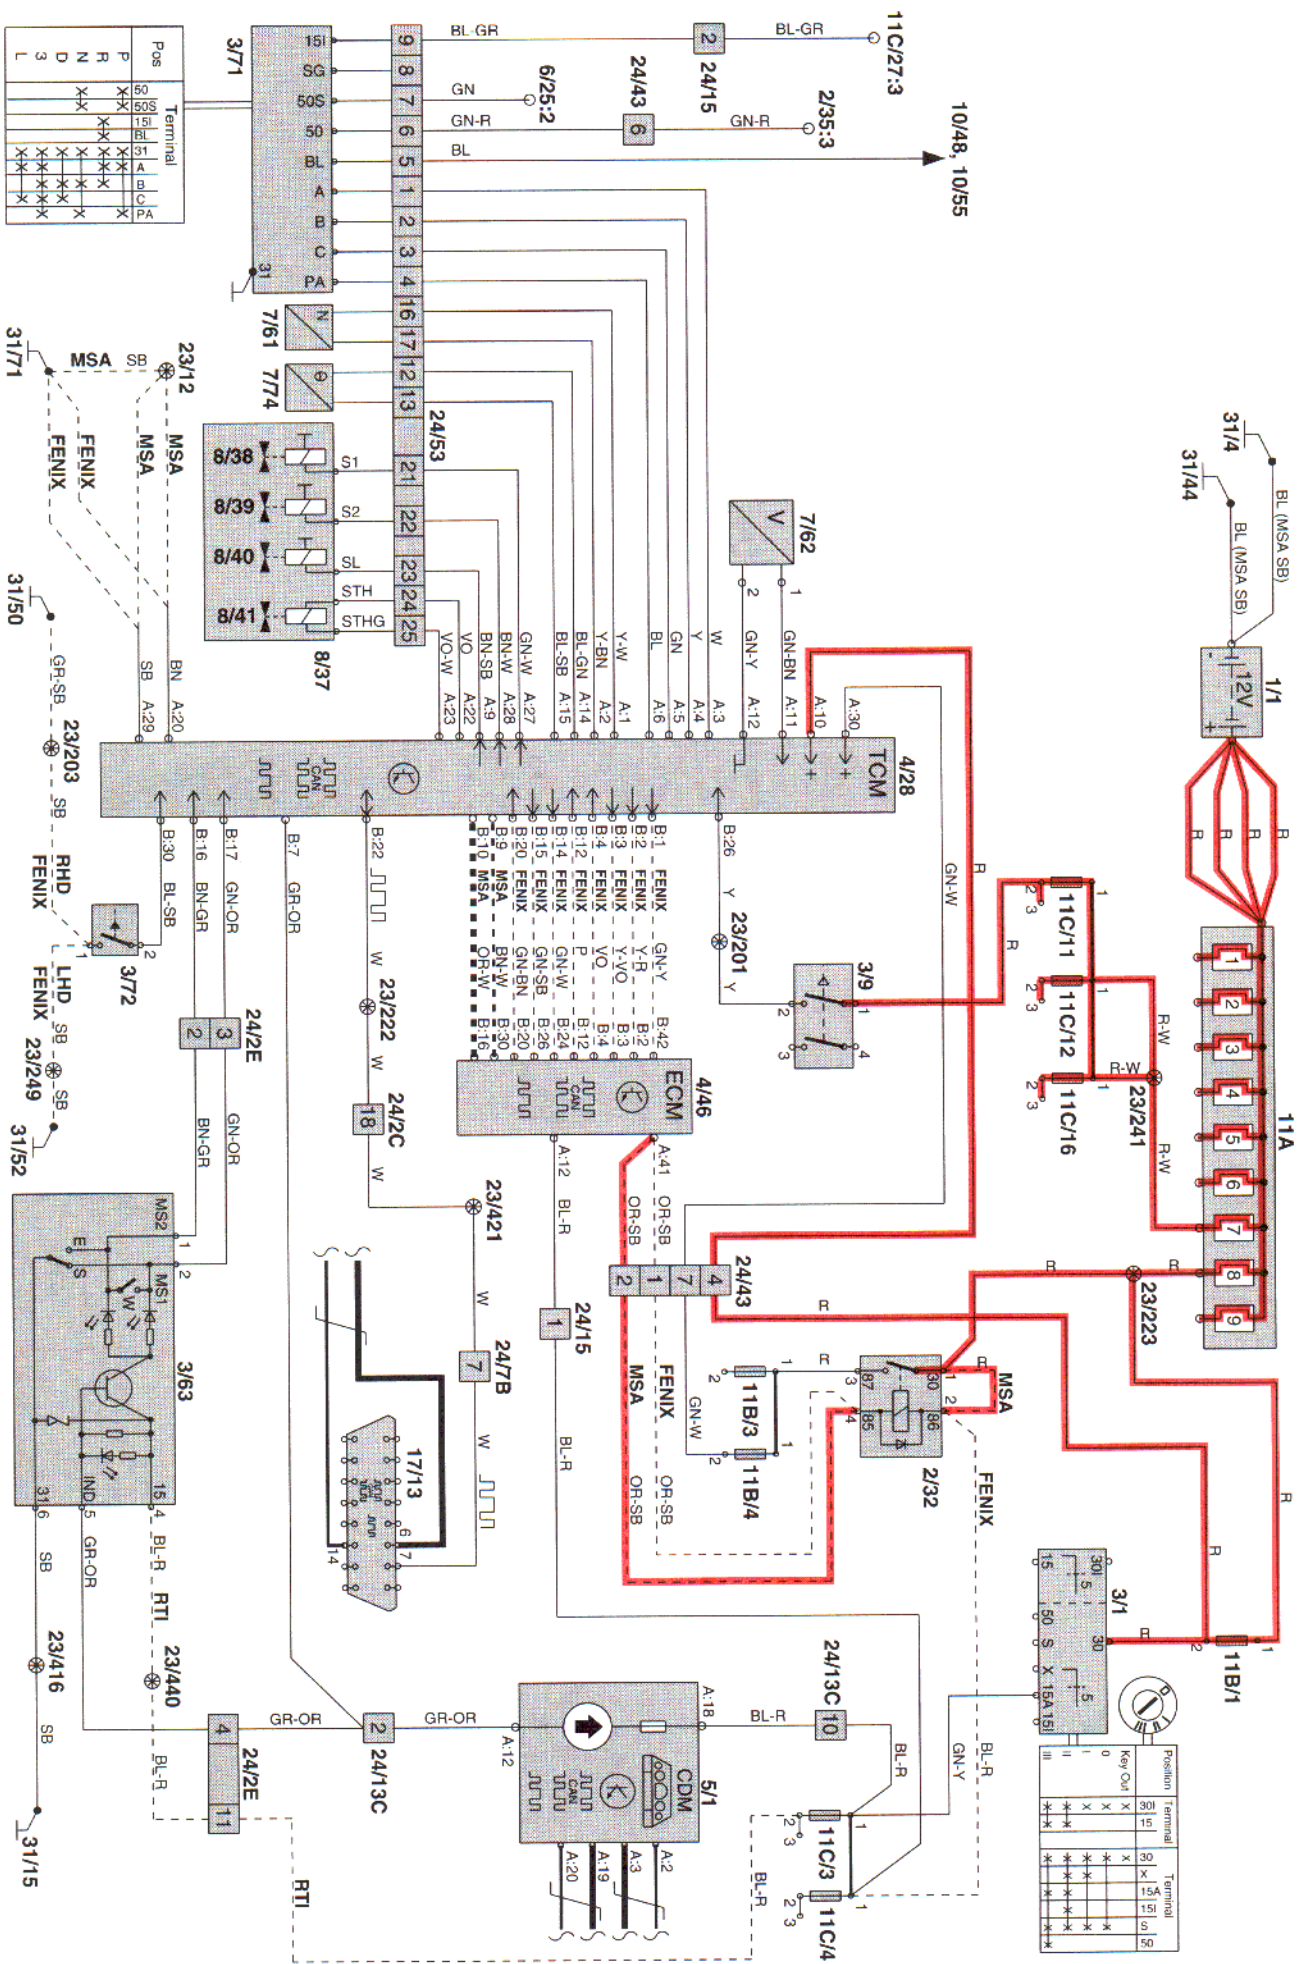


Electronically controlled automatic transmission AW 50-42 Denso, ME7

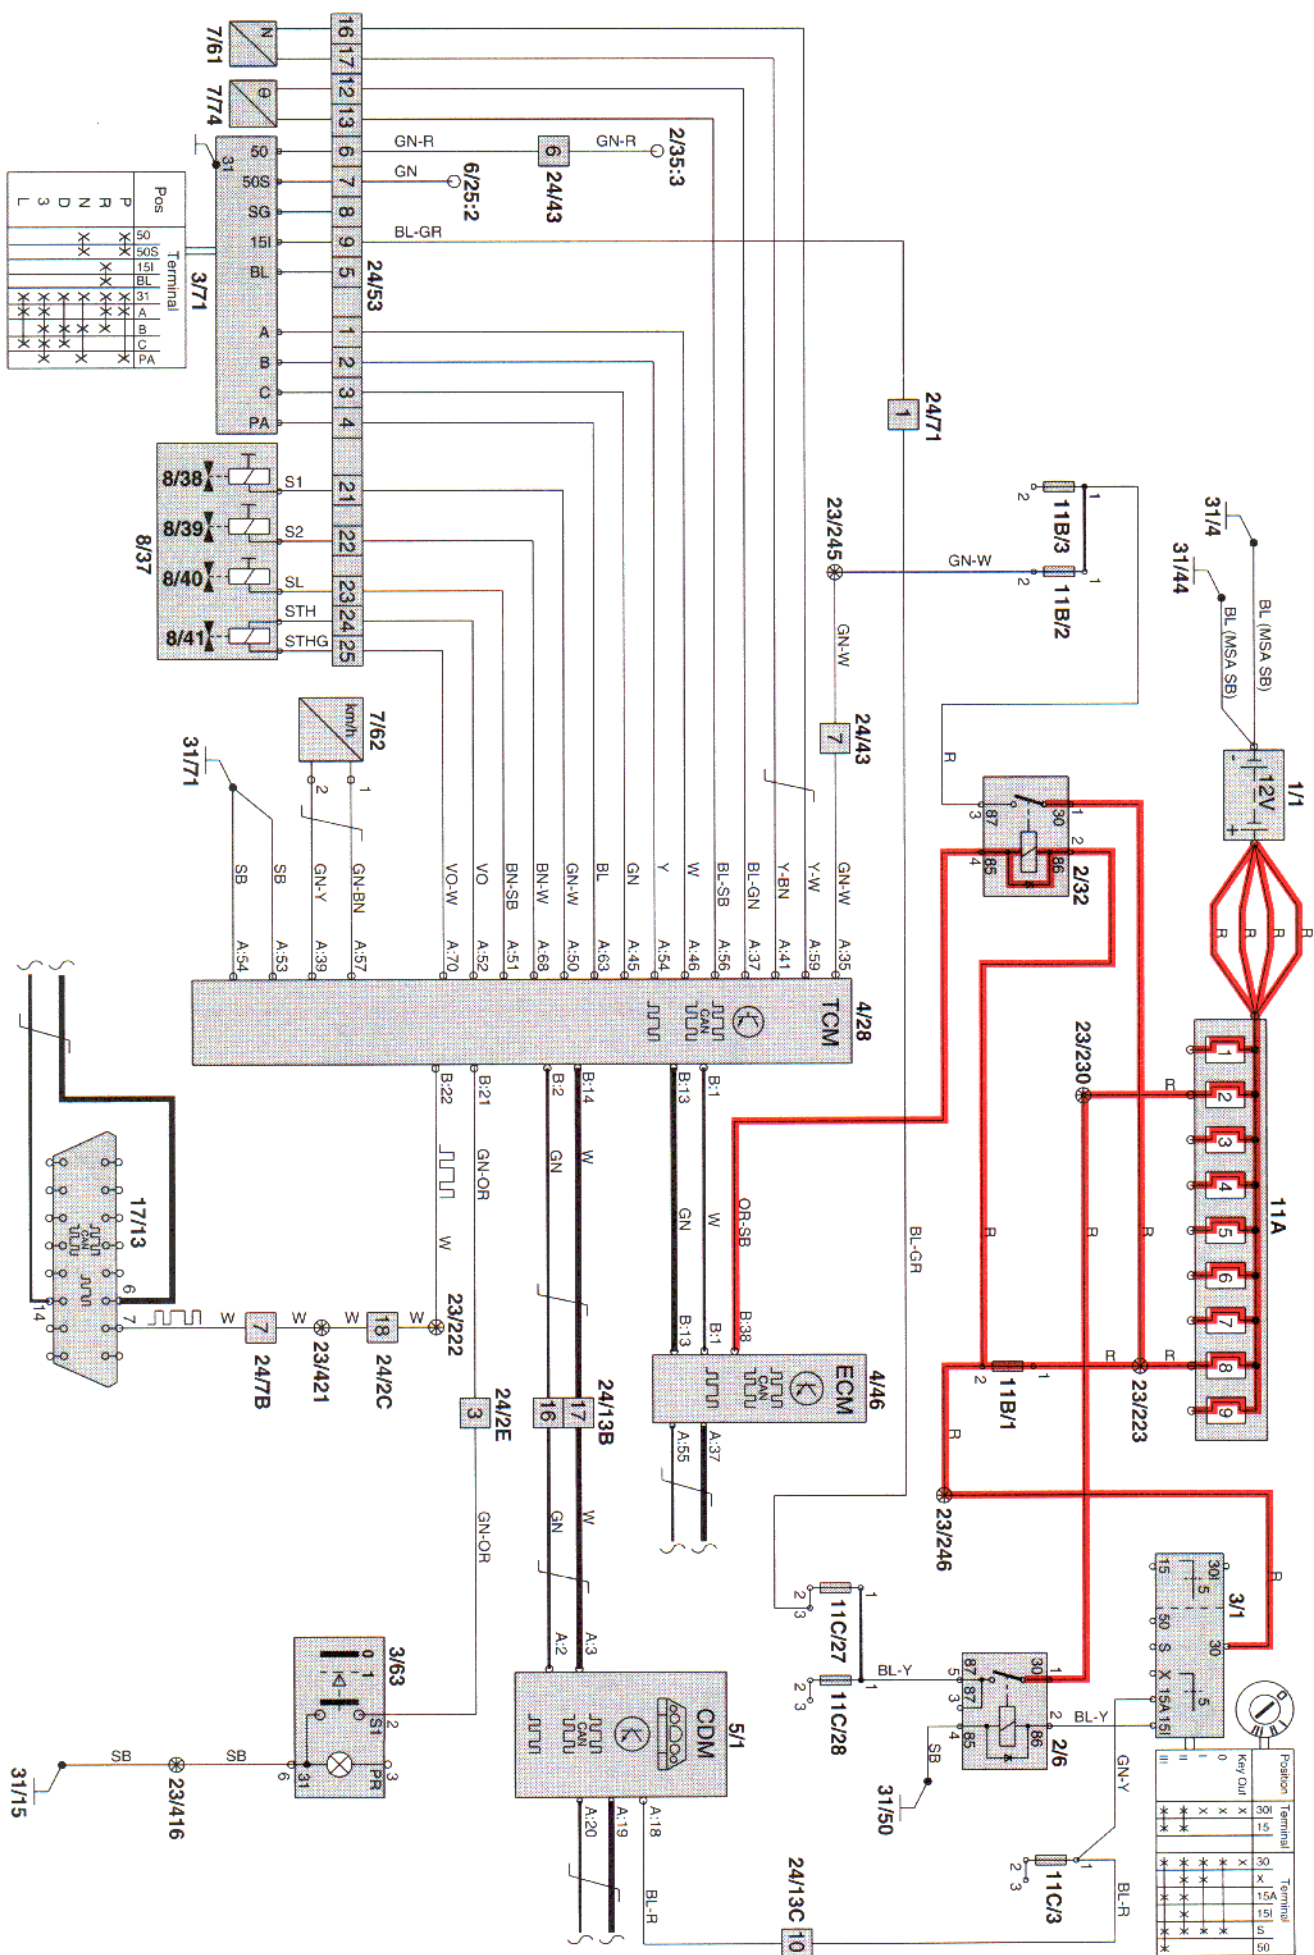


P-shift lock, automatic transmission

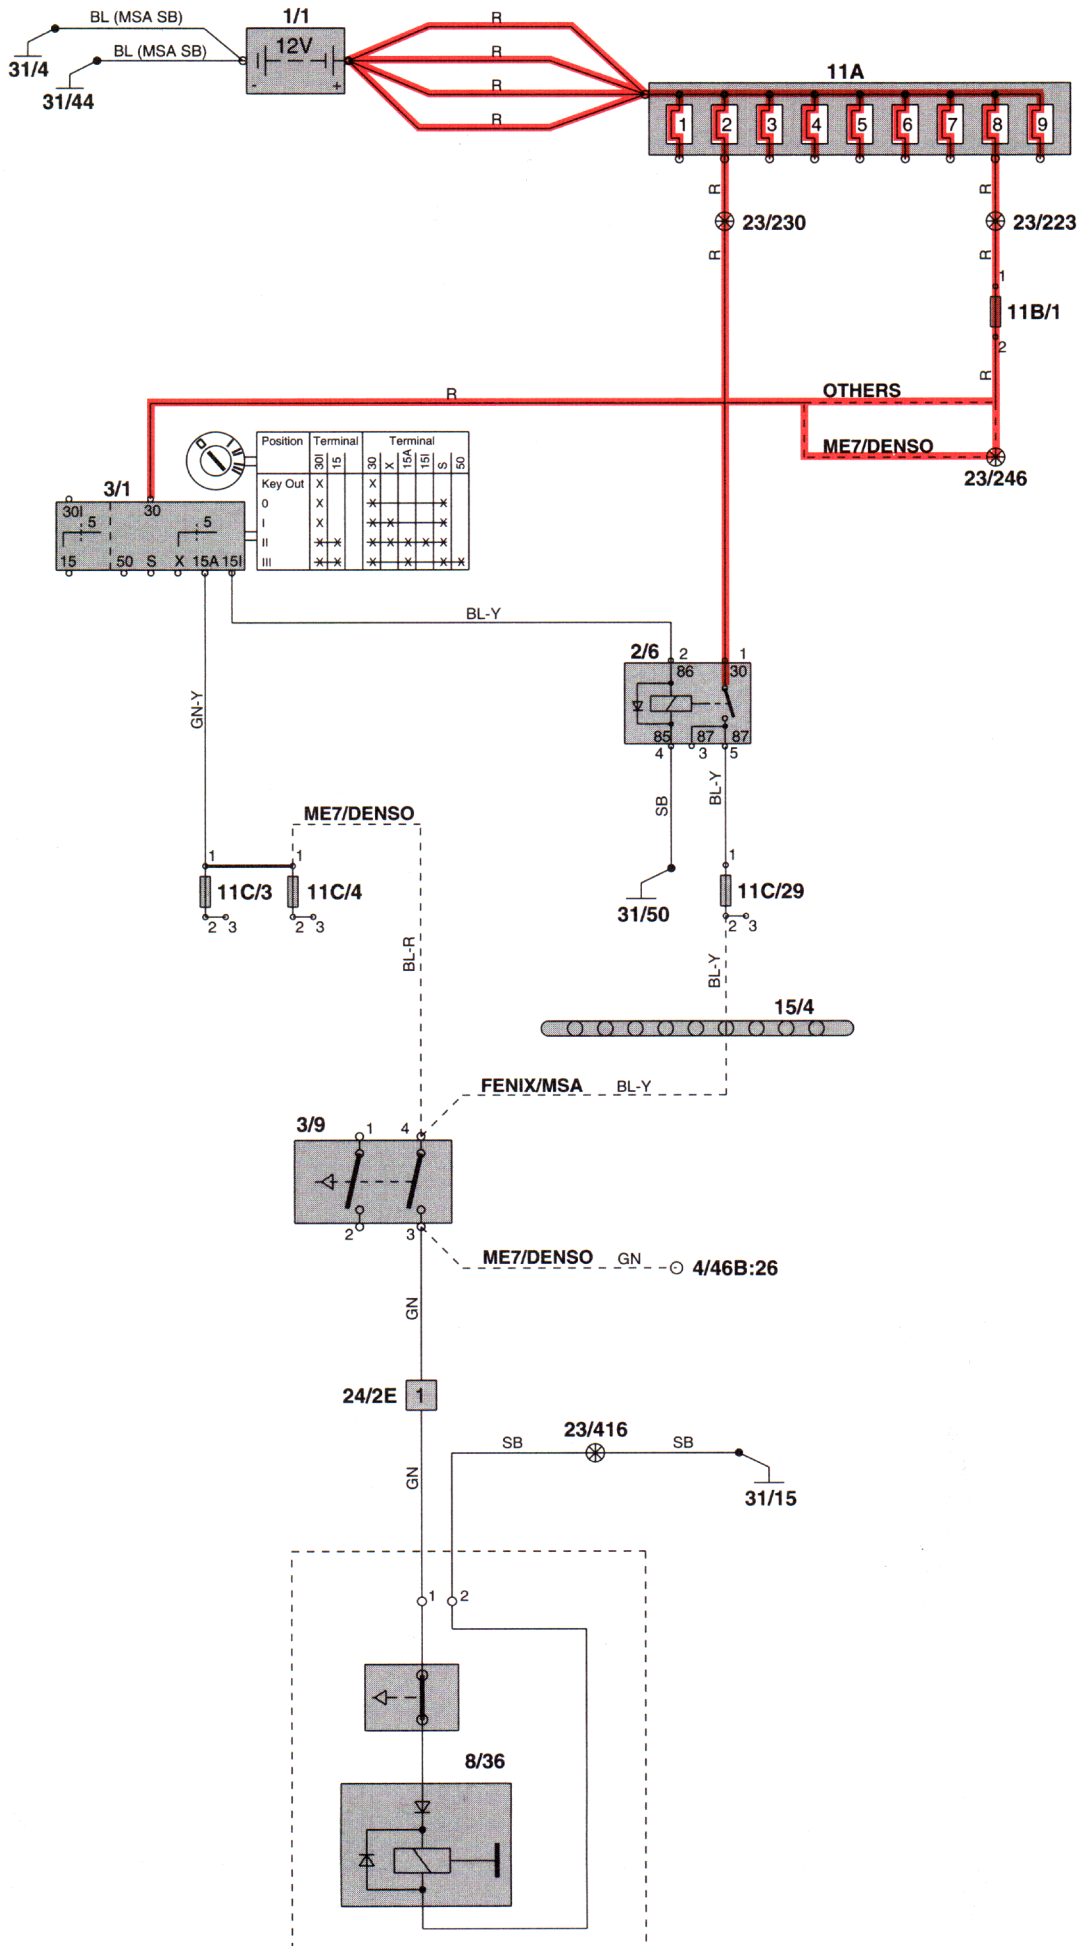


ABS Anti-lock braking system

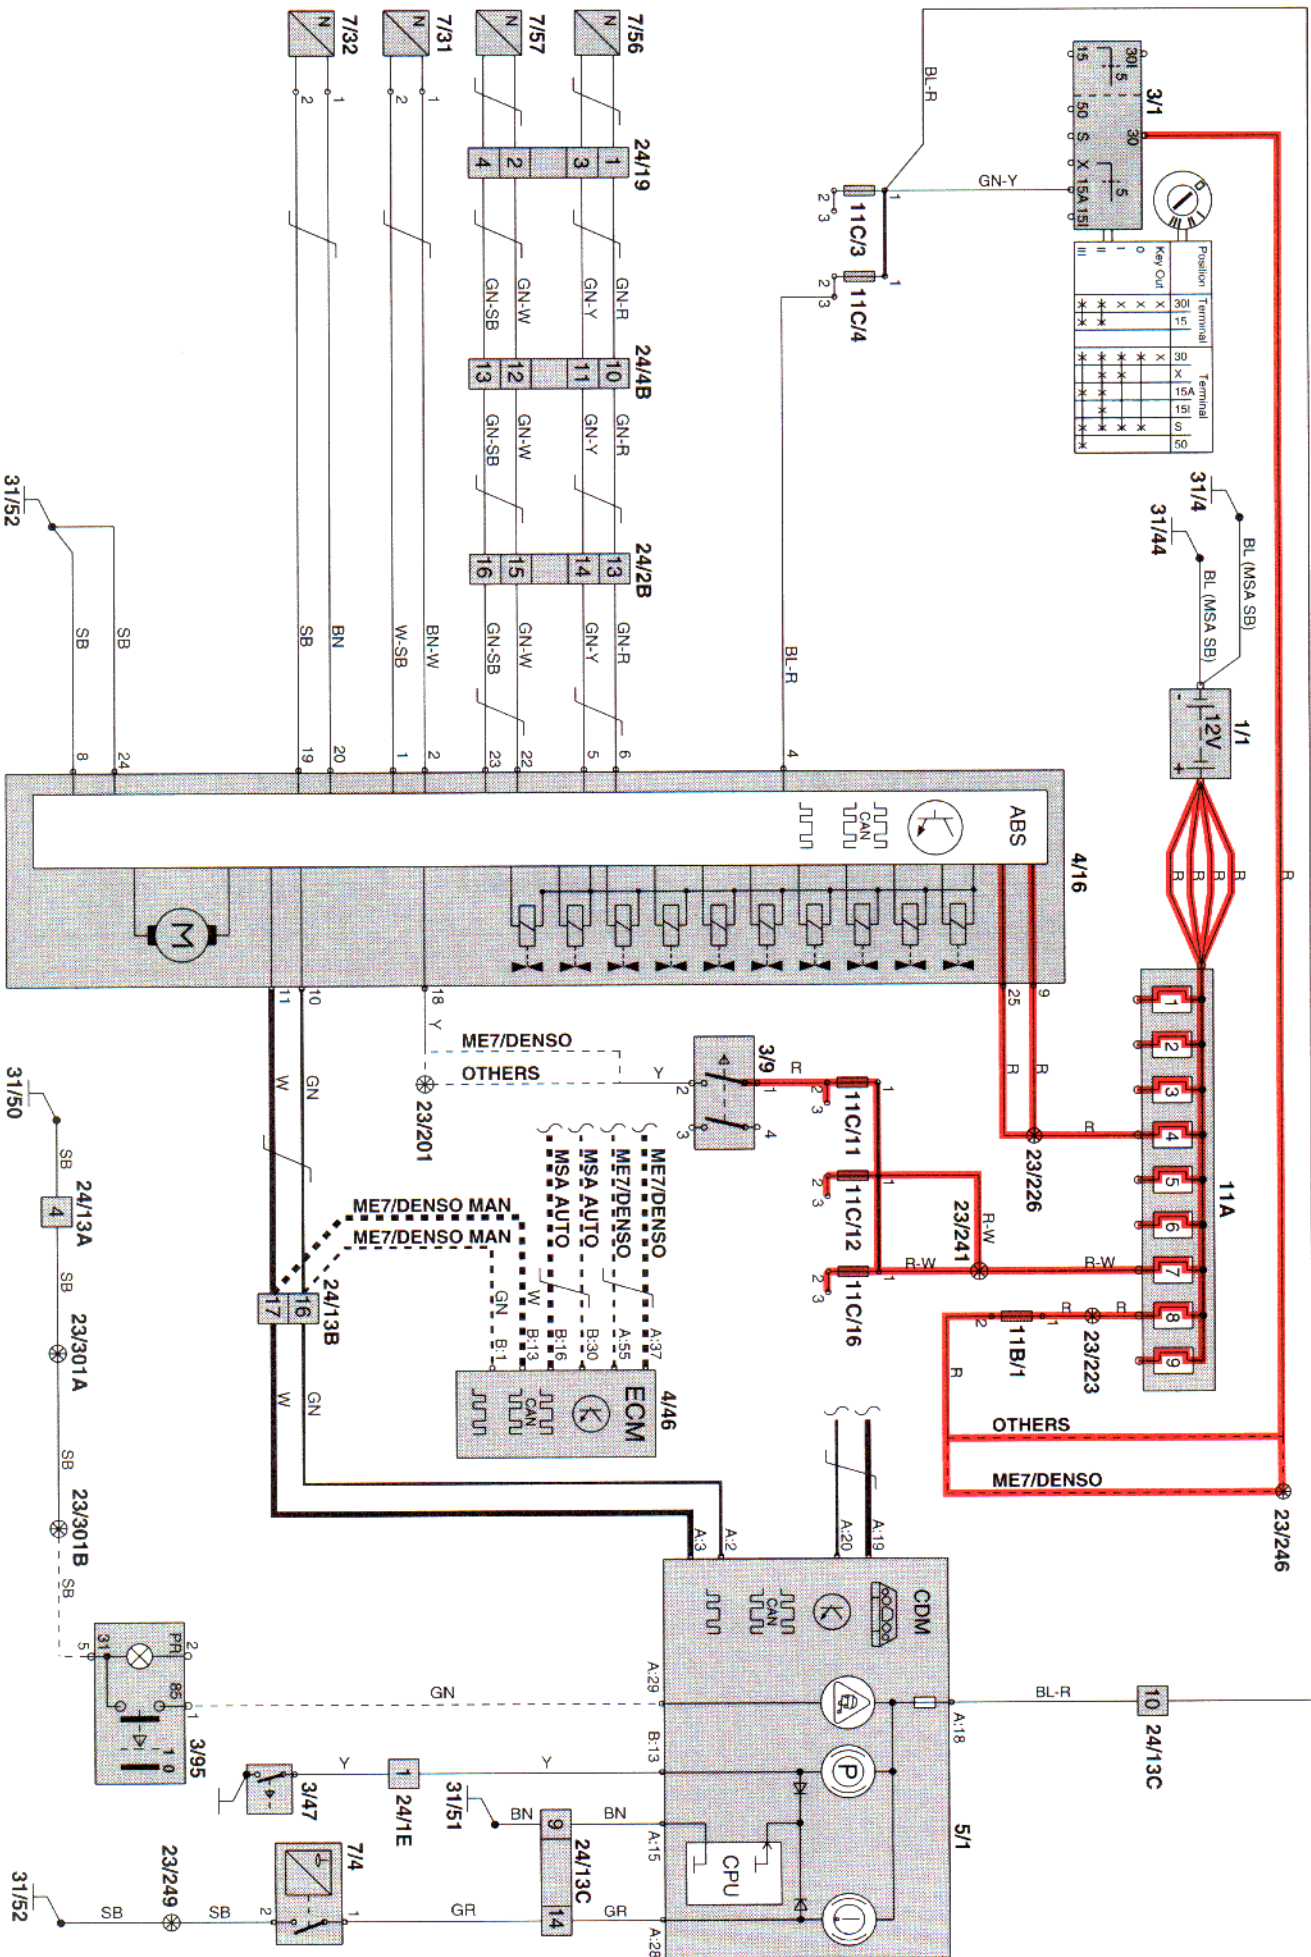


Central locking C70 Convertible

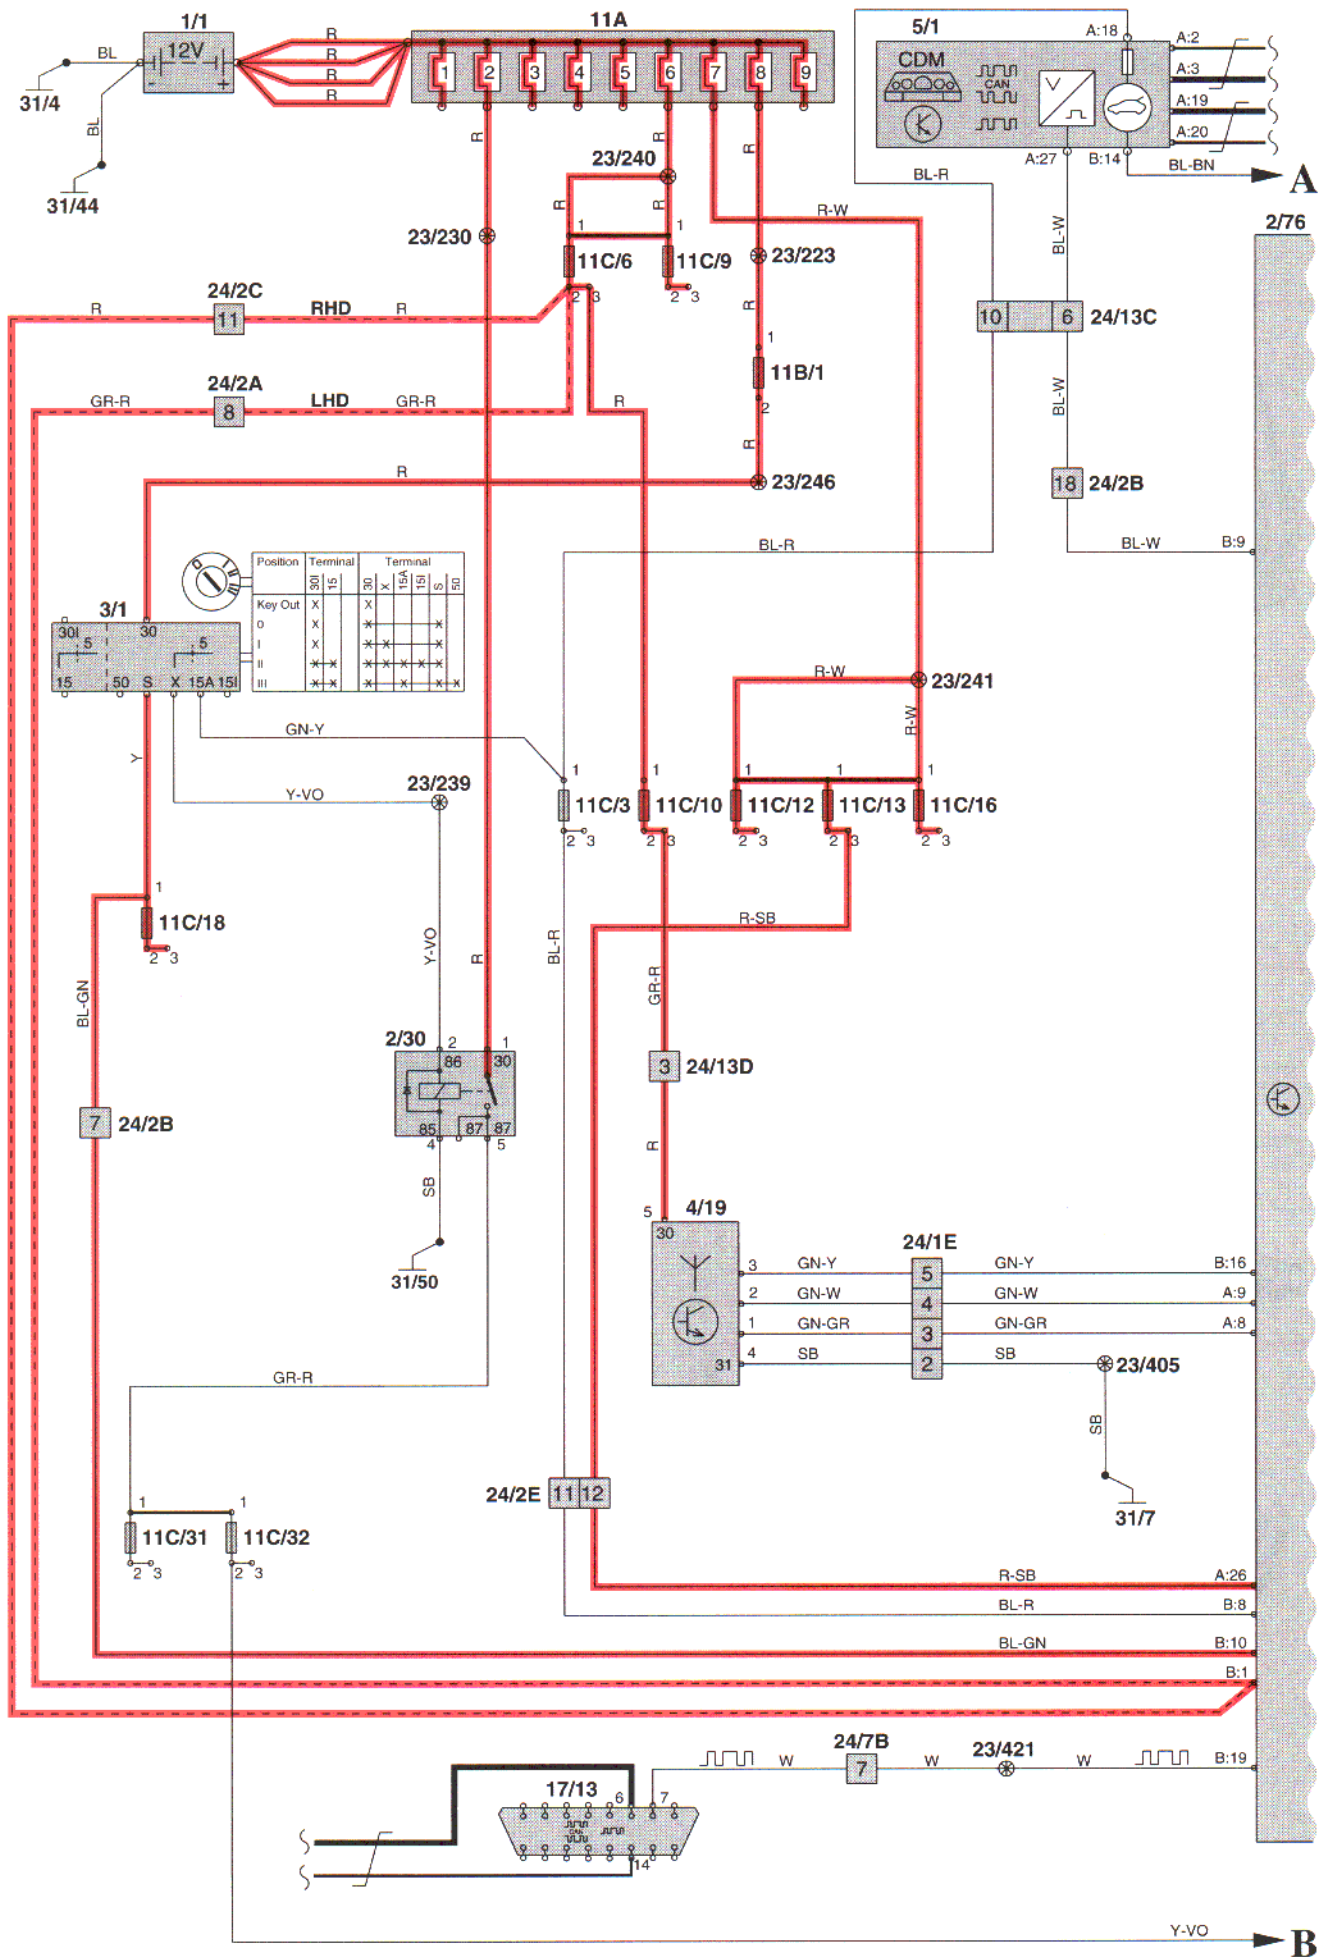


Central locking C70 coupé

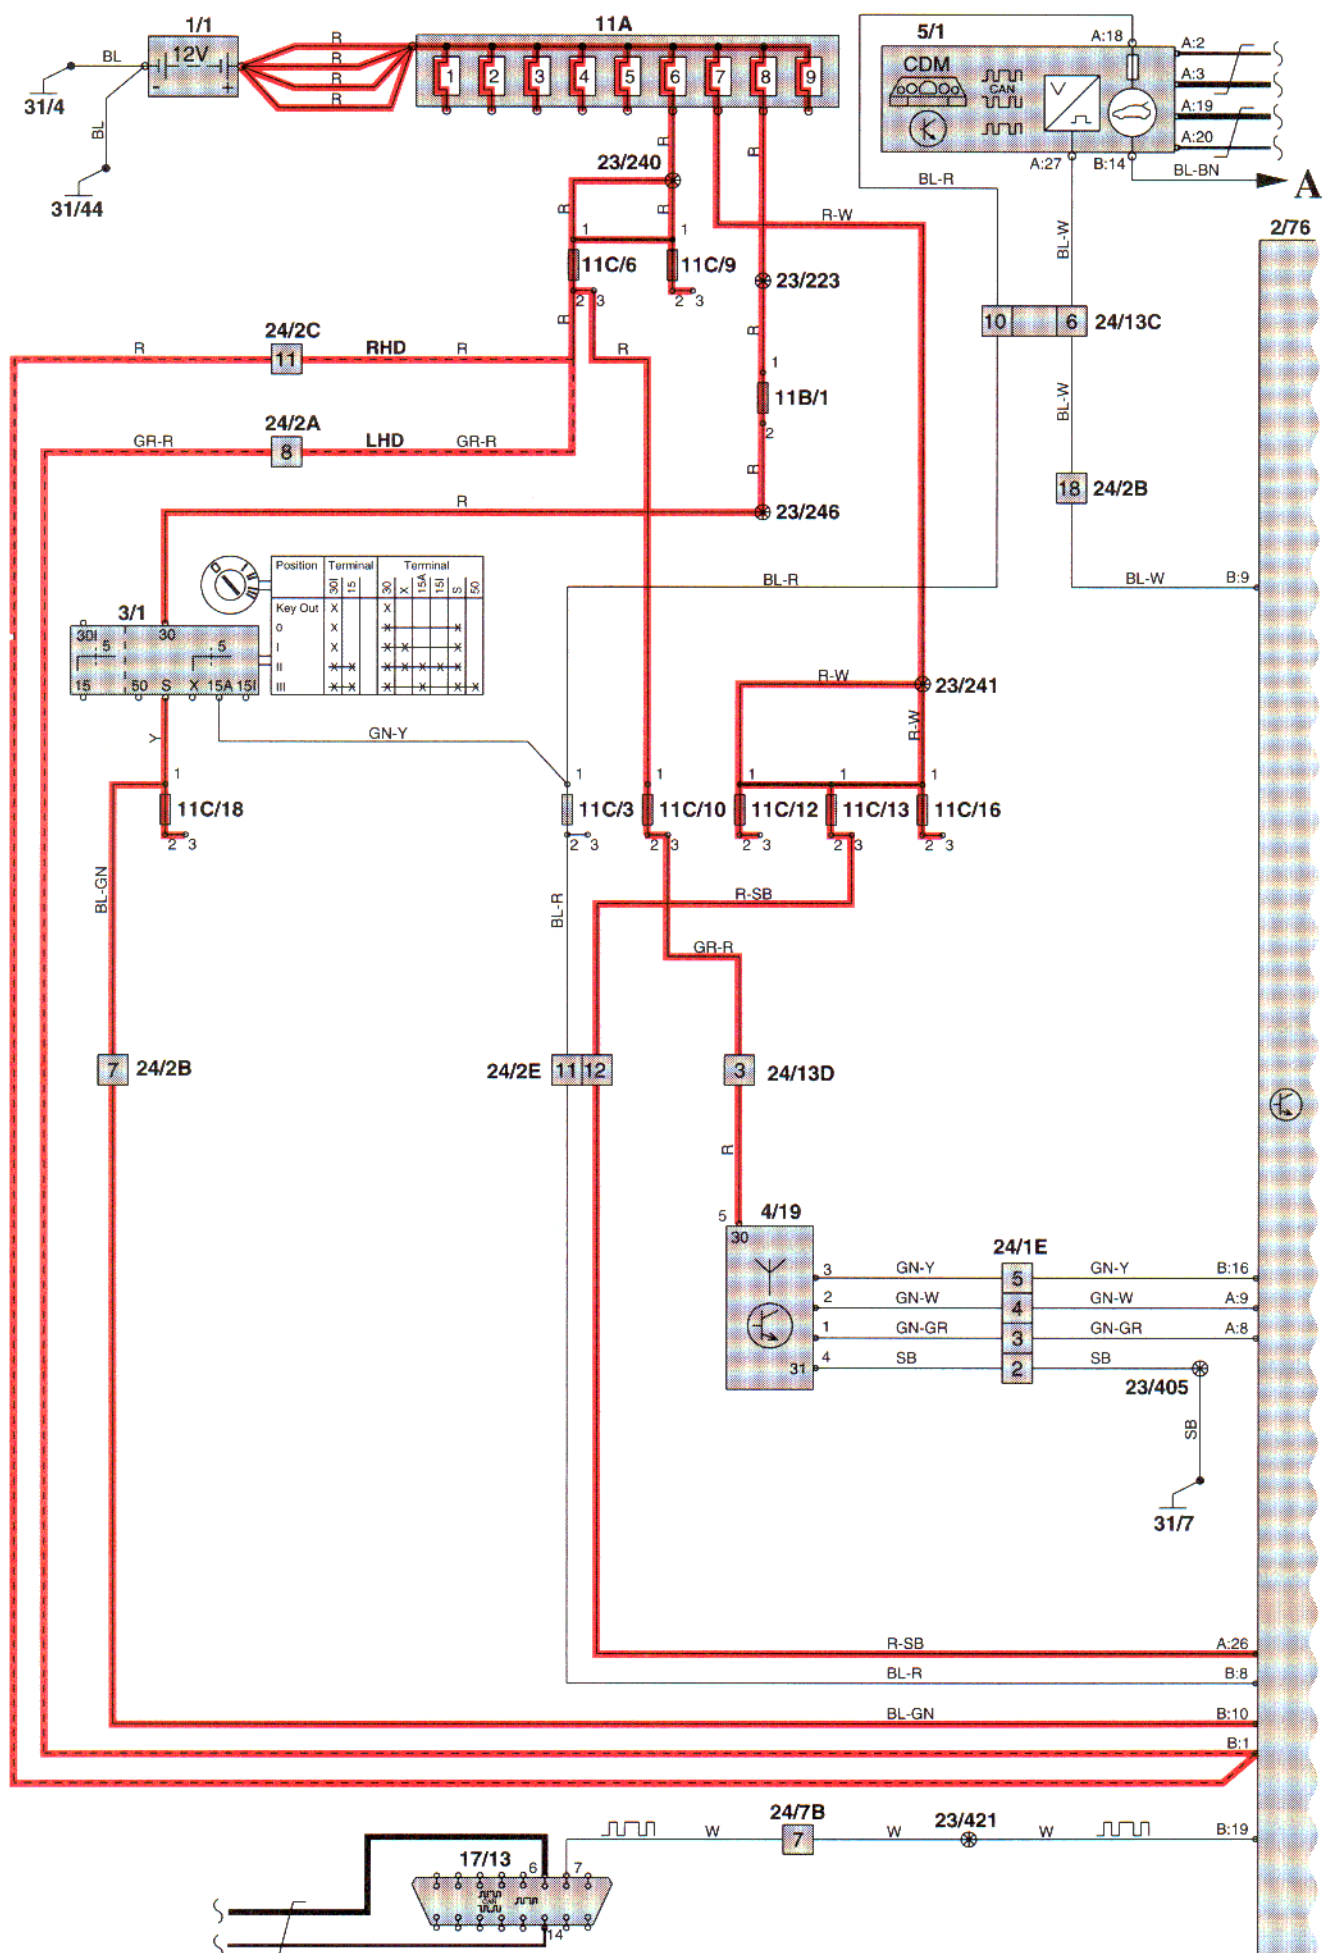


Central locking S70

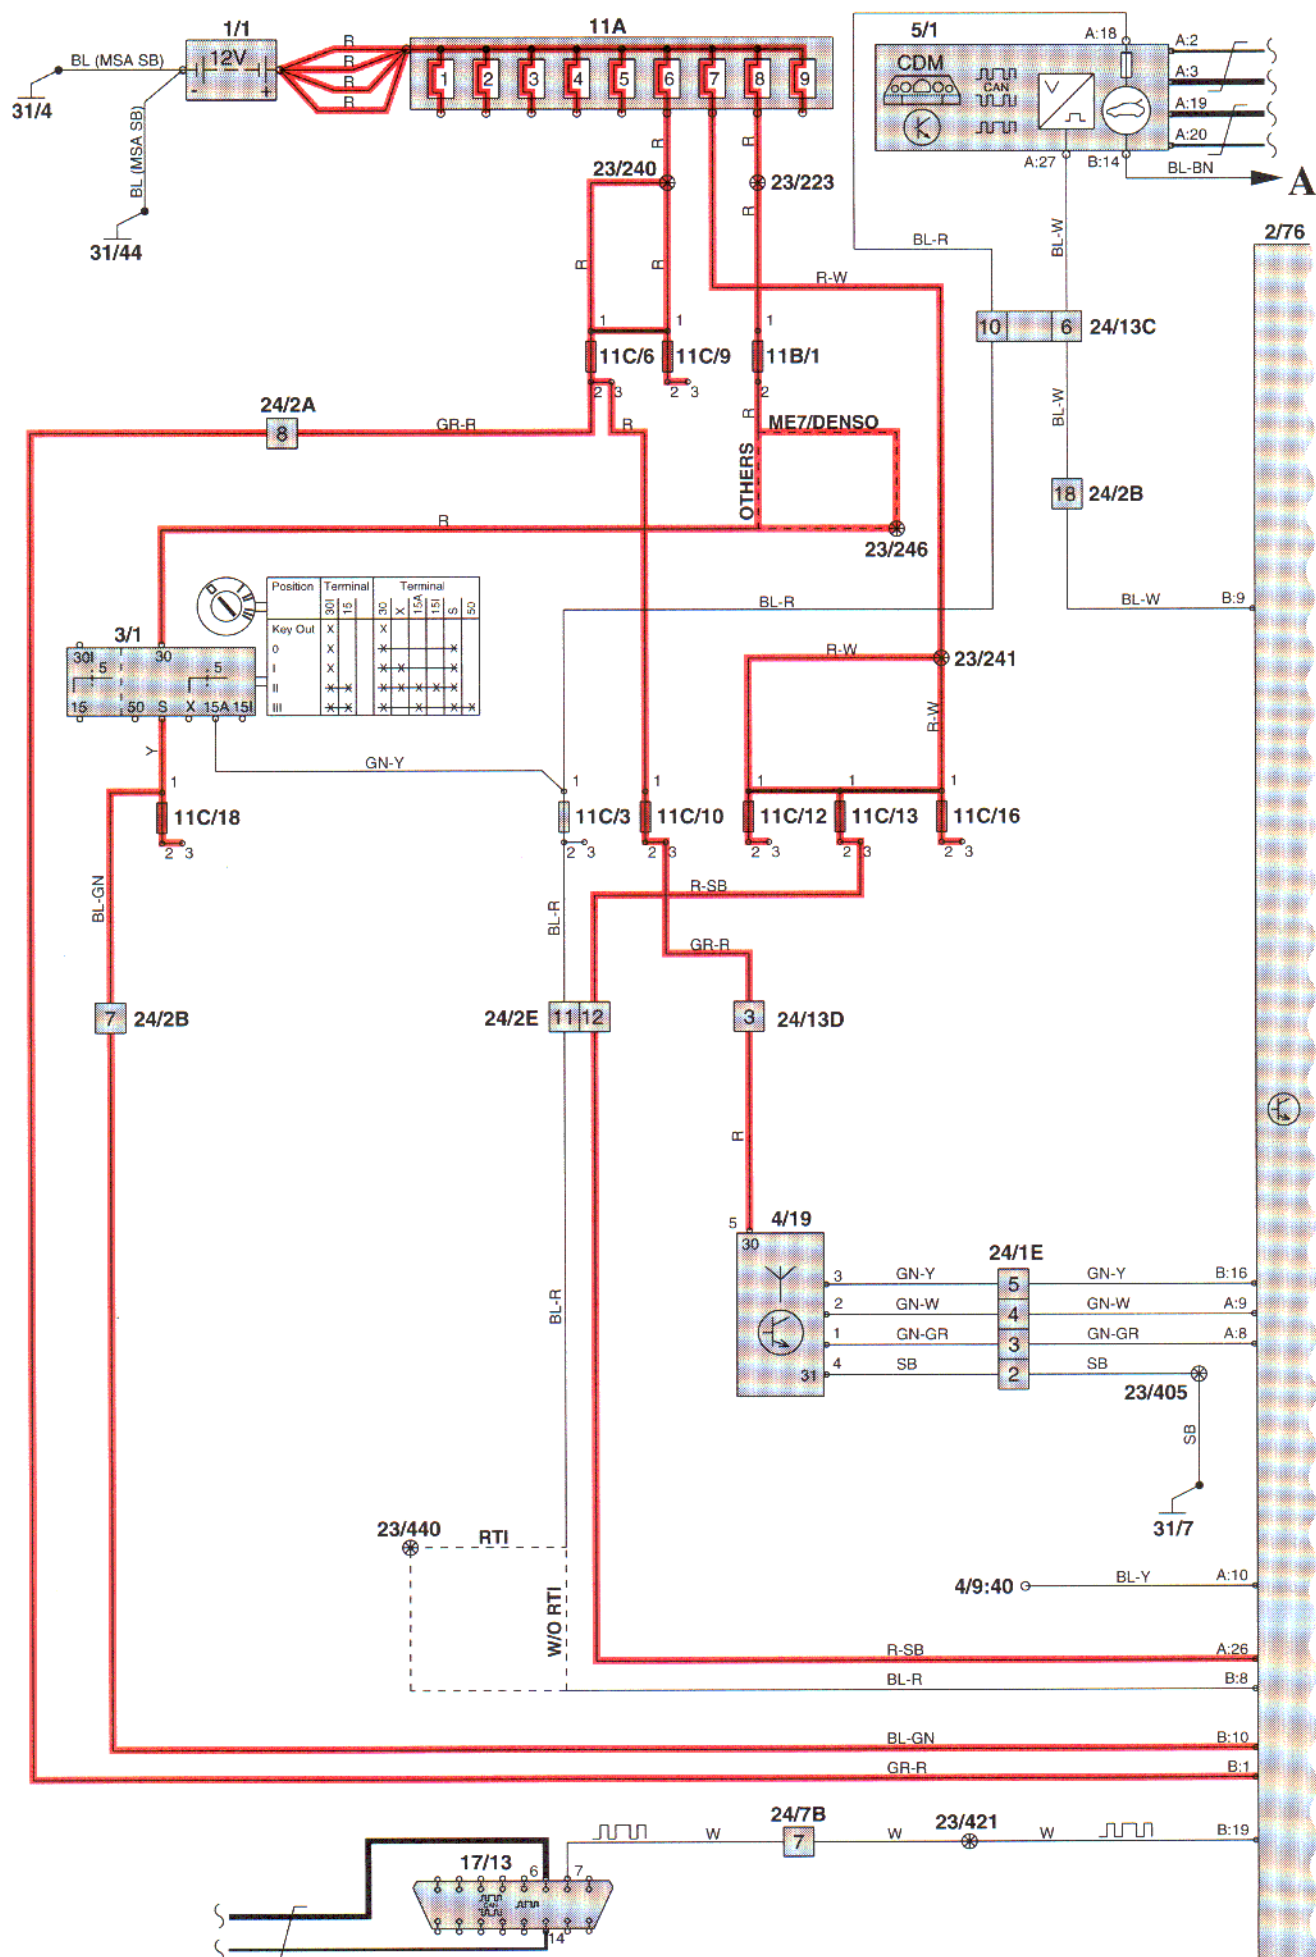

Central locking V70

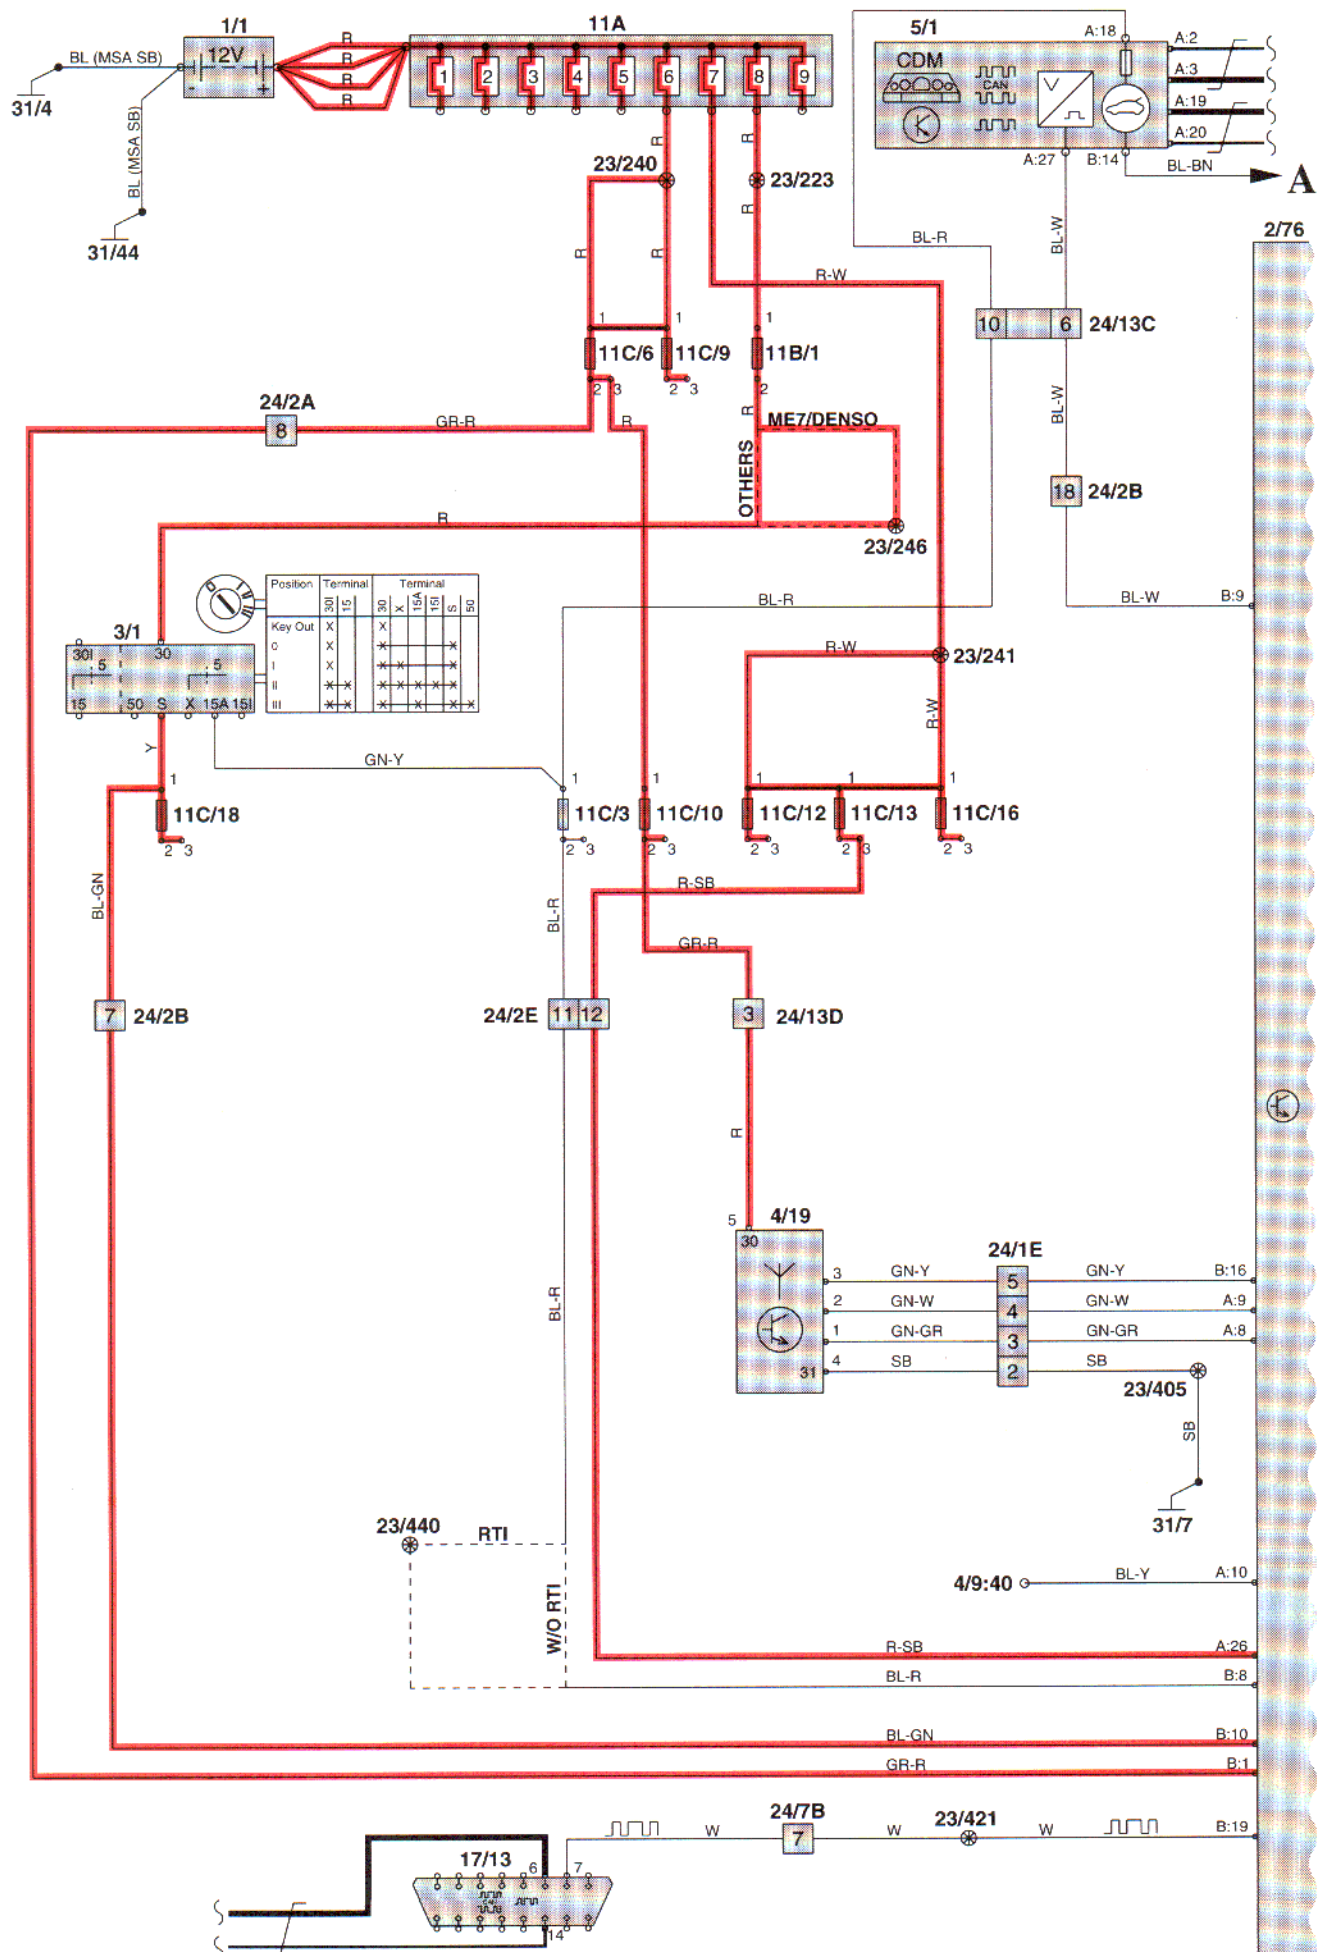


Soft top operation

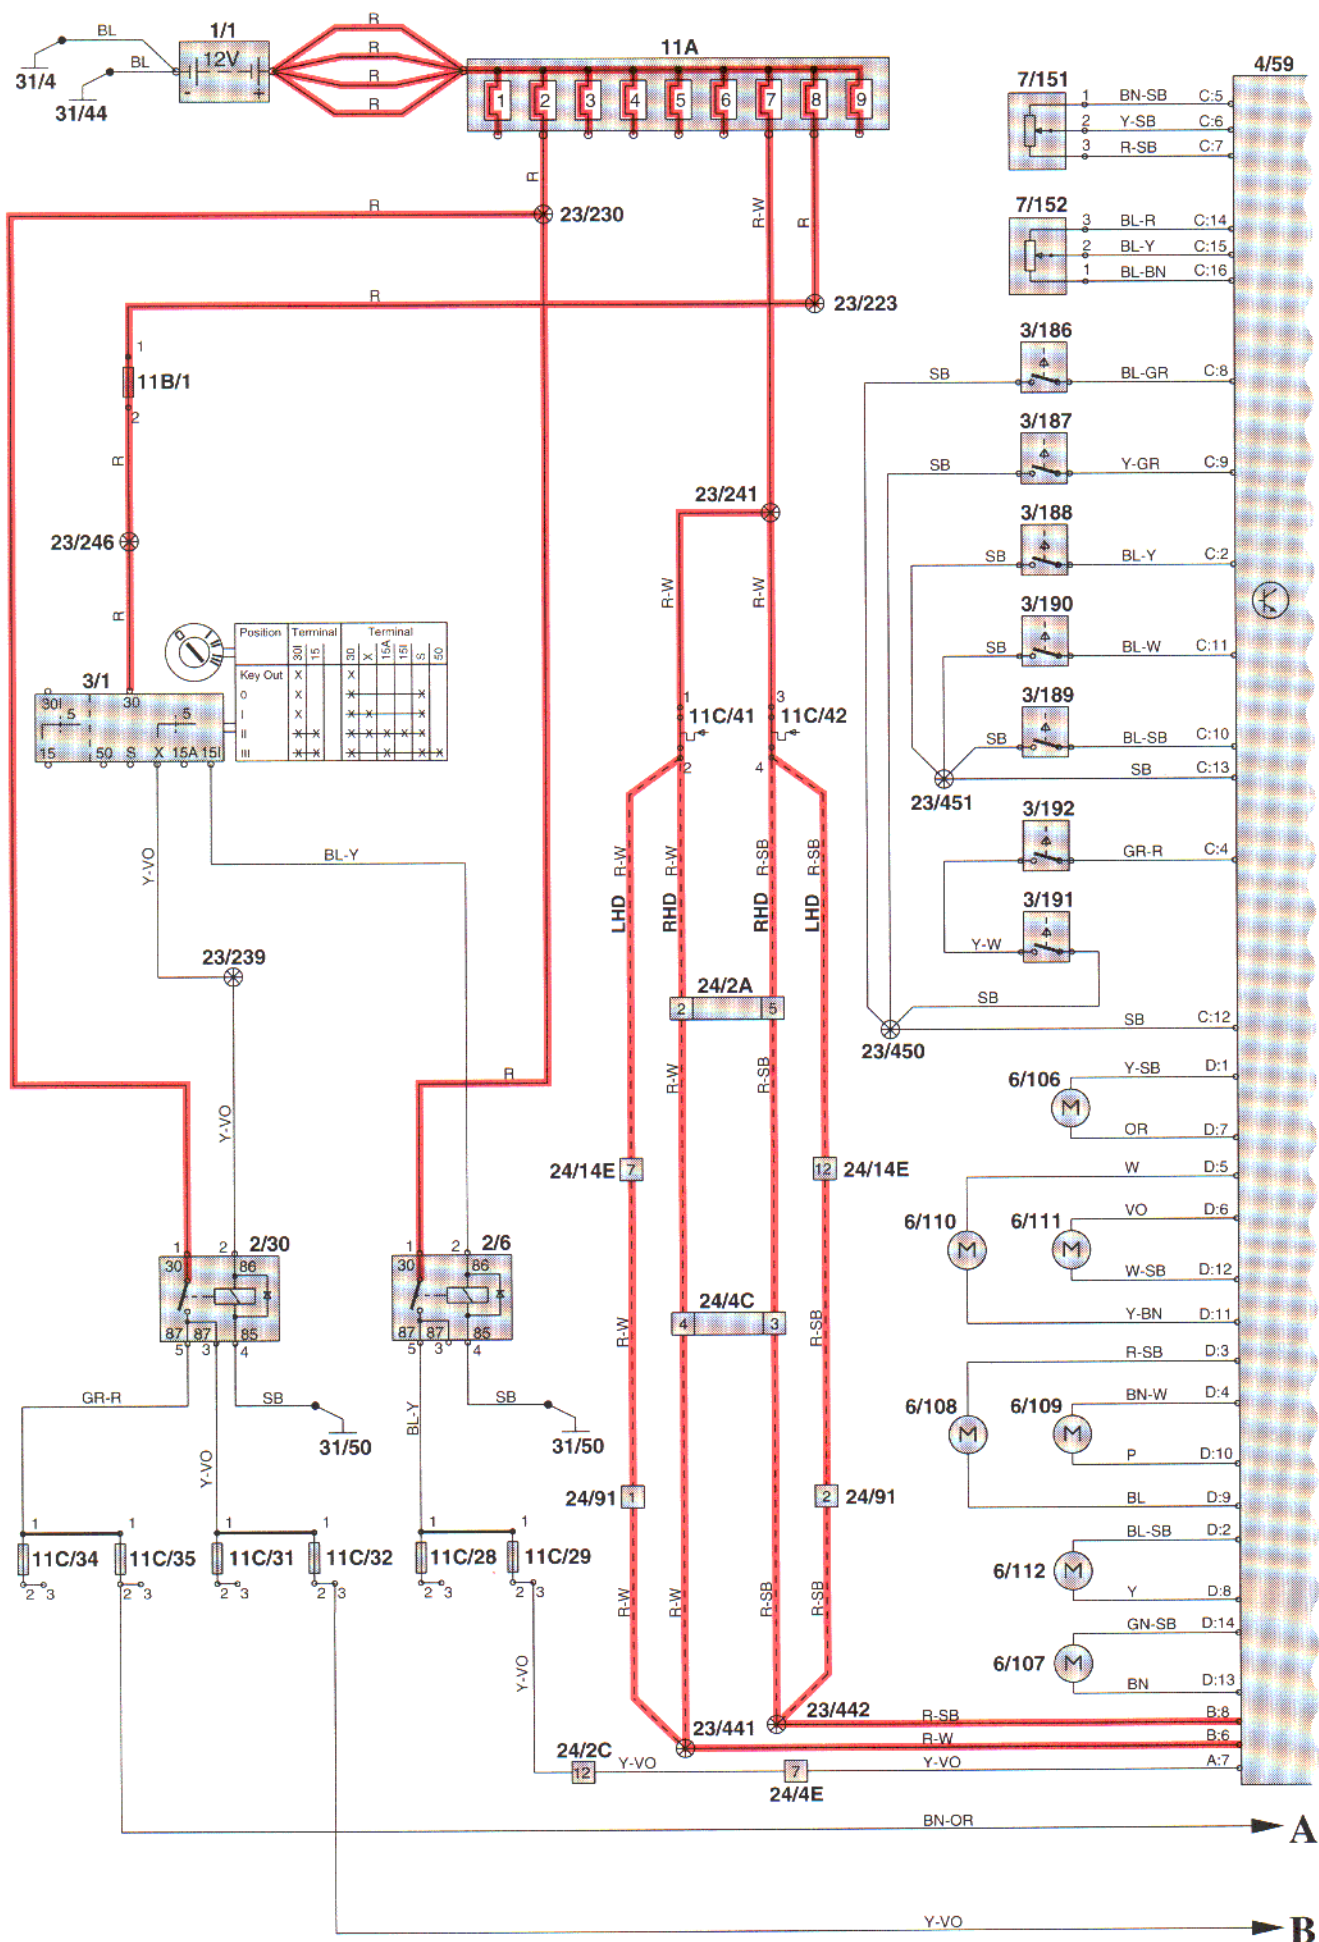


Power windows


C70 Convertible

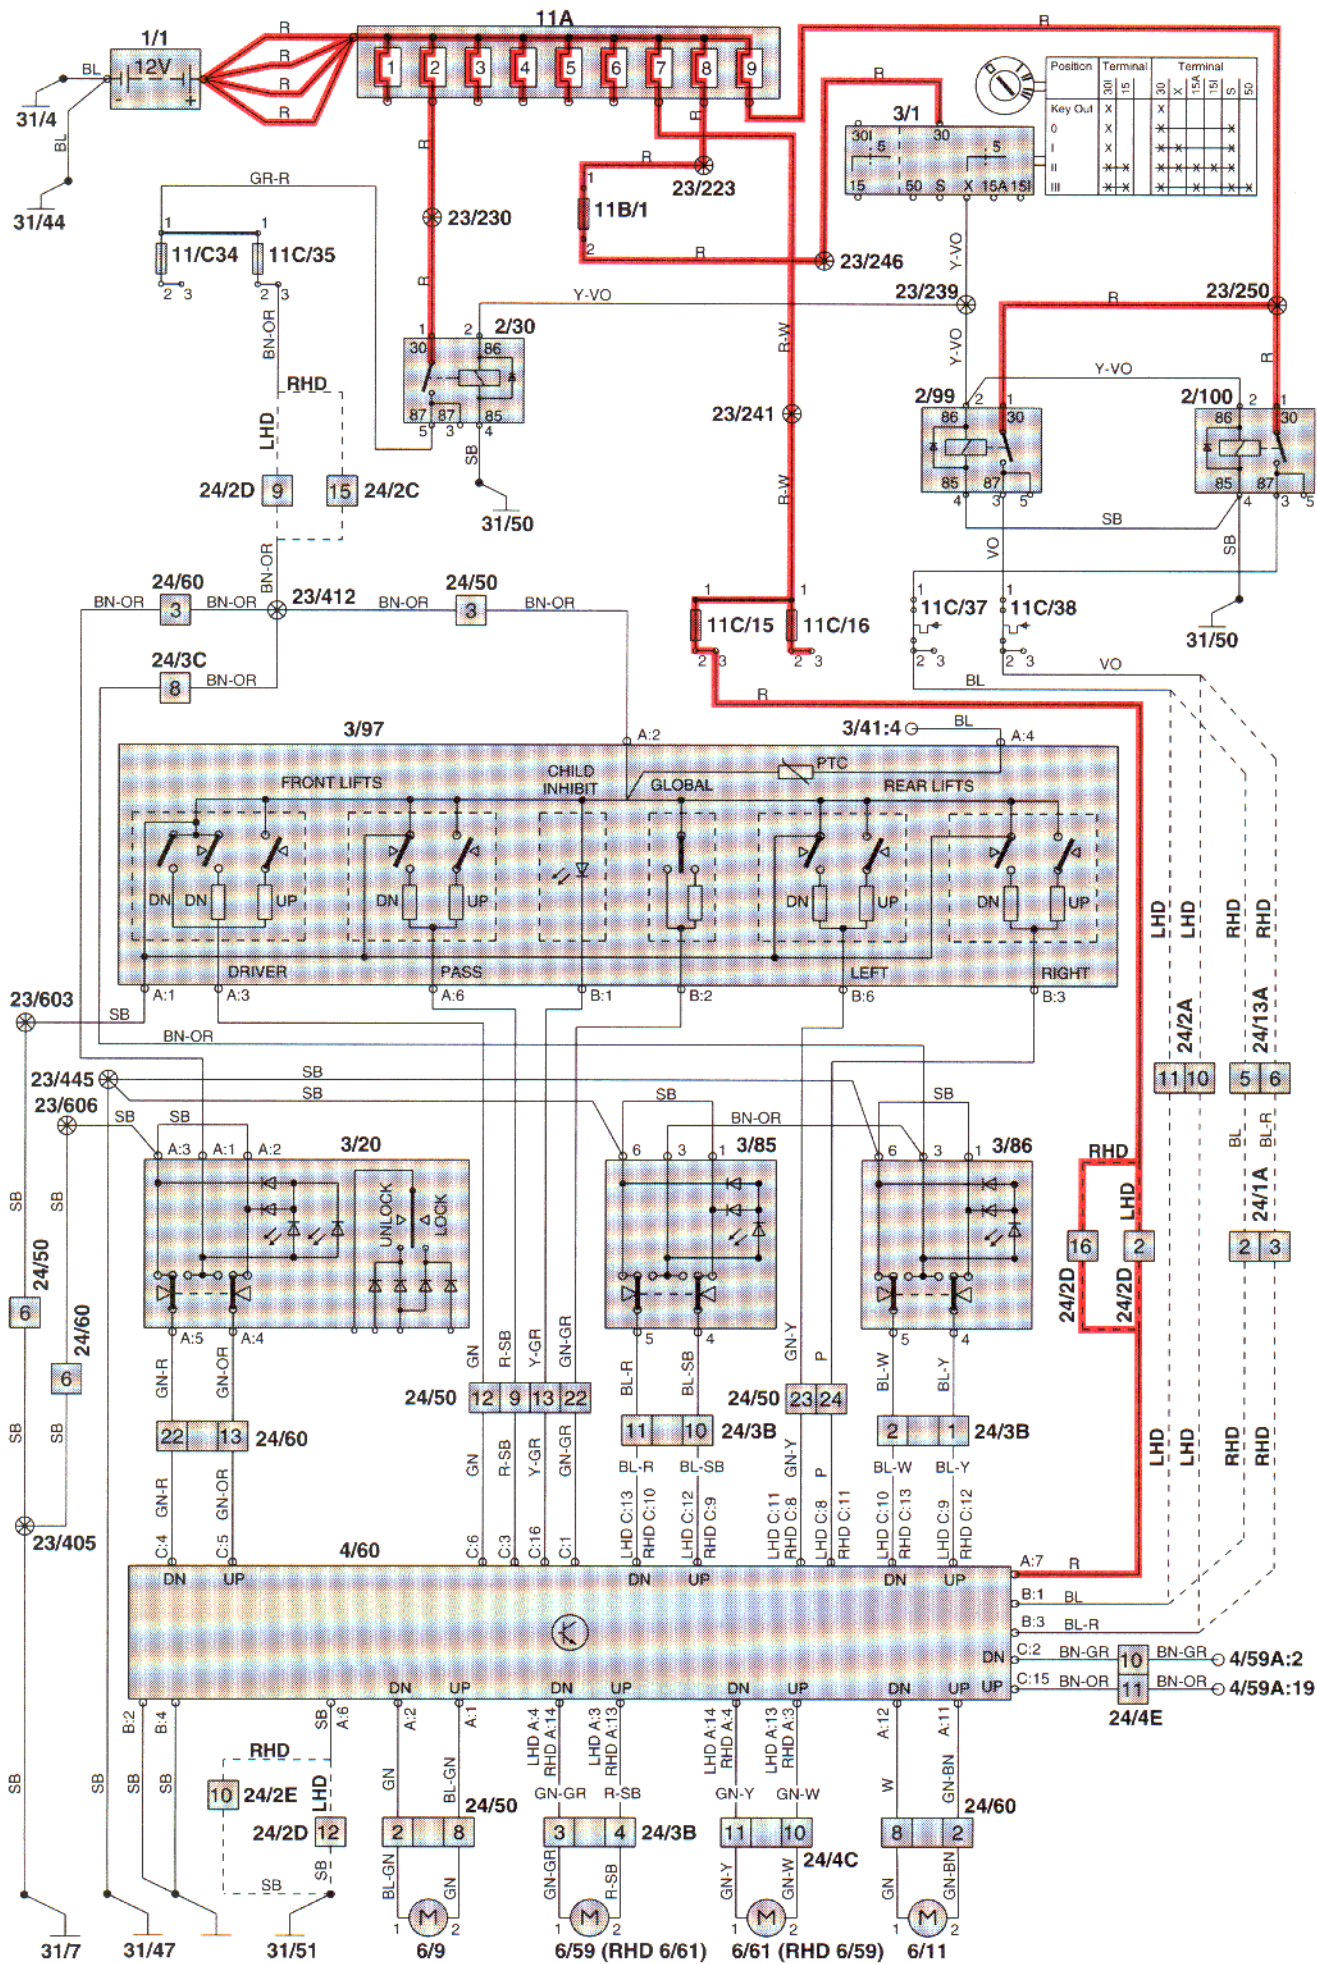


Power windows C70 coupé

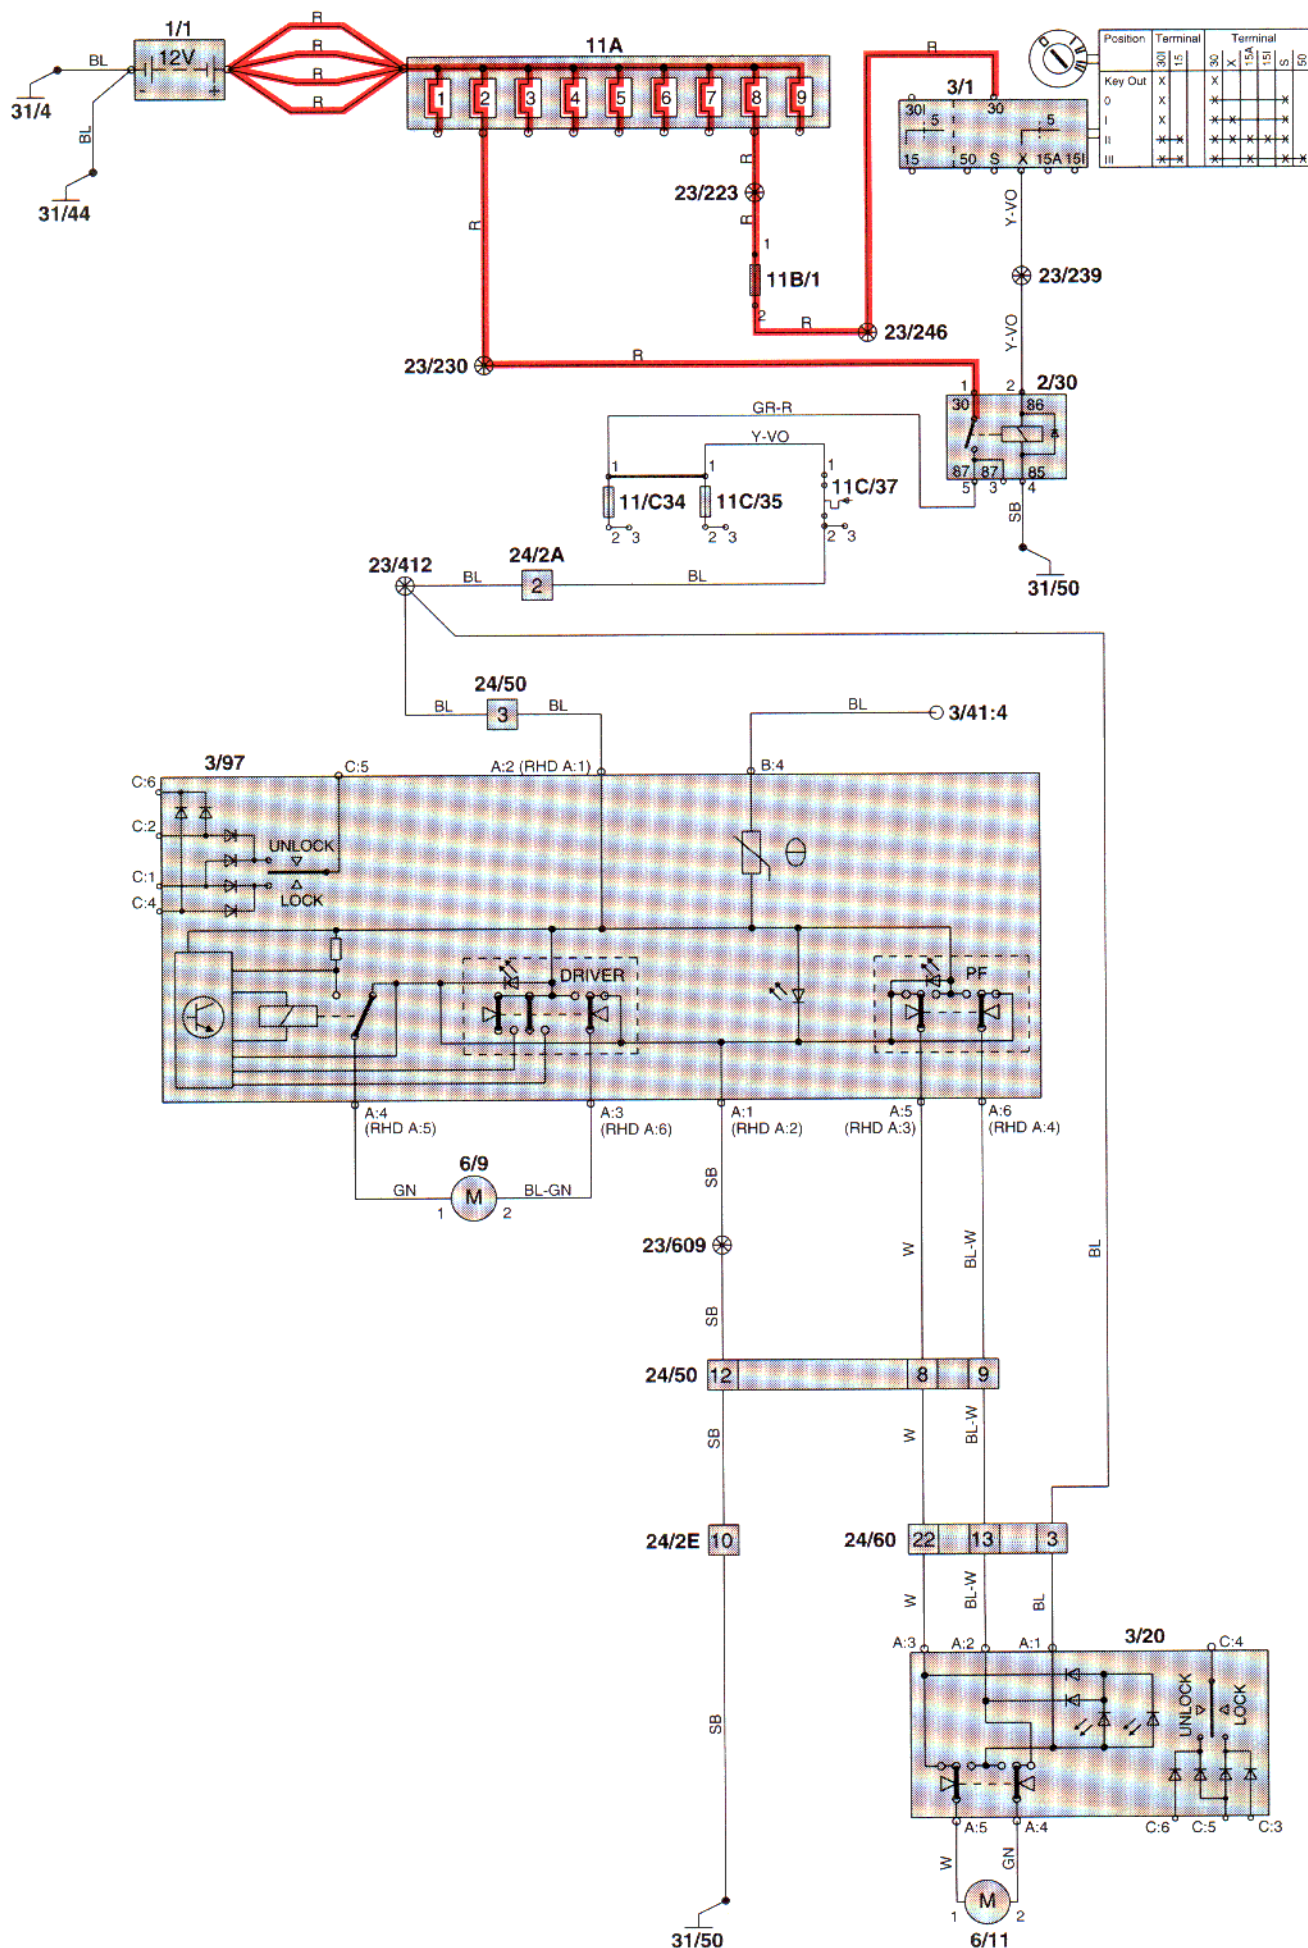


Power windows S70, V70

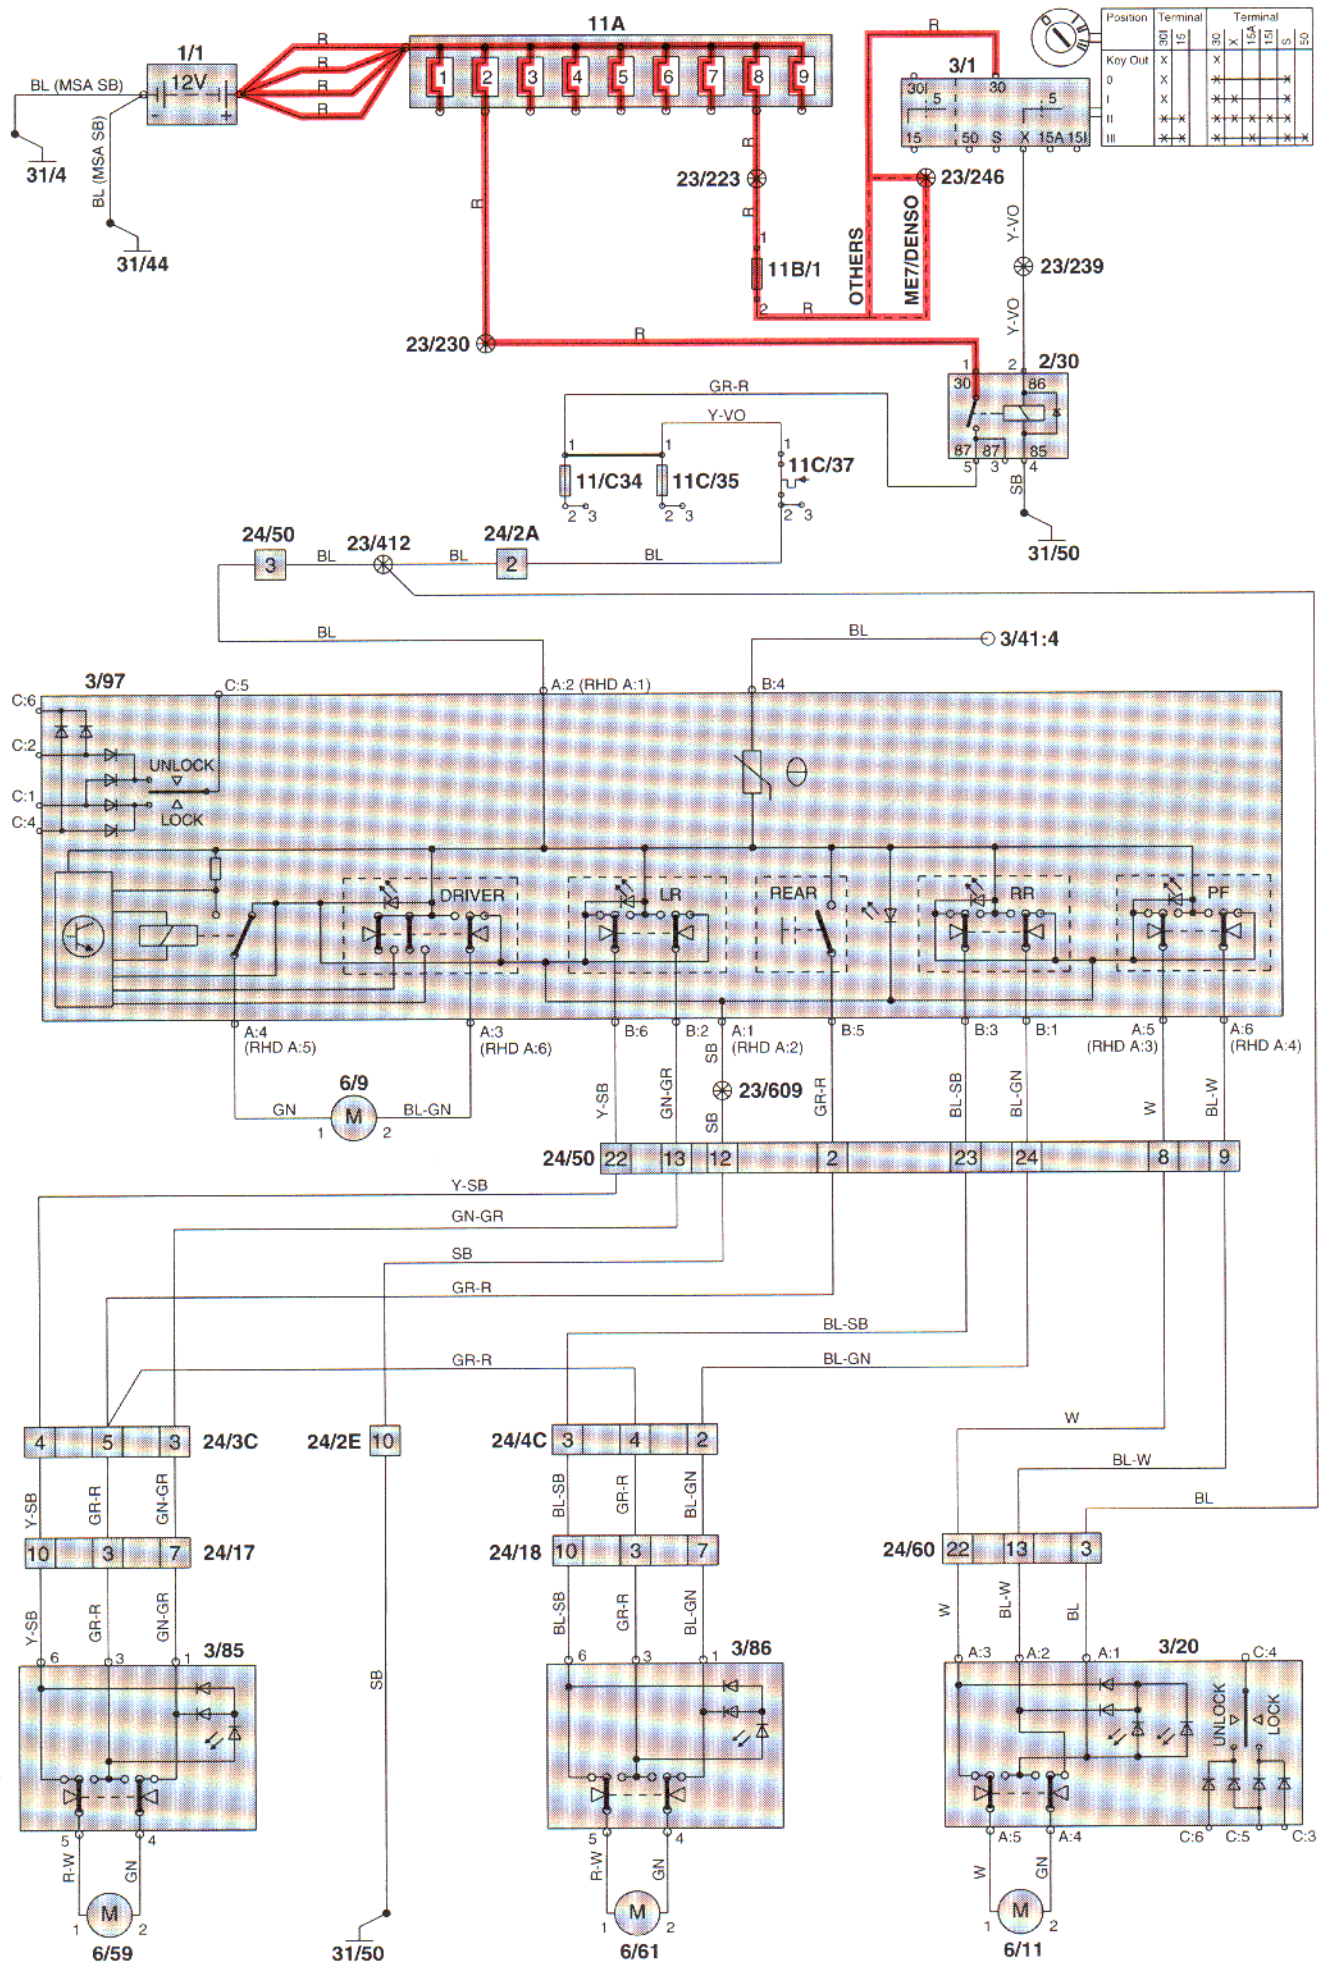


Power sunroof

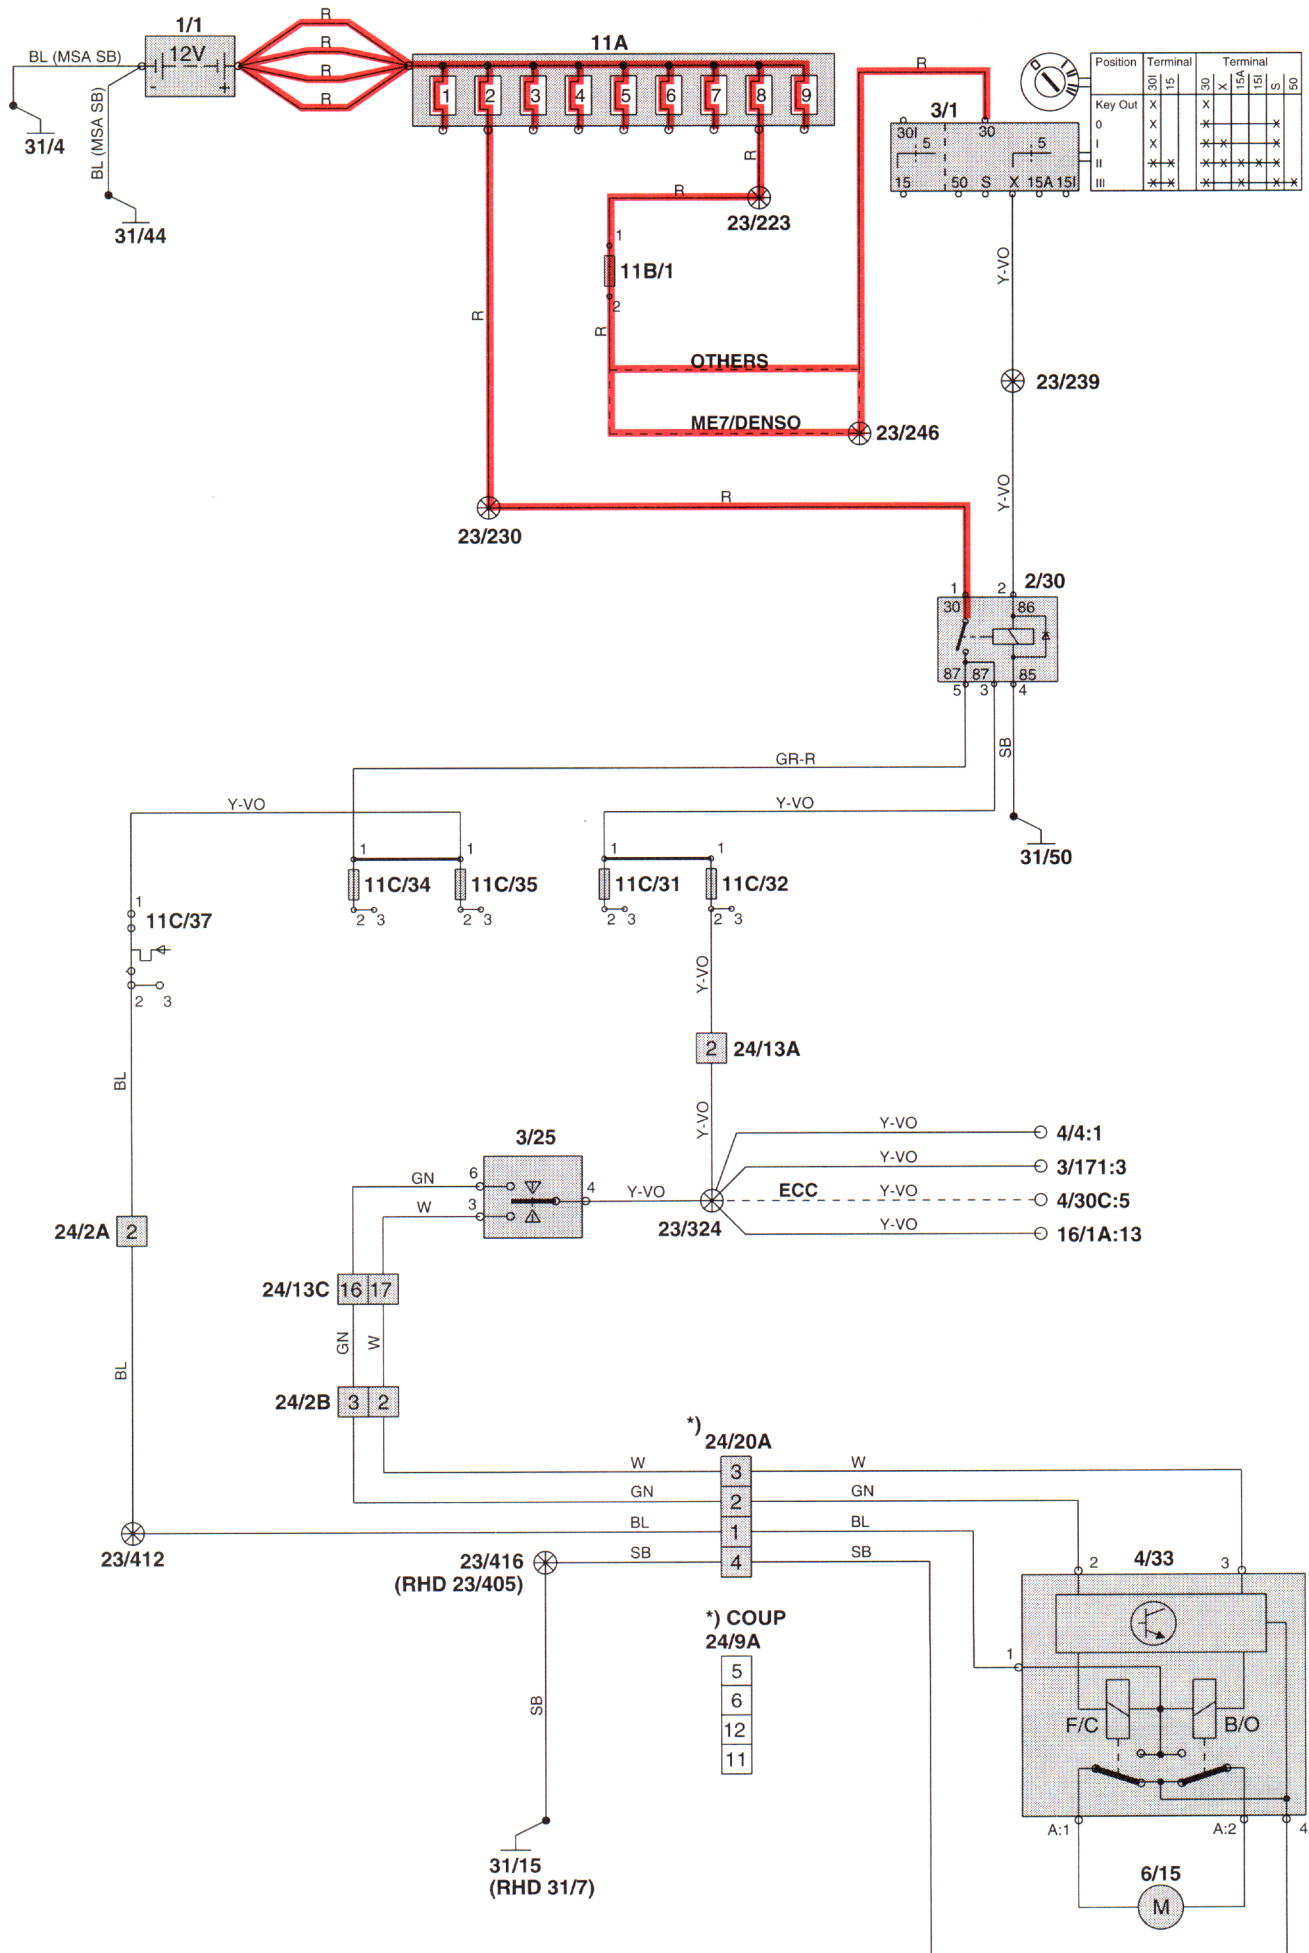


Heated rear window and heated door mirrors C70 Convertible

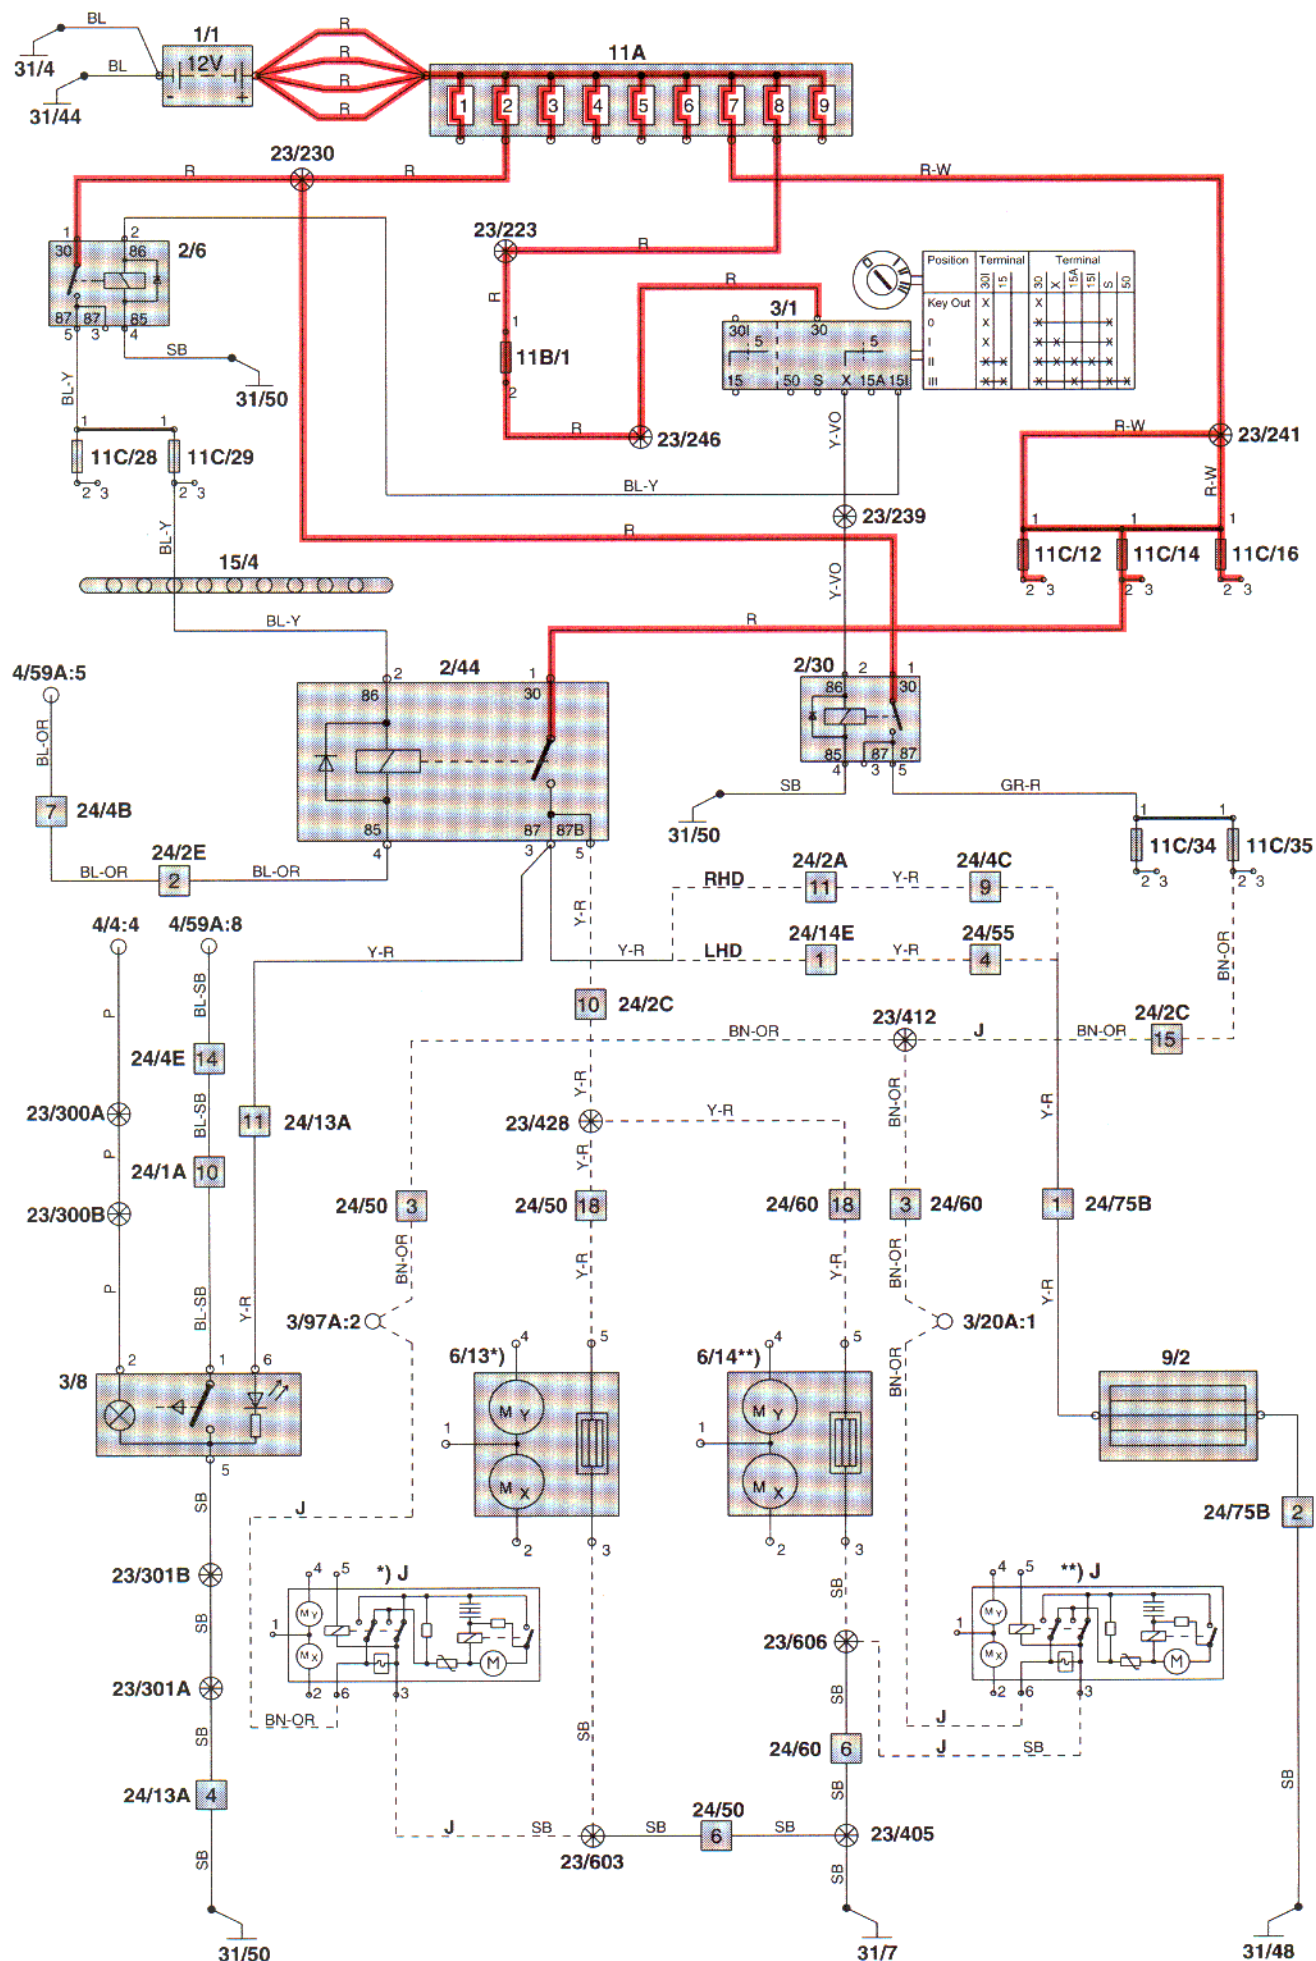


Heated rear window and heated door mirrors
C70 coupé, S70, V70

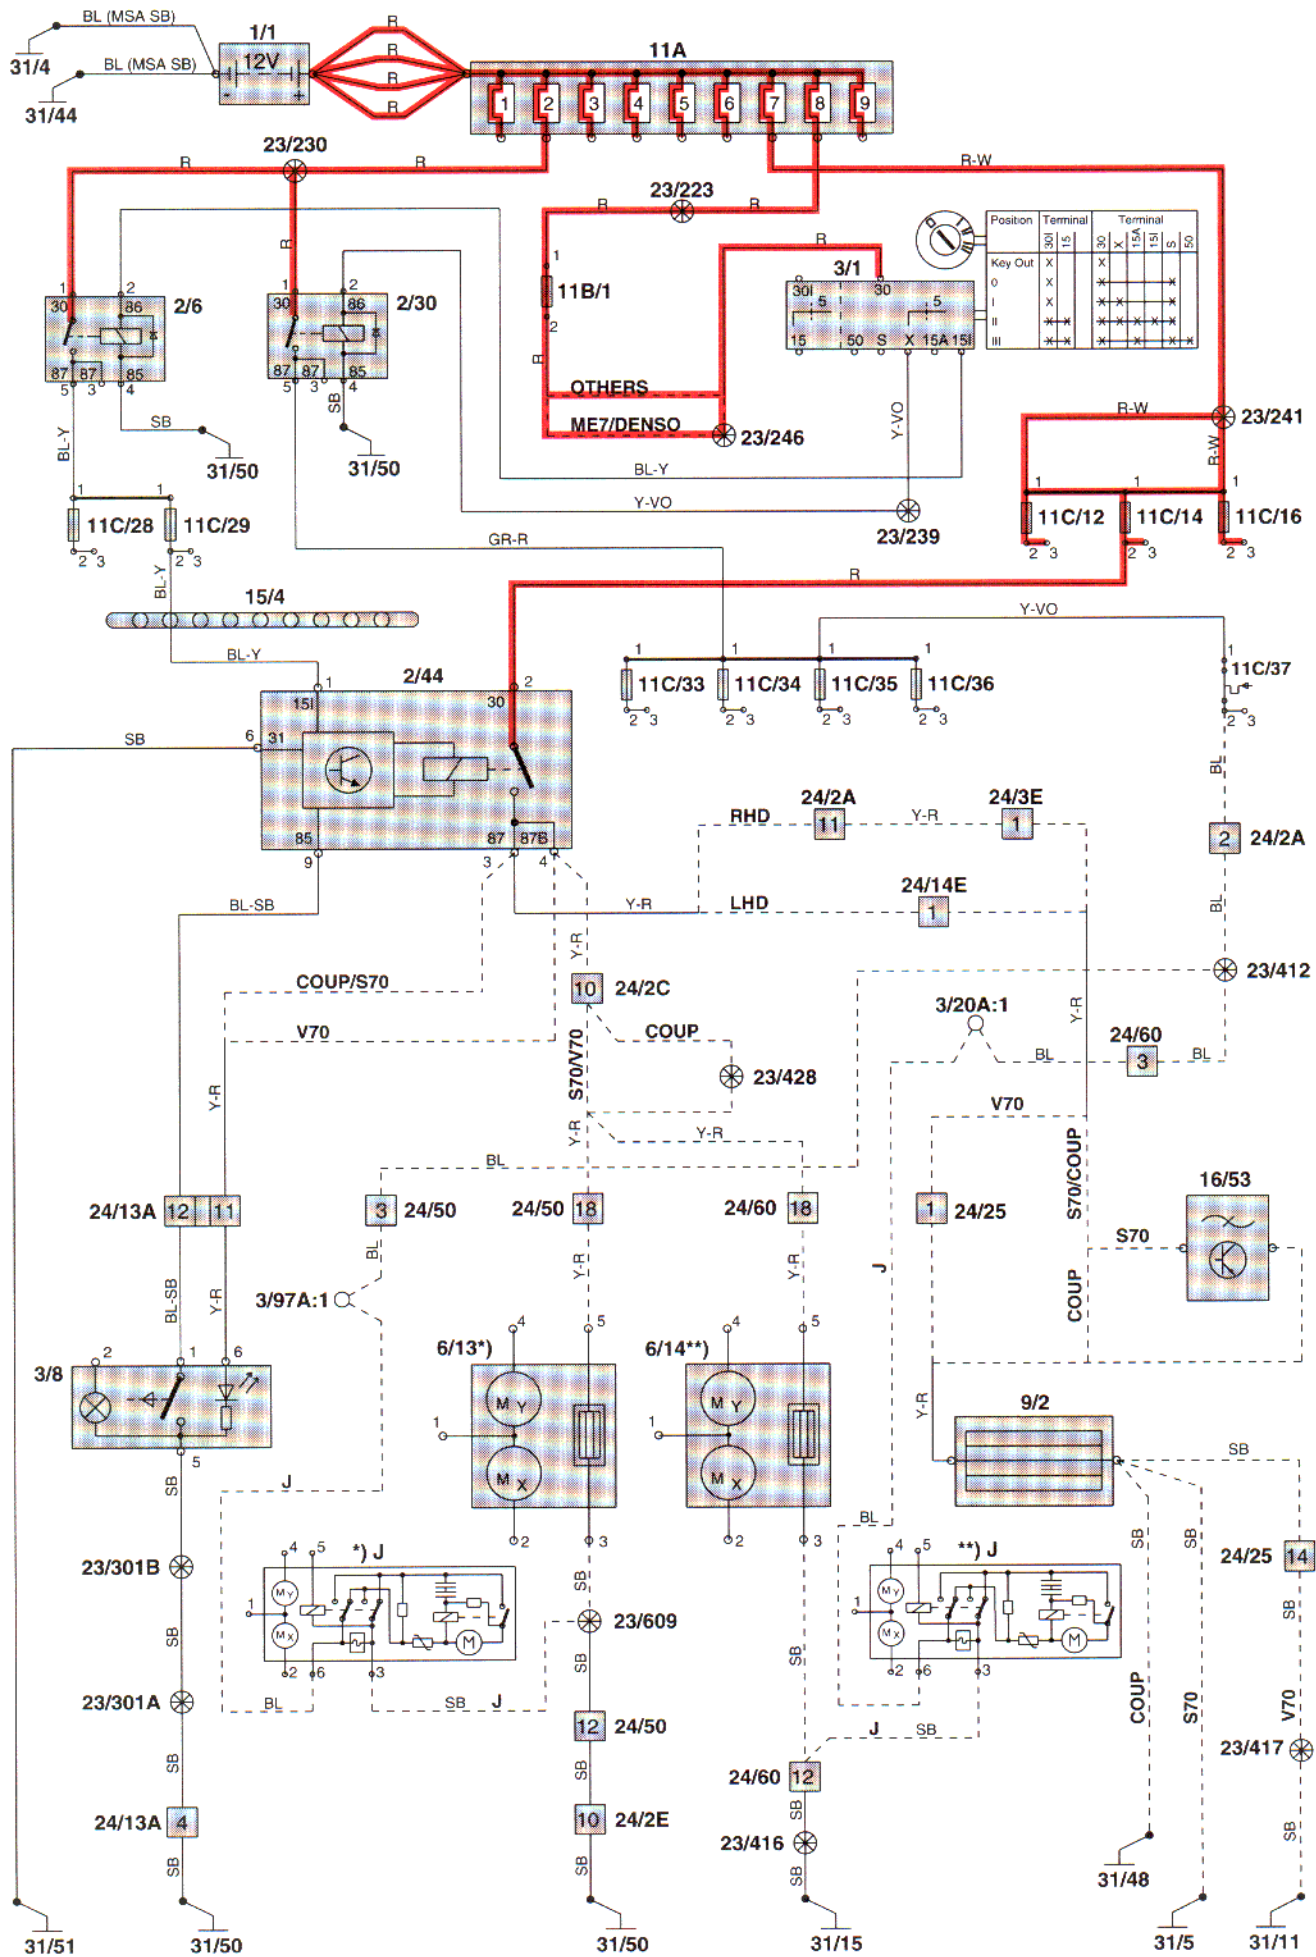


Power door mirrors

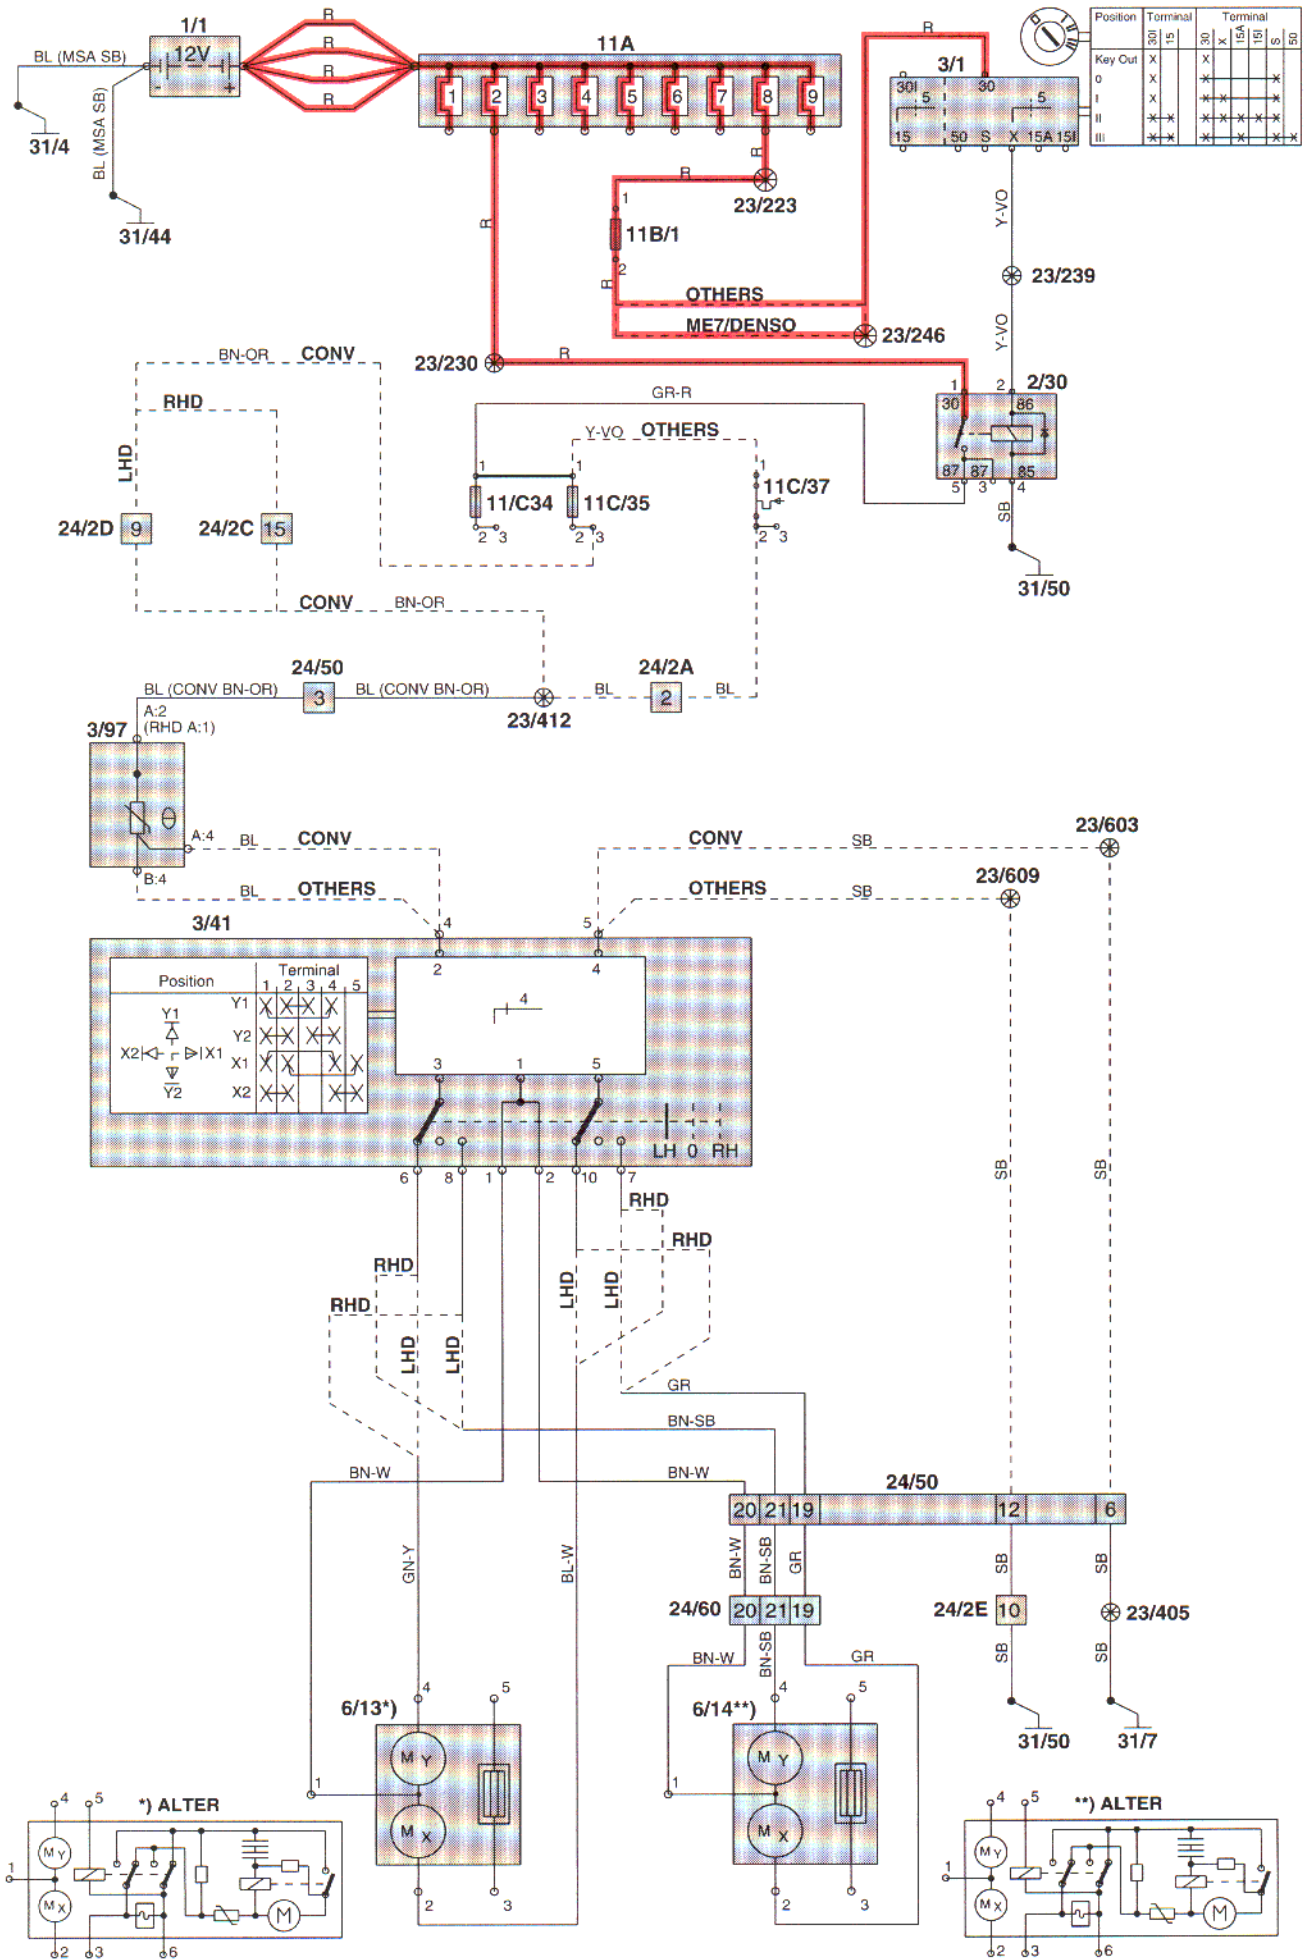


Electrical retracting door mirrors C70 Convertible

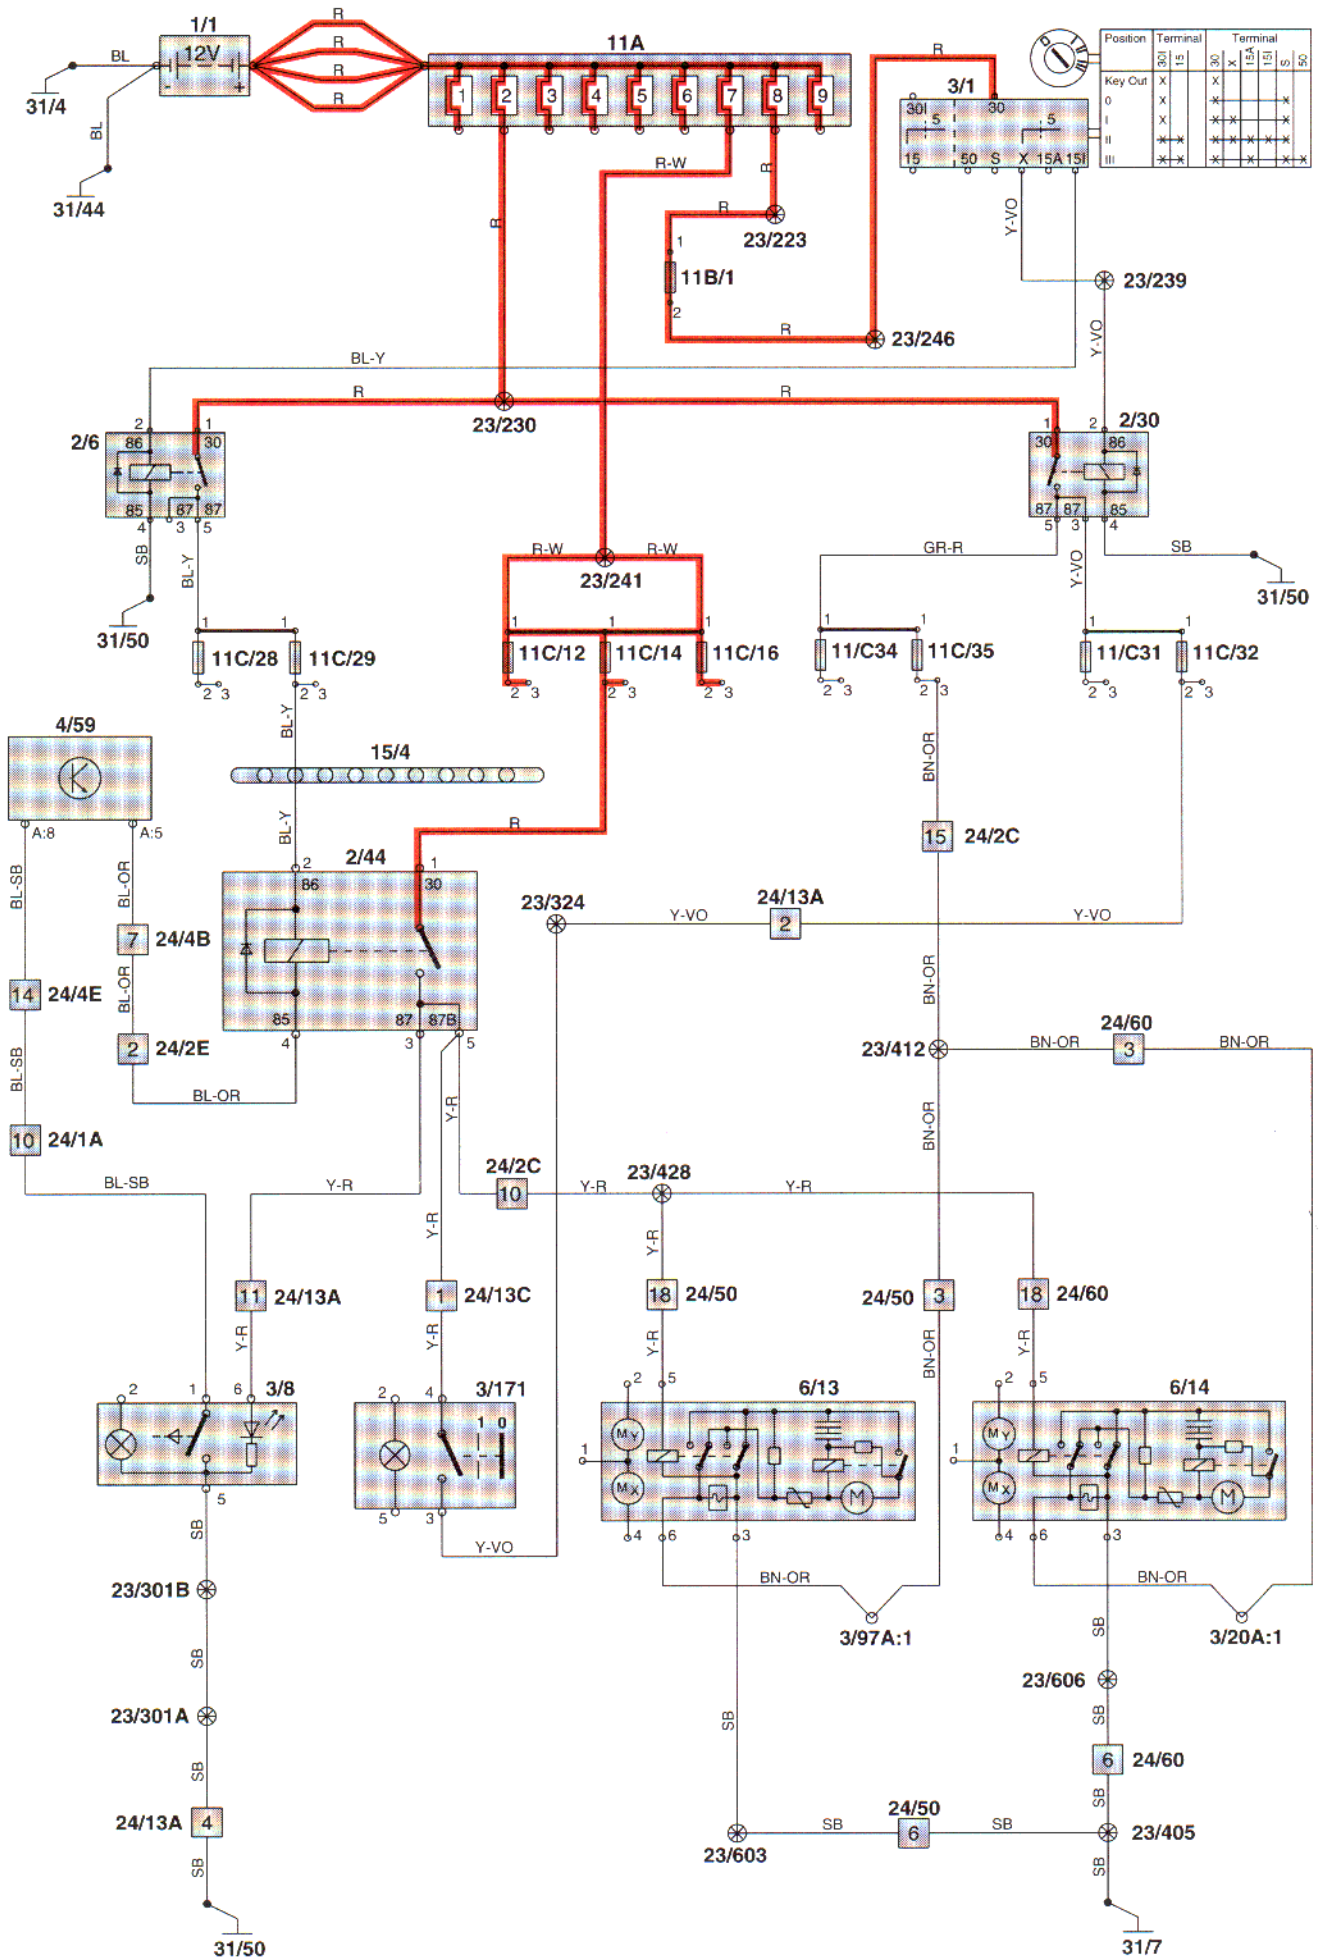


Electrical retracting door mirrors C70 coupé, S70, V70

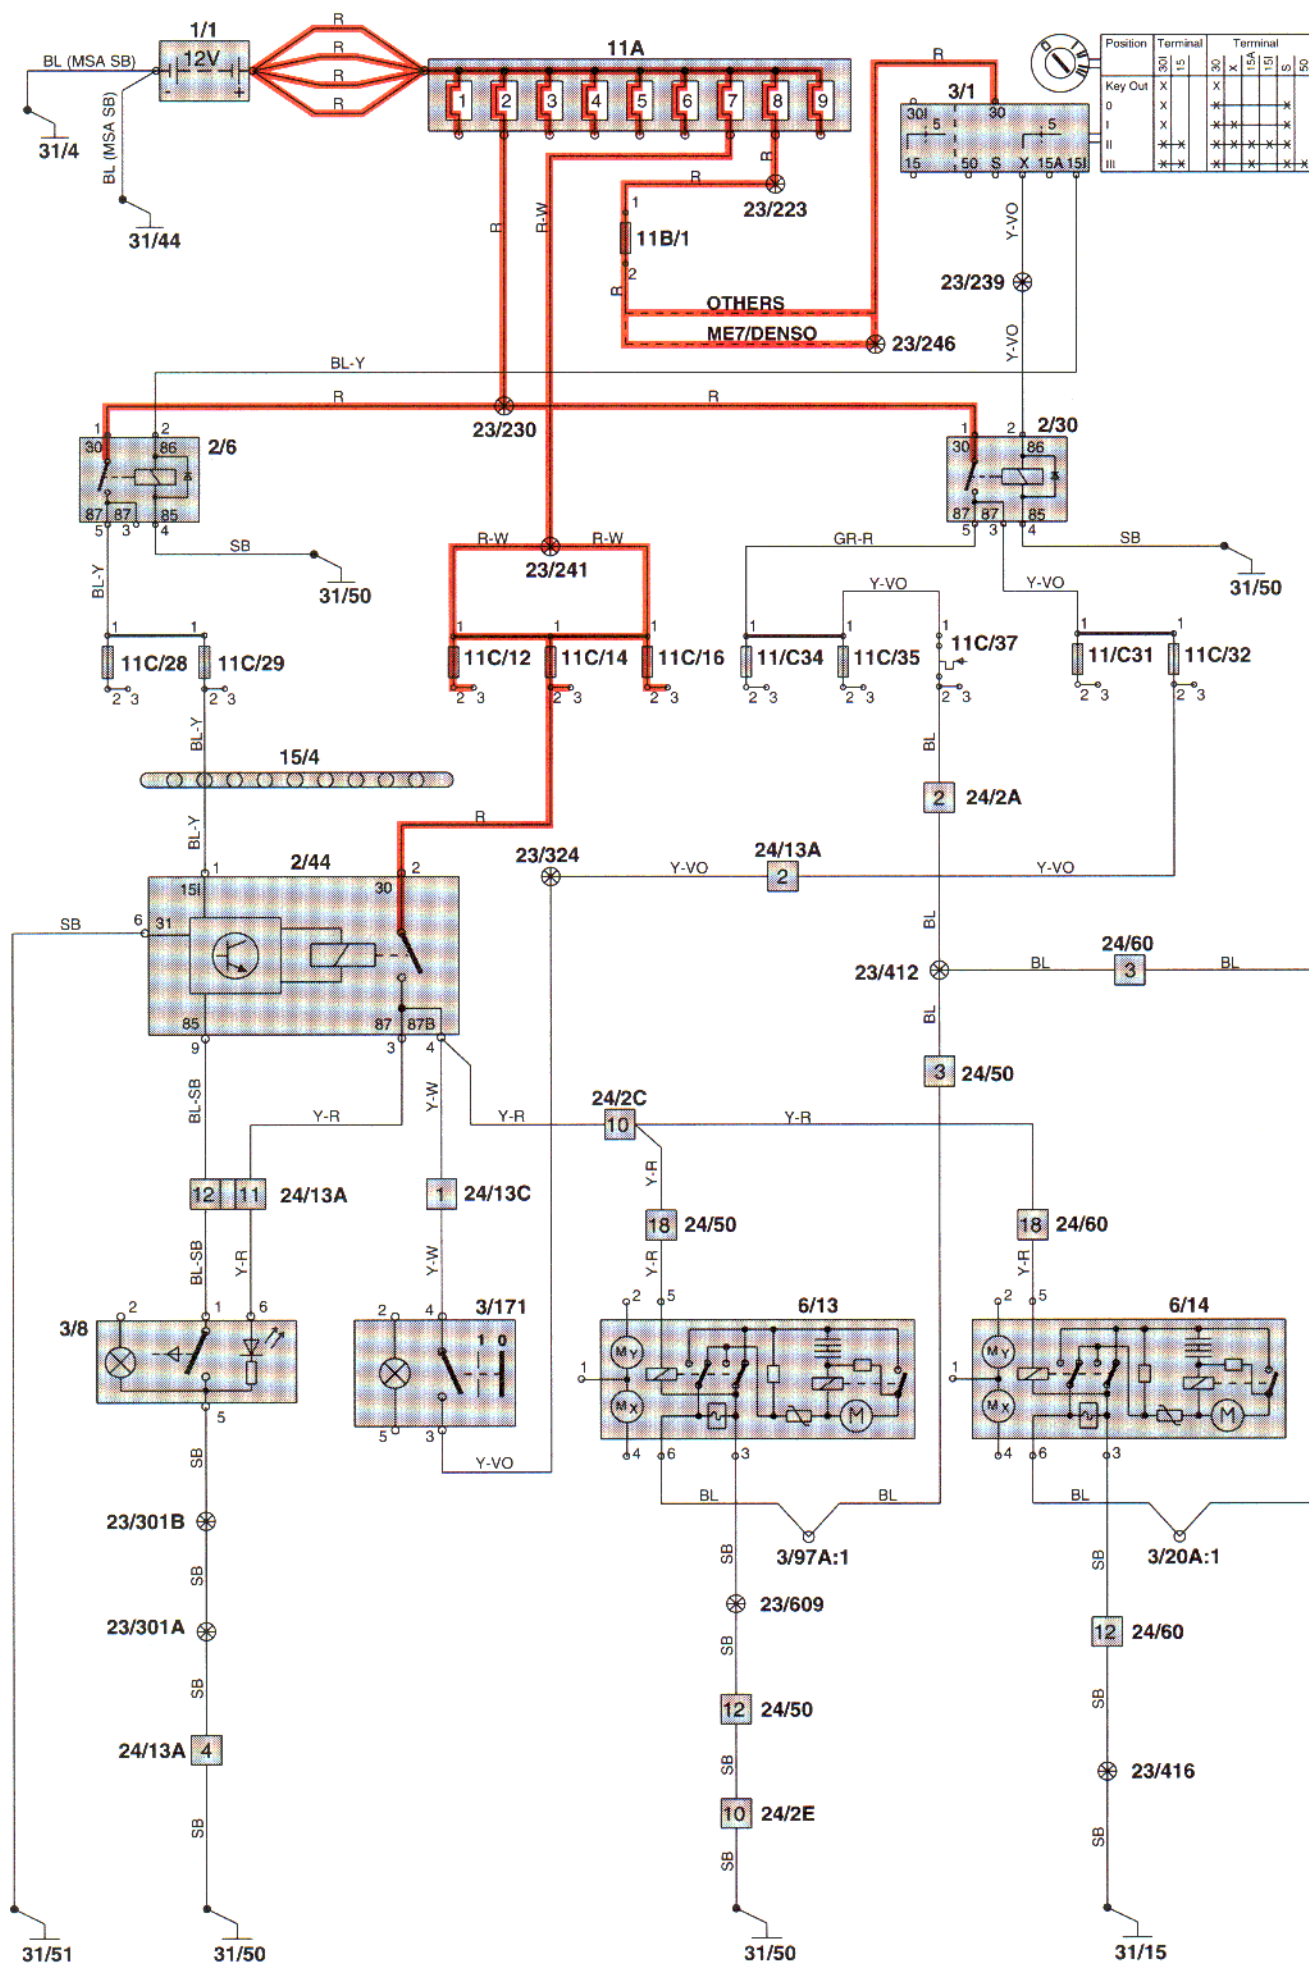


Electrically heated seats

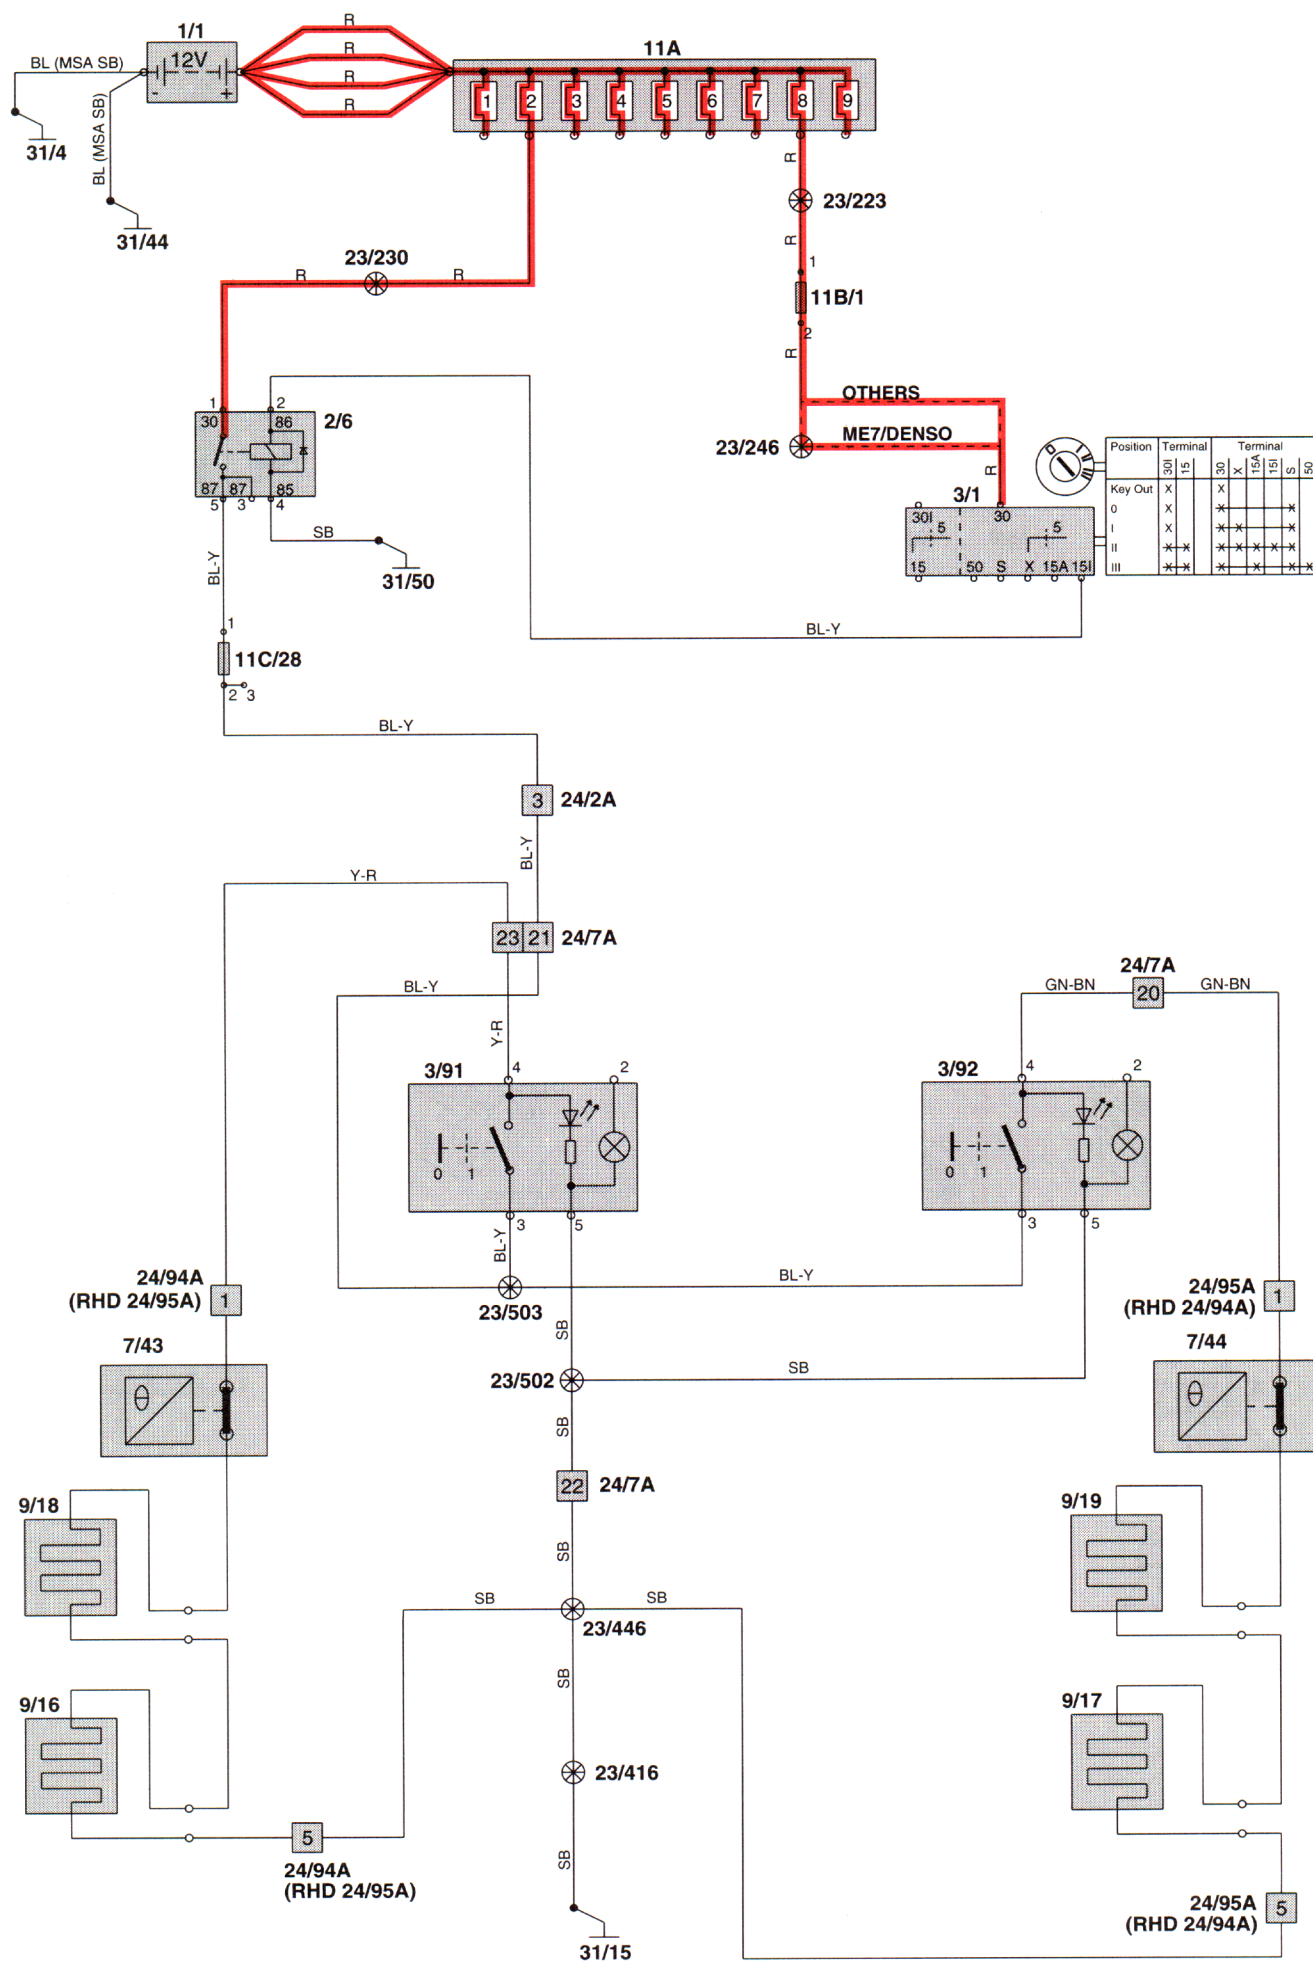


Heated rear seat

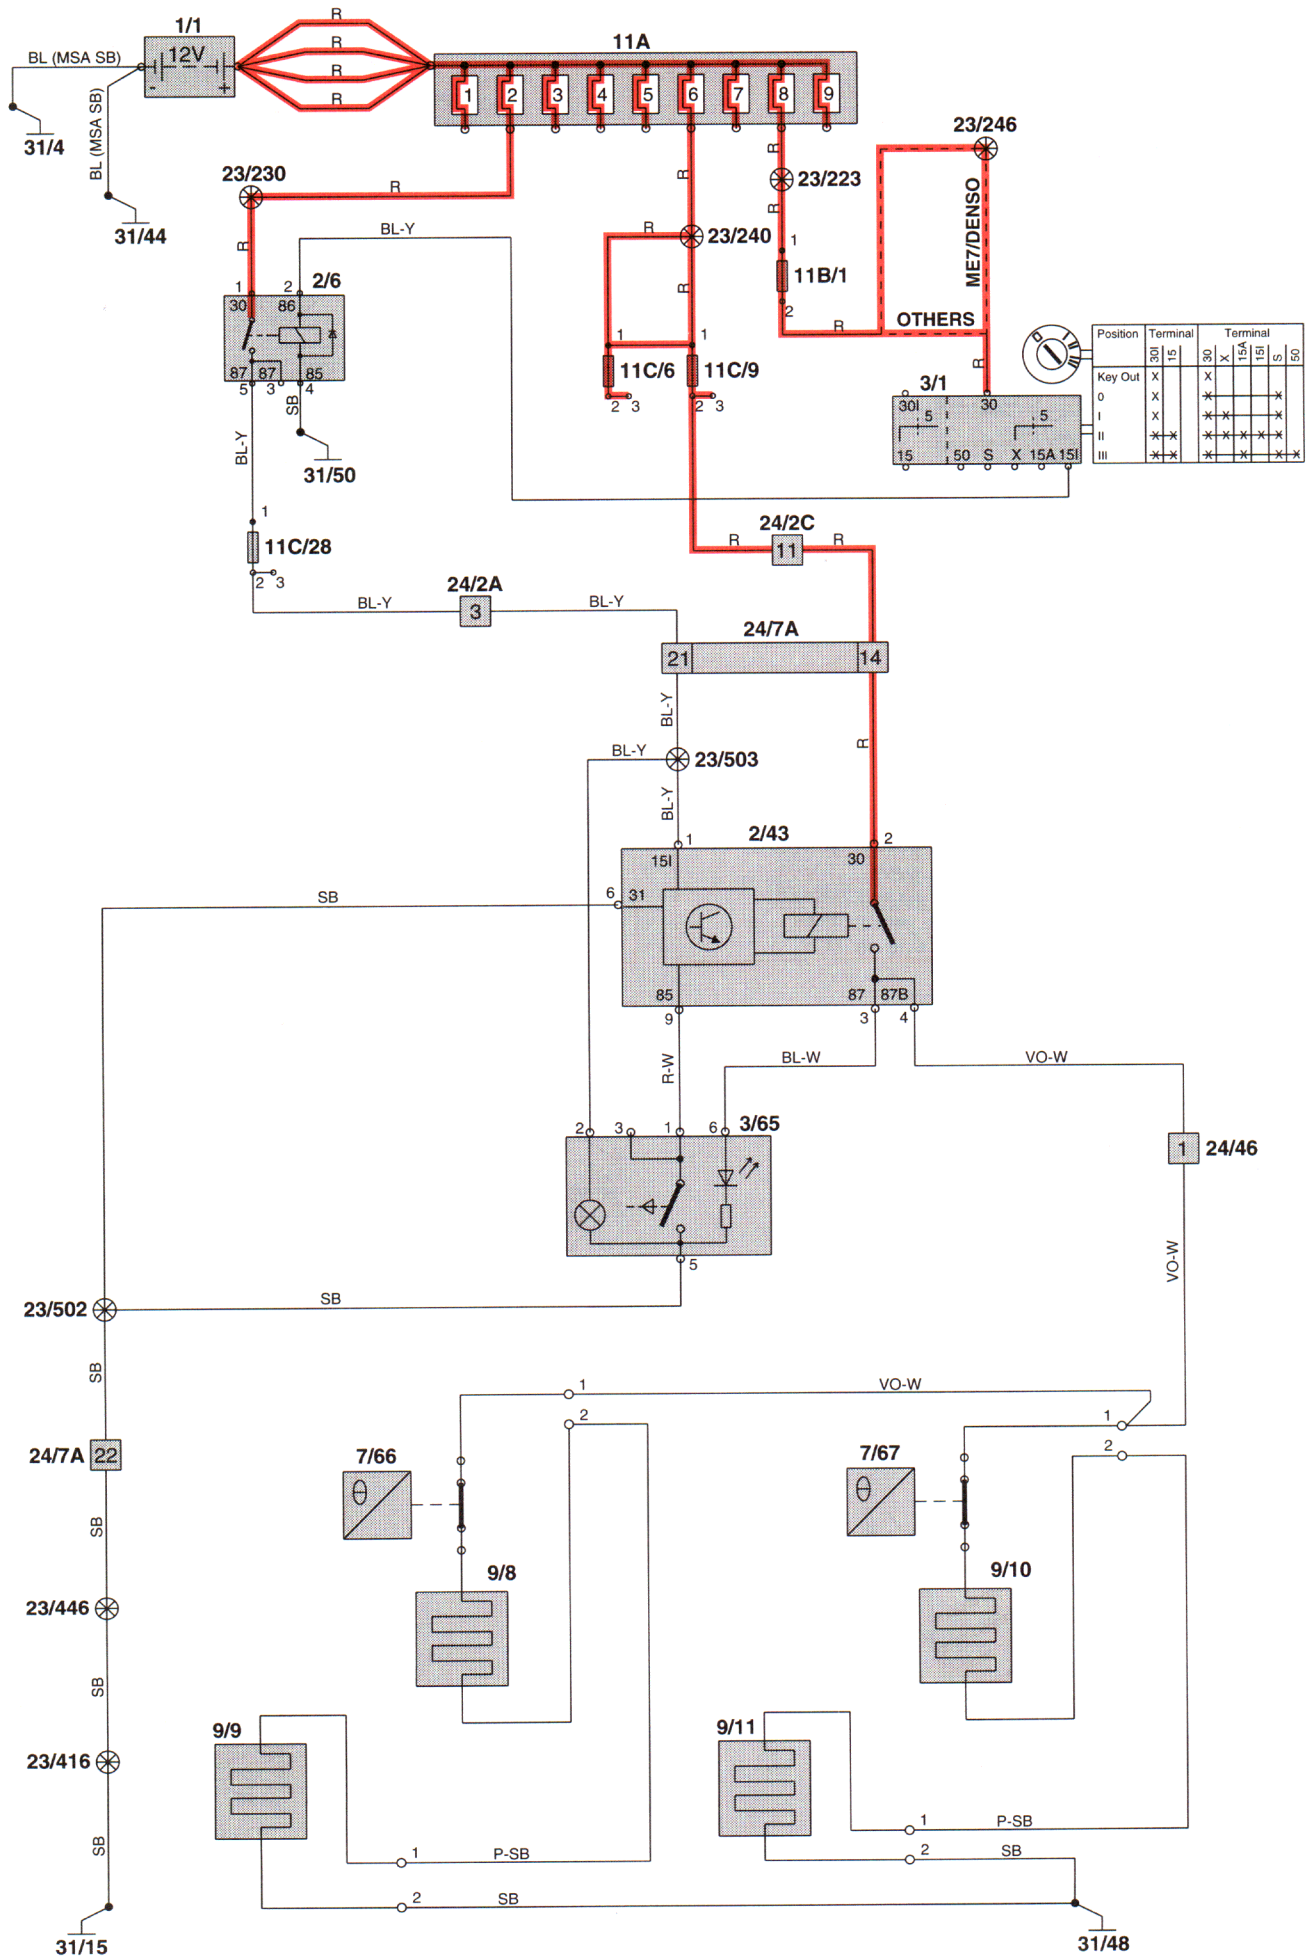


Power seats without memory

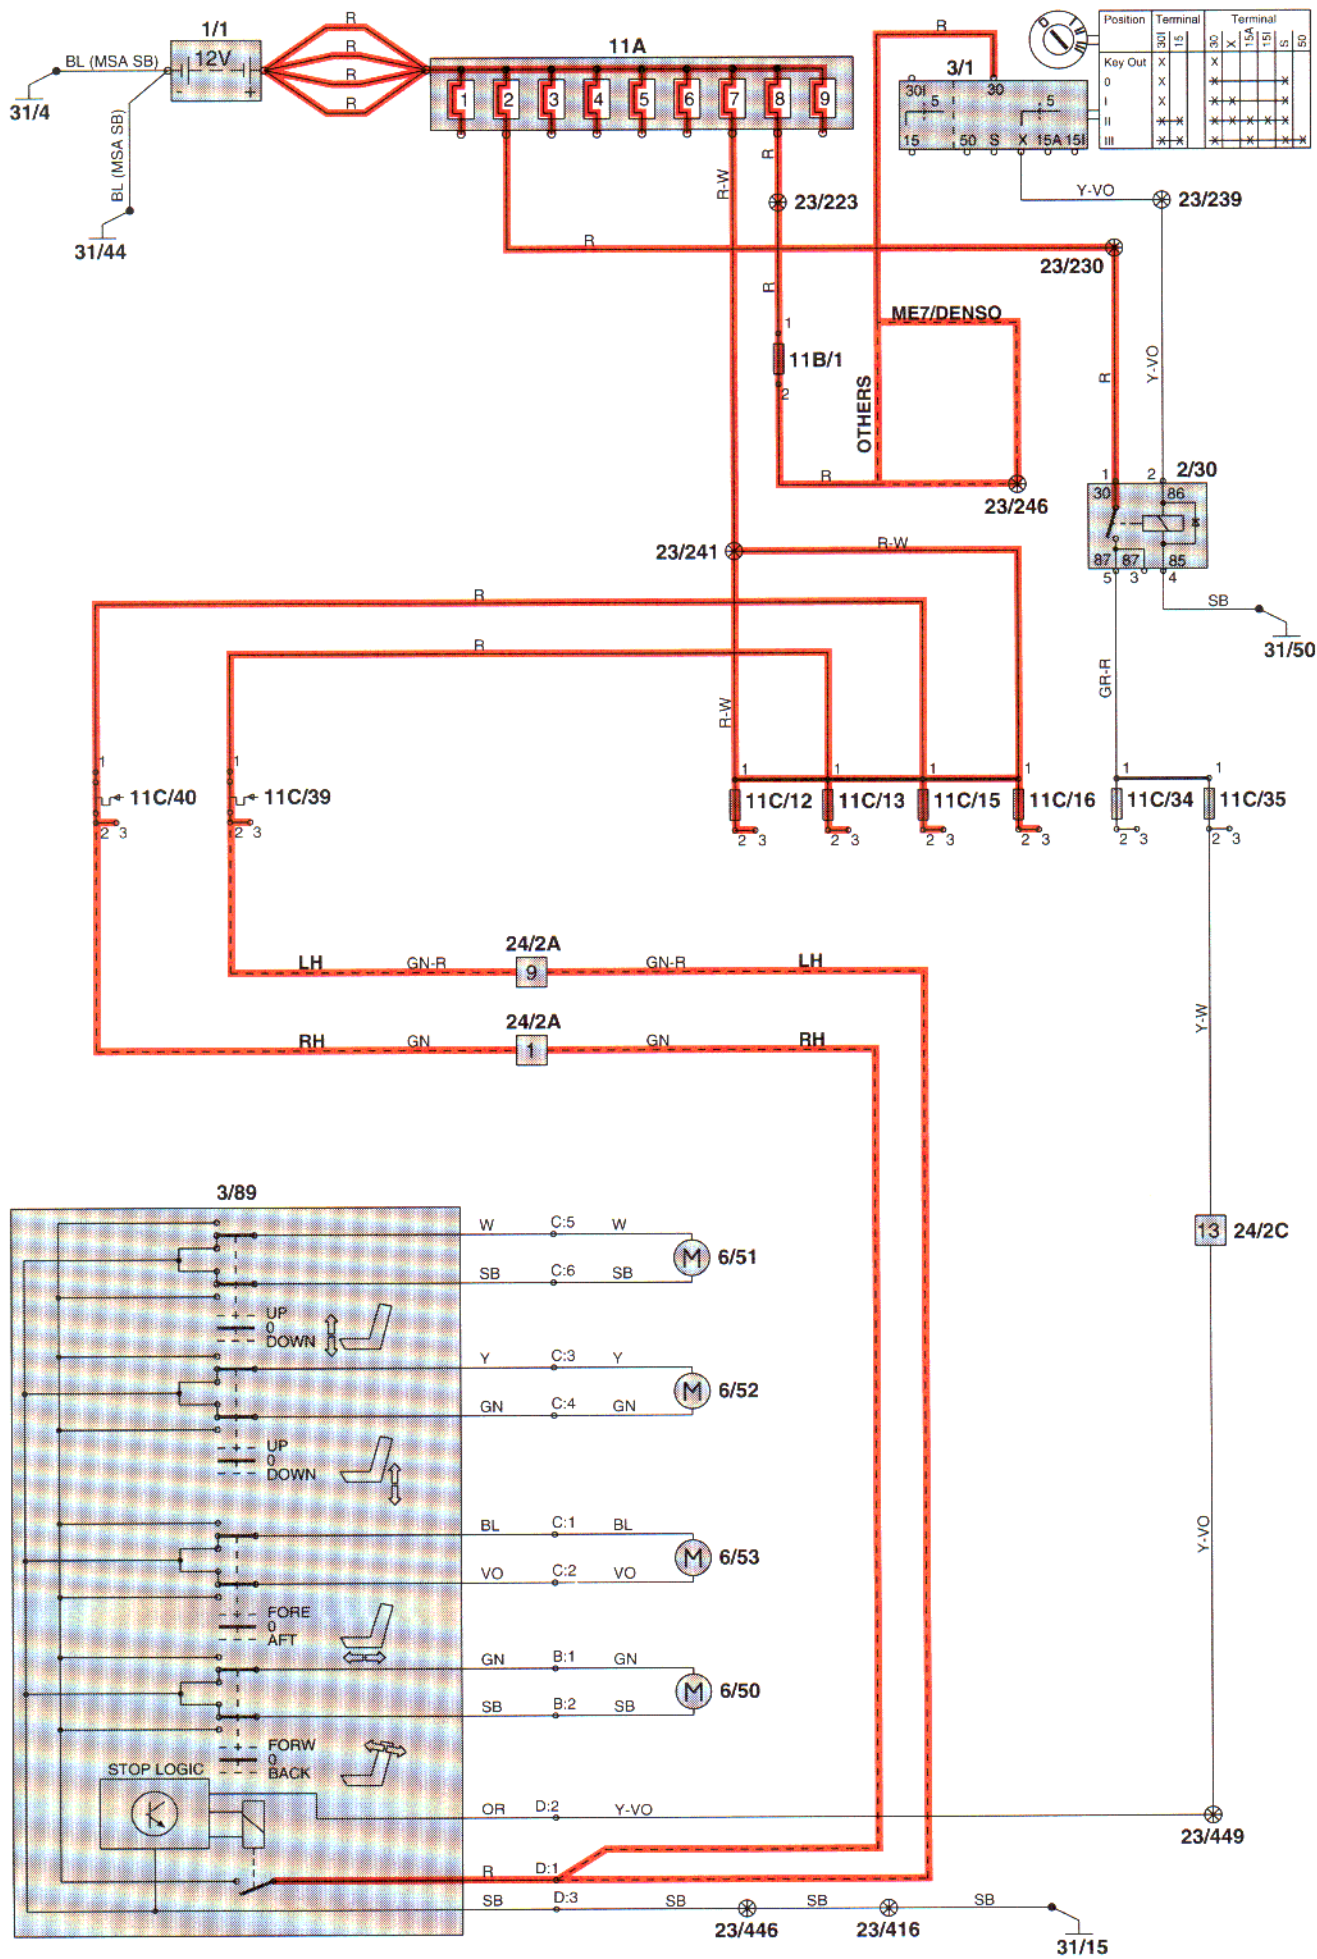


Standard heater STD

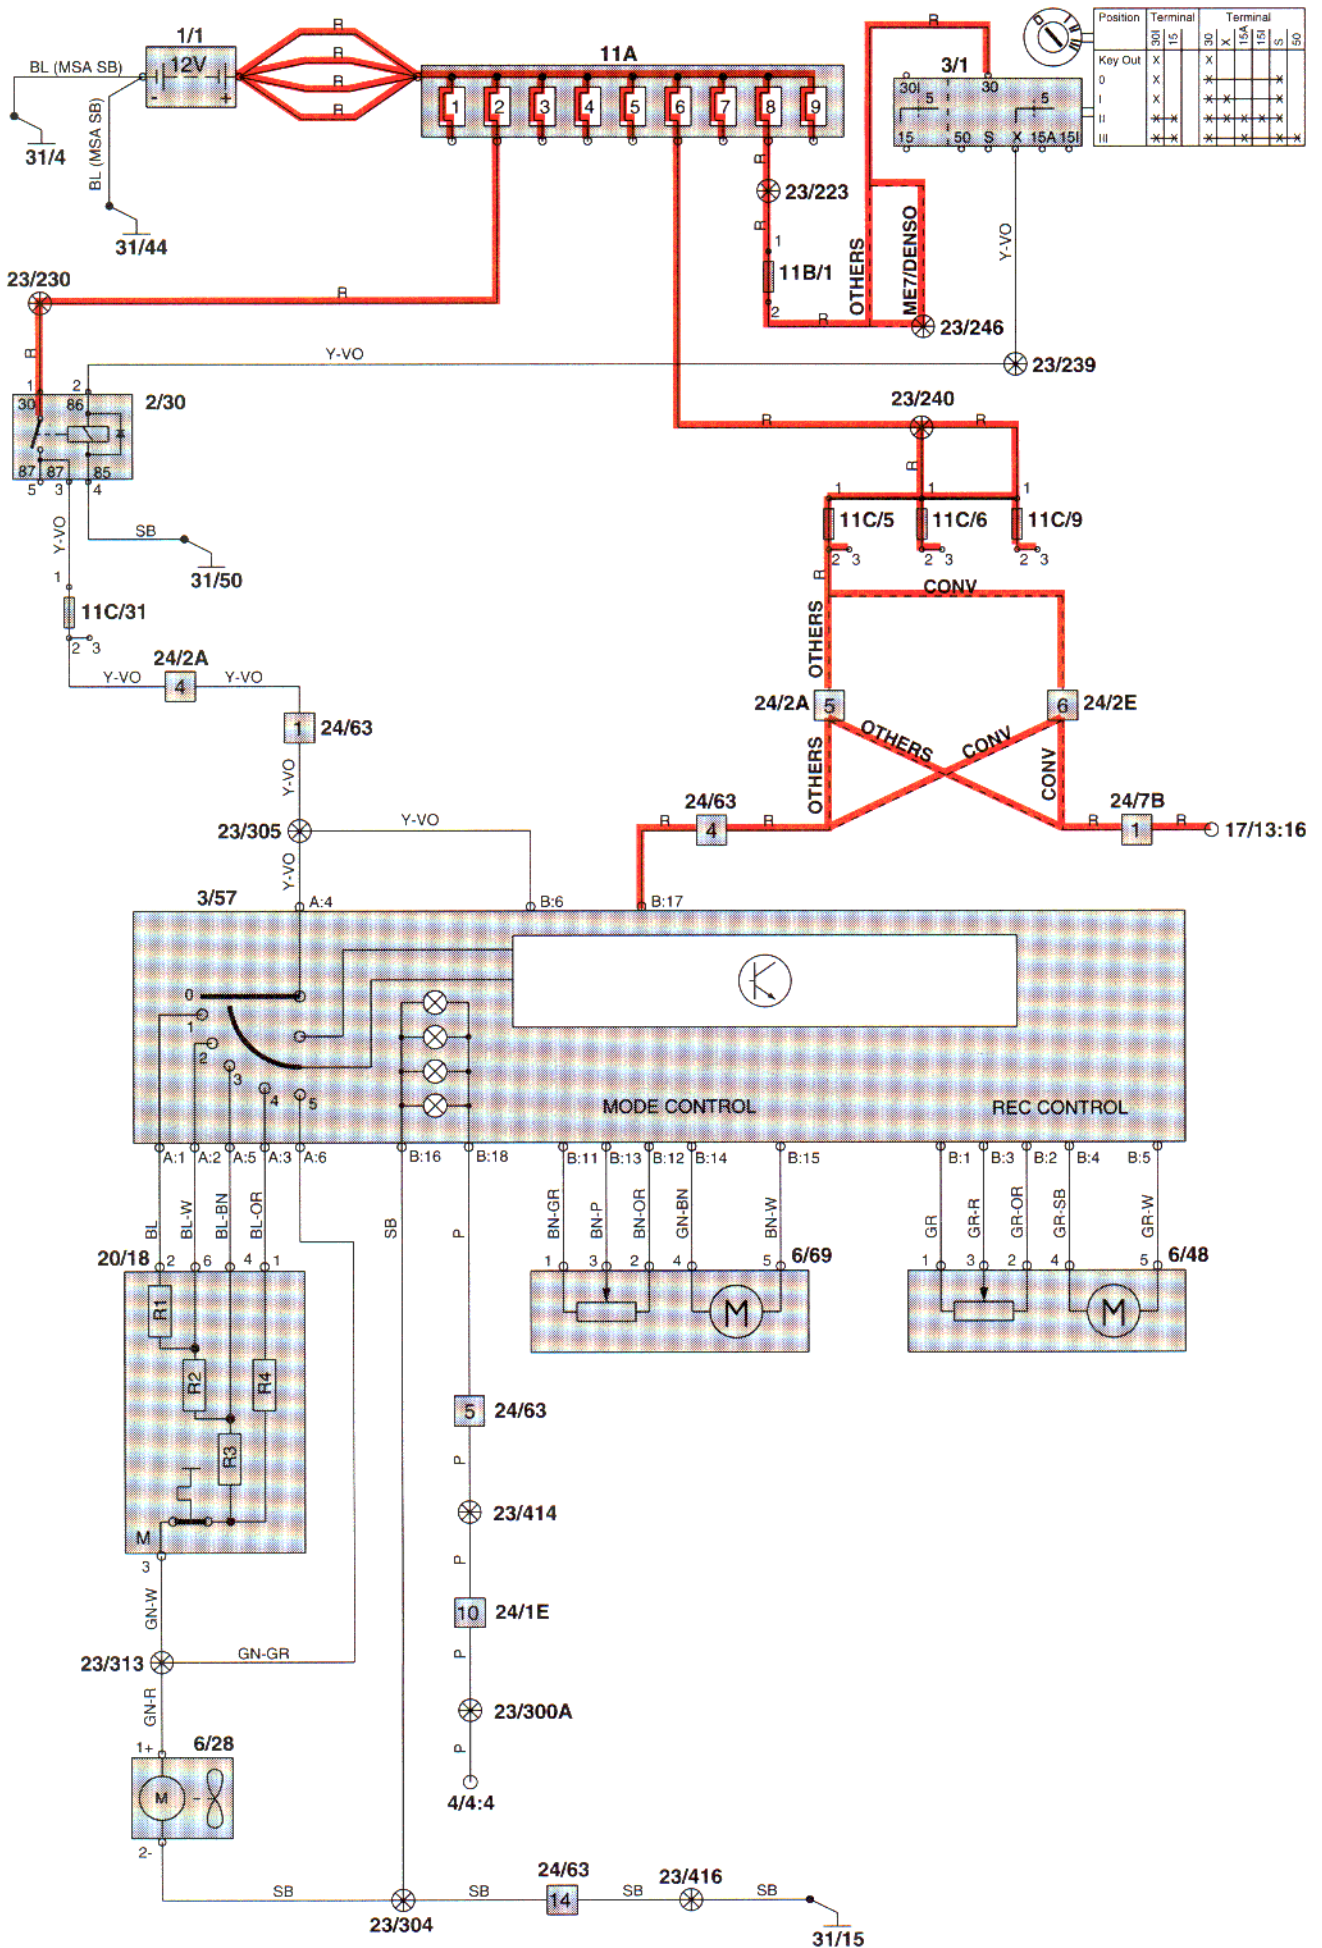


Manual climate control MCC Fenix 5.2, MSA 15.7

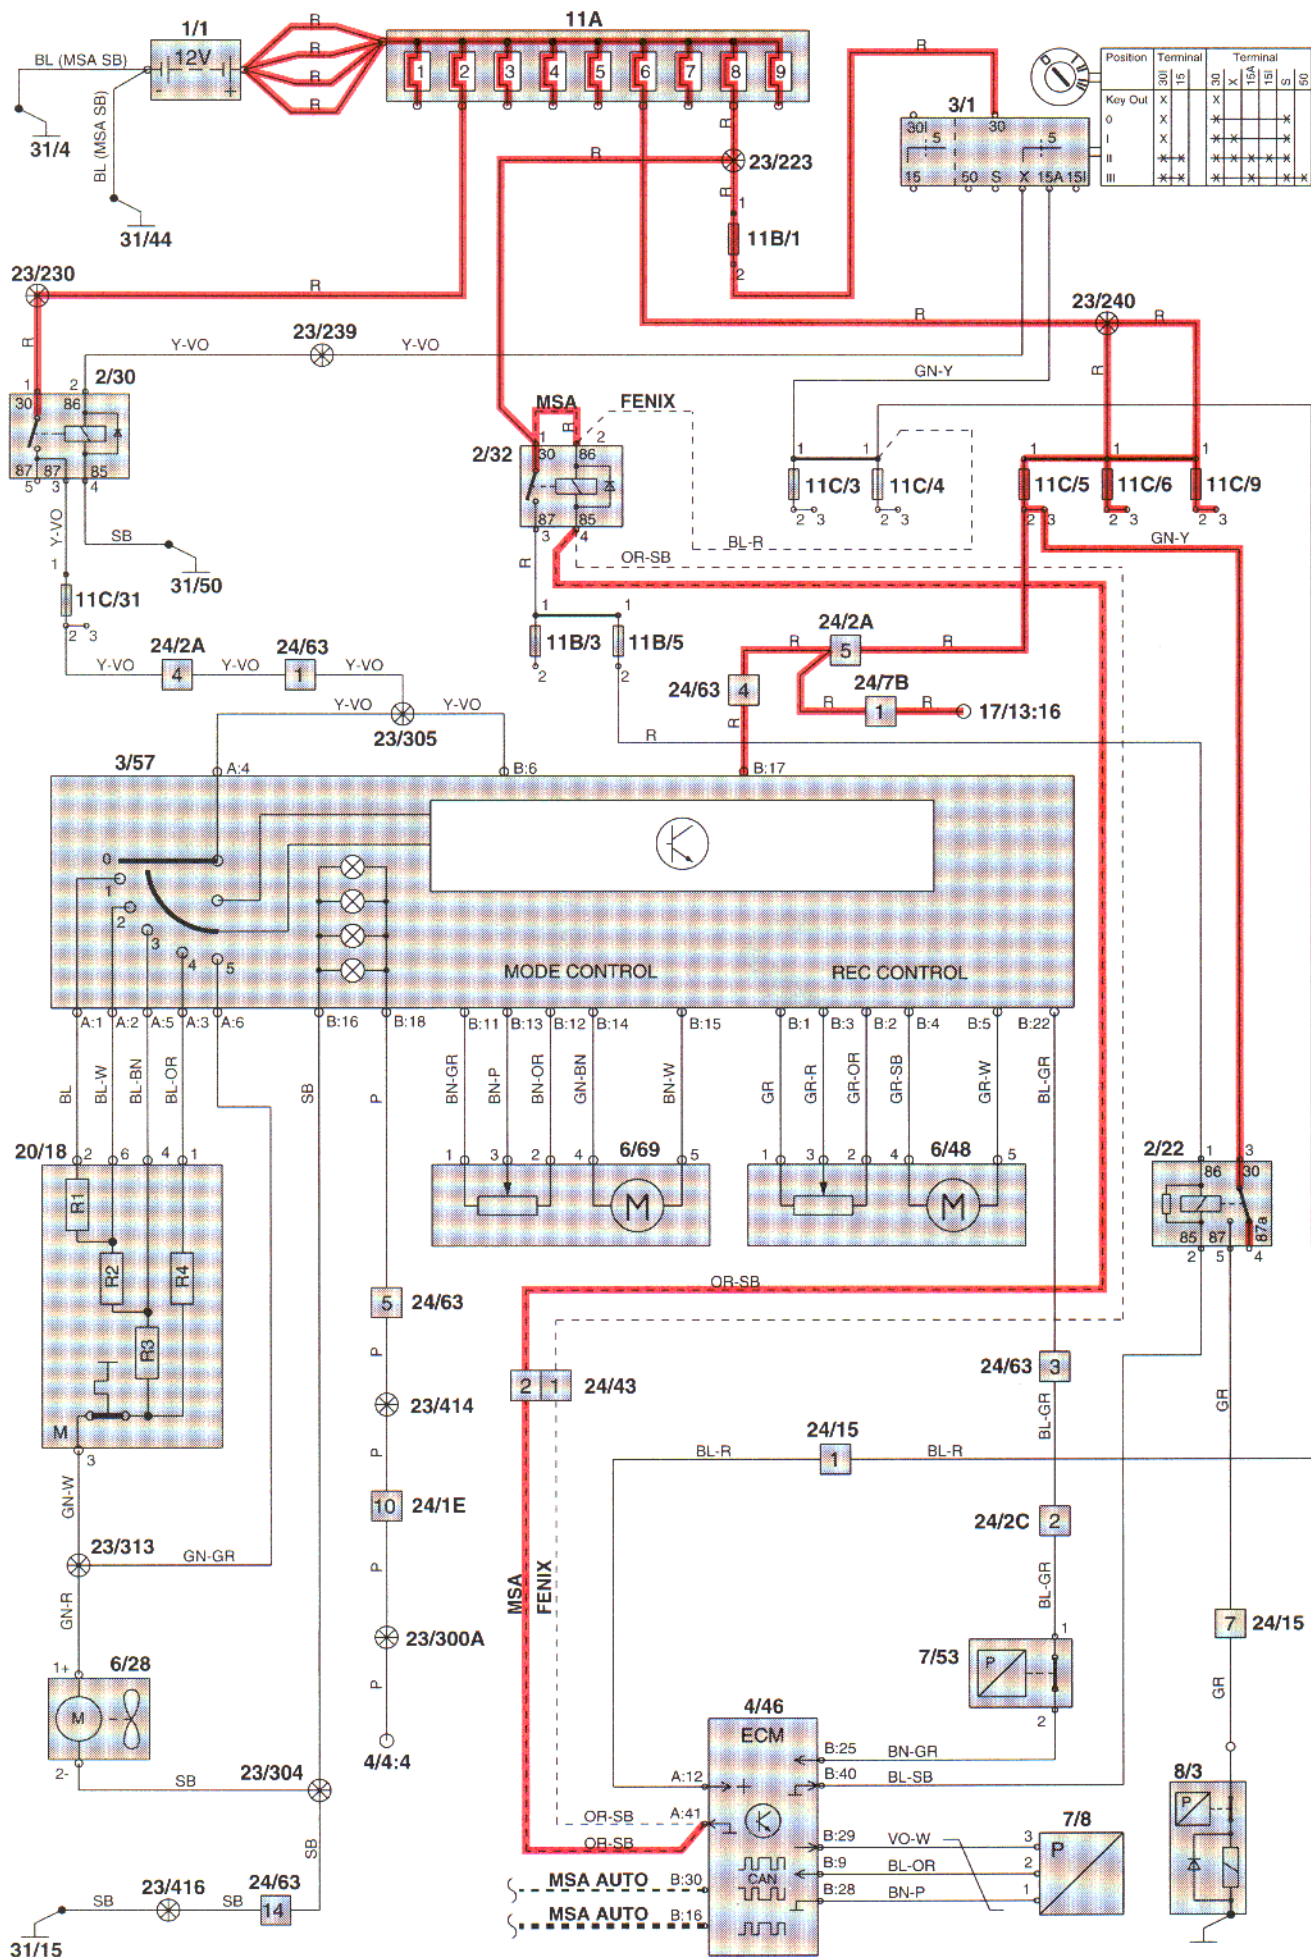


Manual climate control MCC Denso, ME7

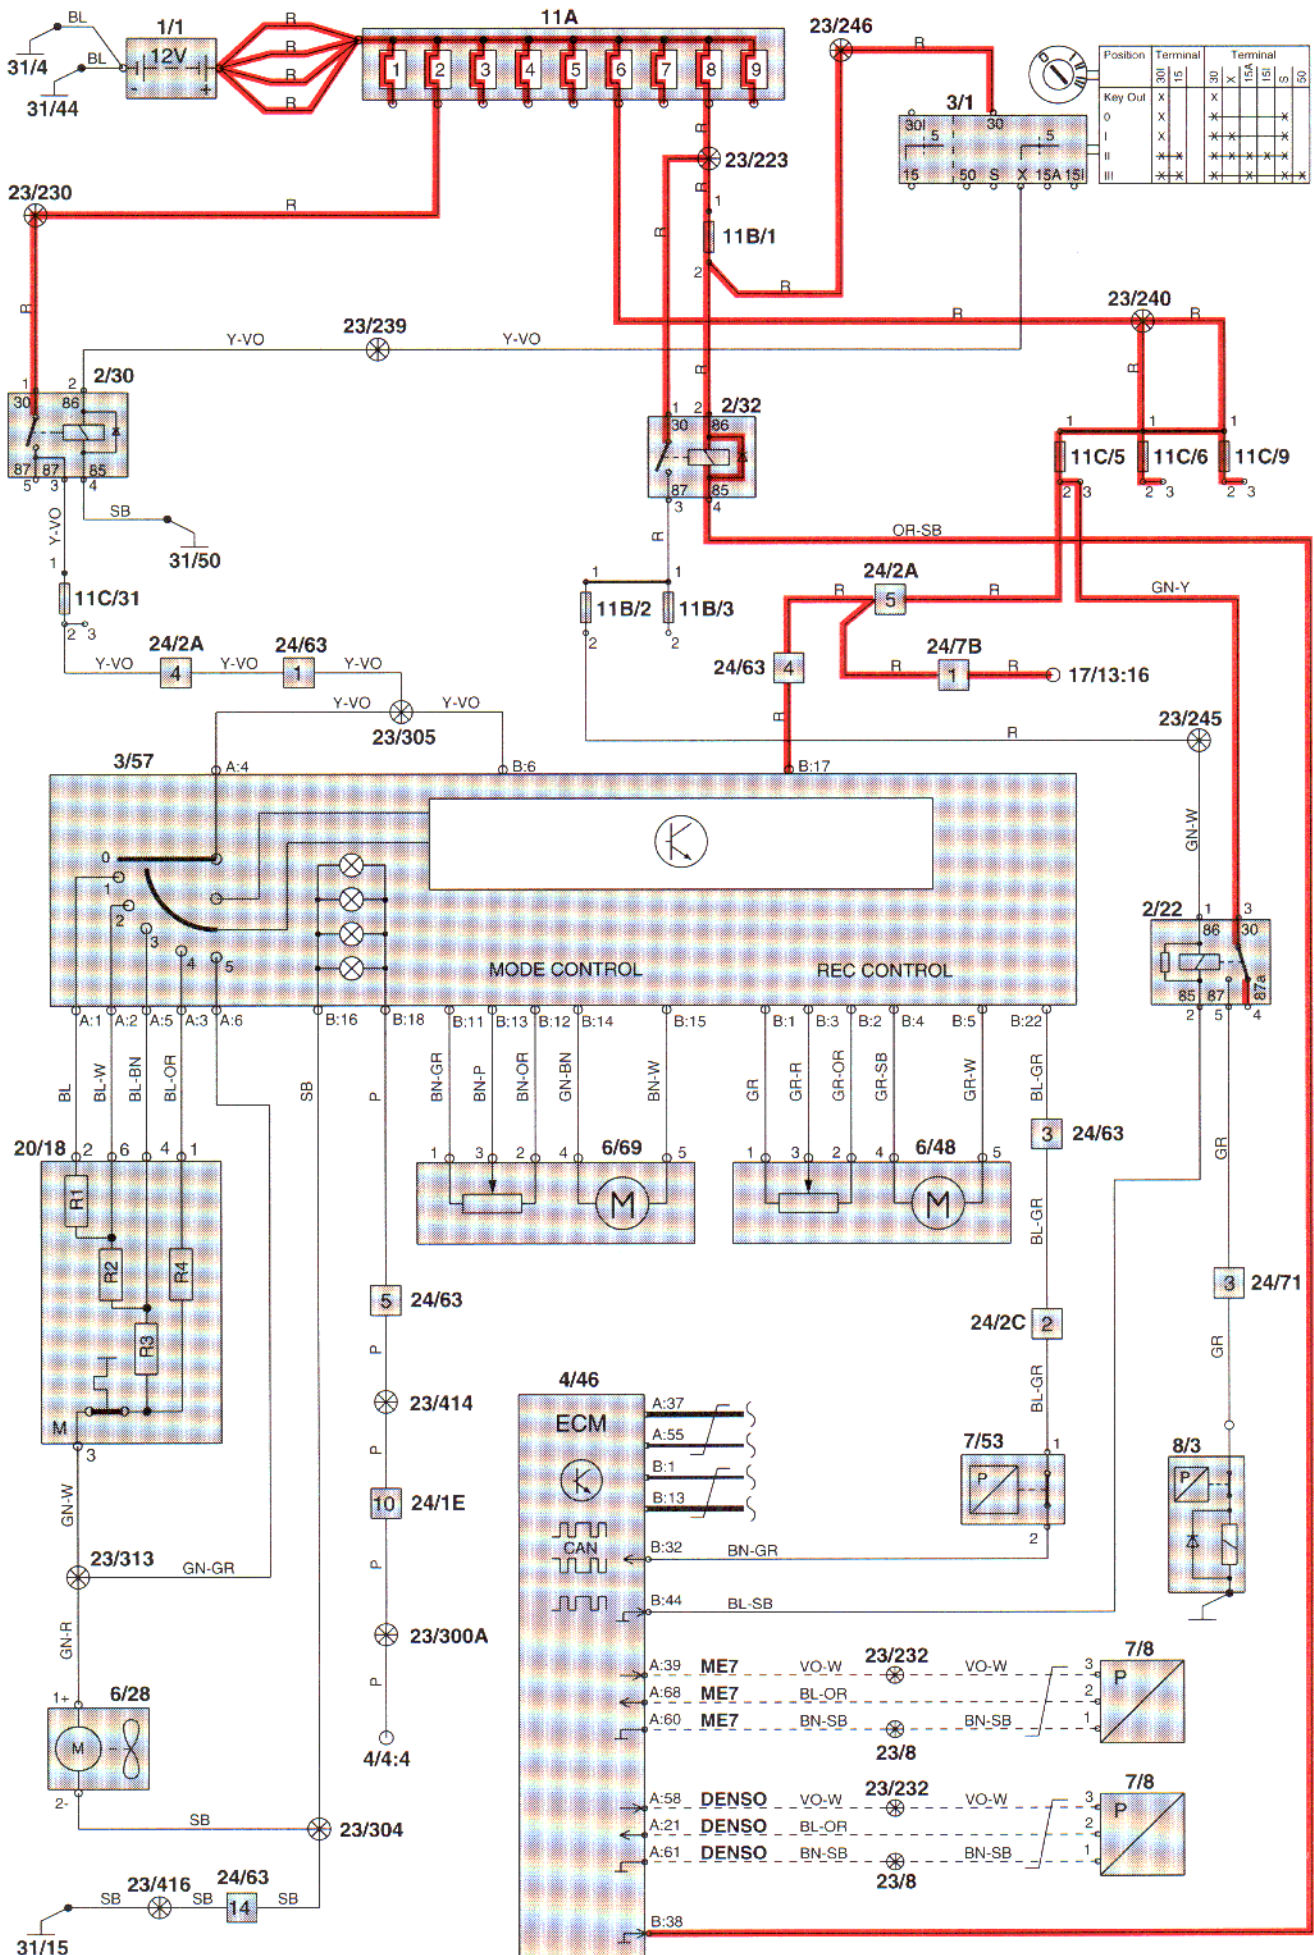

Electronic climate control ECC
Fenix 5.2, MSA 15.7

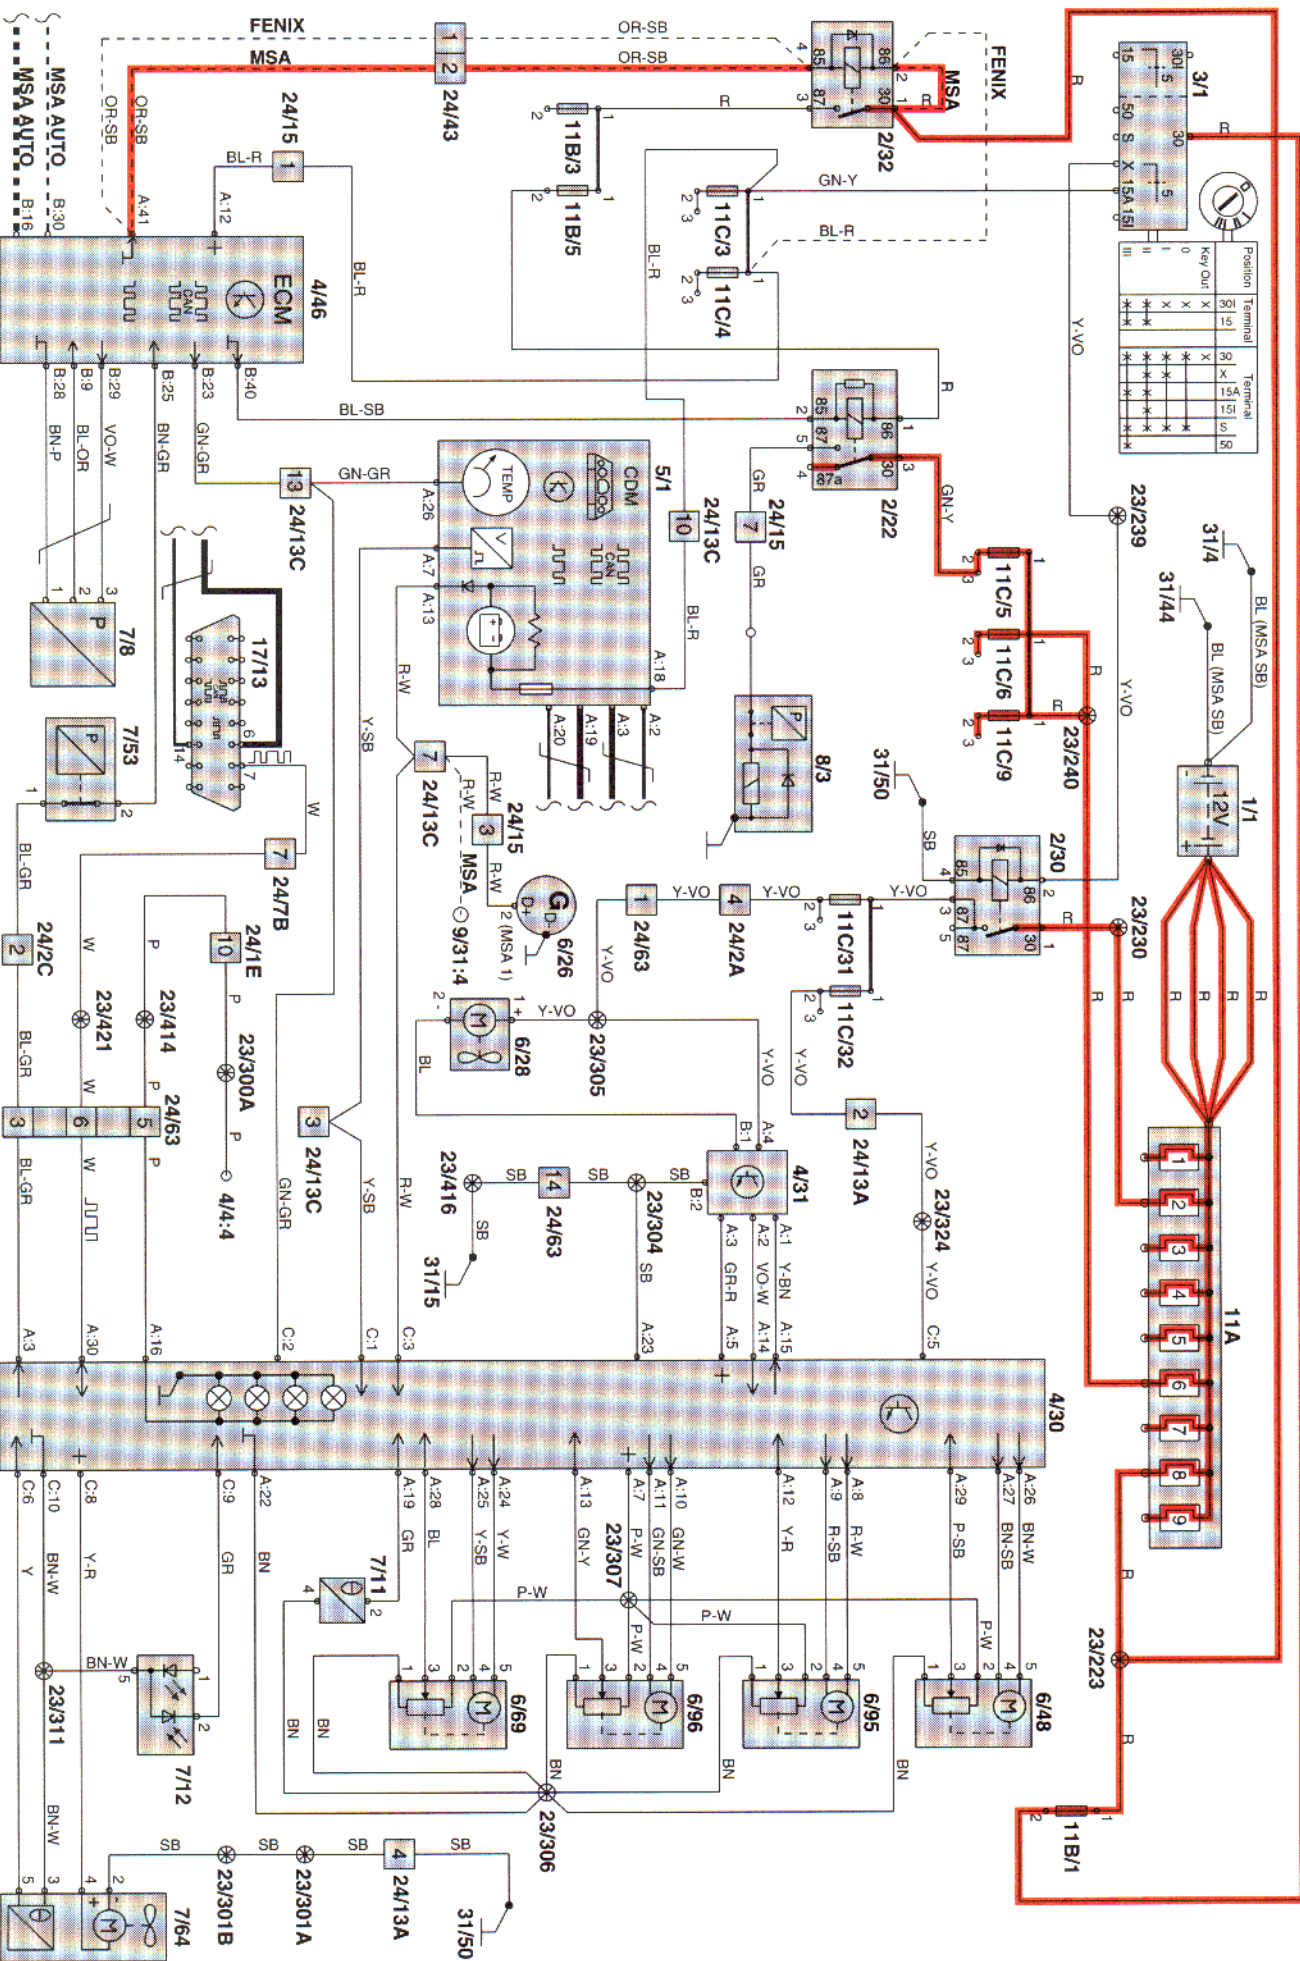


Electronic climate control ECC Denso, ME7

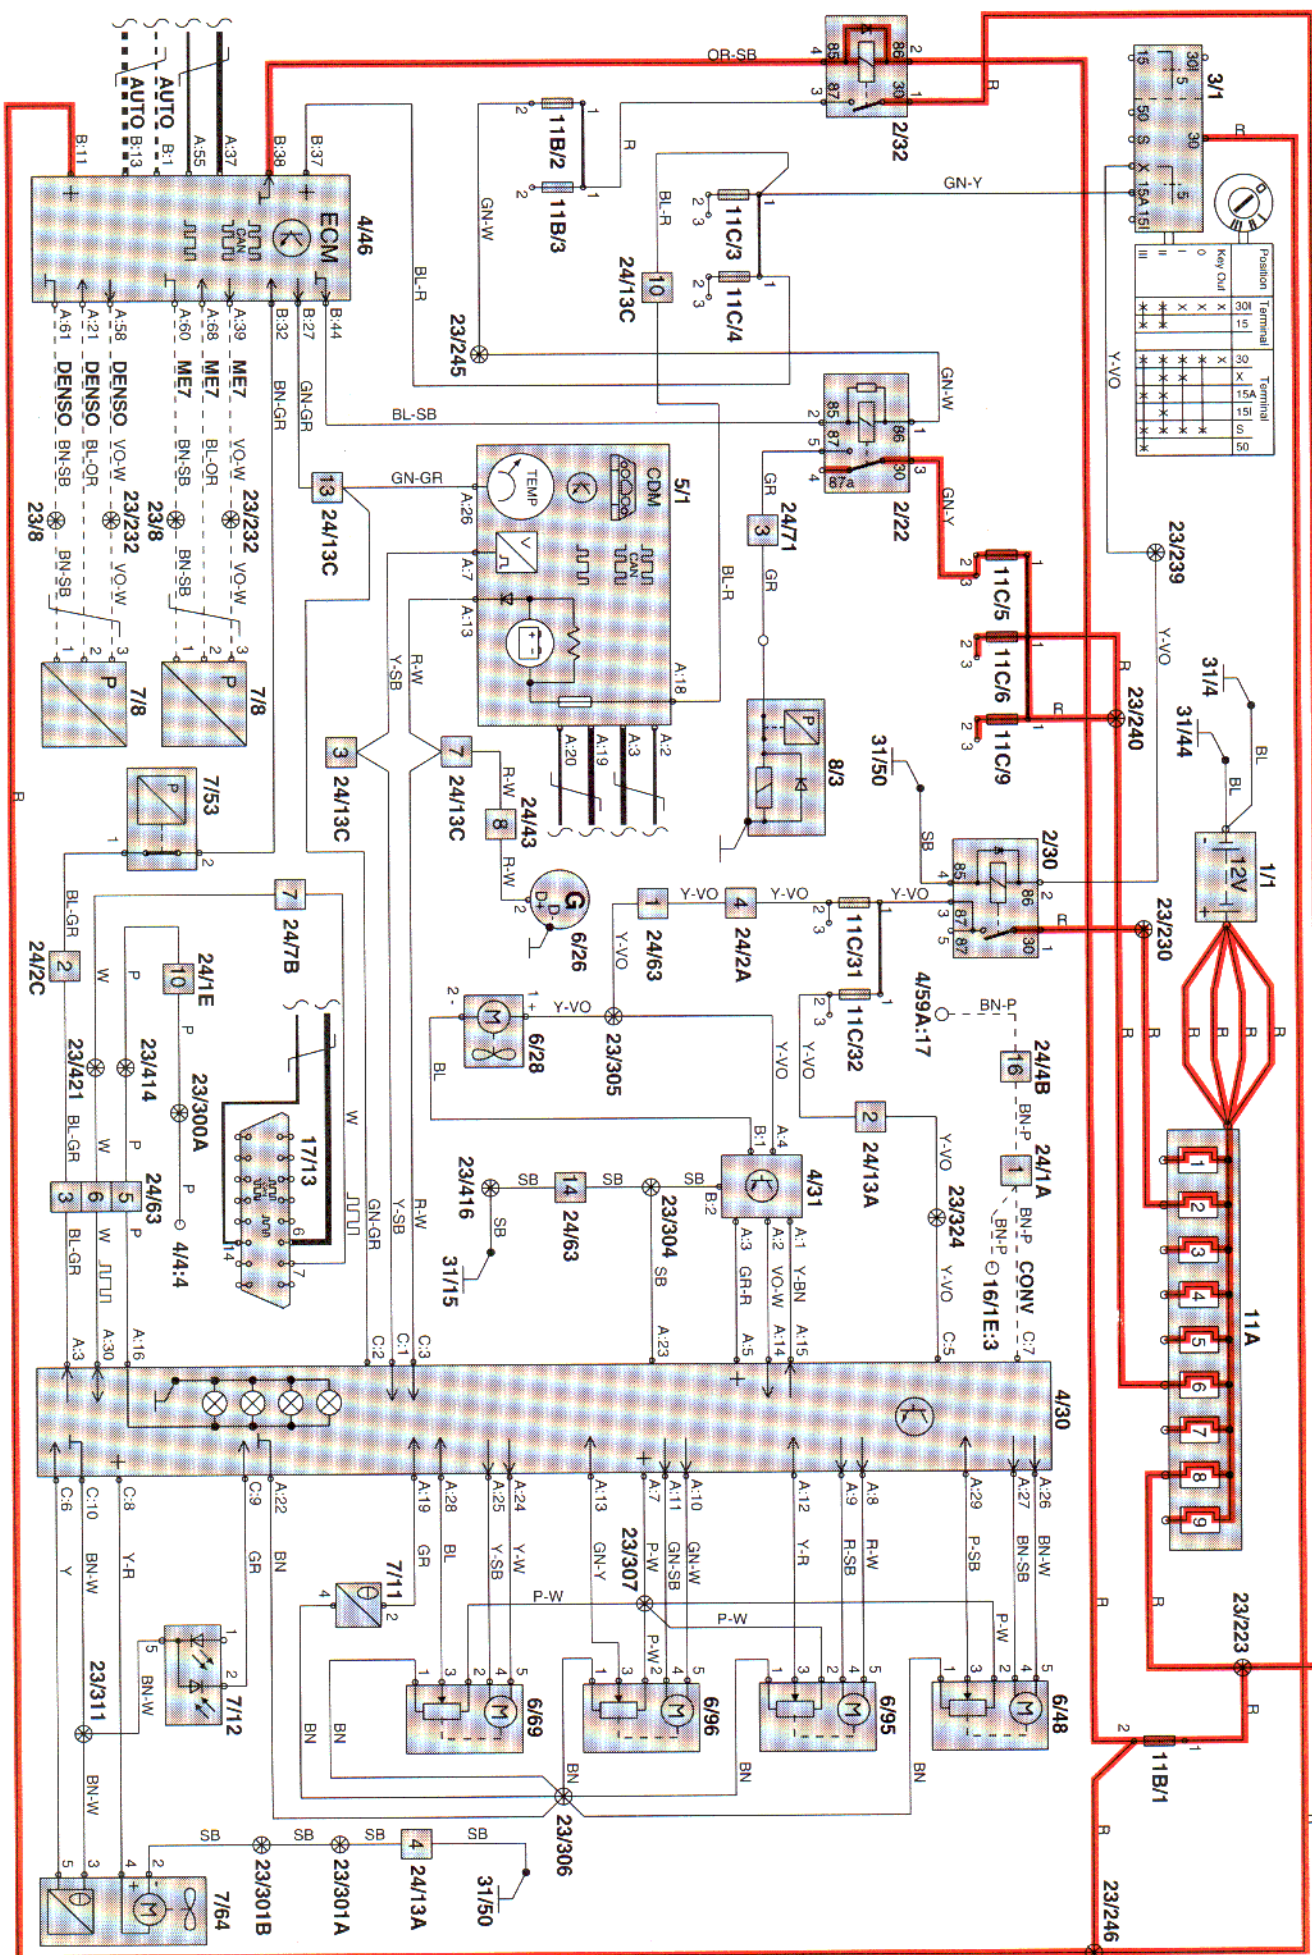


Additional heater


- | | | | |
|---|---|---|----------------------------|
| A | Outside temperature sensor | G | Fuel pump (FP) |
| B | Flame sensor | H | Coolant pump |
| C | Engine coolant temperature (ECT) sensor | J | Combustion fan |
| D | Ground terminal, glow plugs | K | Control module |
| E | Glow plugs | L | Connector on heater, 6-pin |
| F | Overheat protection thermostat | M | Timer |

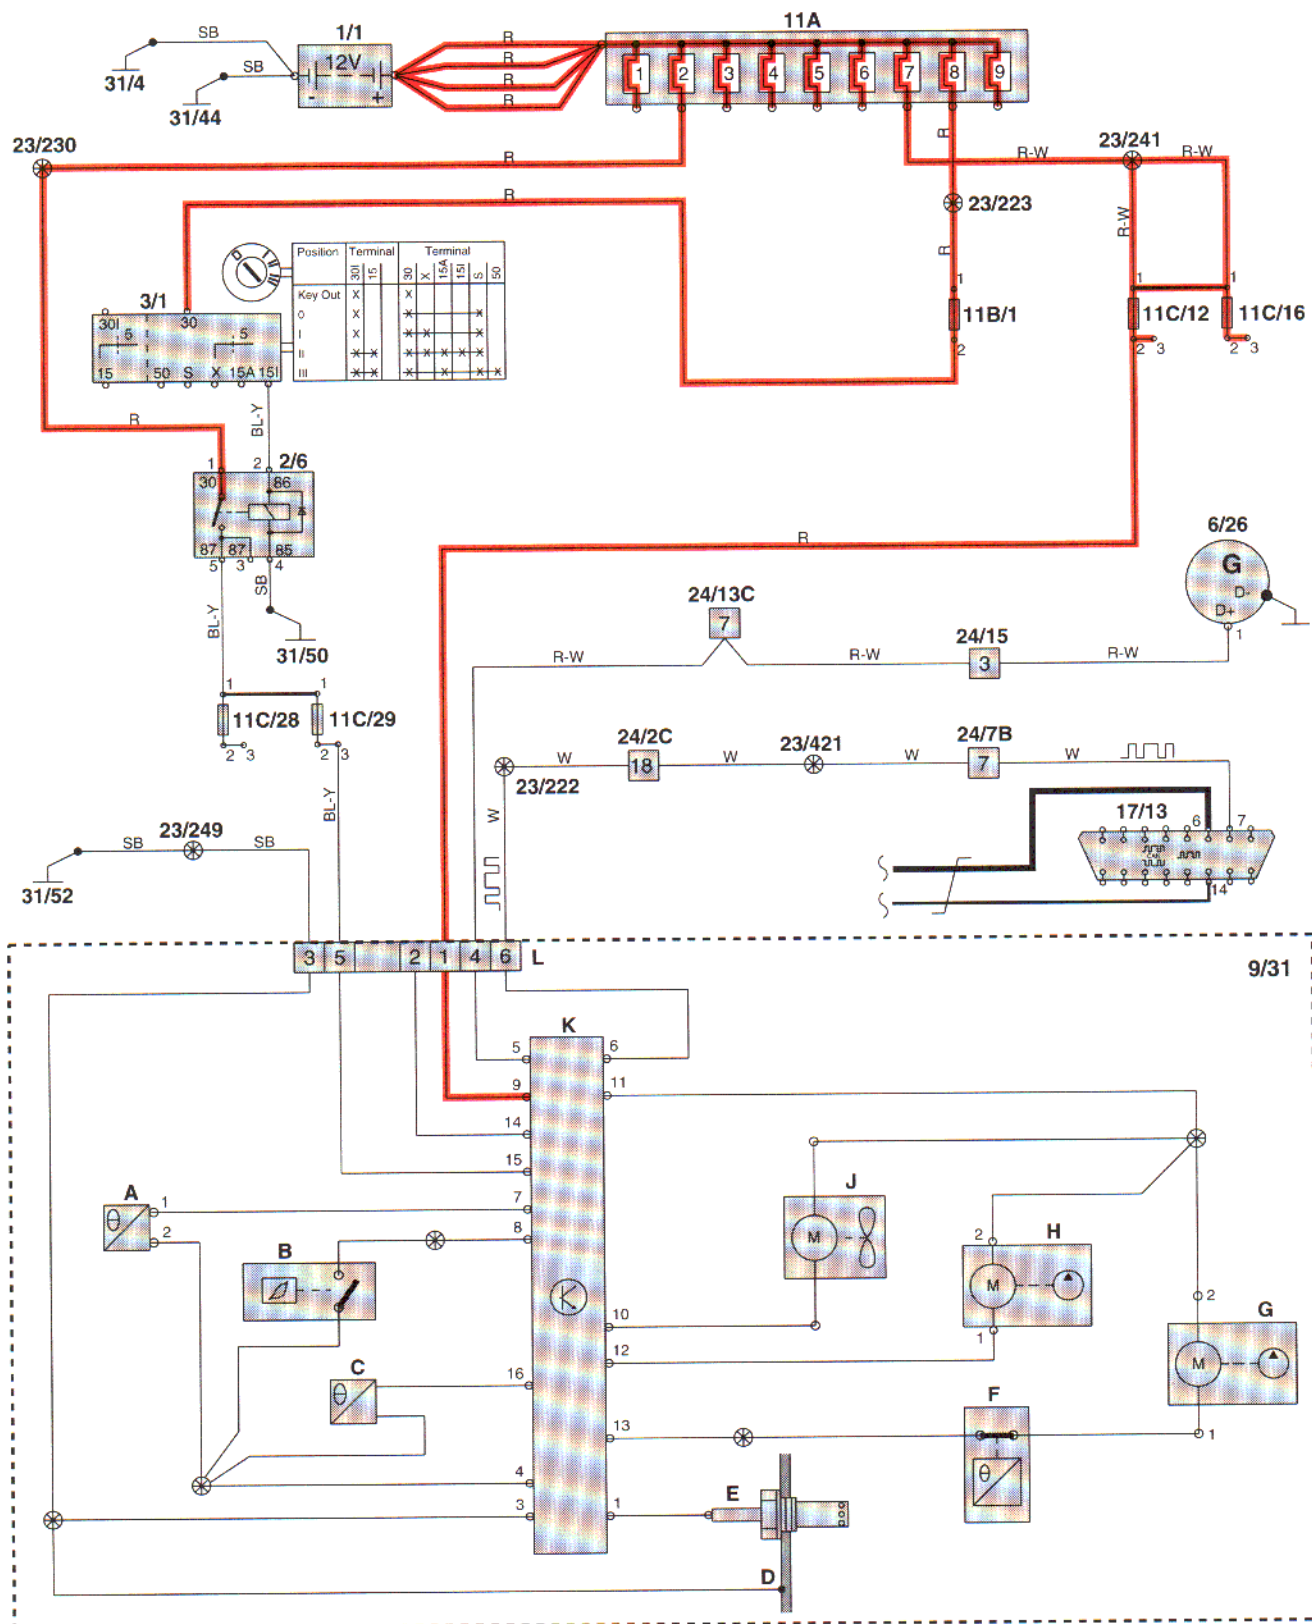


Cargo compartment fans

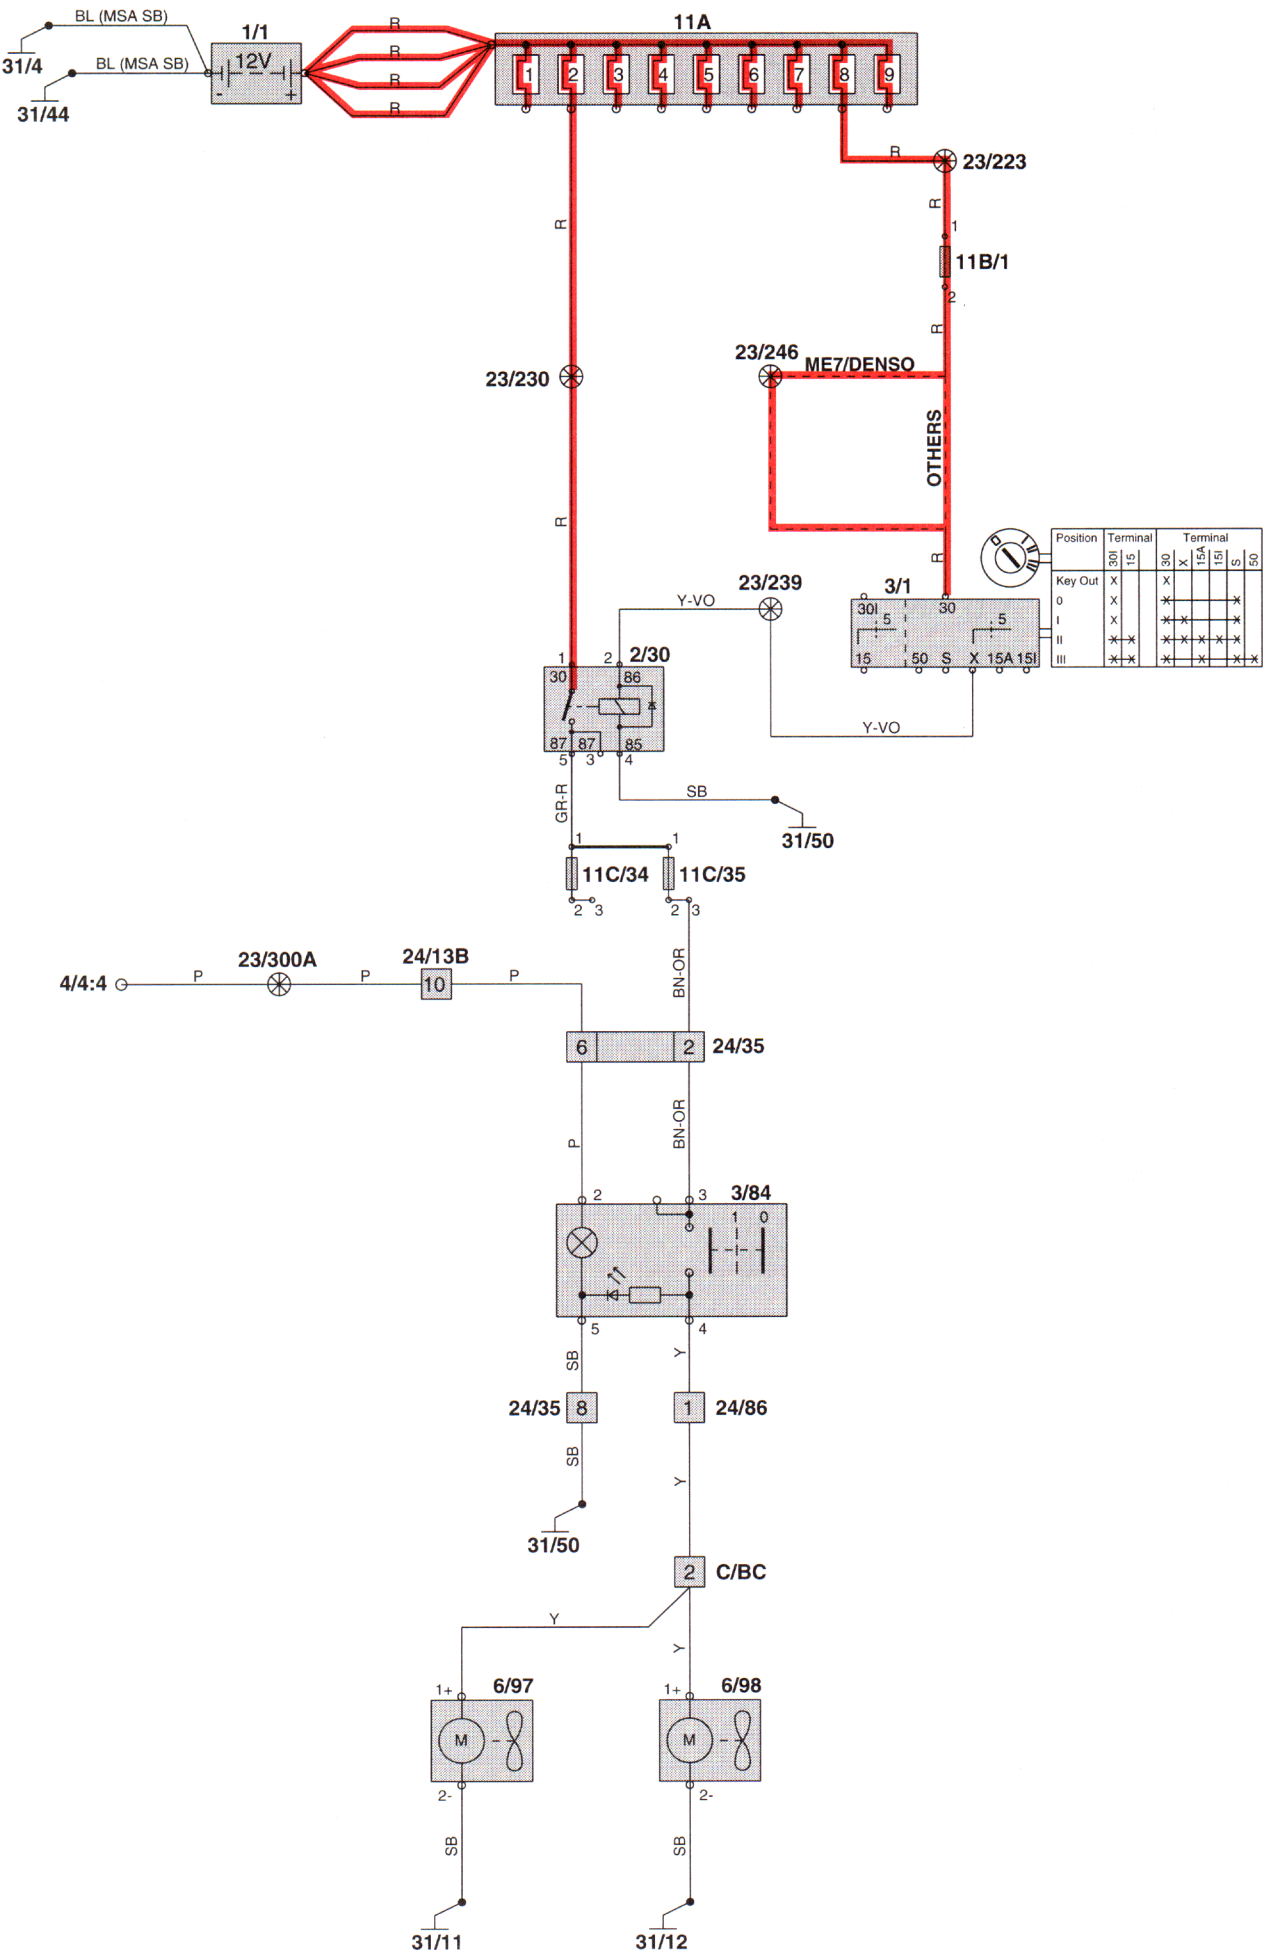


Roll over protection ROPS

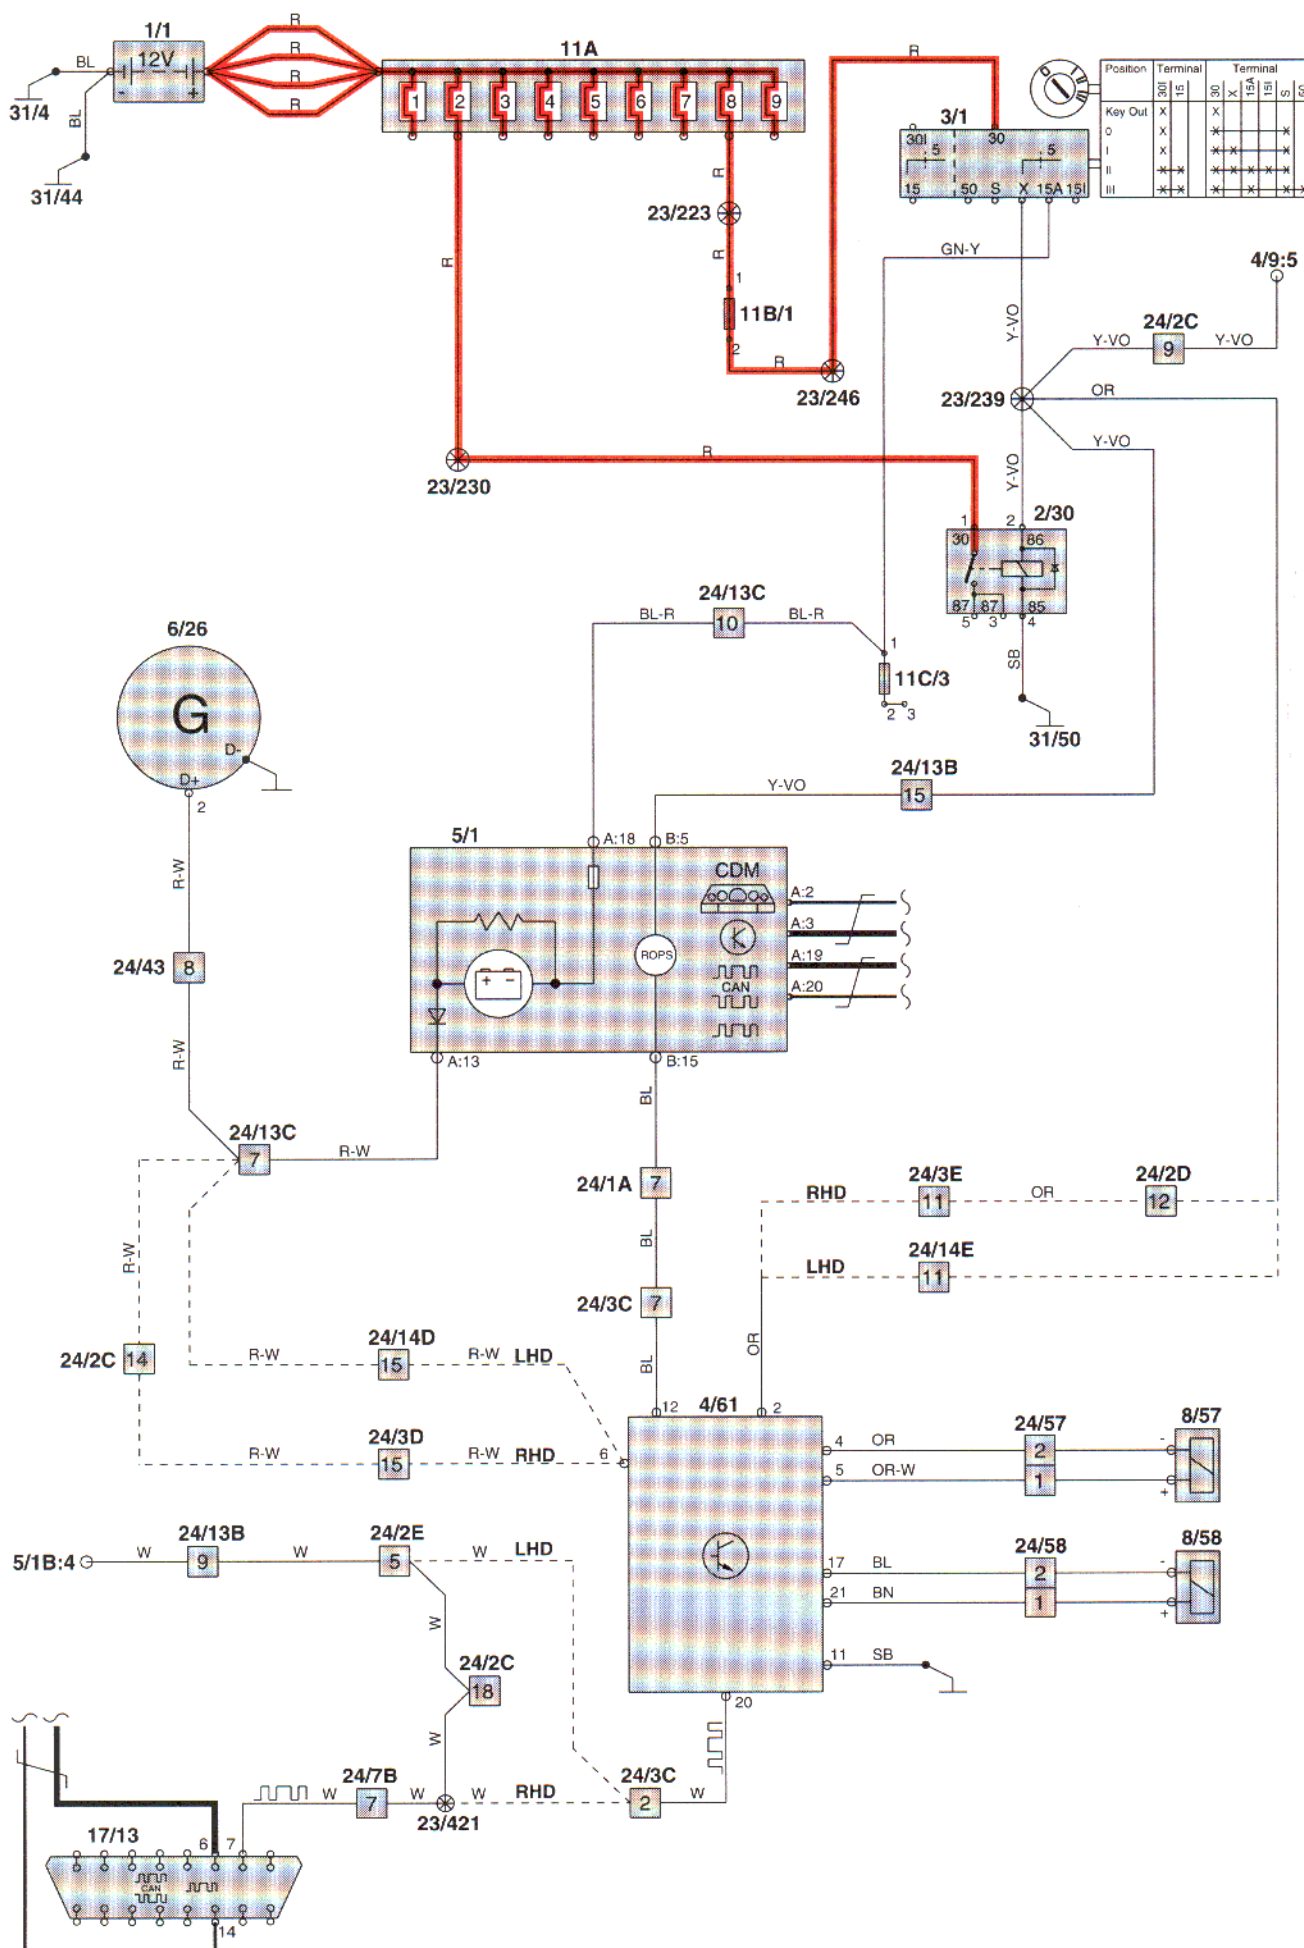


SRS Supplemental Restraint System

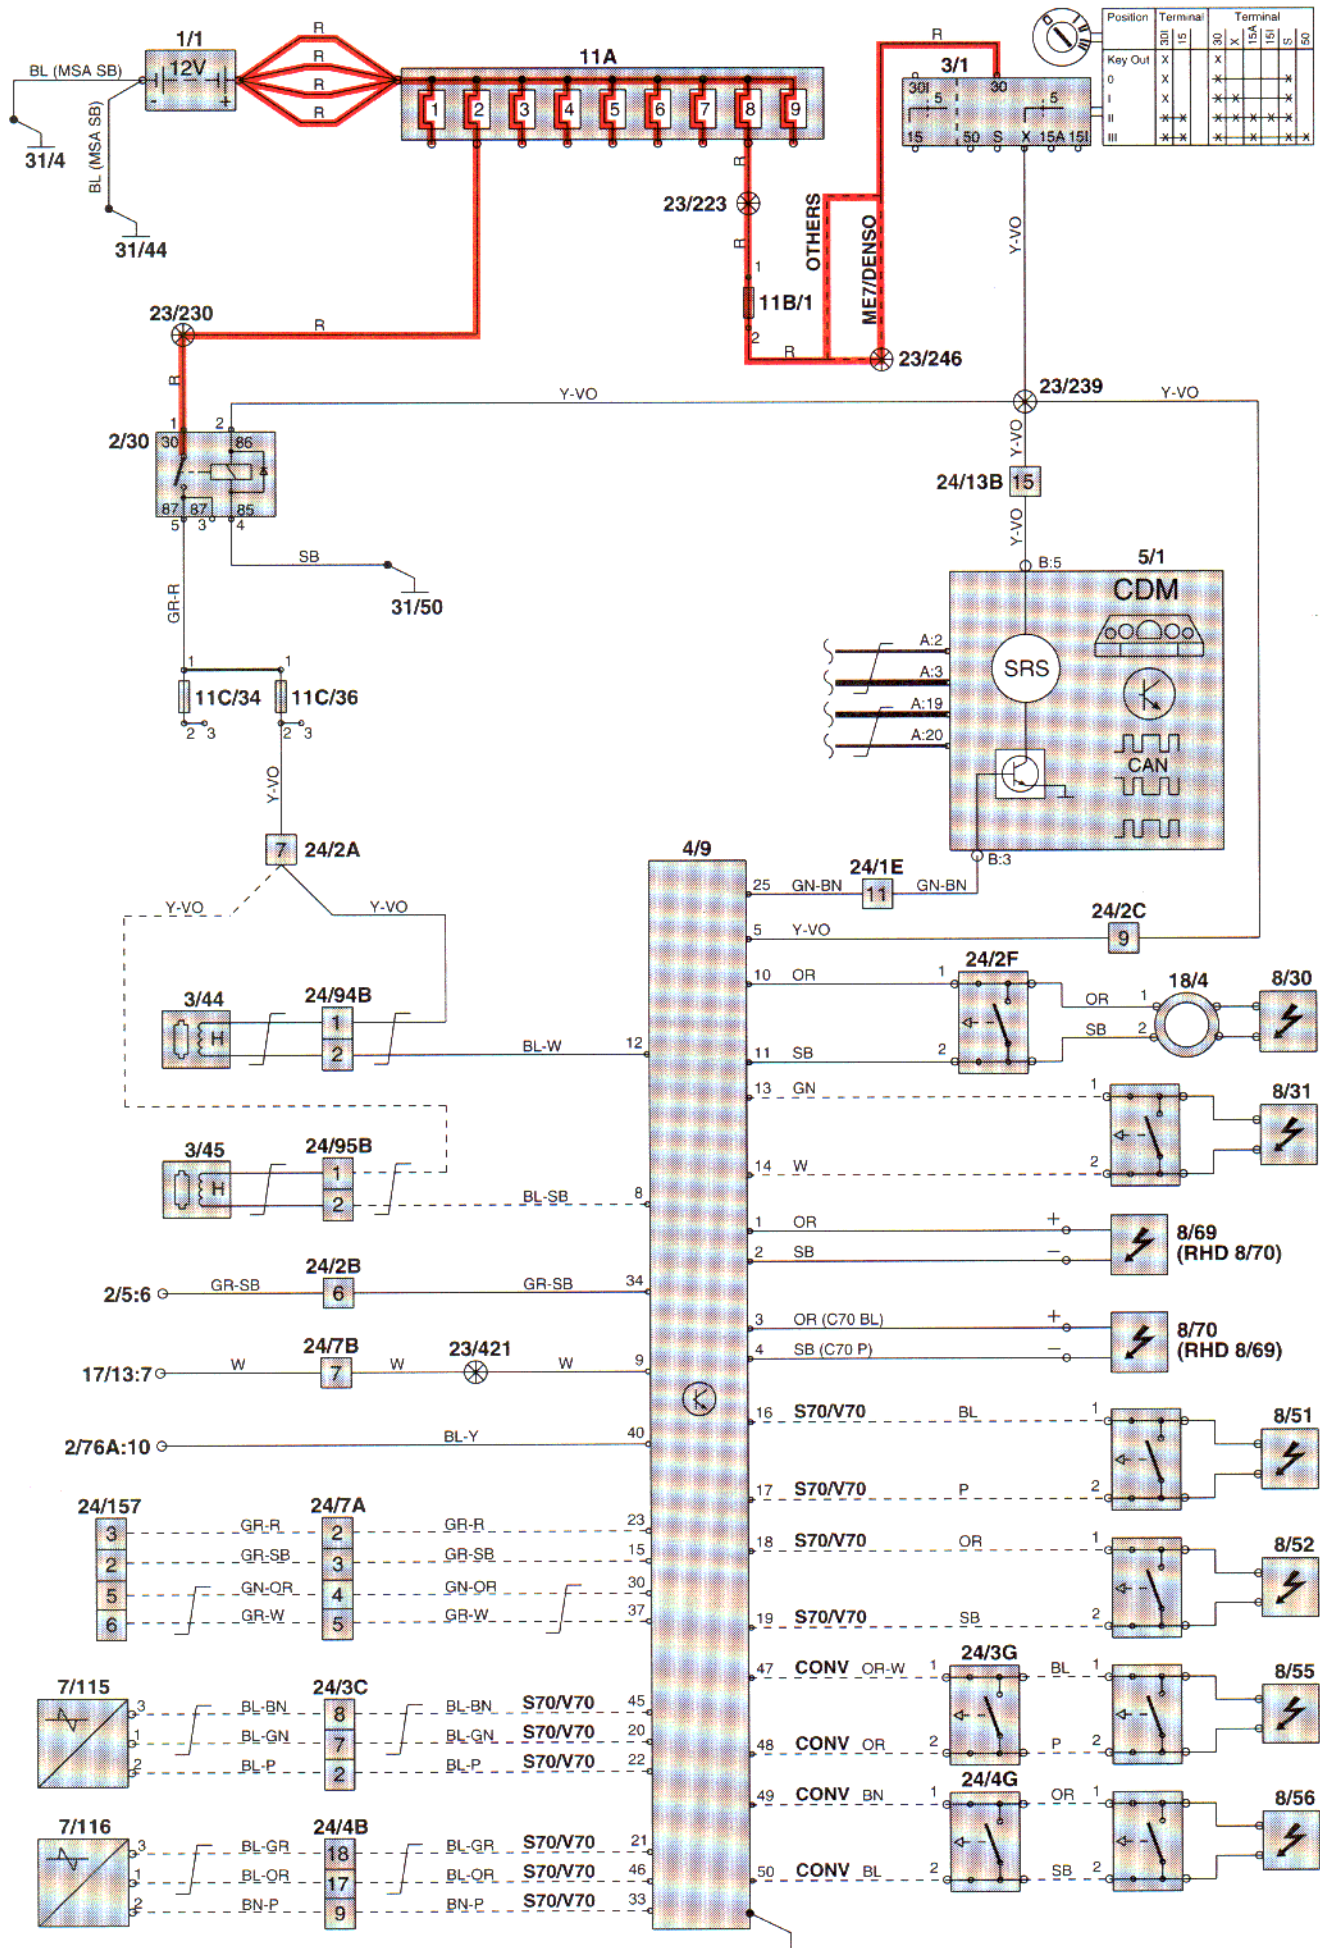


Remote controlled garage door opener

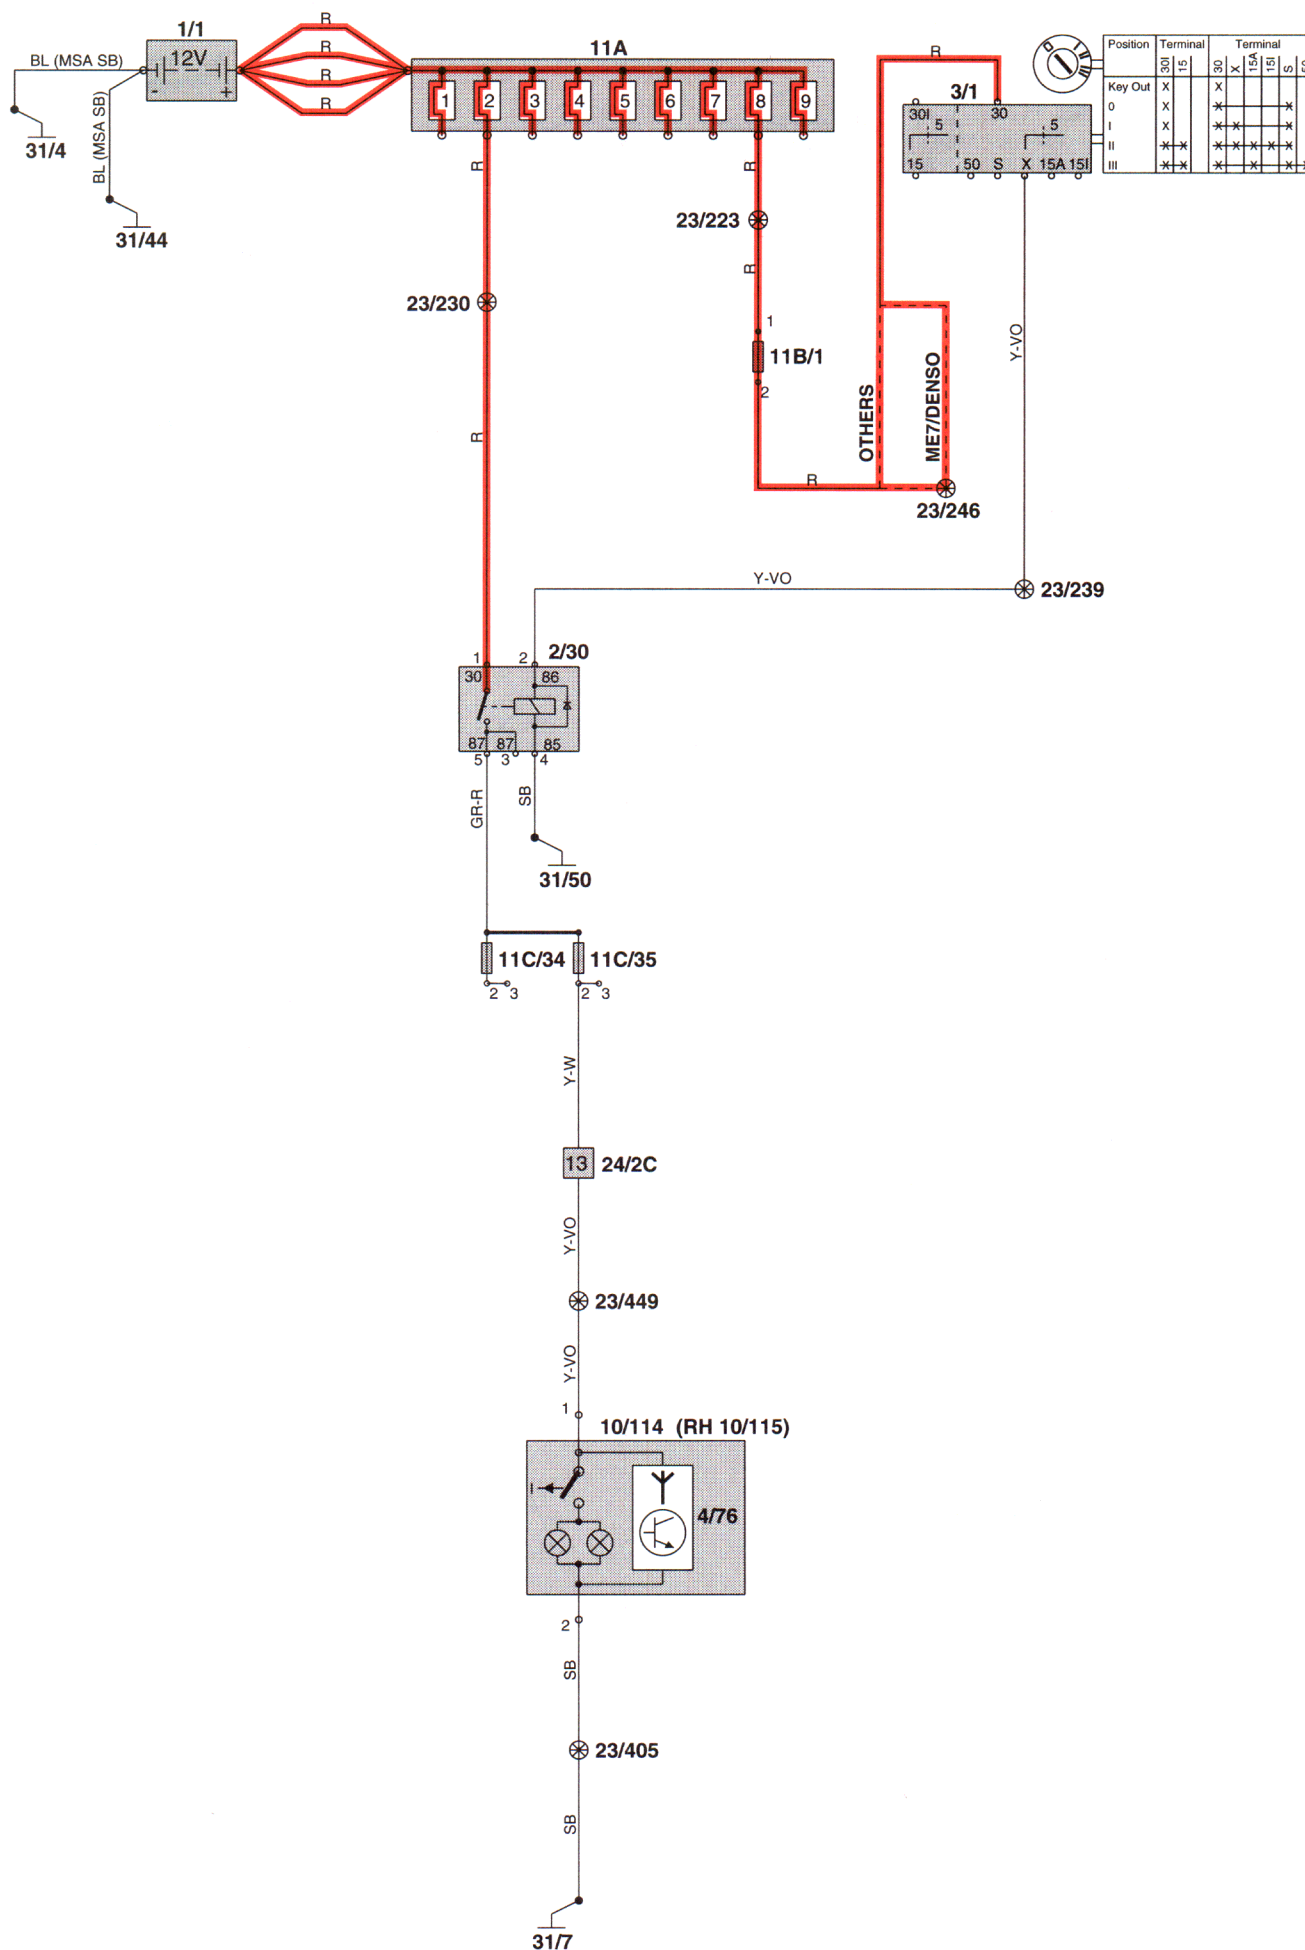

Rear view mirror with automatic dimming

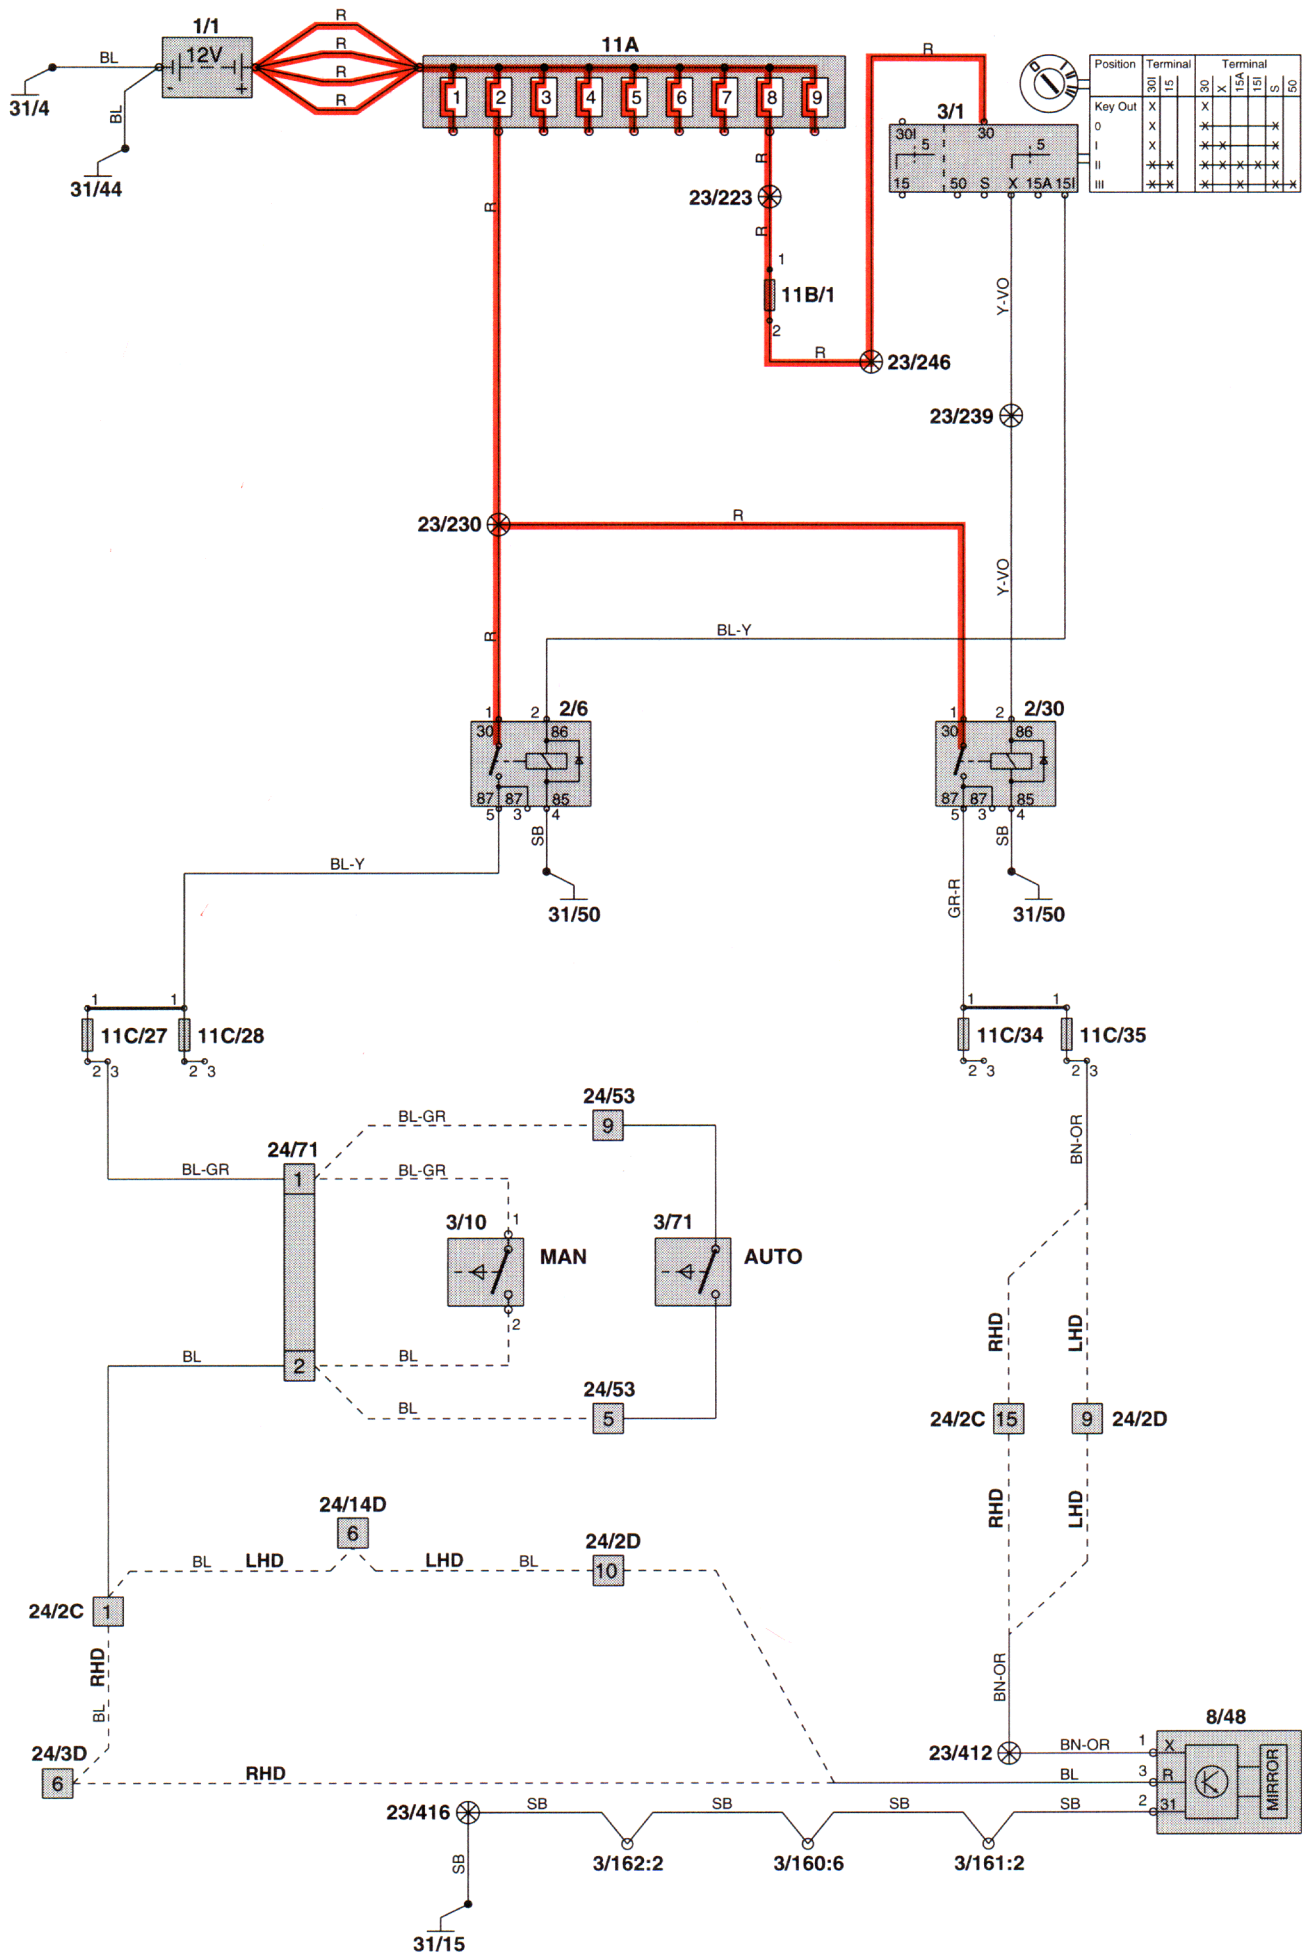

Rear view mirror with automatic dimming C70 coupé

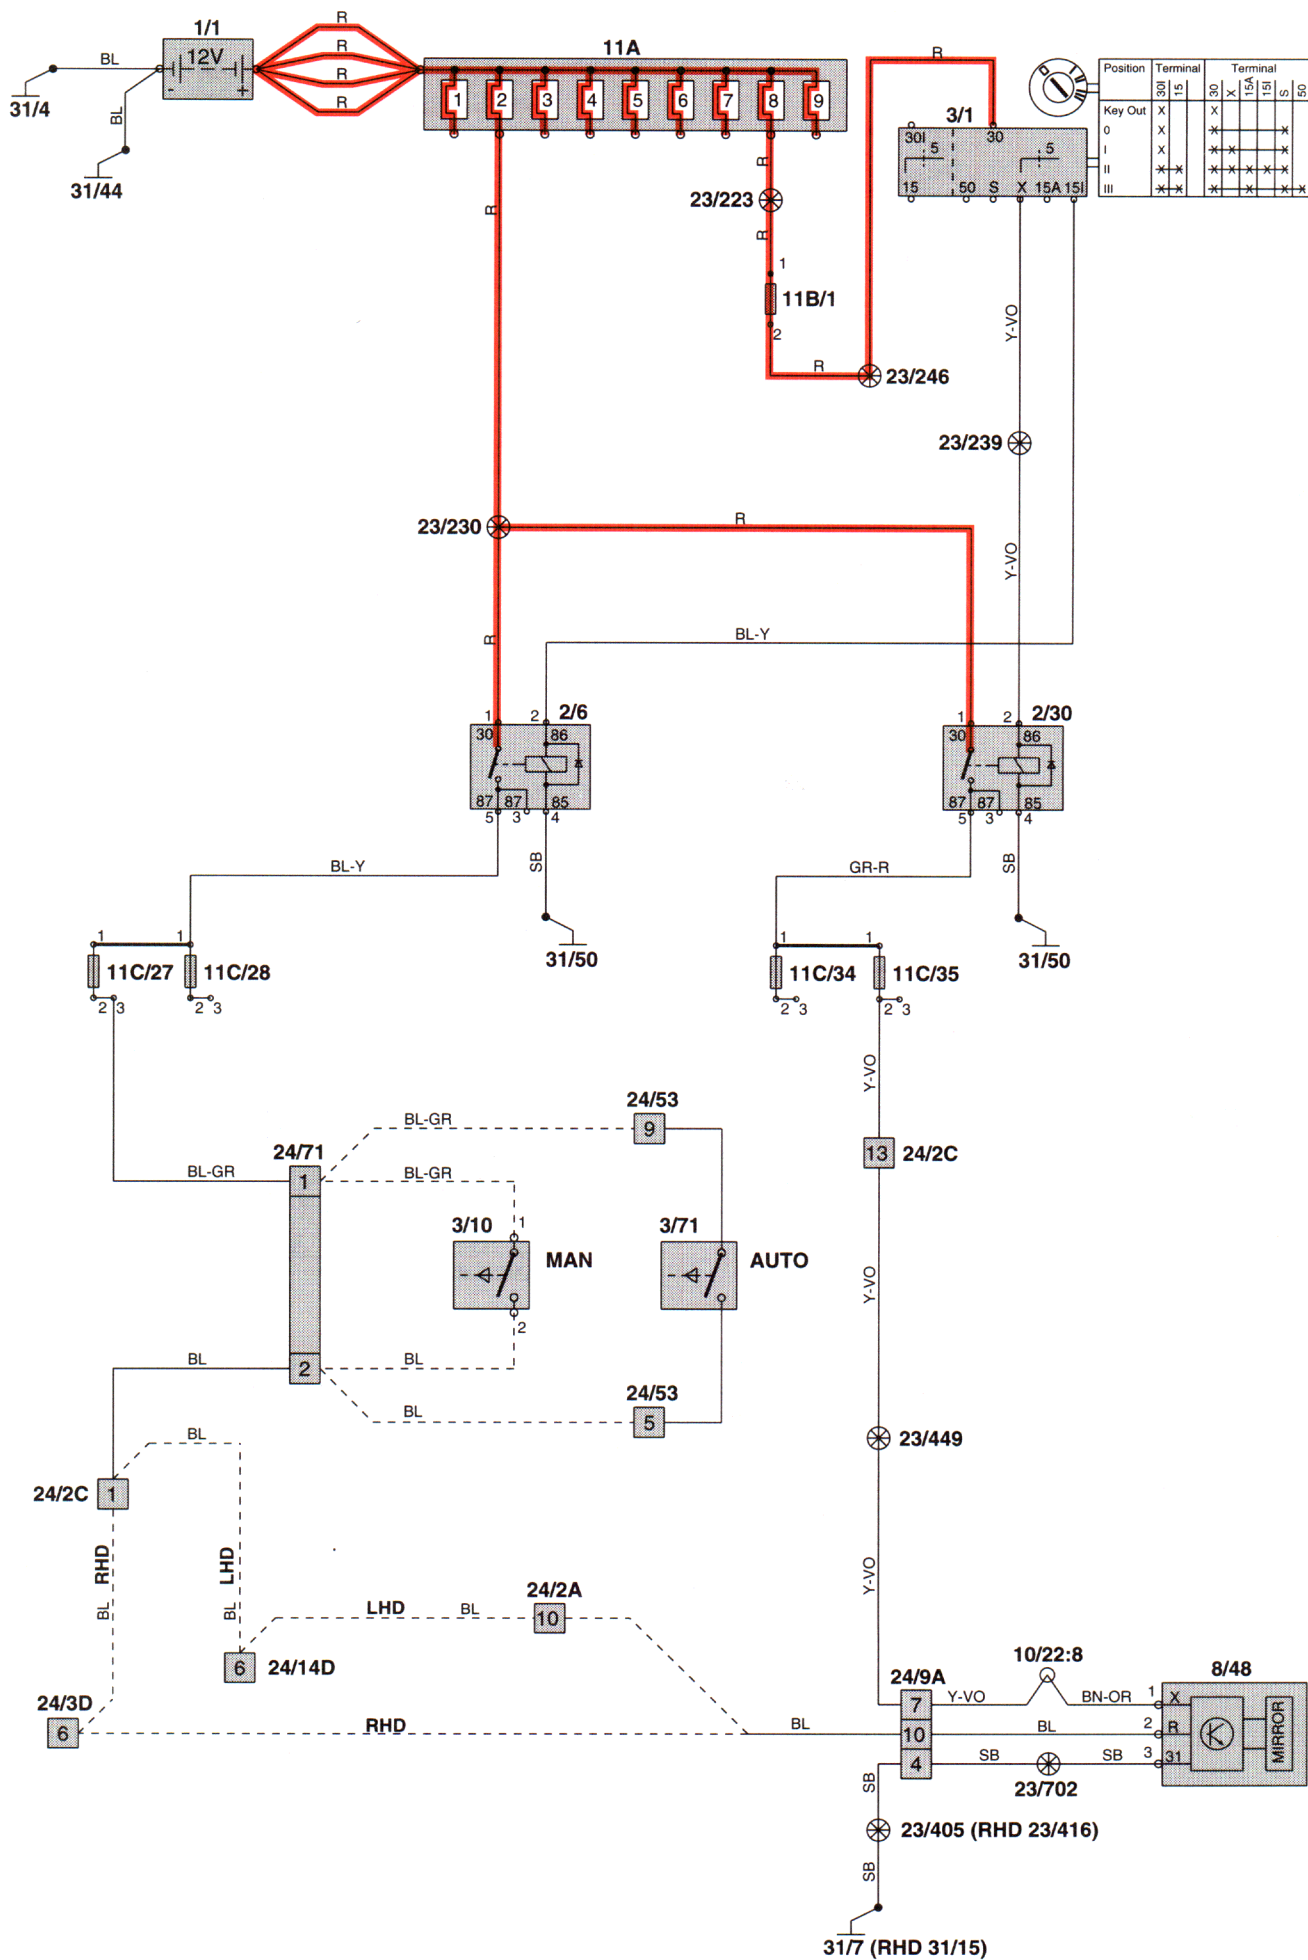

Component list

1/1	Battery	3/91	Heated seat front left switch
2/1	Main lighting relay with bulb failure warning sensor	3/92	Heated seat front right switch
2/2	Fog light relay	3/95	TRACS switch
2/4	Windshield wiper intermittent relay	3/97	Power window switch driver's door
2/5	Seat belt reminder / key warning relay	3/99	Front fog lamps switch
2/6	Overload relay 15l-supply	3/100	Lock unit driver door
2/11	Engine cooling fan relay	3/109	Trunk lid / fuel tank filler cover switch
2/14	Glow plug relay	3/110	Lock unit passenger door
2/16	Tailgate wiper intermittent relay	3/120	Soft-top switch
2/22	A/C relay	3/144	Lock unit, trunk
2/23	Fuel pump relay	3/146	Rear bass speakers switch
2/30	Overload relay X-supply	3/160	Interior lighting switch
2/32	Main relay, fuel system	3/161	Vanity mirror lighting switch left-hand side
2/35	Starter motor relay	3/162	Vanity mirror lighting switch right-hand side
2/43	Heated rear seat relay	3/167	Backrest upper switch
2/44	Relay, heated rear window door mirrors	3/169	Backrest lower switch
2/54	Relay 30-supply cargo compartment	3/171	Retractable power door mirrors switch
2/67	Trunk lid opening relay	3/186	Tensioner strut lock micro-switch
2/74	Relay heating plugs coolant	3/187	Tensioner strut lock micro-switch
2/76	Control module central locking/ alarm	3/188	Micro-switch tensioner strut
2/77	Relay alarm horn	3/189	Micro-switch locking arm
2/99	Relay left-hand side window lift mechanism	3/190	Micro-switch locking arm
2/100	Relay right-hand side window lift mechanism	3/191	Micro-switch cover panel locking
2/134	Electronic throttle module (ETM) relay	3/192	Micro-switch cover panel locking
3/1	Ignition switch	4/3	Control module, cruise control
3/2	Light switch	4/4	Rheostat
3/3	Turn signal/high and low beam switch	4/9	SRS control module
3/4	Electrical switch module, cruise control	4/16	ABS control module
3/6	Hazard warning signal flasher switch	4/19	Remote control central locking / anti-theft alarm
3/8	Electrically heated rear window/door mirrors switch	4/22	Immobilizer
3/9	Stop (brake) light switch	4/28	Transmission control module (TCM)
3/10	Back-up (reversing) light switch	4/29	Control module seat
3/12	Windshield wiper and washer switch	4/30	Control module, ECC
3/13	Tailgate wiper and washer switch	4/31	Blower fan control module
3/20	Power window switch front passenger door	4/33	Control module, power sunroof
3/25	Power sun roof switch	4/44	Ignition Discharge Module (power stage) and ignition coil
3/35	Trunk lid handle switch	4/46	Engine control module (ECM)
3/37	Horn switches	4/50	Electronic throttle module (ETM)
3/38	Brake pedal switch	4/59	Soft-top control module
3/39	Clutch pedal switch	4/60	Power windows control module
3/41	Door mirrors switch	4/61	Control module roll-over bar
3/44	Seat belt lock switch, driver's seat	4/76	Remote control module garage door opener
3/45	Seat belt lock switch, passenger seat		
3/47	Parking brake switch	5/1	Combined instrument panel (CDM)
3/57	Climate control		
3/58	Fog tail lamp switch	6/1	Windshield wiper motor
3/59	Beam height control	6/2	Washer motor, front
3/61	Controls, trip computer	6/3	Right headlamp washer motor
3/62	Alarm switch, hood	6/4	Left headlamp washer motor
3/63	Mode selector AW 50-42	6/9	Power window motor driver's door
3/65	Electrically heated rear seat switch	6/11	Power window motor front passenger door
3/71	Gear-shift position sensor	6/13	Power door mirror driver side
3/72	Kickdown switch, throttle control	6/14	Power door mirror passenger side
3/76	Lock unit, left rear door	6/15	Power sunroof motor
3/77	Lock unit, right rear door	6/24	Cruise control vacuum pump
3/78	Lock unit, trunk	6/25	Starter motor
3/84	Cargo compartment fans switch		
3/85	Power window switch left rear door		
3/86	Power window switch, right rear door		
3/89	Control unit seat		

There are a number of abbreviations in the book. These are explained below.

Countries/Markets:

A	= Austria
AUS	= Australia
B	= Belgium
CDN	= Canada
CH	= Switzerland
D	= Germany
DK	= Denmark
E	= Spain
EU/OS	= Markets outside USA and Canada:
FIN	= Finland
GB	= Great Britain
J	= Japan
KOR	= Korea
N	= Norway
NL	= Holland
S	= Sweden
WEU	= Western Europe

Colors:

BL	= Blue
BN	= Brown
GN	= Green
GR	= Gray
OR	= Orange
P	= Pink
R	= Red
SB	= Black
VO	= Violet
W	= White
Y	= Yellow

Other

ALTER	= Alternatively
AUTO	= Automatic transmission
AWD	= Four wheel drive
CAN	= CAN-communication
CONV	= C70 convertible
COUP	= C70 coupé
DENSO	= 5 cylinders / 20 valves without turbocharger (TC)
EARLY	= Early type
EXC	= Exclusive
FENIX	= 5 cylinders / 10 valves
IMMO	= Immobilizer
LATE	= Late type
LH	= Left-hand side
LHD	= Left-hand drive (LHD)
MAN	= Manual transmission
MSA	= Diesel
OTHERS	= Other
ME7	= 5 cylinders / 20 valves with turbocharger (TC)
RH	= Right-hand side
RHD	= Right-hand drive
W/O	= Without

How to use the diagrams

A. Component designation

Each component has a component designation. It consists of a type number and a component number.

There is a list of component designations at the end of the book. The names of the components can be seen using the illustrations.

B. Type number


The first section of the component designation gives the type of component, for example electrical switch, electric motor etc.

Type numbers:

- 1 Battery
- 2 Relay
- 3 Electrical switch
- 4 Control module
- 5 Combined instrument panel
- 6 Electric motor
- 7 Sensor
- 8 Actuator
- 9 Heater element
- 10 Lamp
- 11 Fuse
- 15 Distribution rail, power supply
- 16 Radio
- 17 Service/diagnosis
- 18 Contact Reel
- 19 Gauge
- 20 Ignition component/resistor
- 23 Junction point
- 24 Connector
- 31 Ground terminal
- 34 Terminal block / -bracket
- C Connector

C. Component number

The first section of the component designation gives the specific component, for example electrical switch, central locking motor, etc.

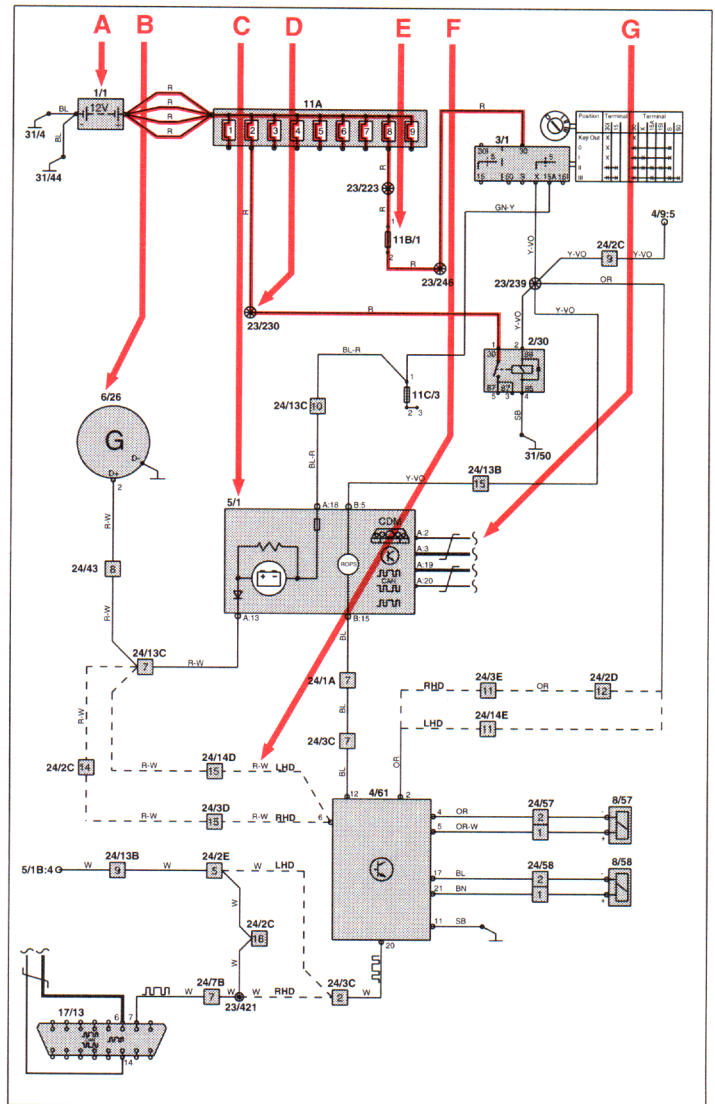


Explanation of symbols






- = System voltage
- = Ground terminal
- = Screened cable
- = Junction point
- = Twinned cables
- = Electrical connection
- = No electrical connection
- = Variant
- = CAN-communication
- = CAN high signal (CAN H)
- = CAN low signal (CAN L)

Fuses

LHD

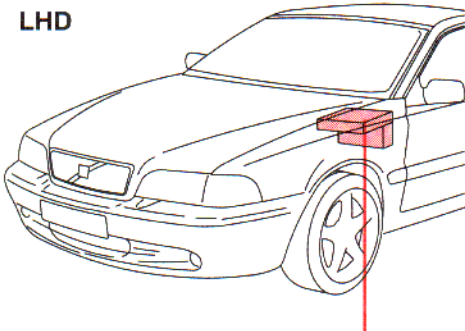


RHD

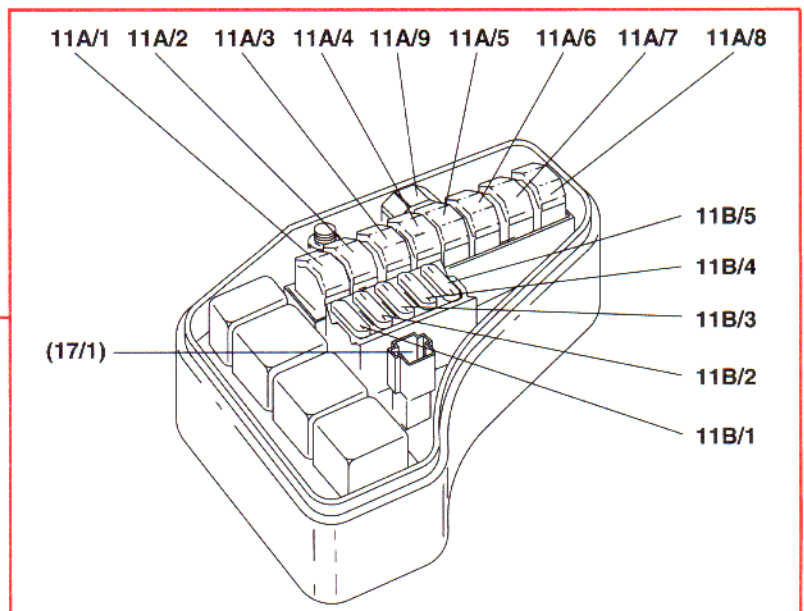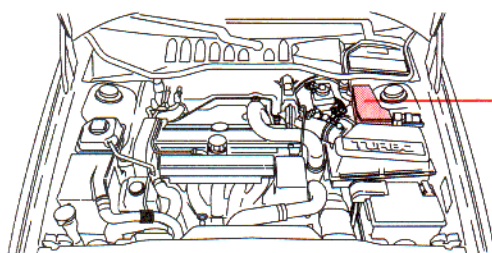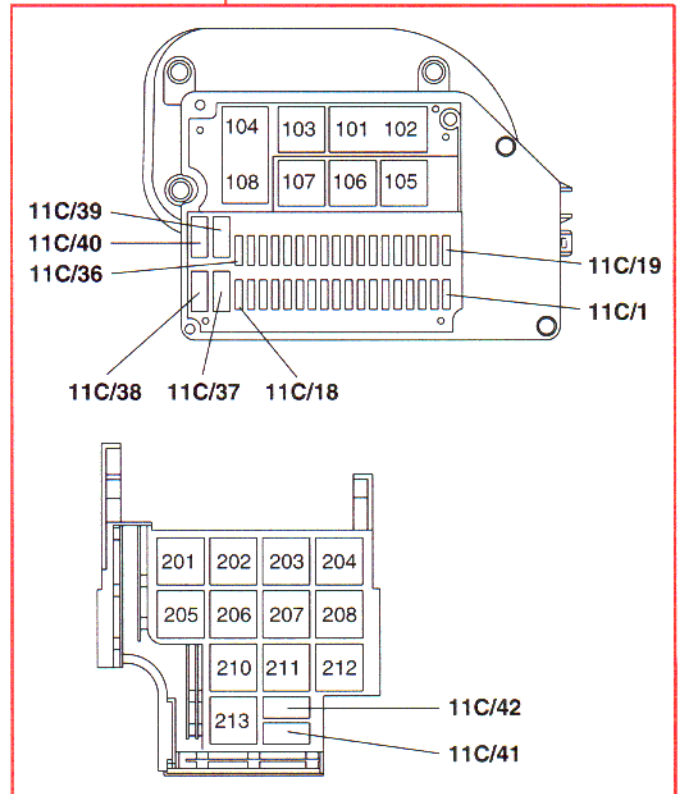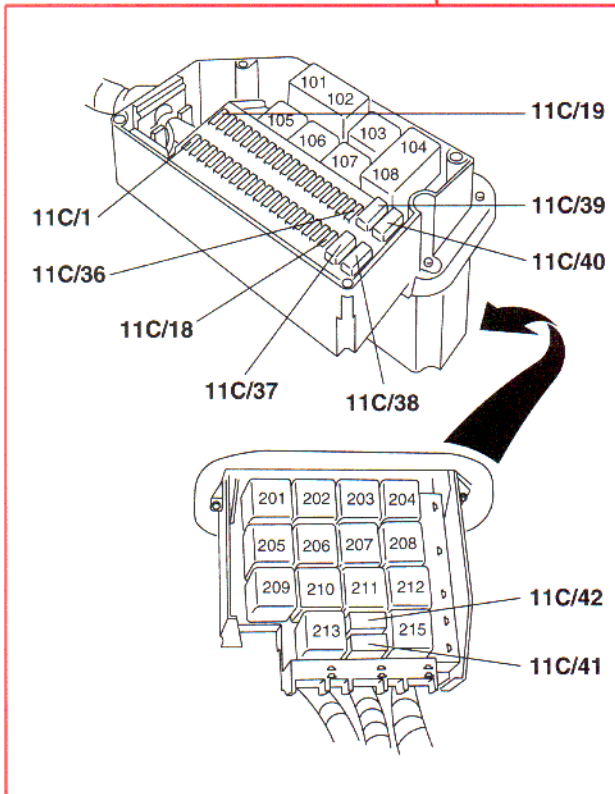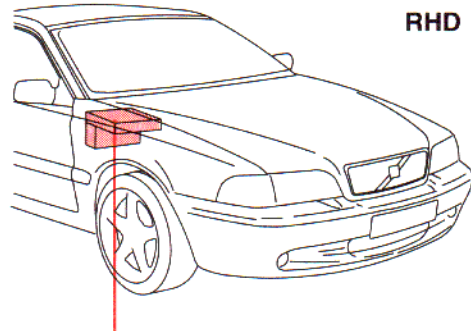




Rails in the central electrical unit

- 15/4 15I-rail
- 15/8 X-rail
- 31/50 Ground connection rail (power ground)
- 31/51 Ground connection rail (signal ground)

LHD

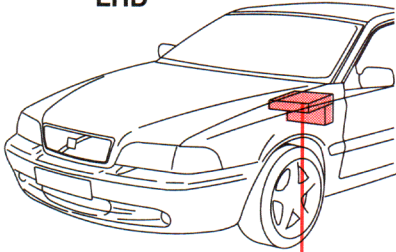


RHD

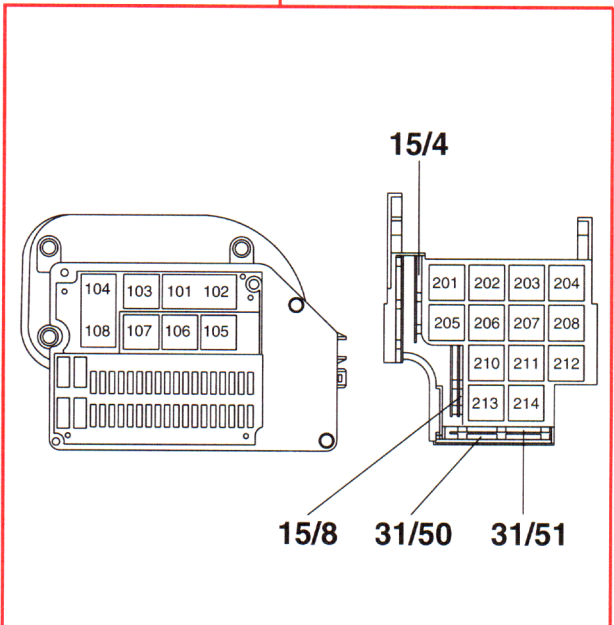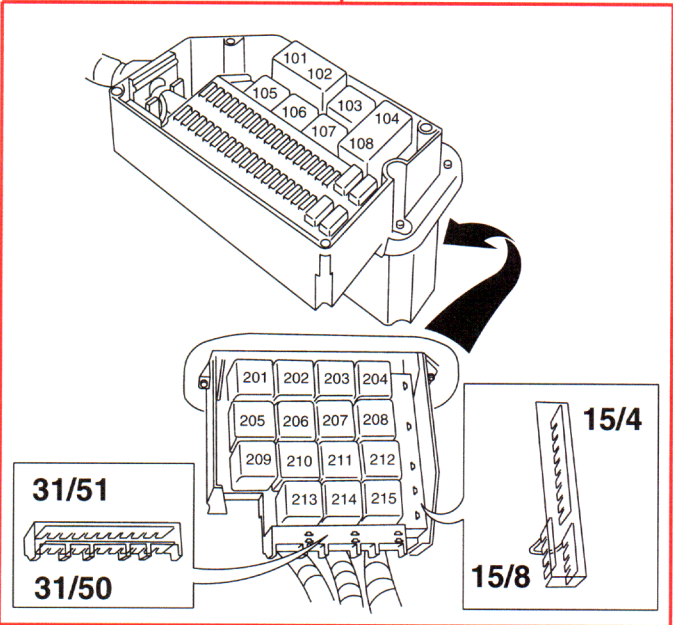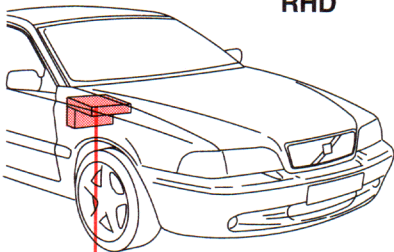


Ignition switch


3/1

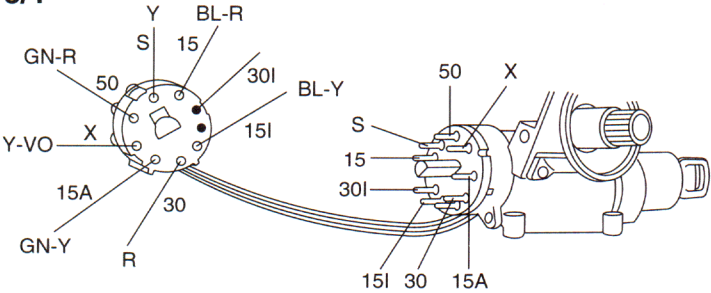


Position	Terminal		Terminal			
	30I	15	30	X	15A	S
Key Out	X		X			
0	X		X			X
I	X		X	X		X
II	X	X	X	X	X	X
III	X	X	X	X	X	X

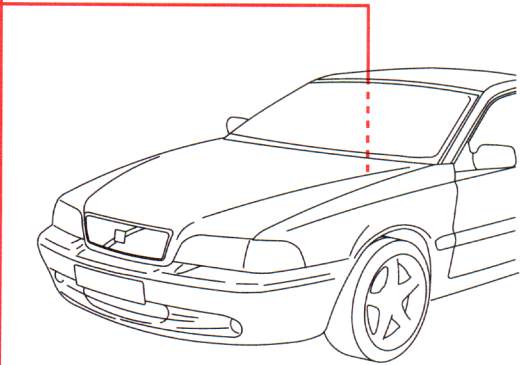


Relays

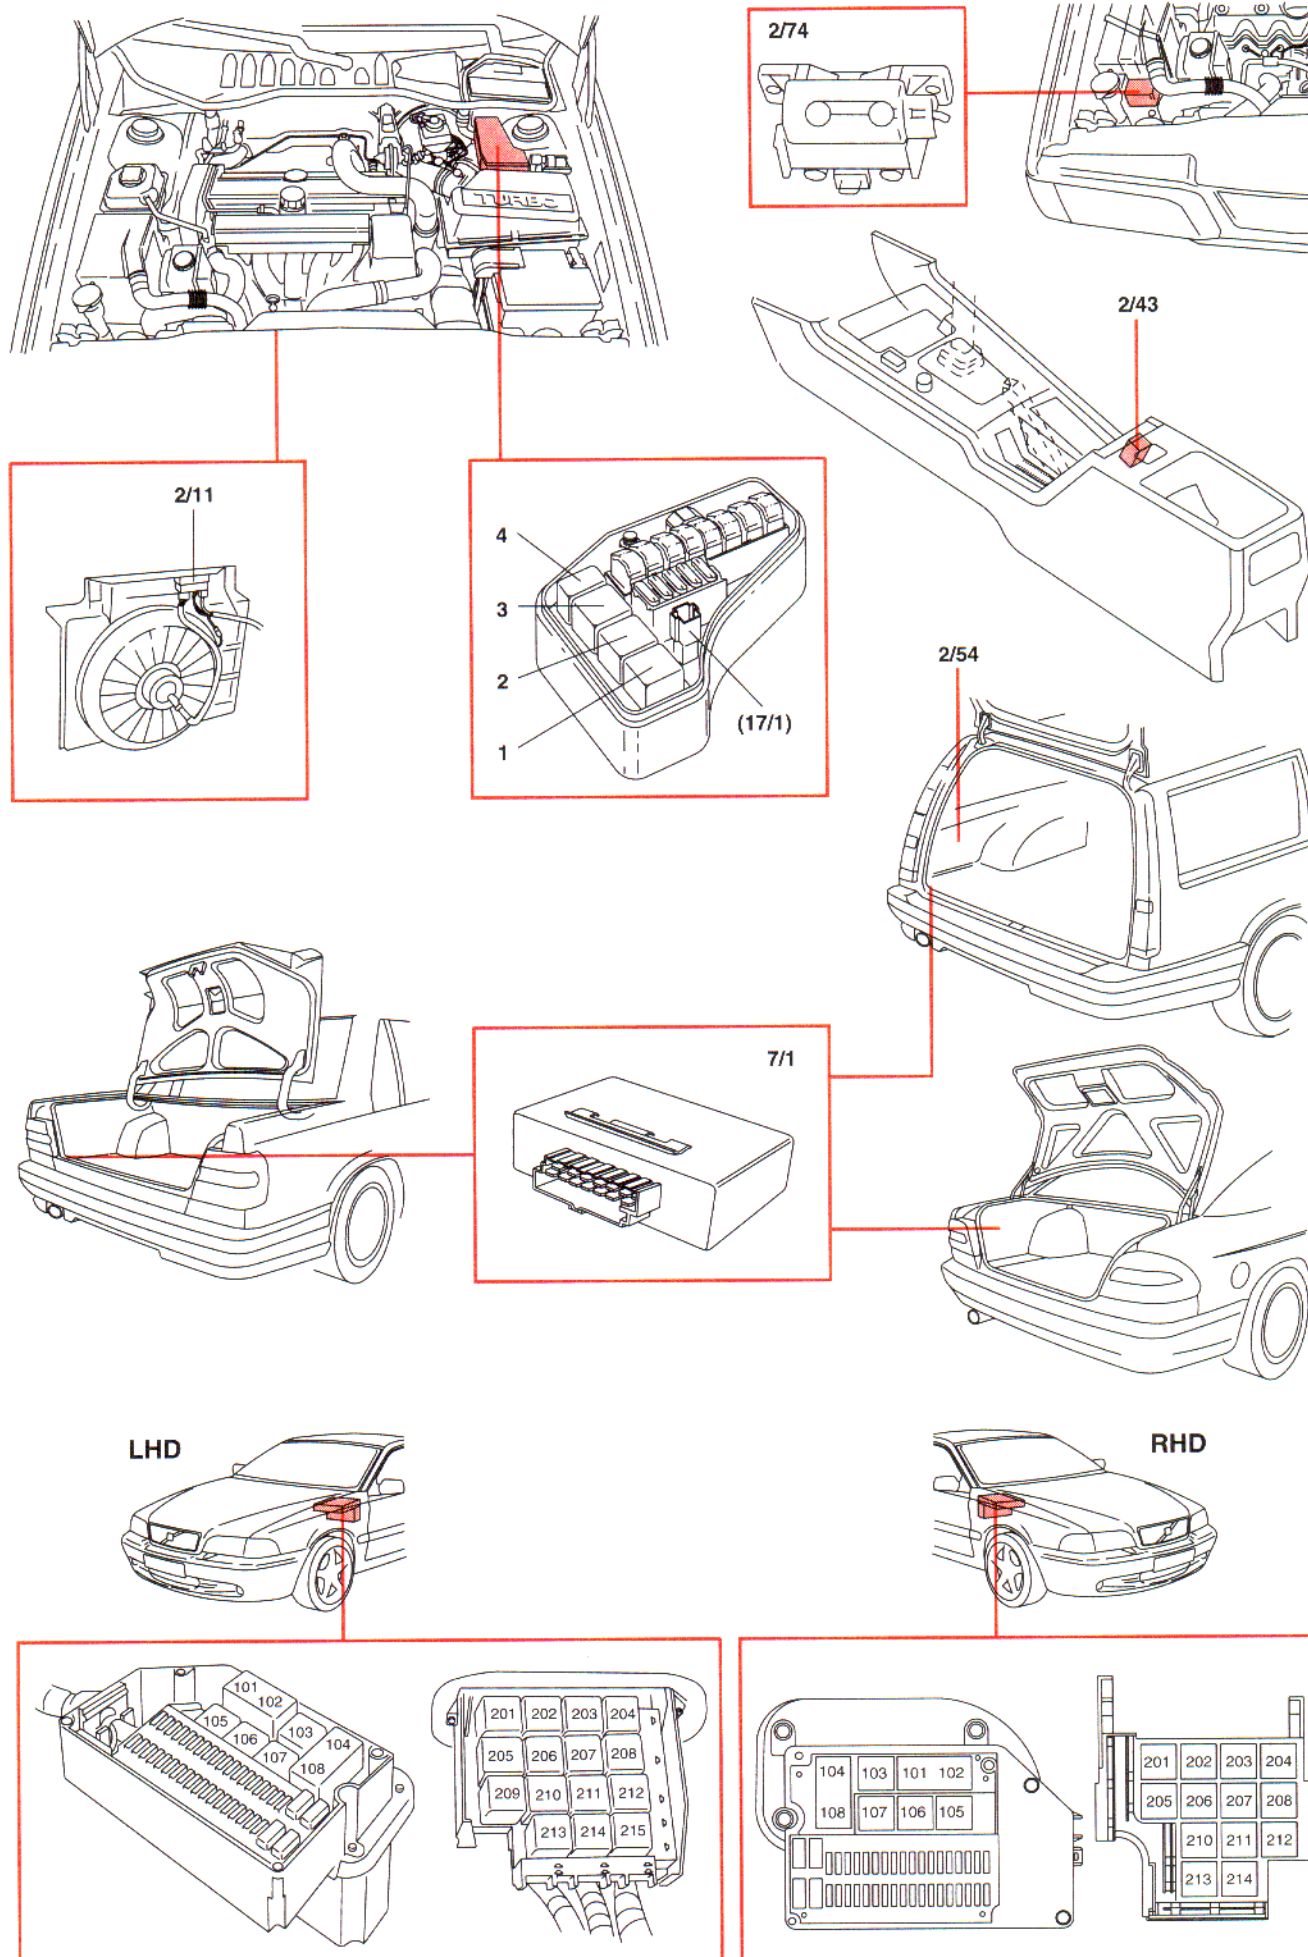


31/4




31/5



31/7
CONV

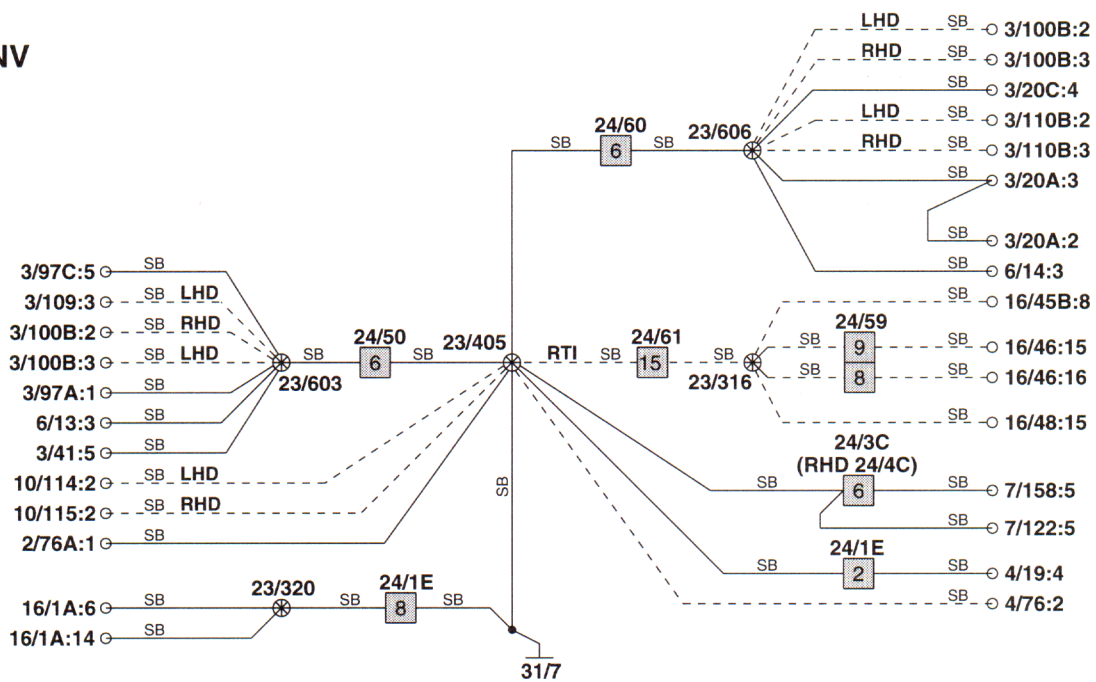


31/7
COUP

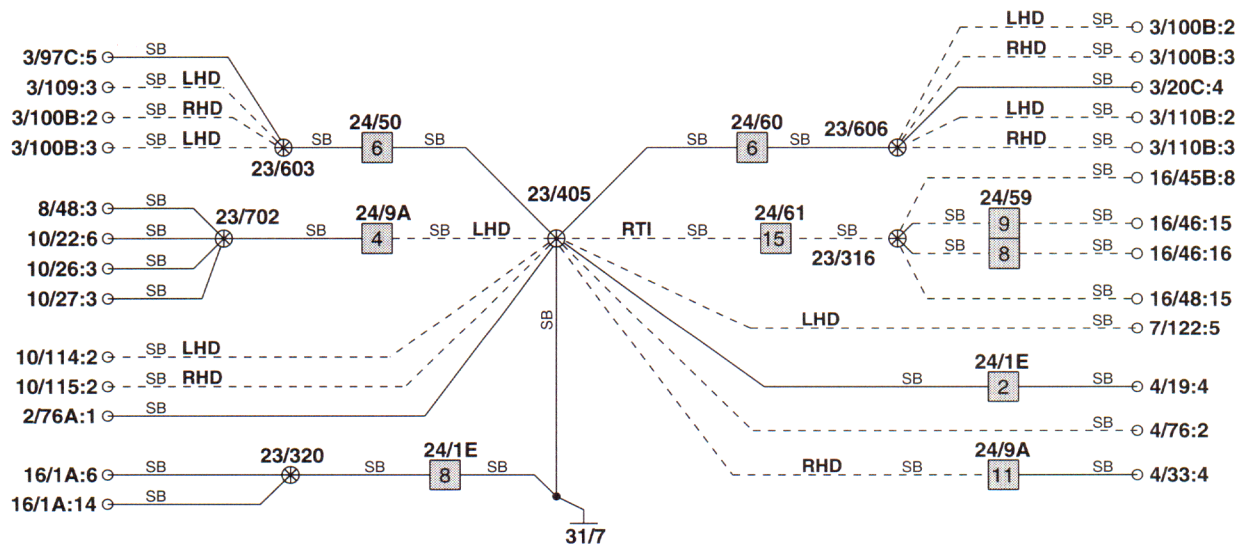


Electrical distribution


Fenix 5.2

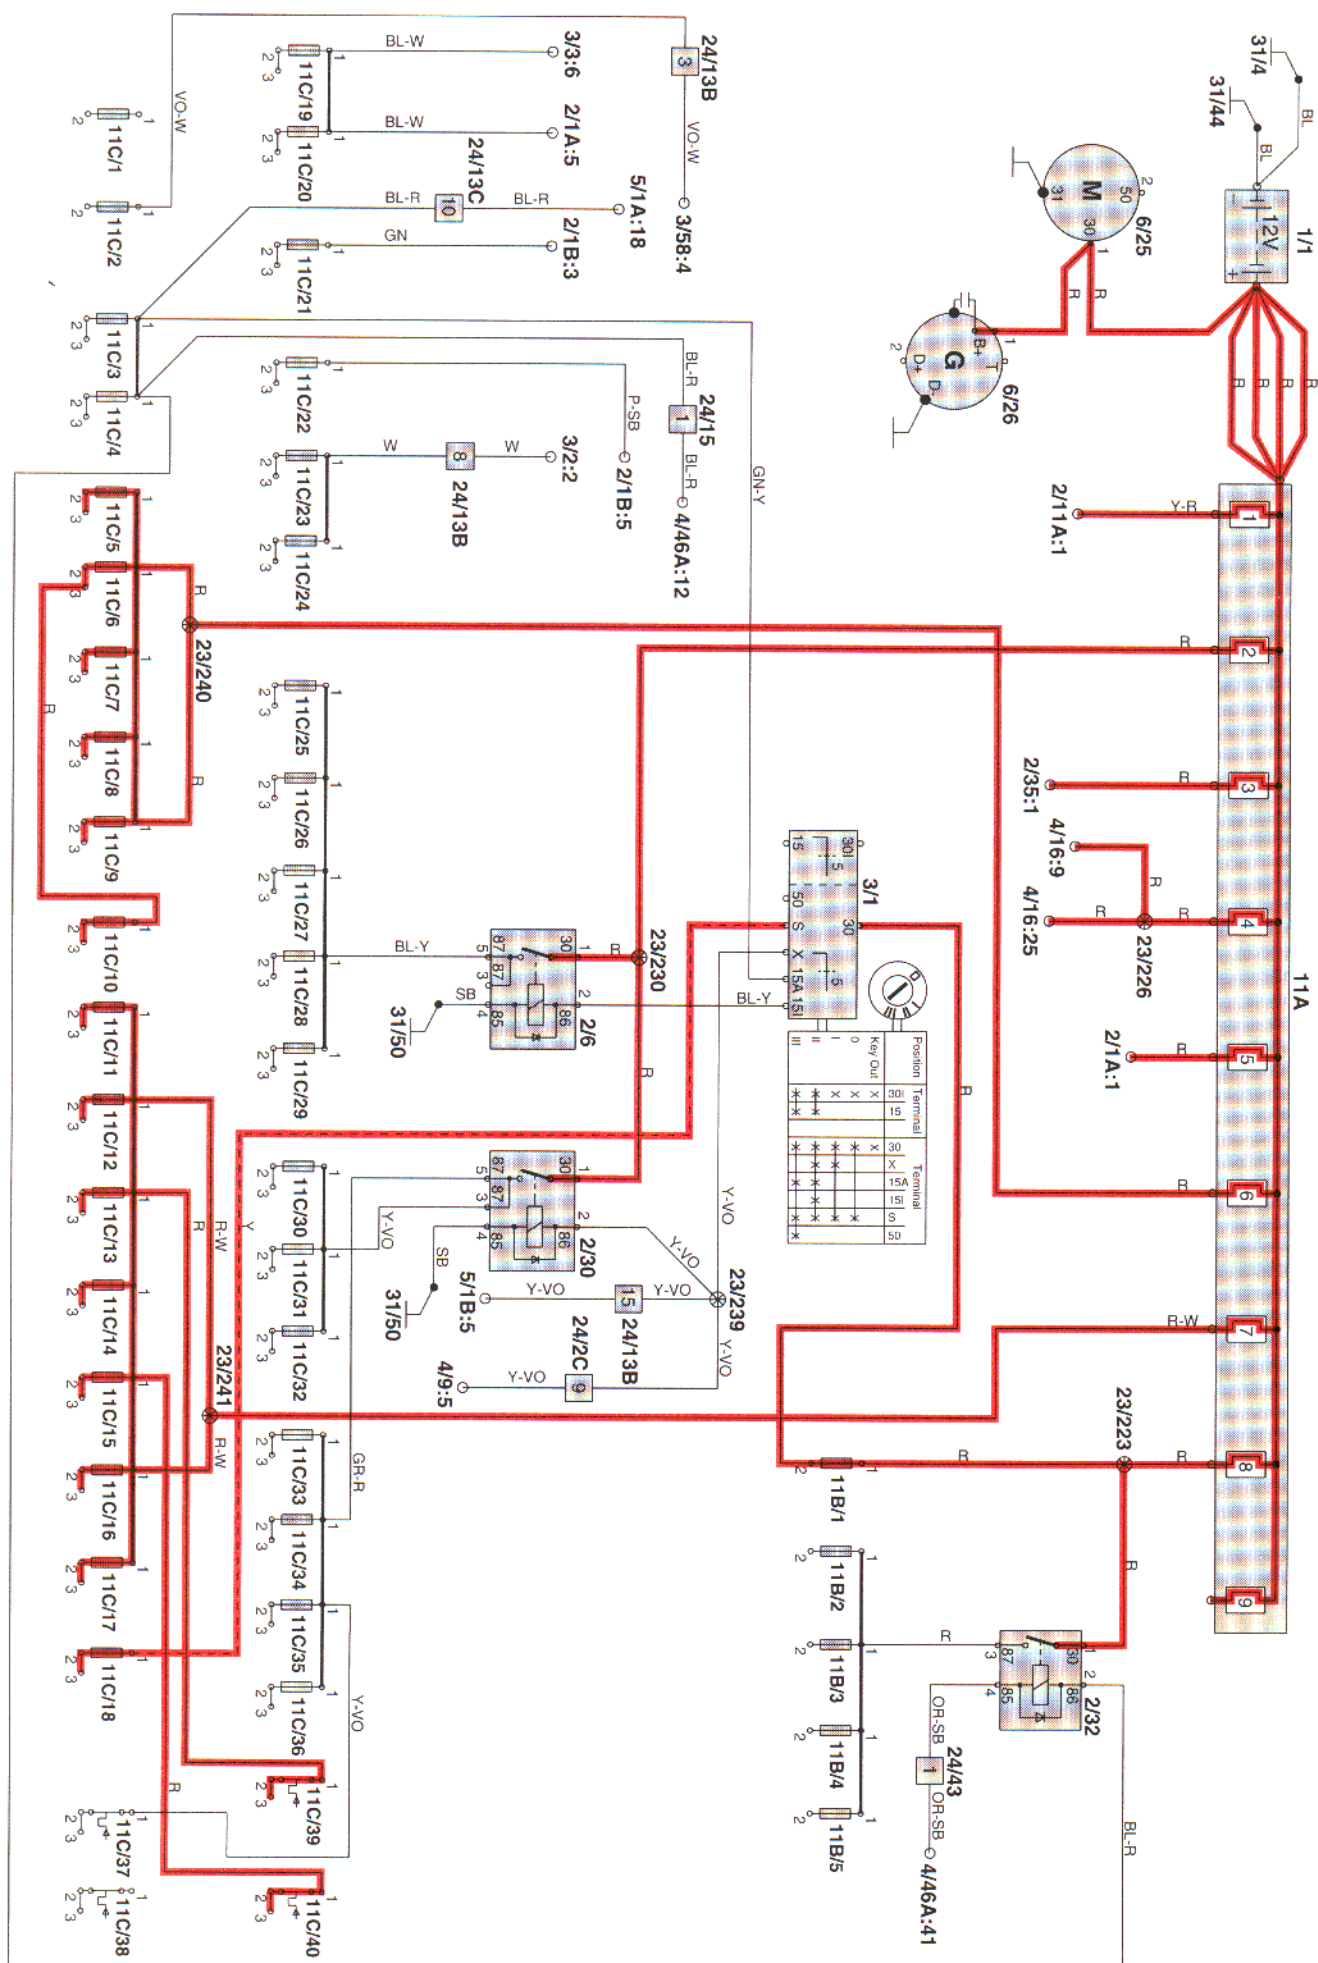


Electrical distribution Denso, ME7

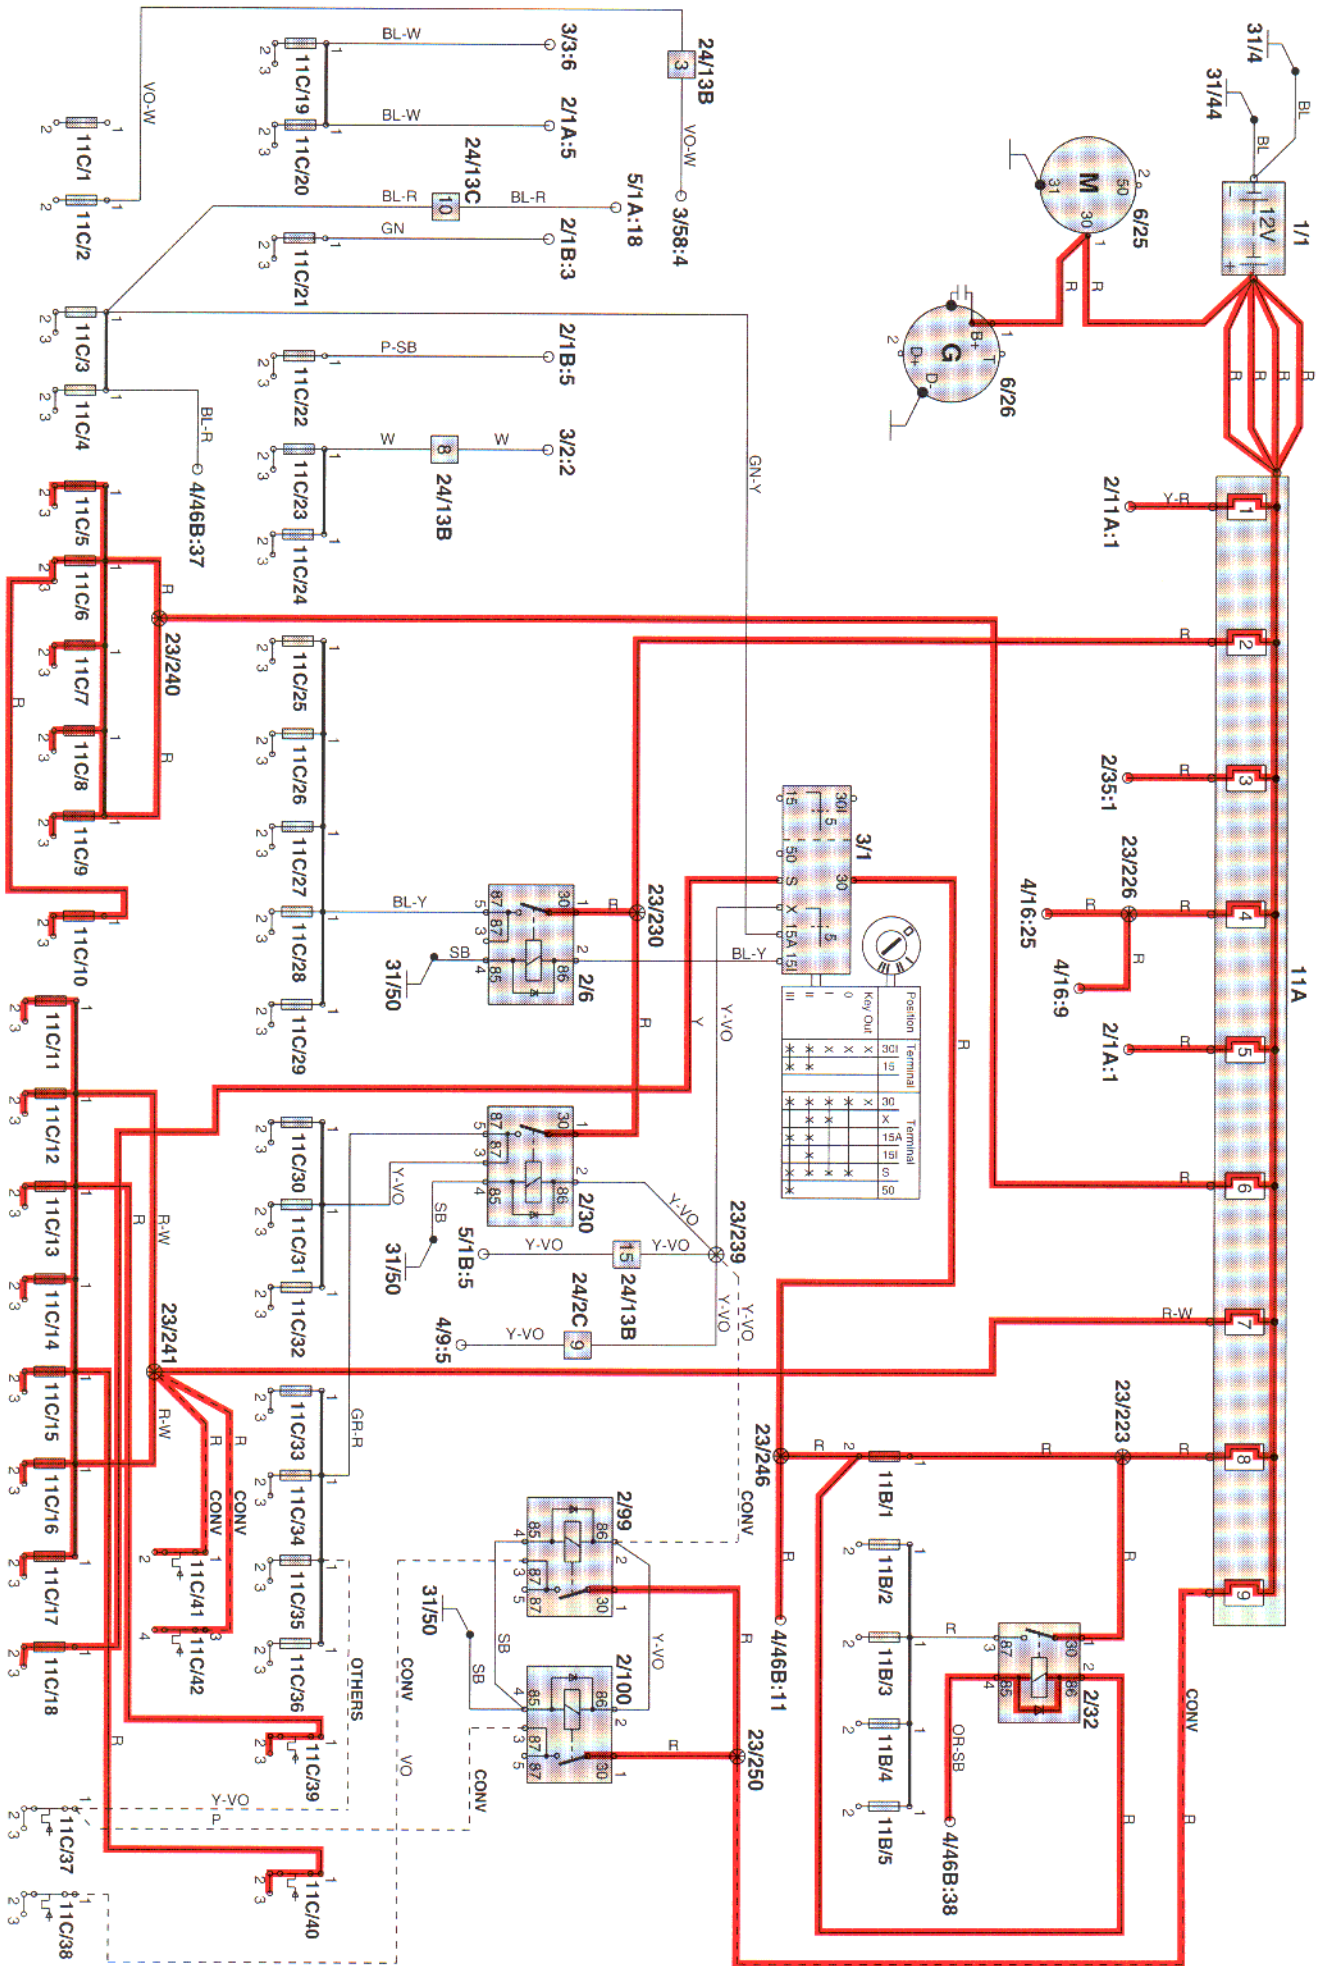

Electrical distribution
MSA 15.7

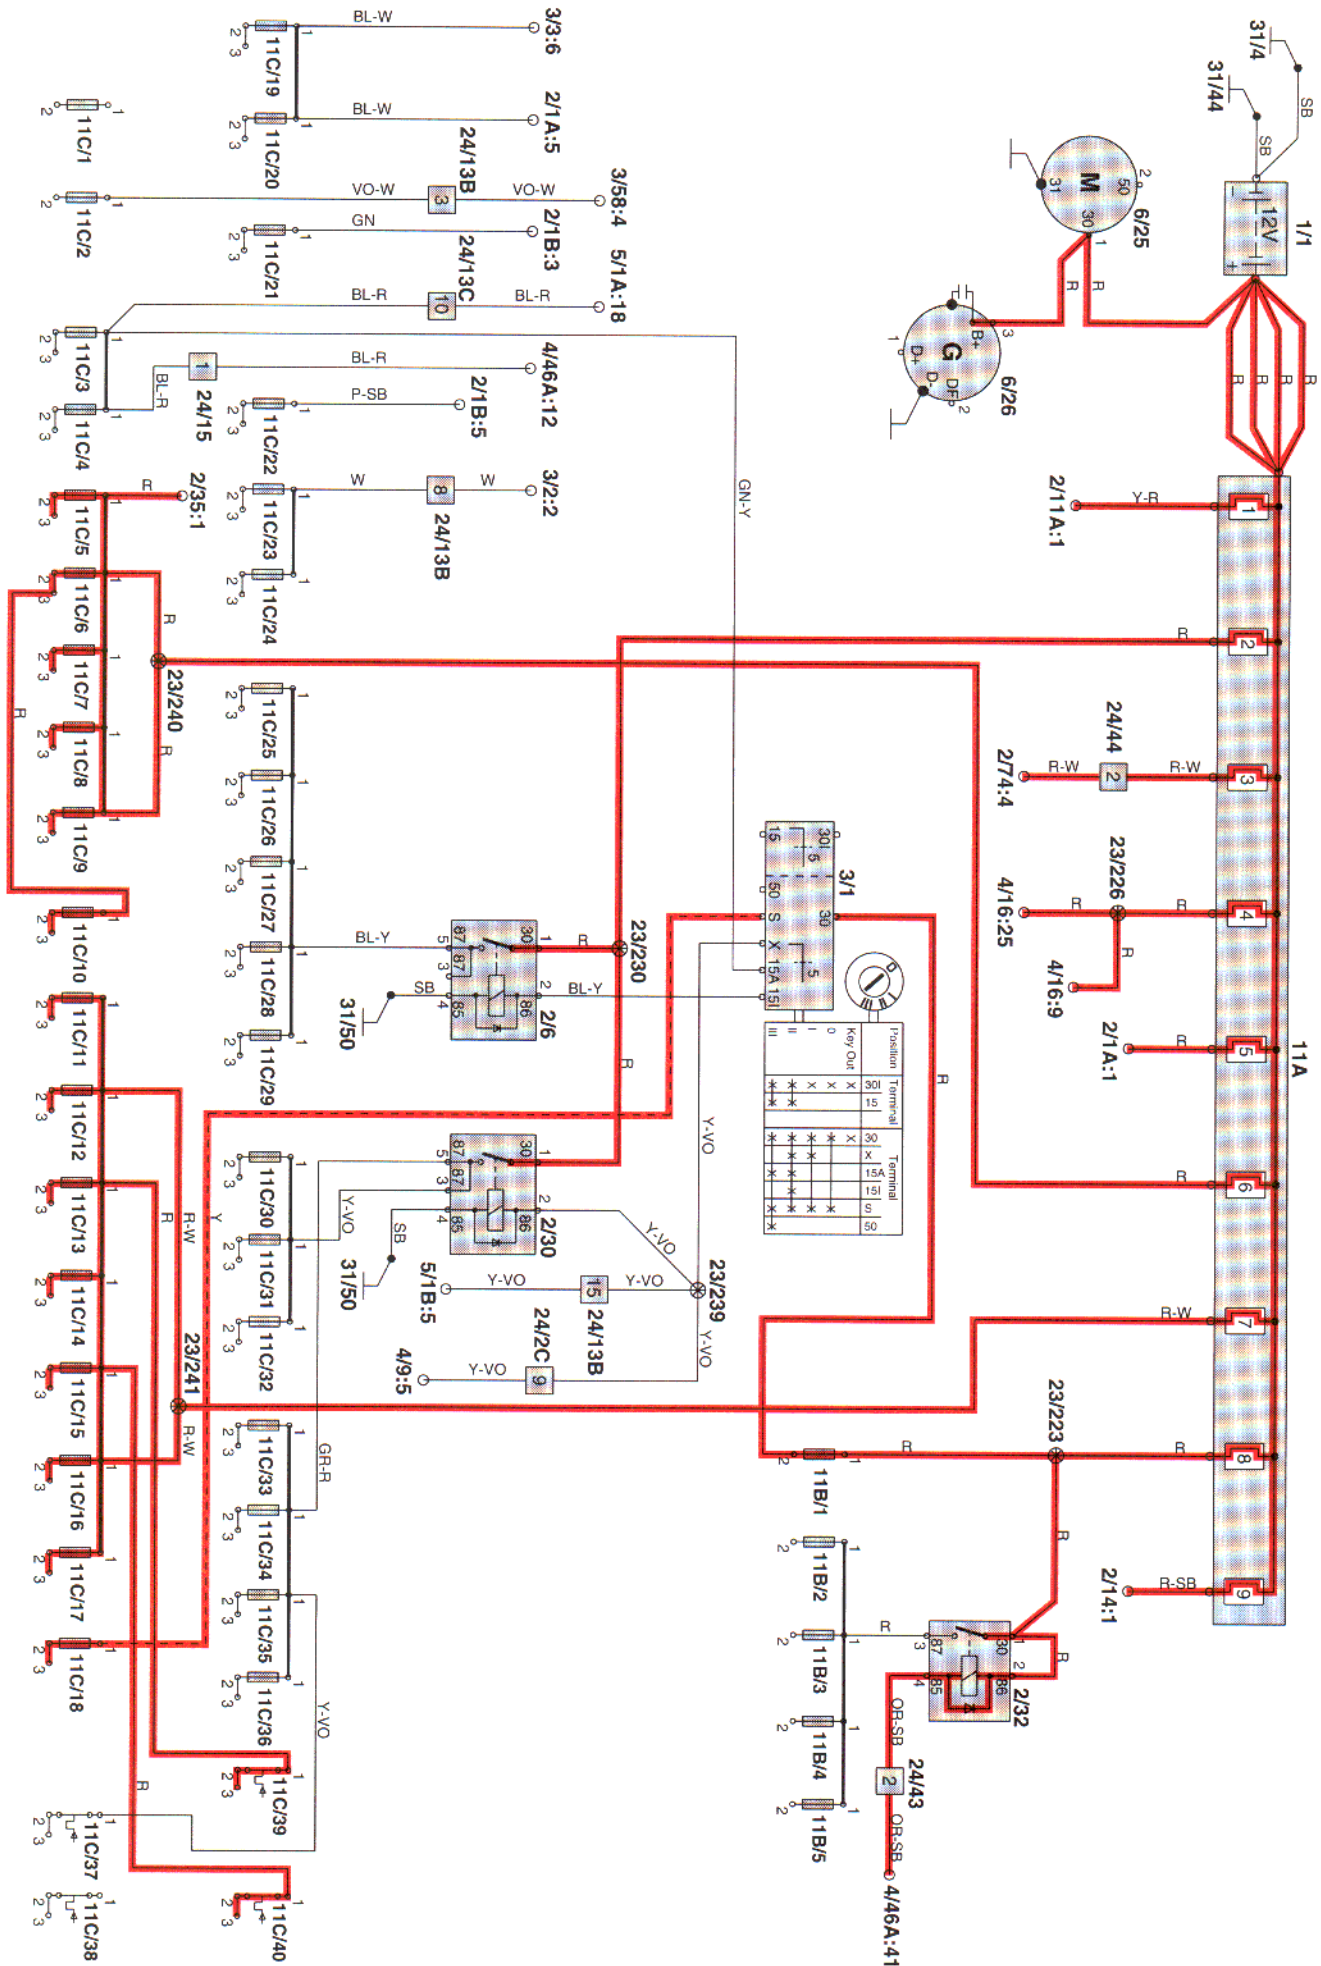


Data communication

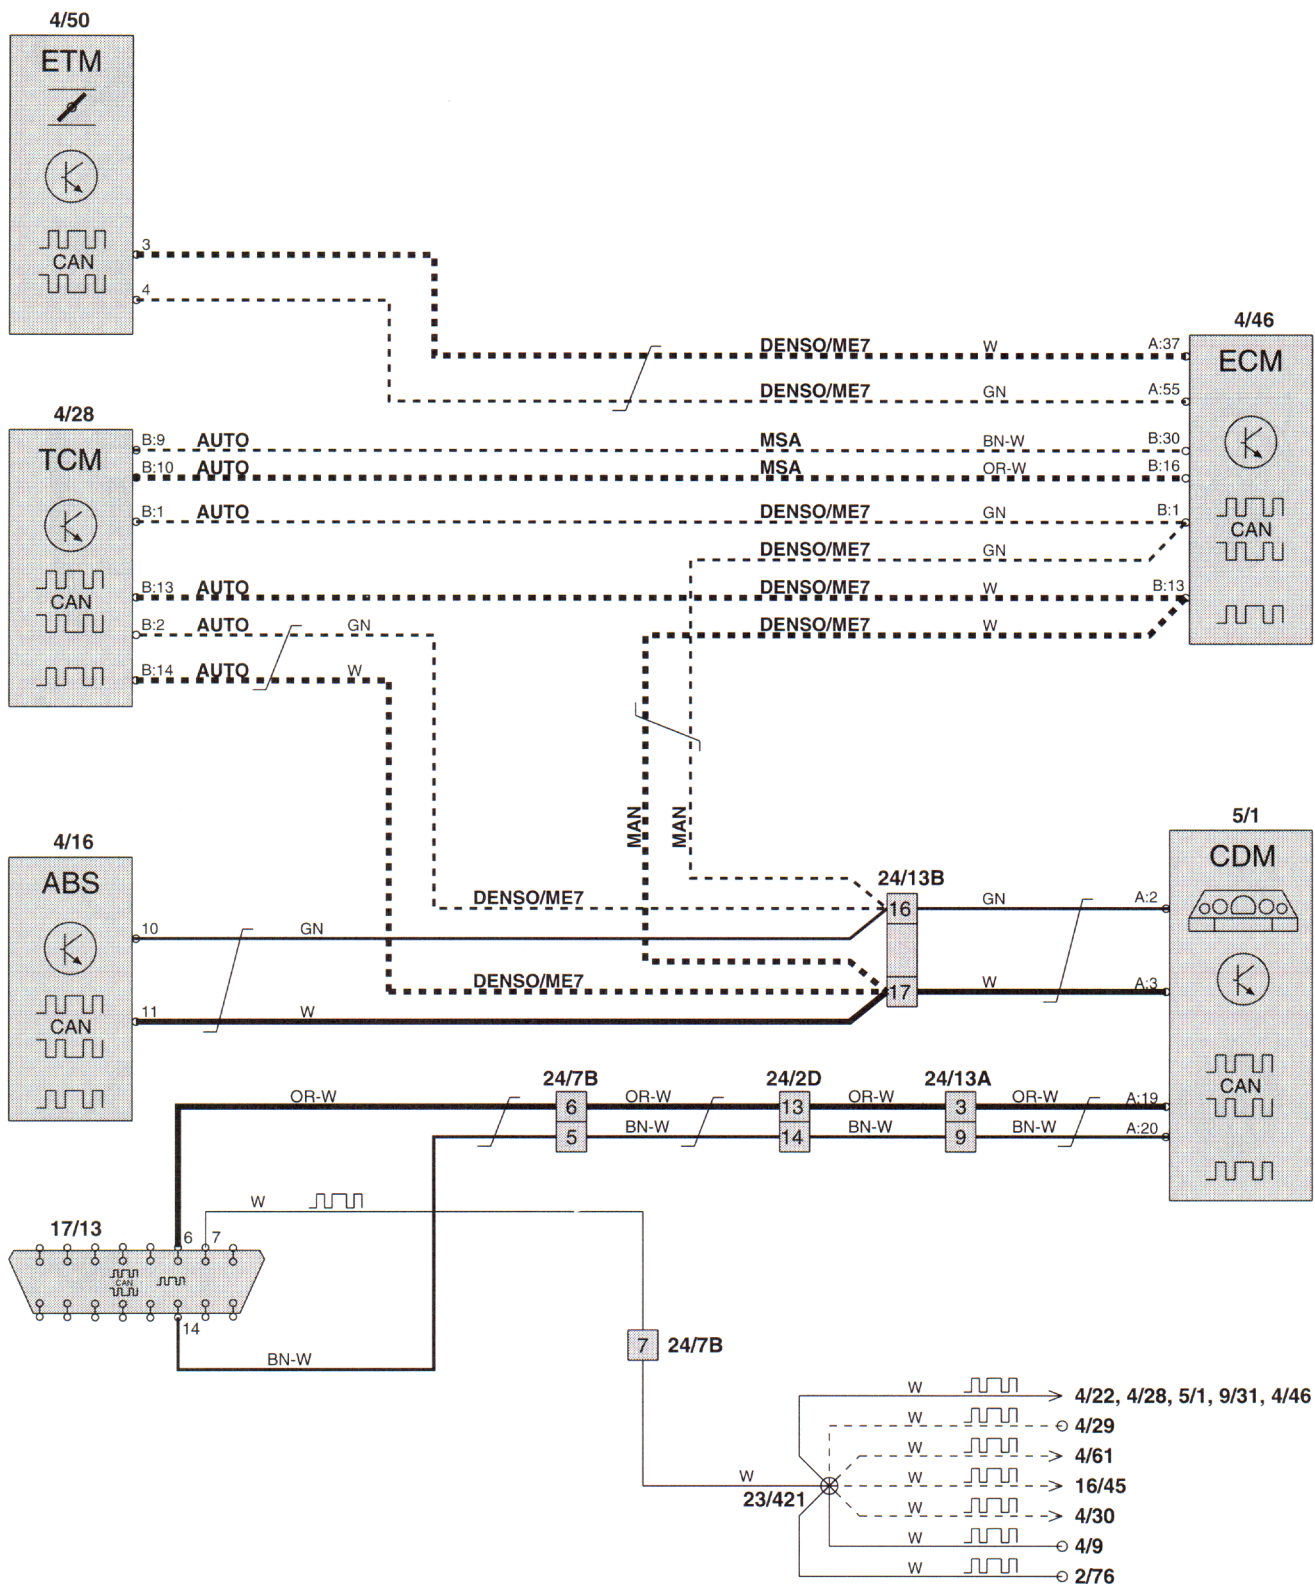

Connector 24/1

24/1A Green 12-pin (male - female) Firewall cable harness -Instrument panel cable harness

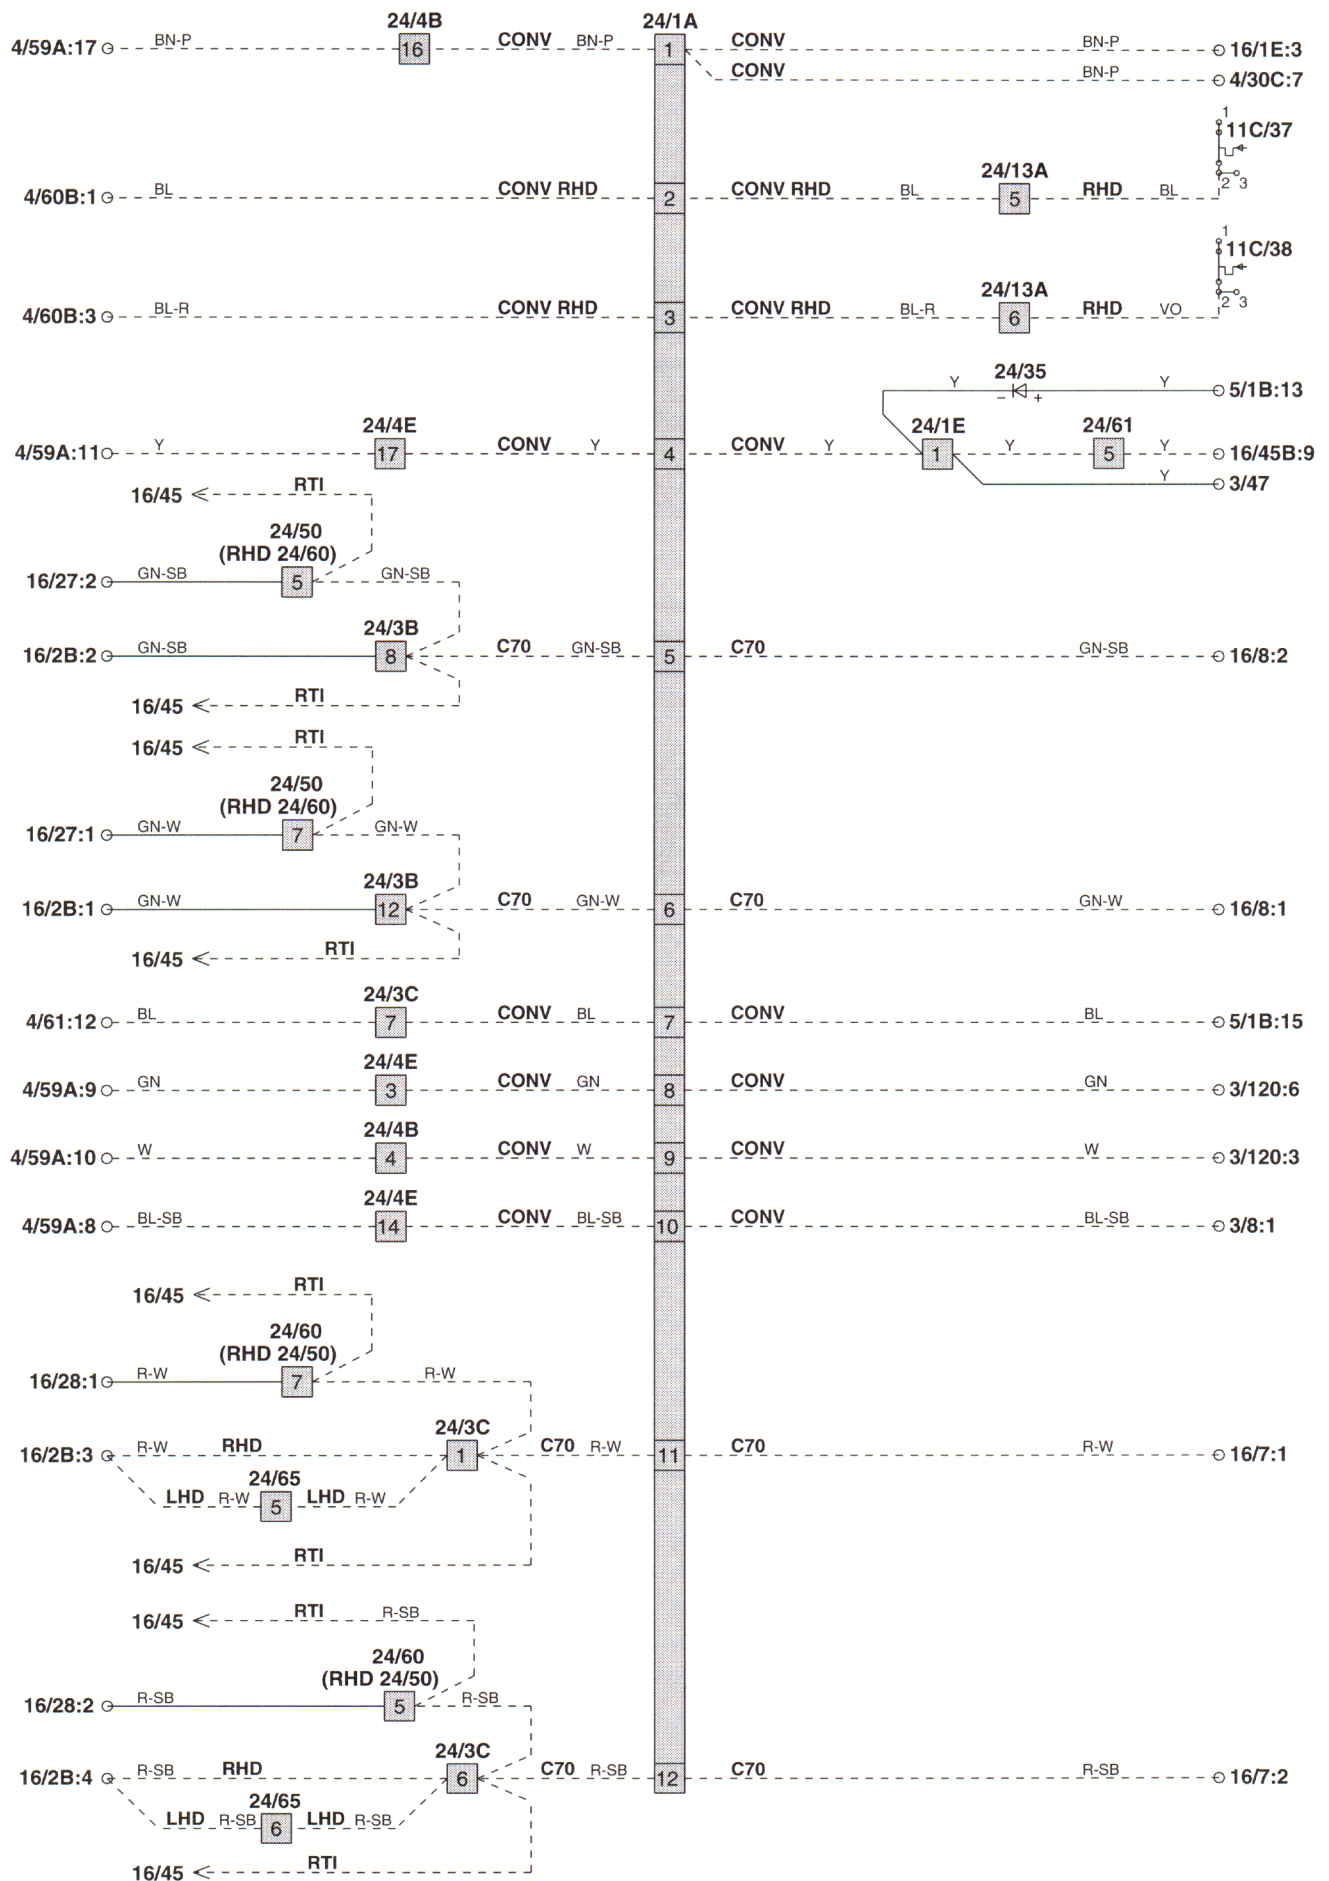

Junction points


23/6 (Engine cable harness)

23/8 (Engine cable harness, FENIX)


23/8 (Engine cable harness, DENSO)

23/8 (Engine cable harness, ME7)


23/6

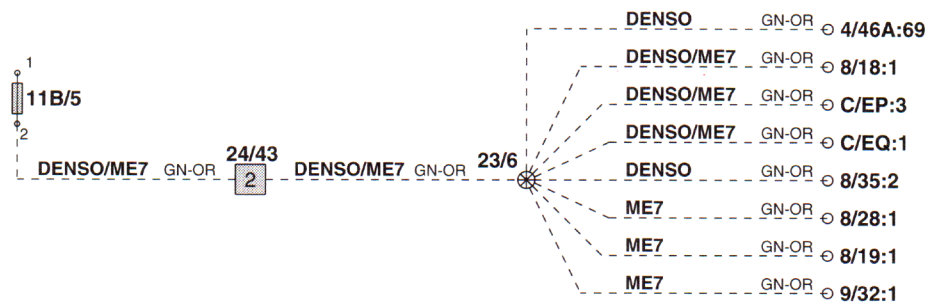


23/8
FENIX

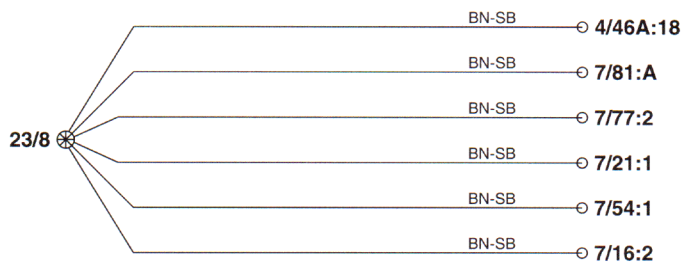

23/8
DENSO

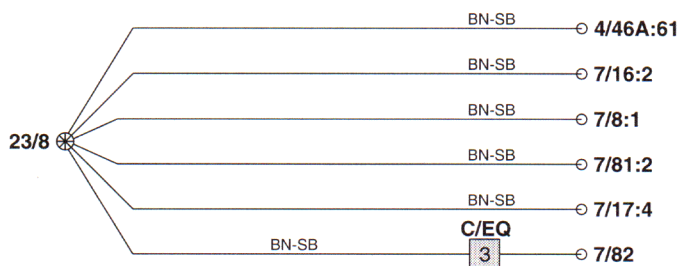


23/8
ME7

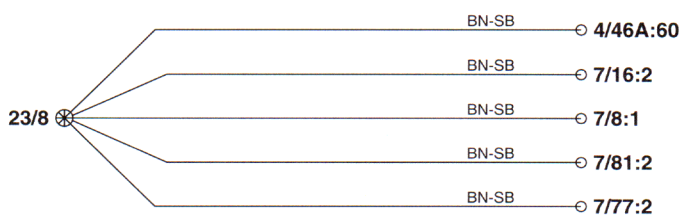


Routing of cable harnesses in the car

Engine compartment cable harness Engine cable harness

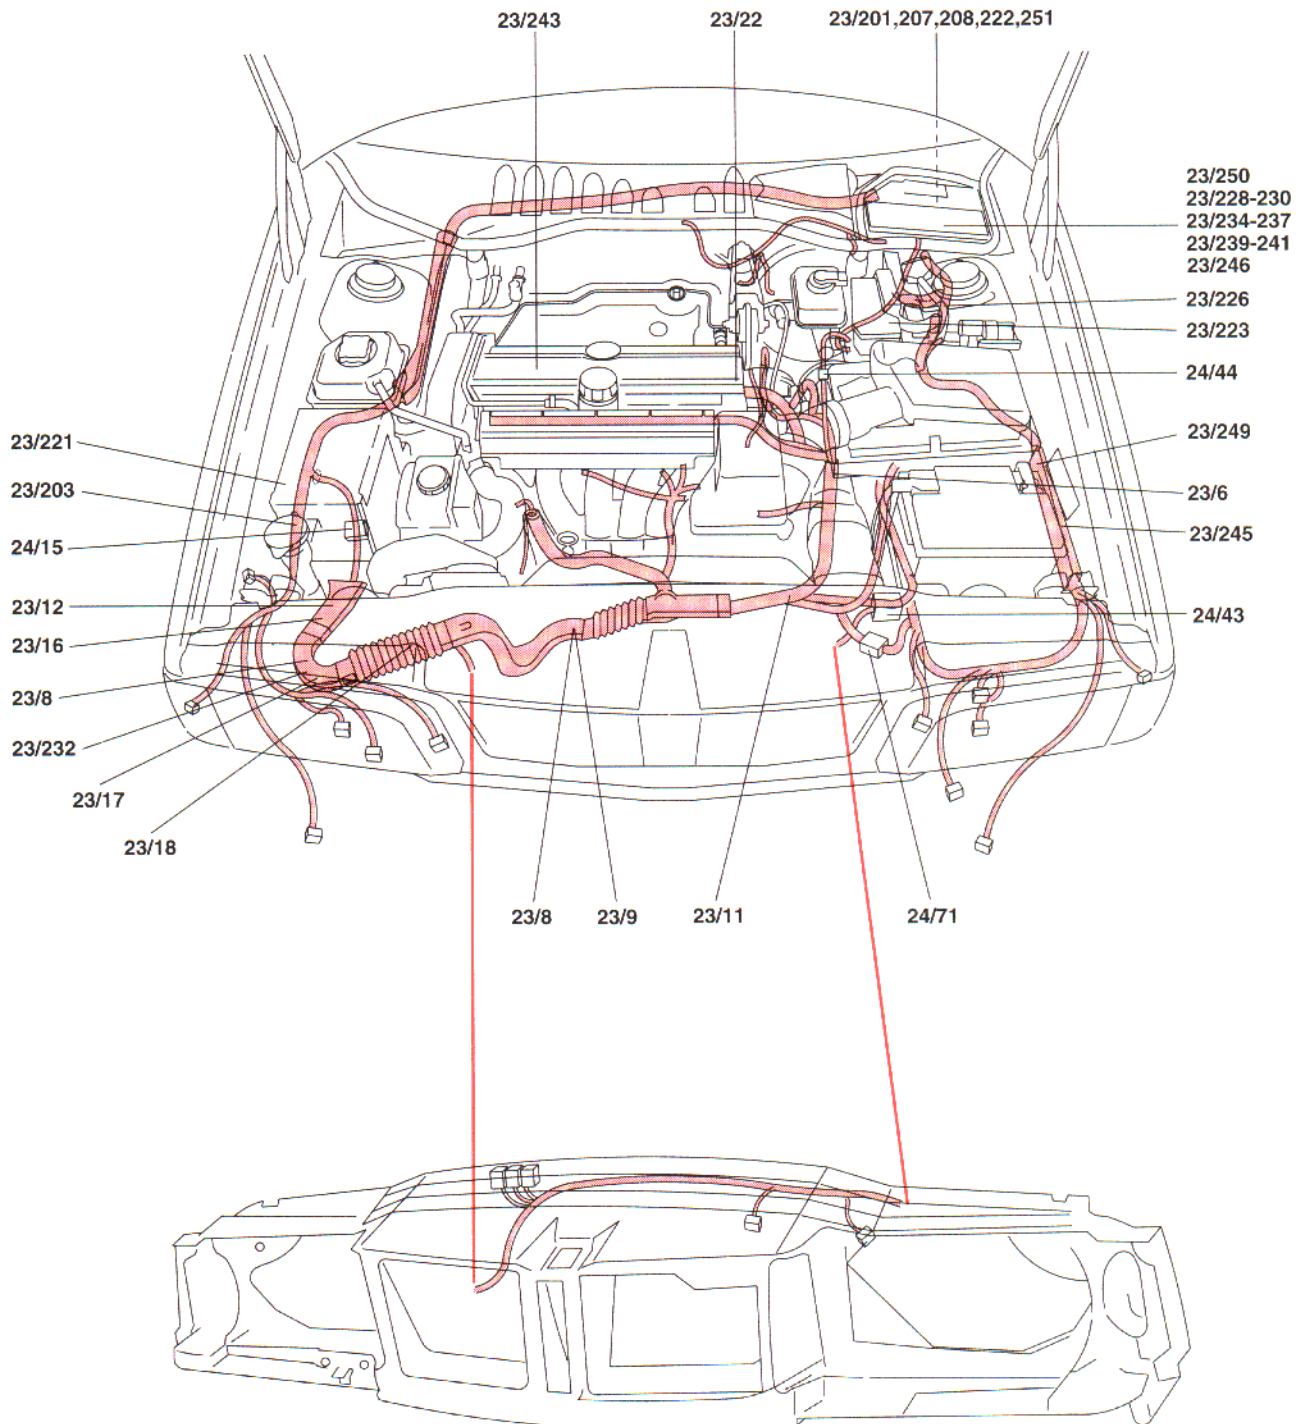


Engine management system Fenix 5.2

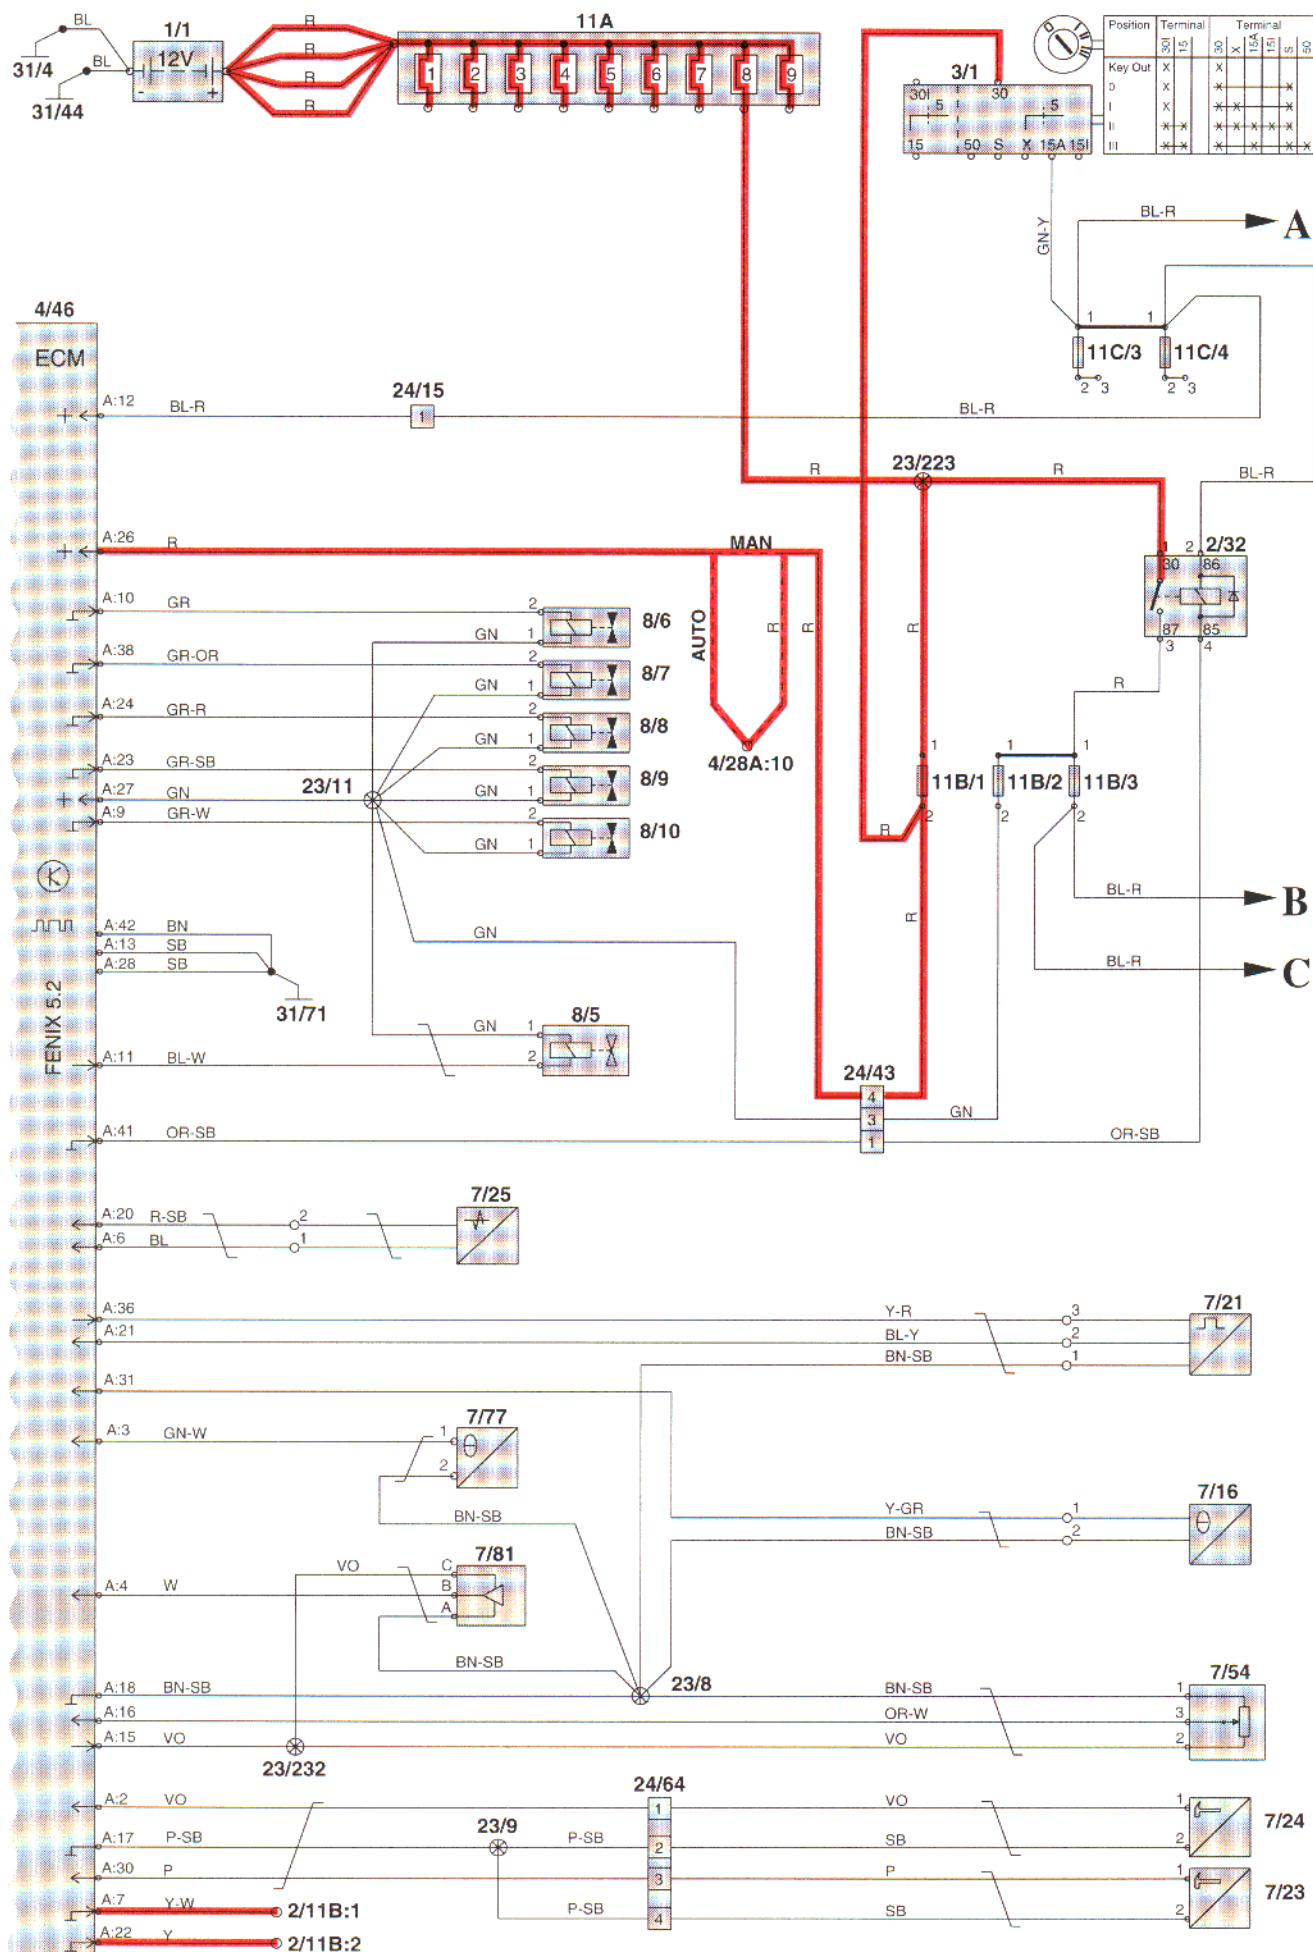


Engine management system


Denso

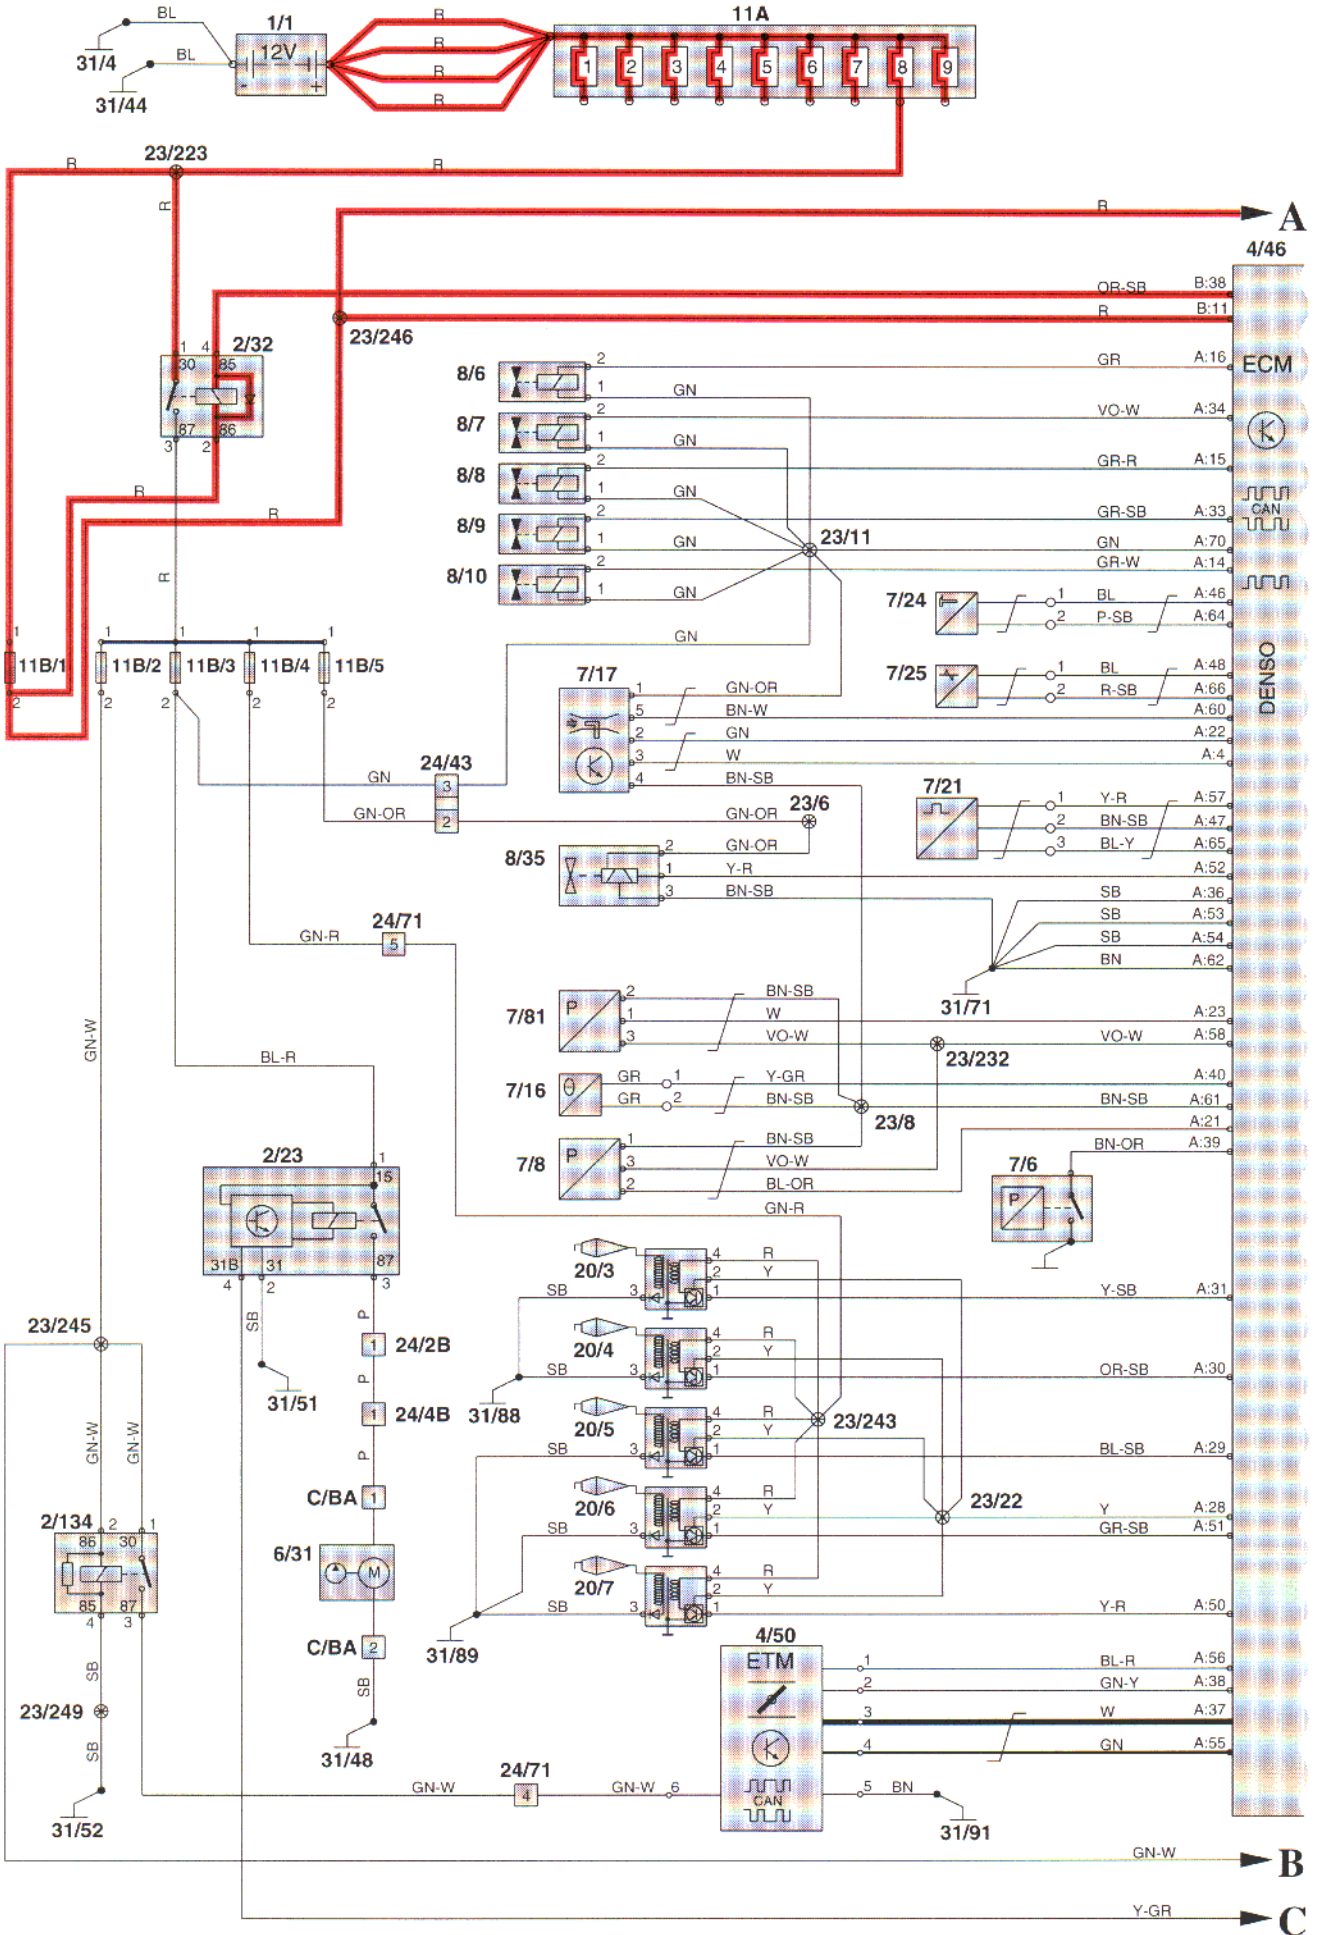


Engine management system ME7

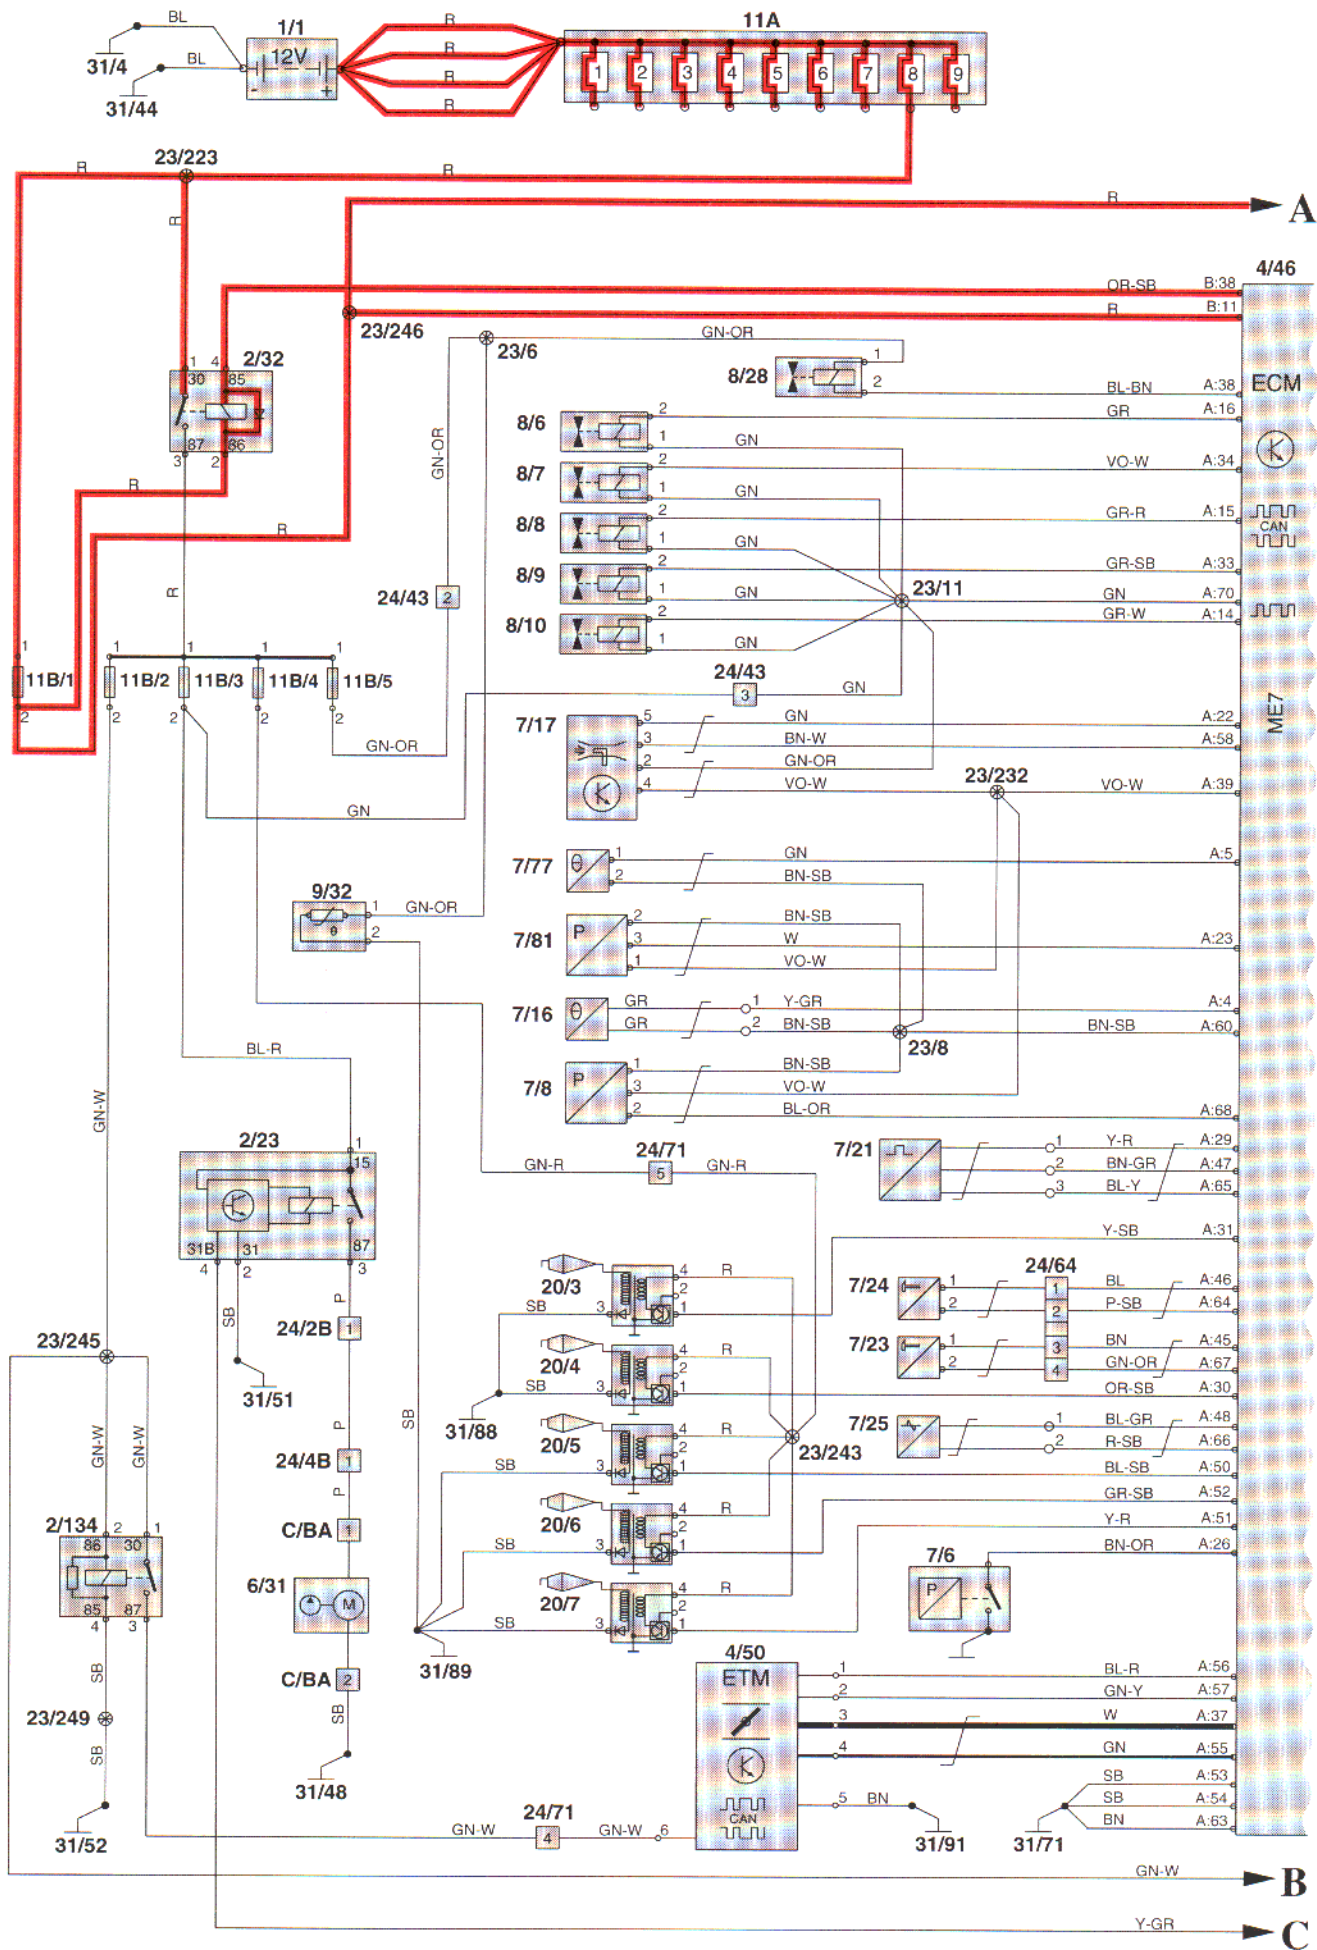


Emissions control Fenix 5.2

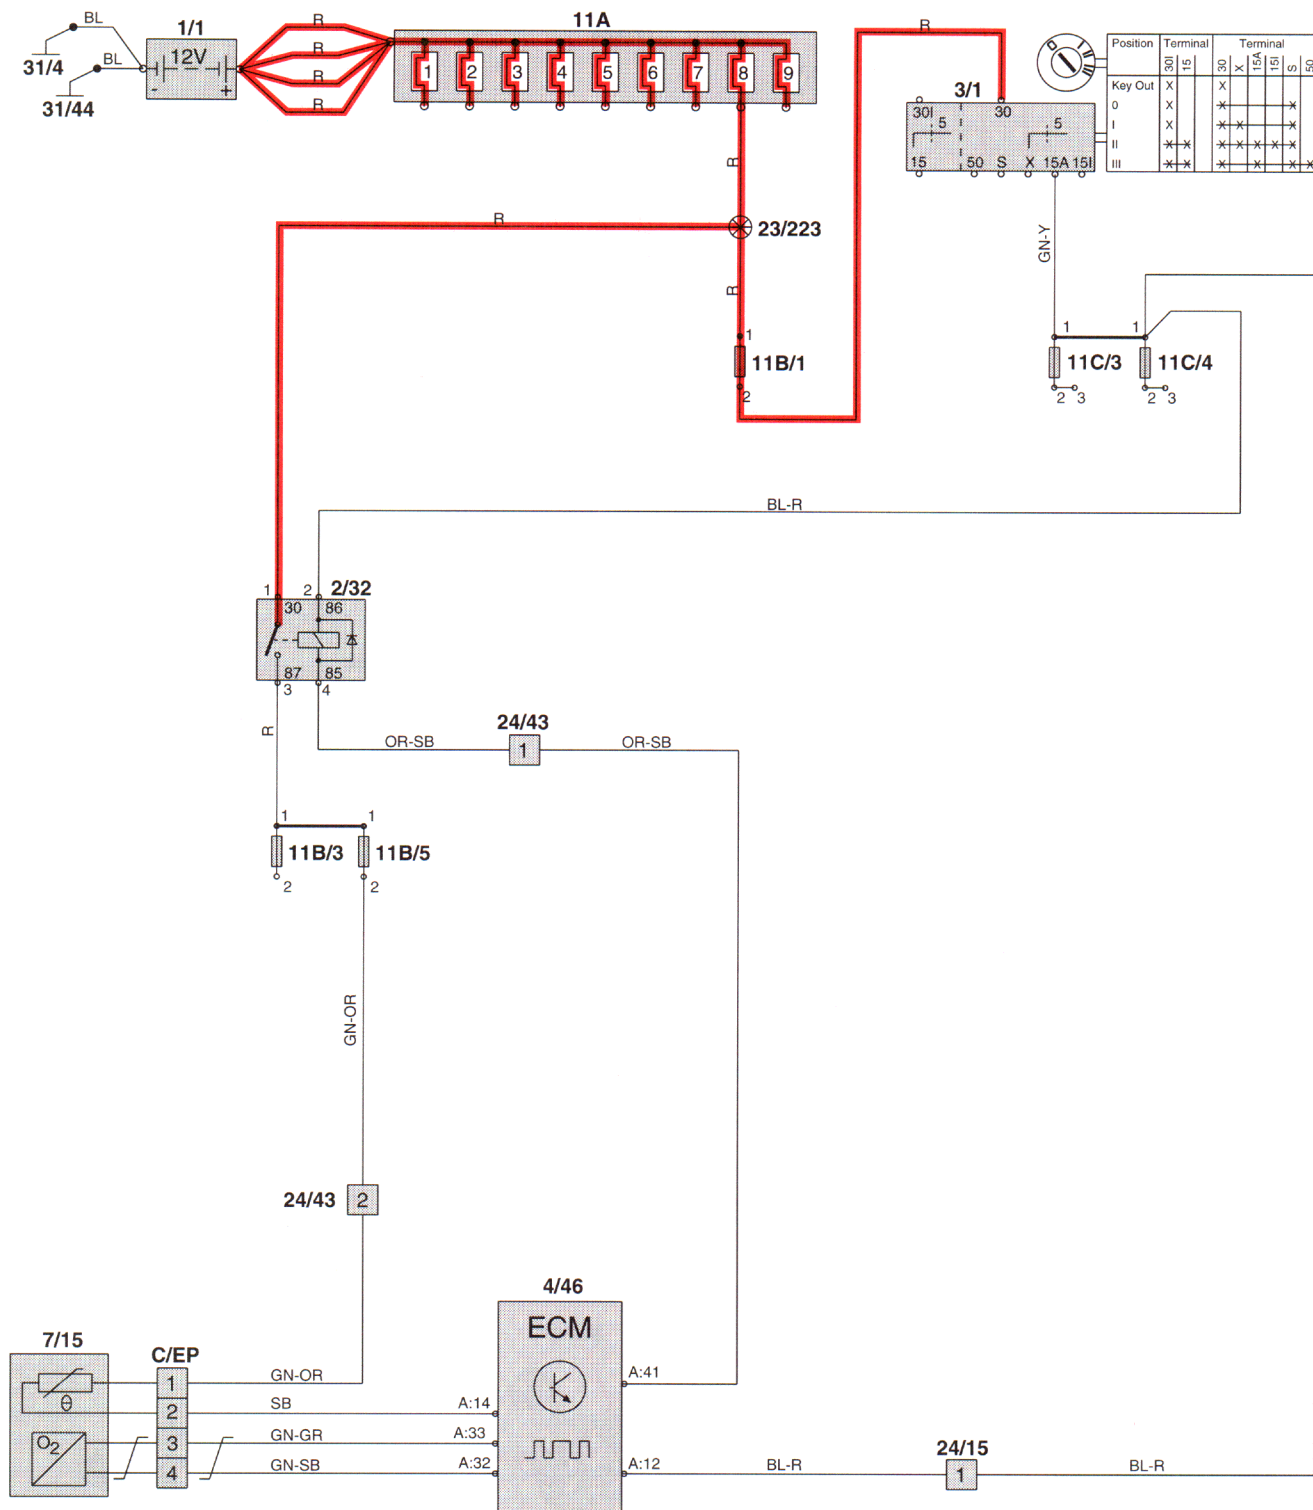

Emissions control Denso

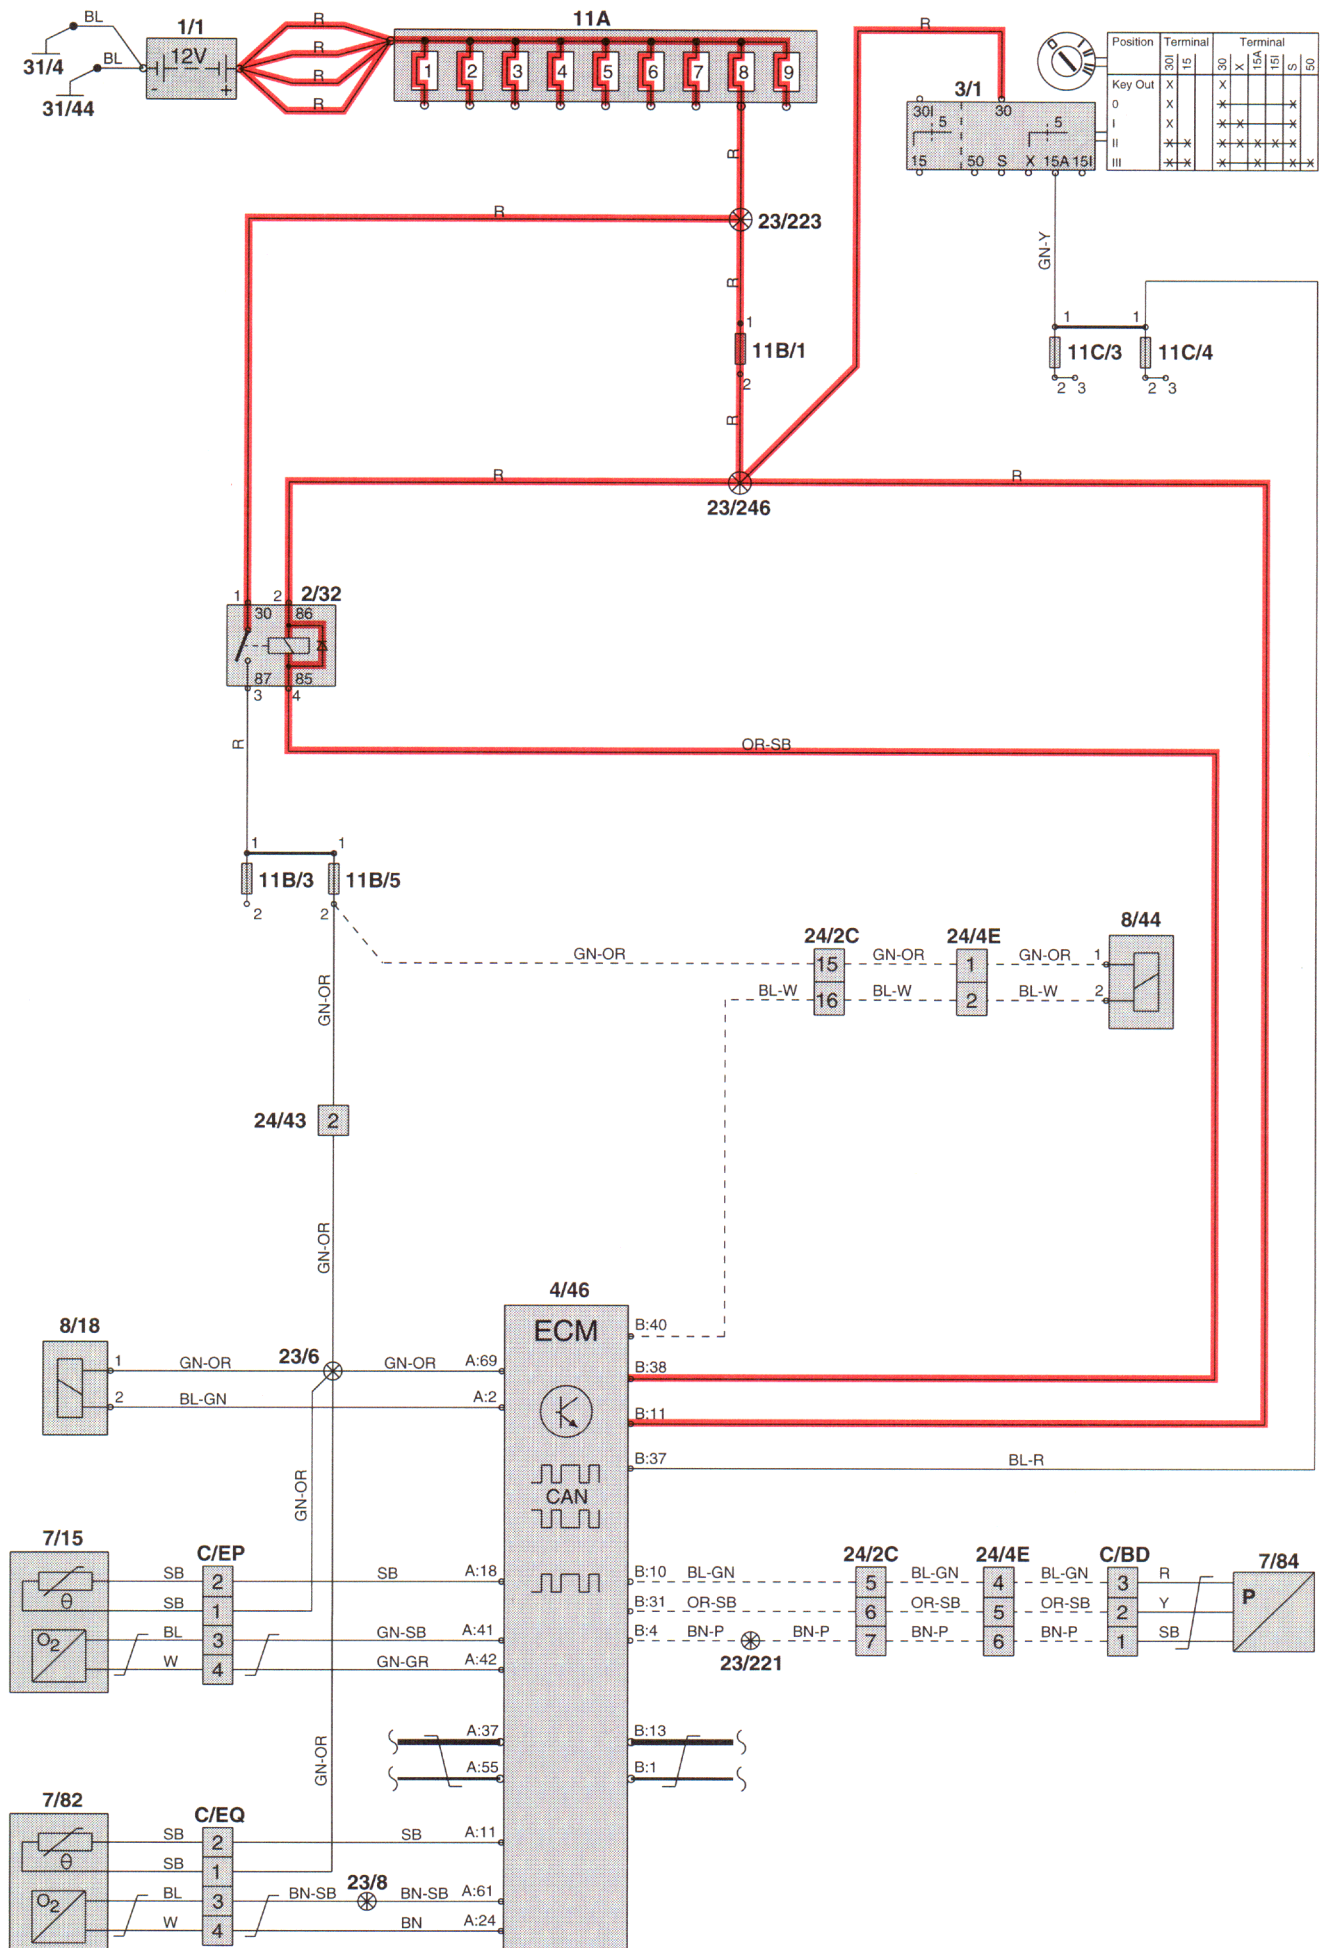


Emissions control

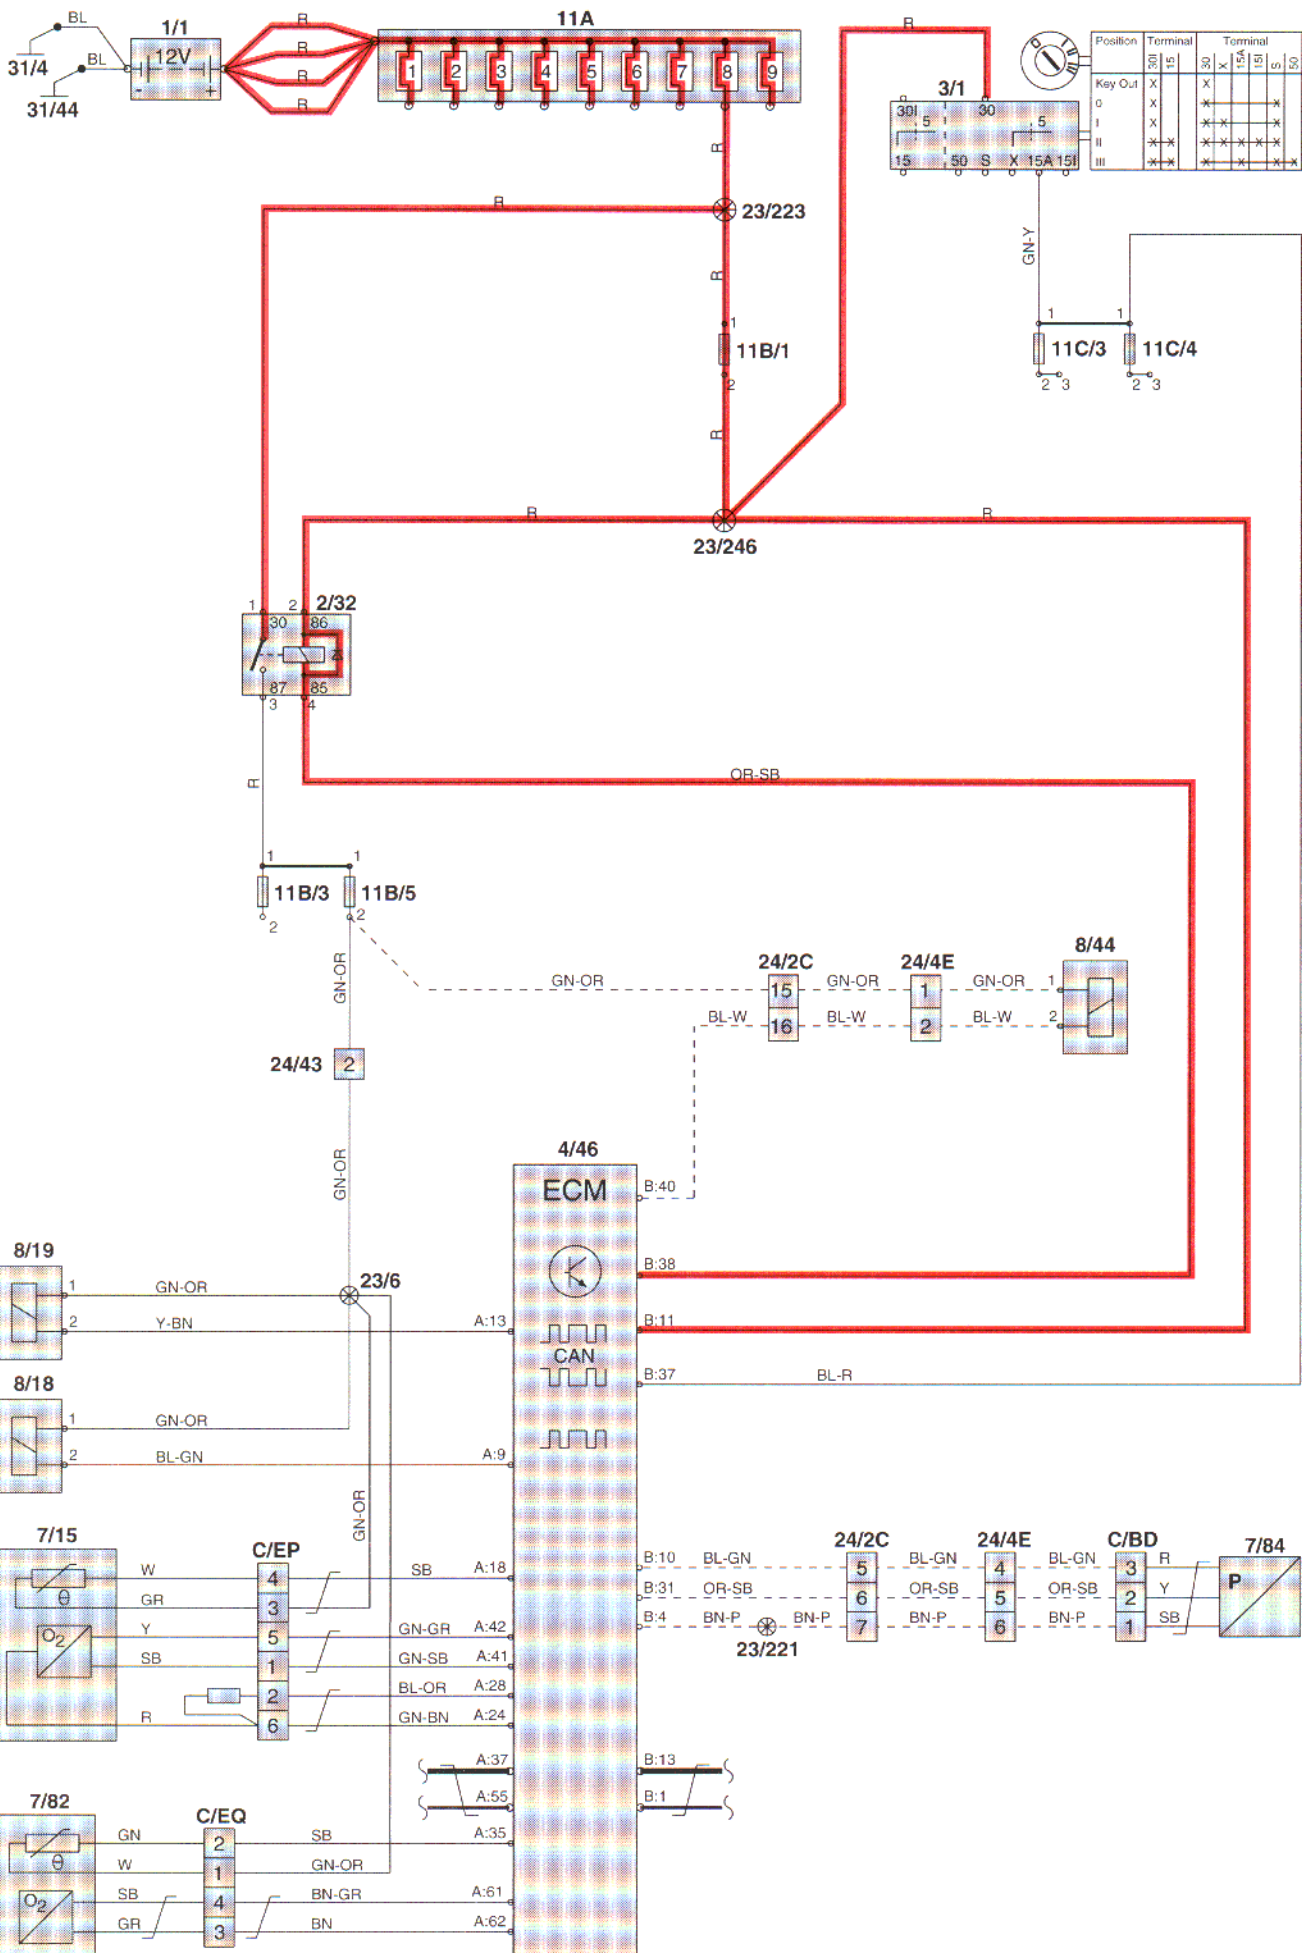


Engine management system


MSA 15.7

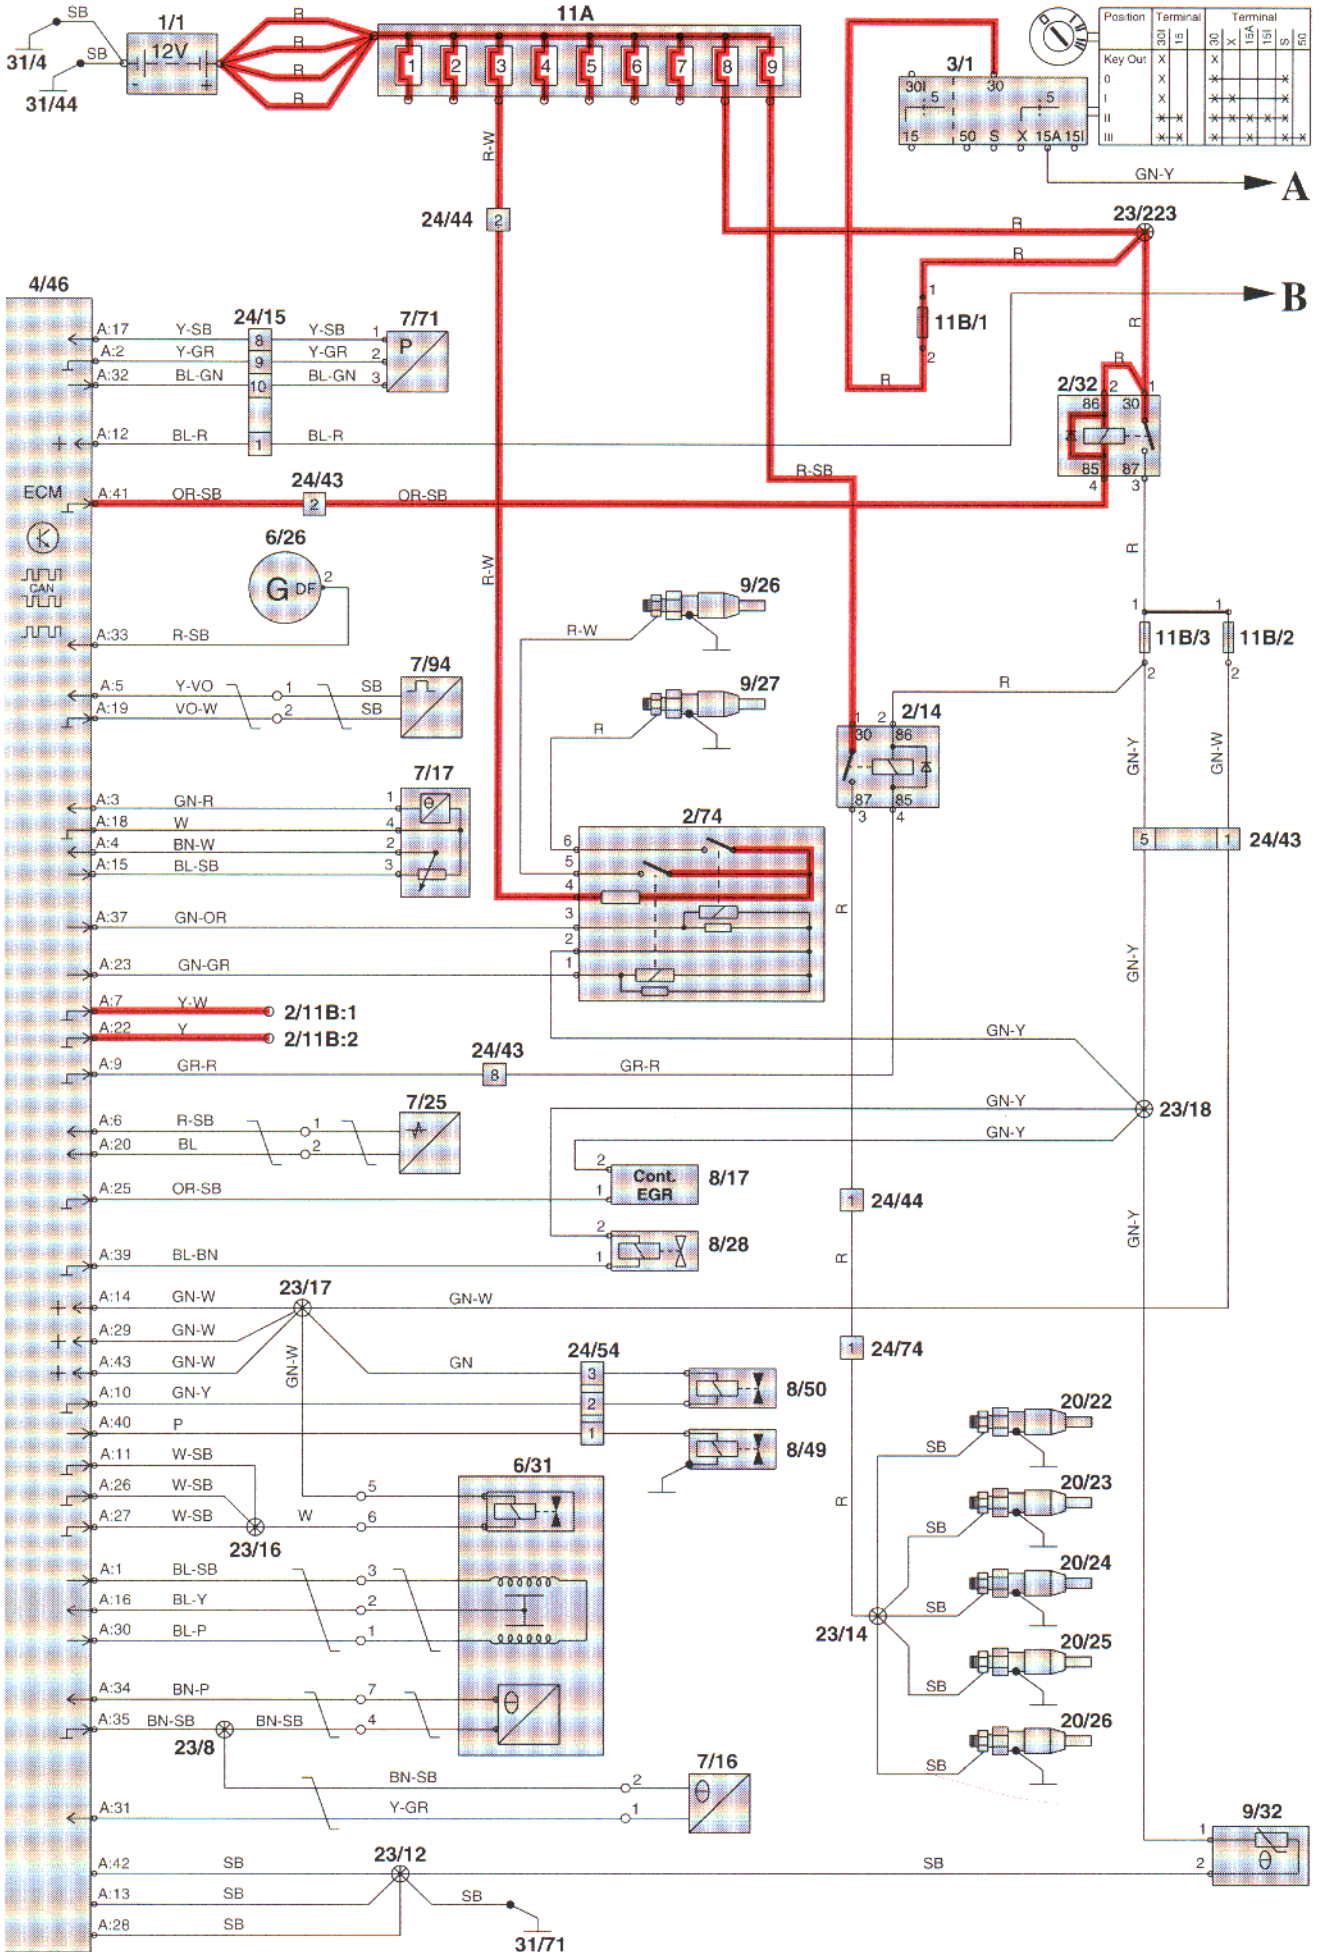


Engine cooling fan (FC)
Fenix 5.2

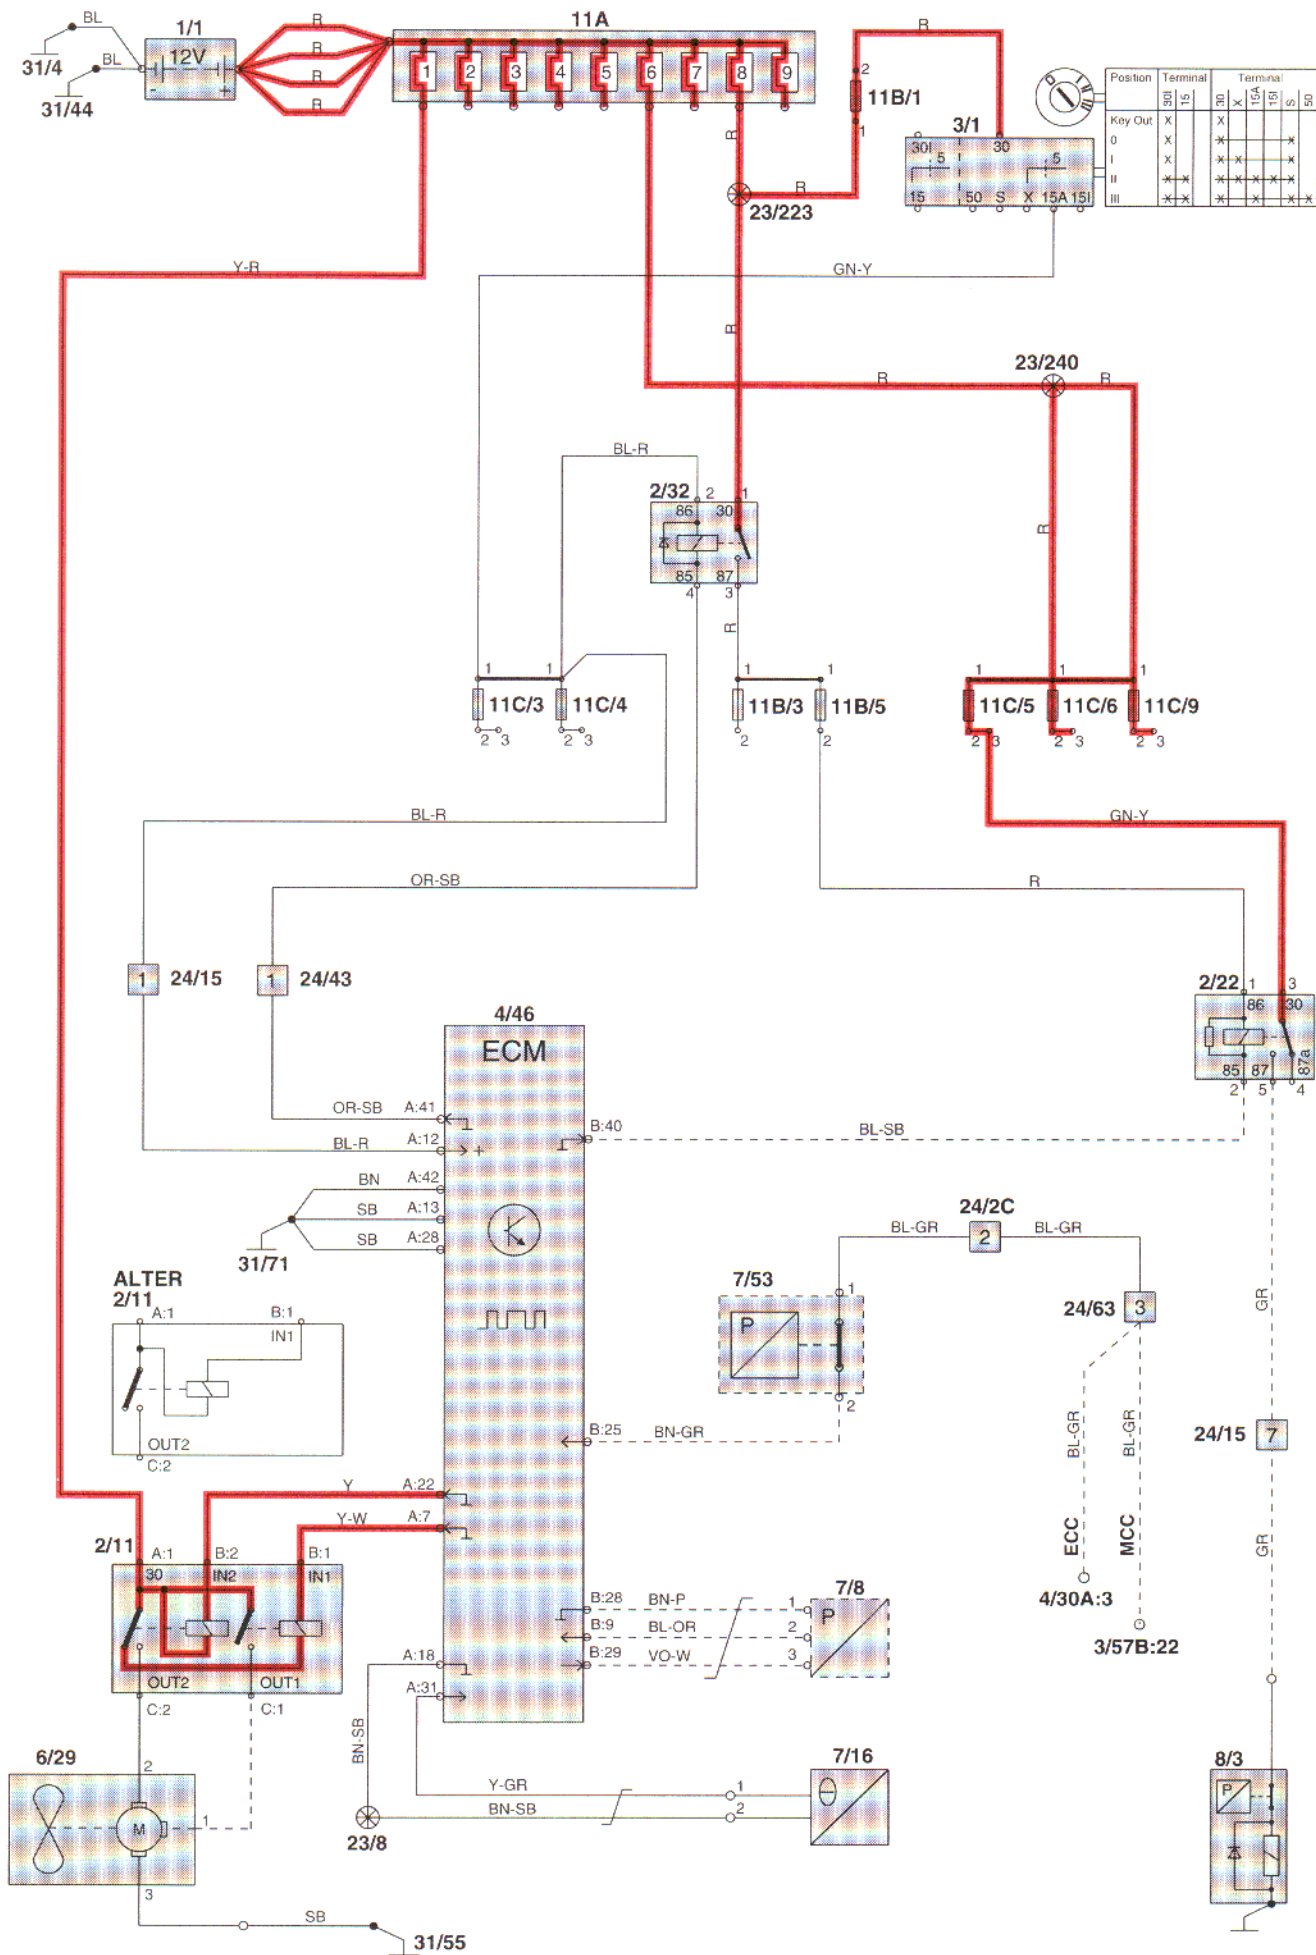


Engine cooling fan (FC)
Denso, ME7

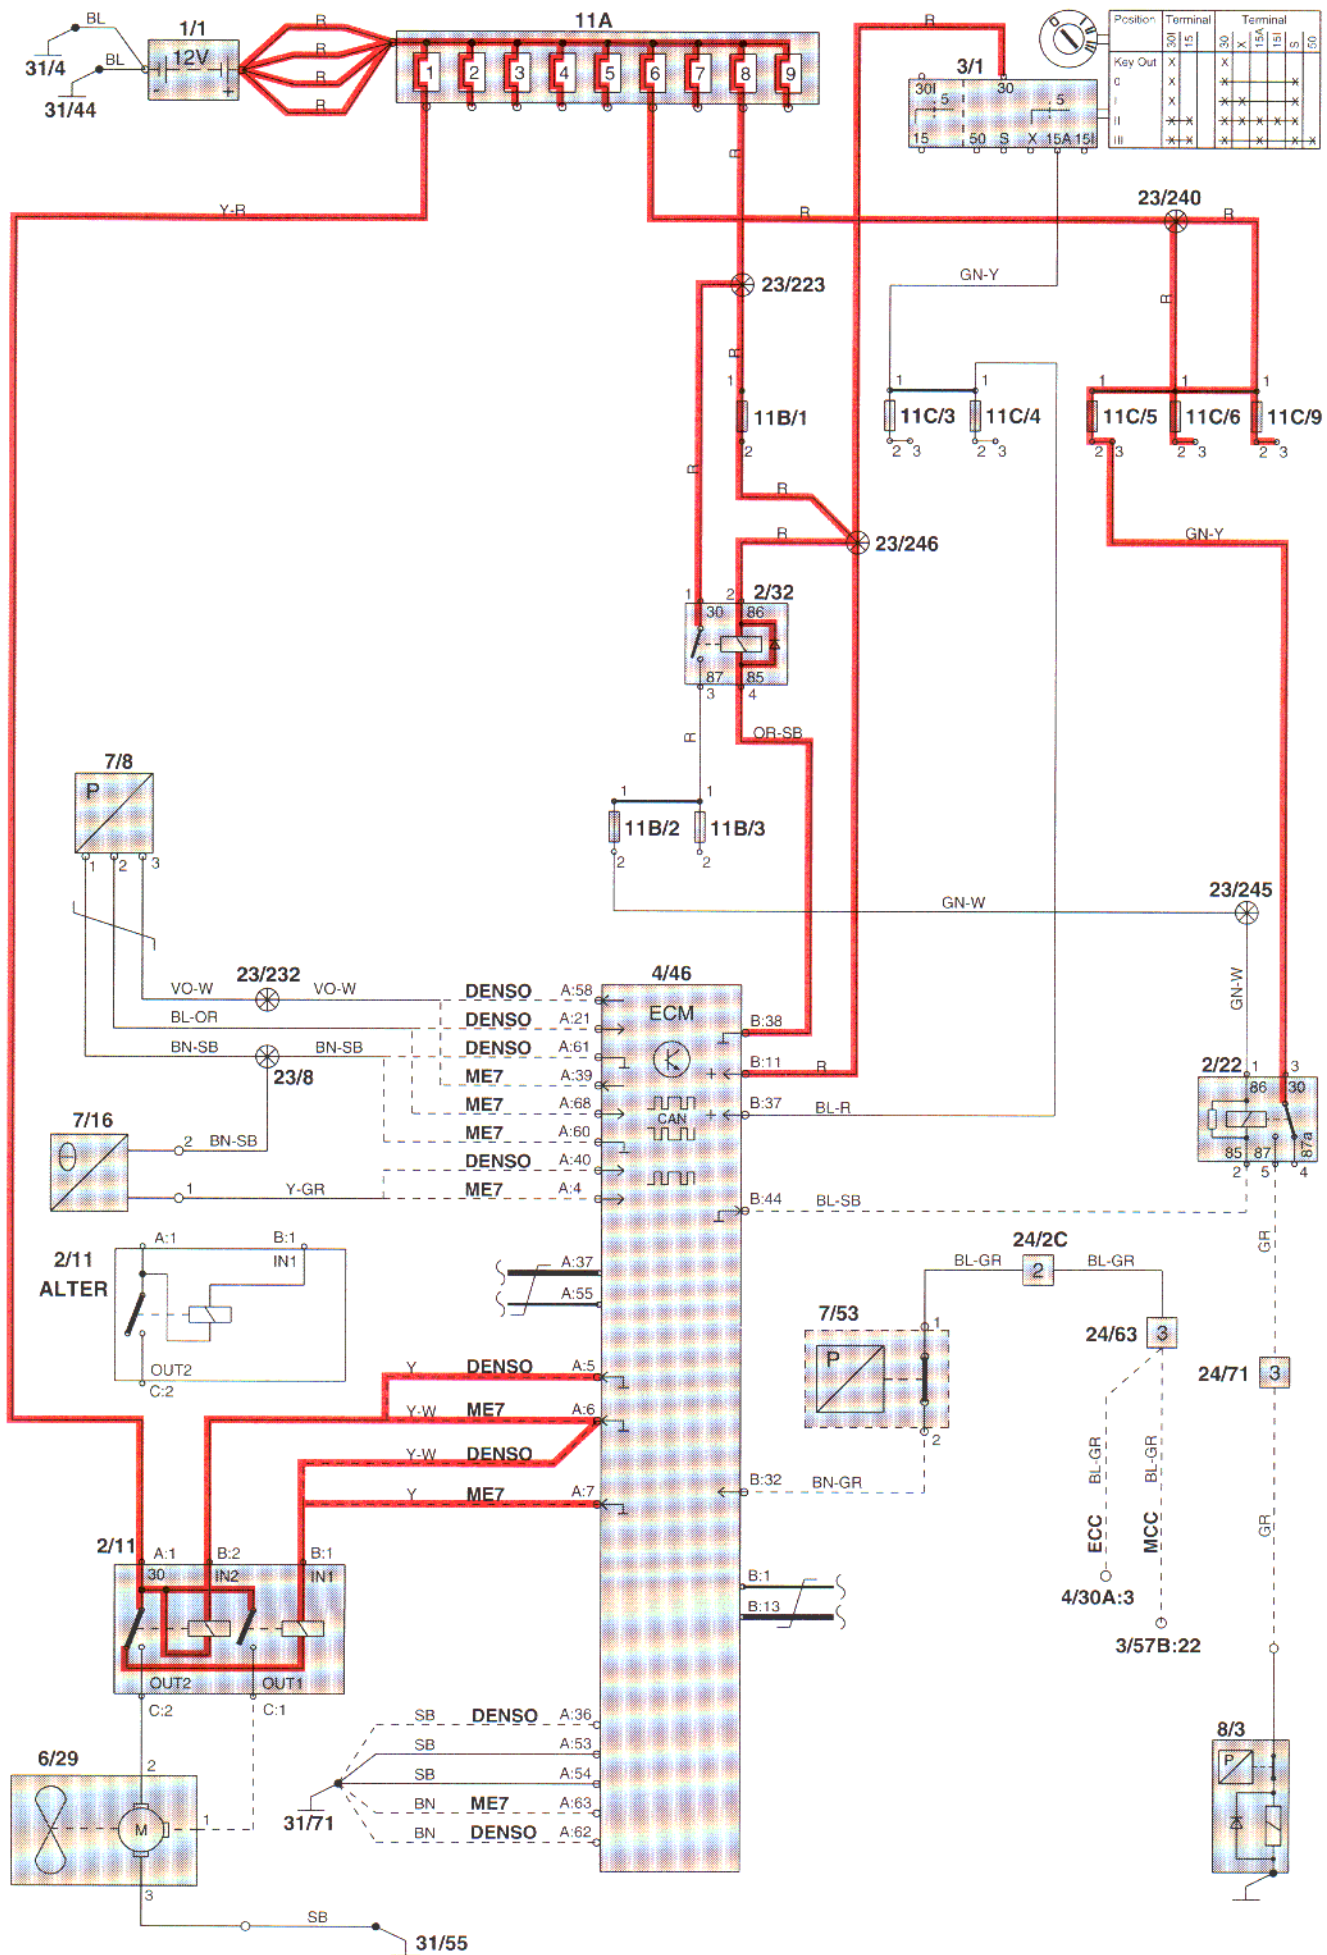


Engine cooling fan (FC)
MSA 15.7

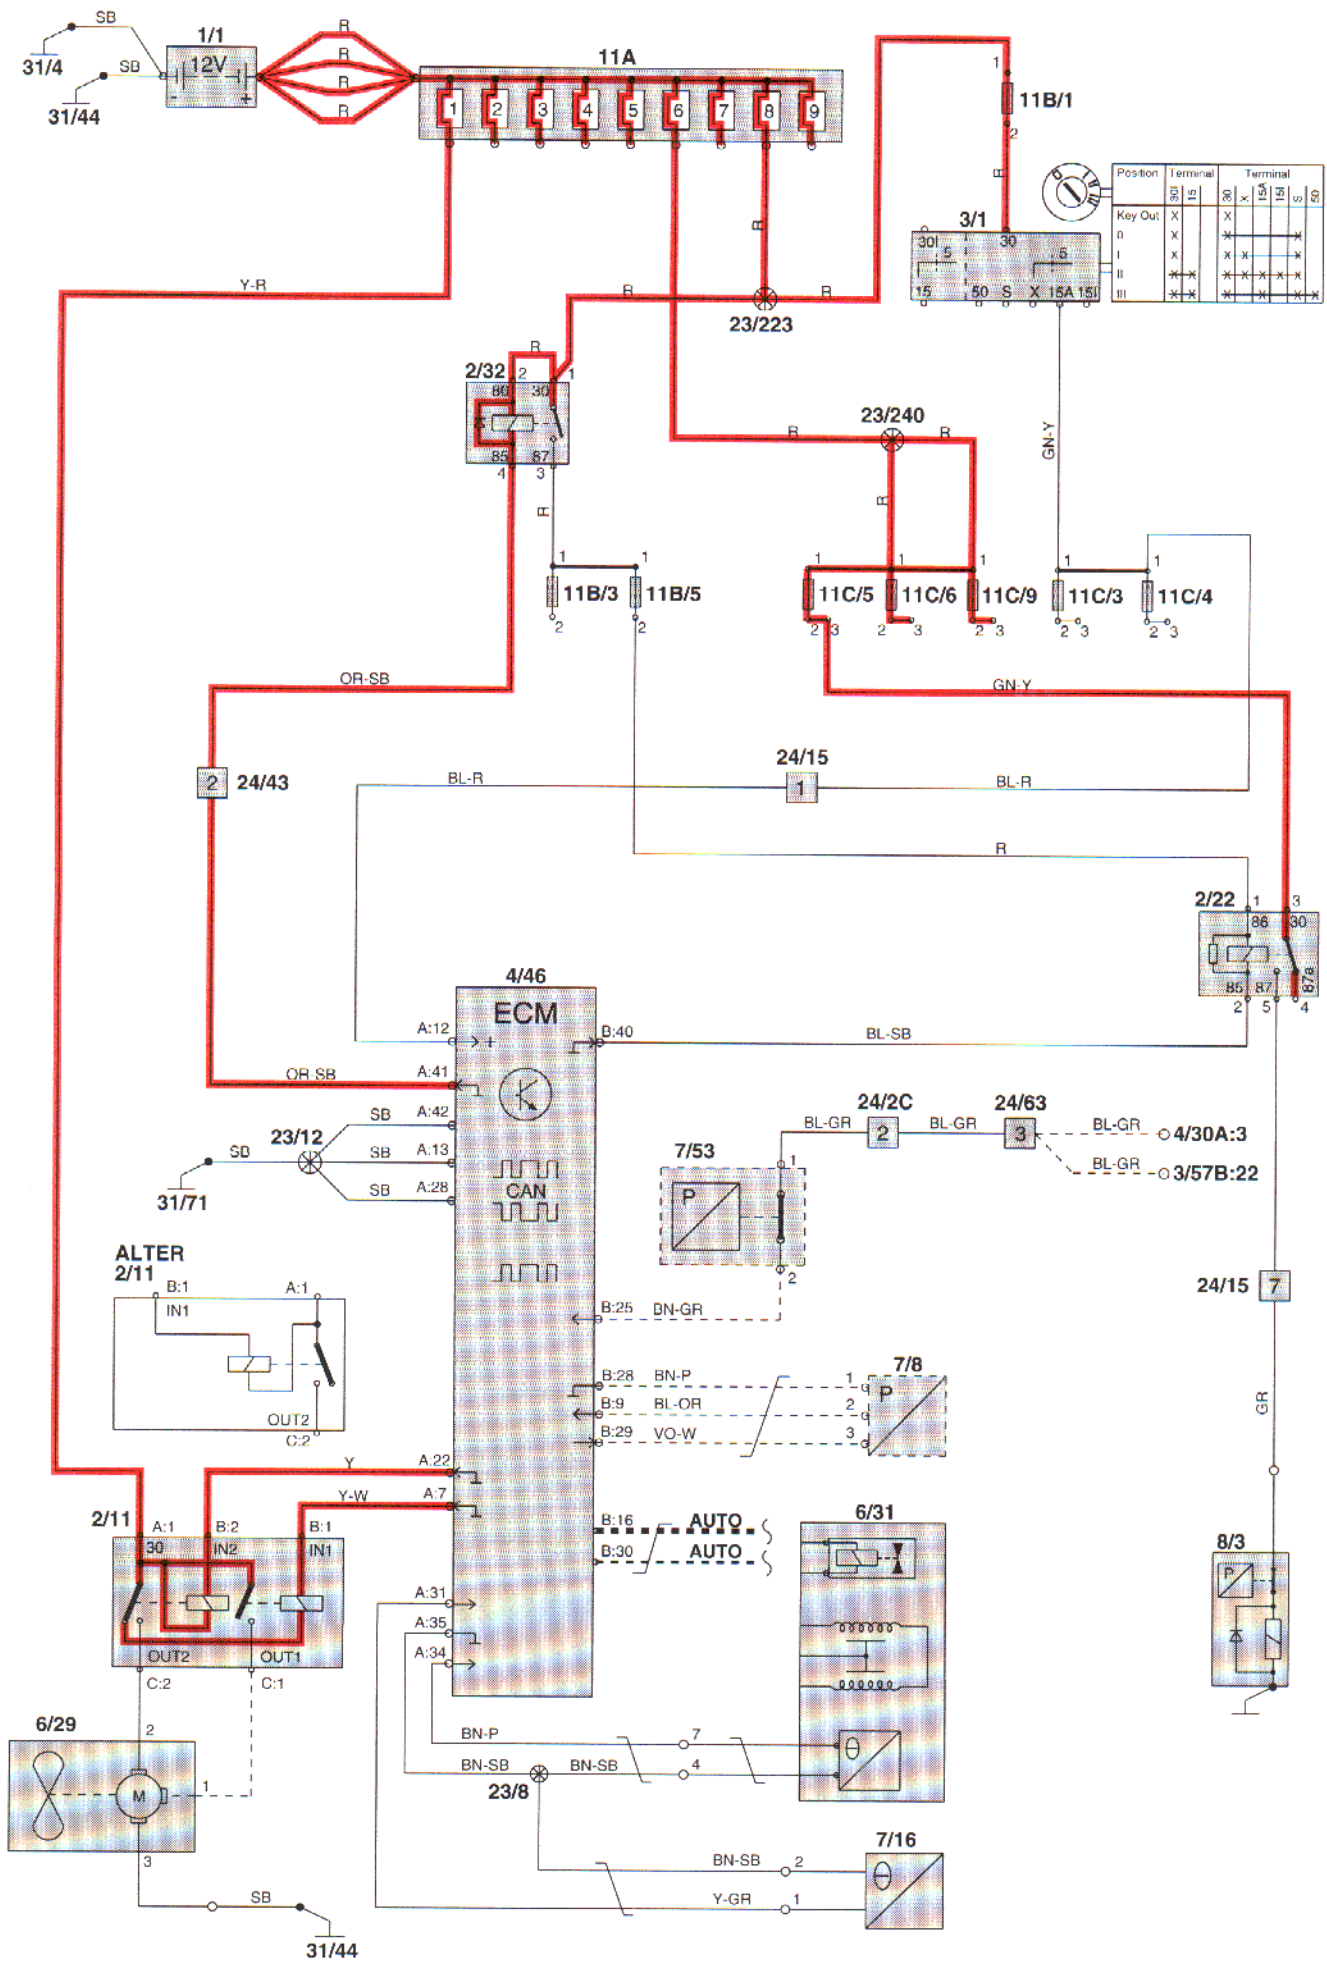

Cruise control Fenix 5.2

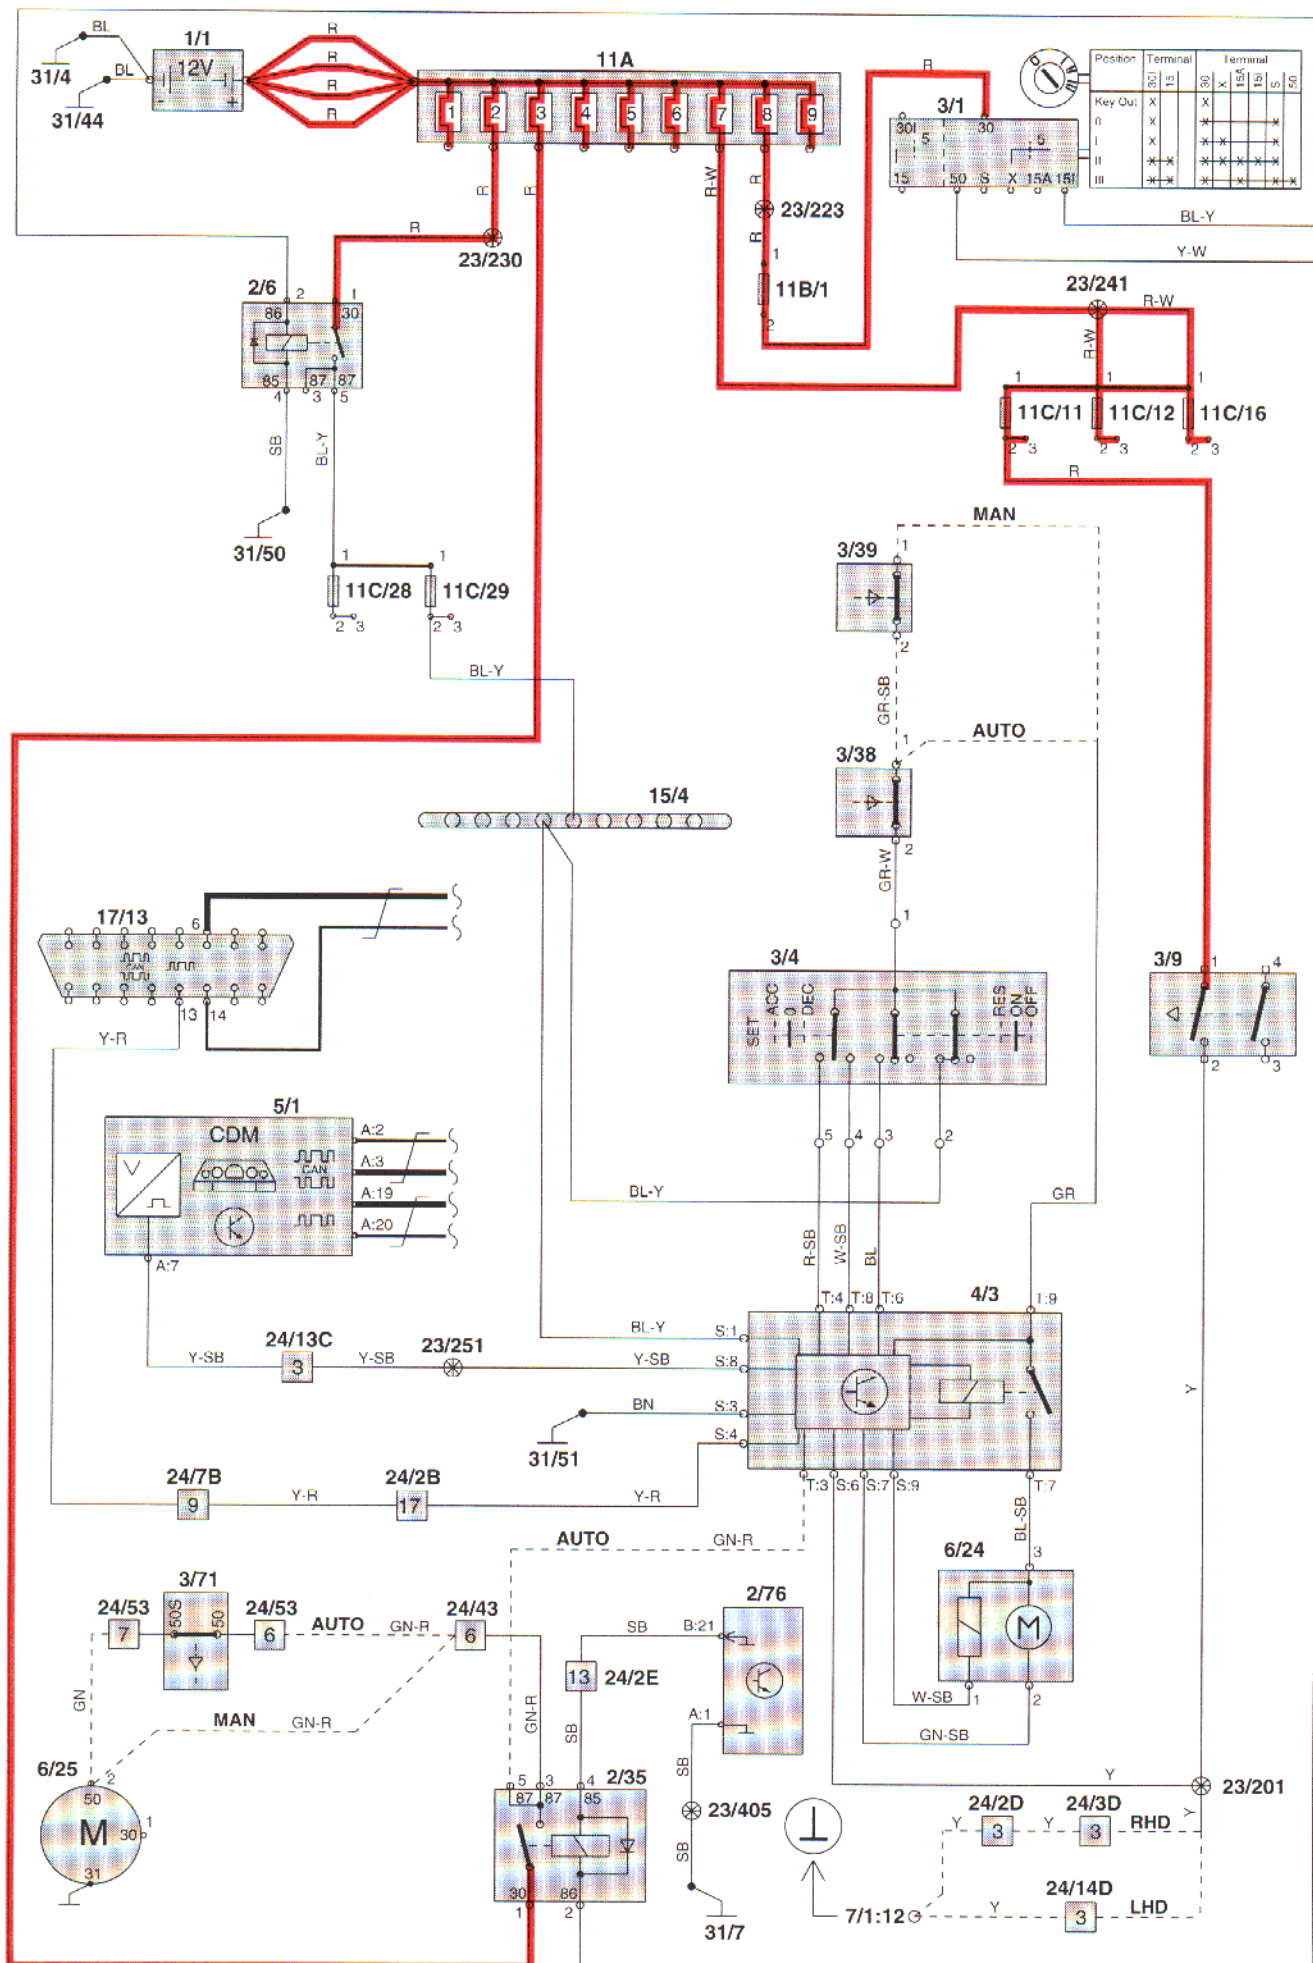


Cruise control Denso, ME7

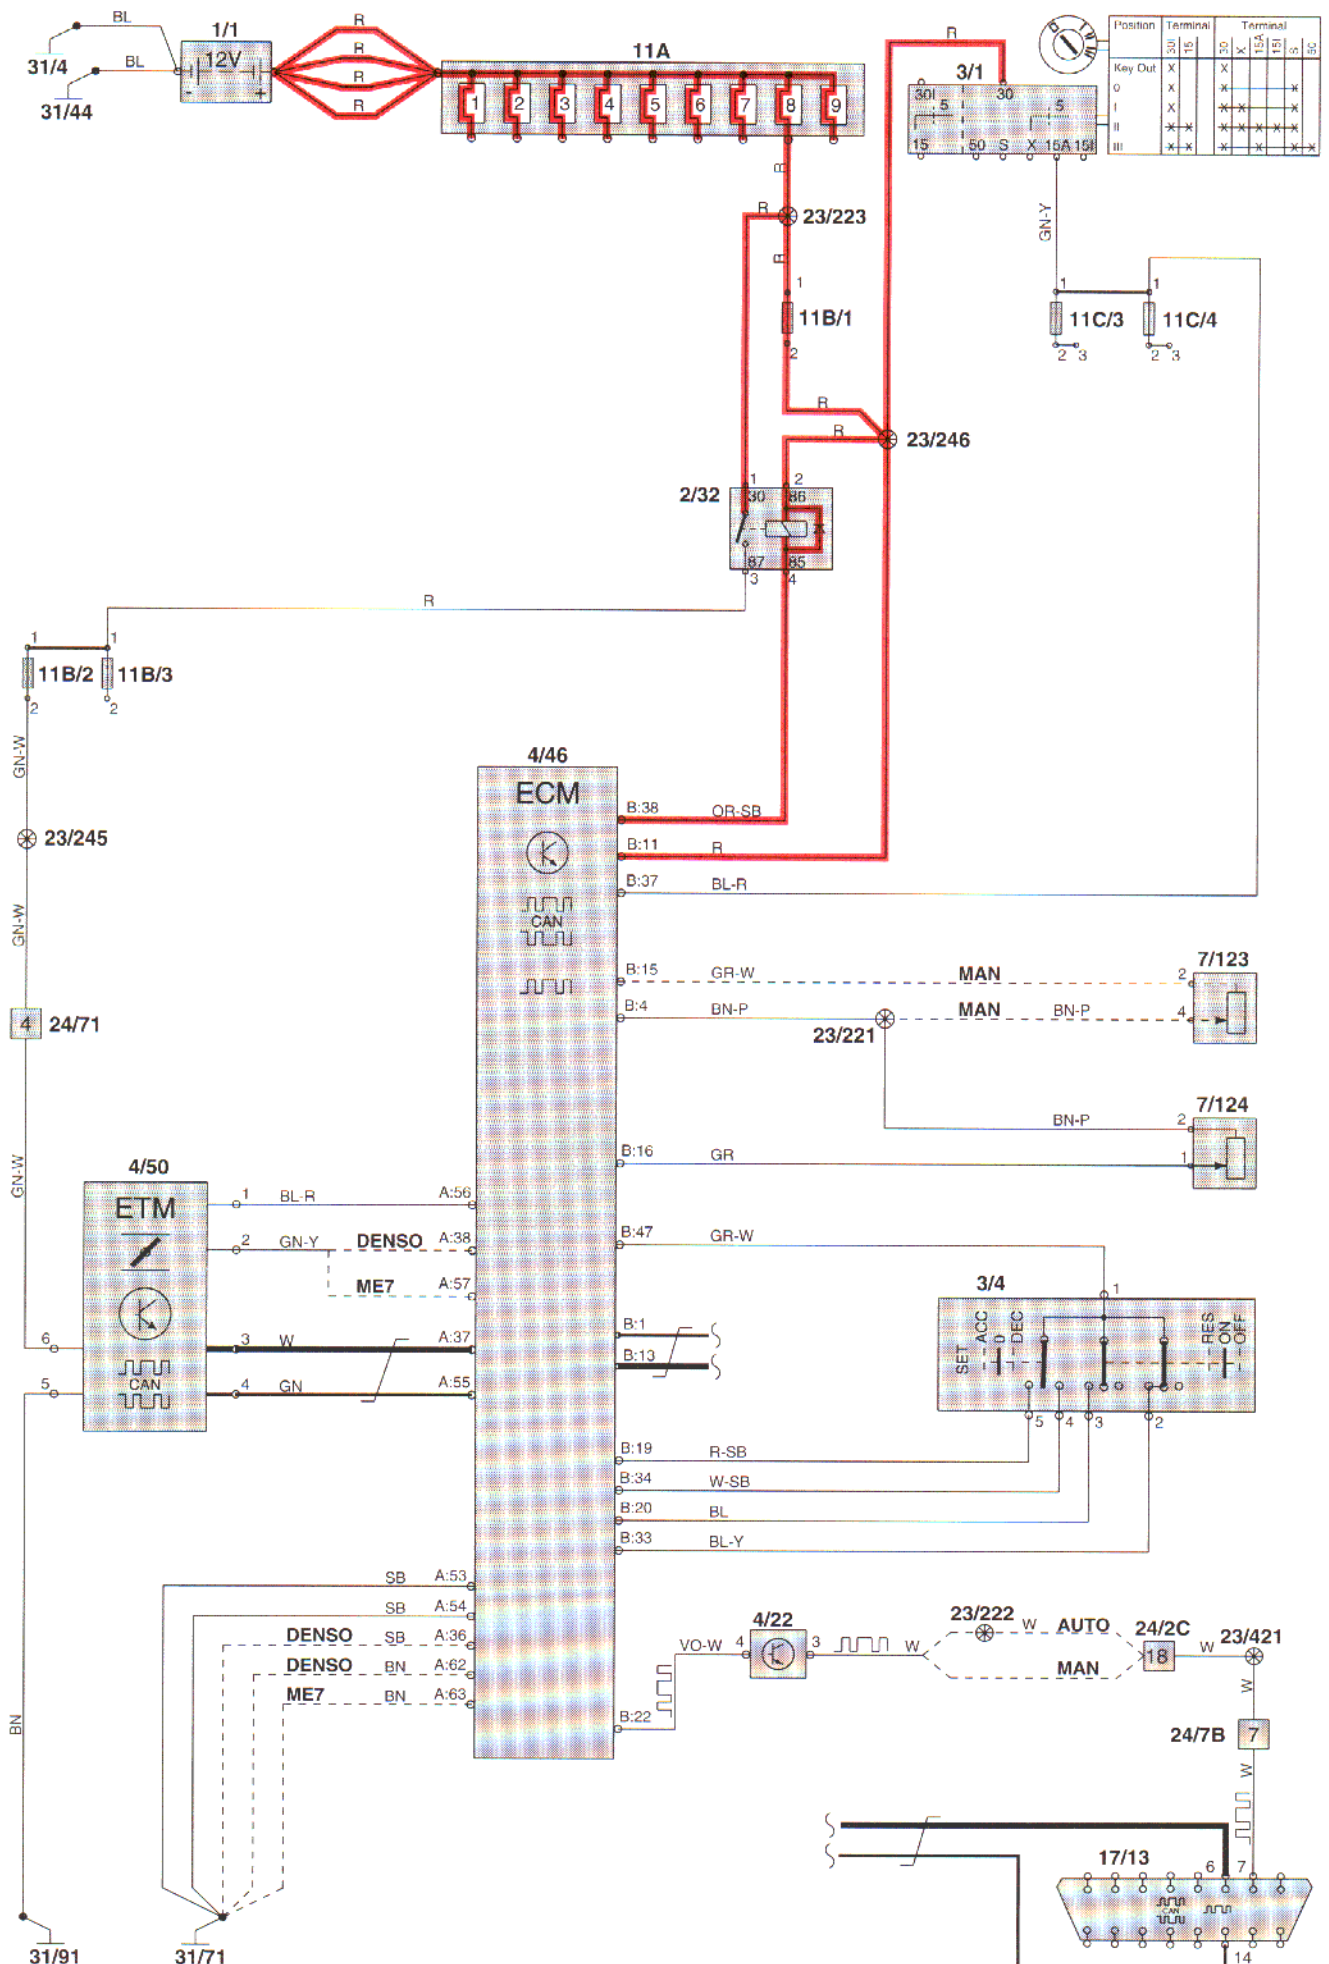


Cruise control


MSA 15.7

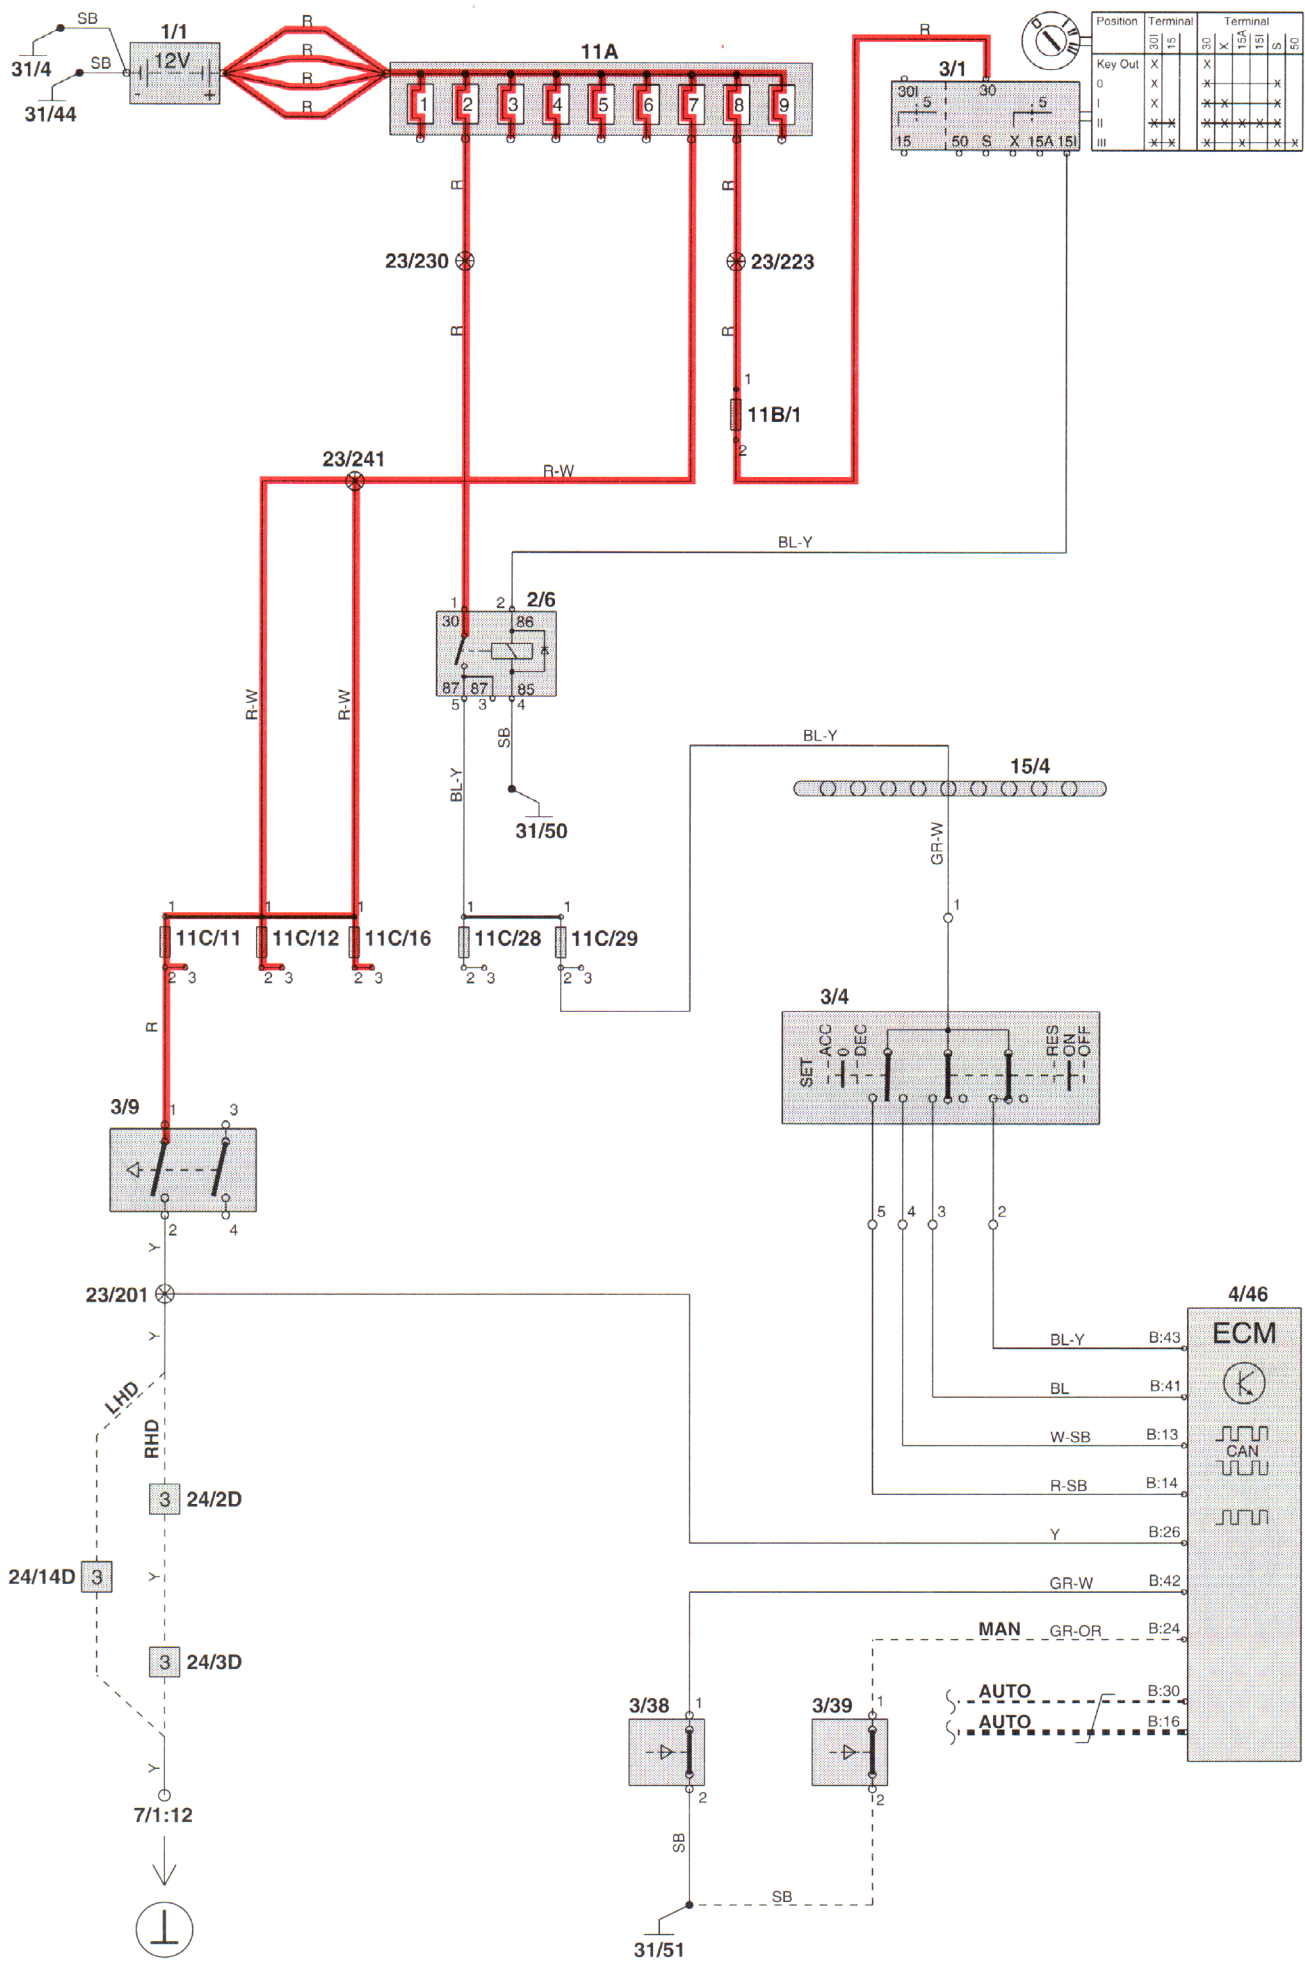


Power supply and starter system

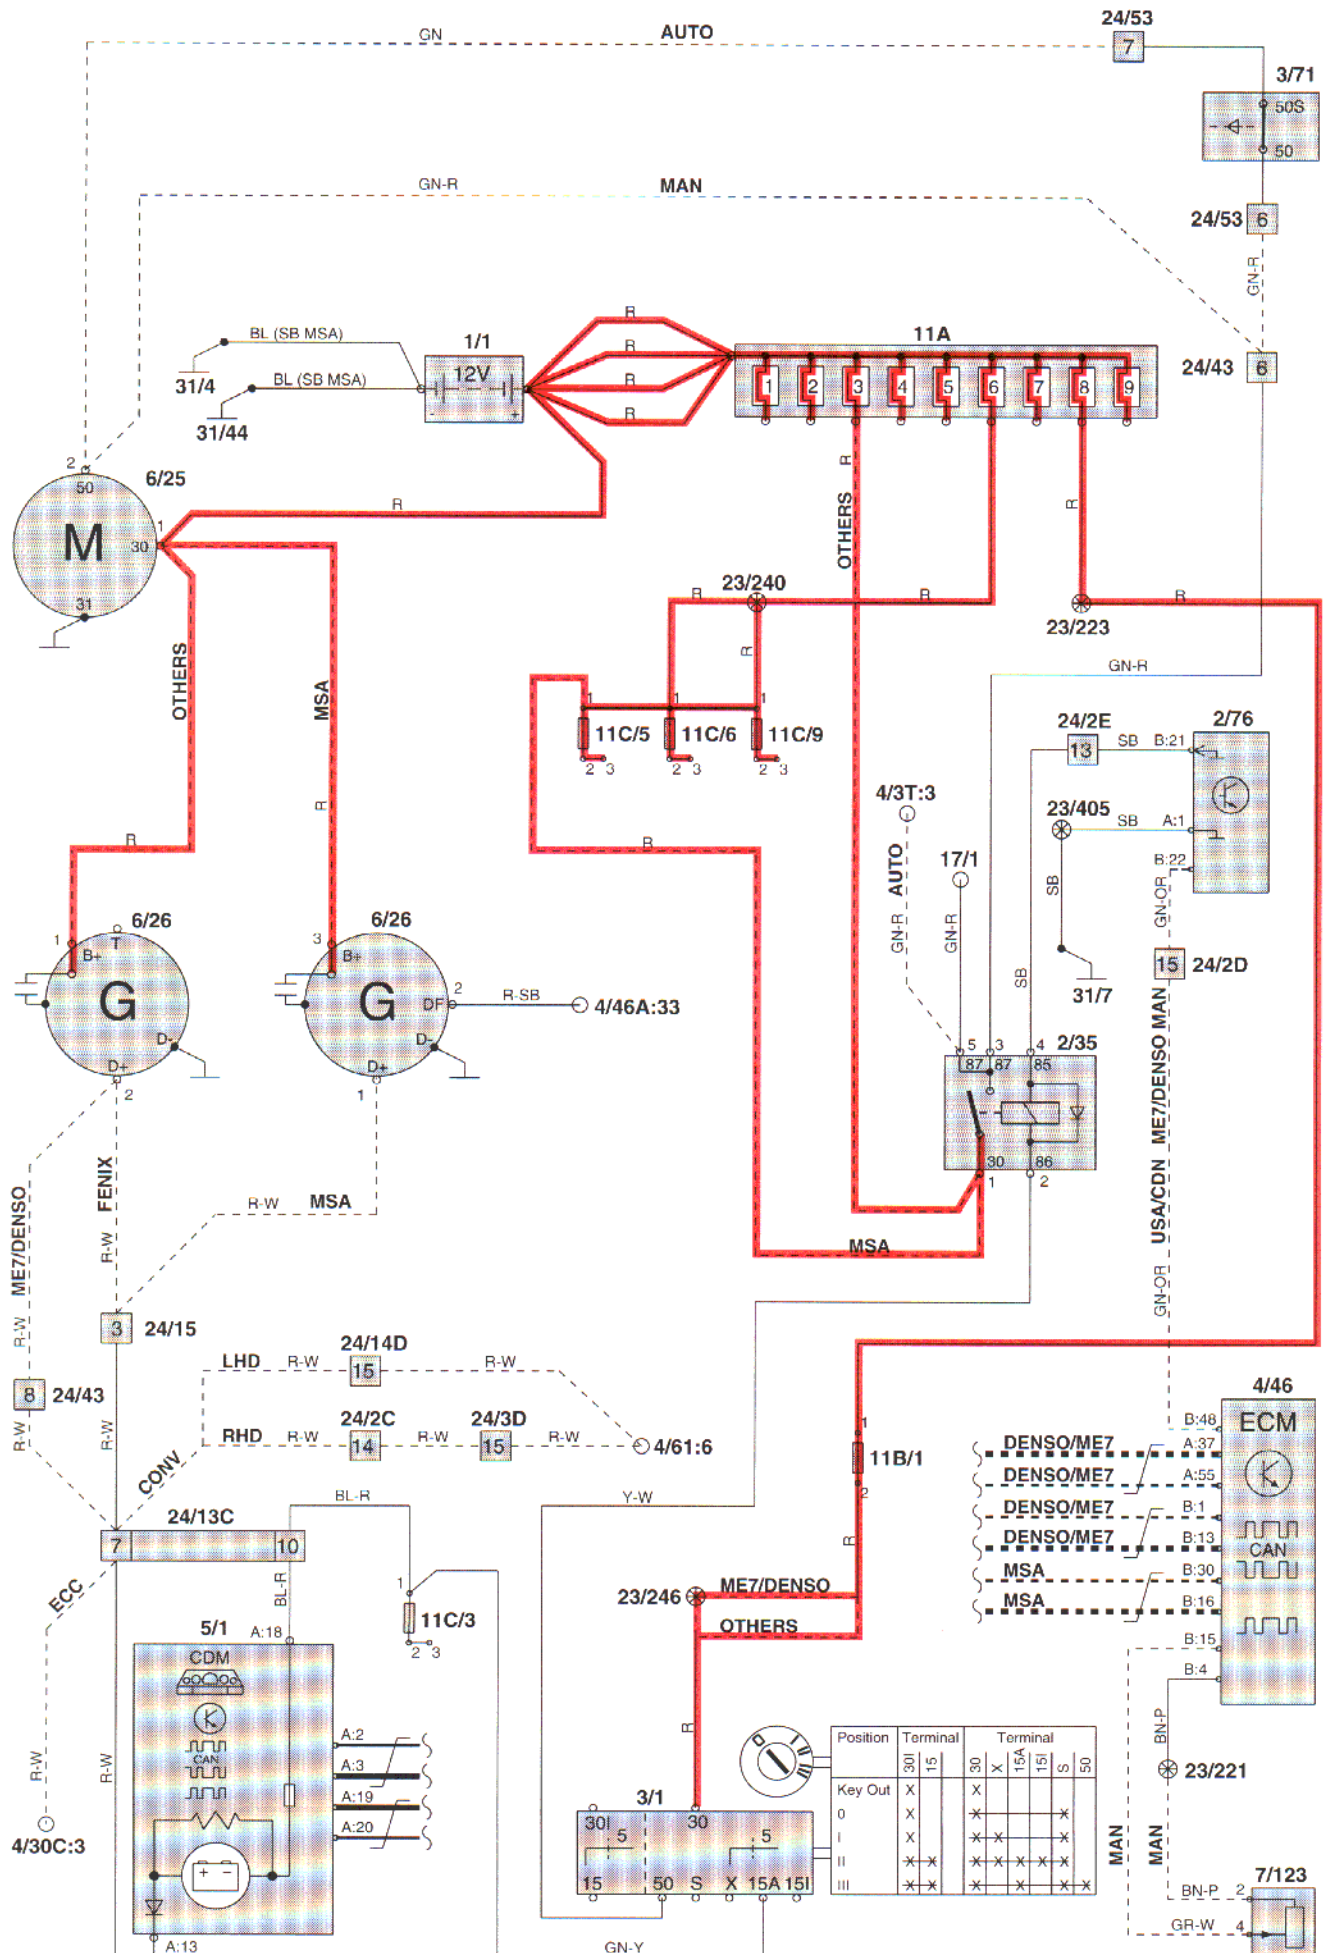


High and low beams

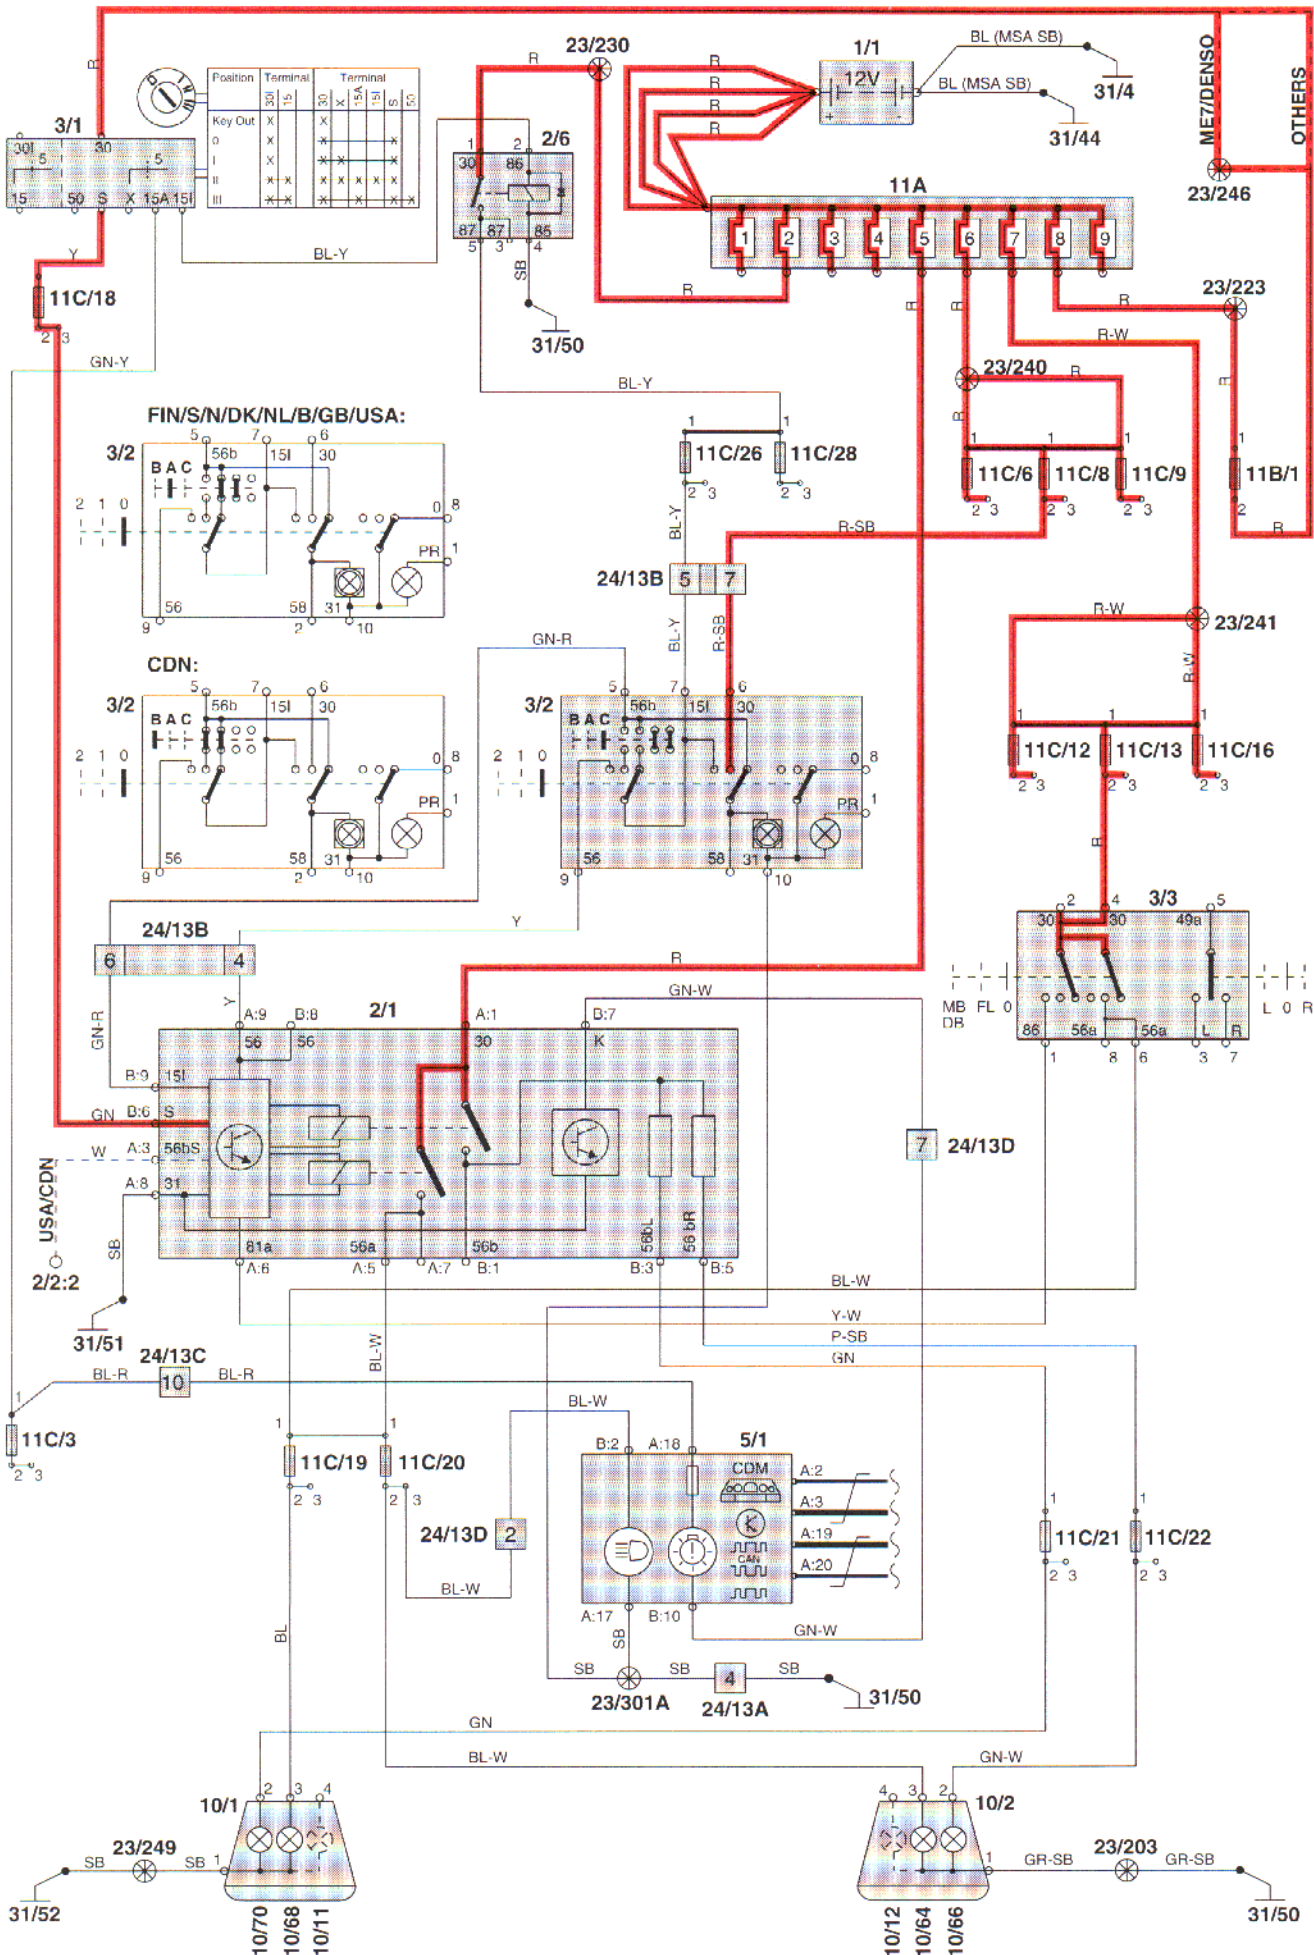


Headlamp range adjustment

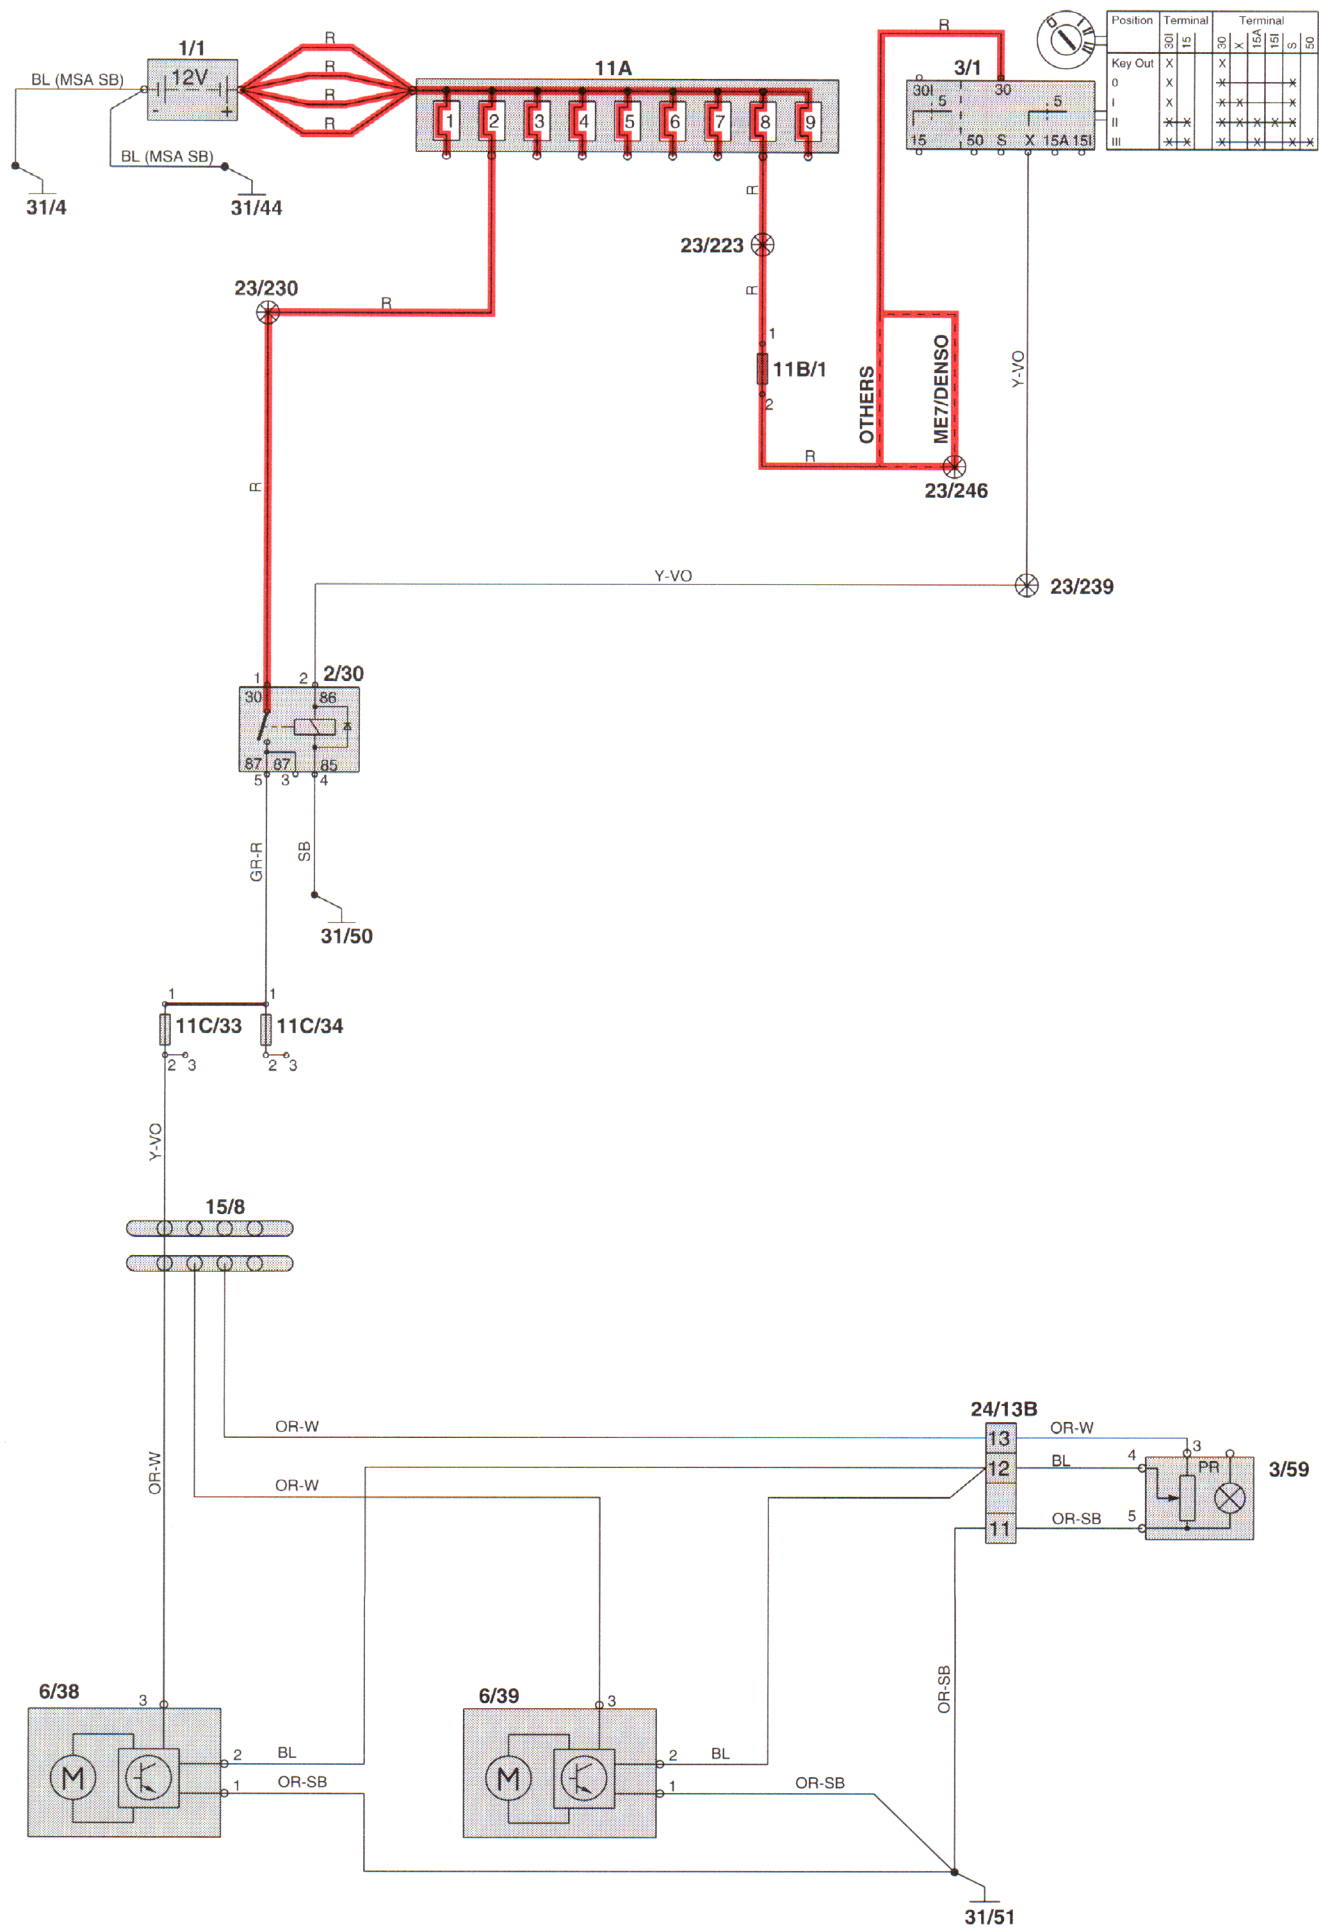


Fog lamp
C70

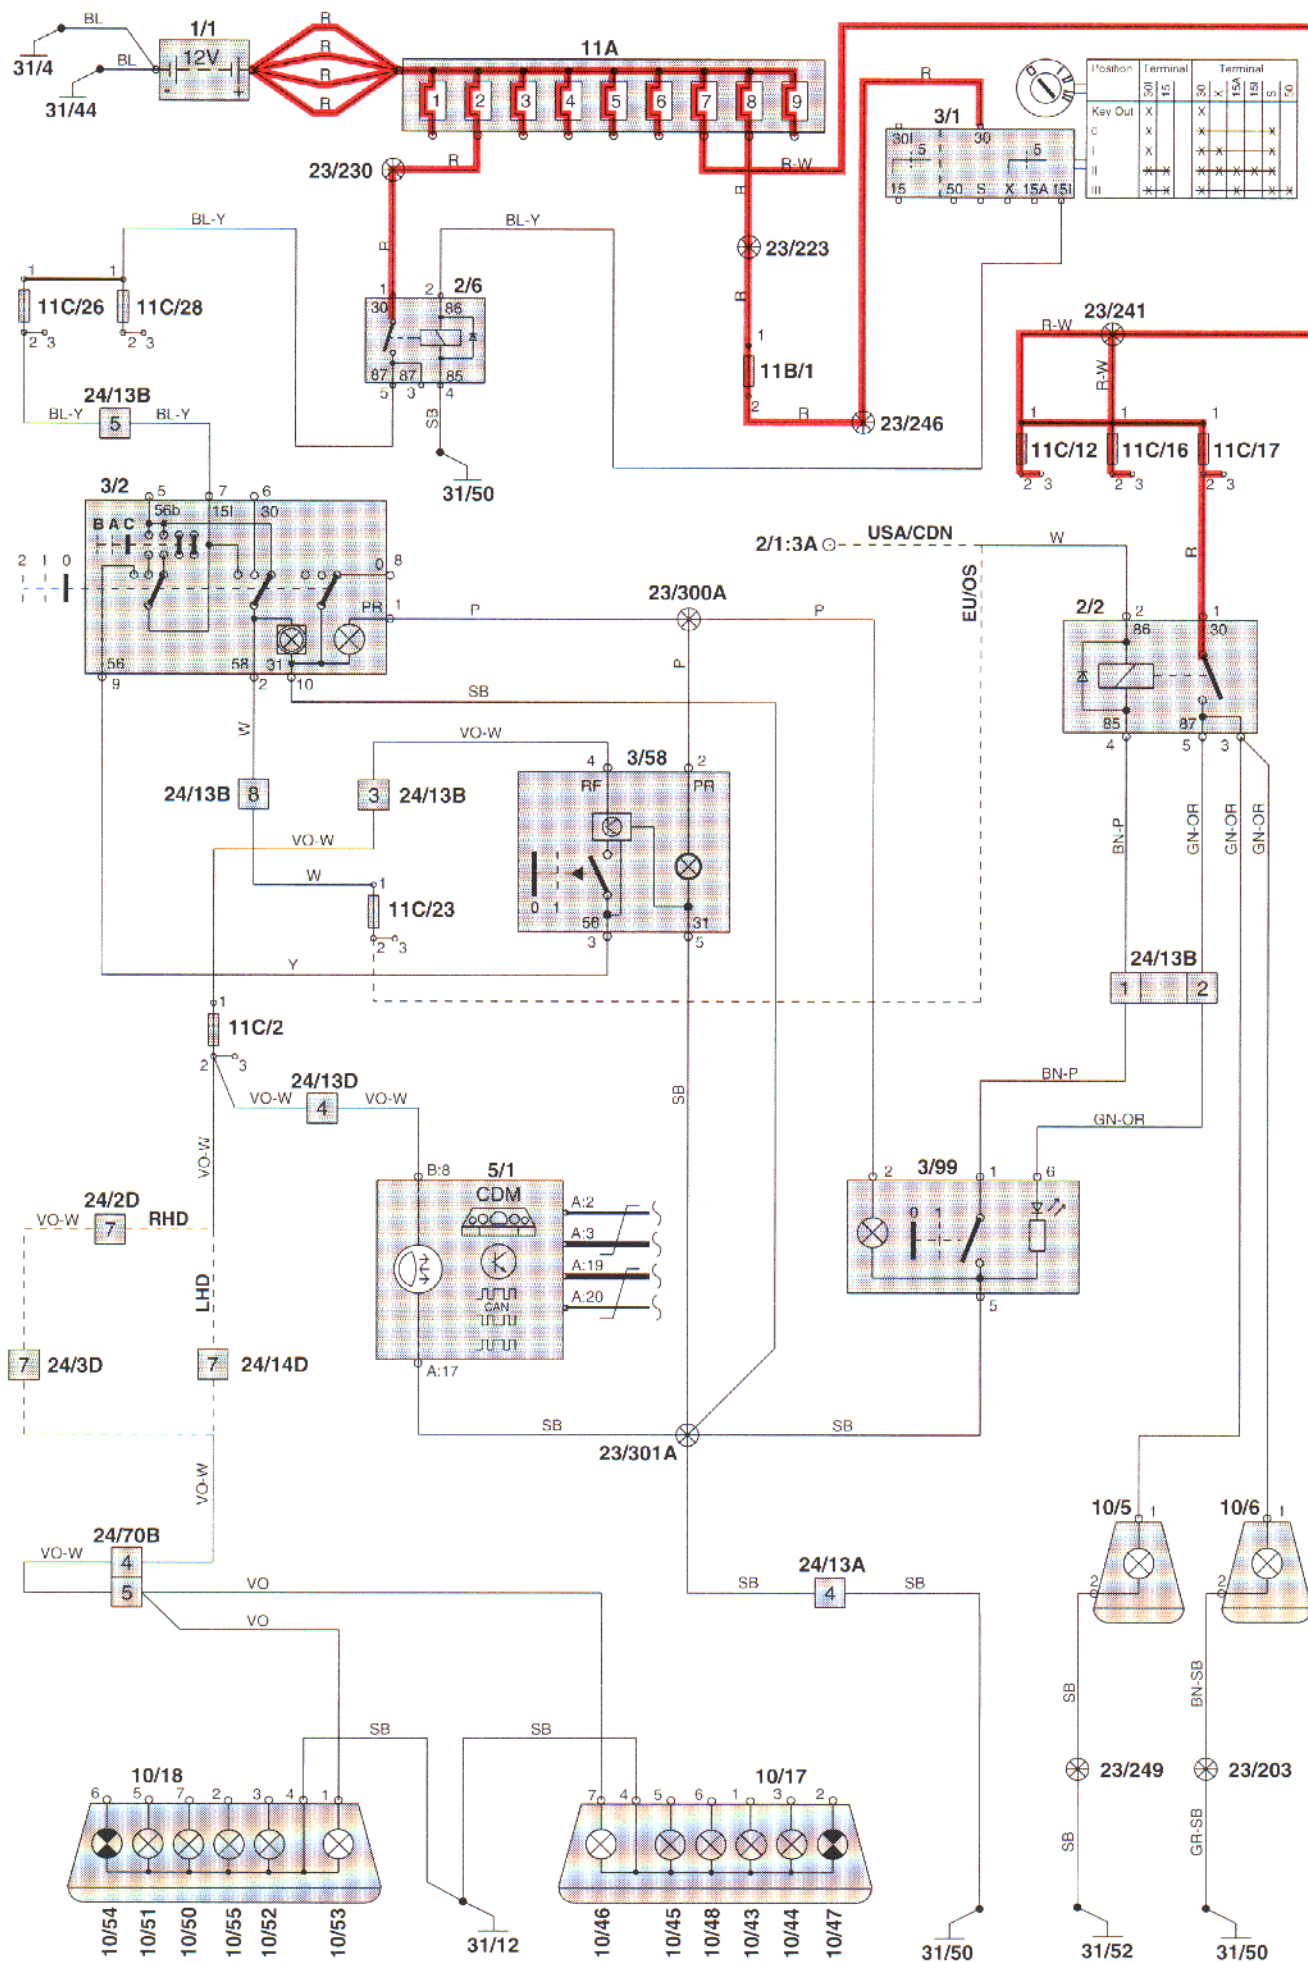


Fog lamp S70, V70

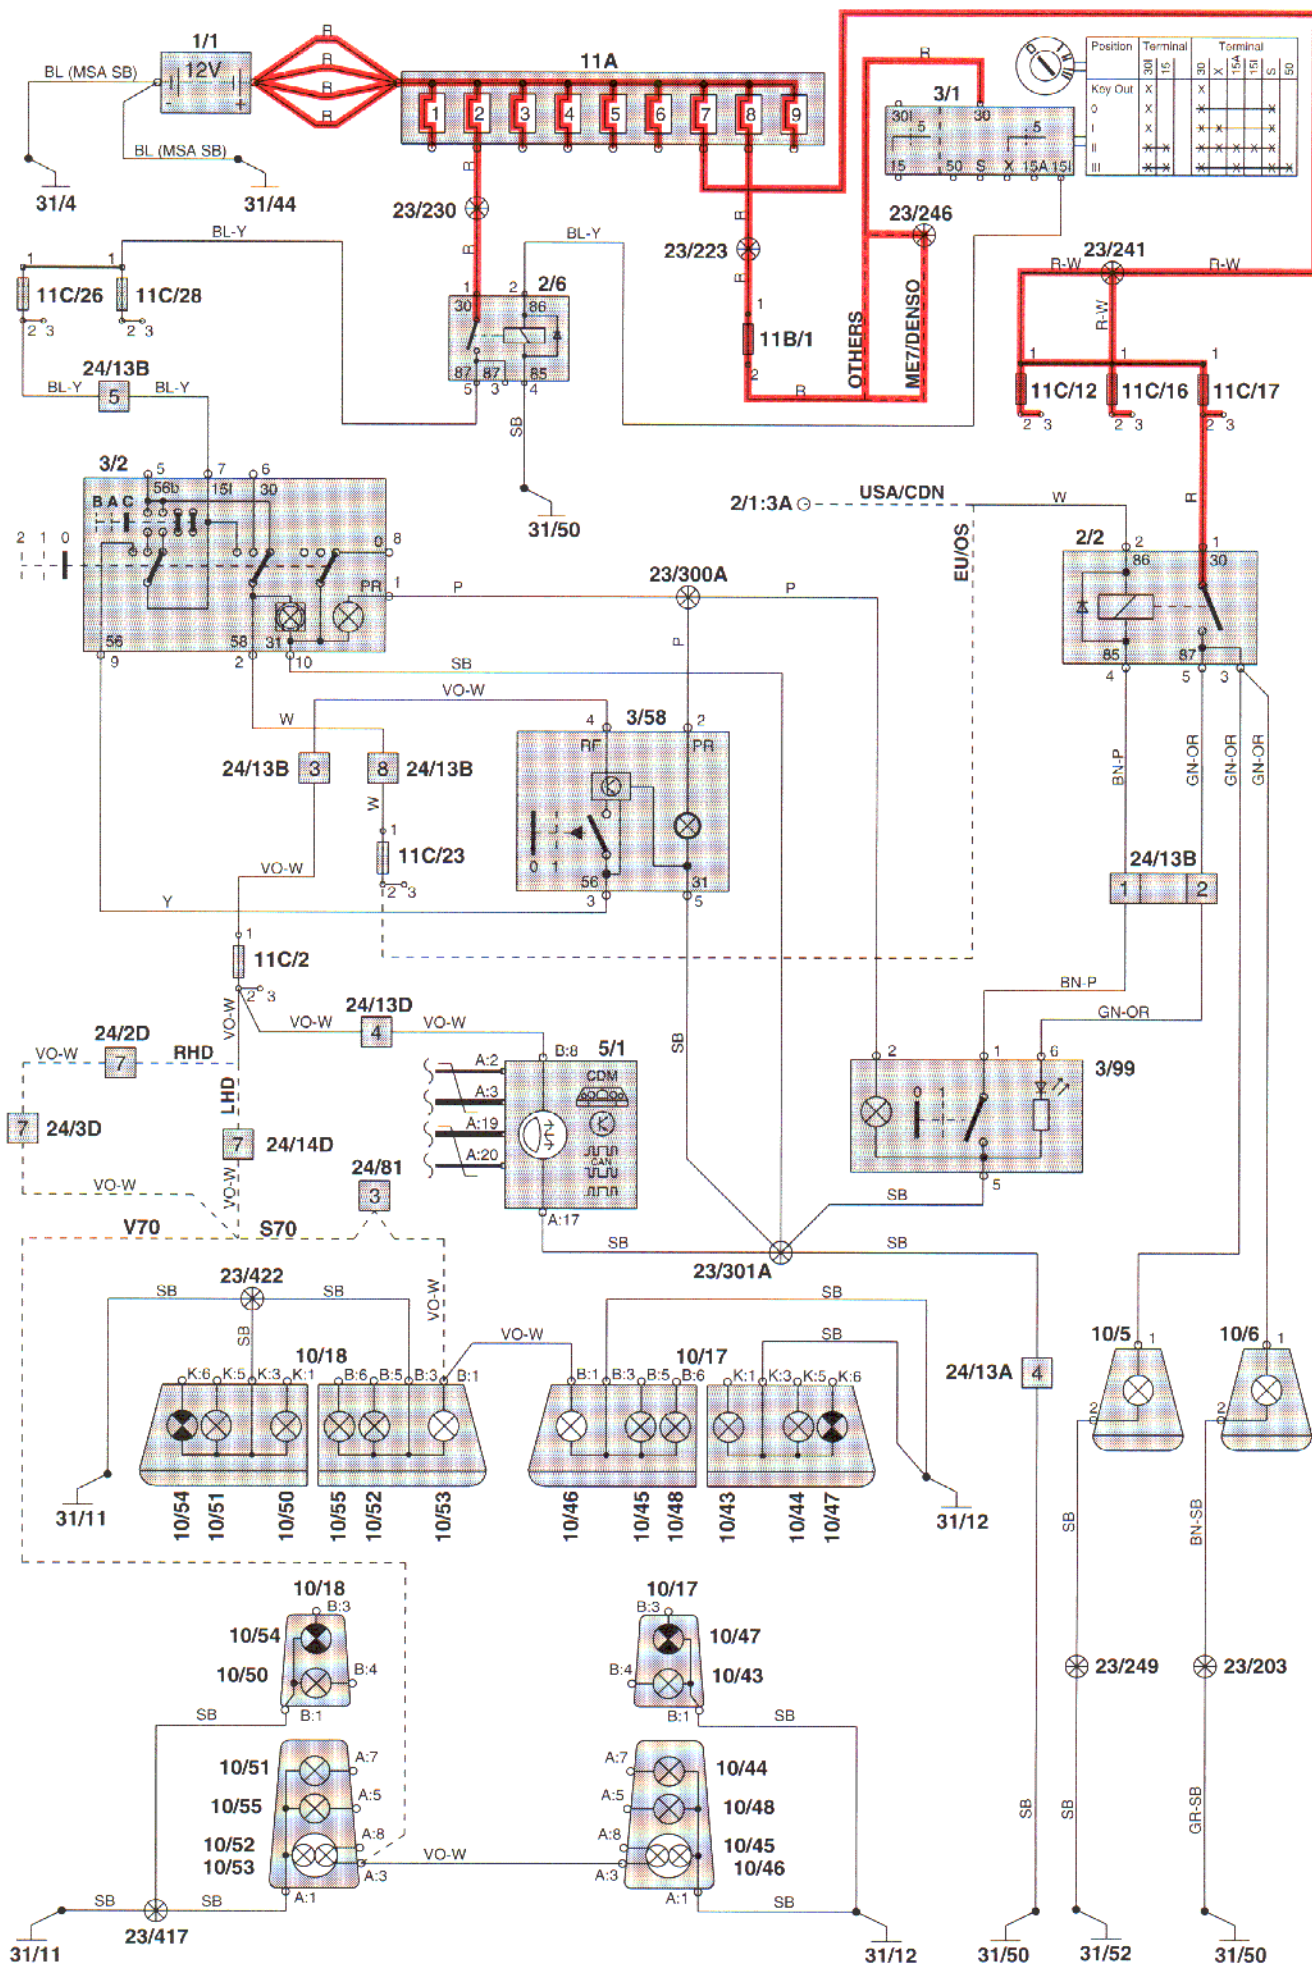


Parking lamps, tail lamps and license (number) plate lighting

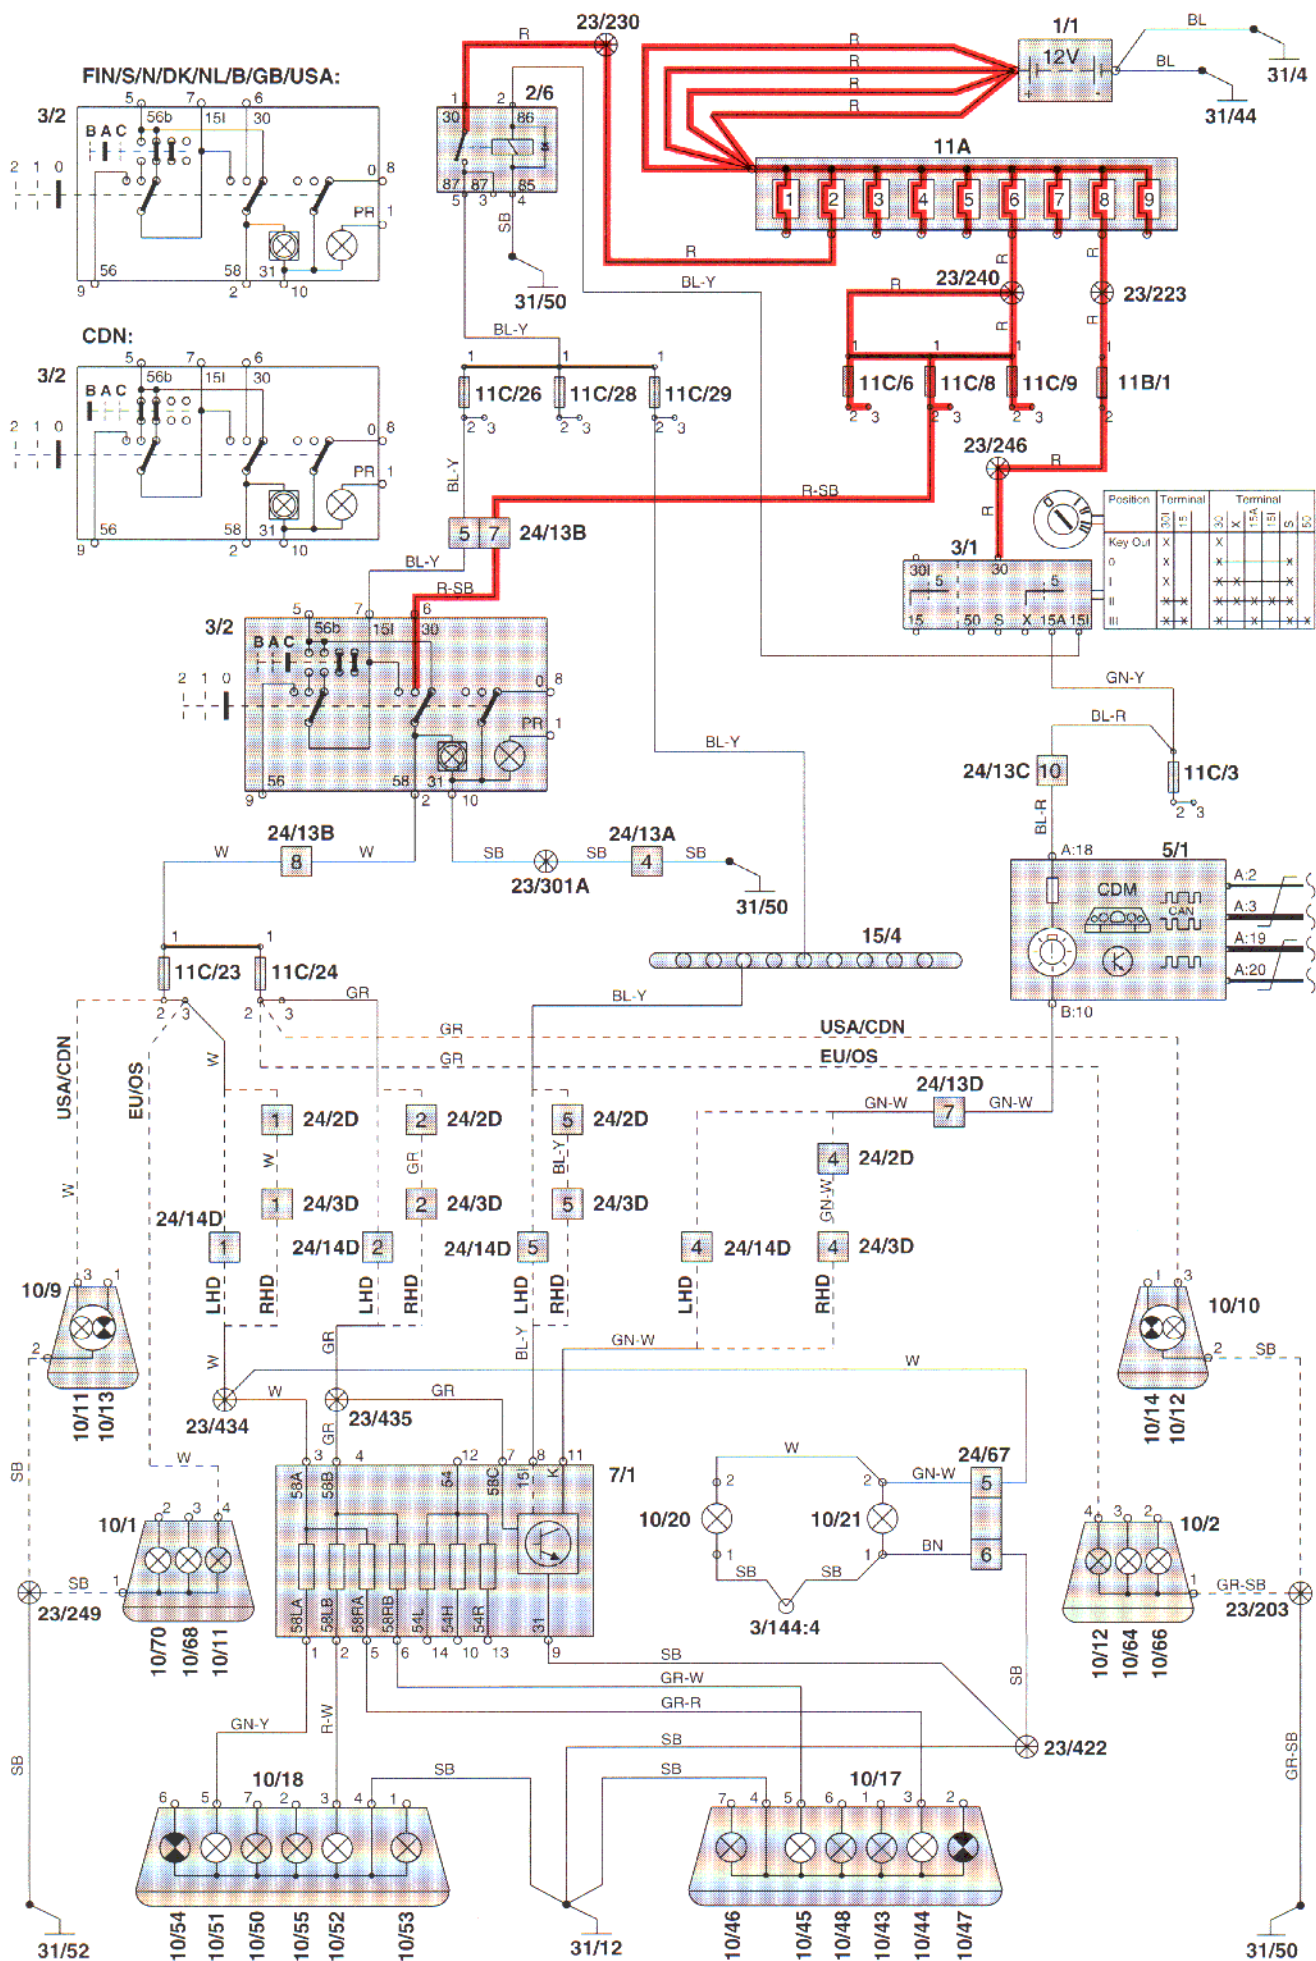


Parking lamps, tail lamps and license (number) plate lighting
S70

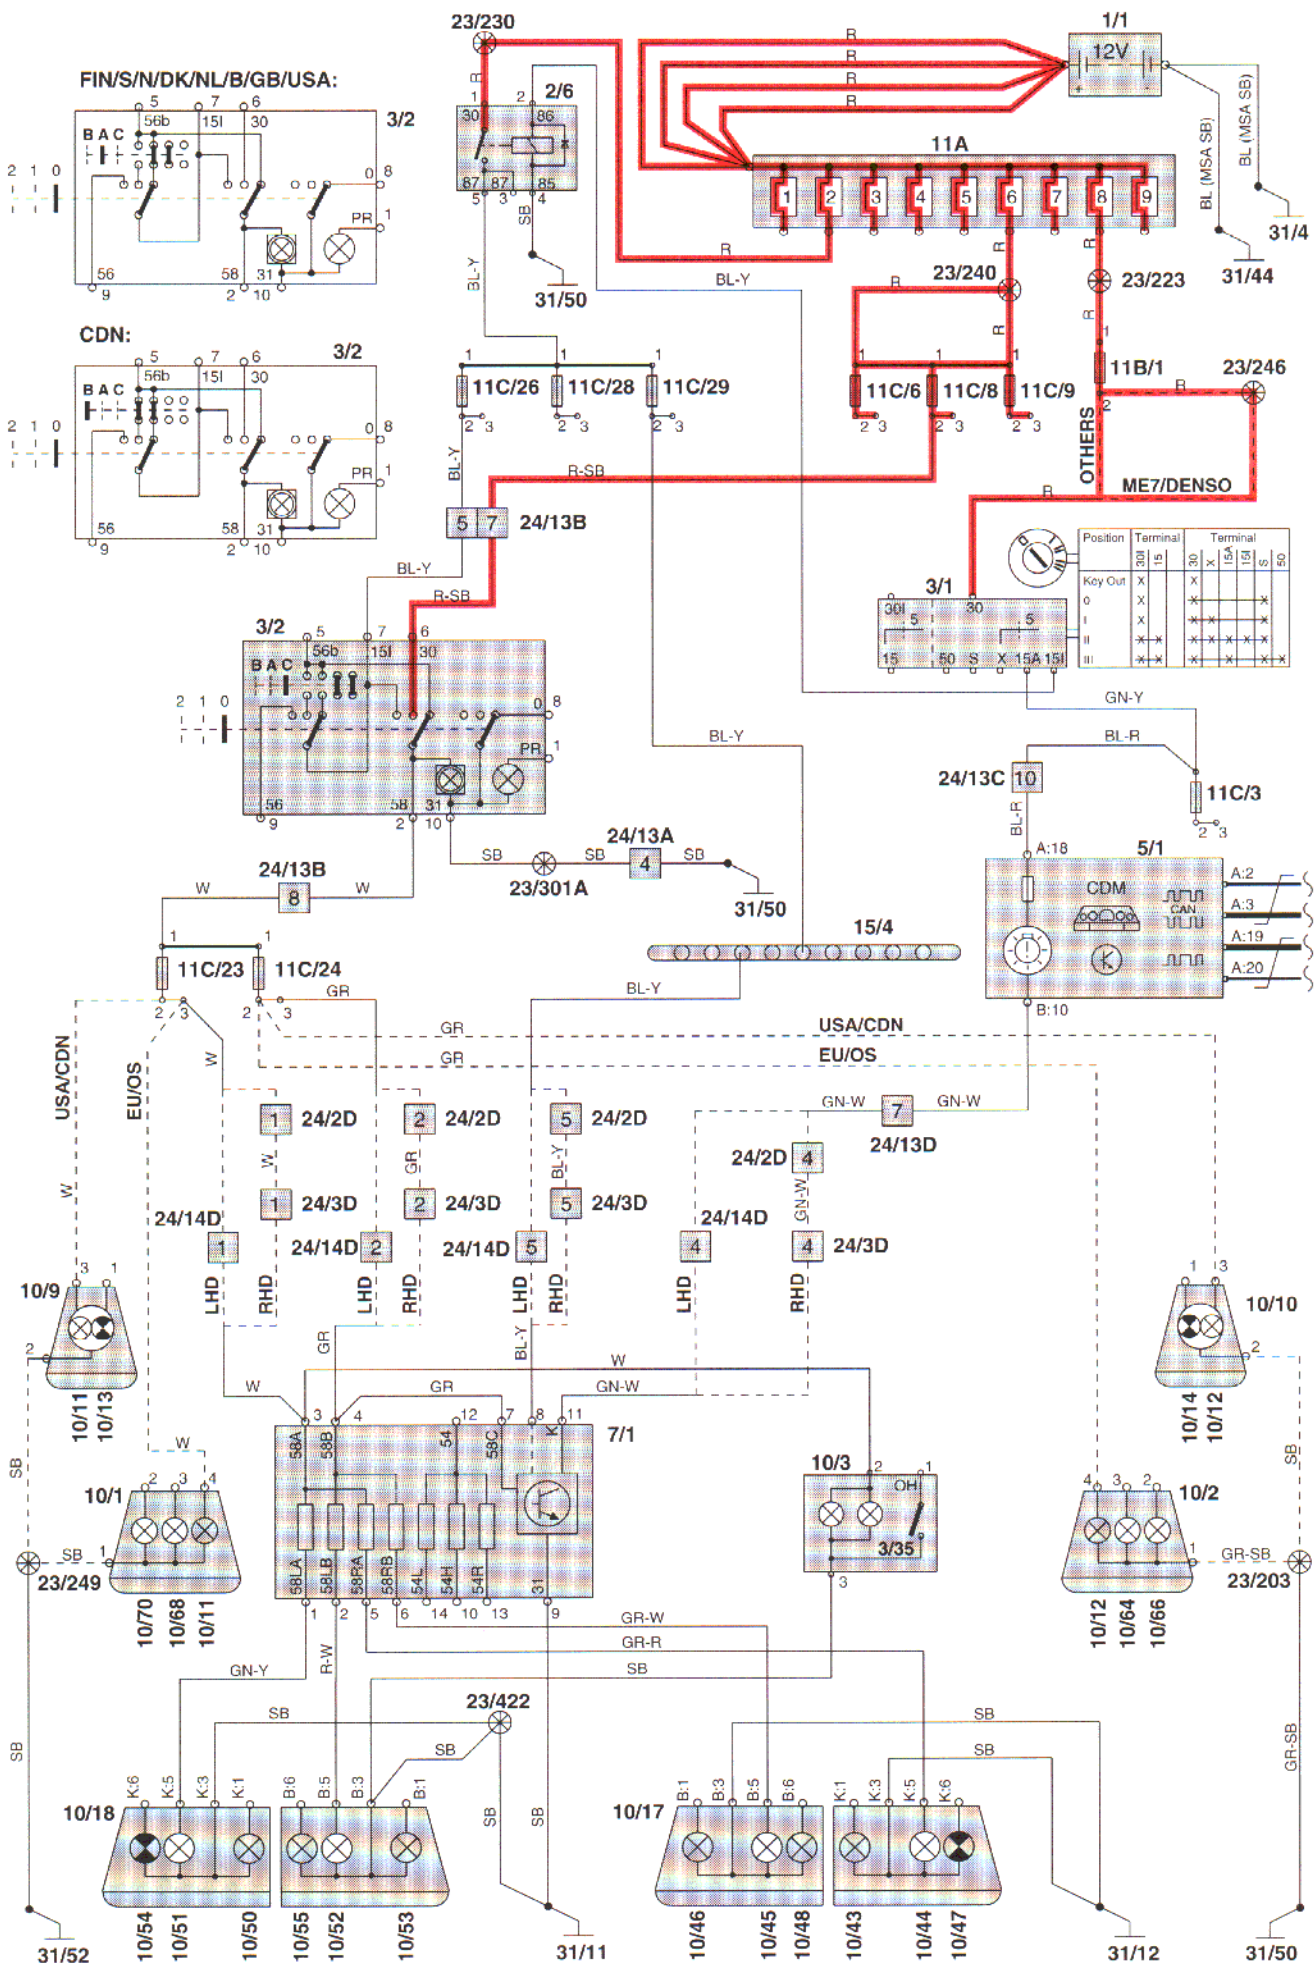


Parking lamps, tail lamps and license (number) plate lighting V70

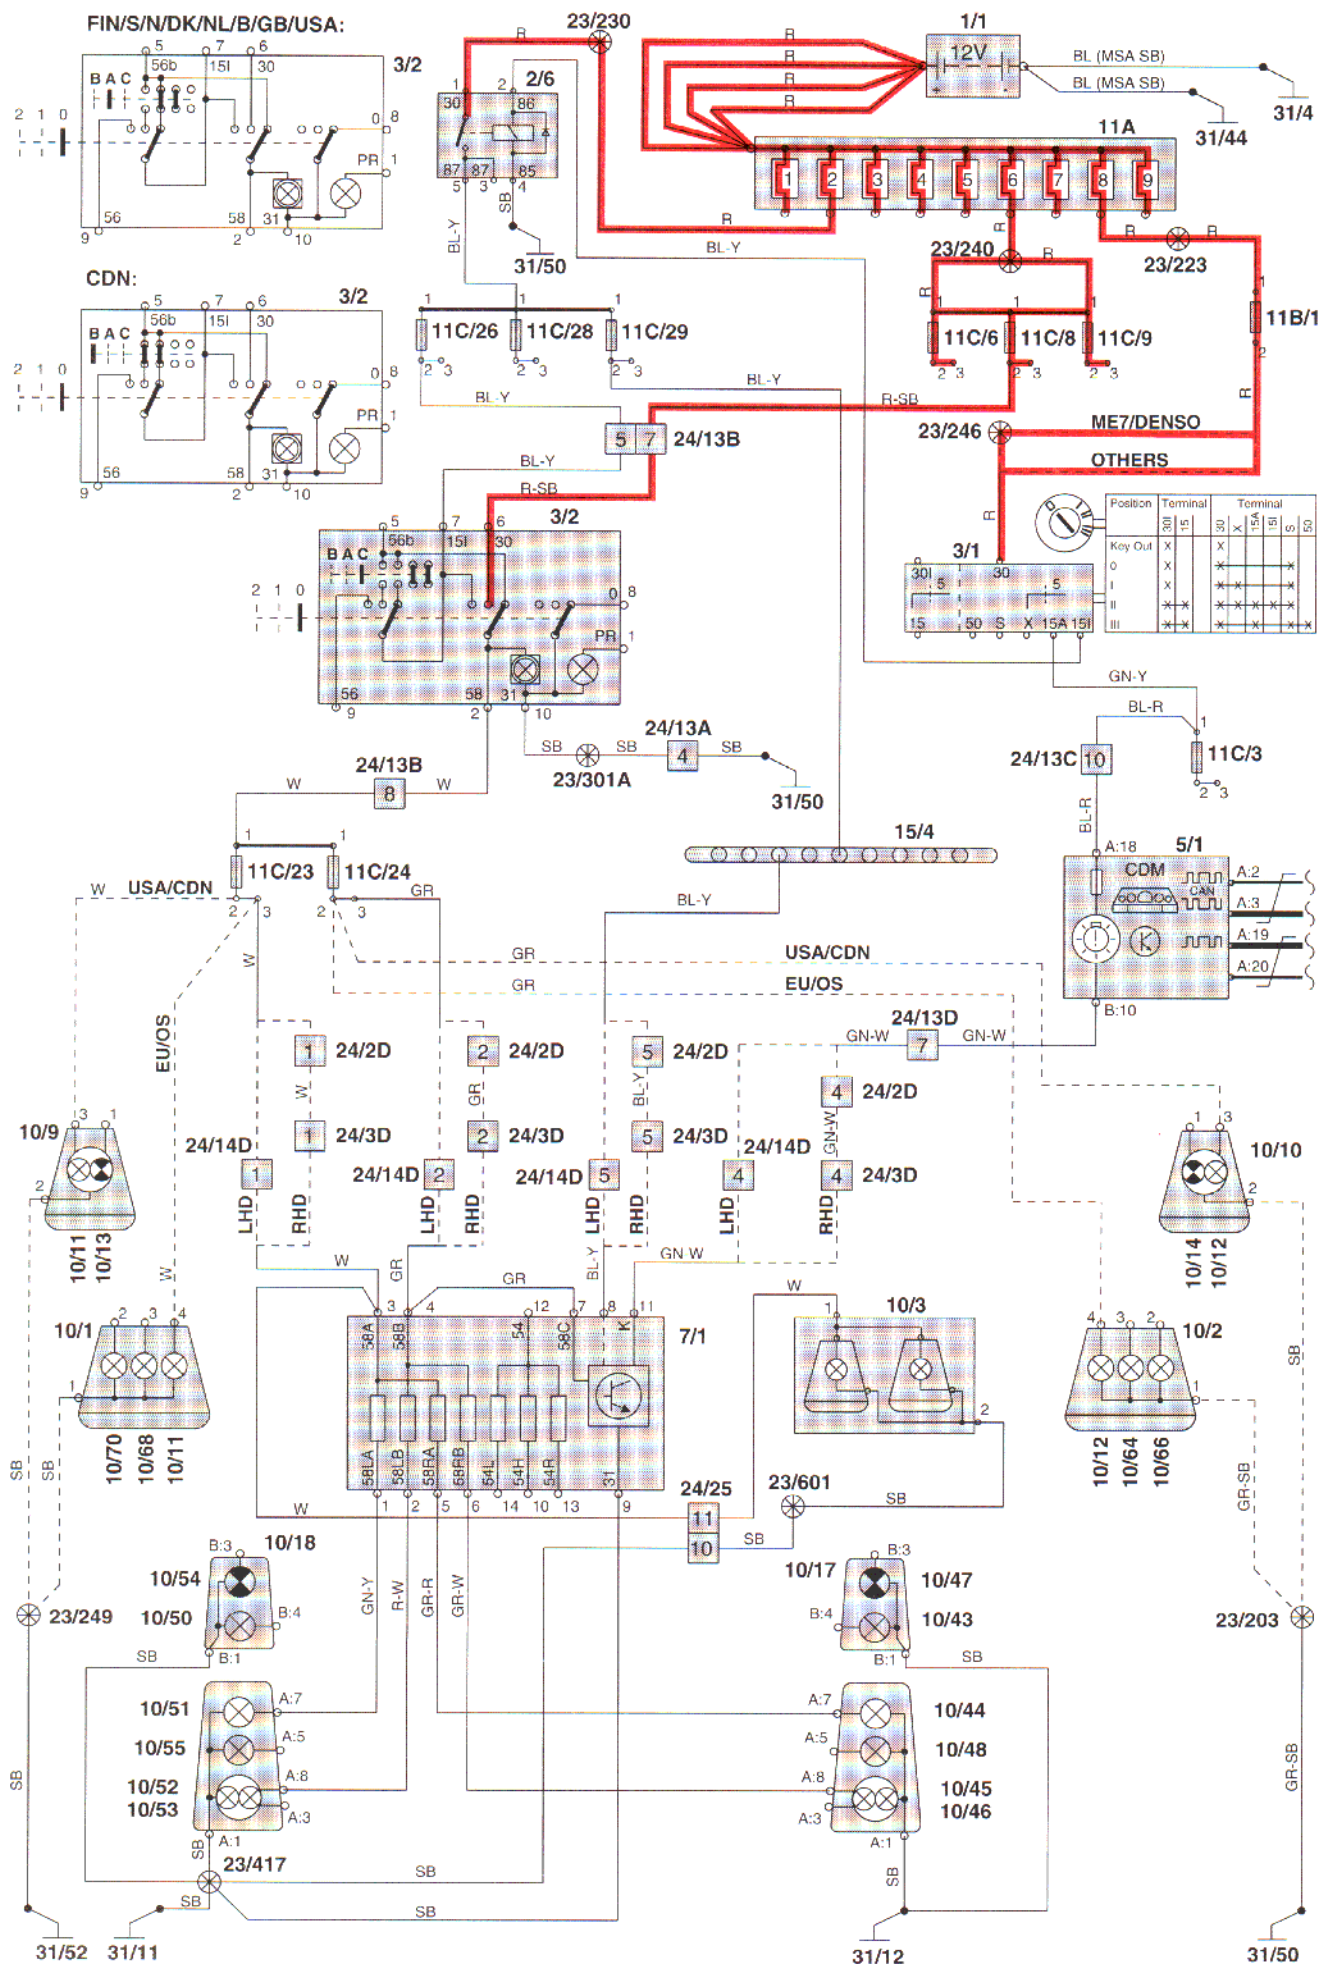


Brake (stop) lamps

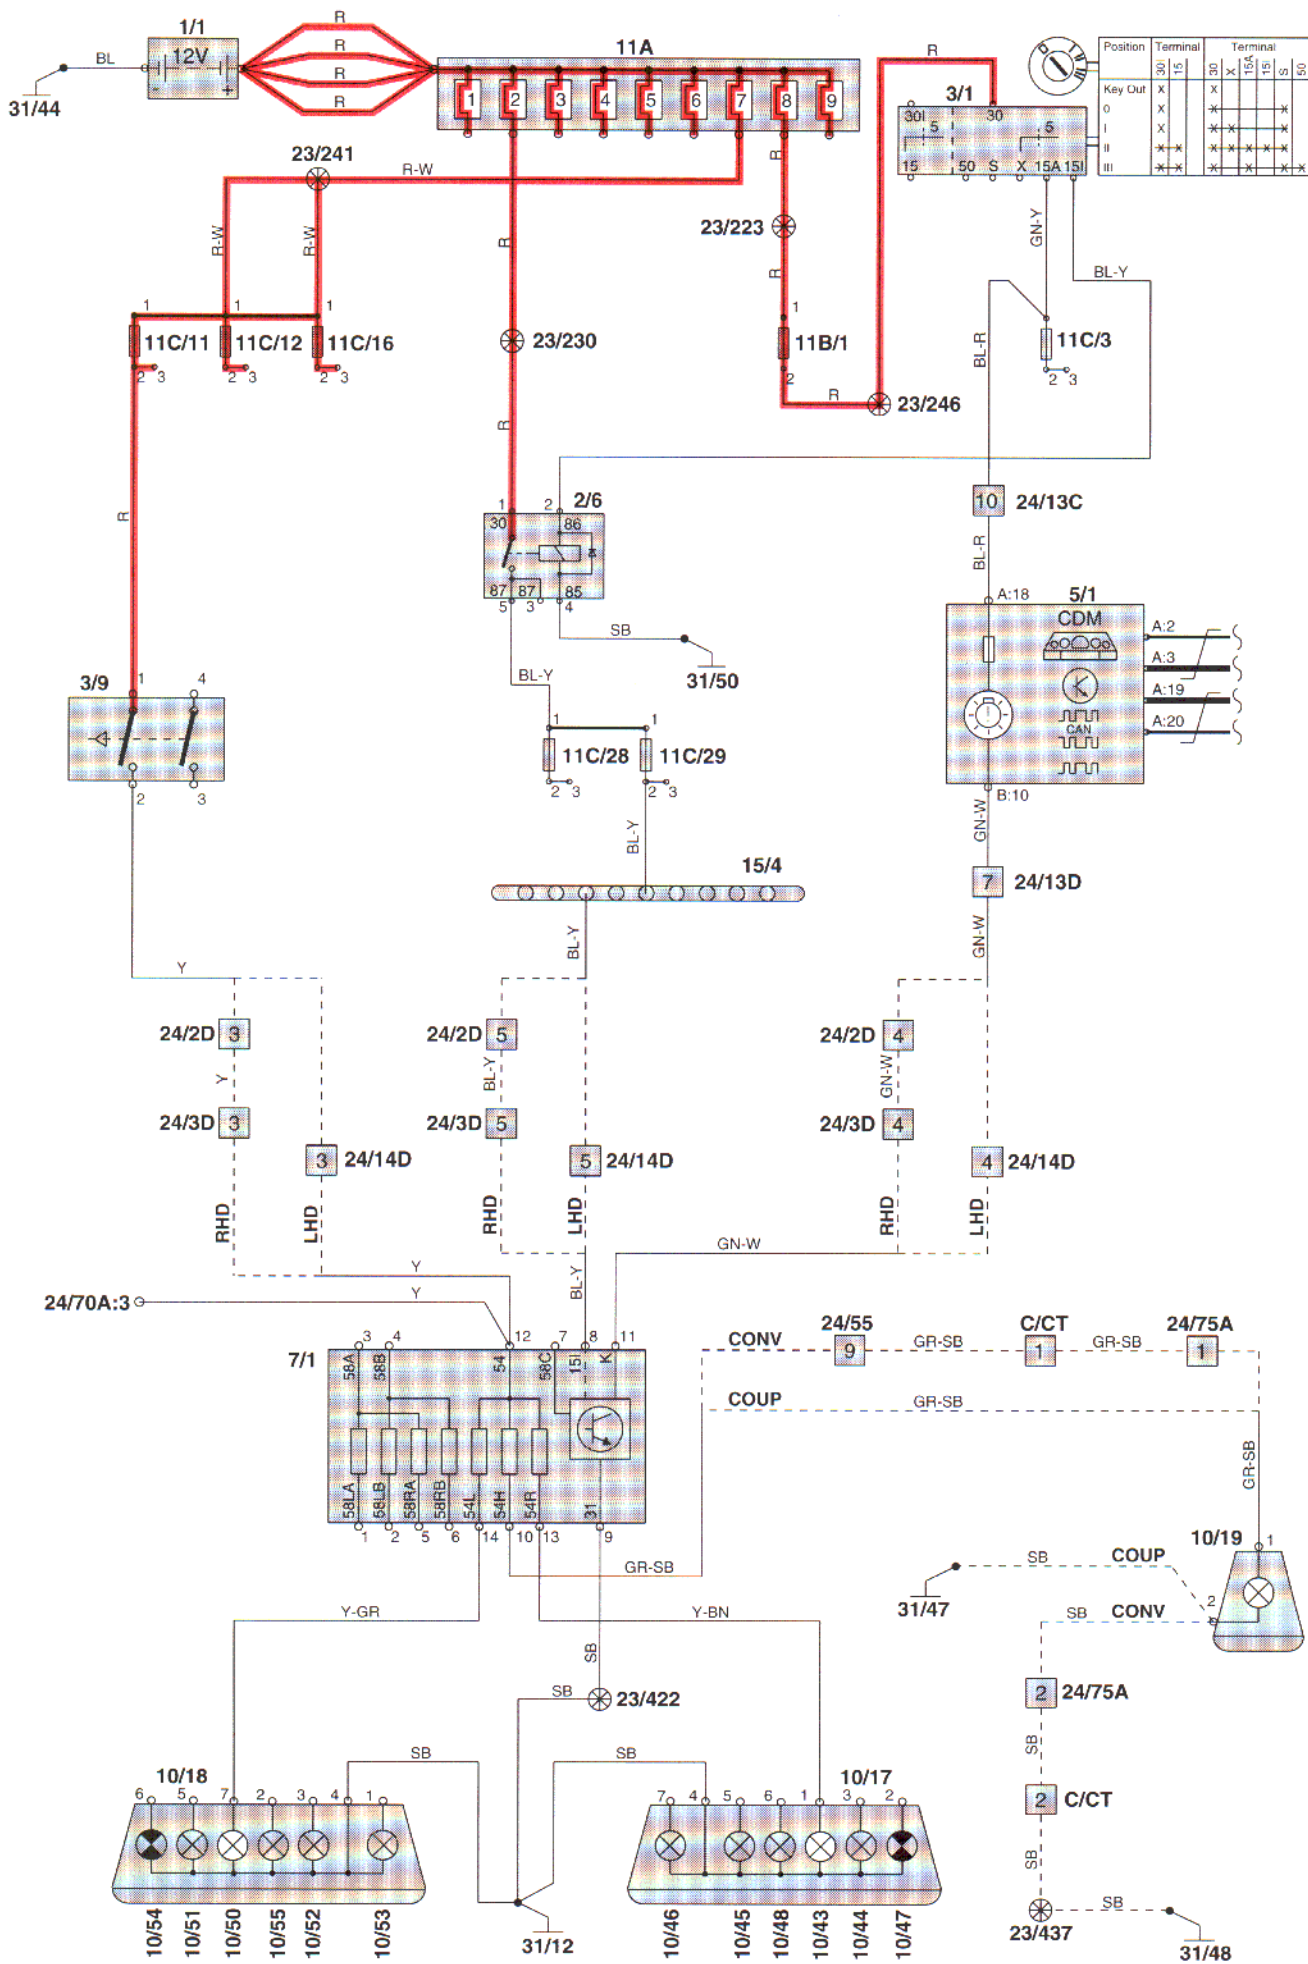


Brake (stop) lamps S70

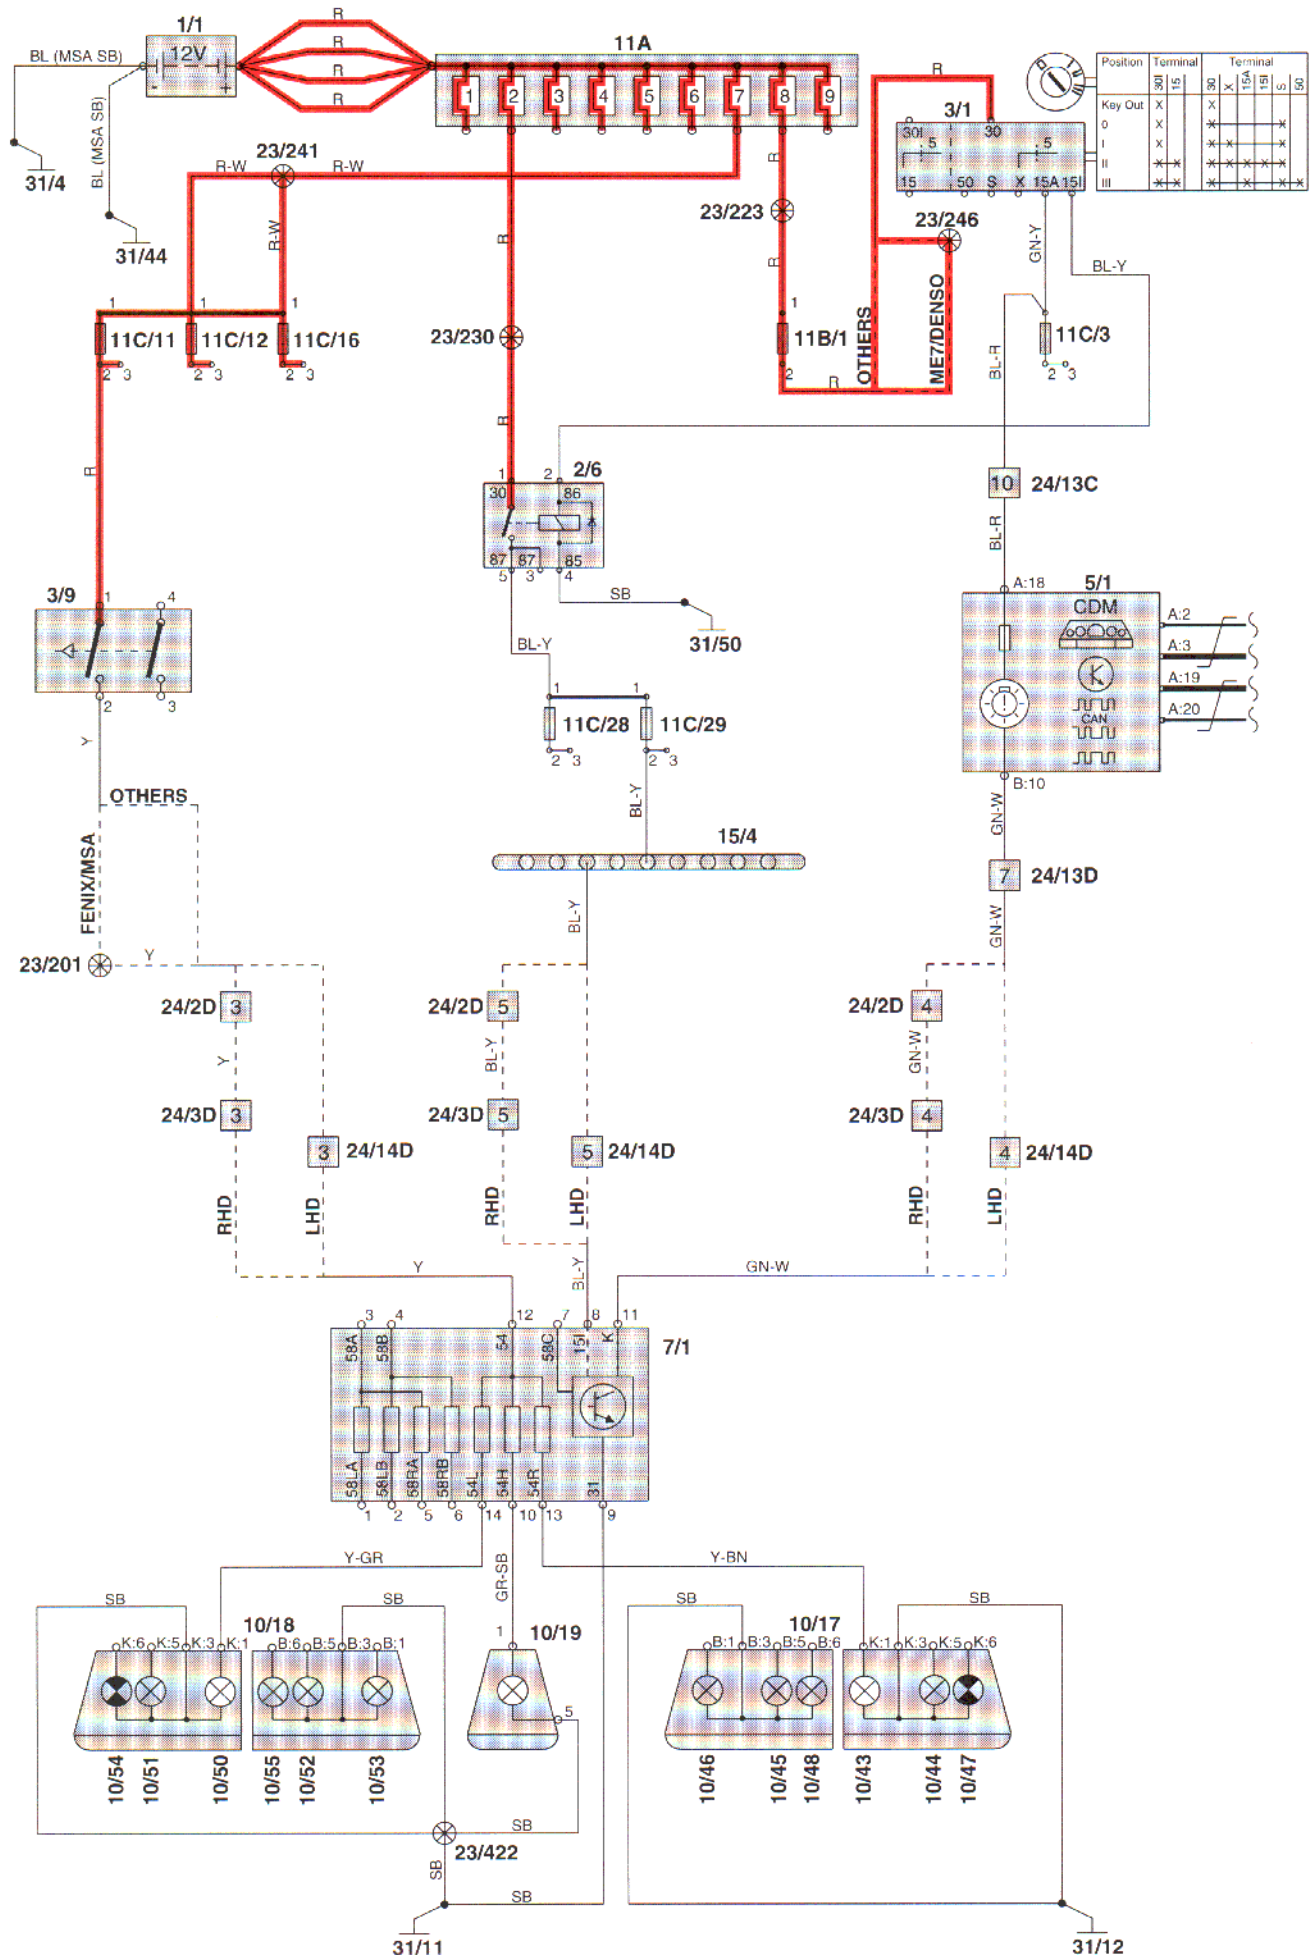


Brake (stop) lamps V70

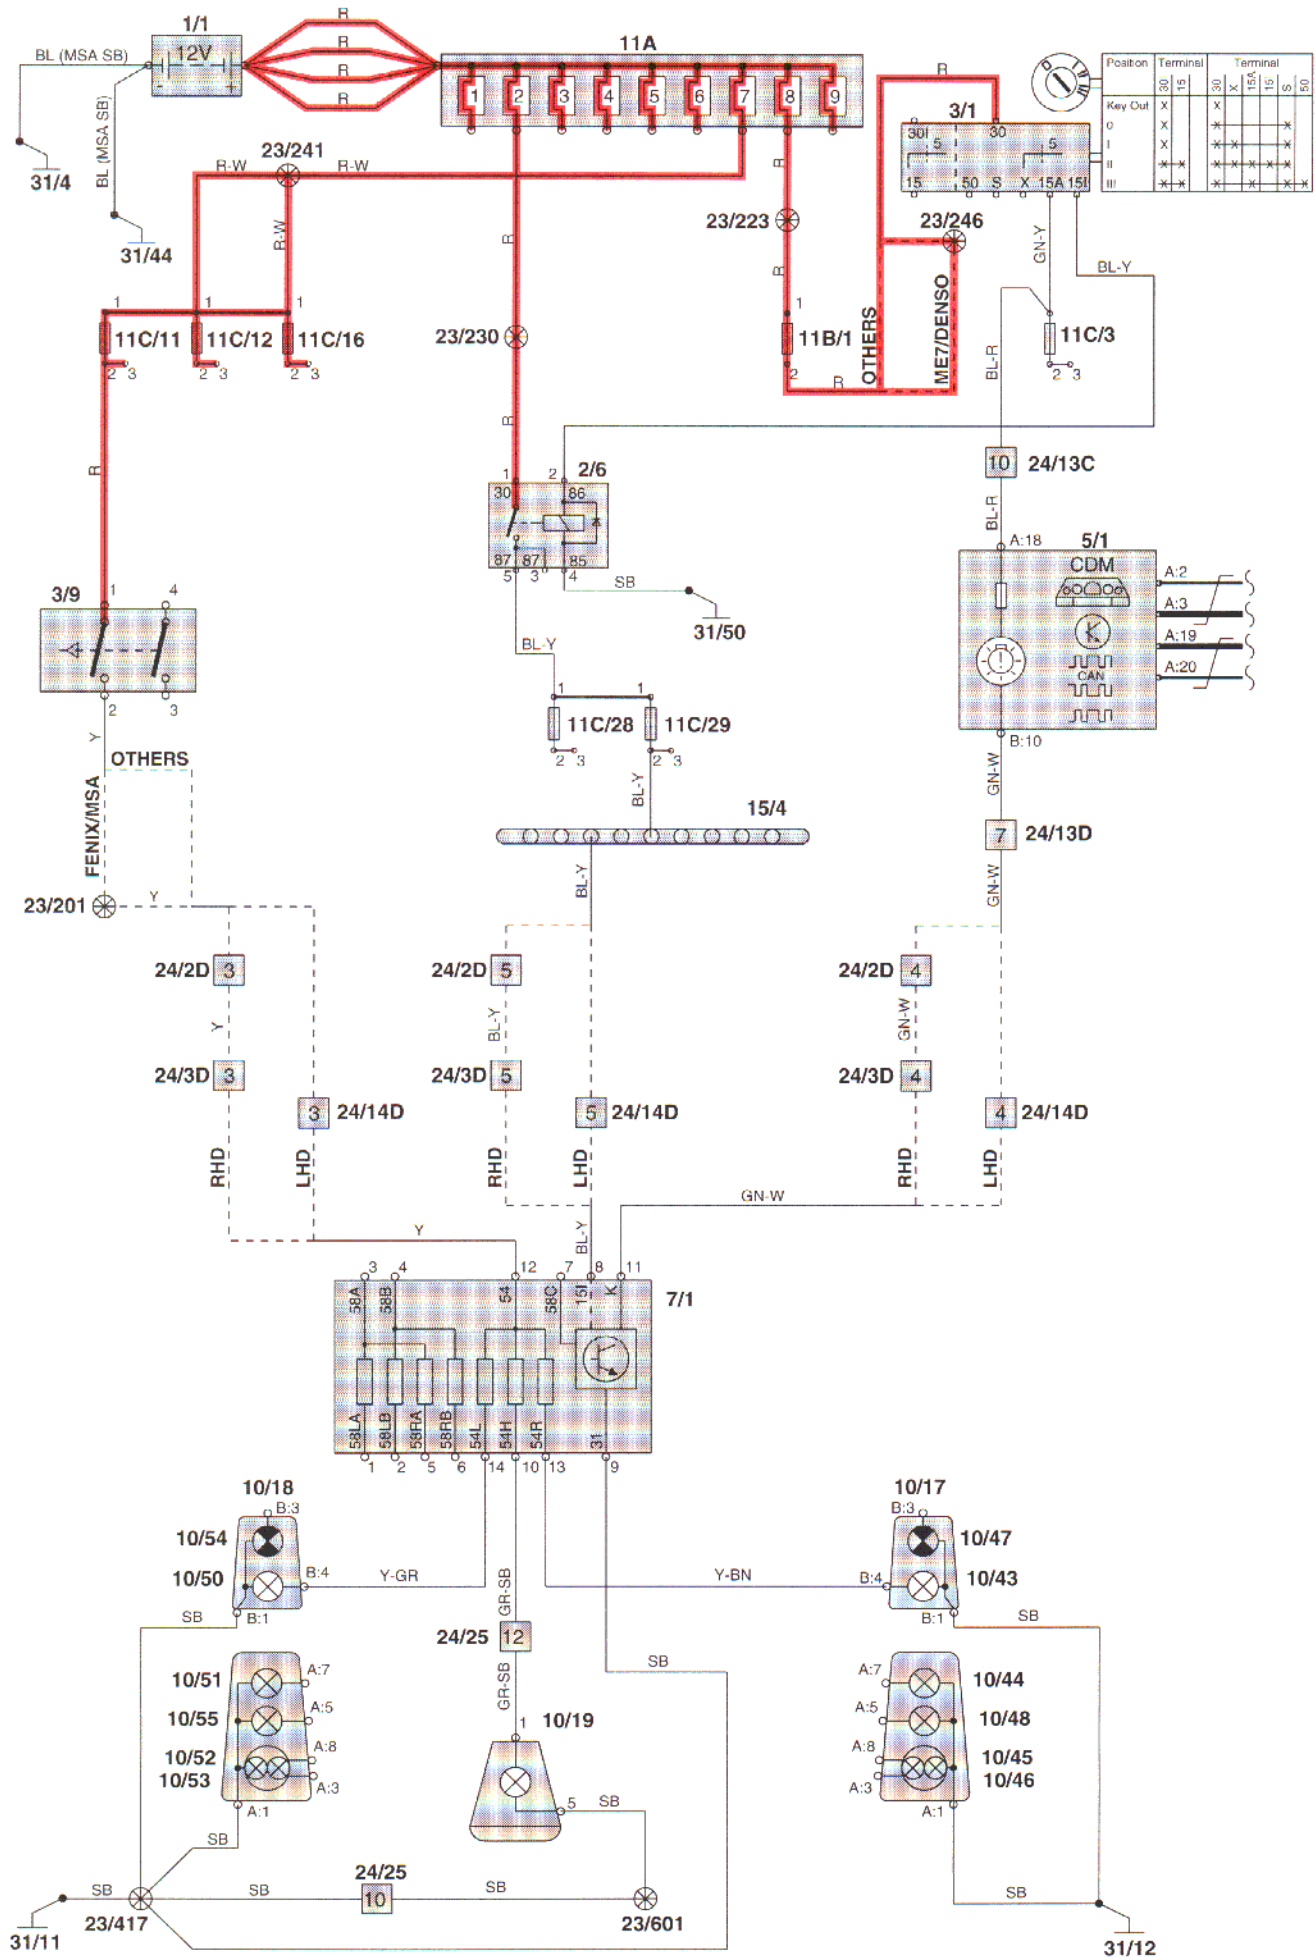


Reversing lamp

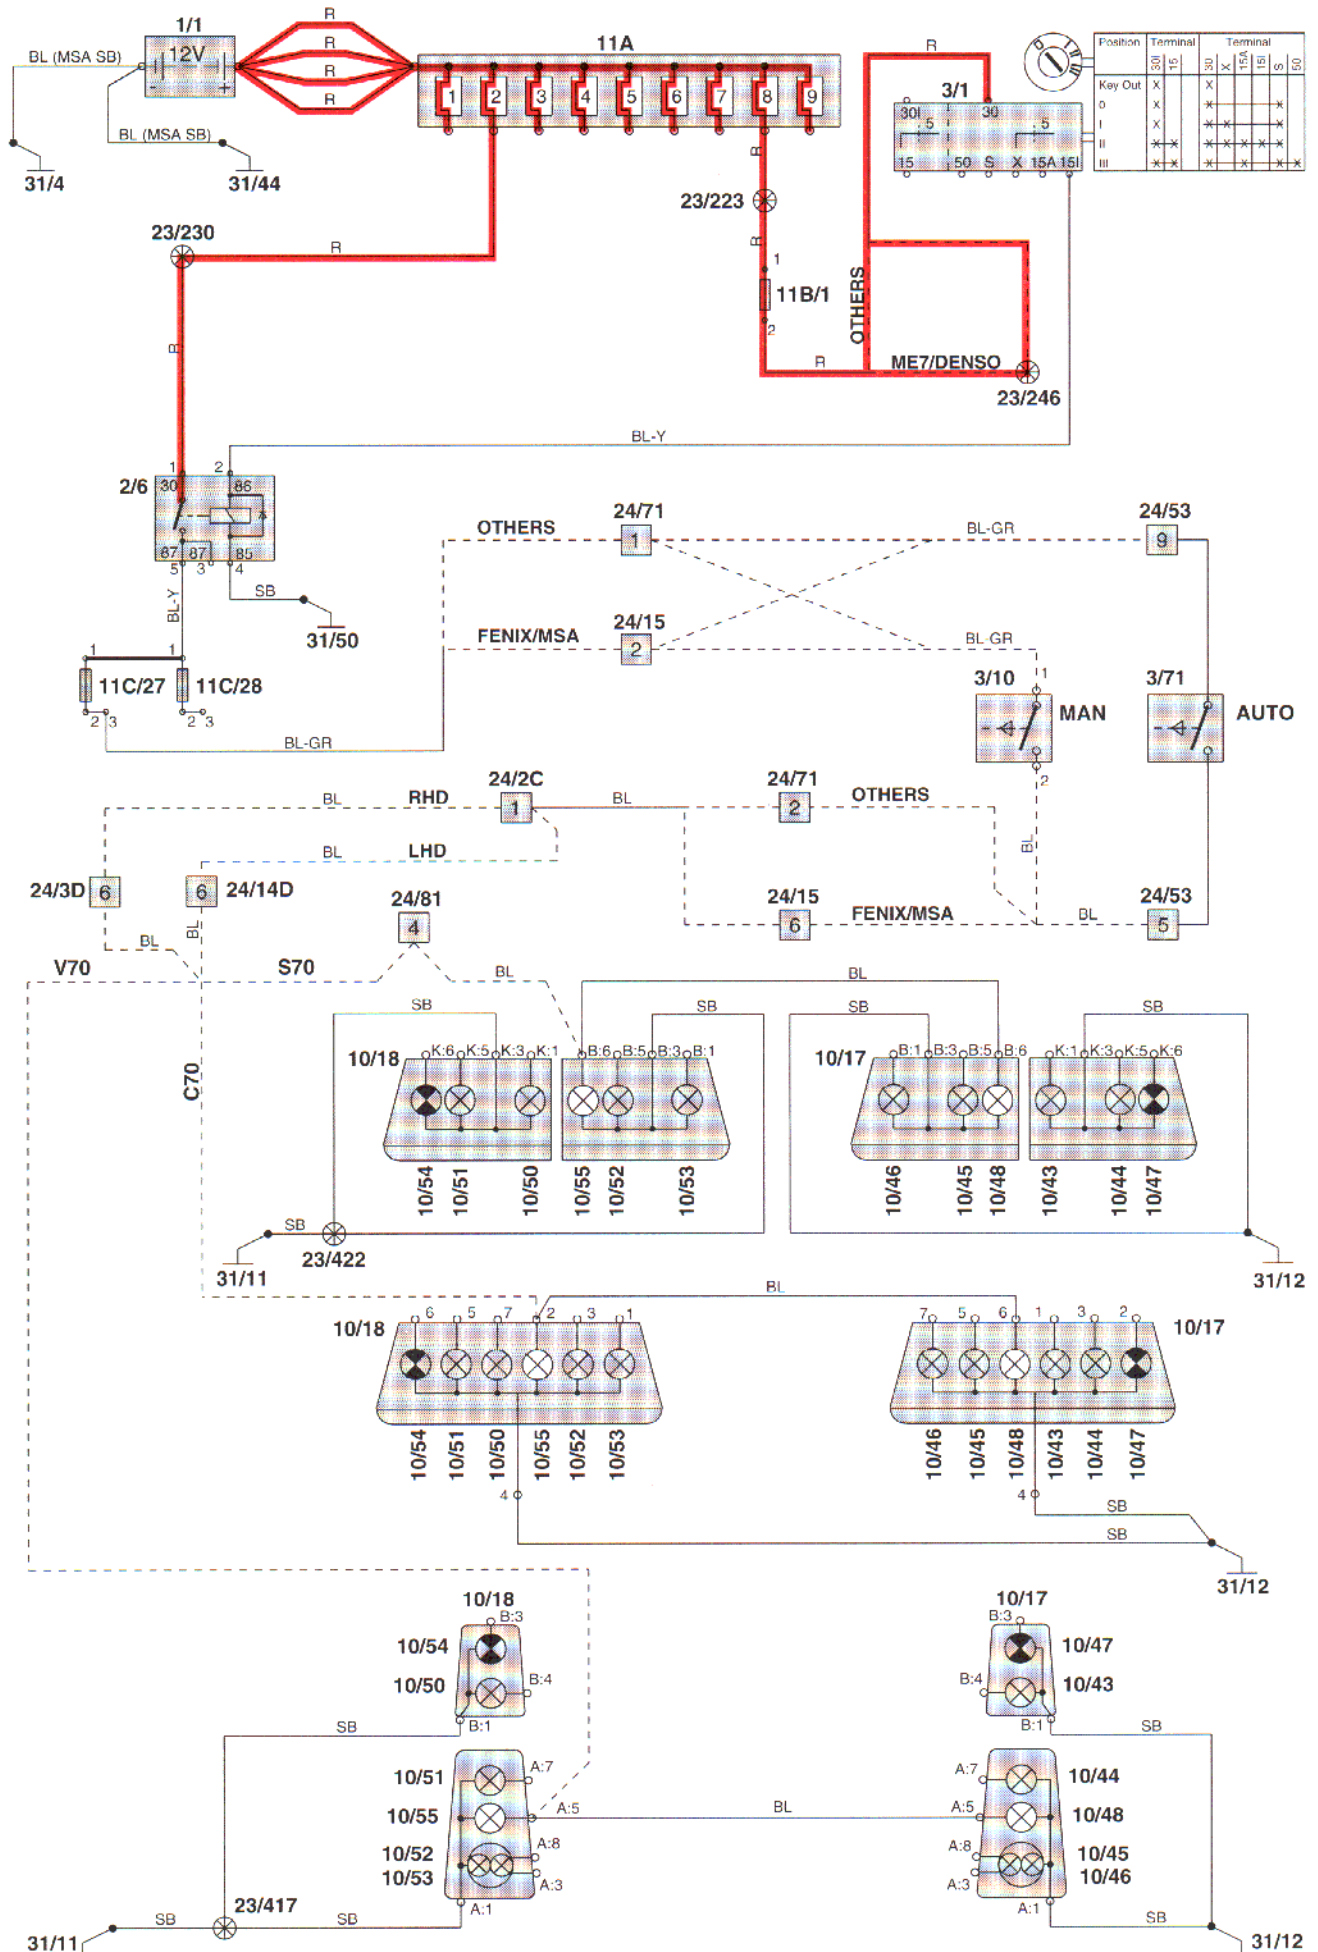


Interior lighting C70 coupé

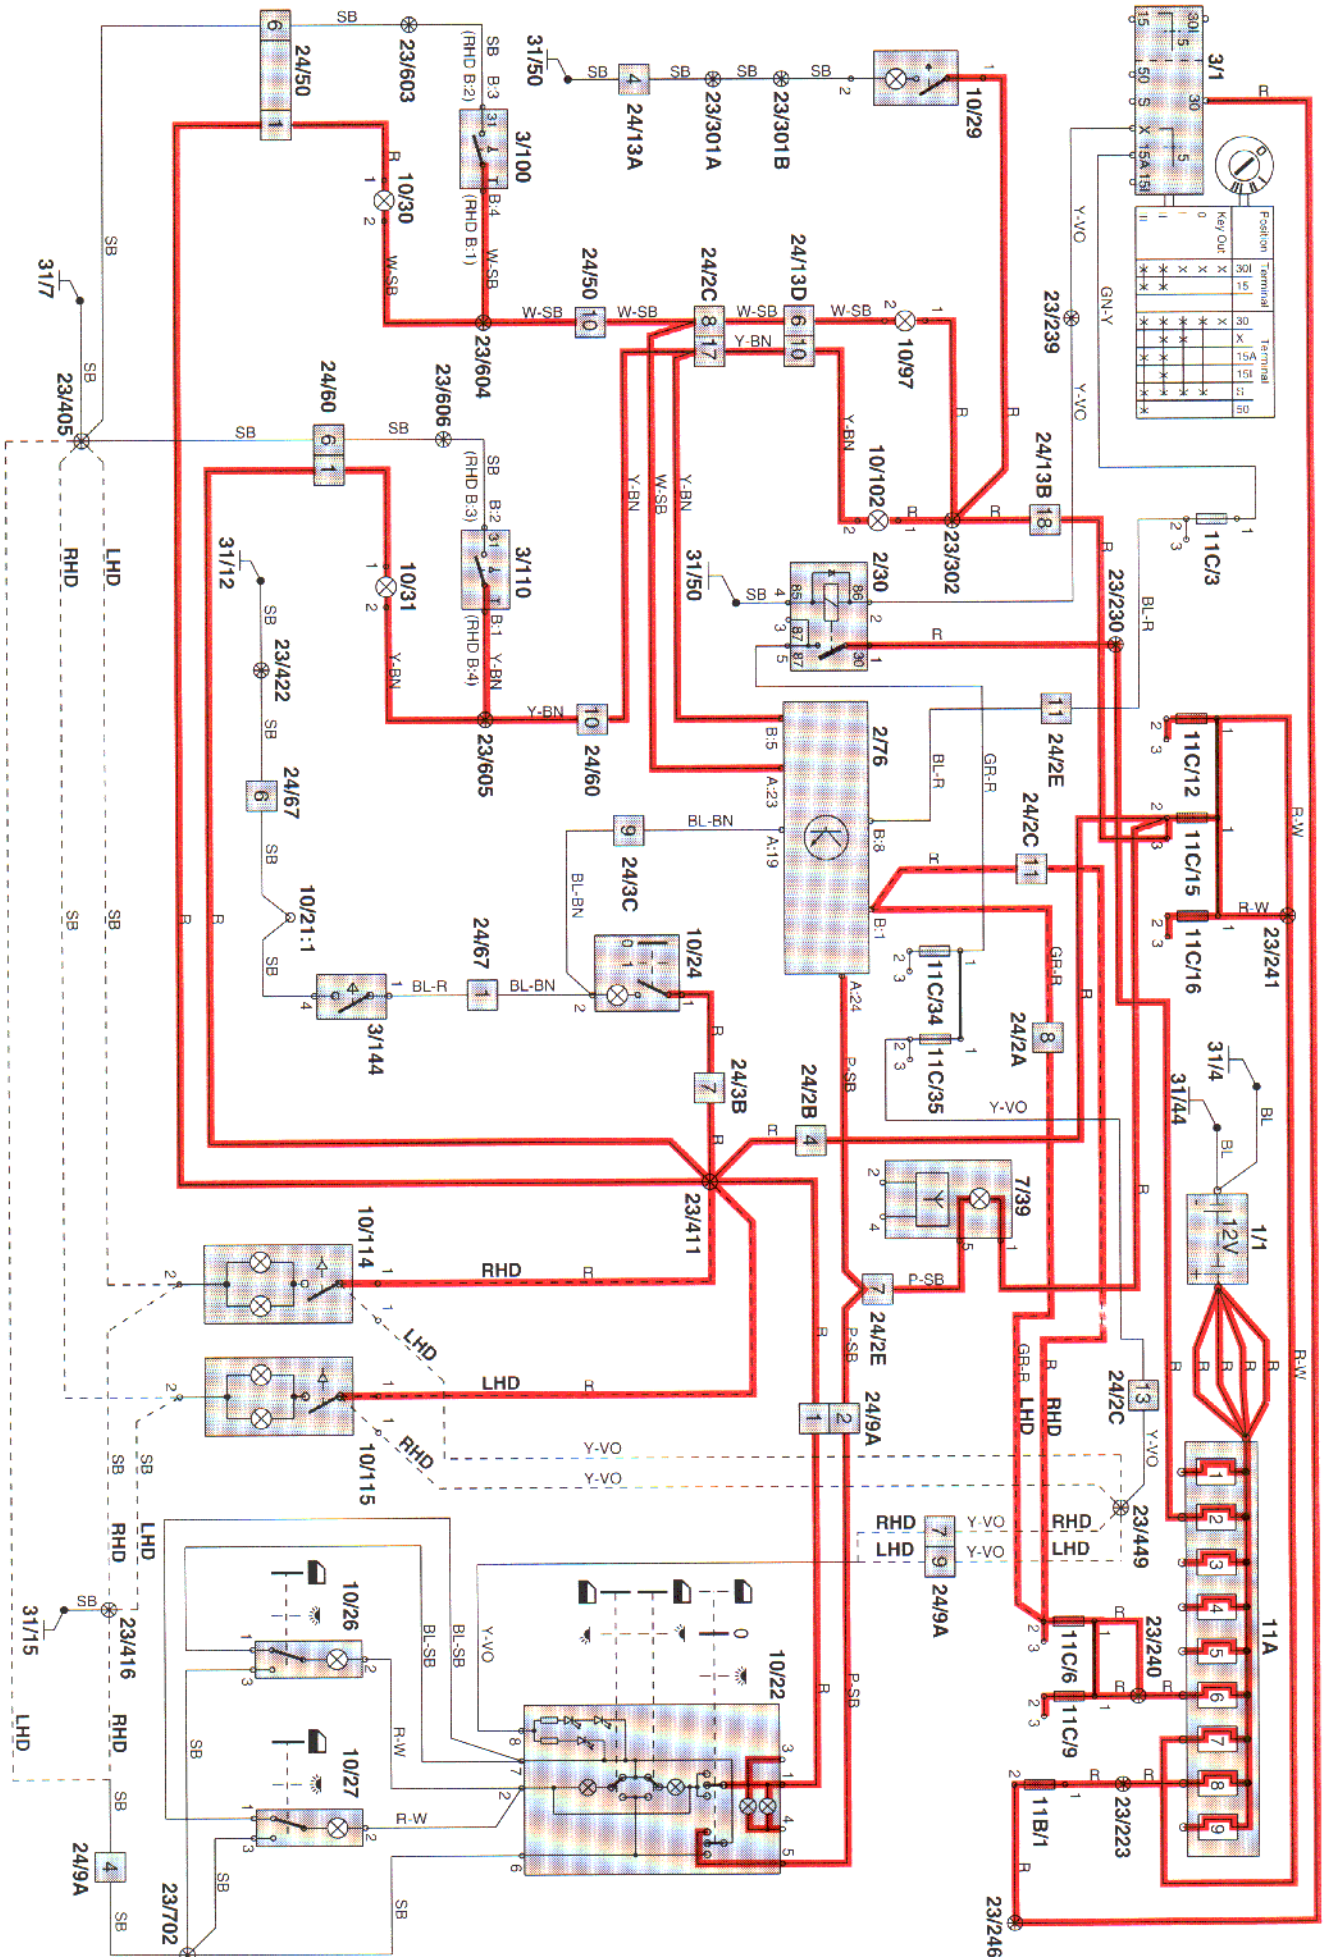


Interior lighting S70, V70

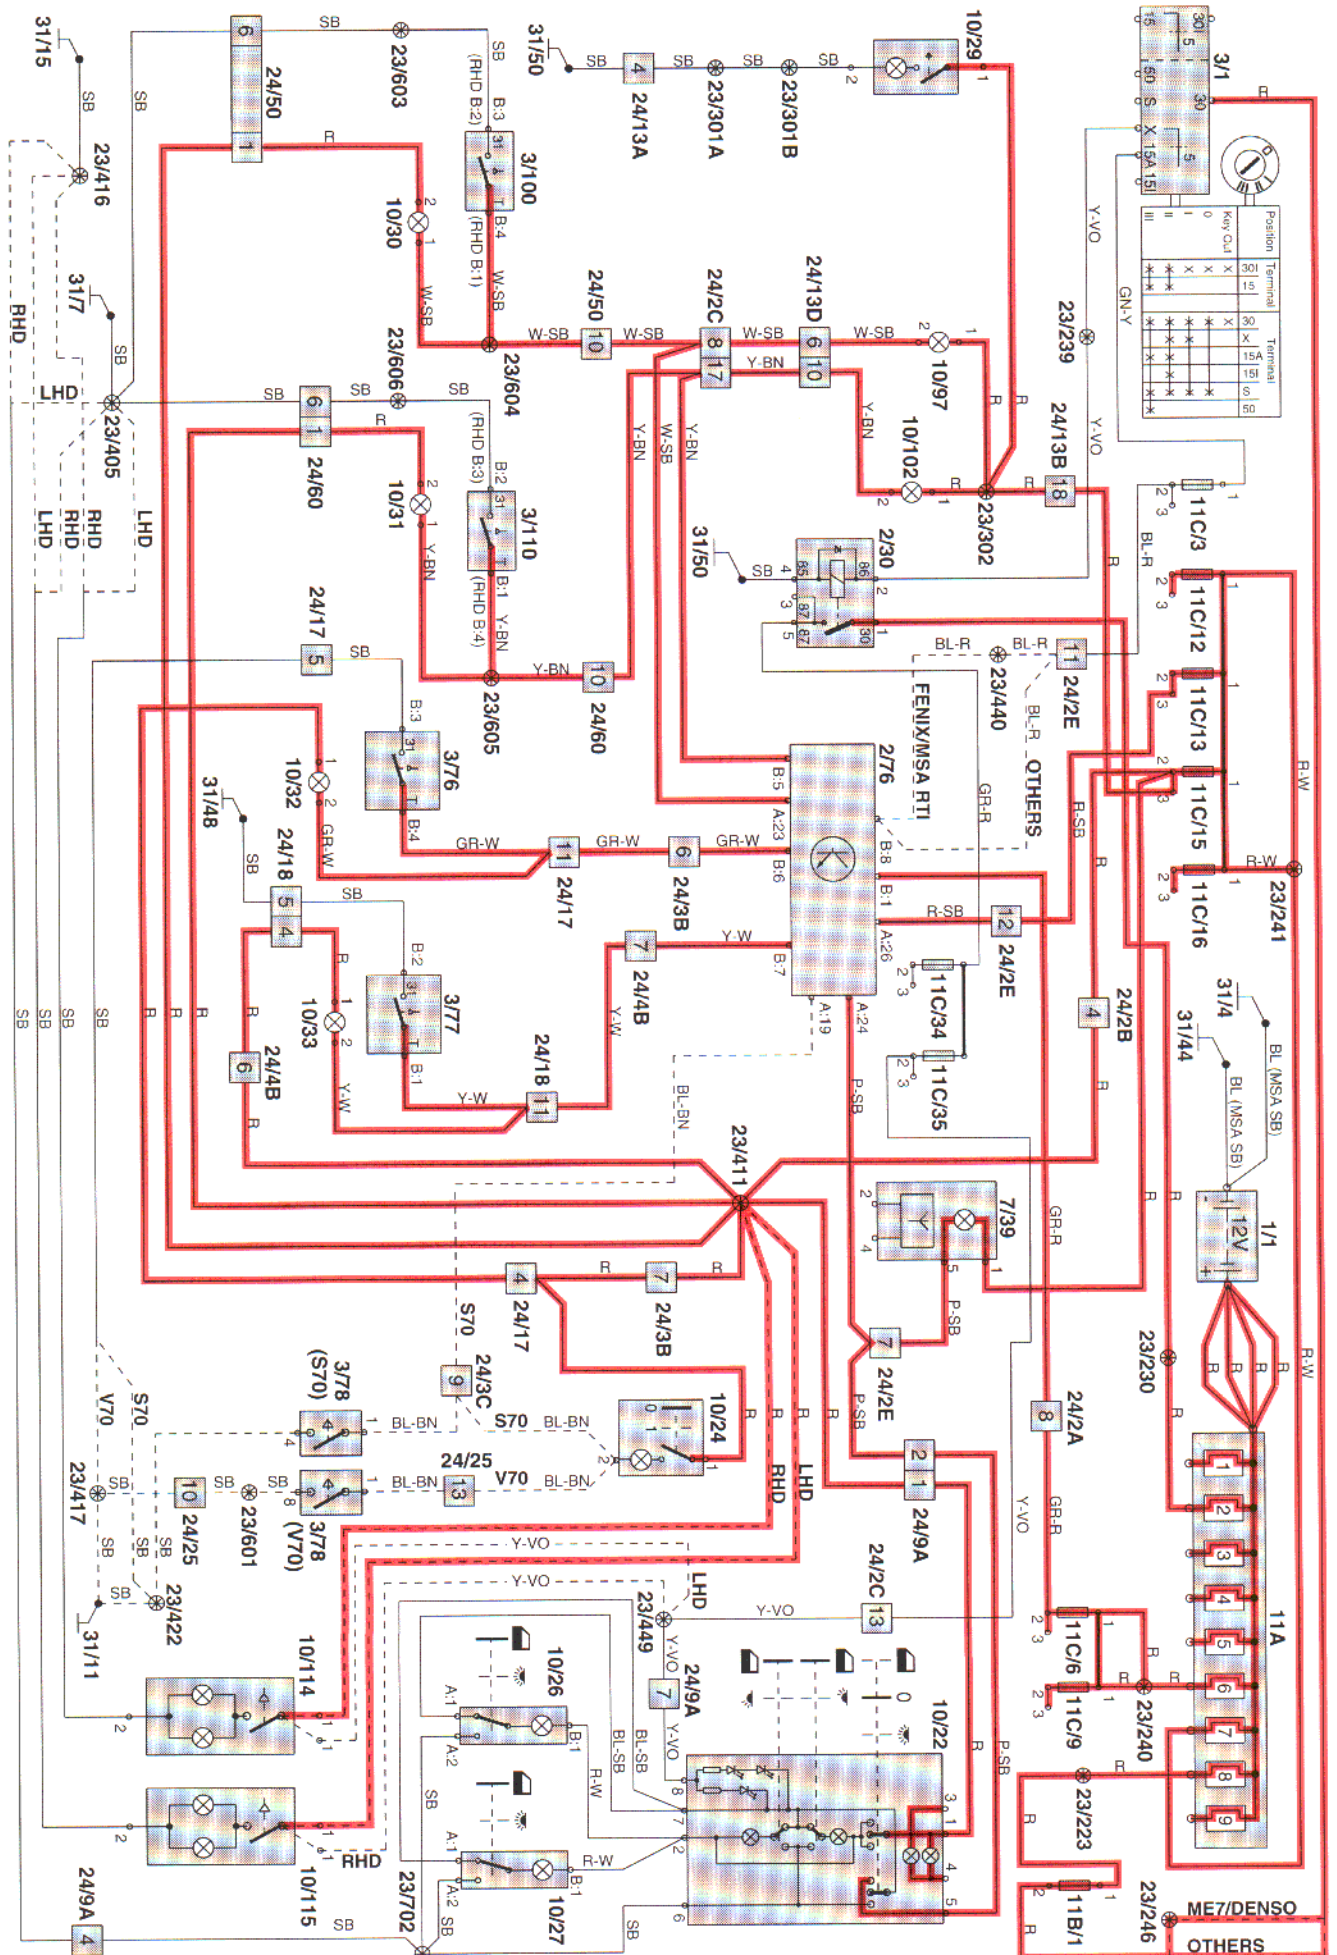

Instrument and control lighting

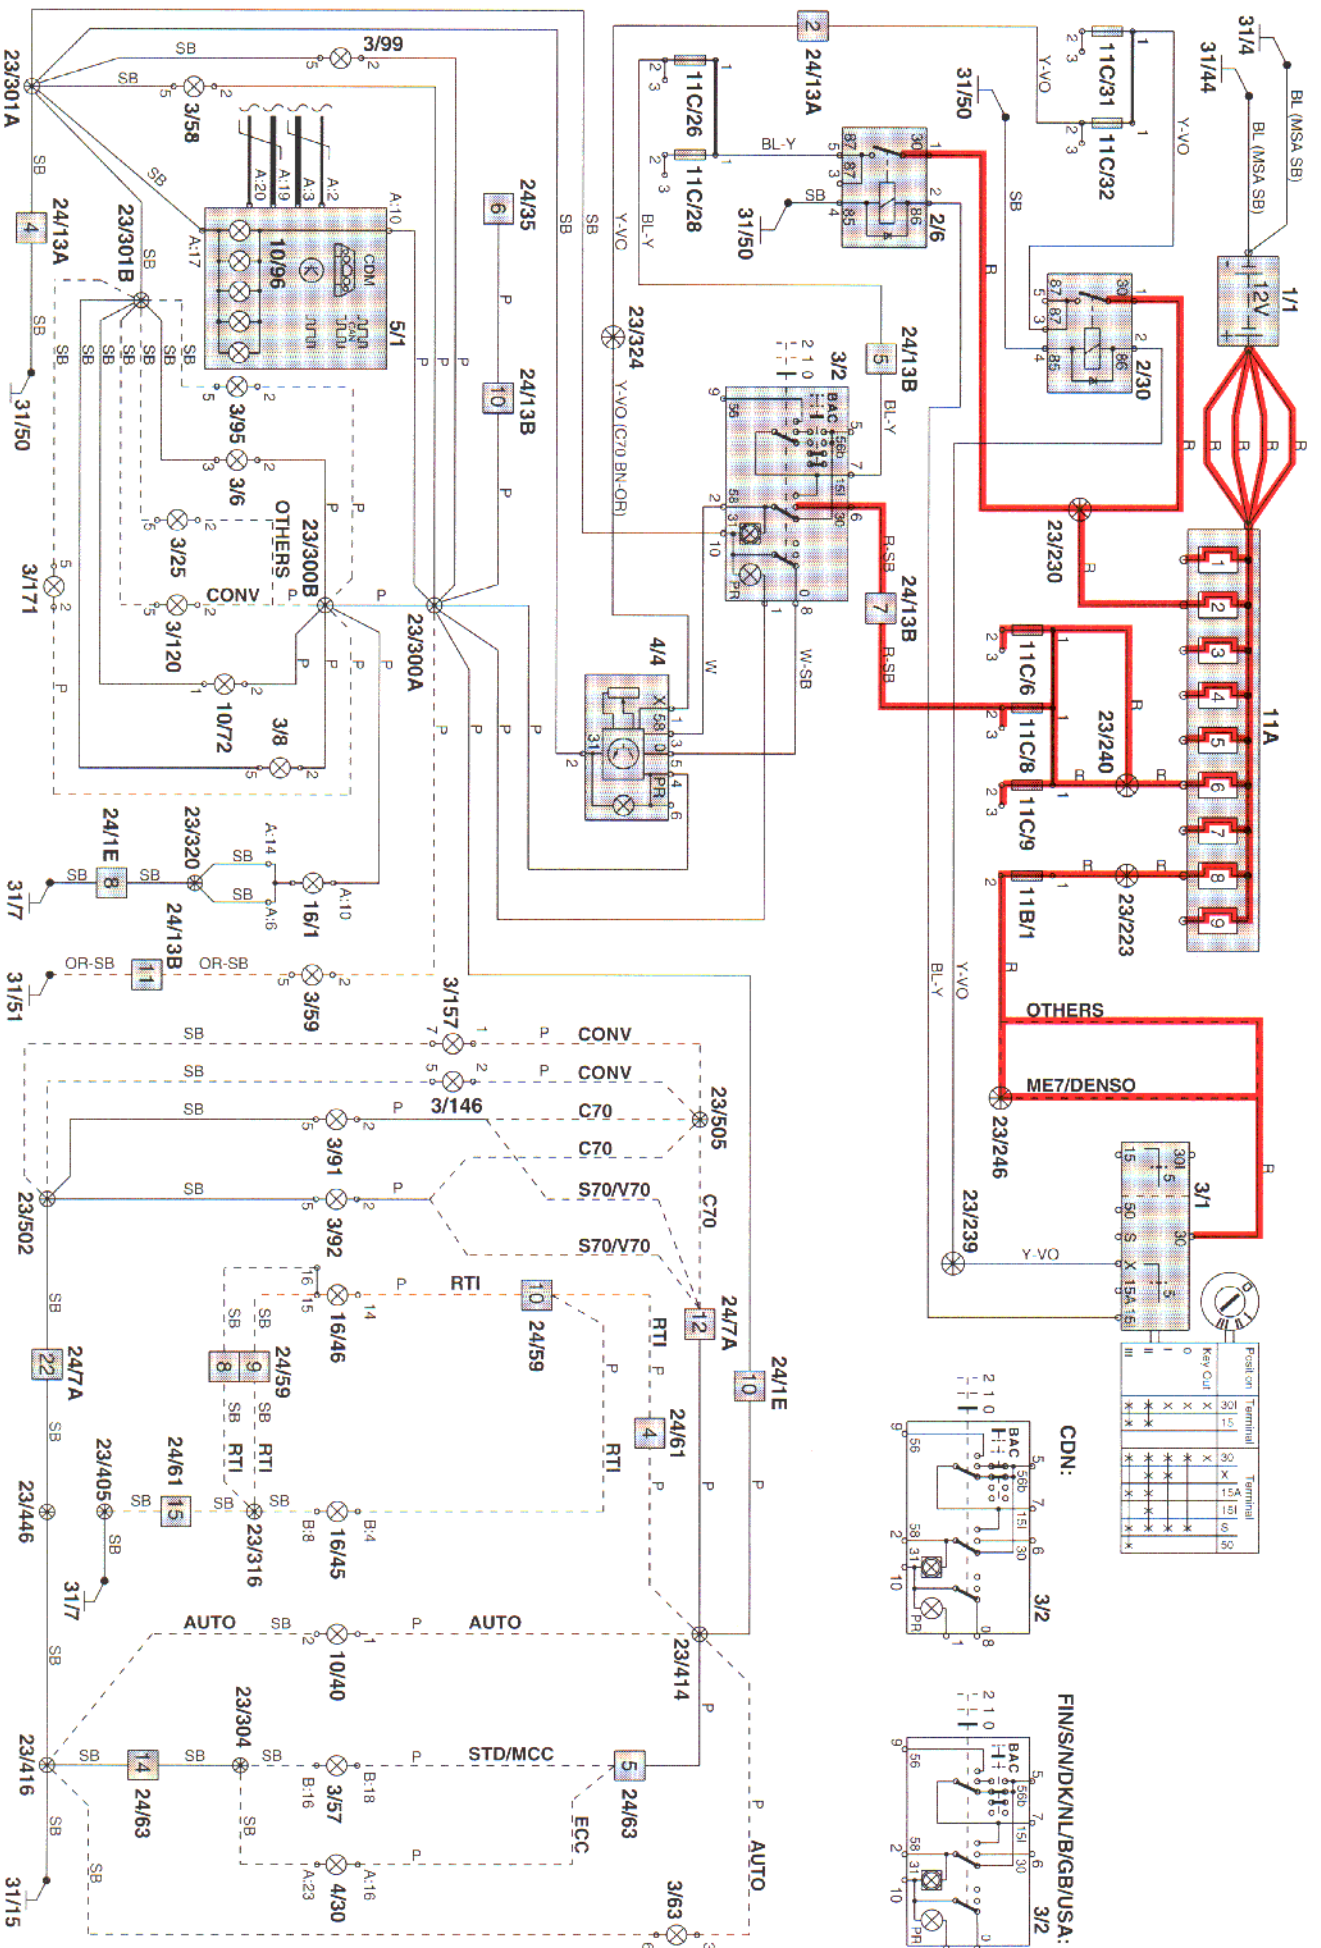


Turn signal lamps and hazard warning signal flashers

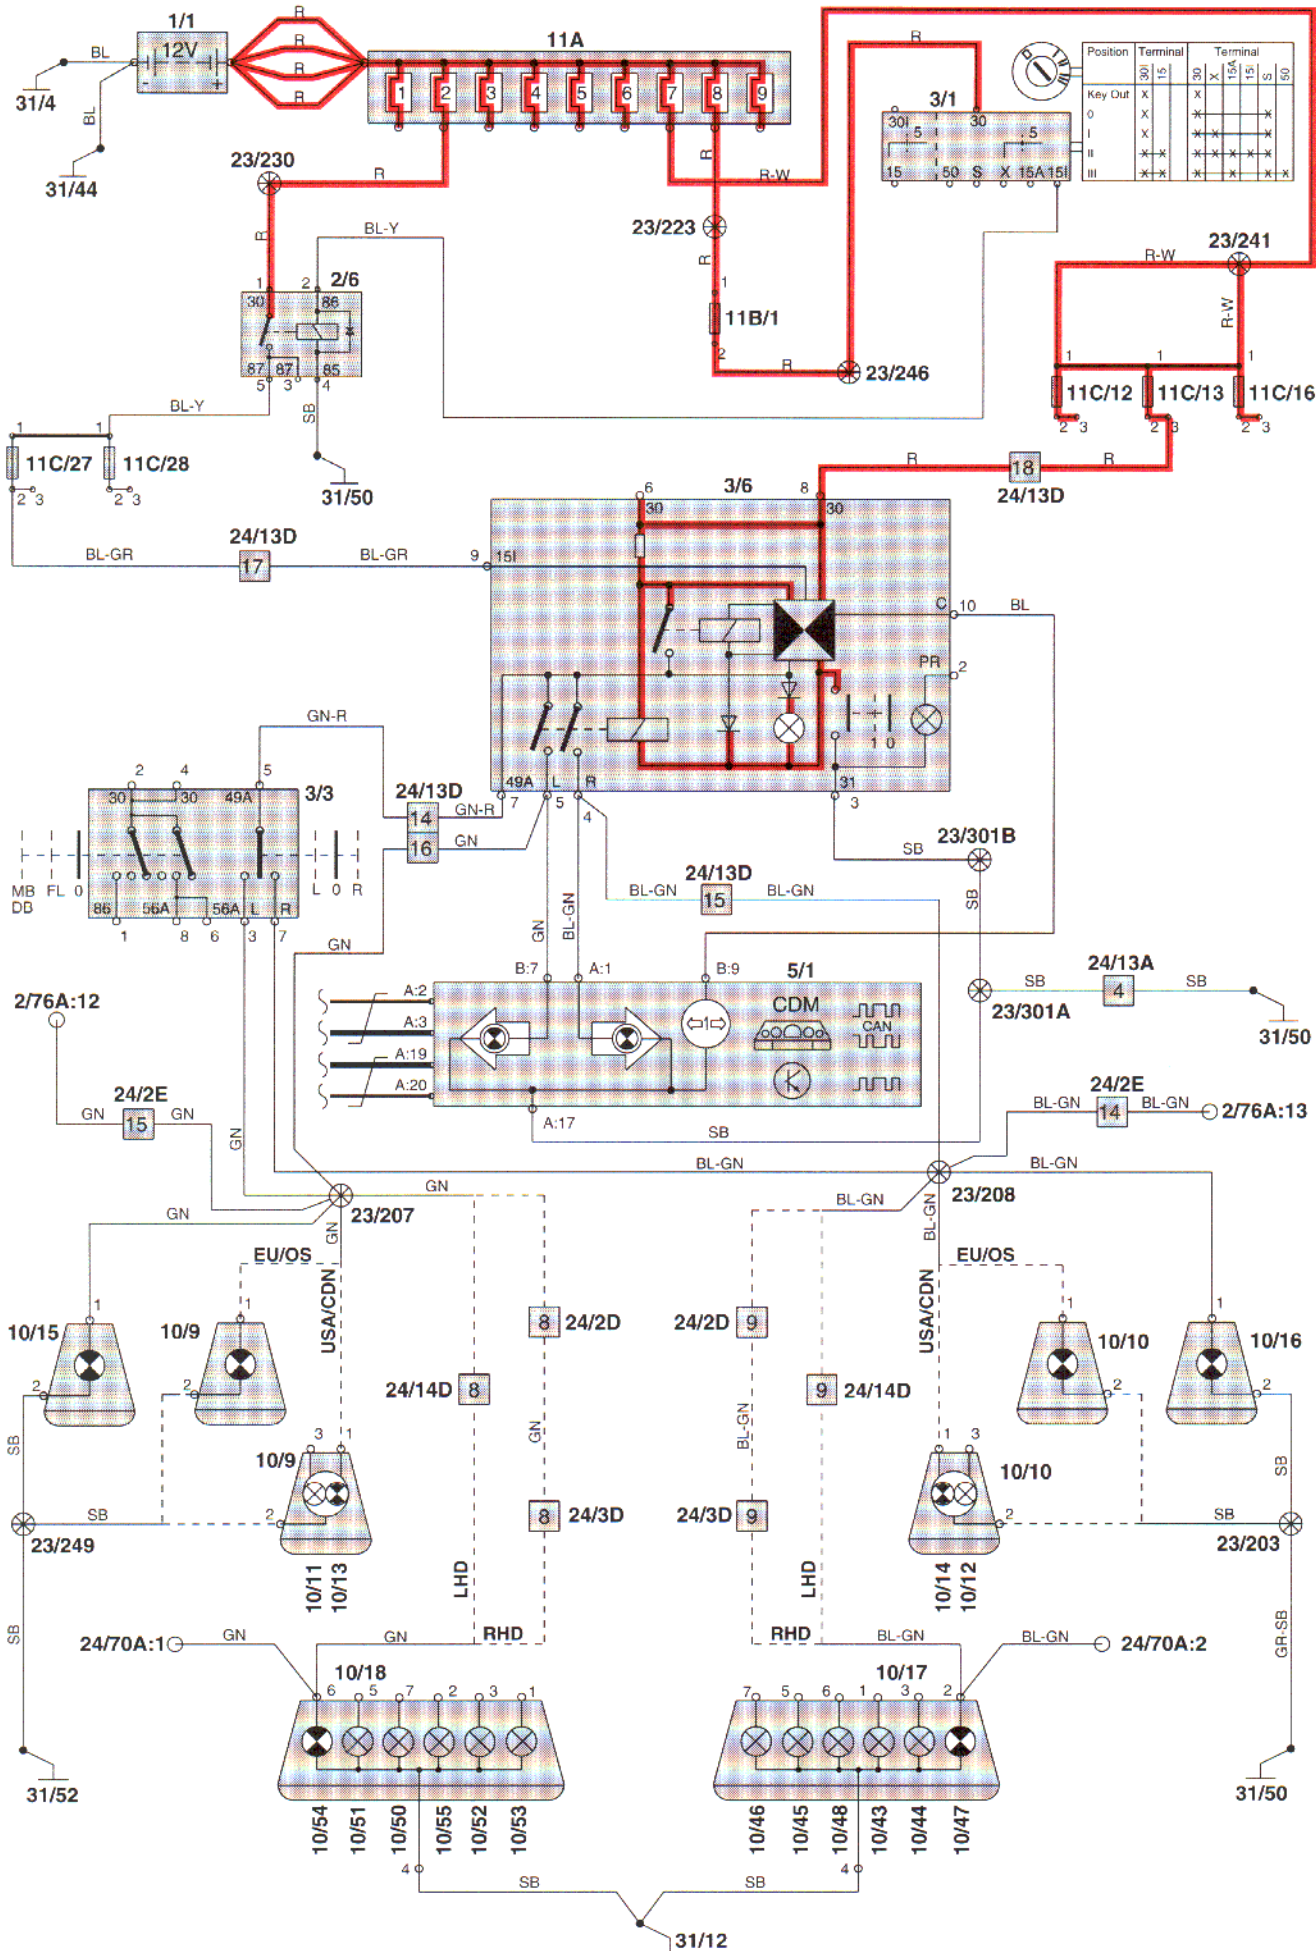


[illegible]


Turn signal lamps and hazard warning signal flashers V70

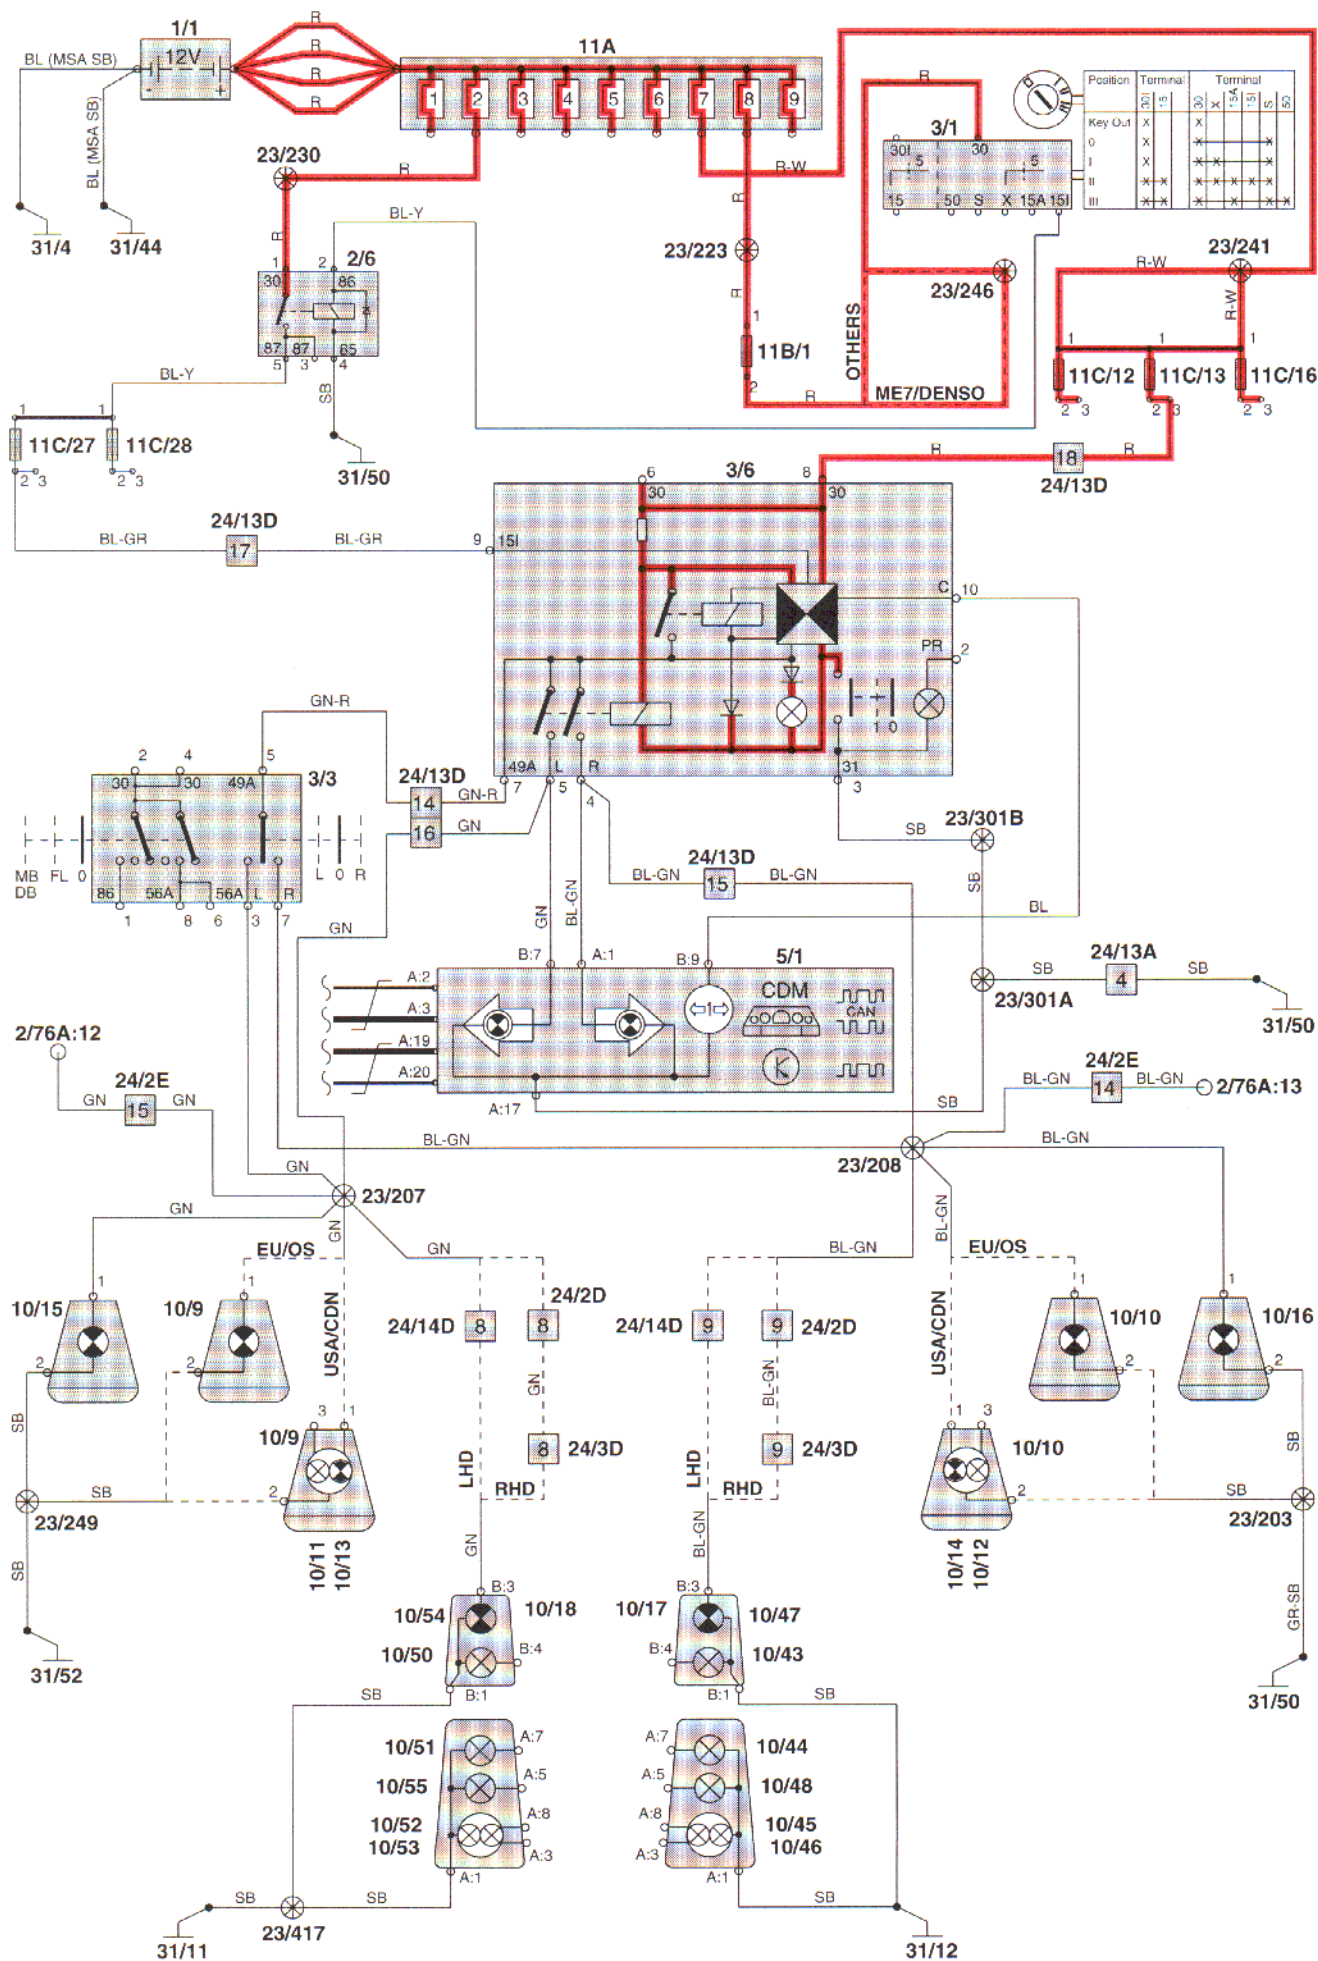

Signal horn

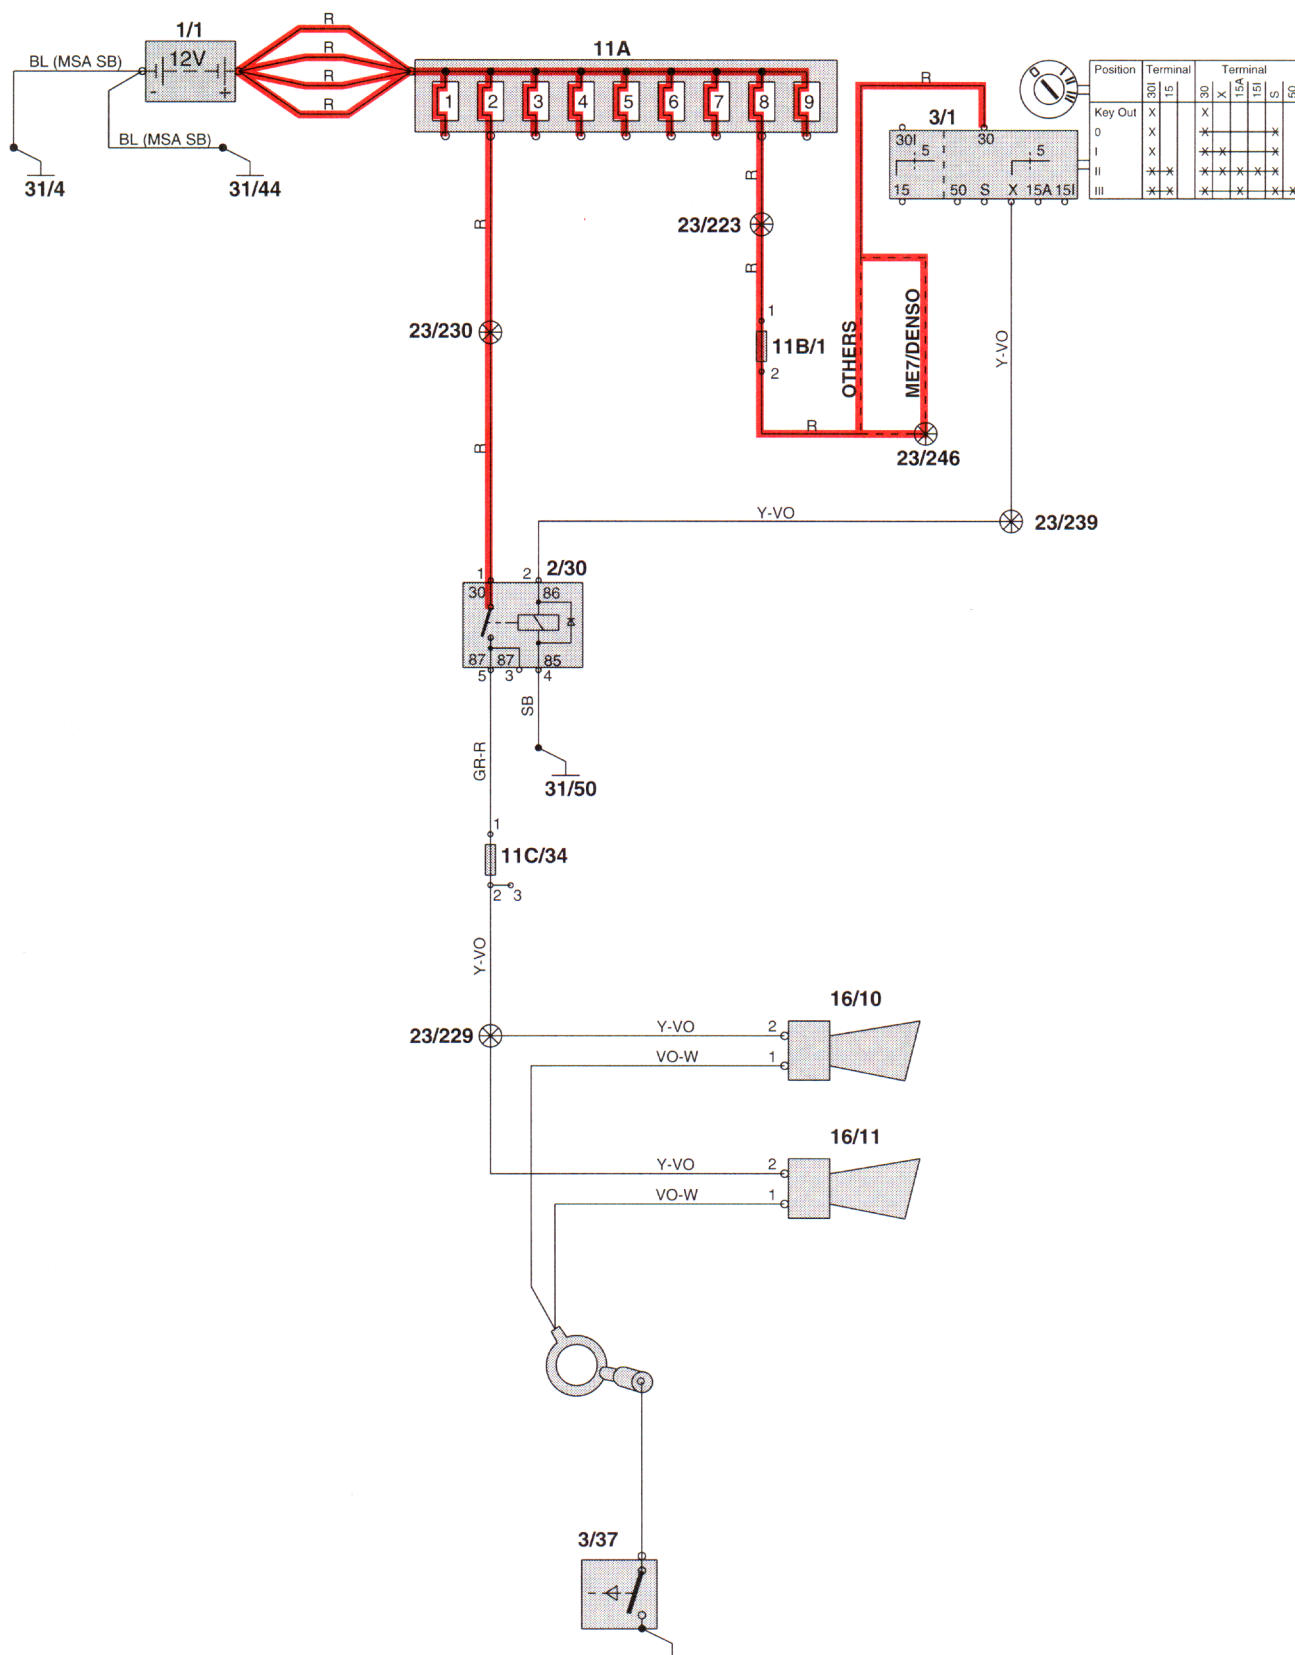

Washers windshield and headlamp

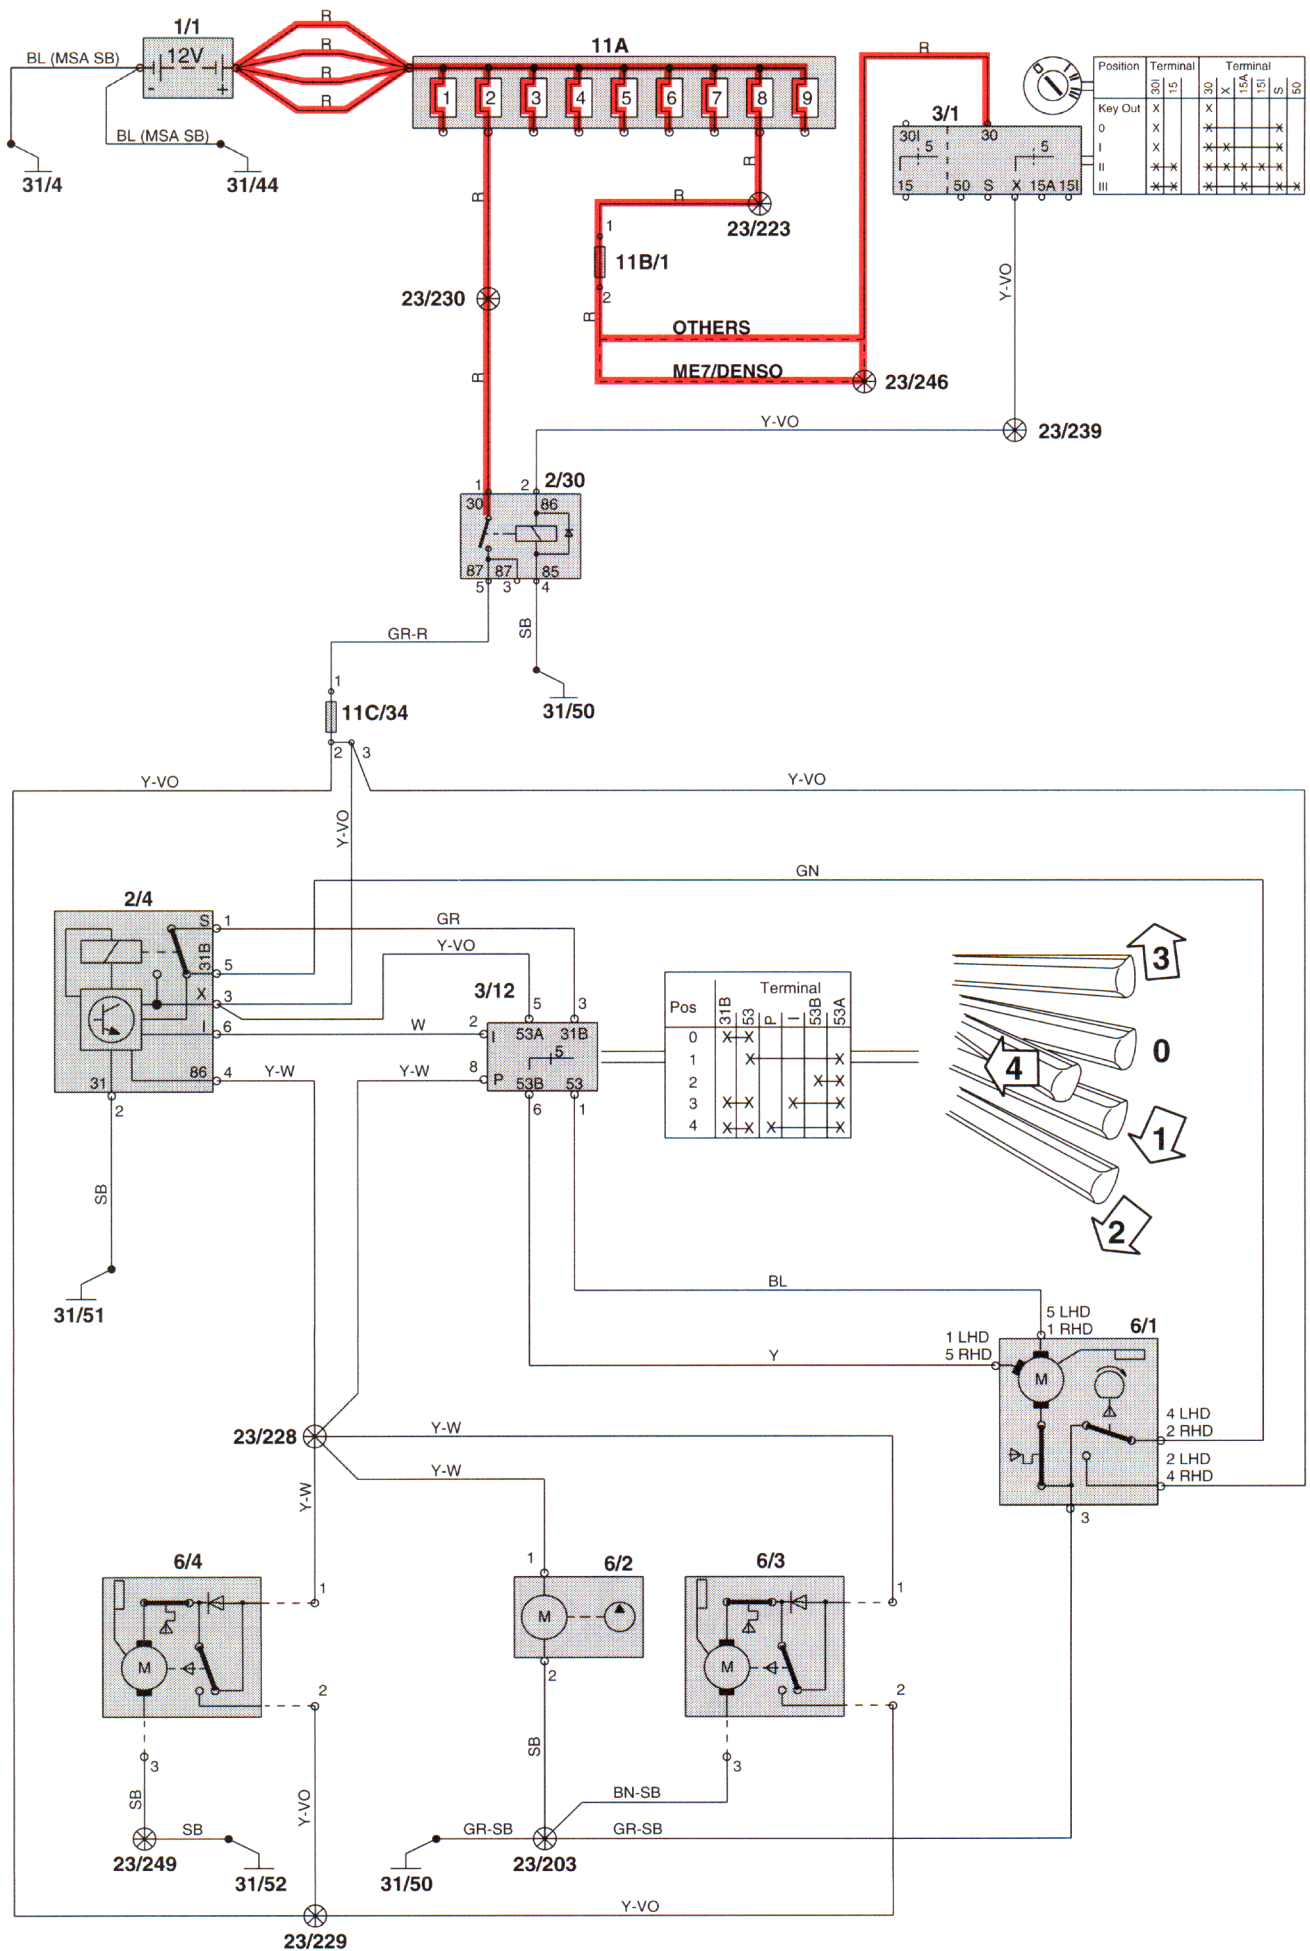


The diagram illustrates the electrical wiring for a vehicle, showing the connection of various components. The main components include:

- Battery:** 12V battery (1/1) connected to the main power line.
- Fuse Block:** 11A fuse block (11A) with fuses 1 through 9.
- Relays:** 1/1, 2/30, 2/16, 3/13, 3/1.
- Switches:** 31/44, 31/50, 31/11, 31/51.
- Actuators:** 23/203, 23/417, 23/239, 23/246, 23/223, 23/230.
- Terminal Blocks:** 15/8, 24/25, 24/14D, 24/3D, 24/2D, 24/14D, 24/3D, 24/2D.
- Wiring:** Red and black lines representing the electrical connections.


A table in the top right corner provides a key for the components:

Position	Terminal	Terminal	Terminal
Key Out	30	15	30
0	X	X	X
I	X	X	X
II	X	X	X
III	X	X	X


Cigarette lighter/12V outlet

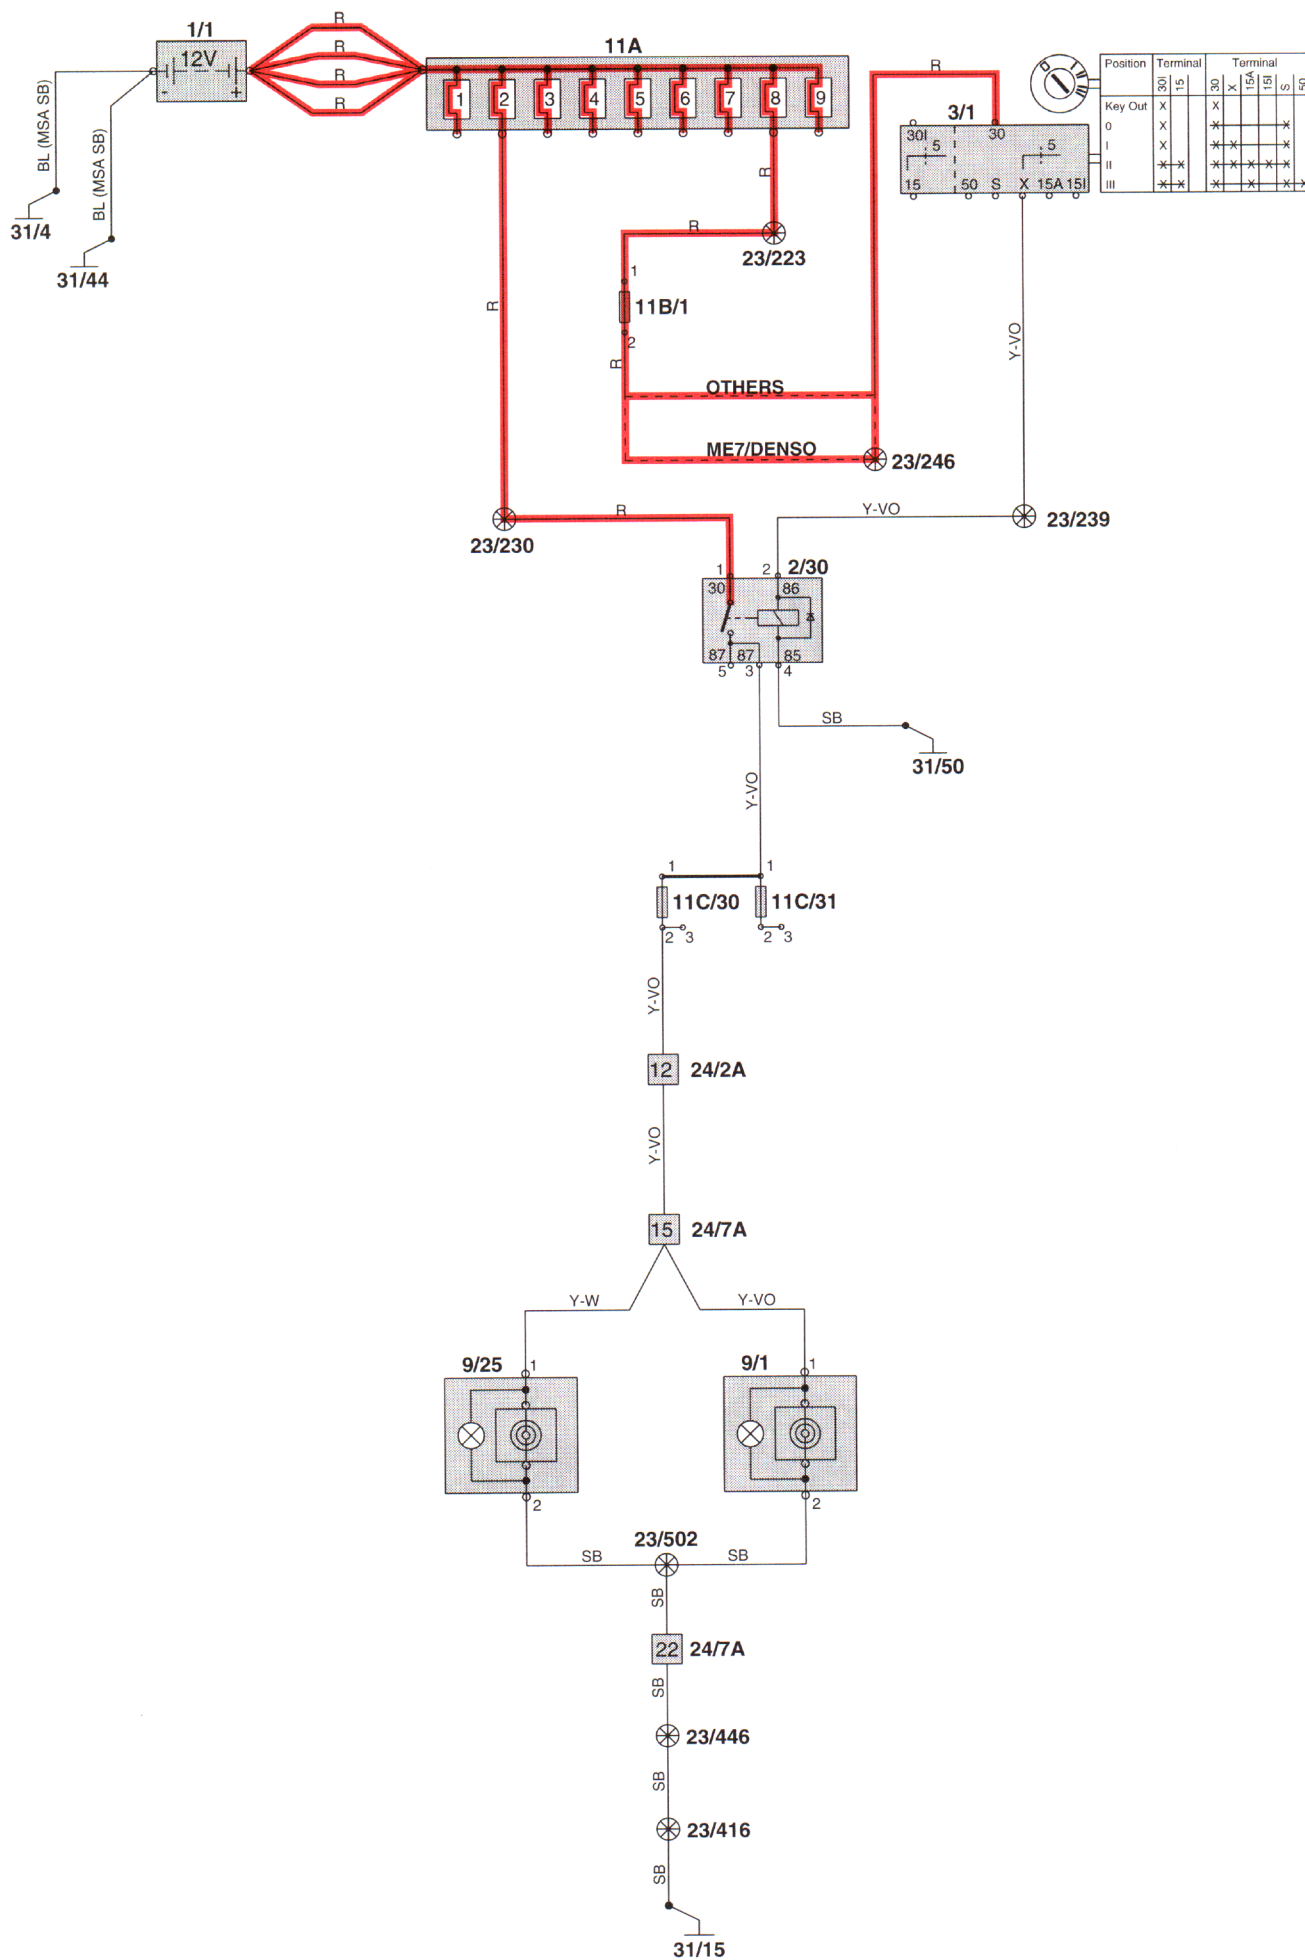


Anti-theft alarm C70 Convertible

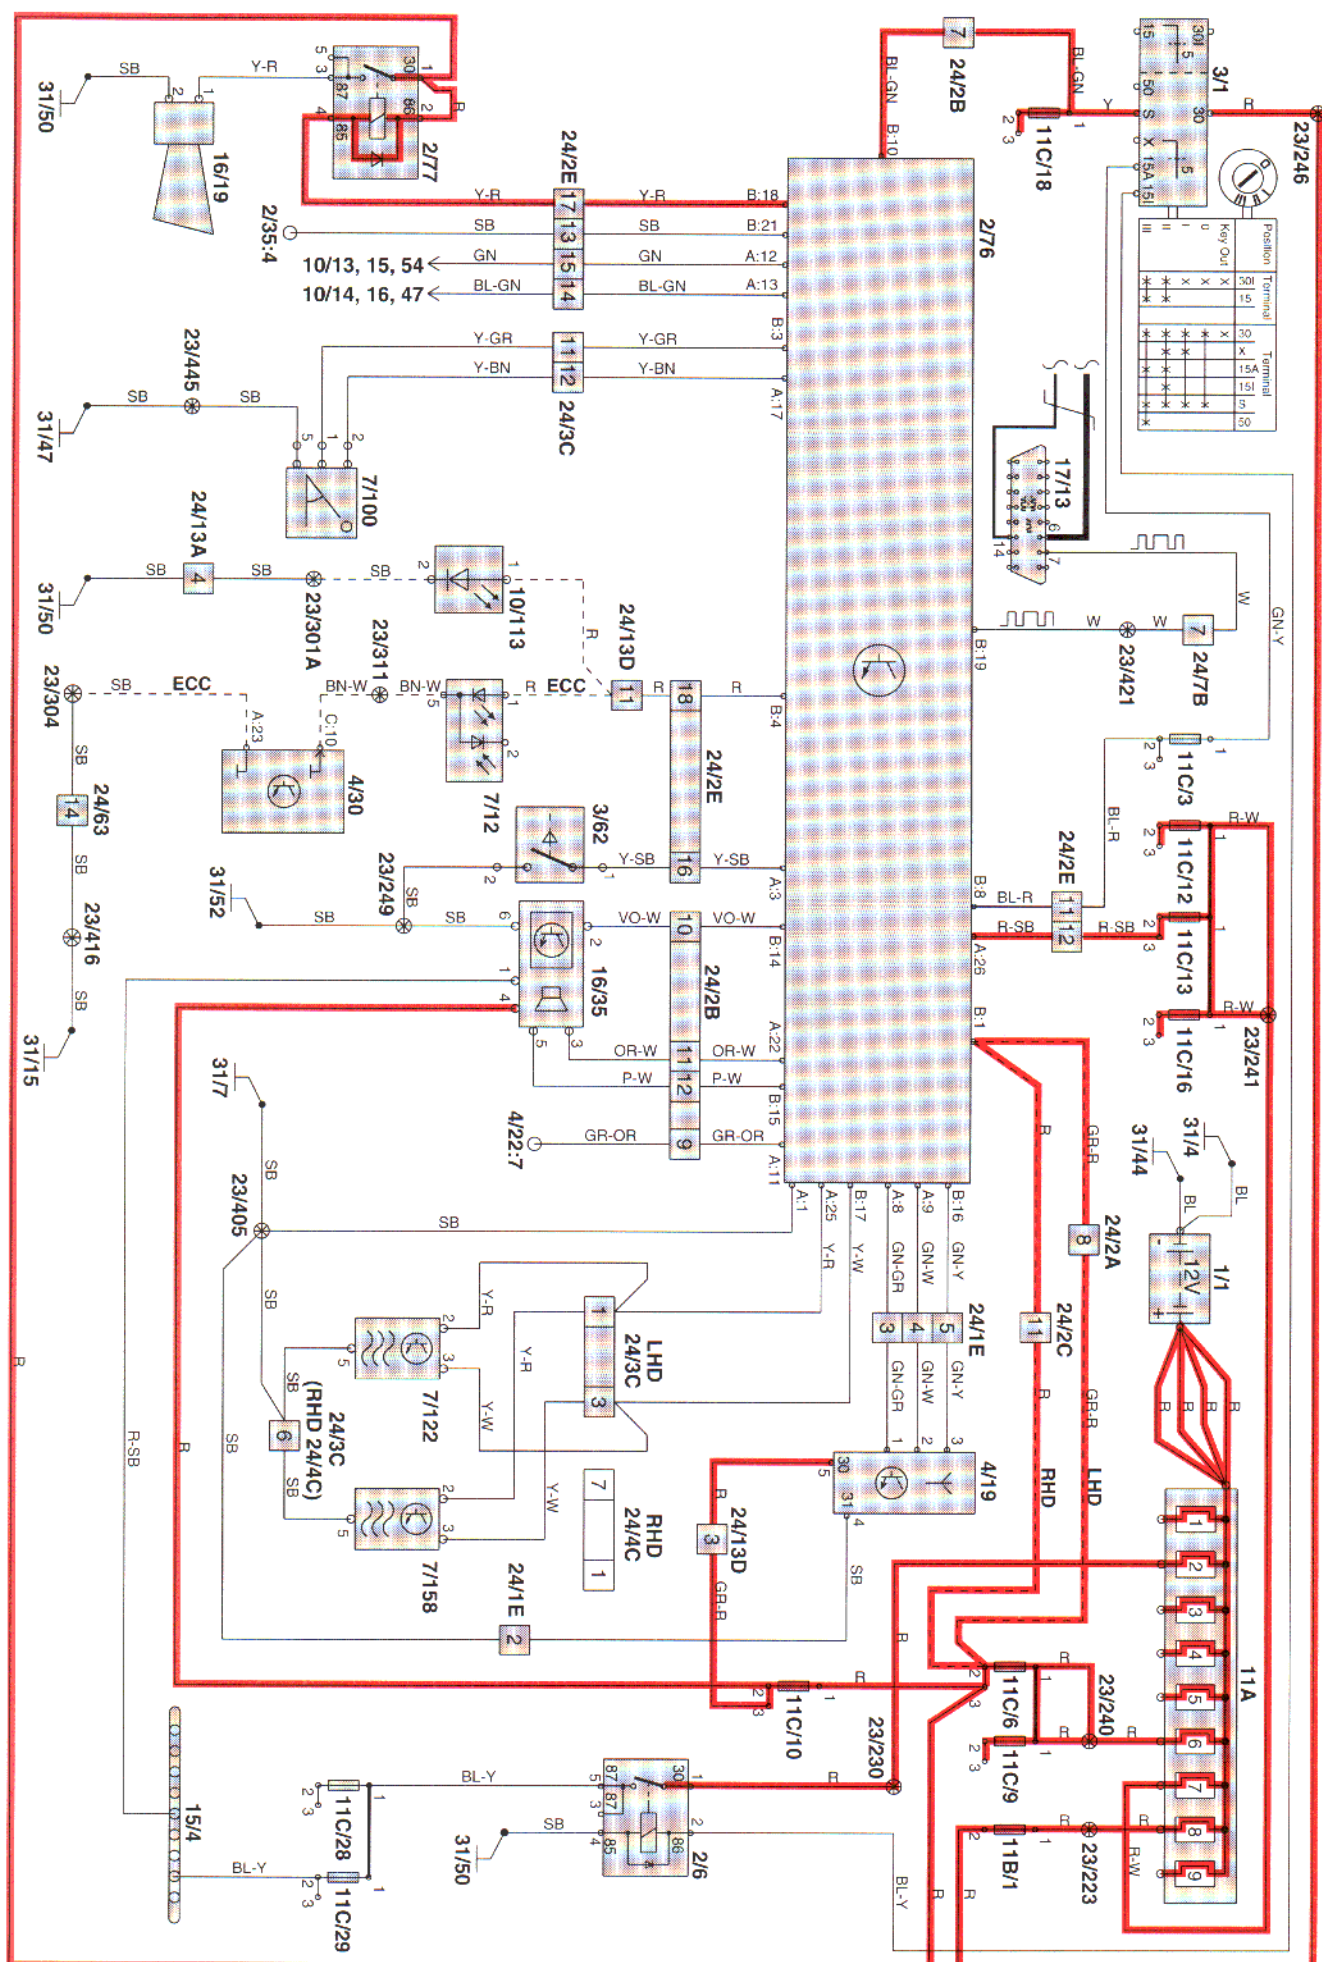


Anti-theft alarm S70, V70

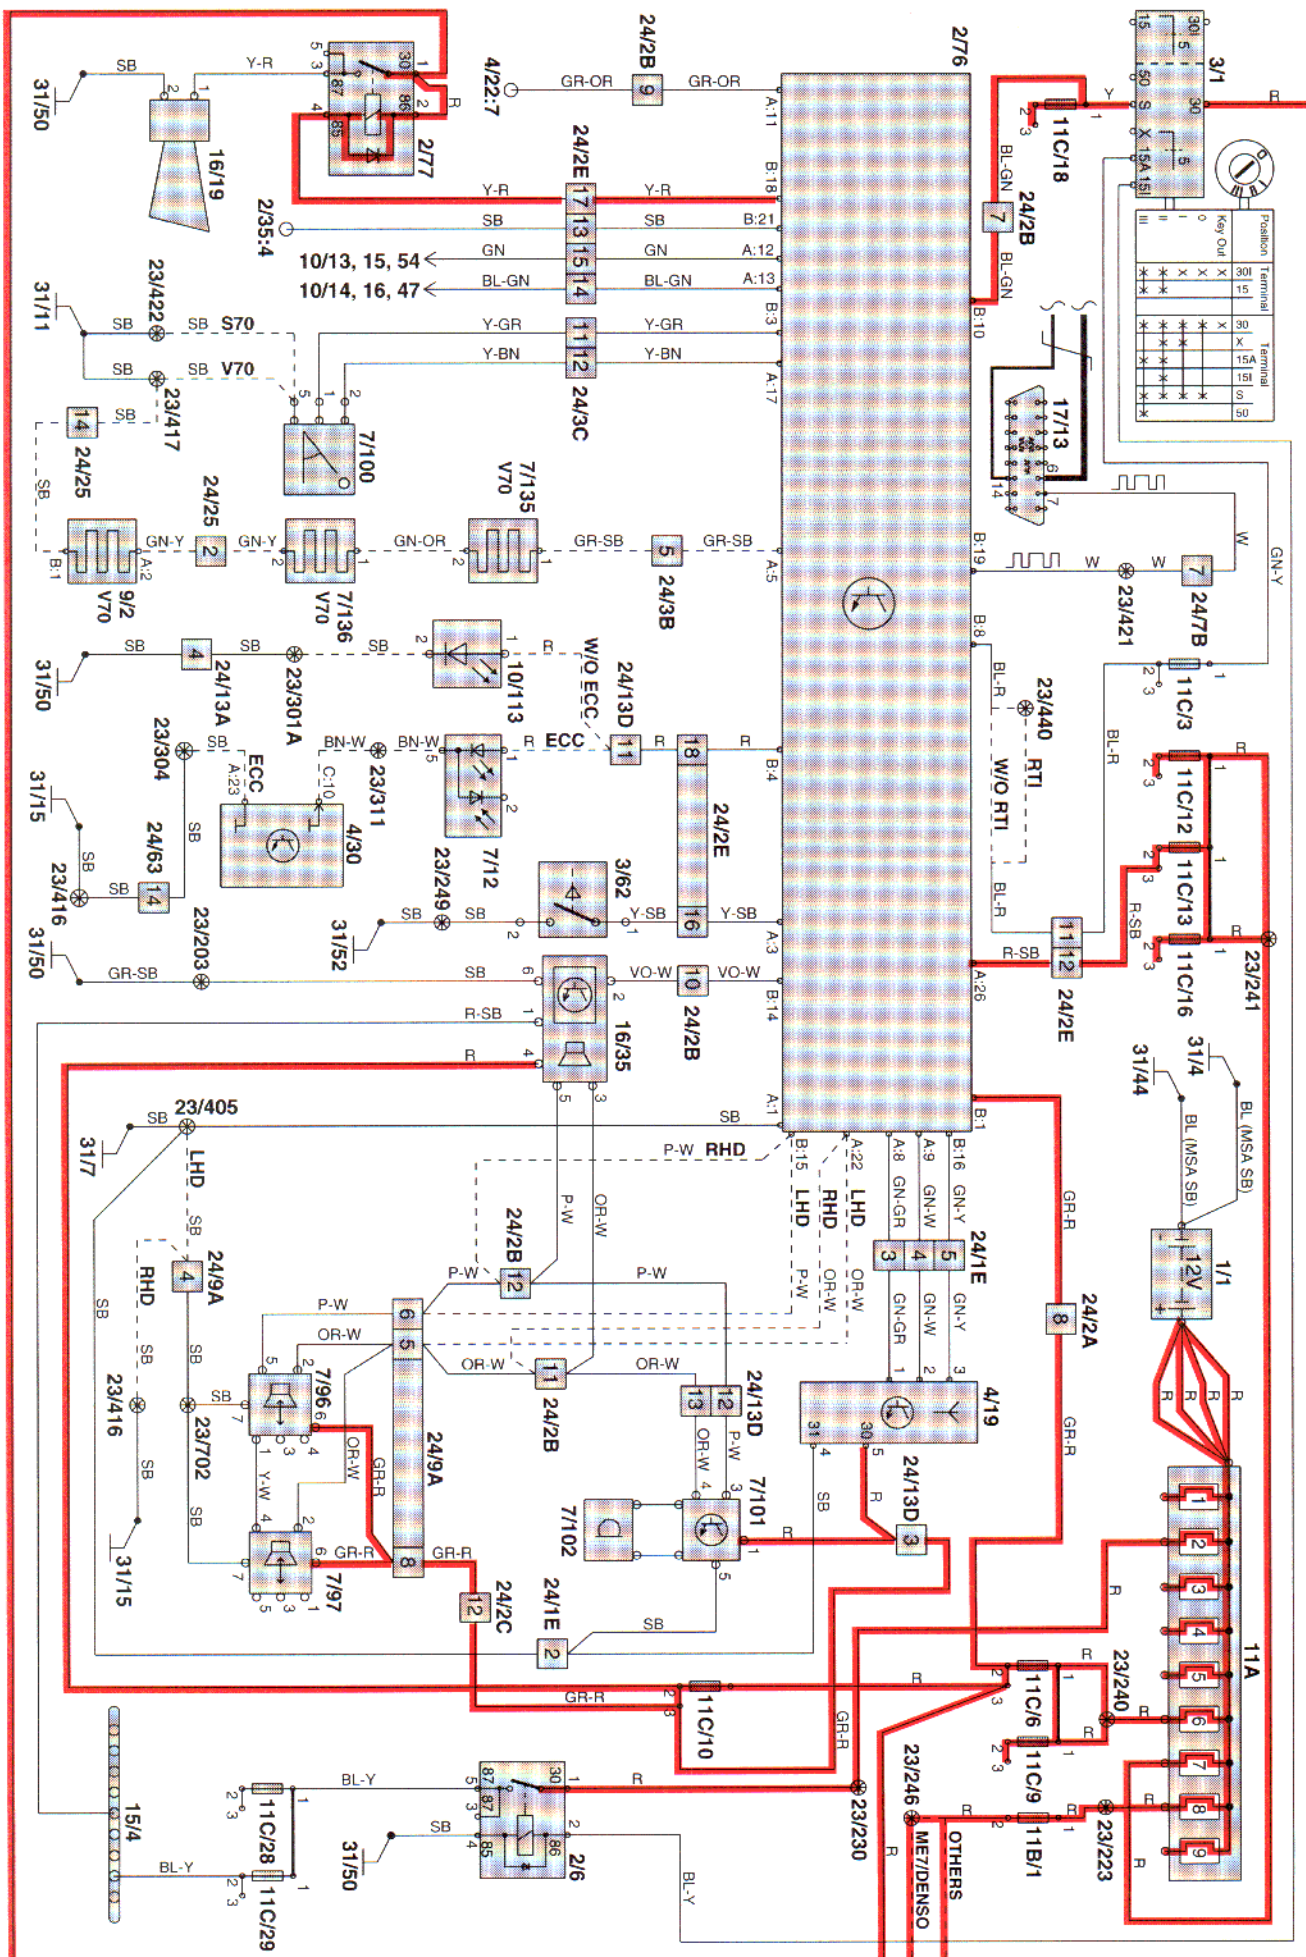

Immobilizer
Fenix 5.2, Denso, ME7

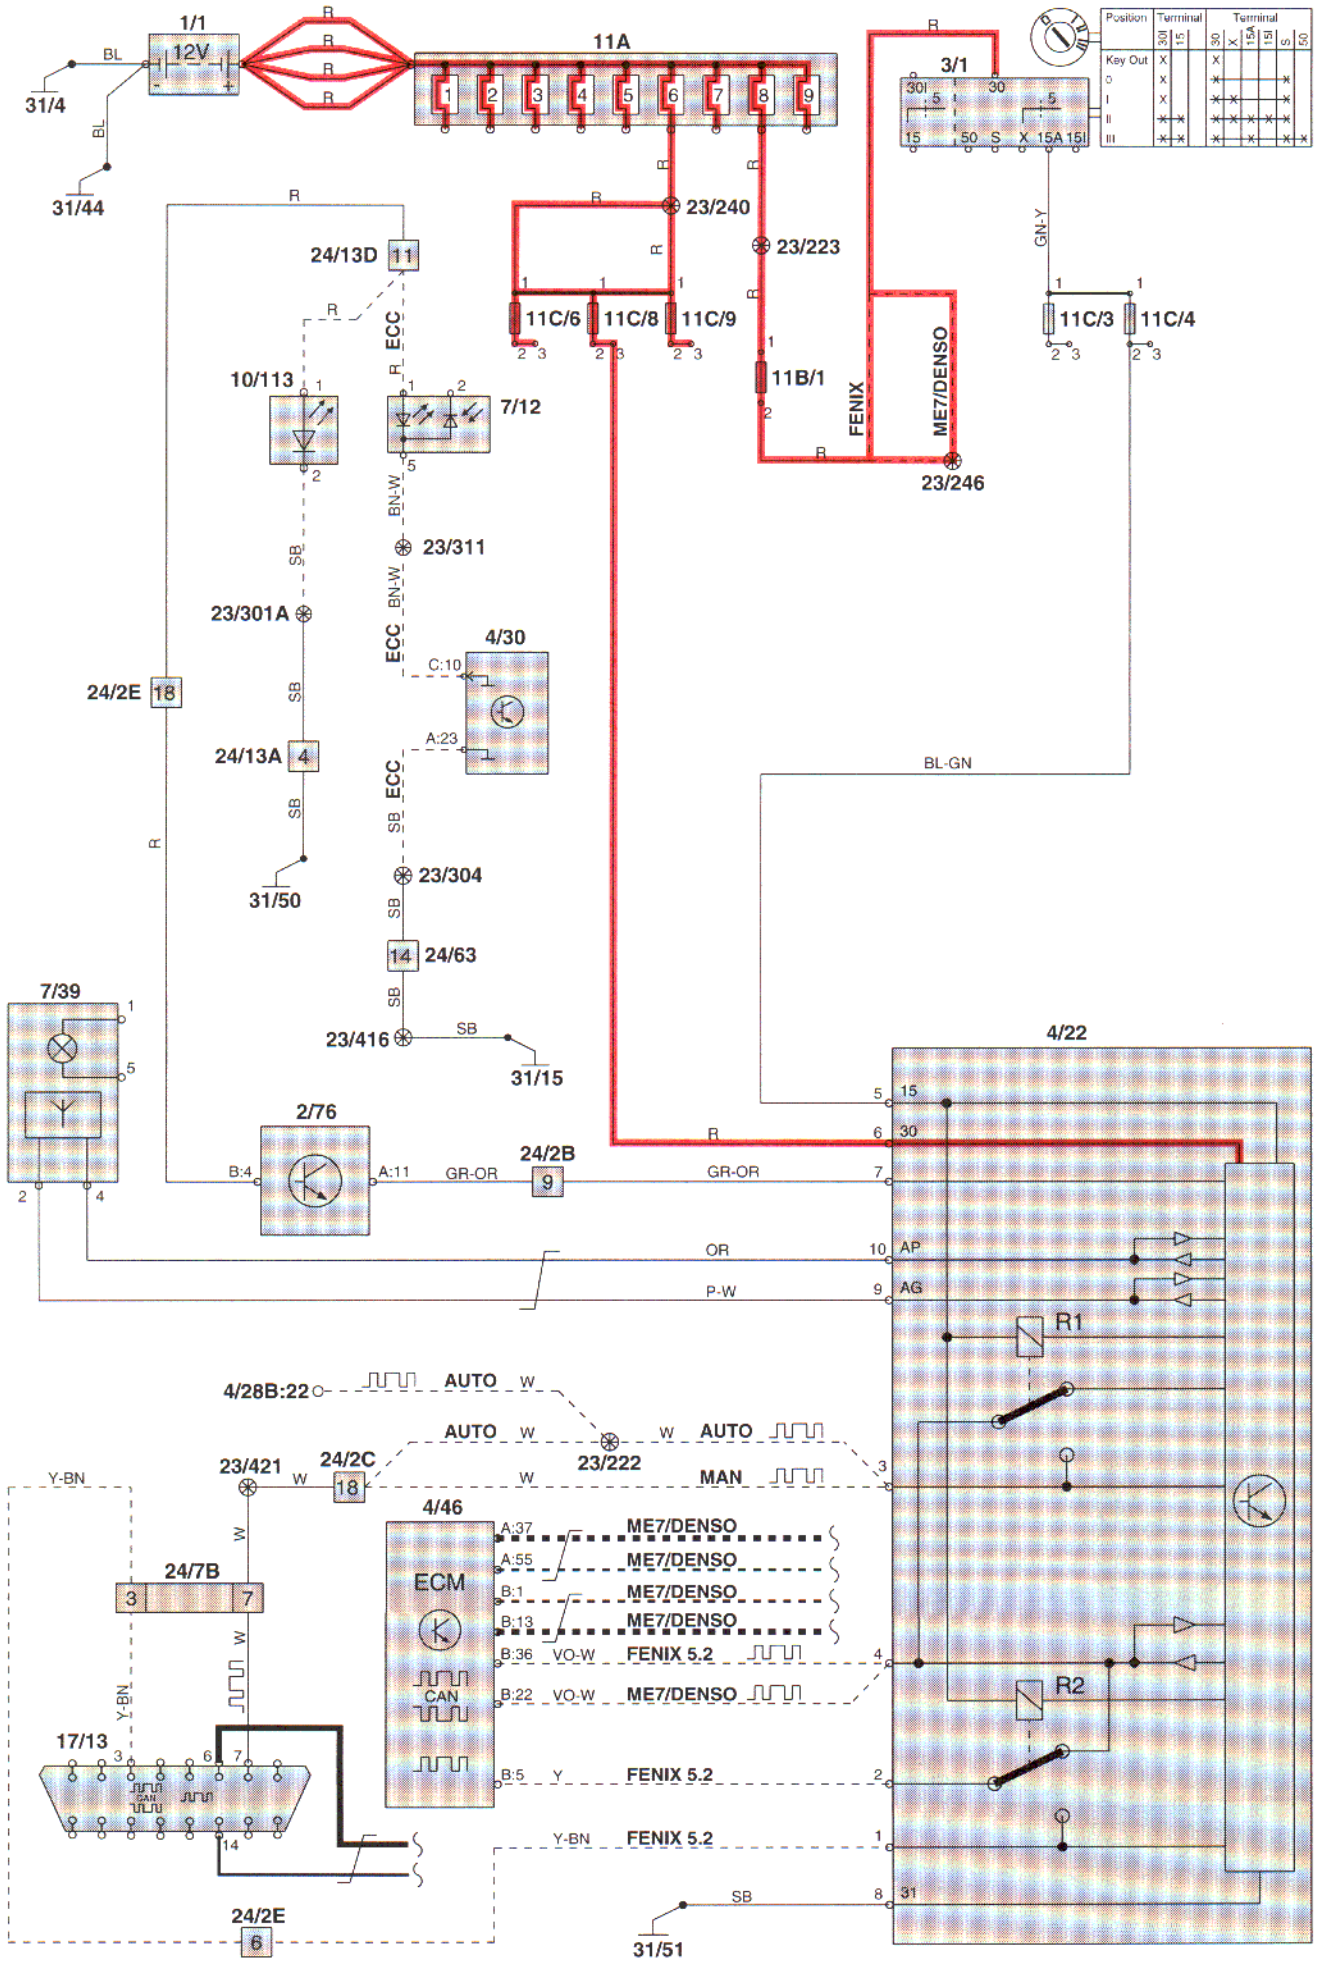


Immobilizer MSA 15.7

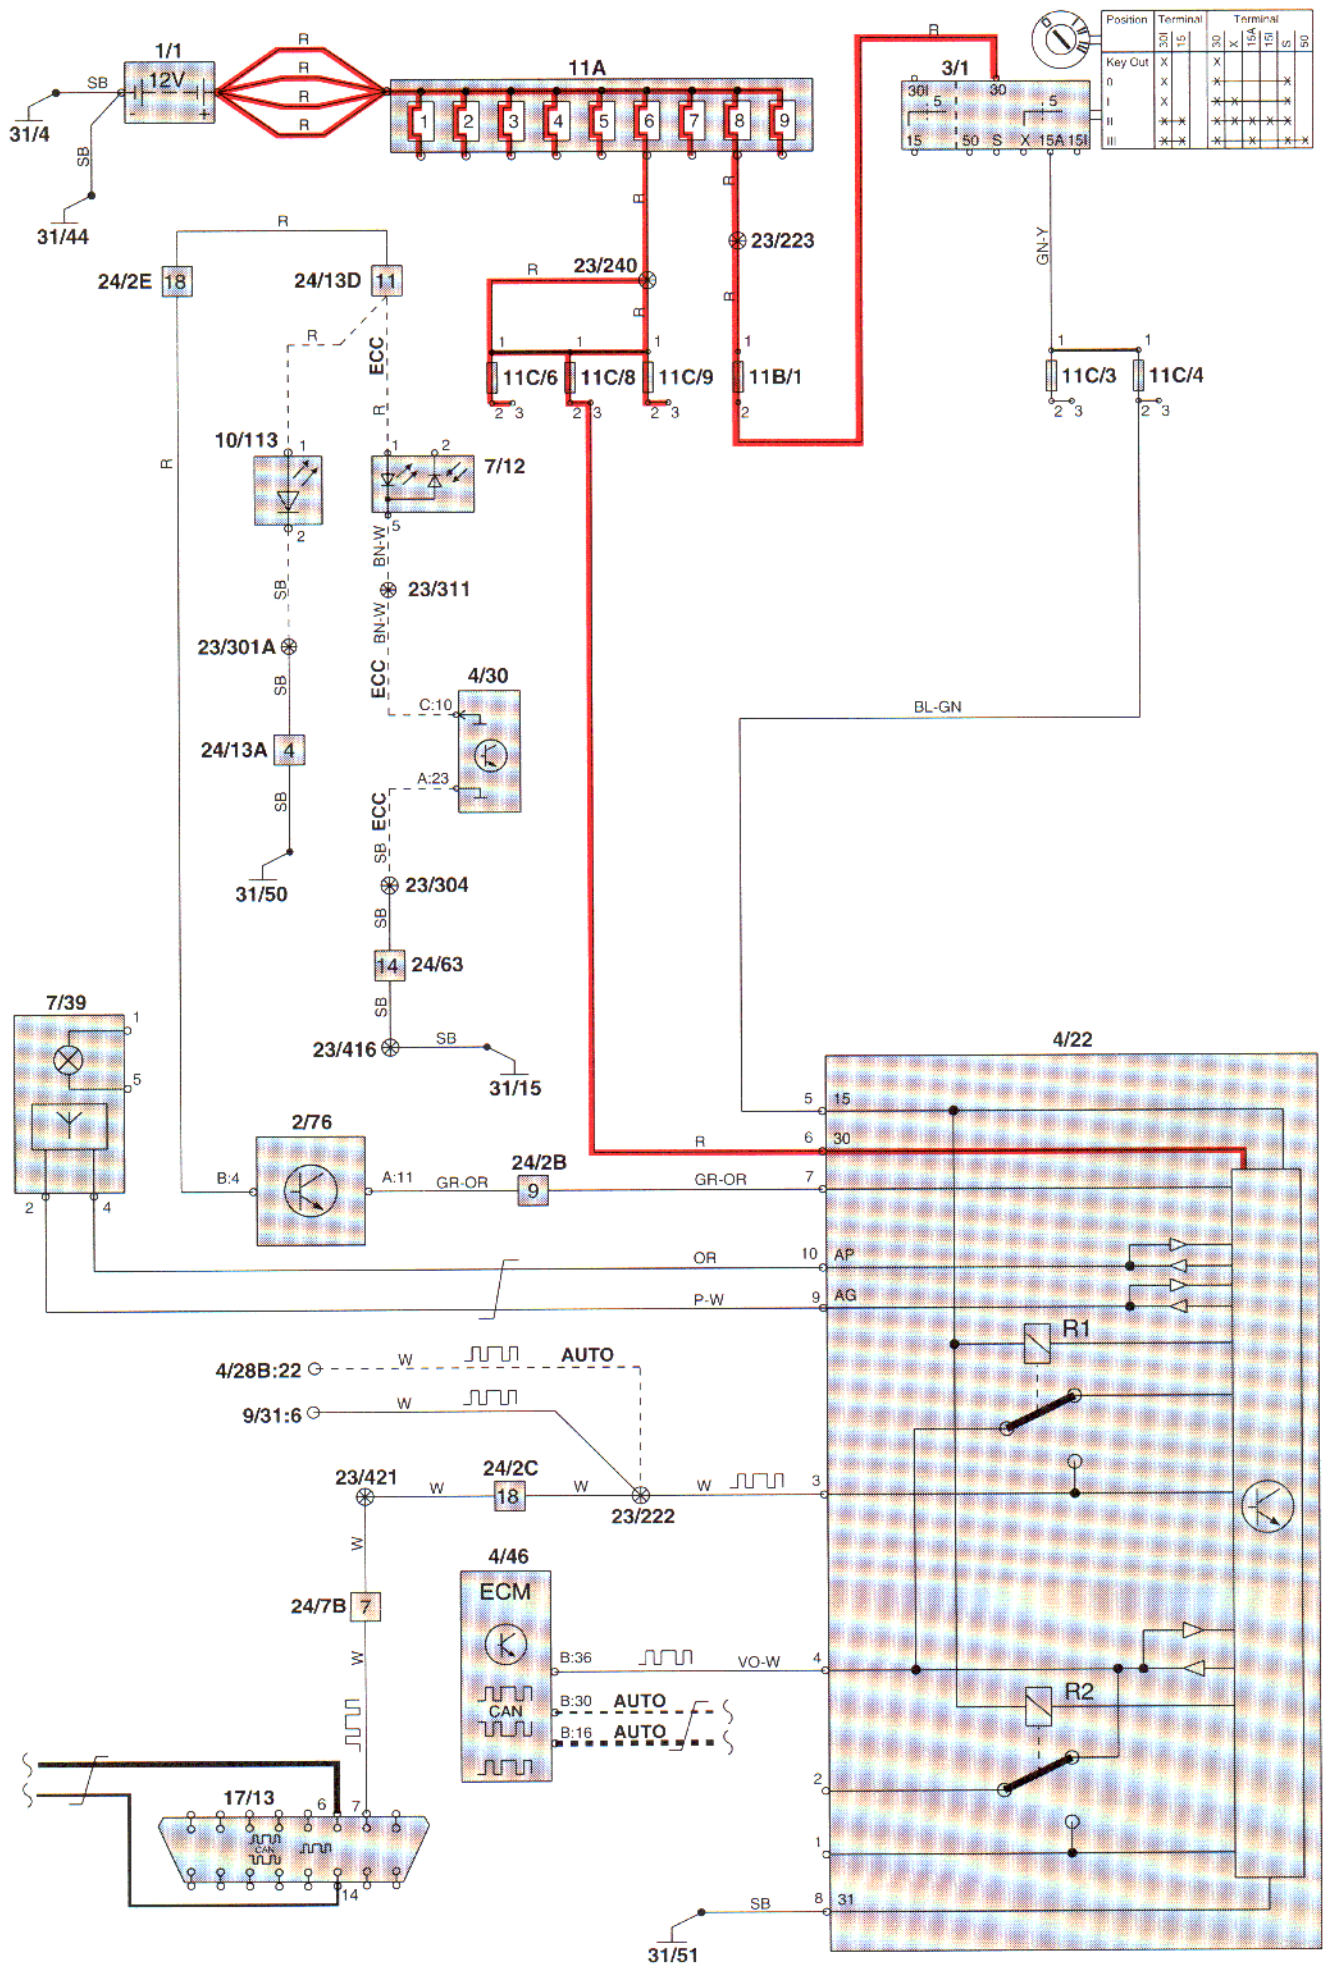


Diagnostics

Fenix 5.2, Denso, ME7

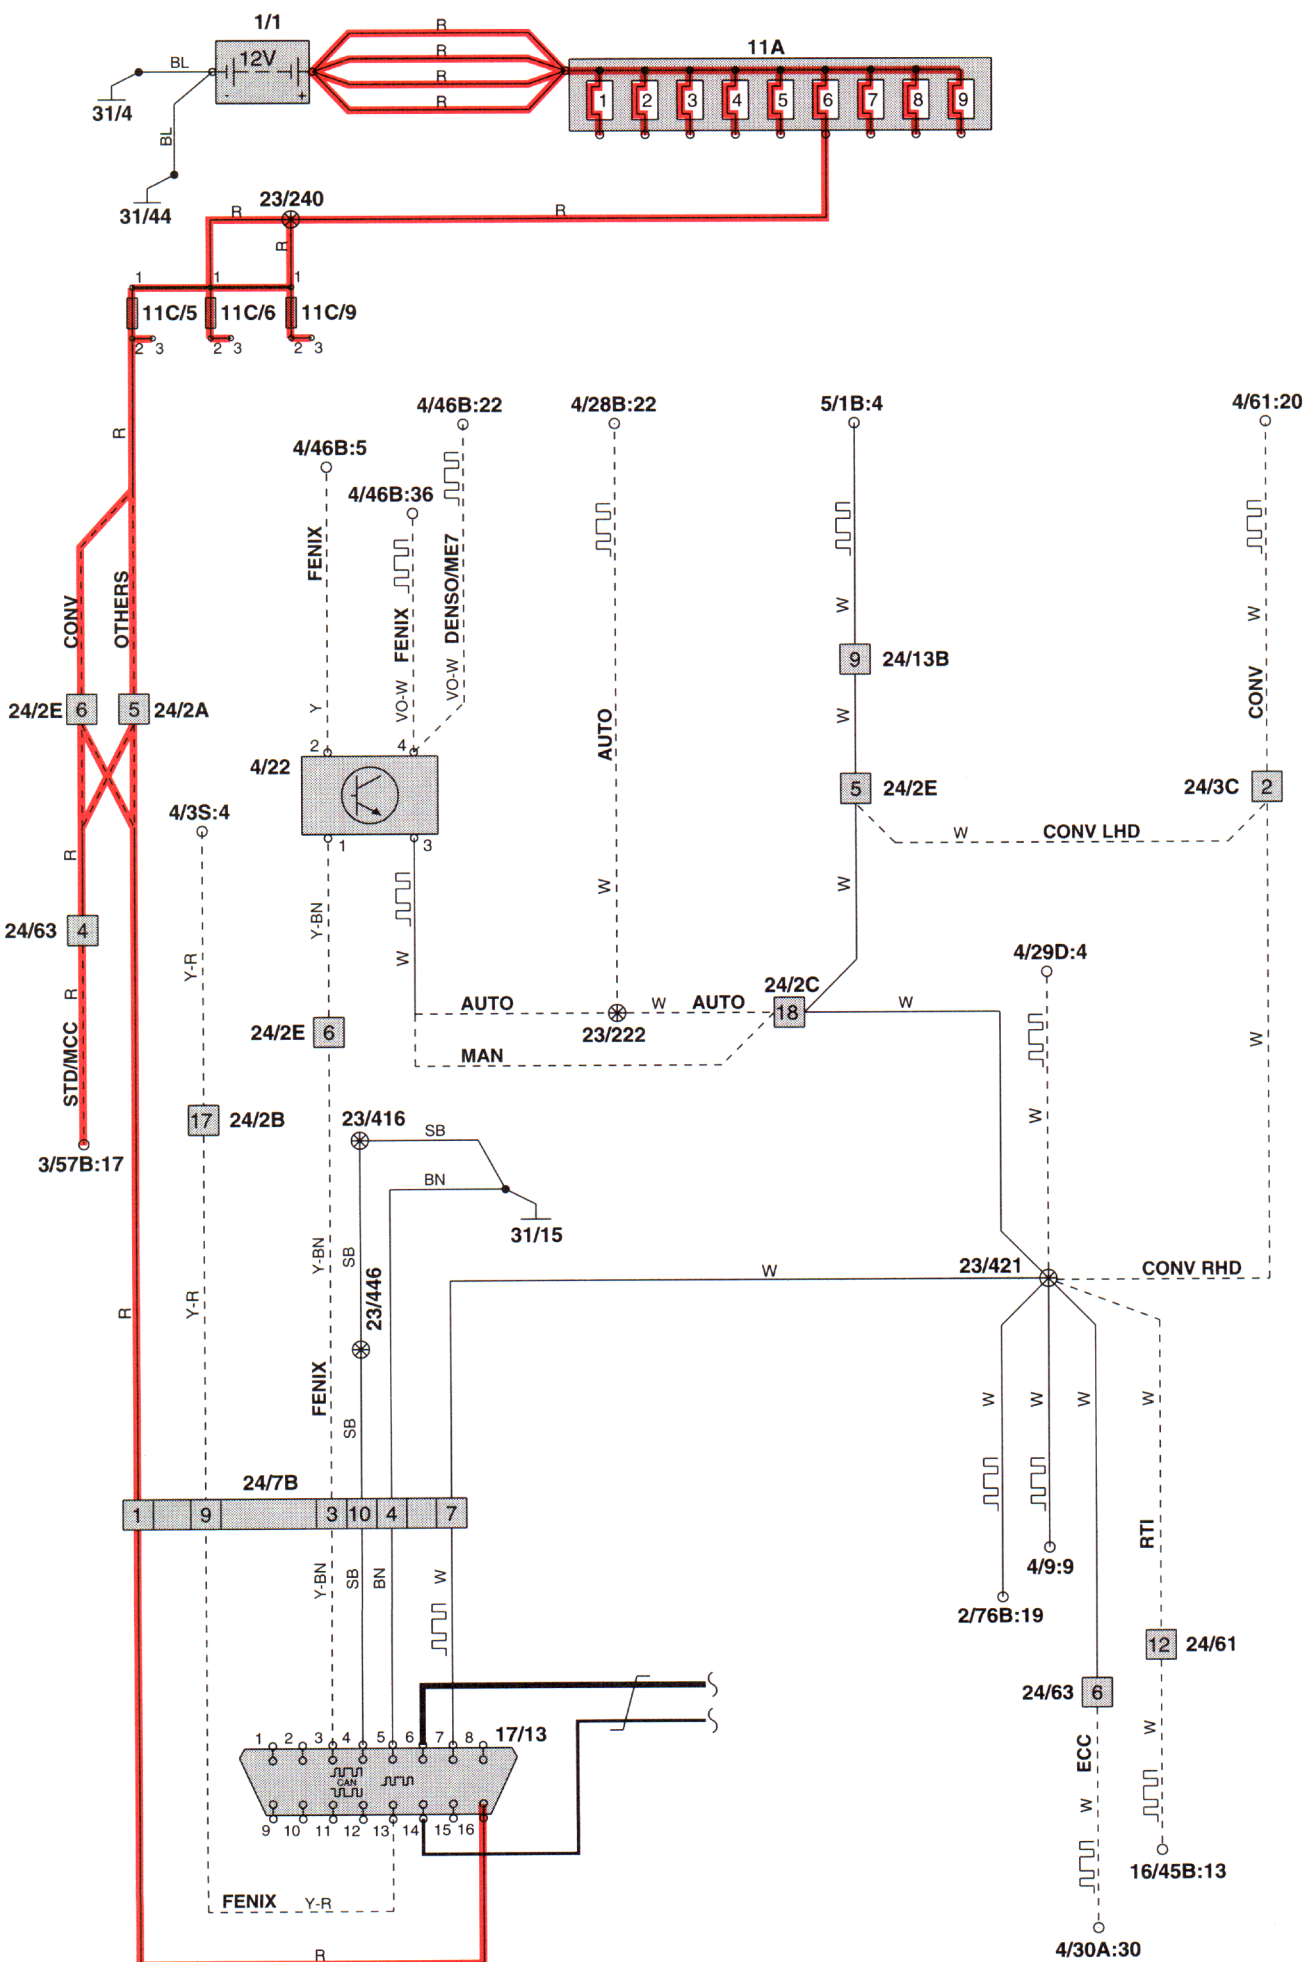

Diagnostics
MSA 15.7

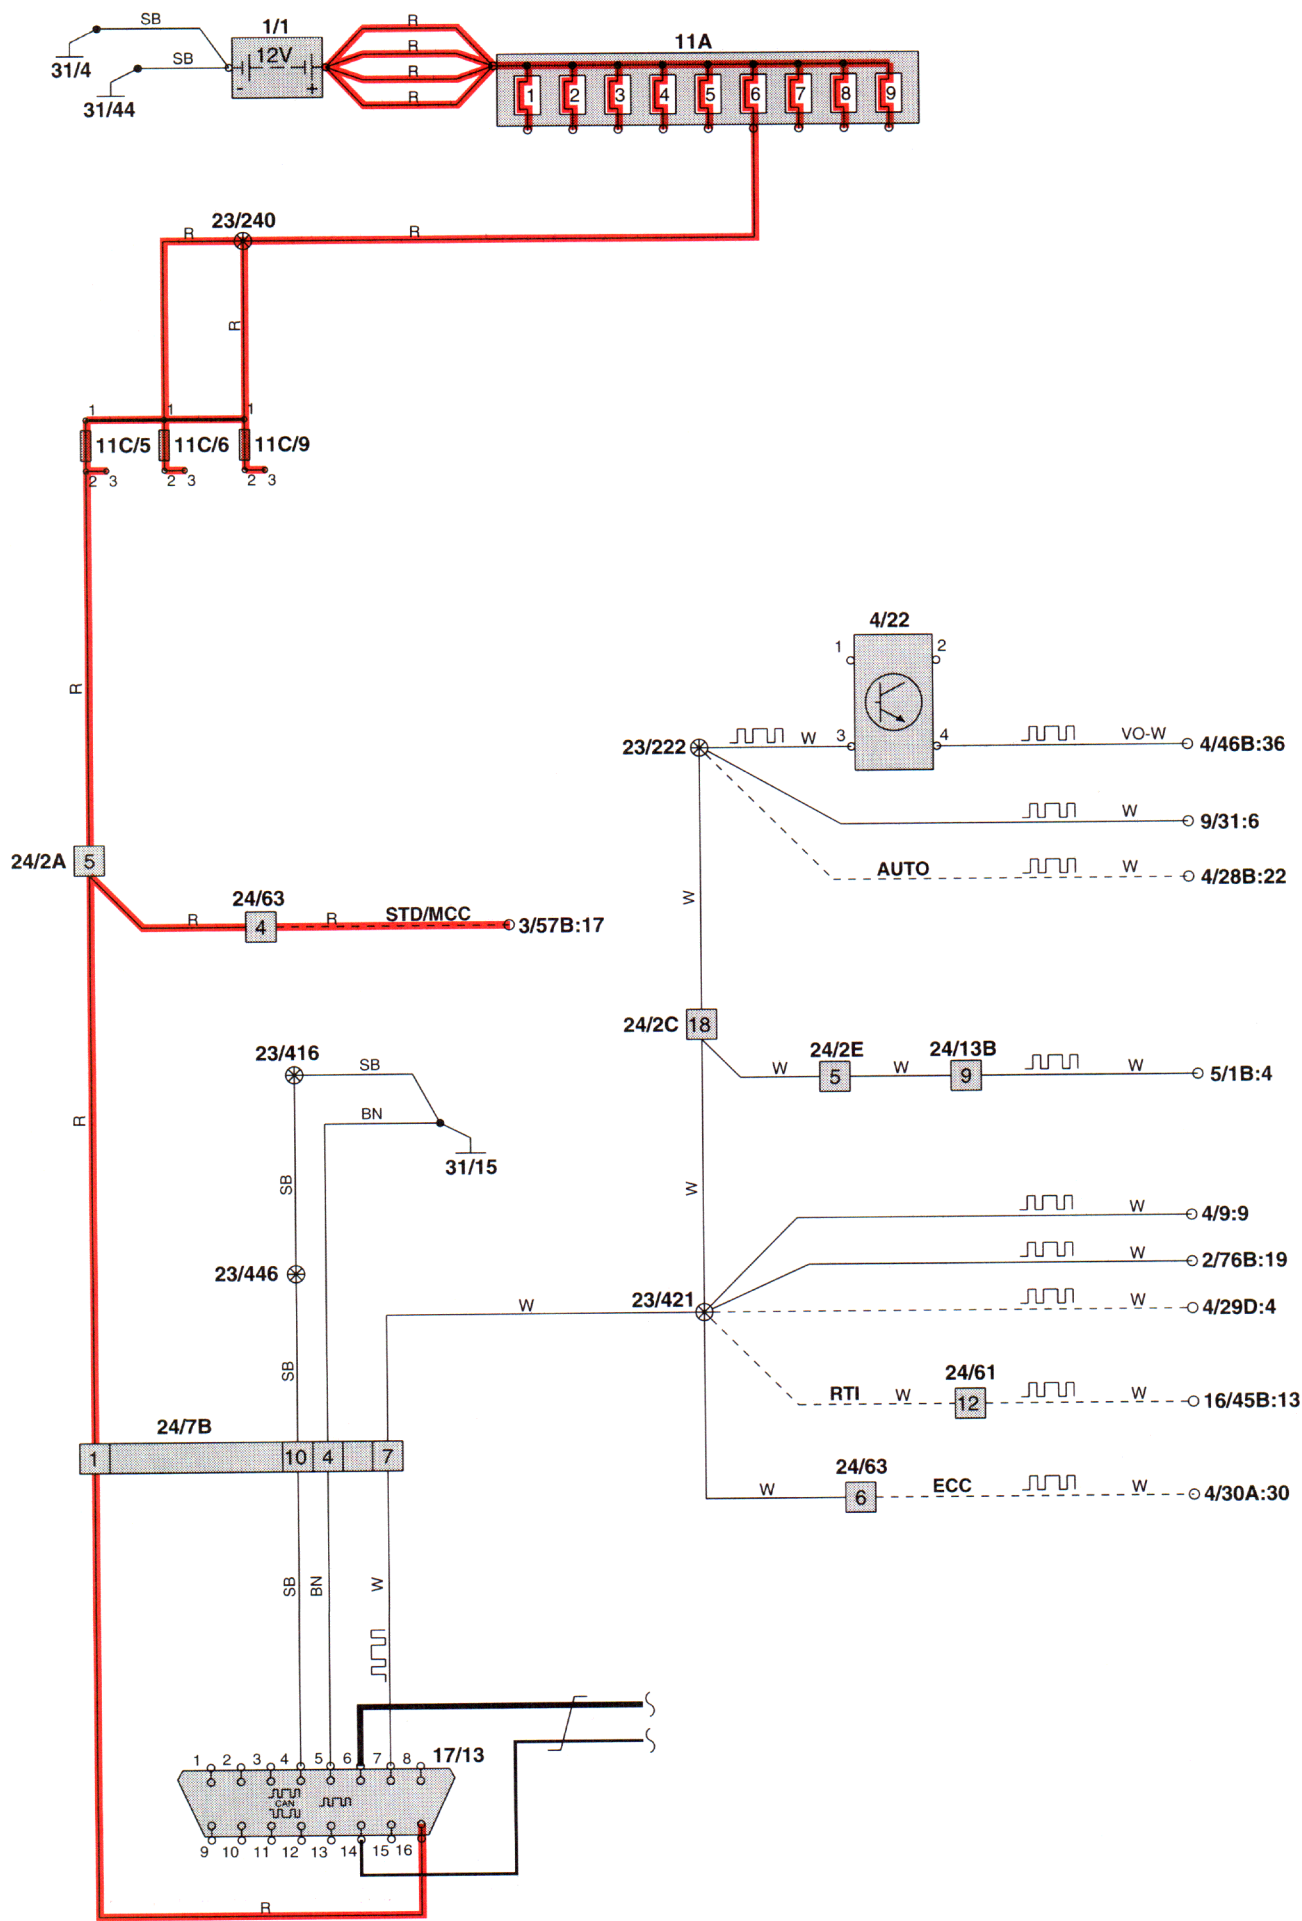


Tow hitch wiring

24/70A

- 1 Left turn signal lamp
- 2 Right turn signal lamp
- 3 Brake (stop) lamps
- 4 Parking lights
- 5 Parking lights
- 6 Ground terminal

24/70B


- 1 30-supply
- 2 15l-supply
- 3 Reversing lamp
- 4 Fog tail lamp
- 5 Fog tail lamp, bridging
- 6 Ground terminal

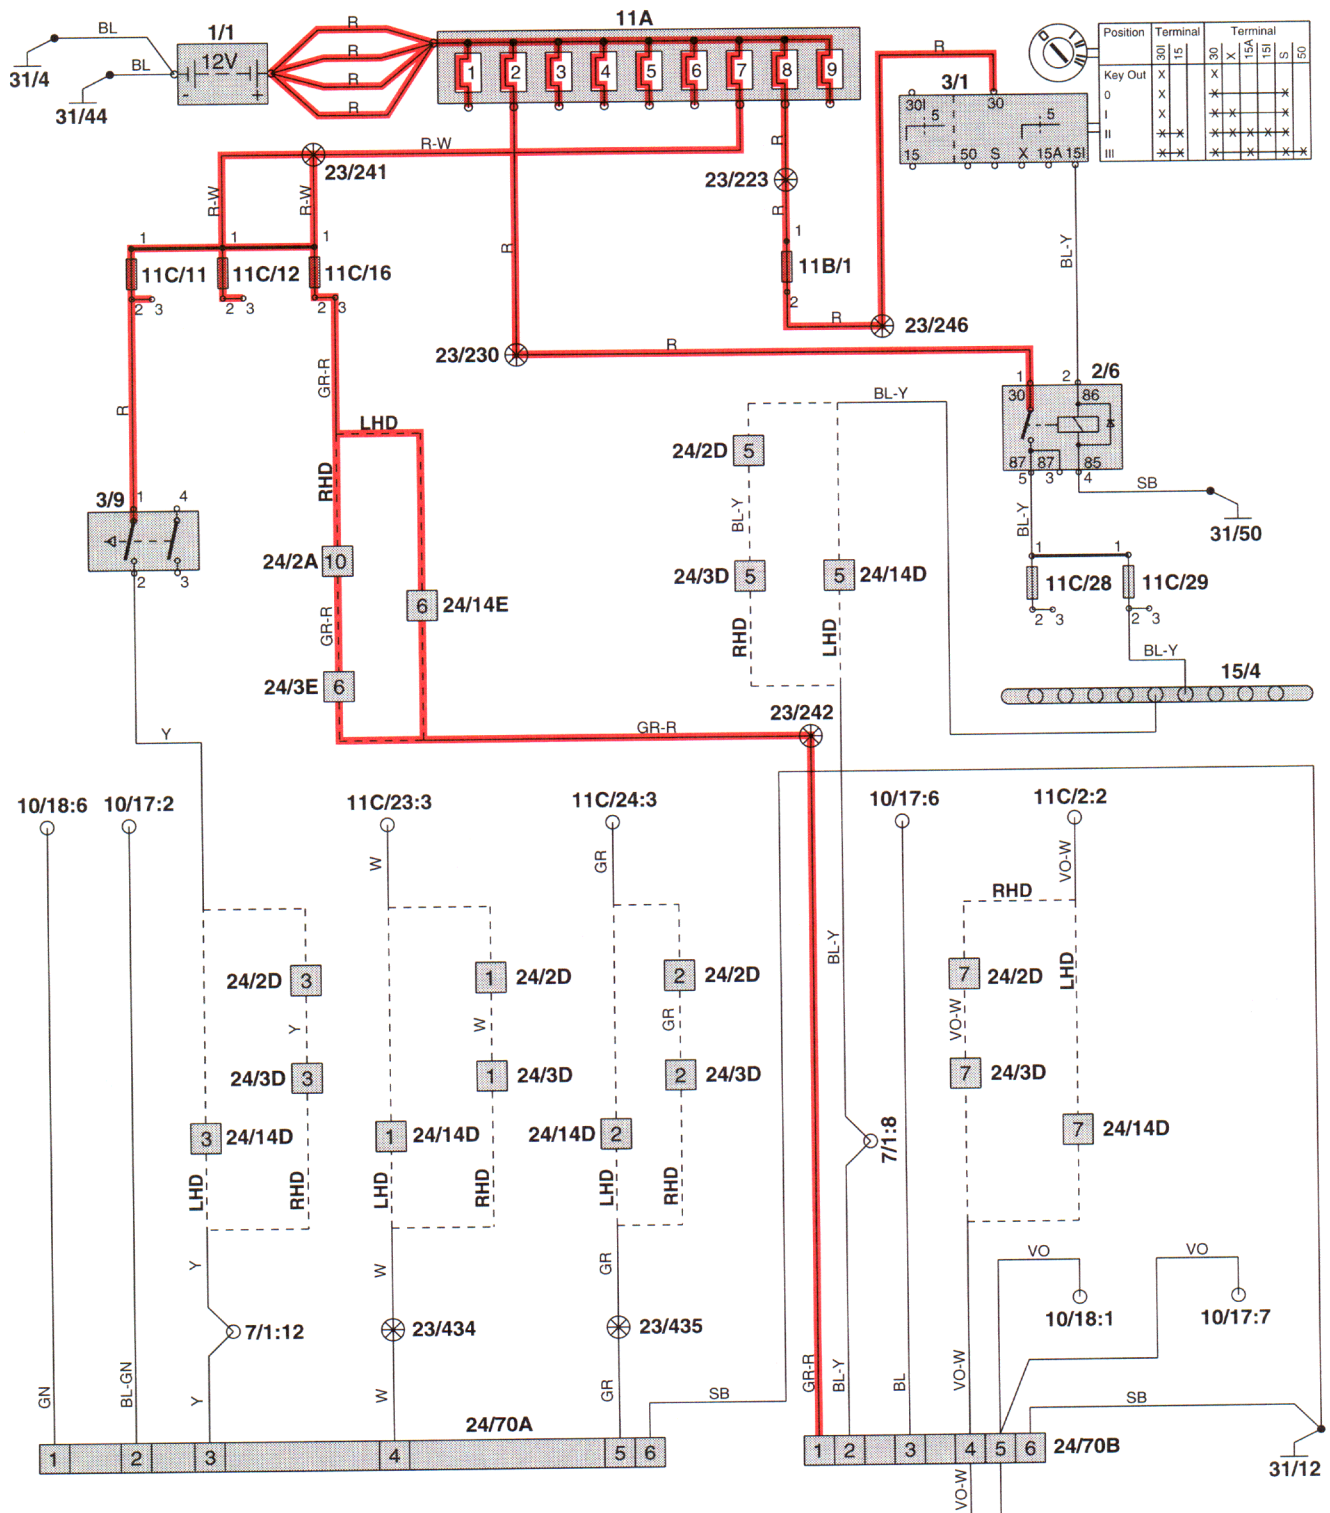


Accessories wiring

24/35


- 1 30-supply
- 2 X Supply
- 3 High beam
- 6 Rheostat, variable supply
- 8 Ground terminal

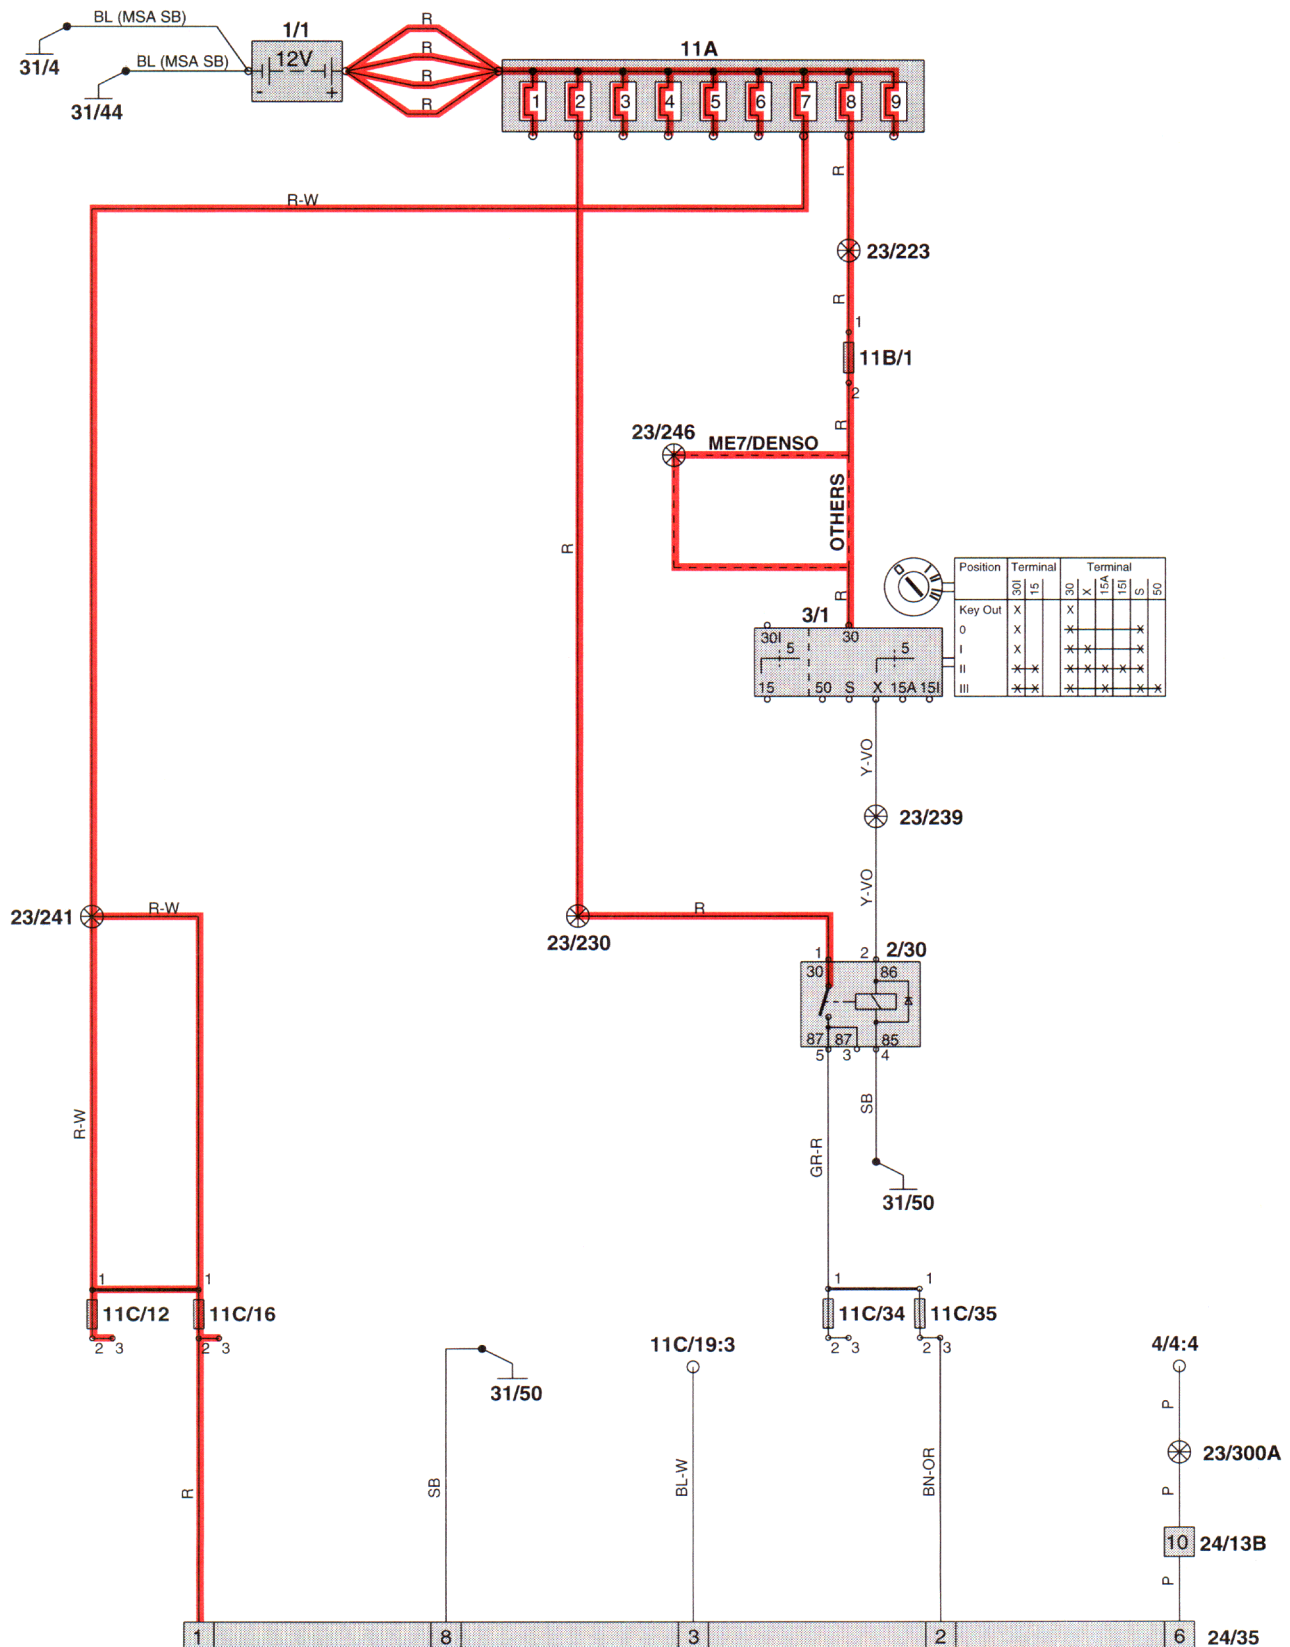


Coolbox wiring

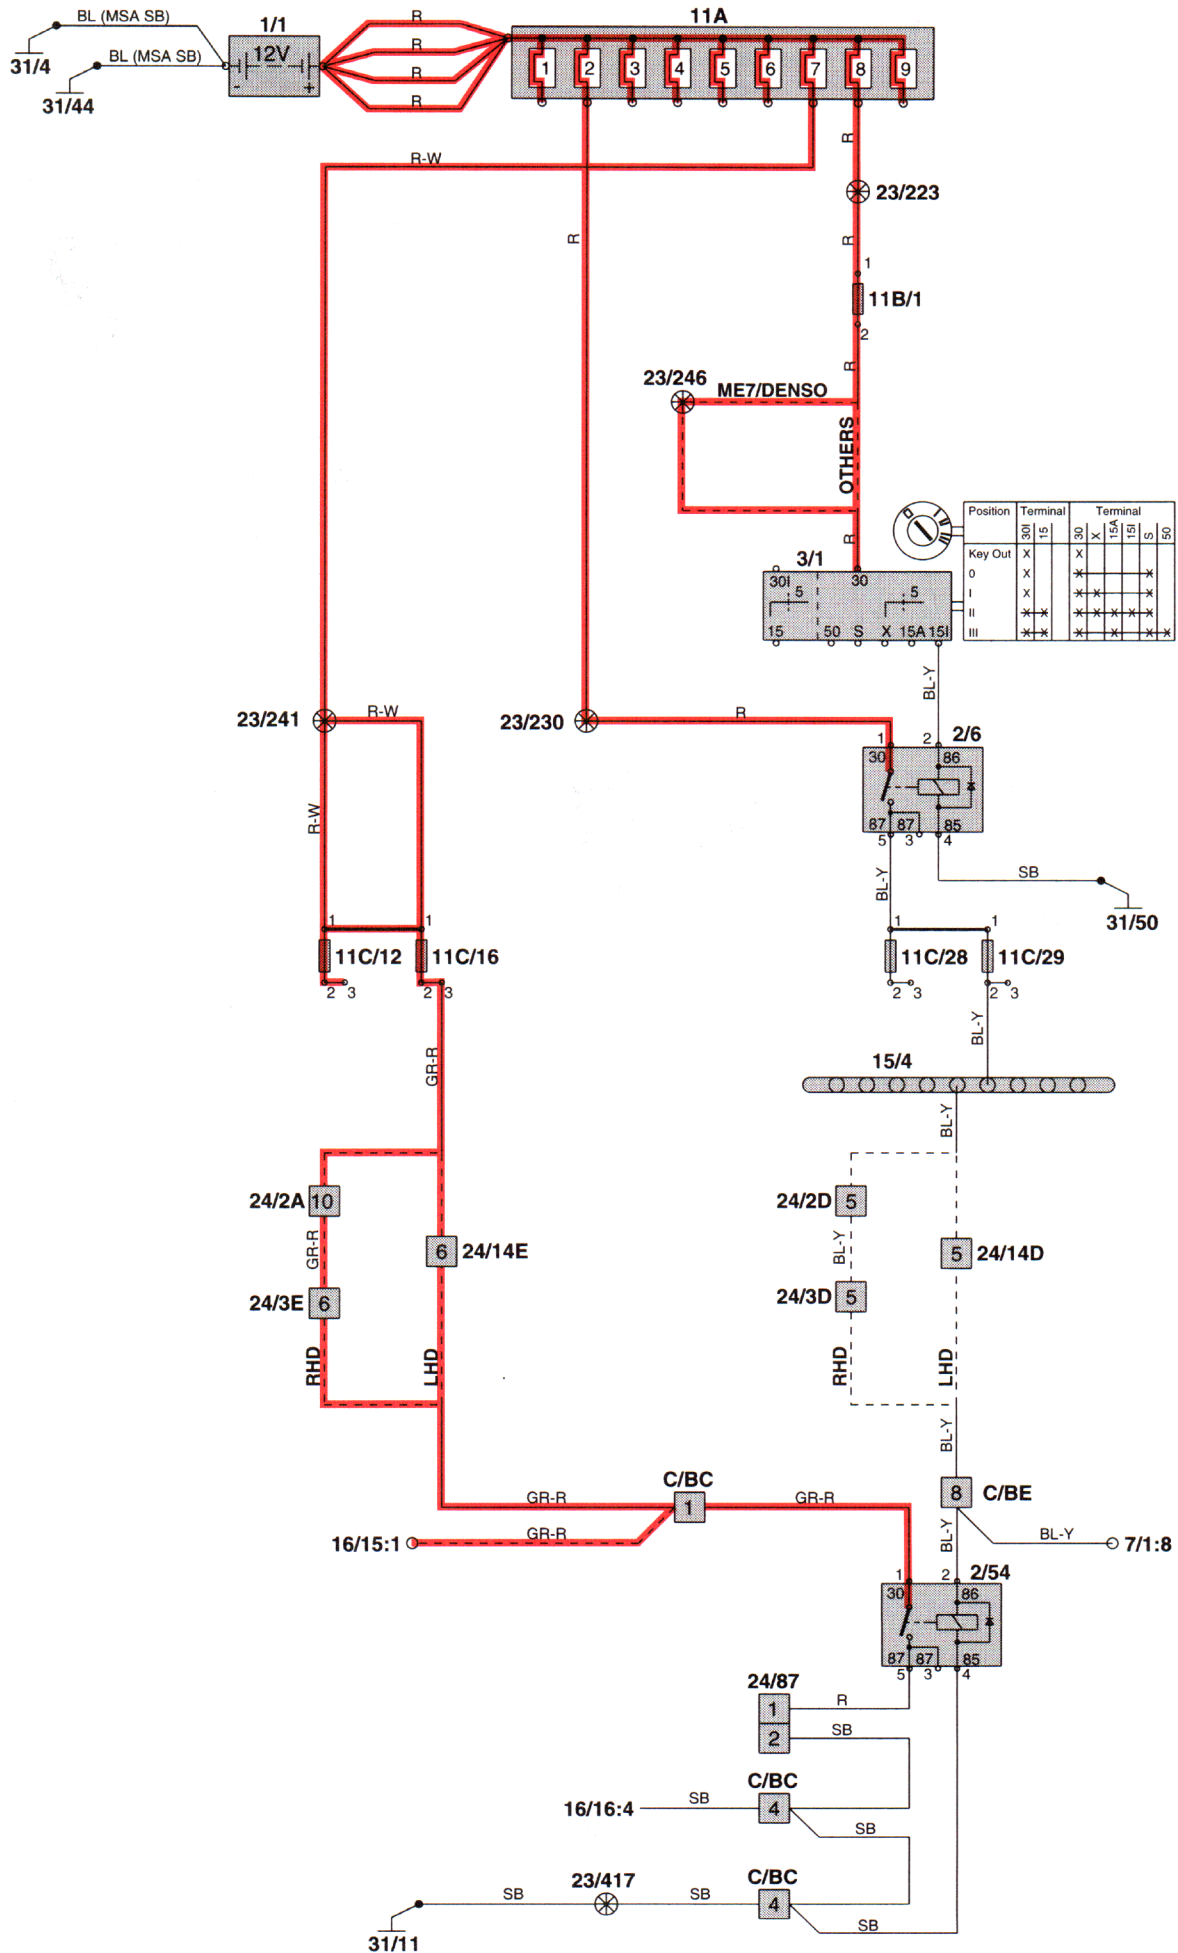

Seat belt reminder

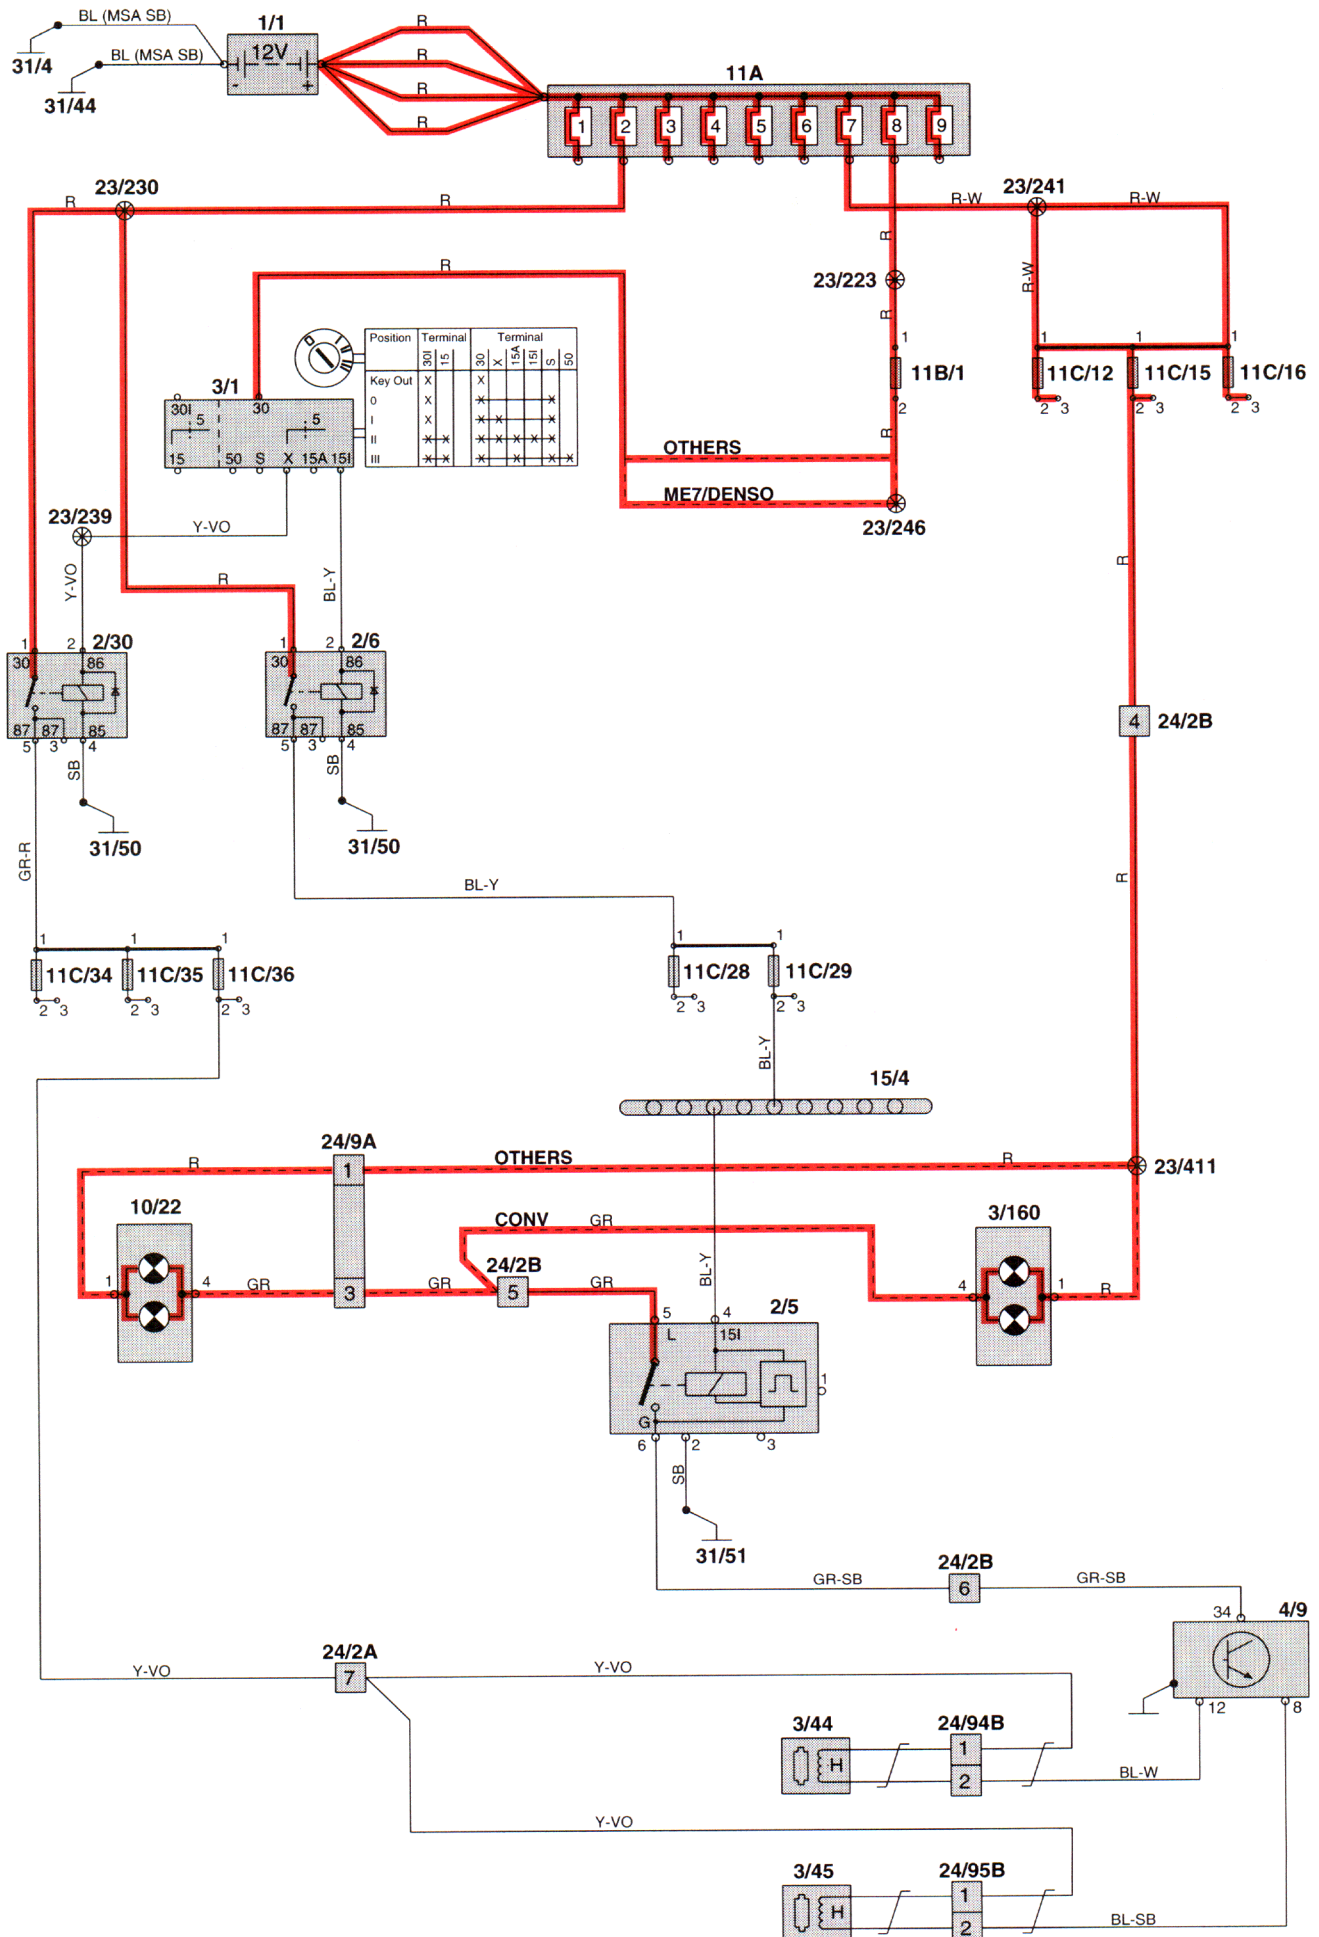


Seat belt and key reminder USA, Canada, Korea and Australia

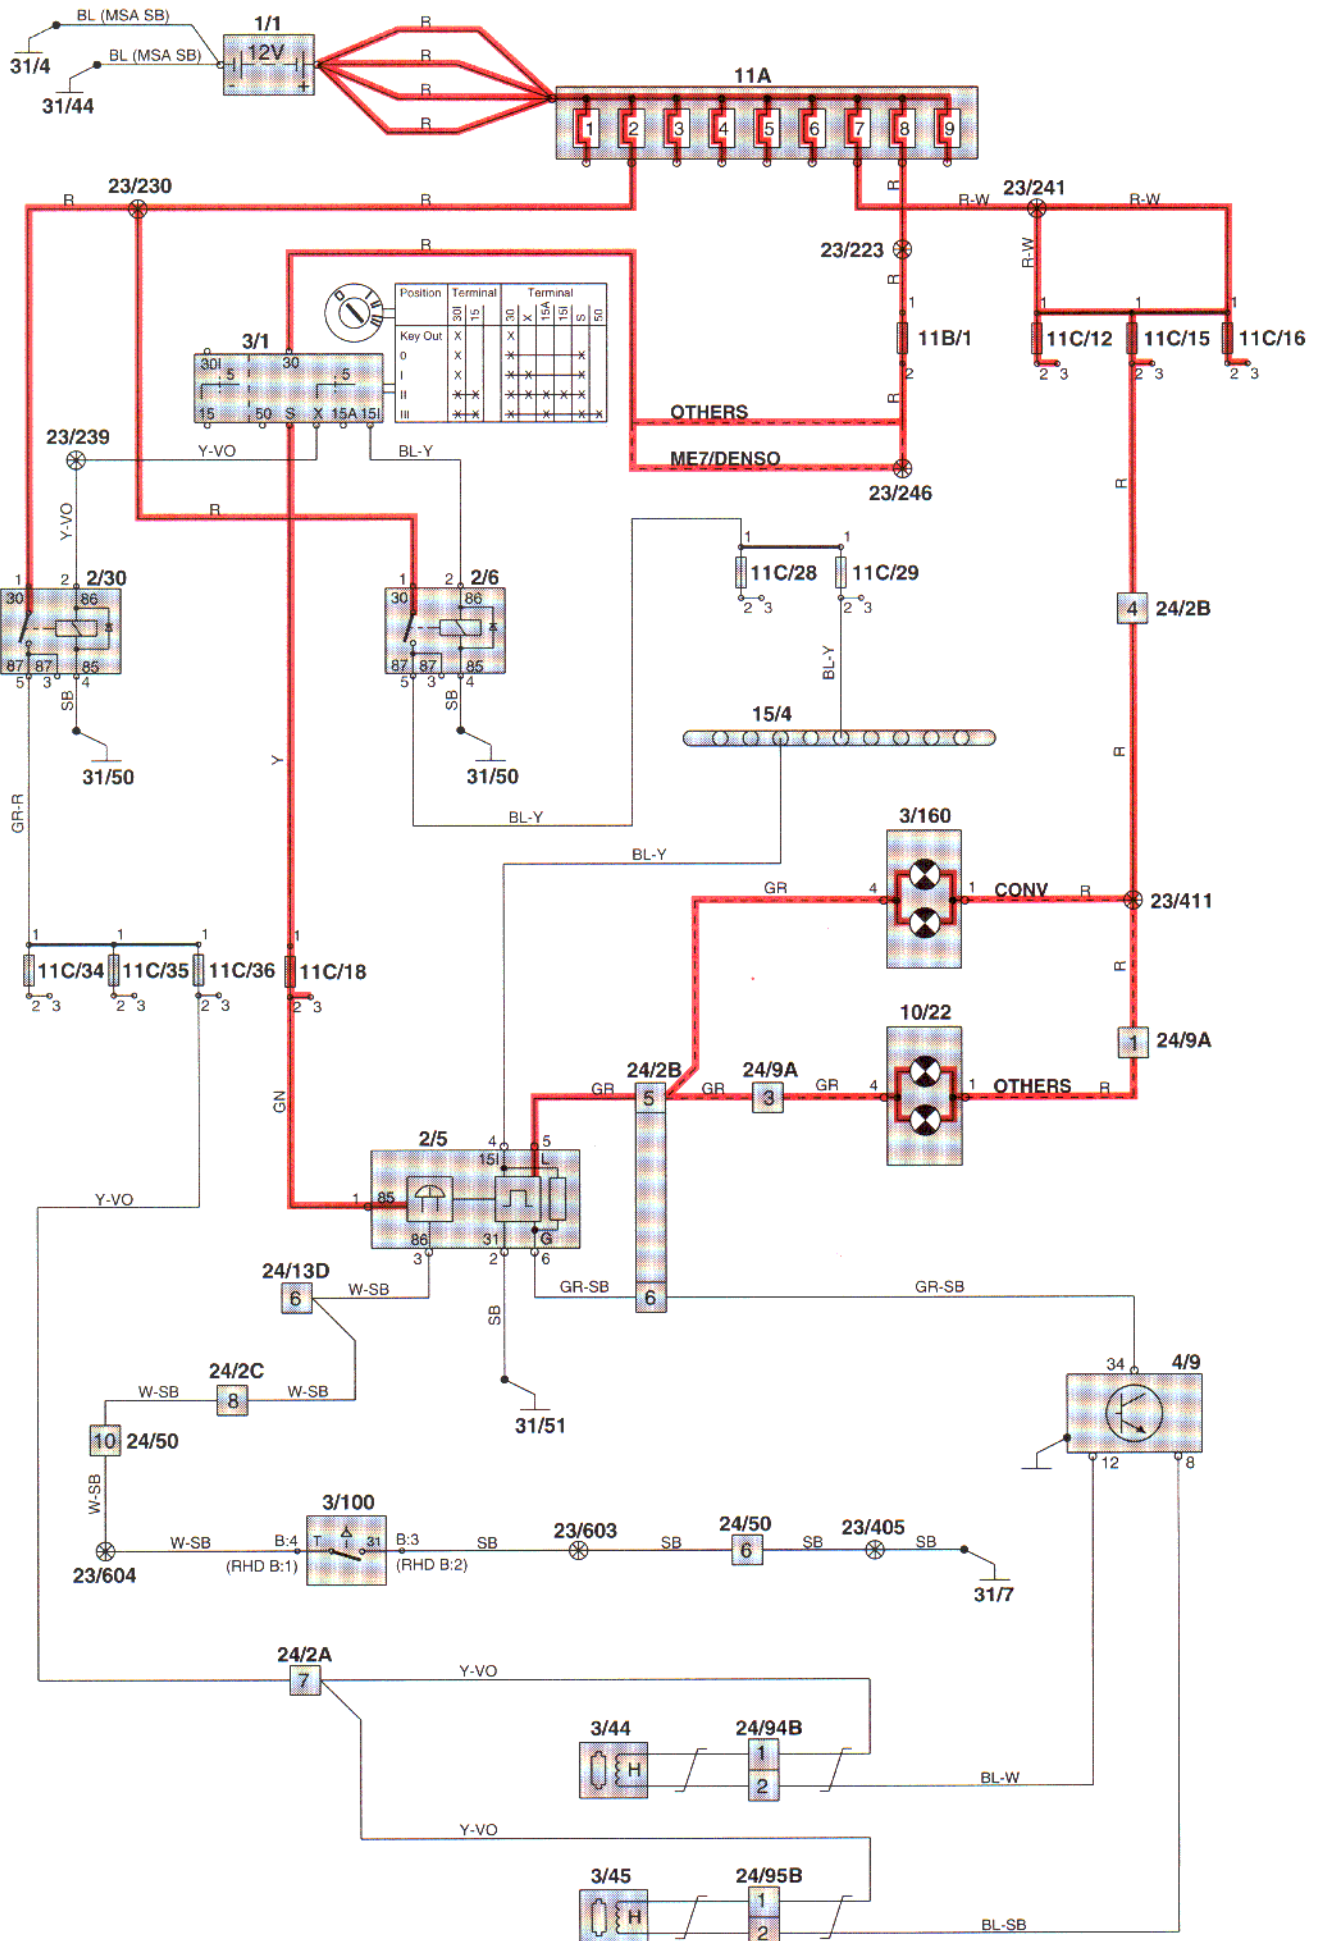


[illegible]

How to use the diagrams

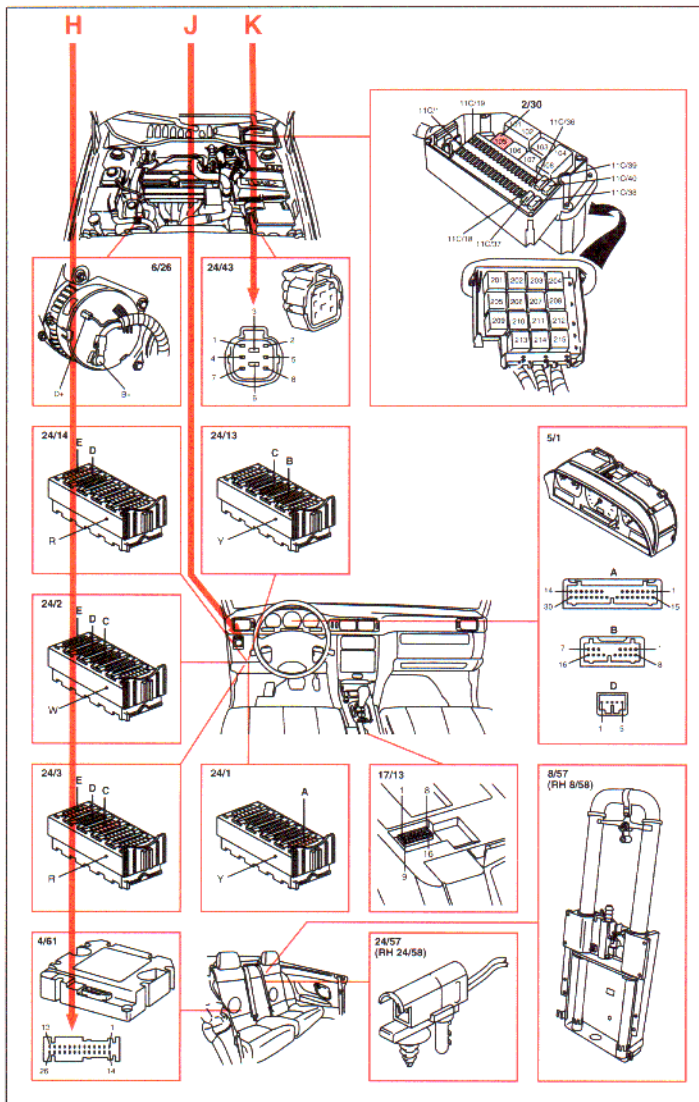

Explanation of symbols , continued

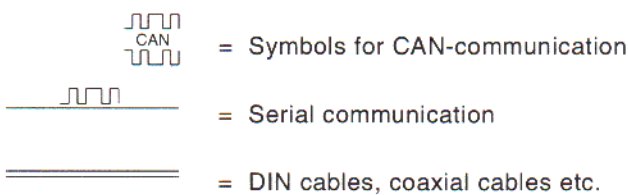

Table

Certain multi-path switches are described in the book according to a table. see the example below. The table is used to read off when the terminals are electrically connected to each other.

Example. In position III, terminal 30 is connected to terminal 15A, S, and 50.

Position	Terminal	Terminal	Terminal	Terminal	Terminal
	30	15	50	15A	S
Key Out	X	X	X	X	X
0	X	X	X	X	X
I	X	X	X	X	X
II	X	X	X	X	X
III	X	X	X	X	X

D. Junction points

The junction points are numbered. There is a list of the different junction points in the manual. It shows which other components the junction points are joined to. The locations are shown in the section "Routing of cable harnesses in the car".

E. Electrical distribution

Supply to the fuse is displayed in its entirety in the section "Electrical distribution".

F. Abbreviations

There are a number of abbreviations used in the book. These are explained in the section "Abbreviations".

Example. R-W = Red-white

G. CAN-communication

Cables which are drawn as broken lines are displayed in their entirety in the section "Data communication".

H. Components

This shows which different positions the different cables are connected to on the relevant component.

J. Location of components

It shows where the function components are placed.

K. Connector

Connectors which are an interface between two cable harnesses are described in the section "Connectors".

Fuses, 1A/1-9, in the relay / fuse box in the engine compartment

No.	Fuse function	A
11A/1	Engine cooling fan (FC)	60
11A/2	Fuses 11C/25-29 via overload relay 15l, Fuses 11C/30-37 (CONV 11C/30-36) via overload relay X	50
11A/3	Starter motor (Not MSA), Heater plugs coolant (MSA)	50
11A/4	ABS control module	50
11A/5	Main lamp relay with bulb failure warning sensor	50
11A/6	Fuses 11C/5-10, Starter motor (MSA)	60
11A/7	Fuses 11C/11-17, 11C/39-40 and 11C/41-42 (CONV)	50
11A/8	Fuse 11B/1, Fuses 11B/2-5 via main relay fuel injection system	60
11A/9	Glow plugs 1-5 via Glow plug relay (diesels) (MSA), Fuse 11C/37 via relay window lift mechanisms right-hand side (CONV), Fuse 11C/38 via relay window lift mechanisms left-hand side (CONV)	60

Fuses, 11B/1-5, in relay / fusebox in engine compartment

No.	Fuse function	A
11B/1	Ignition lock, Engine management system (Not MSA), Emissions control (DENSO/ME7), Engine cooling fan (FC) (DENSO/ME7), Electronically controlled automatic transmission AW 50-42, Cruise control (DENSO/ME7), Electronic climate control ECC (DENSO/ME7)	10 (15 S70/V70 DENSO/ME7)
11B/2	Engine management system, Engine cooling fan (FC) (DENSO/ME7), Cruise control (DENSO/ME7), Electronically controlled automatic transmission AW 50-42 (DENSO/ME7), Manual climate control MCC (DENSO/ME7), Electronic climate control ECC (DENSO/ME7)	15 (10 FENIX/ MSA)
11B/3	Engine management system	15 (20 FENIX)
11B/4	Electronically controlled automatic transmission AW 50-42 (FENIX/MSA), Engine management system (DENSO/ME7)	15 (10 FENIX/ MSA)
11B/5	Engine management system (DENSO/ME7), Engine cooling fan (FC) (FENIX/MSA), Manual climate control MCC (FENIX/MSA), Electronic climate control ECC (FENIX/MSA), Emissions control	20 (10 FENIX/ MSA)

Fuses

Fuses, 11C/1-24, in the central electrical unit

No.	Fuse function	A
11C/1	Central locking (C70), Soft-top operation	10
11C/2	Fog lamp, Tow hitch wiring, Combined instrument panel	10 (15 CONV)
11C/3	RTI Road Traffic Information, Anti-theft alarm, Interior lighting, Central locking , Electronically controlled automatic transmission AW 50-42 (FENIX/MSA)	10 (15 CONV)
11C/4	Engine management system (DENSO/ME7), Immobilizer, Shift-lock automatic transmission, ABS brake system	10
11C/5	Engine cooling fan (FC), Diagnostics, Standard heater, Manual climate control MCC, Electronic climate control ECC	15
11C/6	Anti-theft alarm, Interior lighting, Central locking	20
11C/7	Radio, Radio with 4x50 W extra amplifier (S70/V70)	15 (20 S70/V70 DENSO/ME7)
11C/8	Light switch, Instrument and control panel lighting, Immobilizer, Combined instrument panel	15
11C/9	Radio (C70), Heated rear seat	20 (30 C70)
11C/10	Anti-theft alarm, Central locking	10
11C/11	Stop (brake) lamp, Cruise control (FENIX/MSA), Electronically controlled automatic transmission AW 50-42 (FENIX/MSA), ABS Brake system, Tow hitch wiring	10 (15 S70/V70 DENSO/ME7)
11C/12	Radio (C70), Additional heater	30
11C/13	High and low beam, Anti-theft alarm, Turn signal lamp and hazard warning signal flashers, Central locking, Interior lighting (S70/V70)	20 (15 C70)
11C/14	Electrical retracting door mirrors, Rear demist and electrically heated door mirrors	30 (40 COUP)
11C/15	Interior lighting, Seat belt reminder, Seat belt reminder and key warning, Road Traffic Information RTI, Power windows(CONV)	10
11C/16	Radio, Towing hitch cable harness, Accessory wiring, Cool box wiring, Radio with 4x50 W extra amplifier (S70/V70)	30
11C/17	Fog lamp	20
11C/18	Seat belt reminder and key reminder, High and low beam	10
11C/19	High beam, Accessory wiring	15
11C/20	High beam, Combined instrument panel	15
11C/21	Low beam	15
11C/22	Low beam	15
11C/23	Fog lamp (EU/OS), Parking lamps, Tail lamp and license plate lighting, Tow hitch wiring	10
11C/24	Parking lamps, Tail lamp and license plate lighting	10

Fuses, 11C/25-42, in the central electrical unit

No.	Fuse function	A
11C/25	-	10
11C/26	Light switch, Instrument and control panel lighting	15
11C/27	Back-up (reversing) lamp, Turn signal lamp and hazard warning signal flasher, RTI Road Traffic Information, Electronically controlled automatic transmission AW 50-42, Rear view mirror with automatic dimming	15
11C/28	Heated seats, Heated rear seat	25
11C/29	15-rail (15/4): Cruise control (FENIX/MSA), Parking lamps, Tail lamp and license plate lighting, Stop (brake) lamp, Anti-theft alarm, Cool box wiring, Seat belt reminder, Seat belt reminder and key warning, Rear demist and door mirrors, Electrically retractable door mirrors, Additional heater, Tow-hitch wiring, Soft top operation	10
11C/30	Cigarette lighter/12V-outlet	15 (20 S70/V70 DENSO/ME7)
11C/31	Standard heater STD, Manual climate control MCC, Electronic climate control ECC	25
11C/32	Instrument- and control panel lighting, Radio, Radio with 4x50 W extra amplifier (S70/V70), Power sun roof, Electrical retracting door mirrors, Electronic climate control ECC, Central locking (CONV), Soft-top operation	10
11C/33	X-rail (15/8): Headlamp range adjustment, Rear windshield washer	15
11C/34	Horn, Windshield and headlamp washer	25
11C/35	Interior lighting, Accessory wiring, Road Traffic Information RTI, Power seat without memory, Cargo compartment fans, Remote controlled garage door opener, Power windows (CONV), Soft-top operation, Rear view mirror with automatic dimming, Rear demist and electrically heated door mirrors (CONV), Power door mirrors (CONV), Electrical retracting door mirrors (CONV)	10
11C/36	Seat belt reminder, Seat belt reminder and key reminder, Supplemental Restraint System SRS	15 (10 S70/V70 DENSO/ME7)

Automatic fuses

11C/37	Power windows, Power sun roof, Power door mirrors (Not CONV), Power retracting door mirrors (Not CONV), Rear demist and electrically heated door mirrors (Not CONV)
11C/38	Power windows (C70)
11C/39	Power seats (LH)
11C/40	Power seats (RH)
11C/41	Soft-top operation (CONV)
11C/42	Soft-top operation (CONV)

Relays

Relays in the relay / fusebox in the engine compartment

1	Main relay fuel injection system (2/32)
2	Glow plug relay (diesels) (2/14) (MSA)
3	Electronic throttle module (ETM) relay (2/134) (DENSO/ME7) Relay starter motor (2/35)
4	Relay A/C (2/22)

Relays in the central electrical unit


101-102	Control module, cruise control (4/3) (FENIX)
103	Relay fuel pump (FP) (2/23) (Not MSA)
104, 108	Headlamp relay with bulb failure warning sensor (2/1)
105	Overload relay X-supply (2/30)
106	Overload relay 15I-supply (2/6)
201	Fog lamp relay (2/2)
202	Relay alarm horn (2/77)
203	Intermittent wiper relay (2/4)
204	Intermittent relay tailgate wiper (2/16) (S70/V70) Audible signal soft-top (7/117) (CONV)
205	Relay rear hatch opening (2/67) (CONV)
206	Relay window lift mechanisms left-hand side (2/99) (CONV)
208	Relay heated rear windshield/door mirrors (2/44)
210	Relay window lift mechanisms right-hand side (2/100) (CONV)
212	Relay seat belt reminder/key warning (2/5)
214	Automatic fuses 11C/41-42 (CONV)

Other relays


- 2/11 Engine cooling fan relay
- 2/43 Relay heated rear seat (S70/V70)
- 2/54 Relay coolbox (V70)
- 2/74 Relay heating plugs coolant (MSA)
- 7/1 Bulb failure warning sensor, rear

Ground terminals


31/7 S70/V70

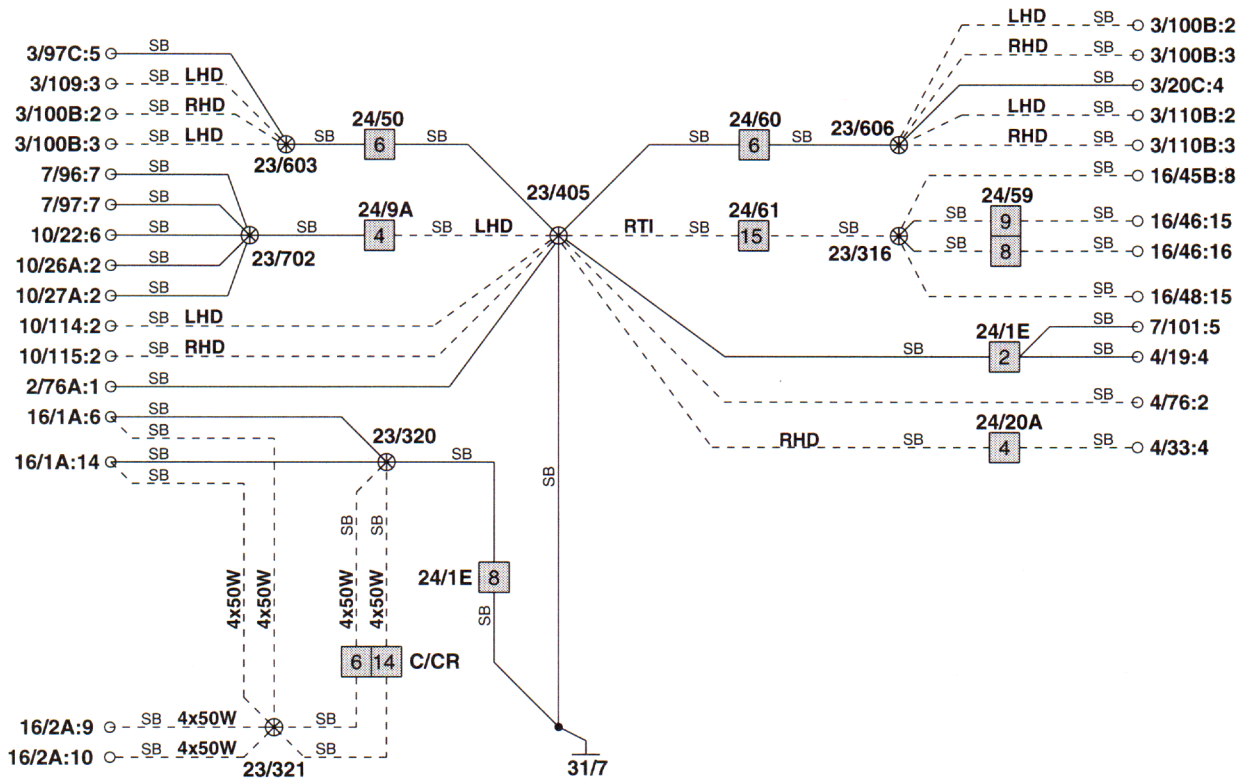


31/11 C70







31/11 S70

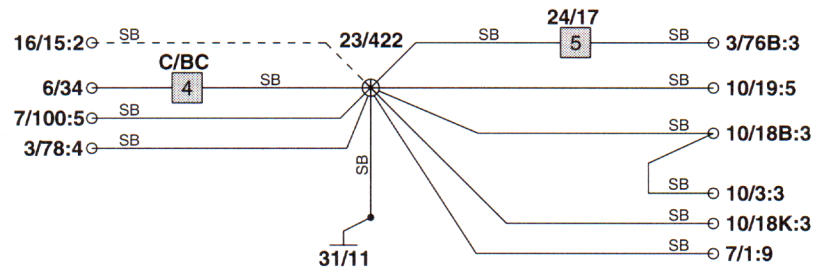


31/11 V70

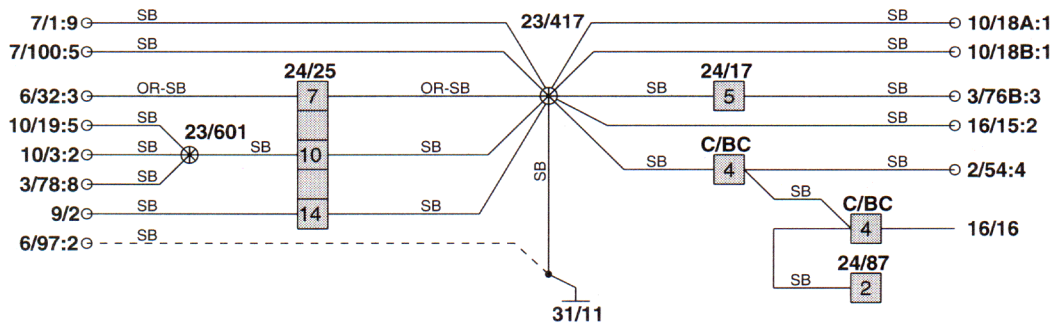

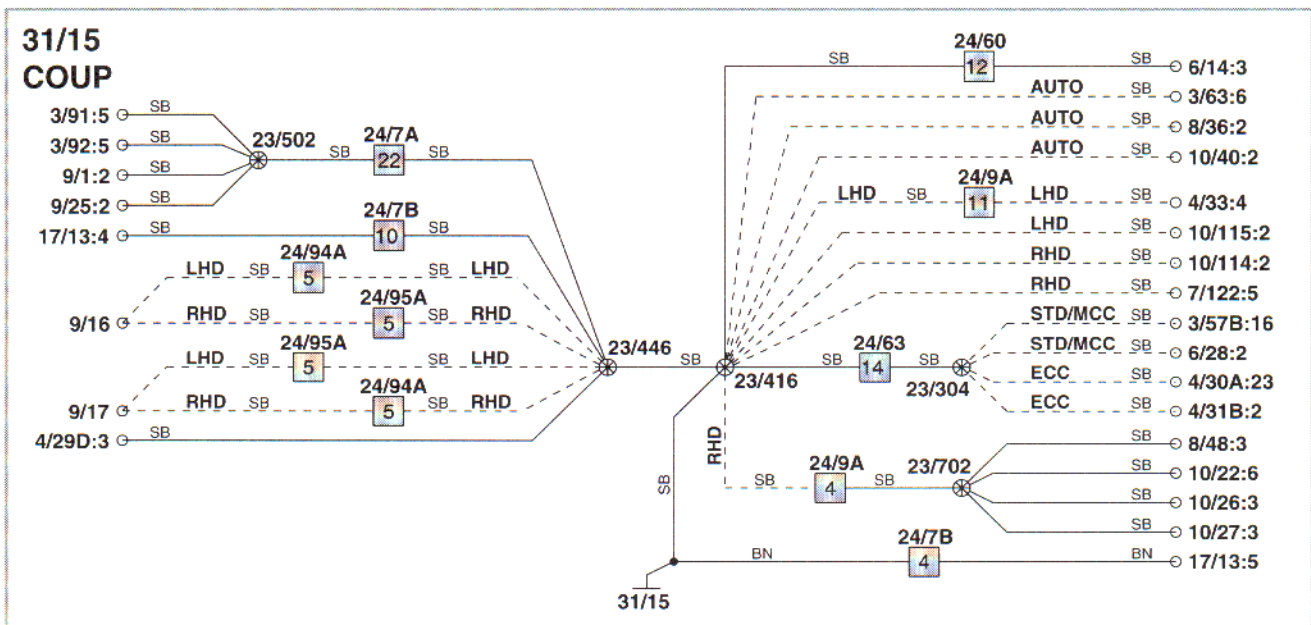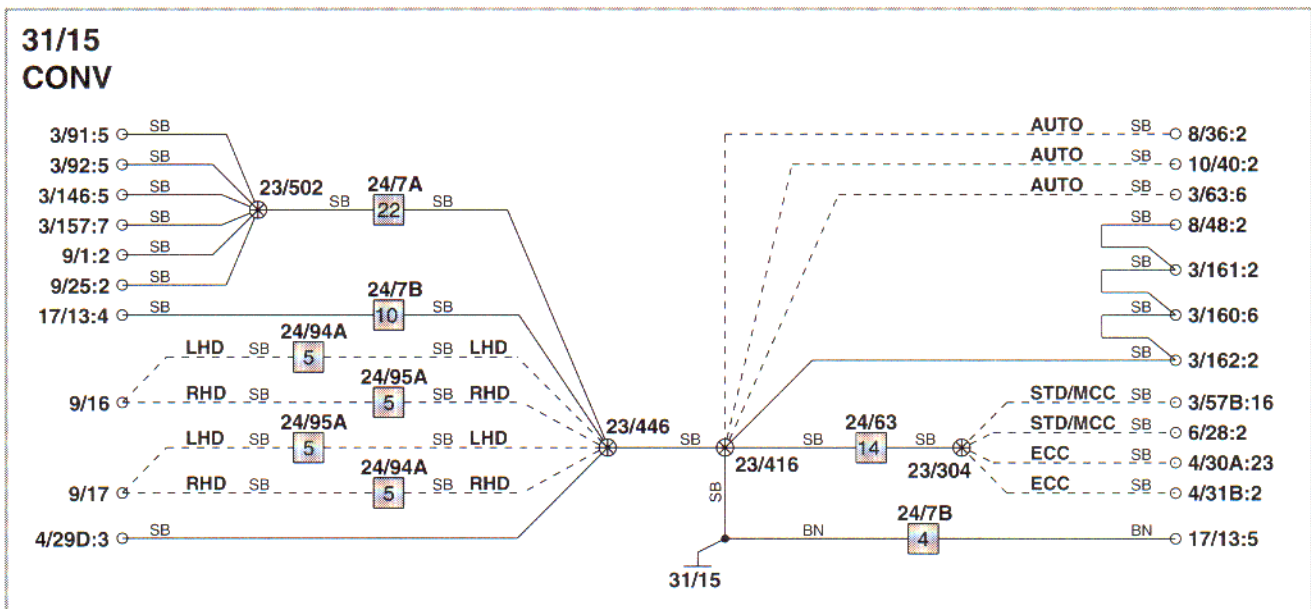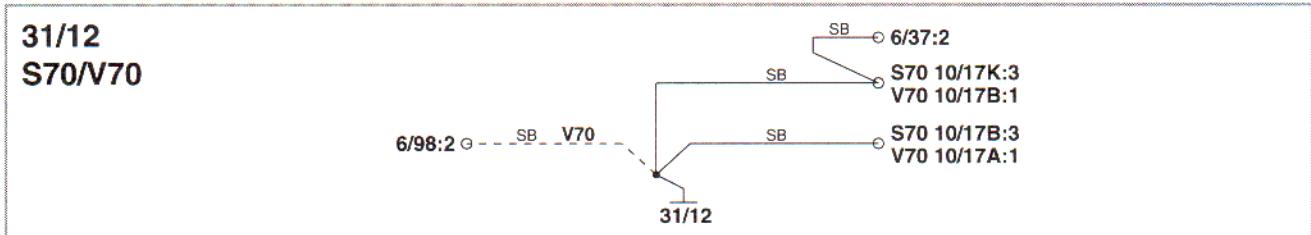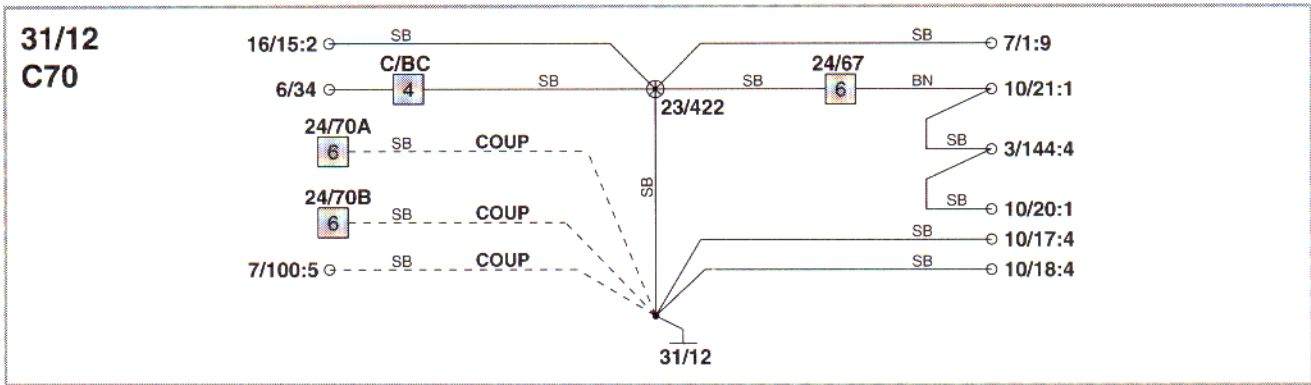


Ground terminals


31/15
S70/V70

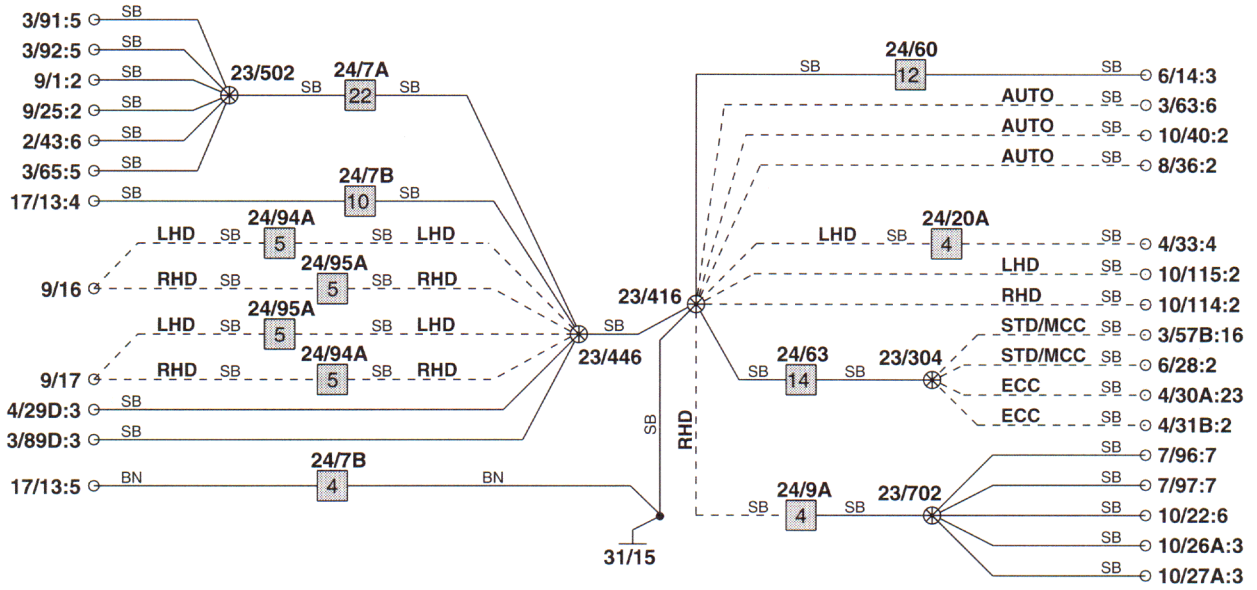



31/44

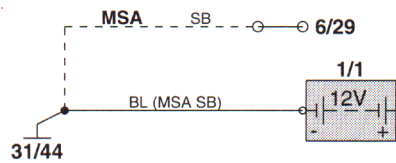


31/47
CONV

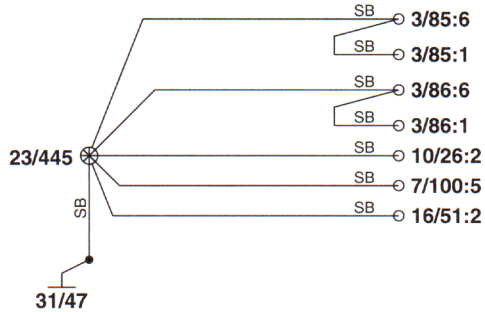


31/47
COUP

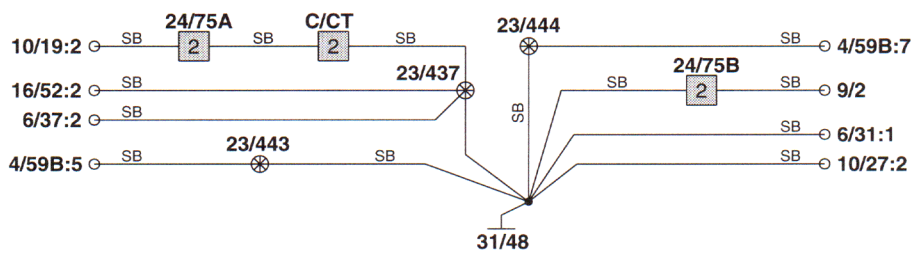31/48
CONV


31/48 COUP

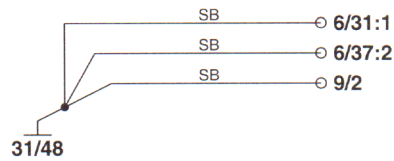






31/48 S70/V70

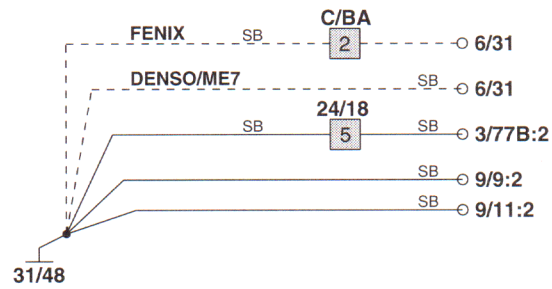


31/50

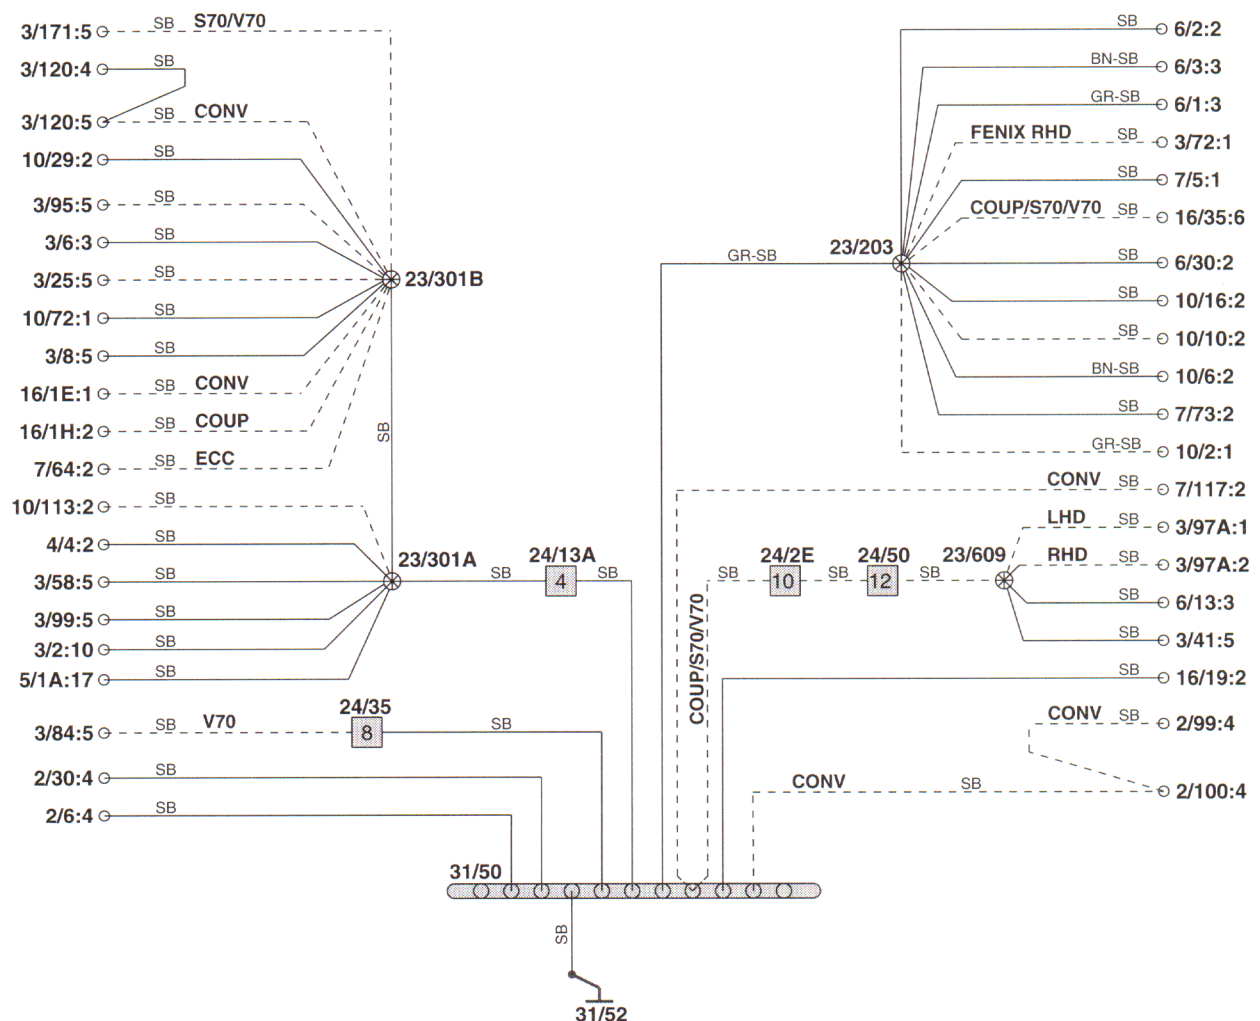


Ground terminals

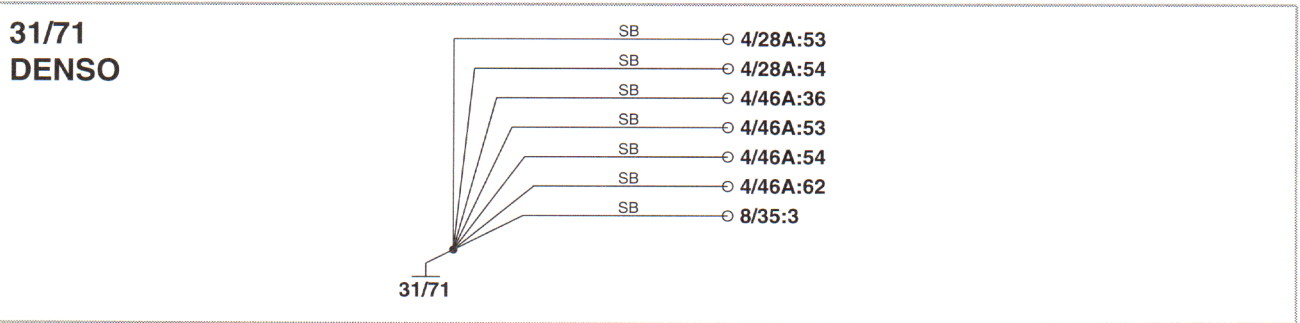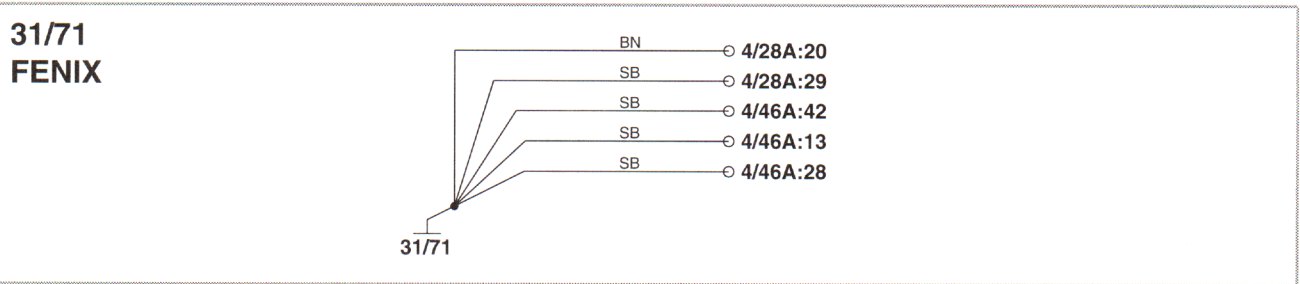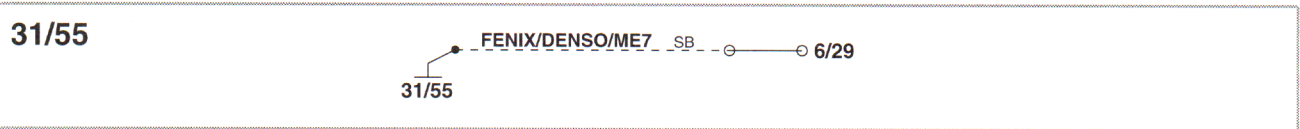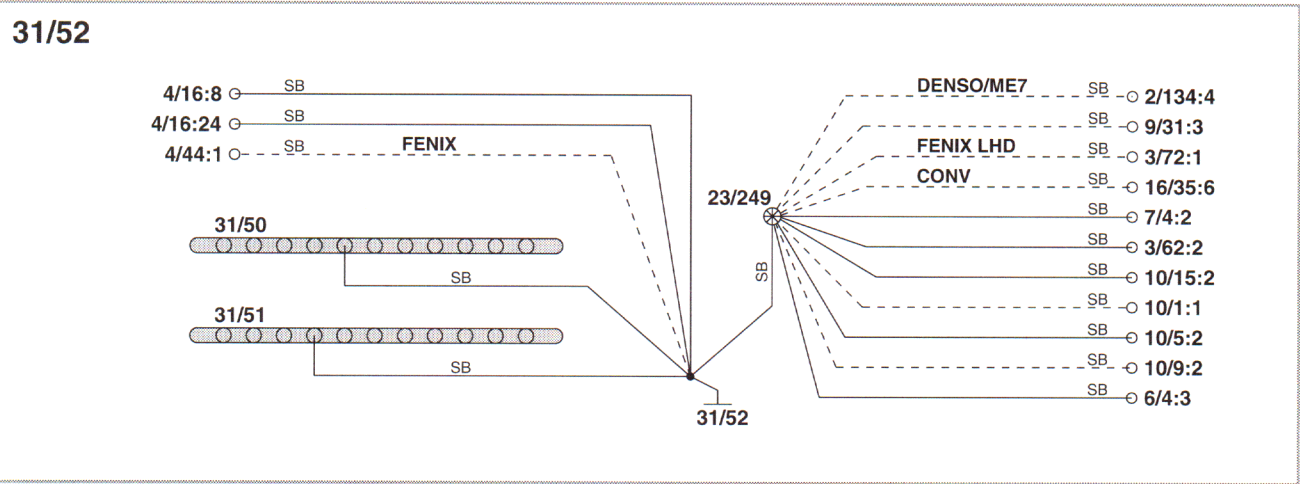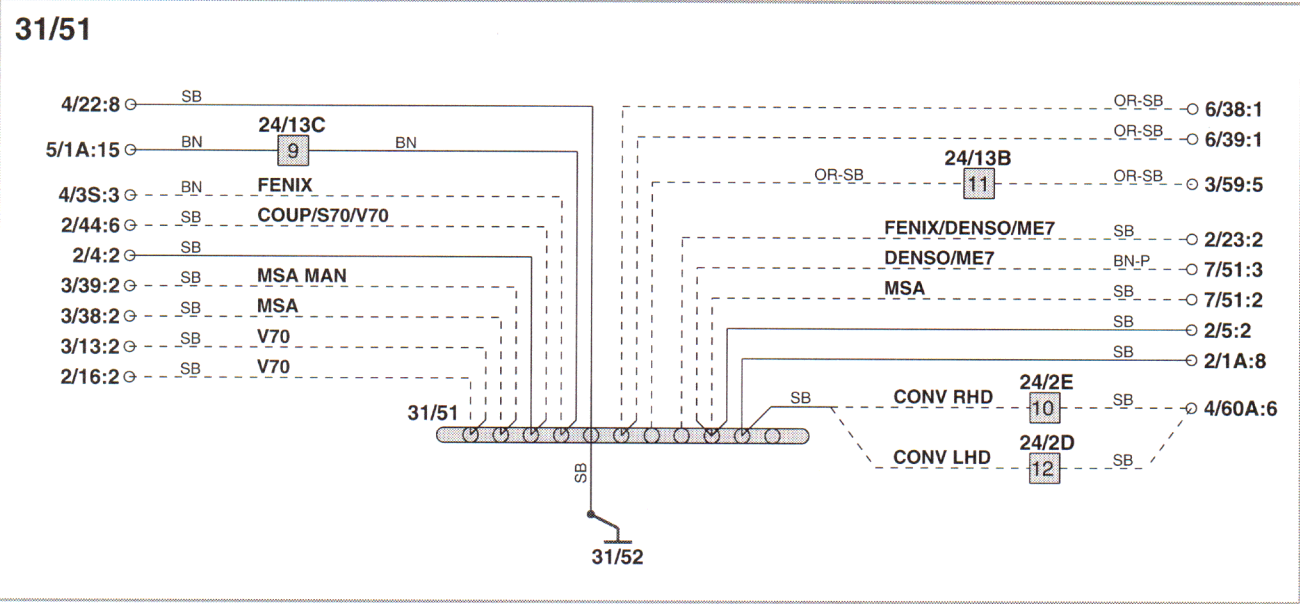


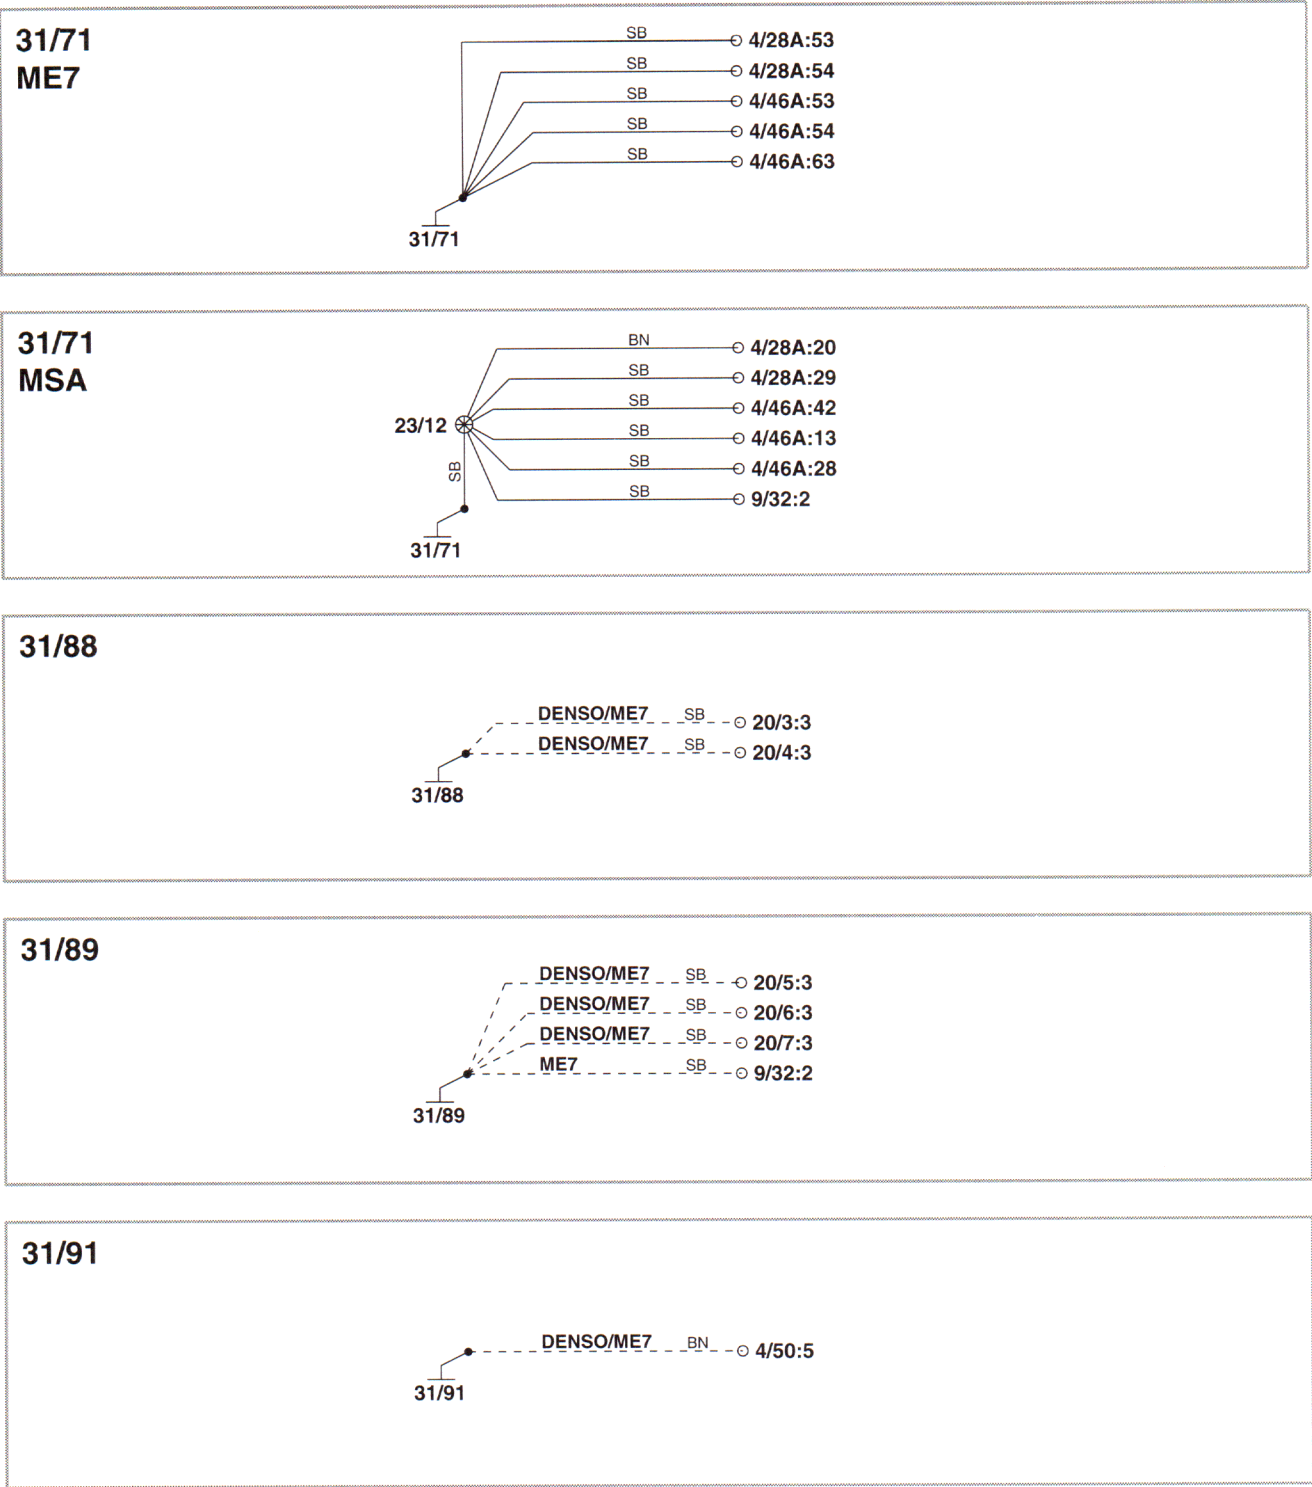


Ground points C70 Convertible

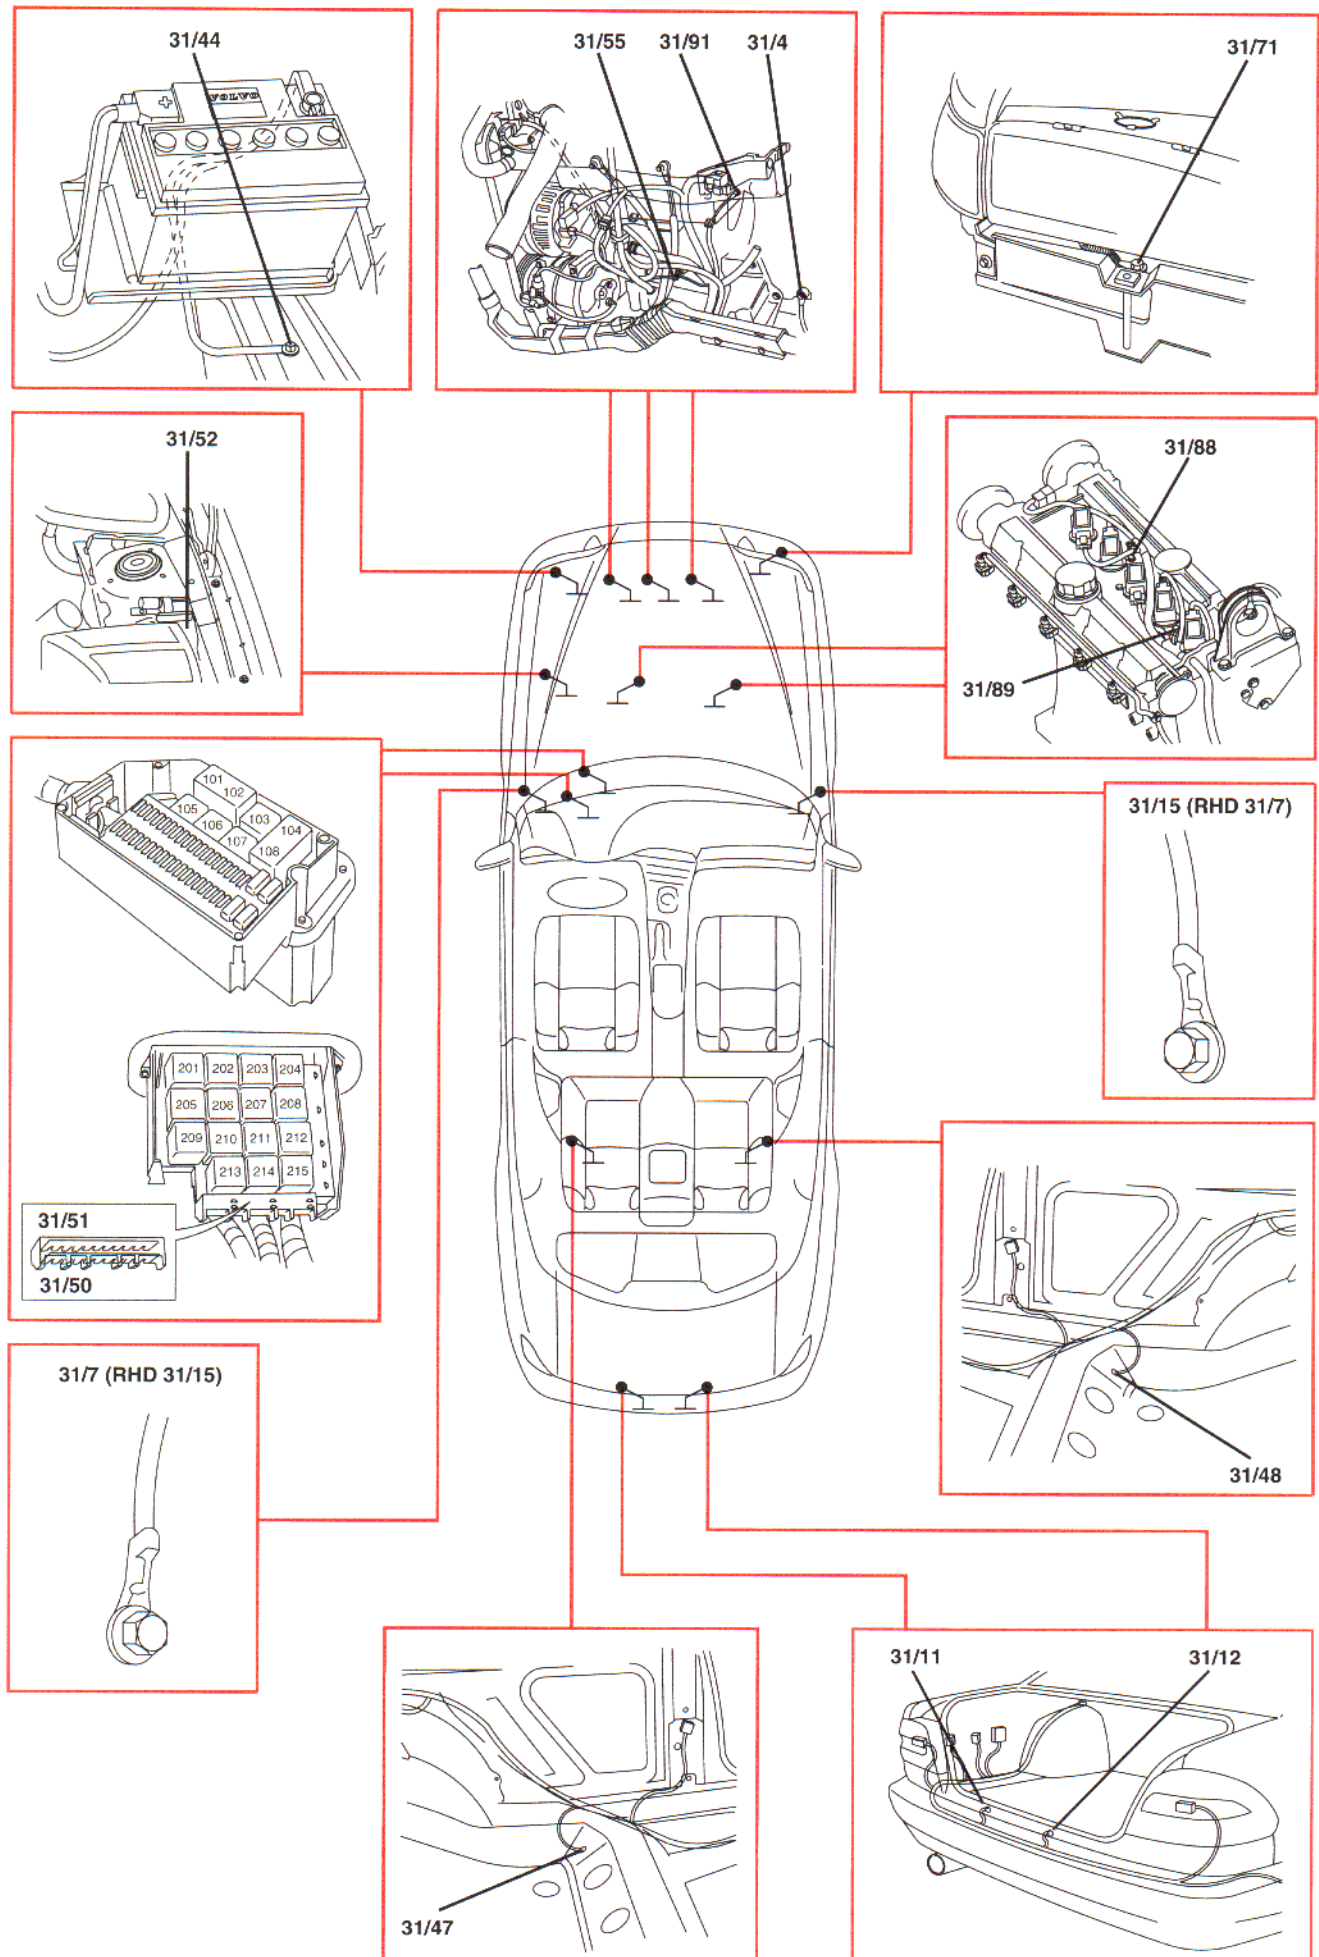


Ground points C70 coupé

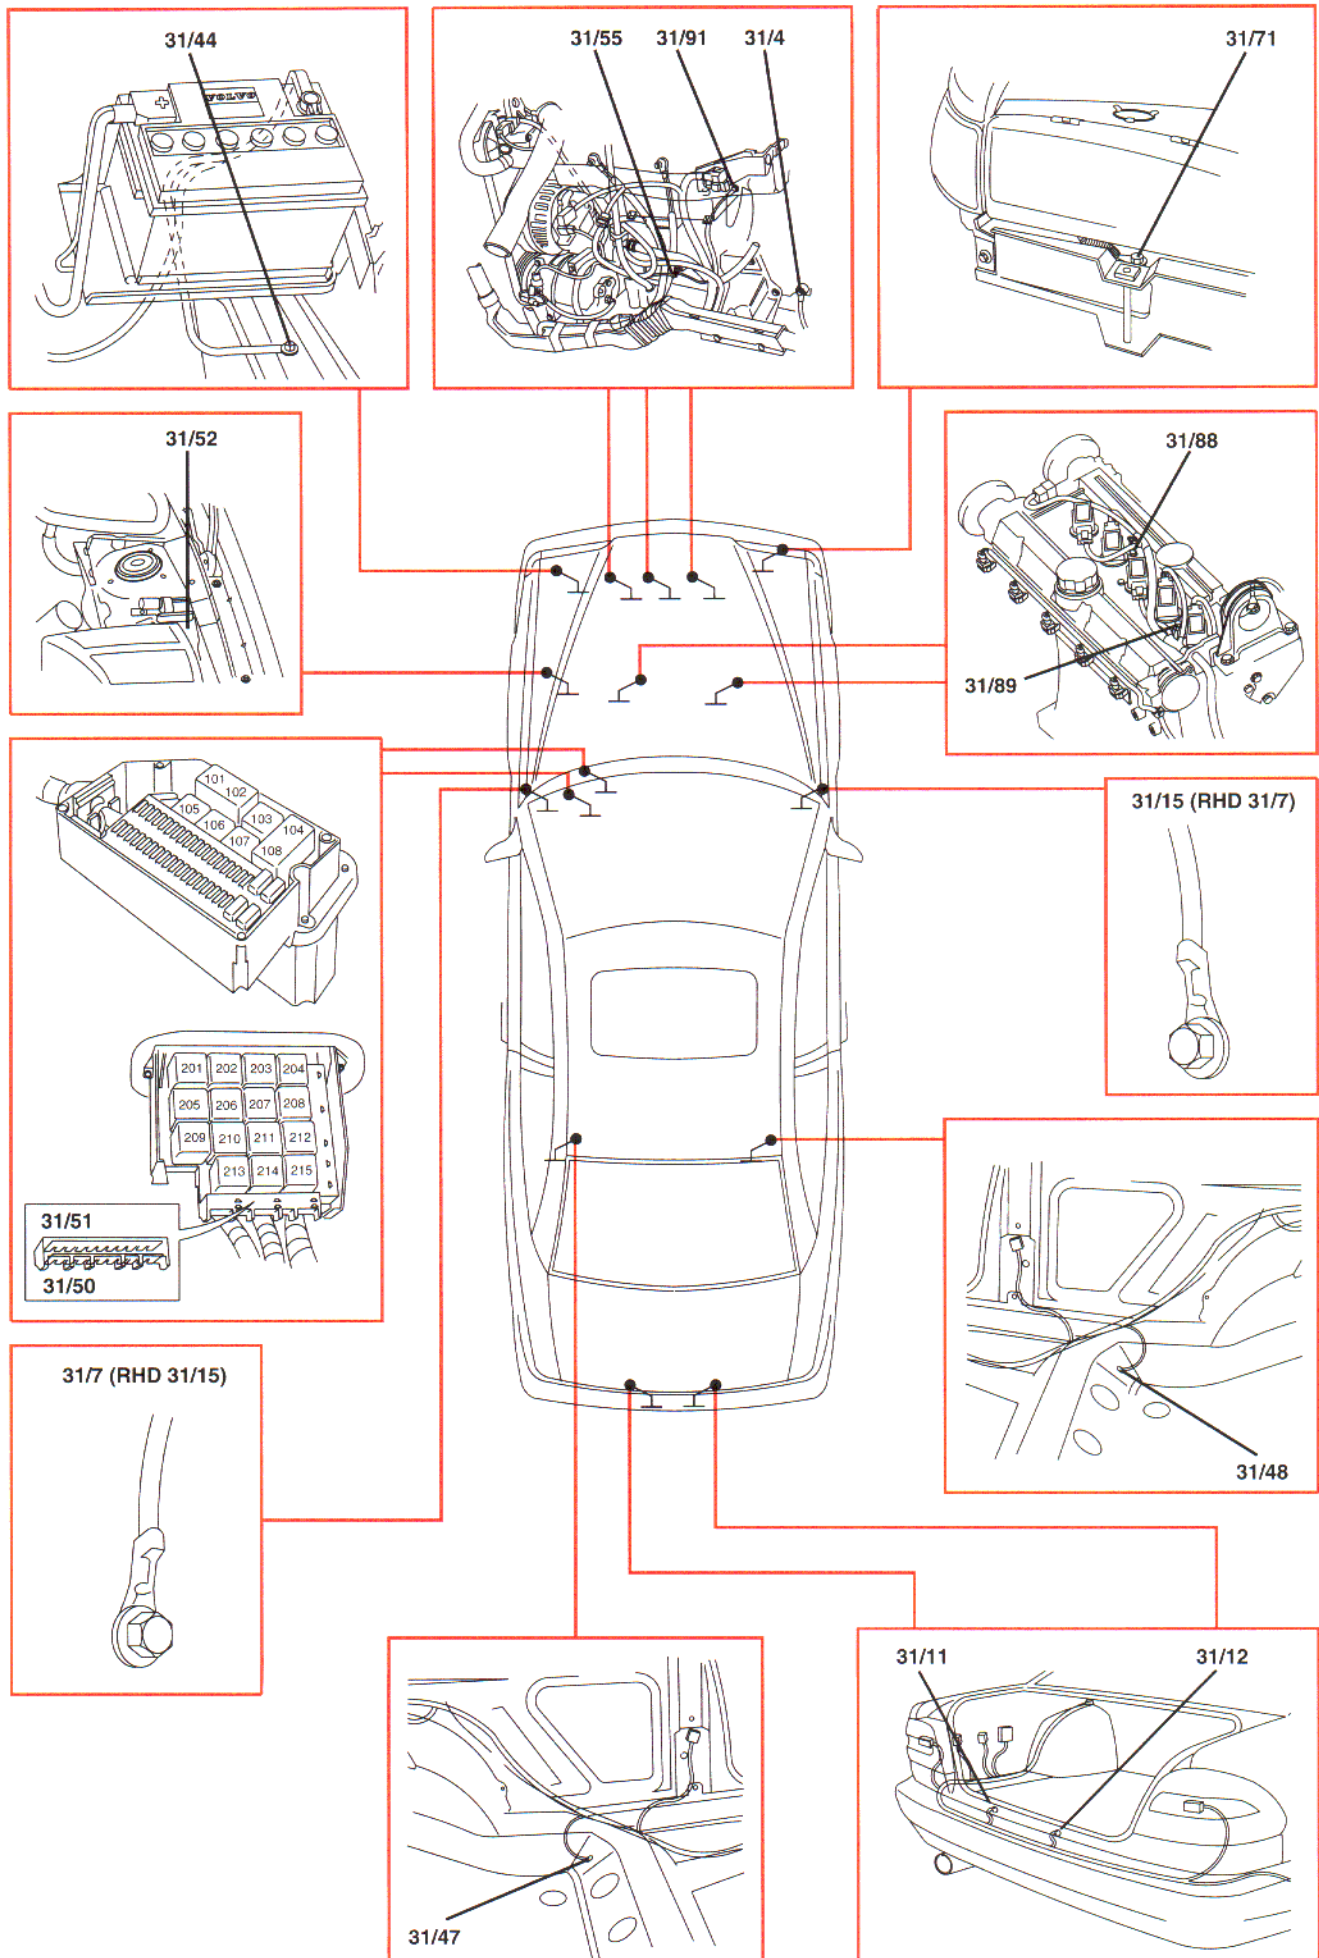


Ground points S70

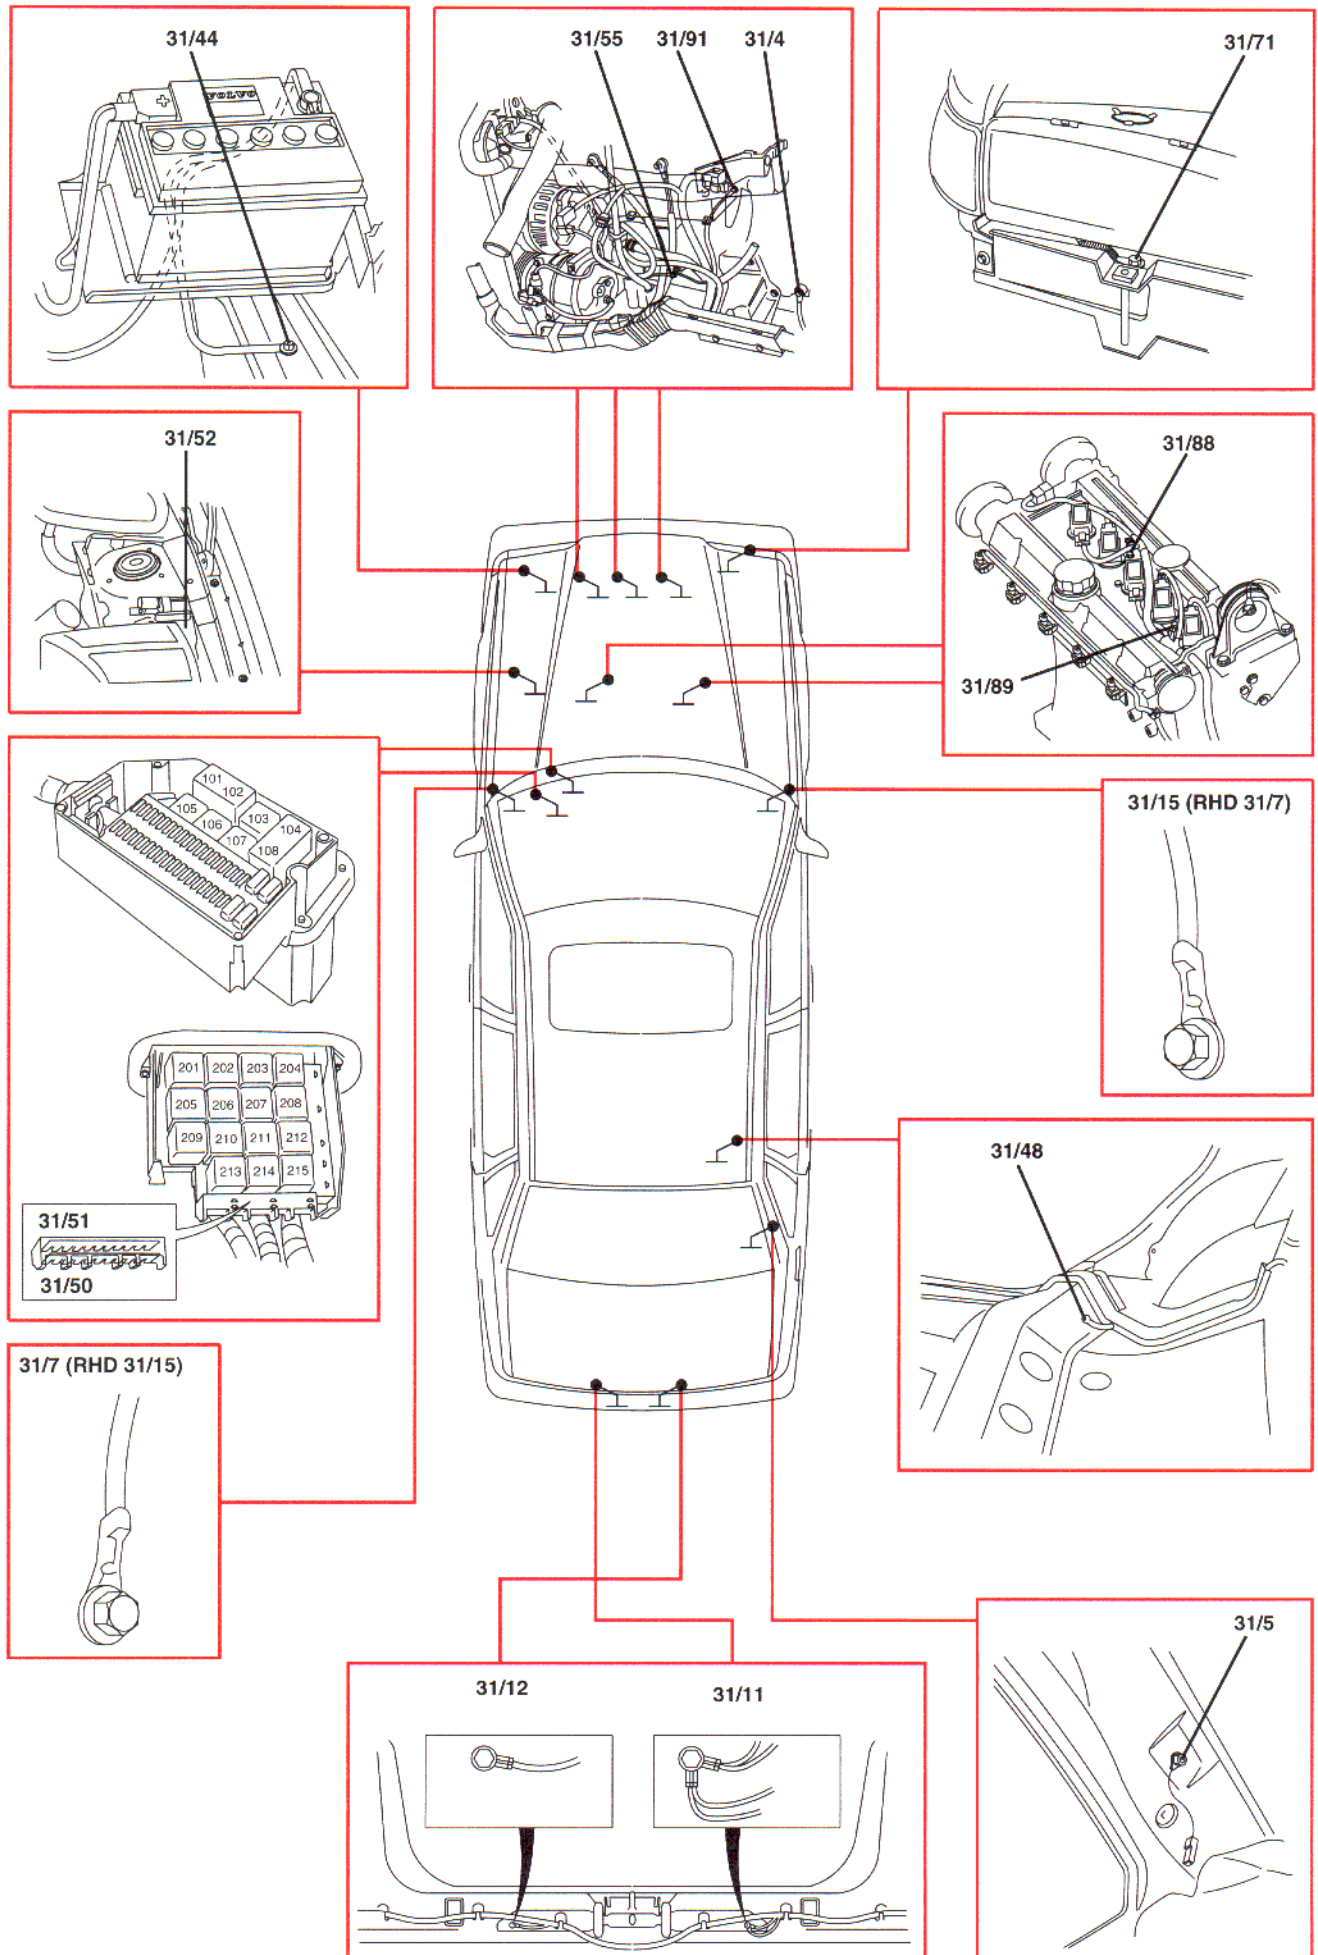


Ground terminals V70

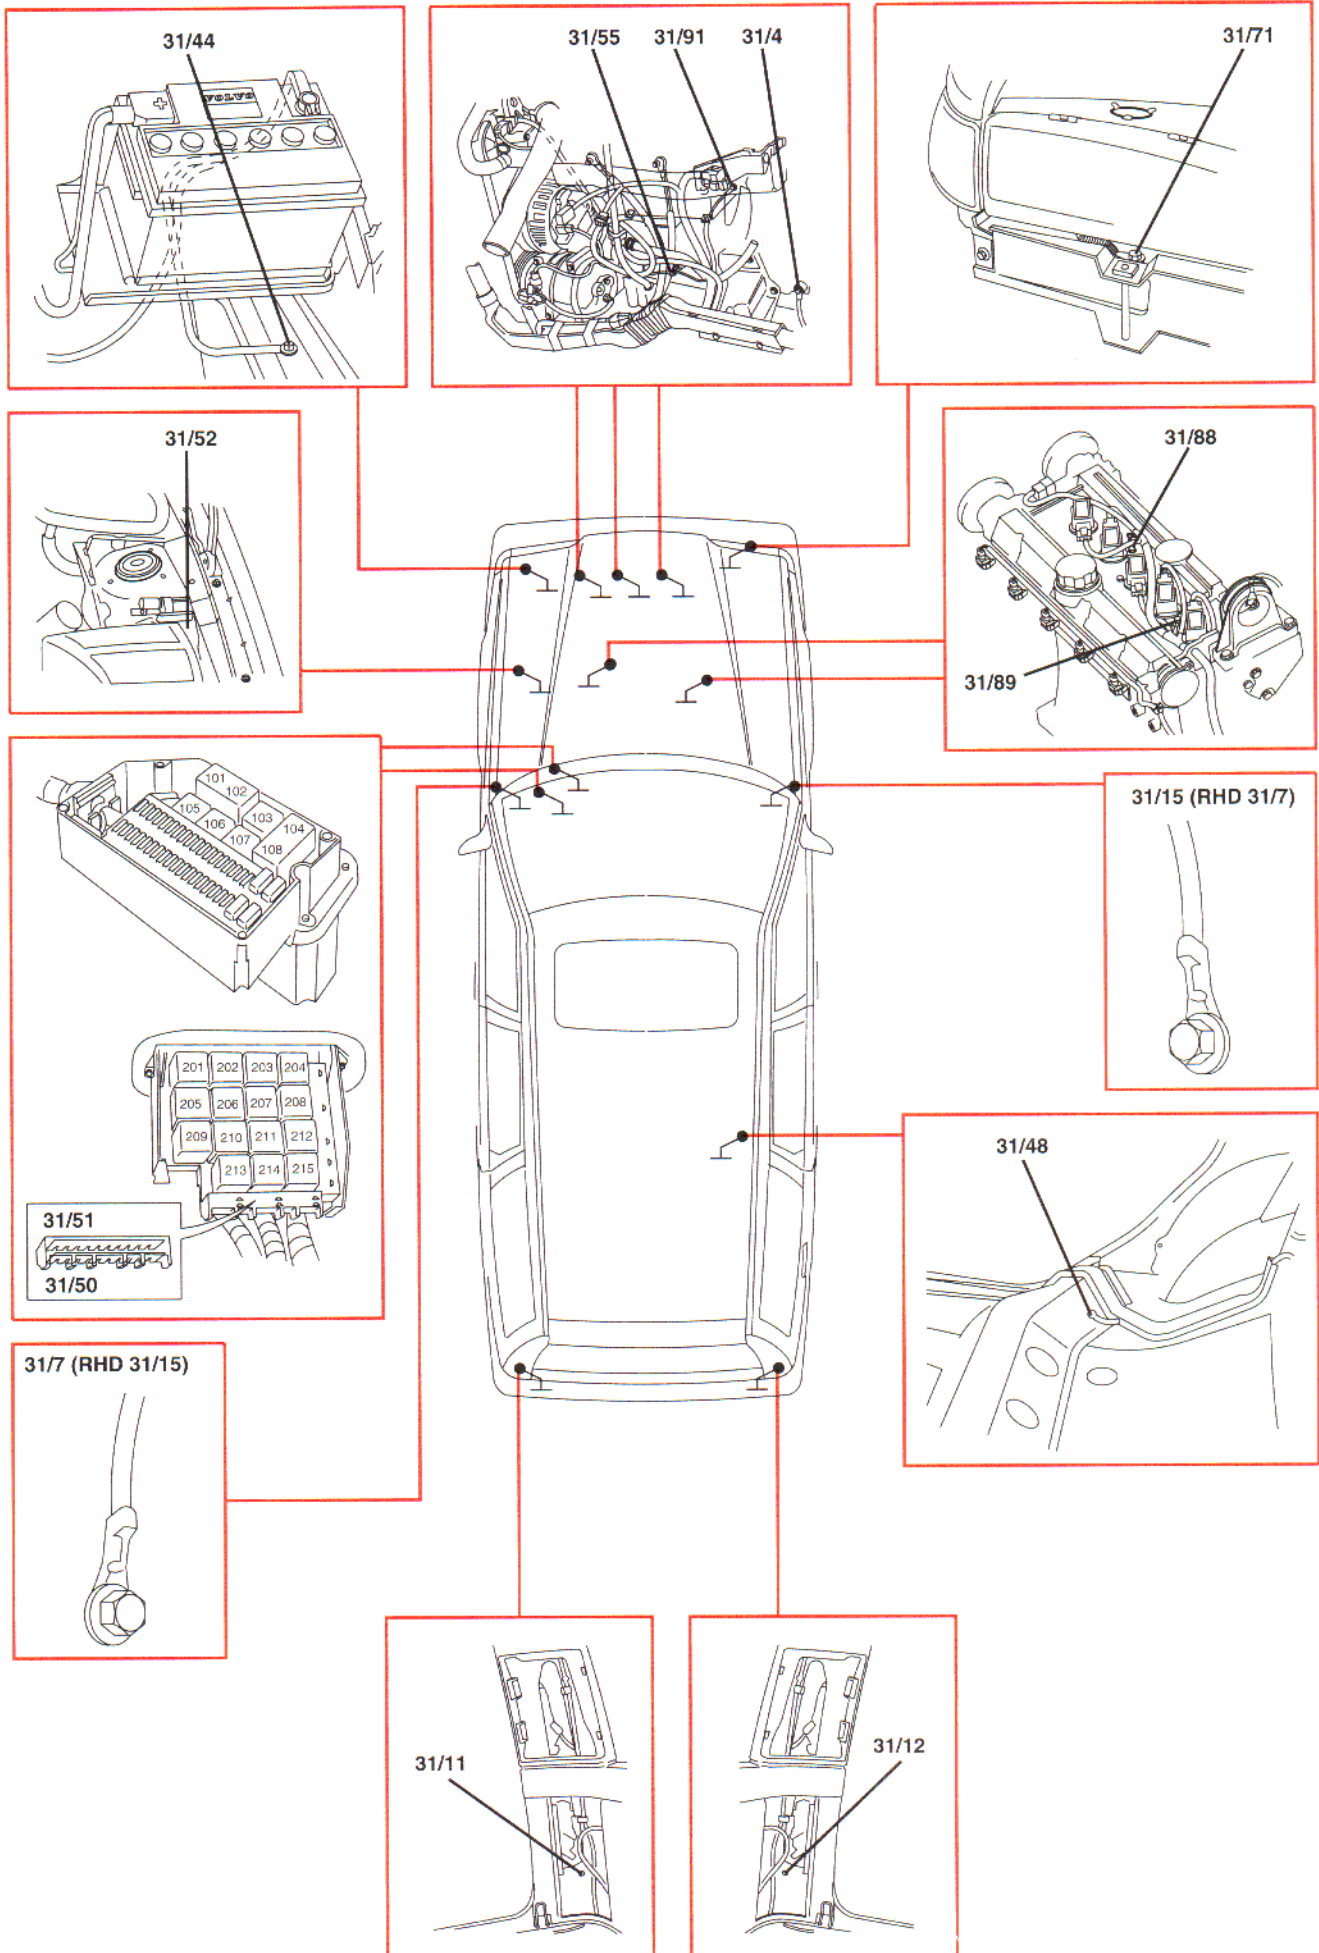

Electrical distribution

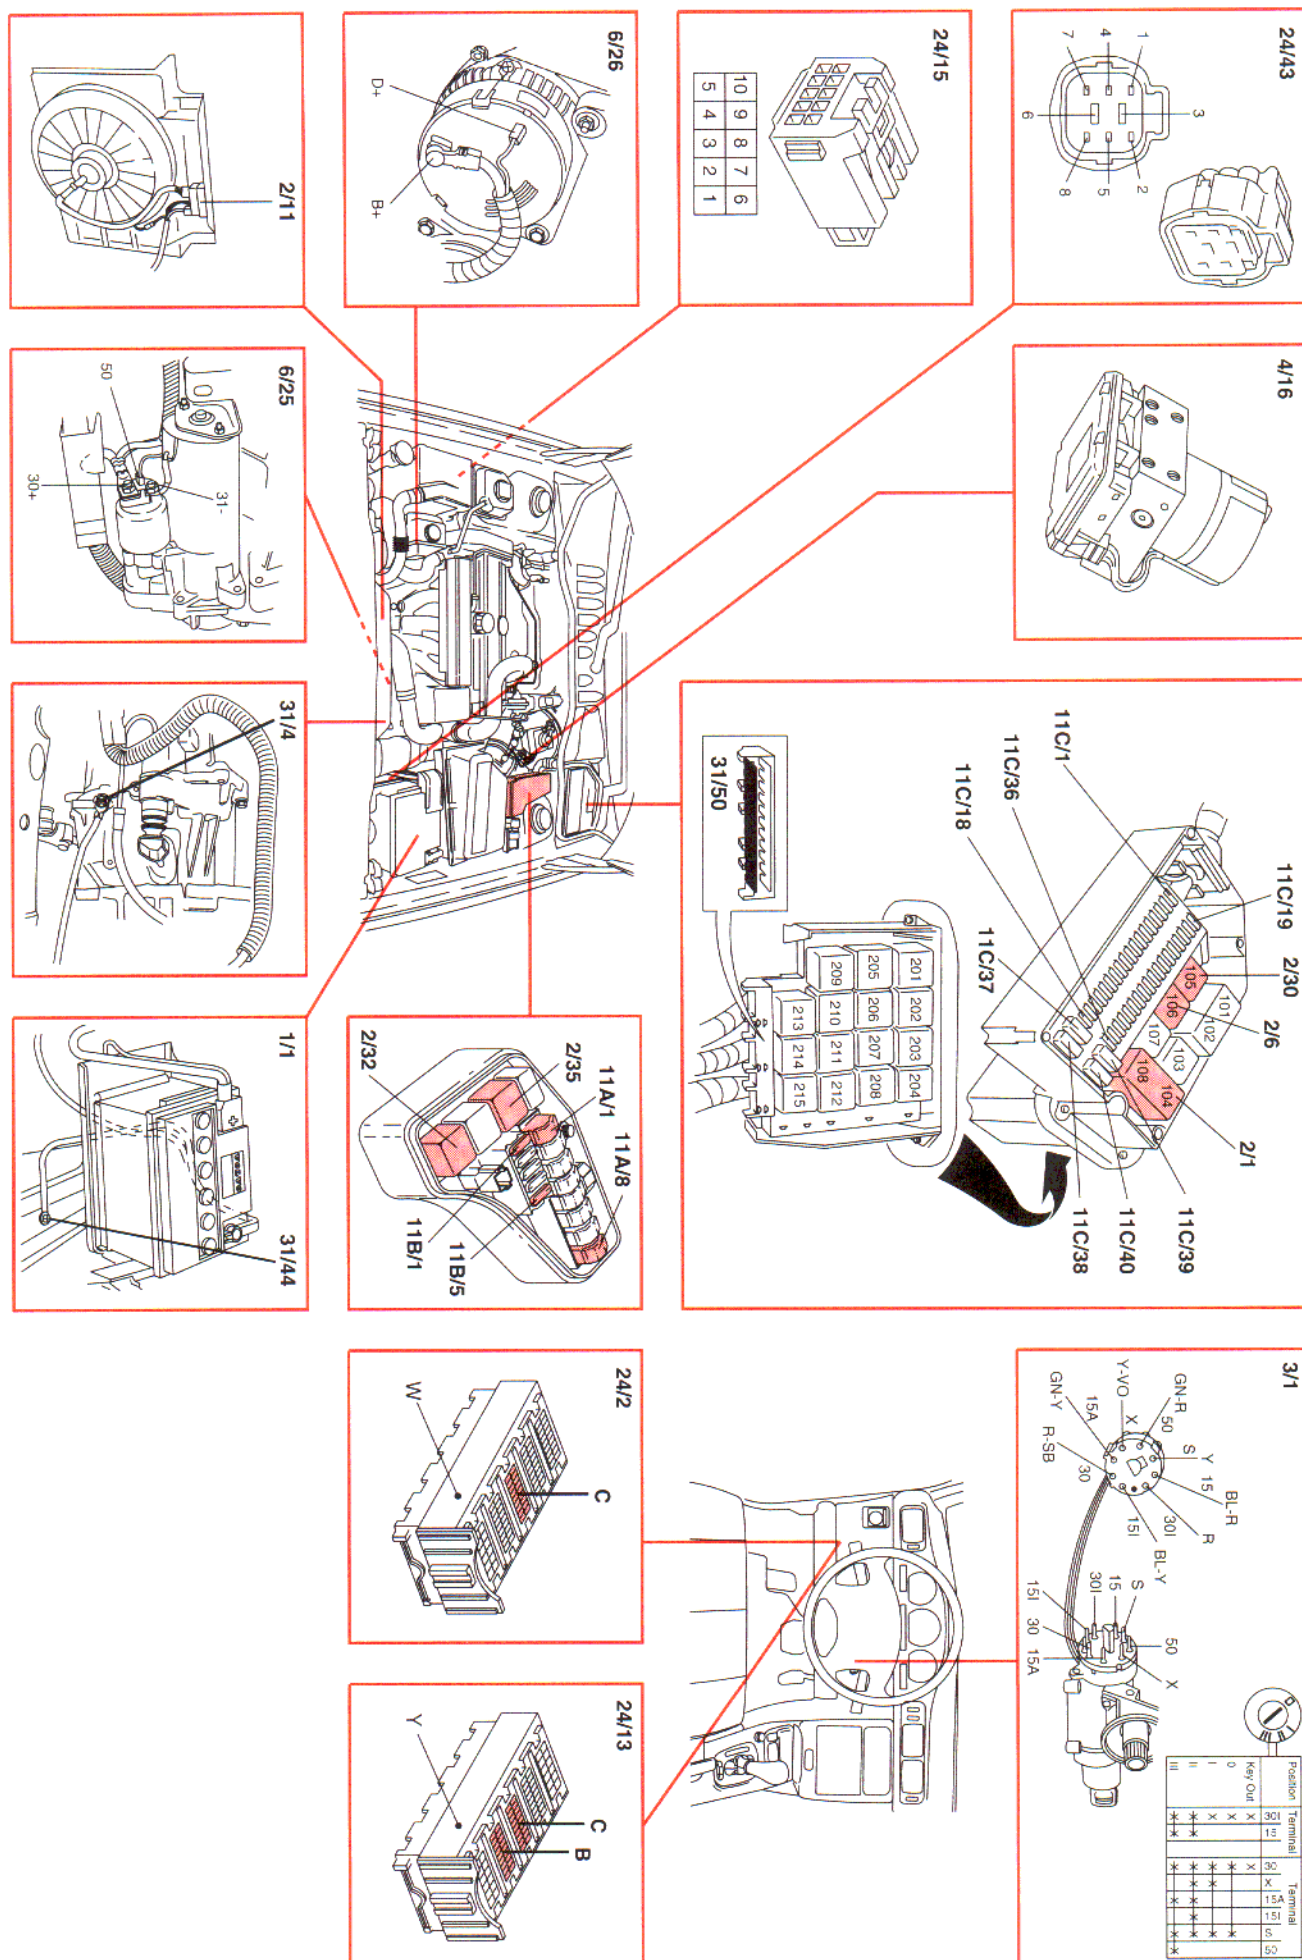



Electrical distribution Denso, ME7

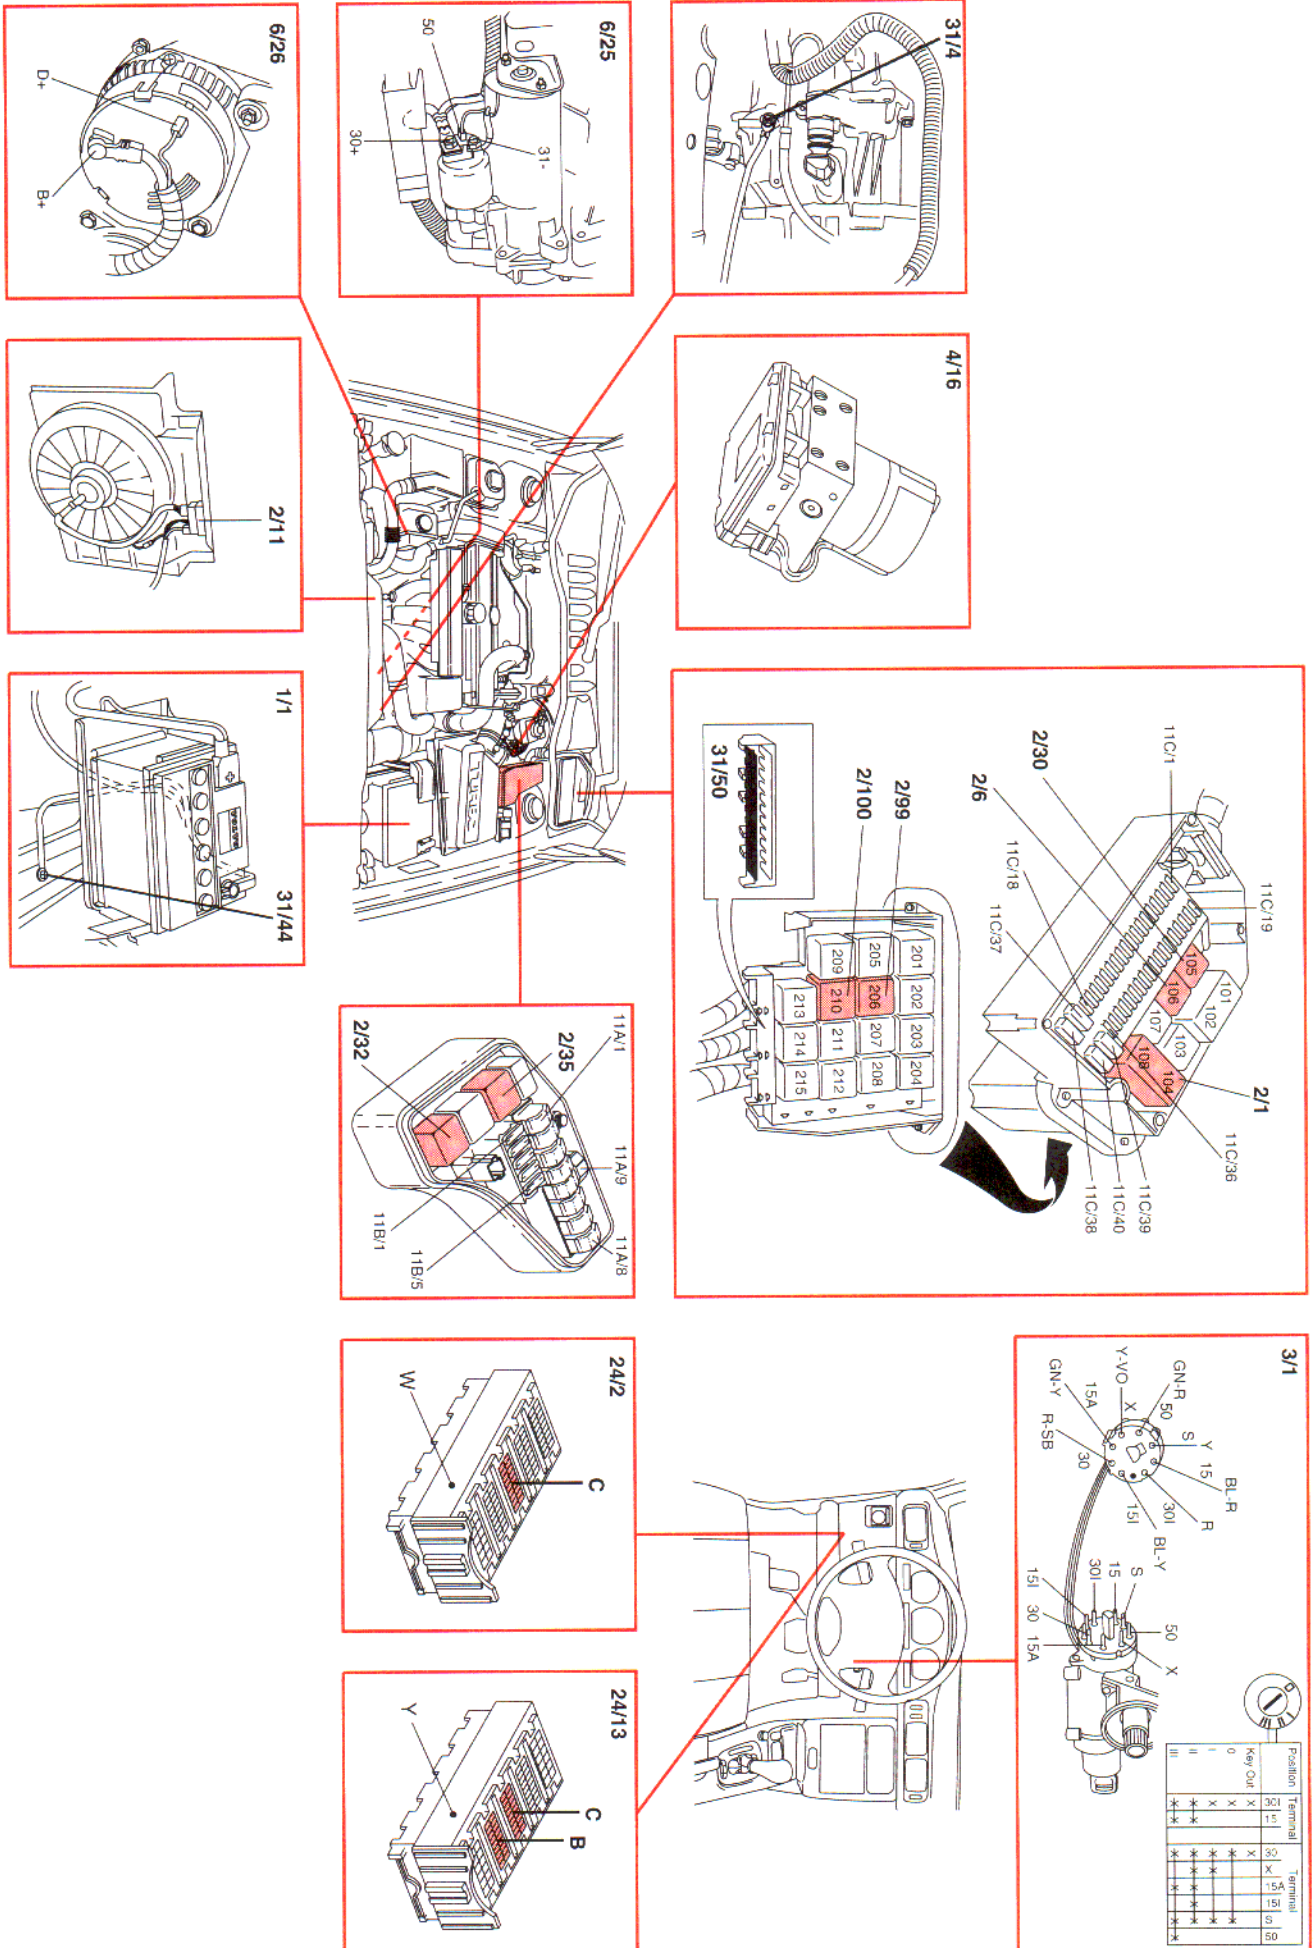


Electrical distribution

MSA 15.7

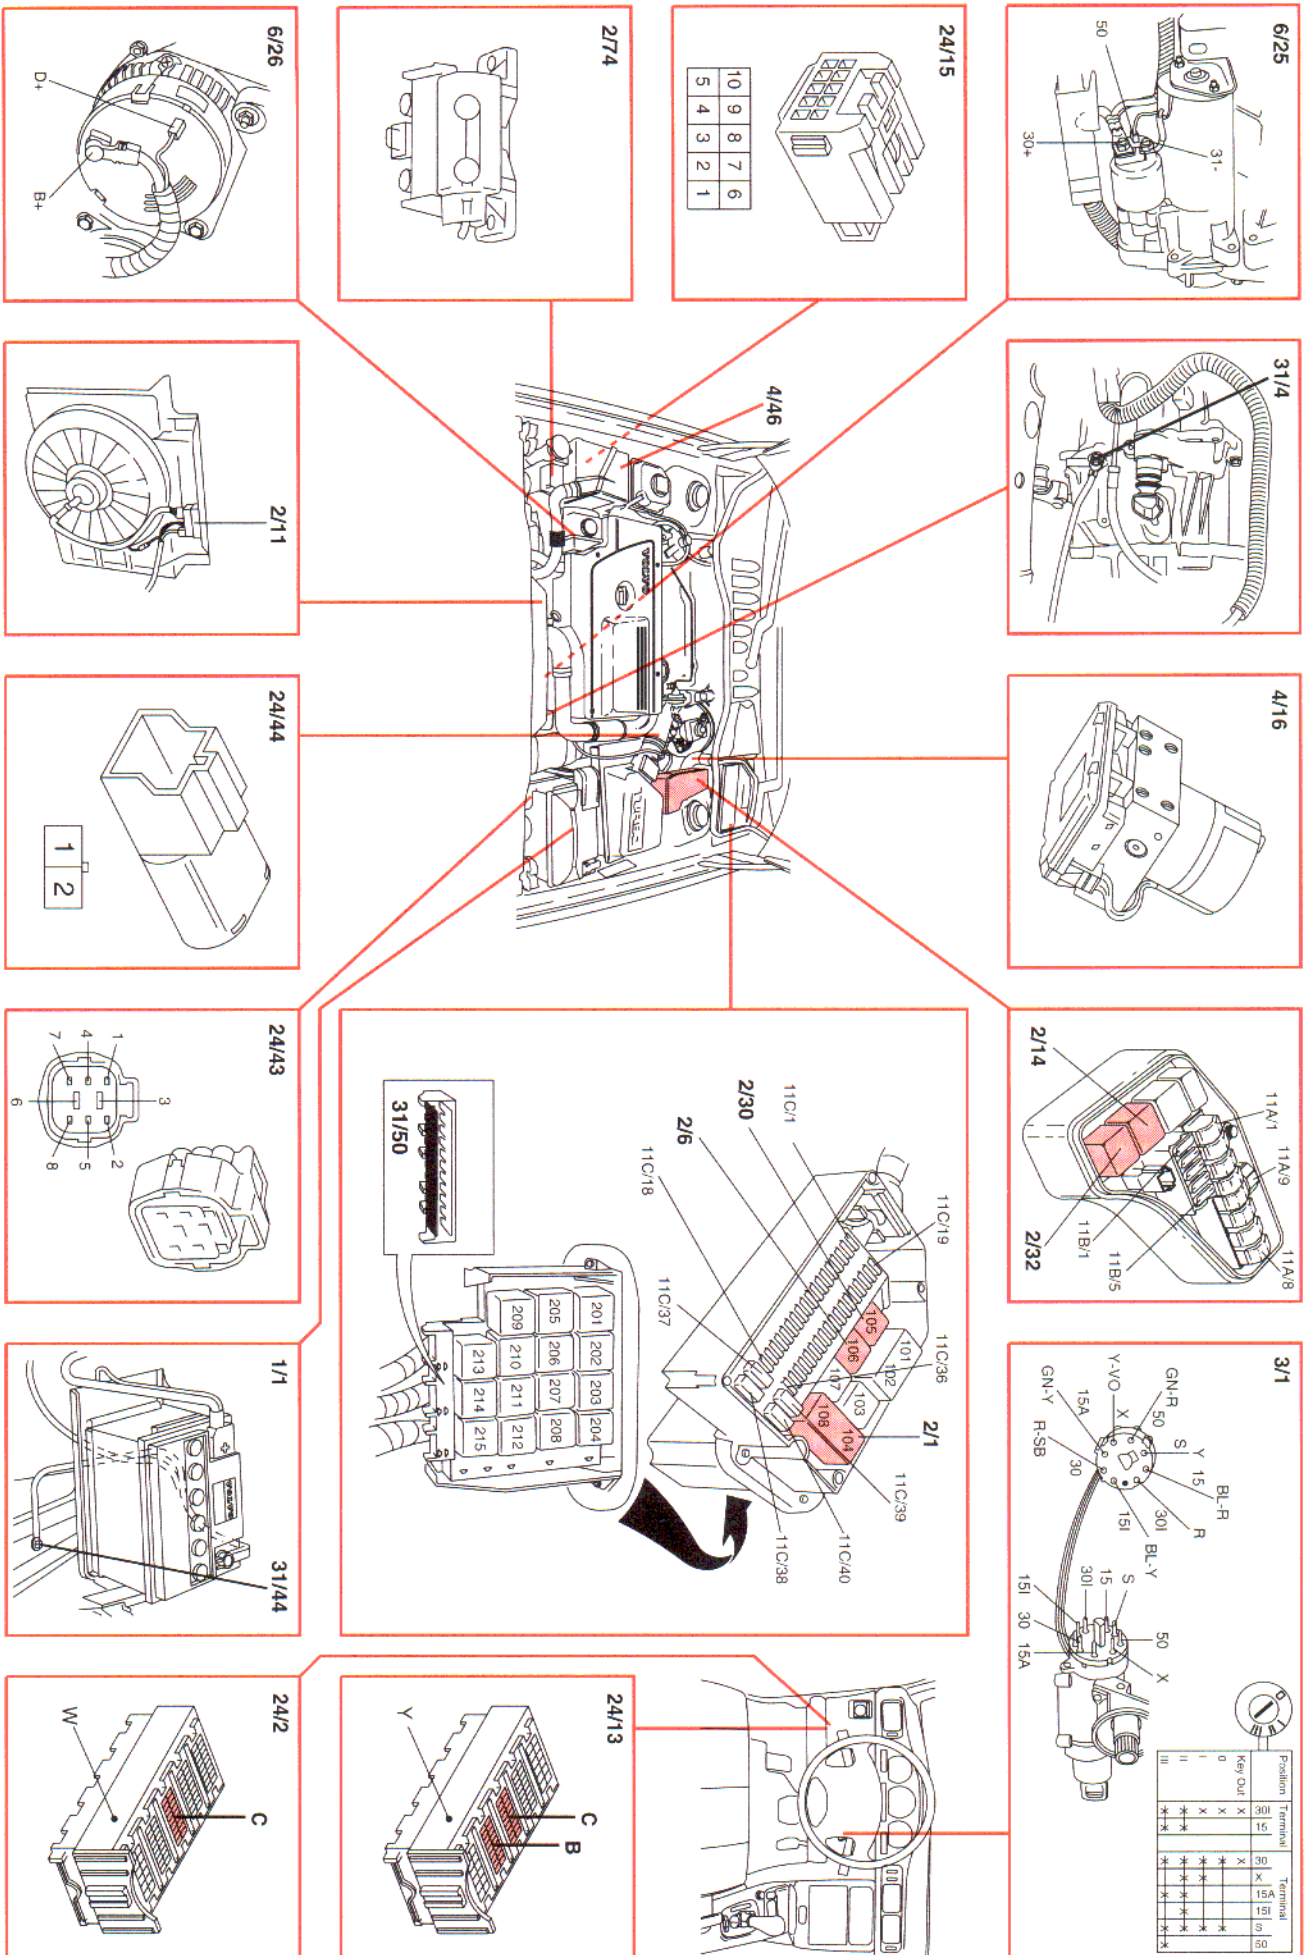

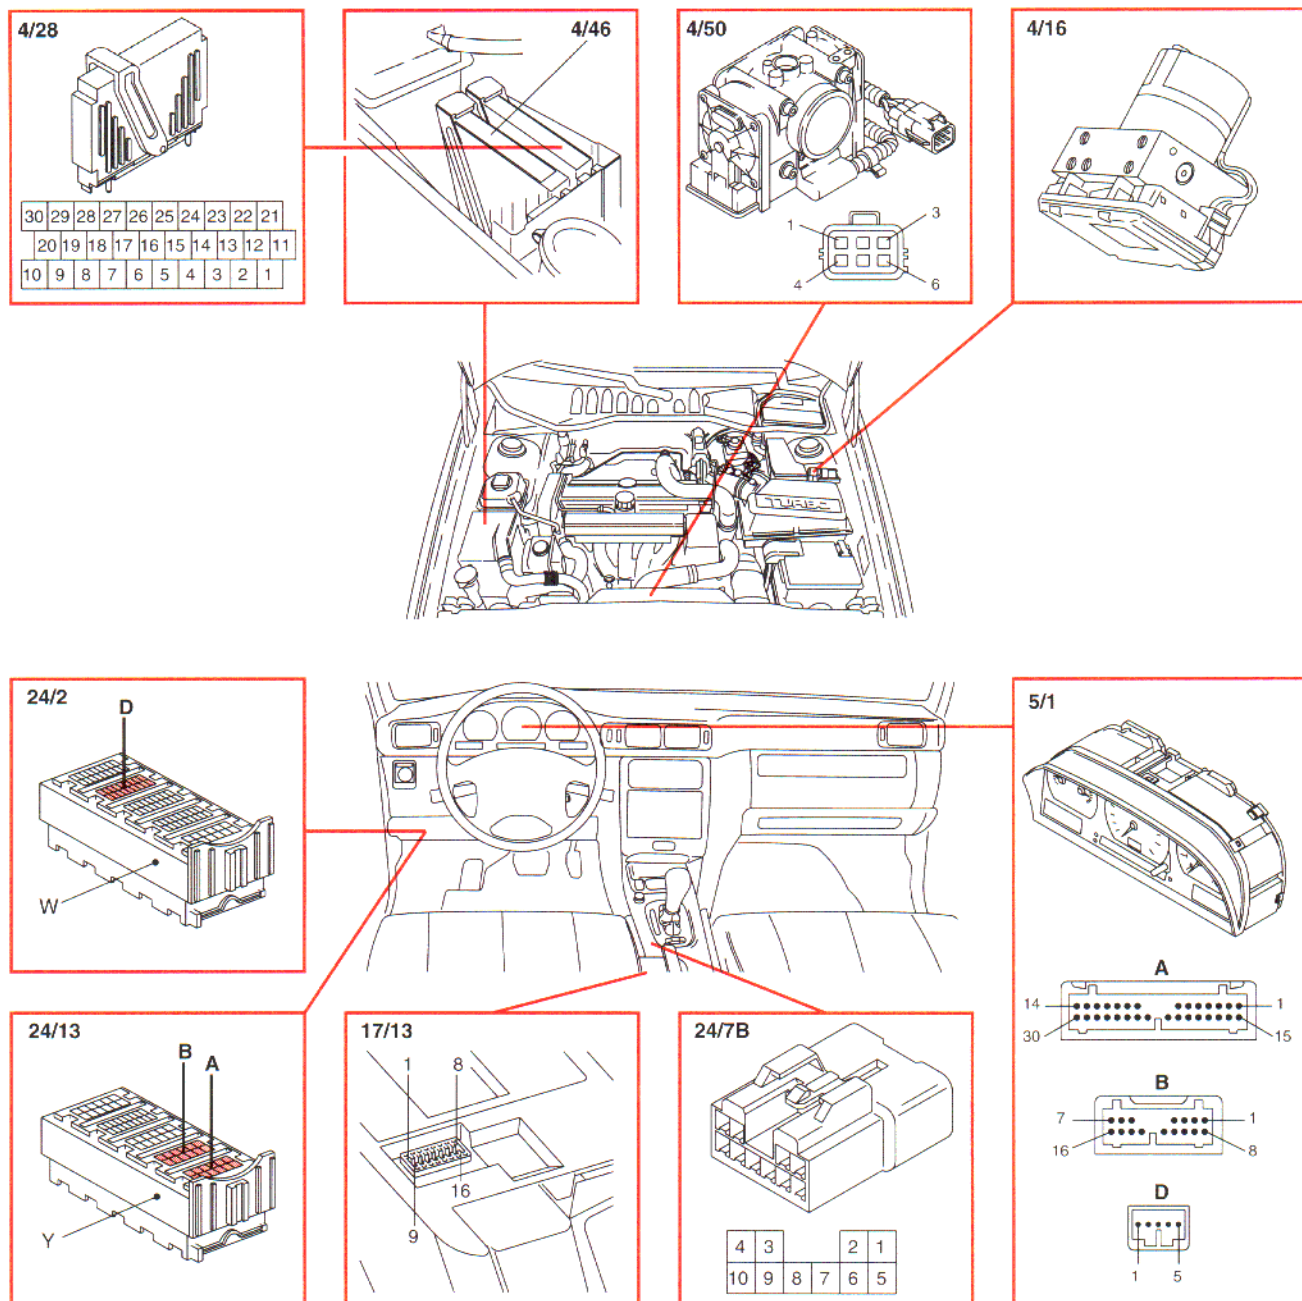


24/1E White 12-pin (male - female) Firewall cable harness -Instrument panel cable harness

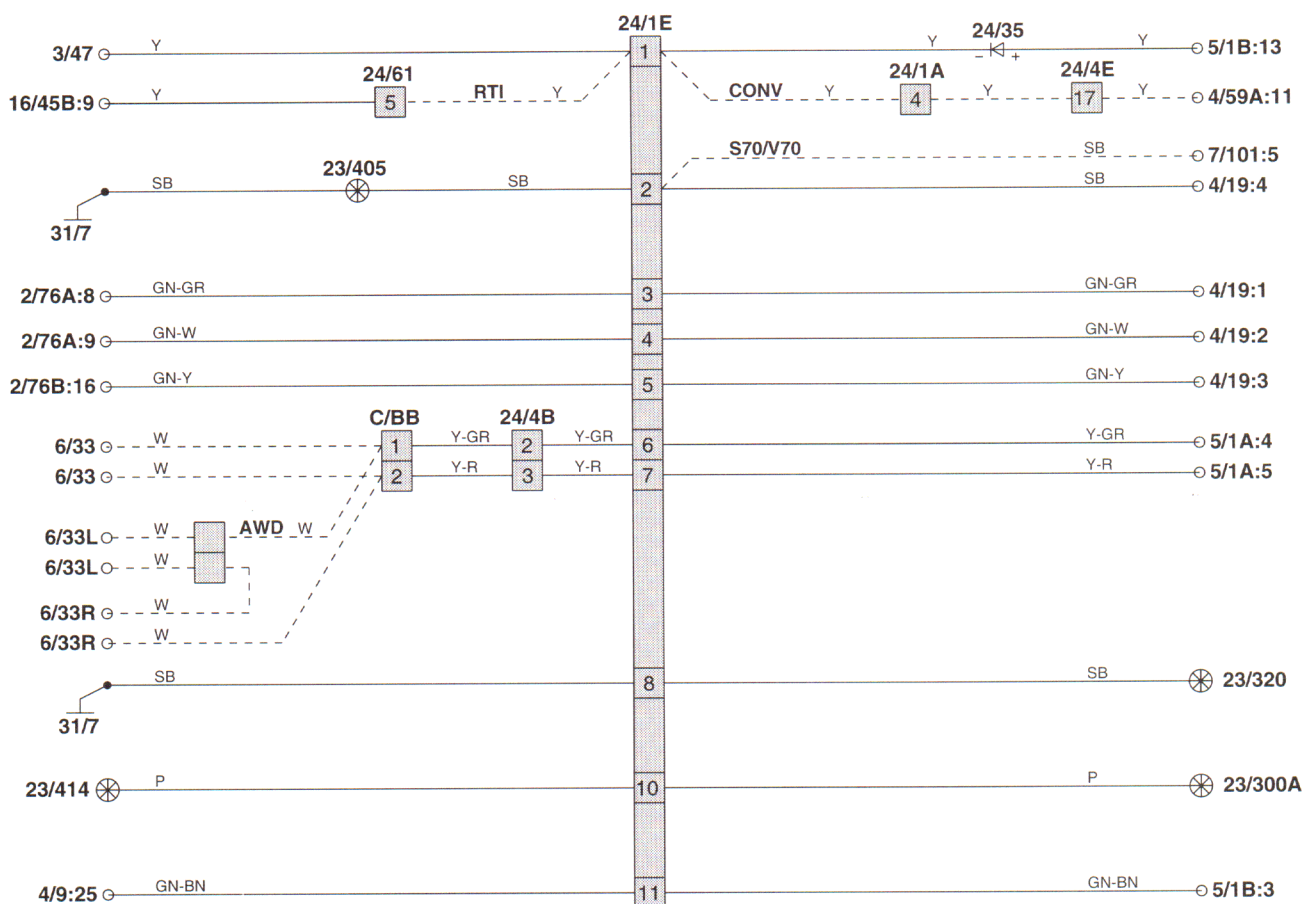


Connector 24/2

24/2A Green 12-pin (male - female) Engine compartment cable harness - Firewall cable harness

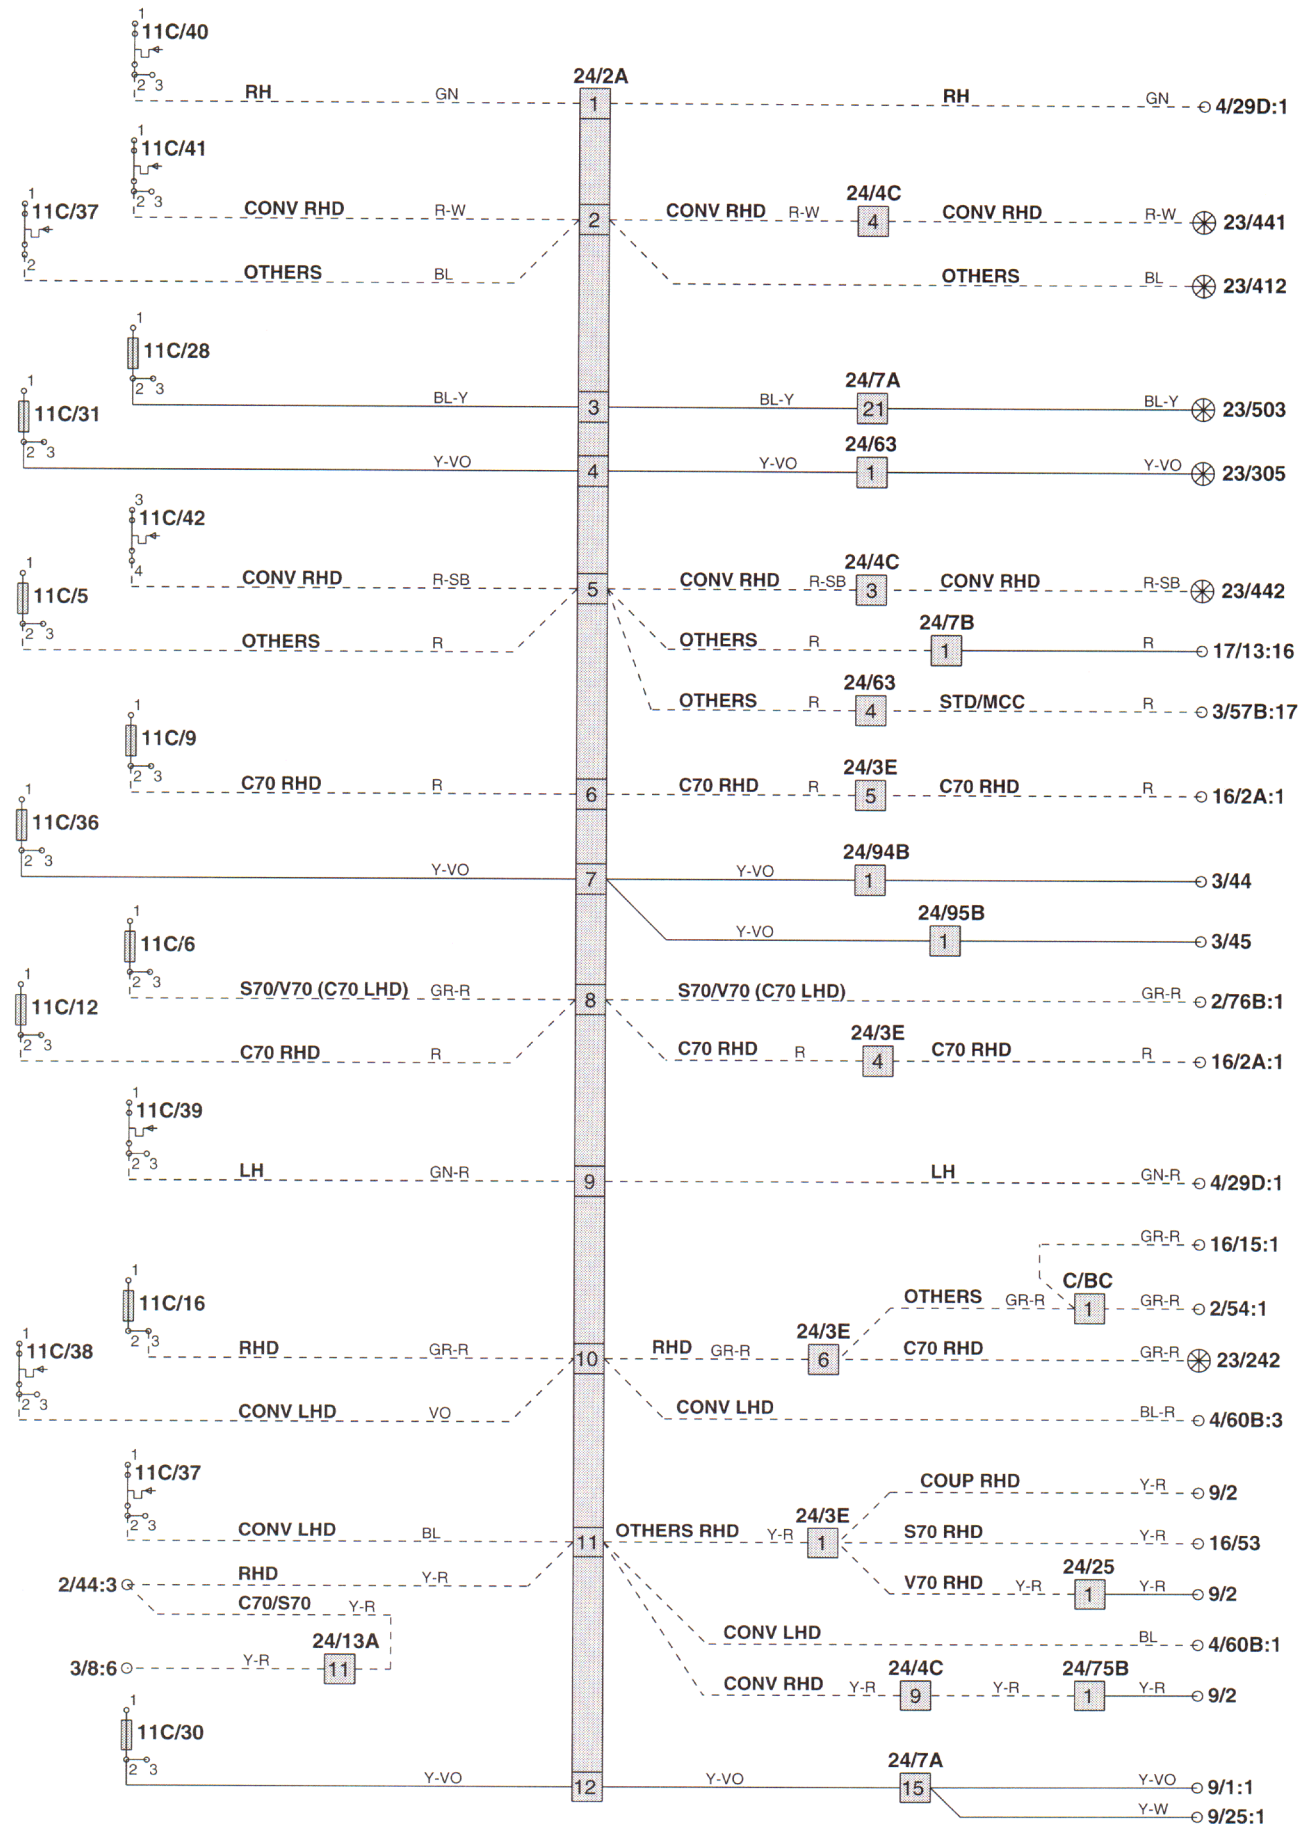


24/2B Light blue 18-pin (male - female) Engine compartment cable harness - Firewall cable harness

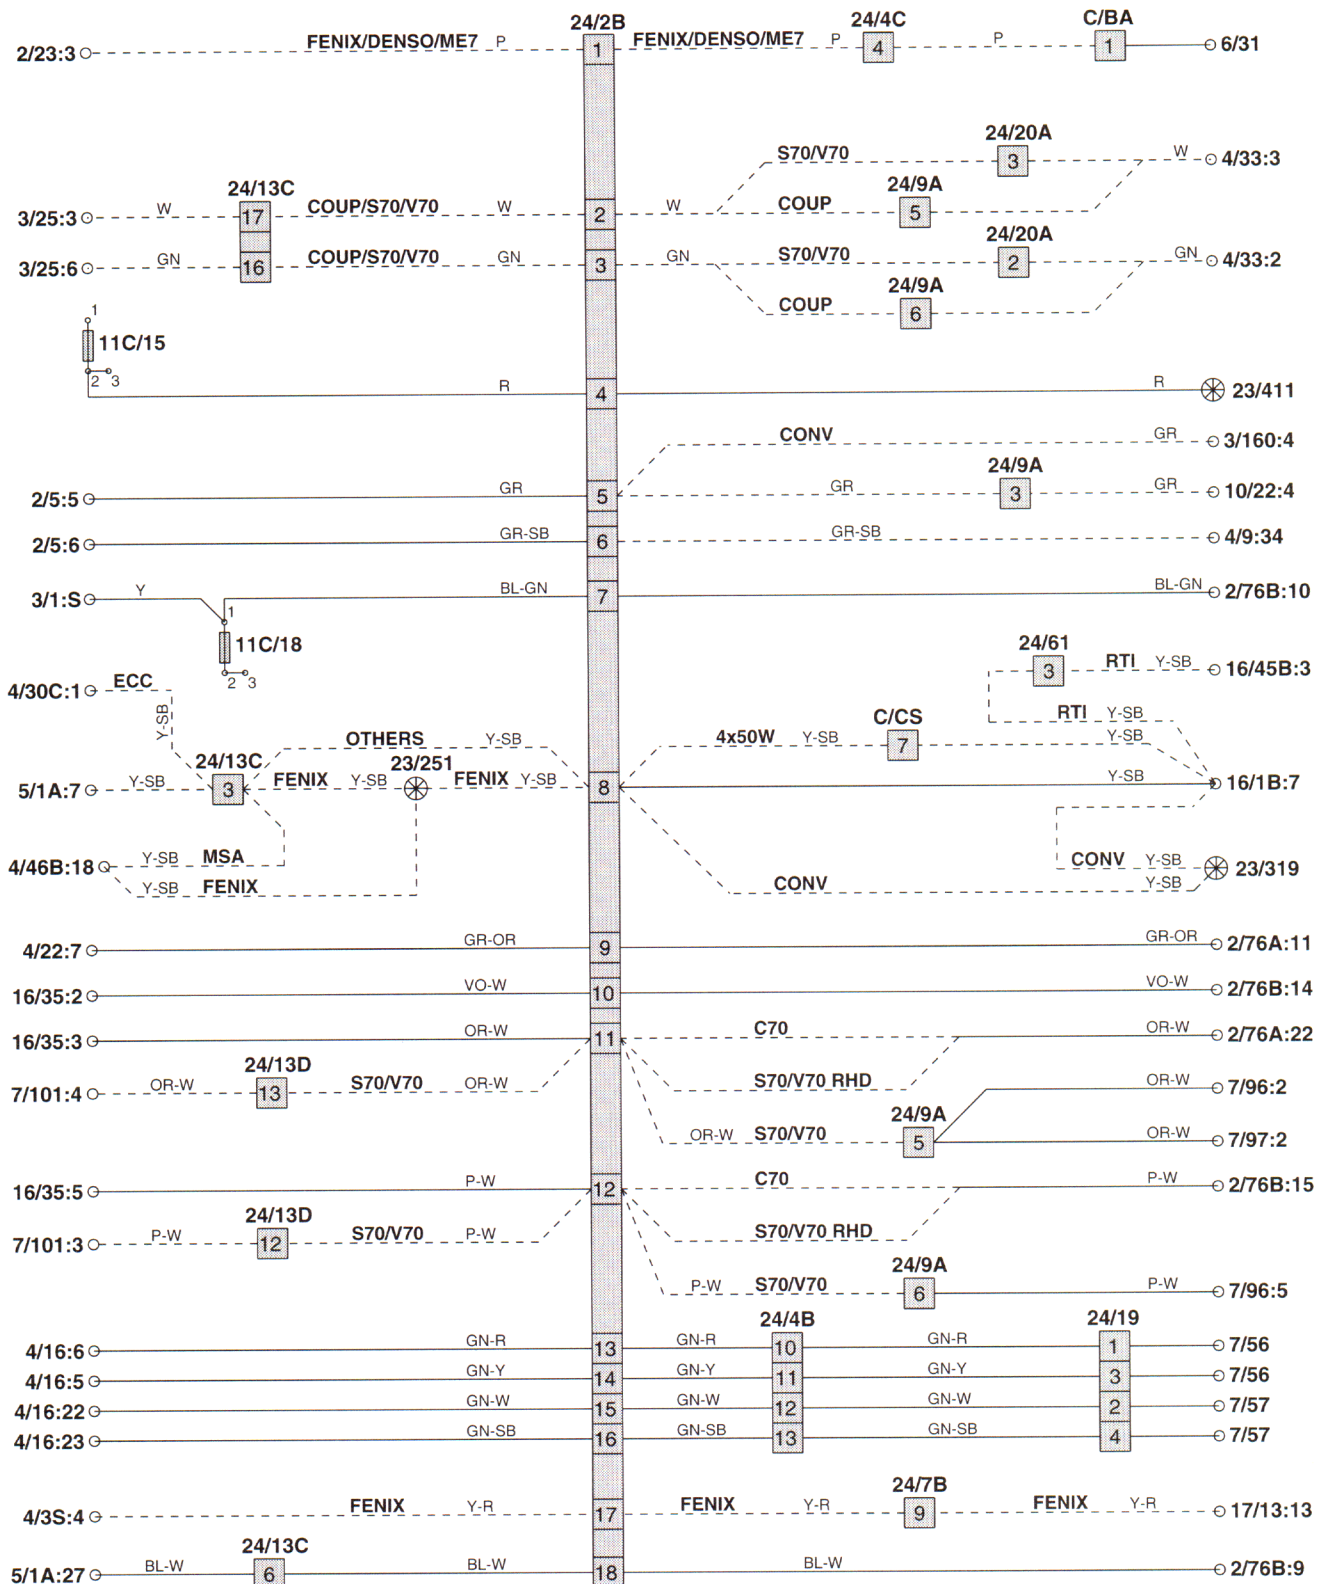

**24/2C Yellow 18-pin (male - female)
Engine compartment cable harness - Firewall cable harness**




**24/2D Red 18-pin (male - female)
Engine compartment cable harness - Firewall cable harness**

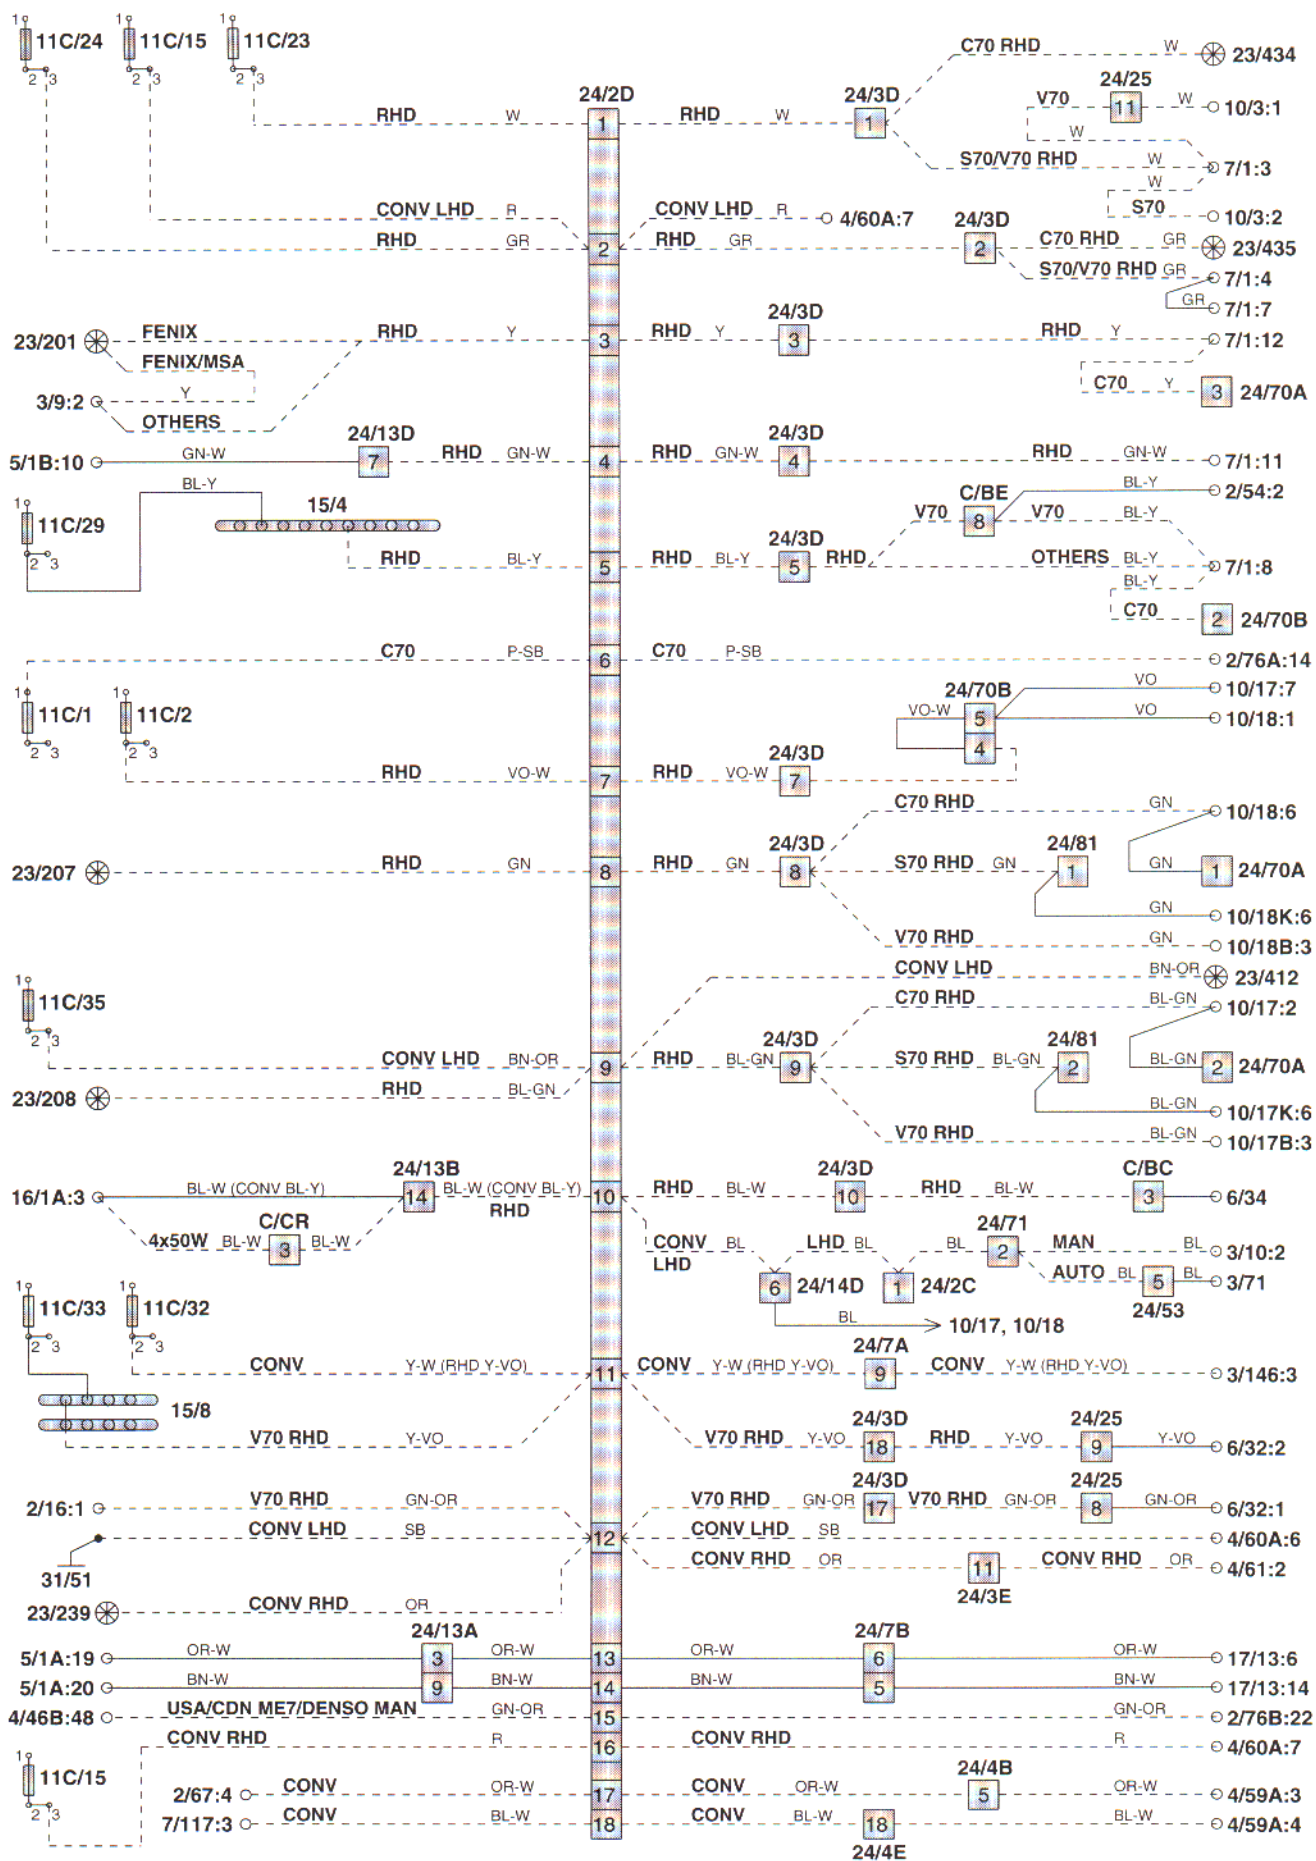


Connector 24/2

24/2E White 18-pin (male - female) Engine compartment cable harness - Firewall cable harness

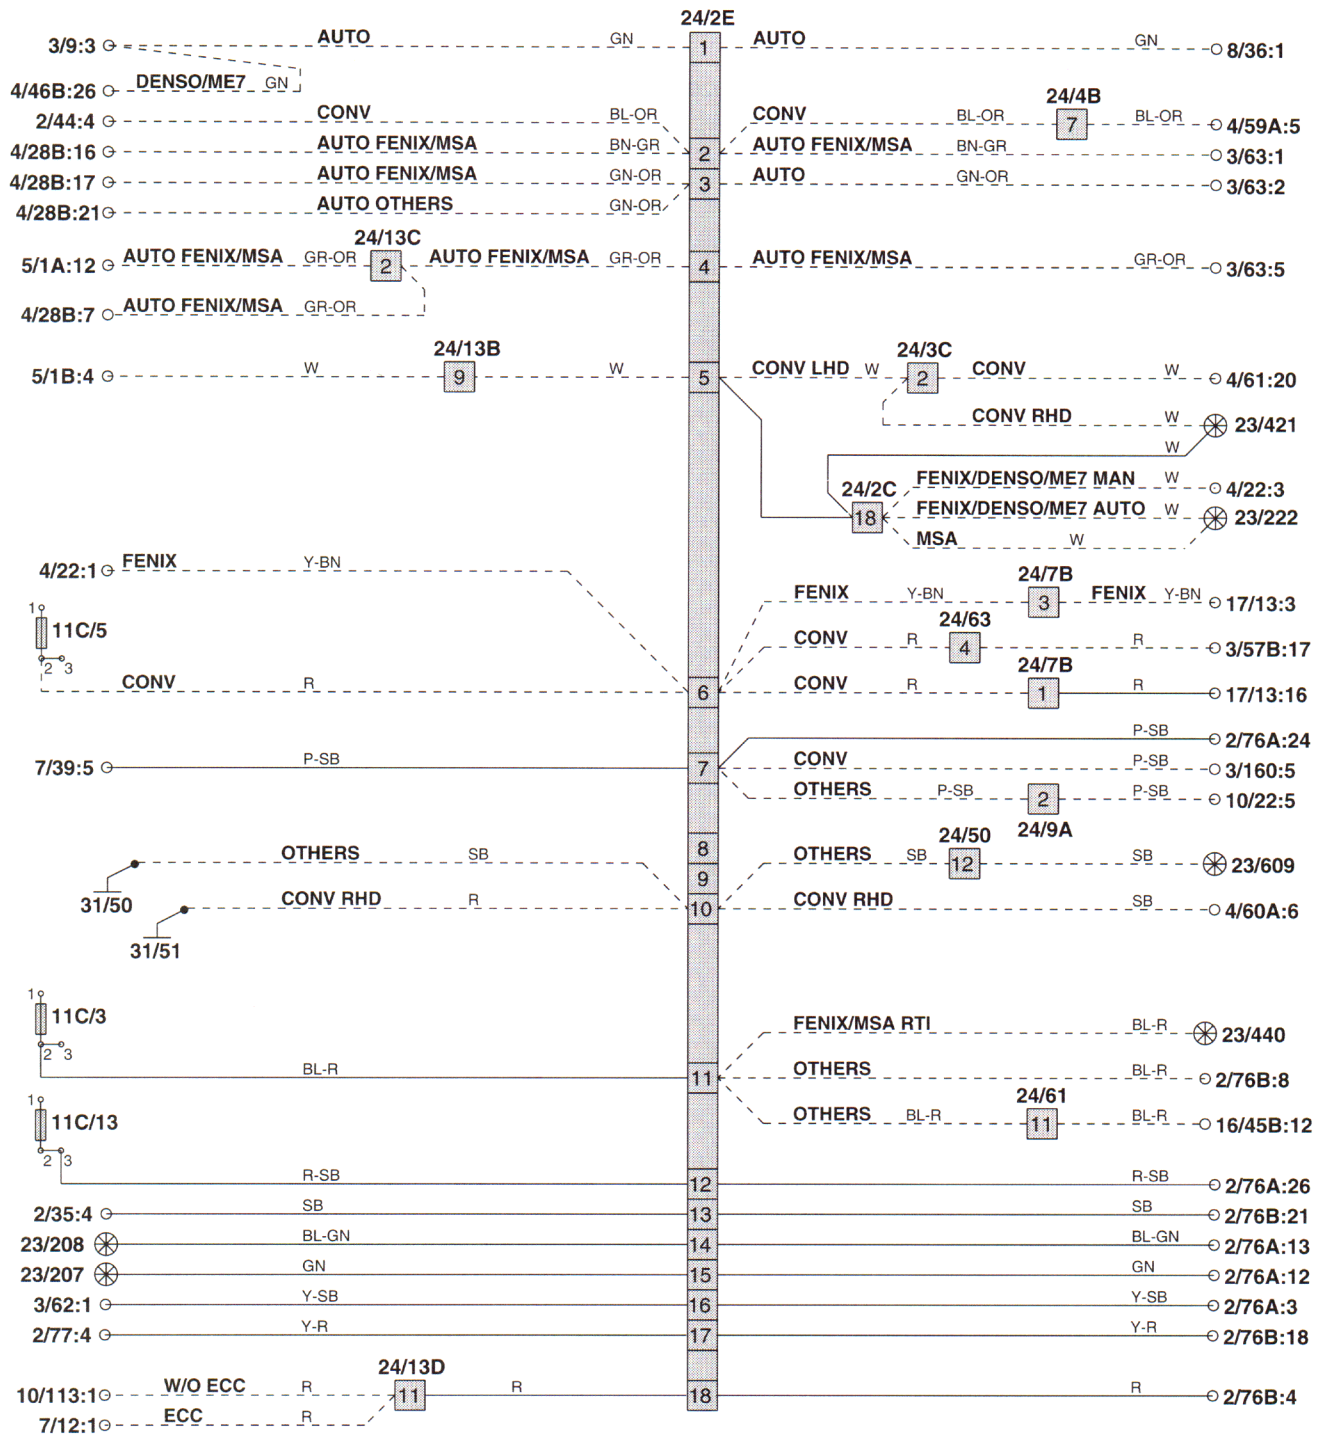


24/3B Light blue 12-pin (male - female) Firewall cable harness - Left door sill cable harness

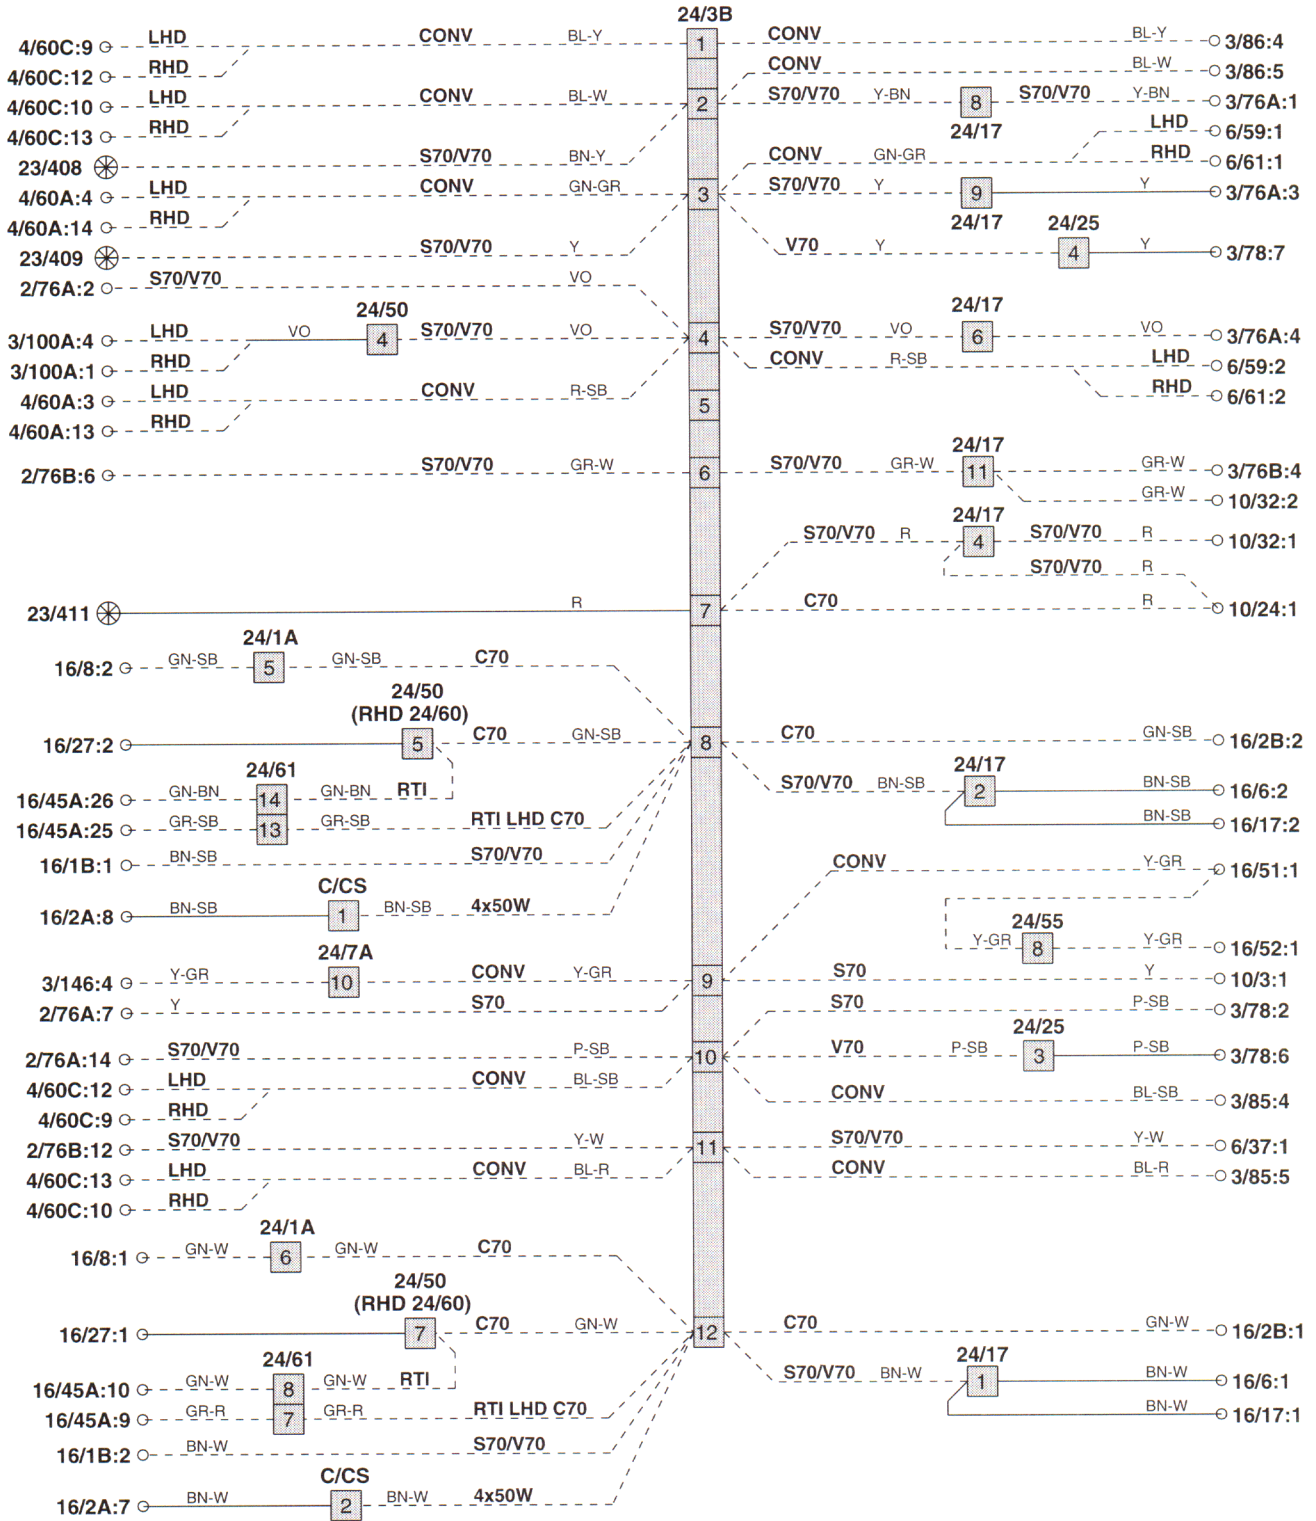


Connector 24/3

24/3C Yellow 12-pin (male - female) Firewall cable harness - Left door sill cable harness

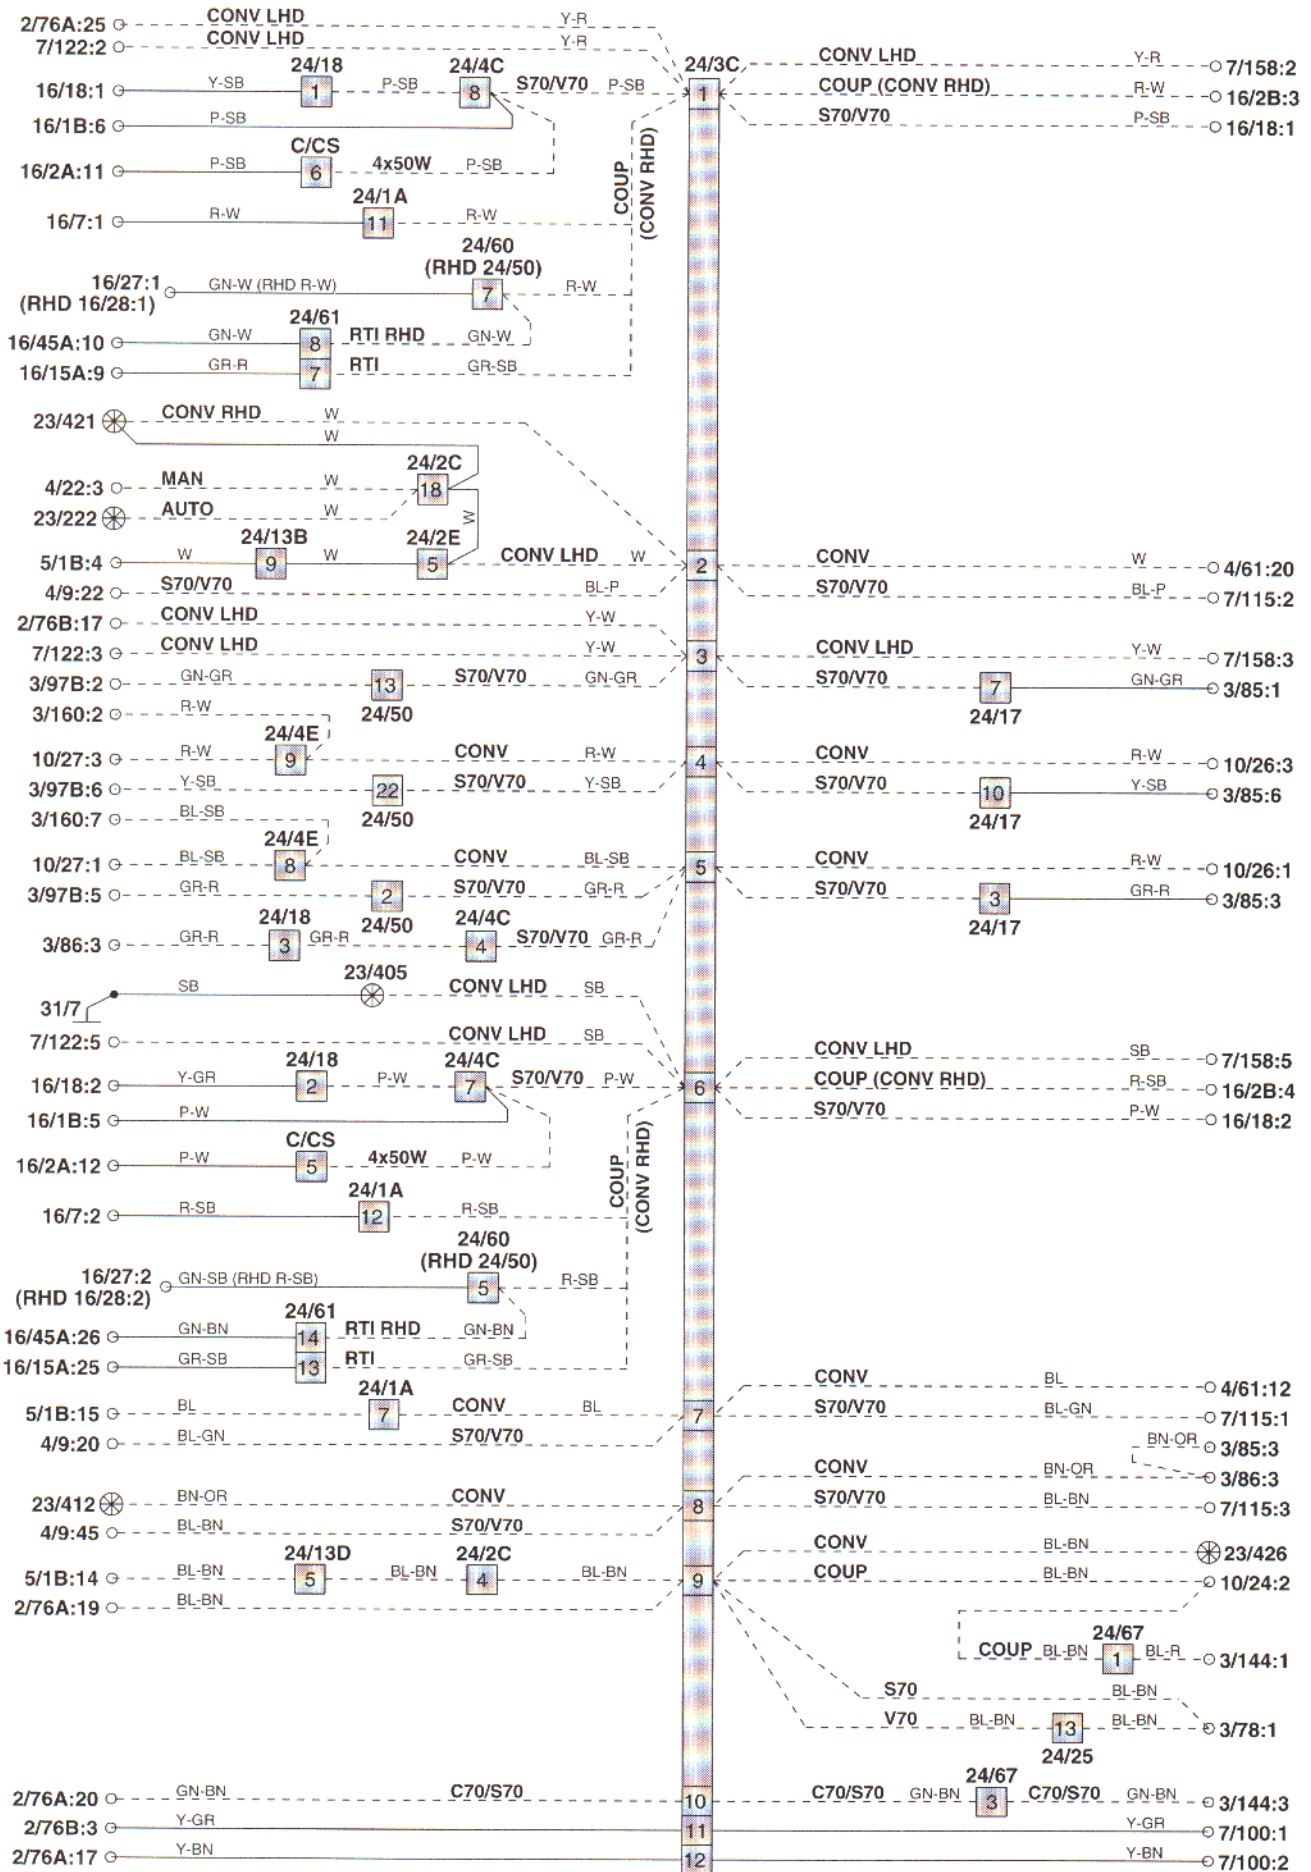


**24/3D Red 18-pin (male - female)
Firewall cable harness - Left door sill cable harness**

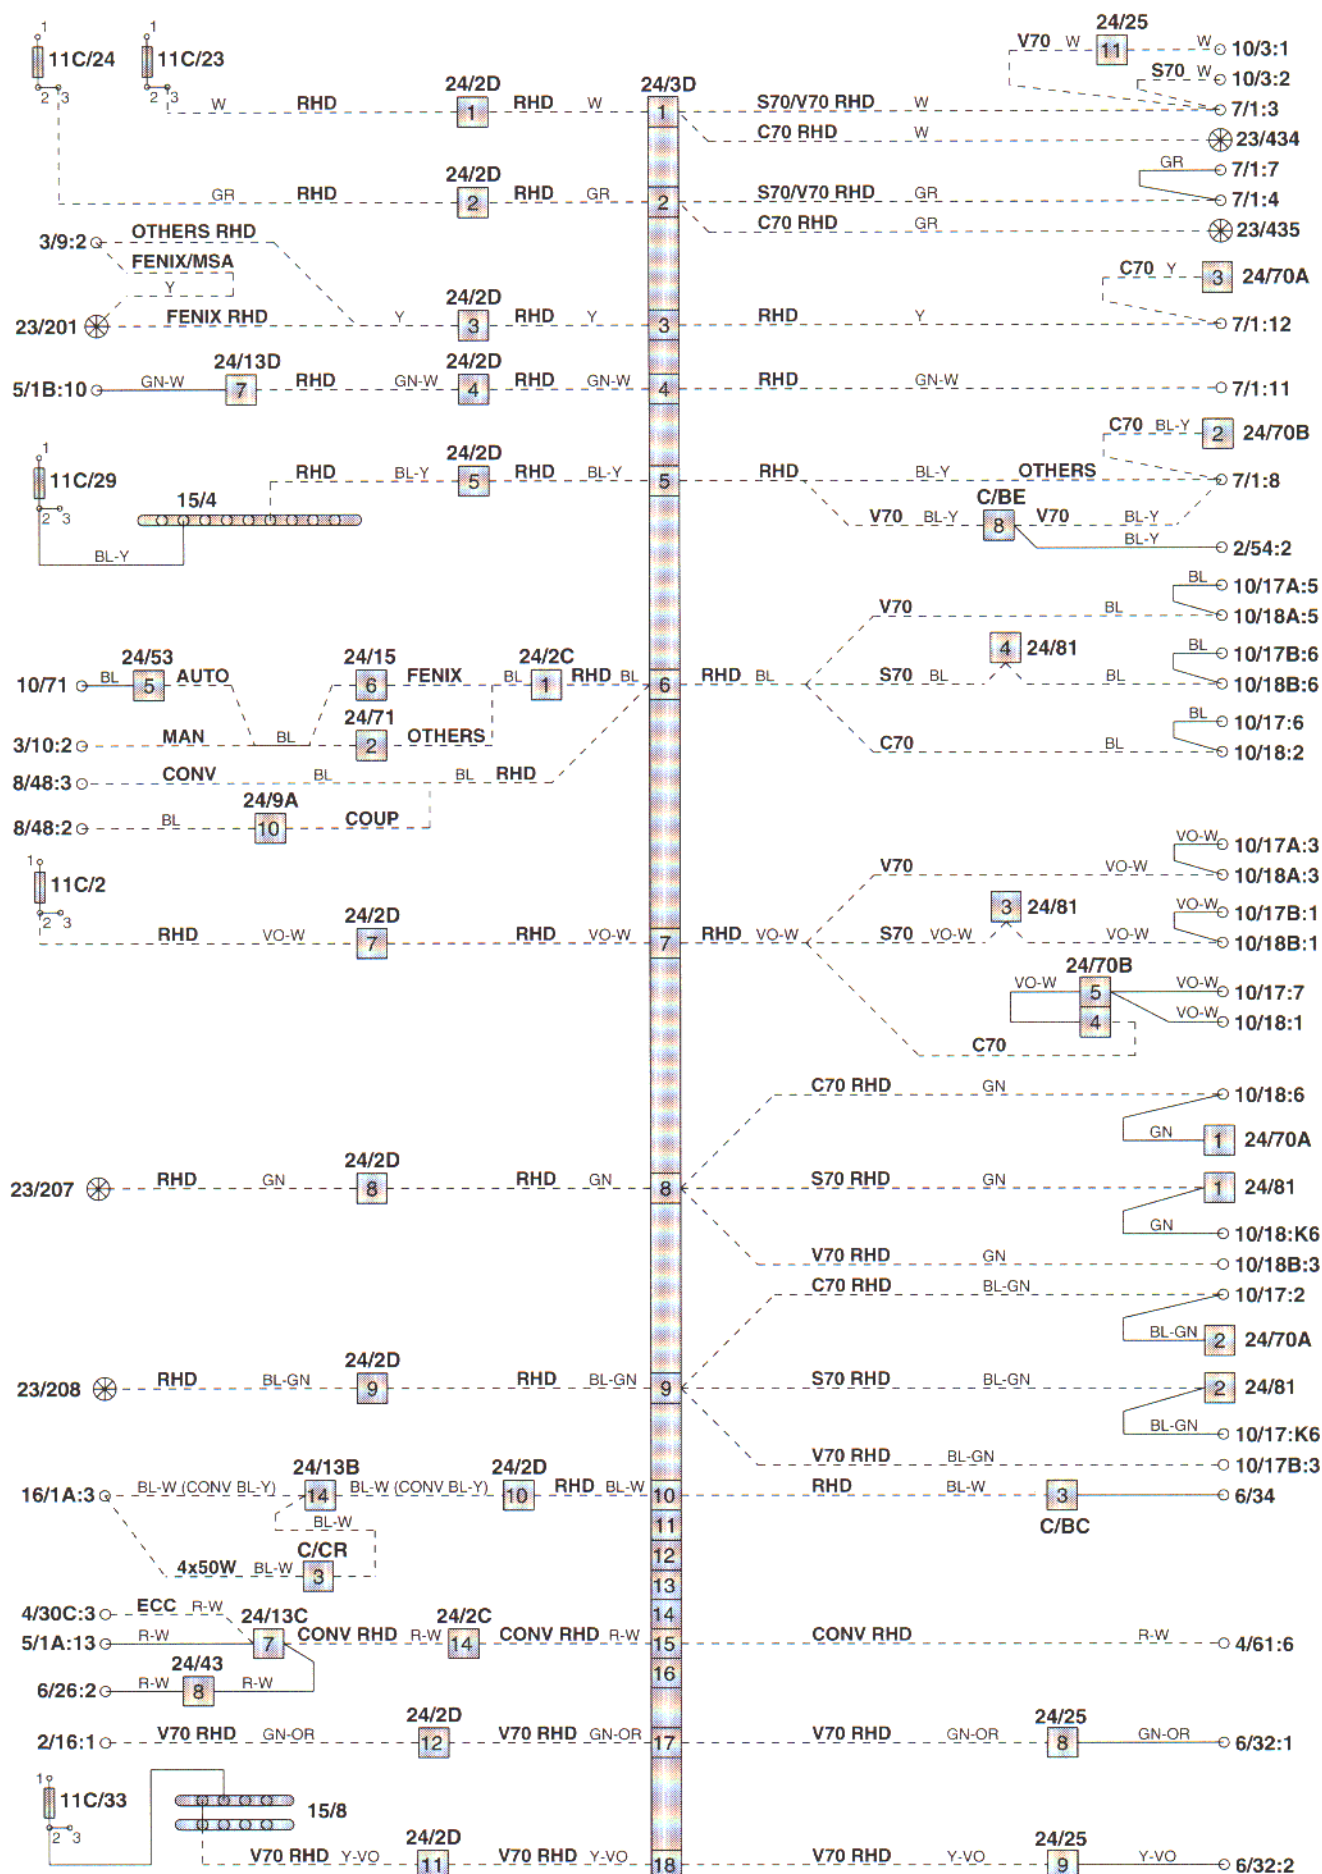


Connector 24/3

24/3E White 12-pin (male - female) Firewall cable harness - Left door sill cable harness

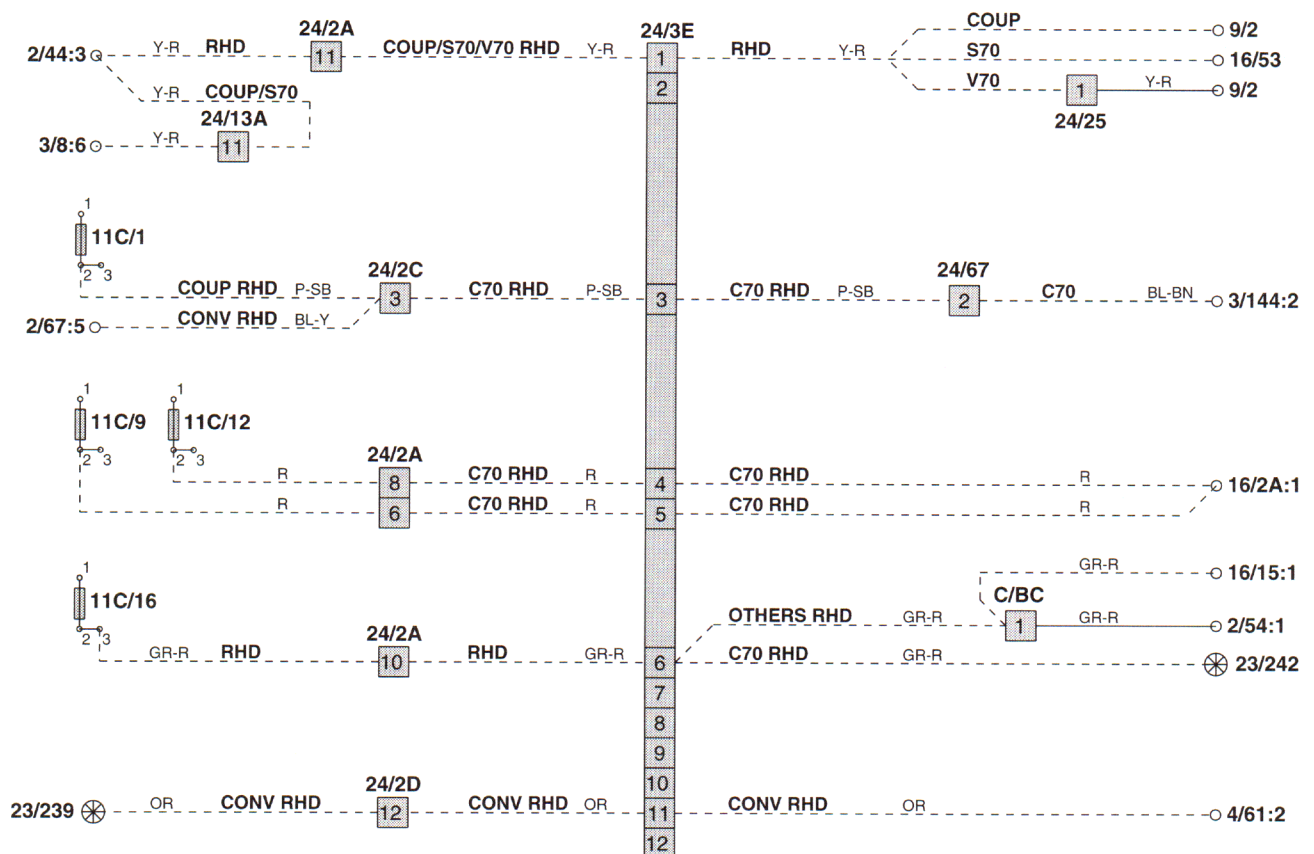


24/4B Light blue 18-pin (male - female) Firewall cable harness - Right door sill cable harness

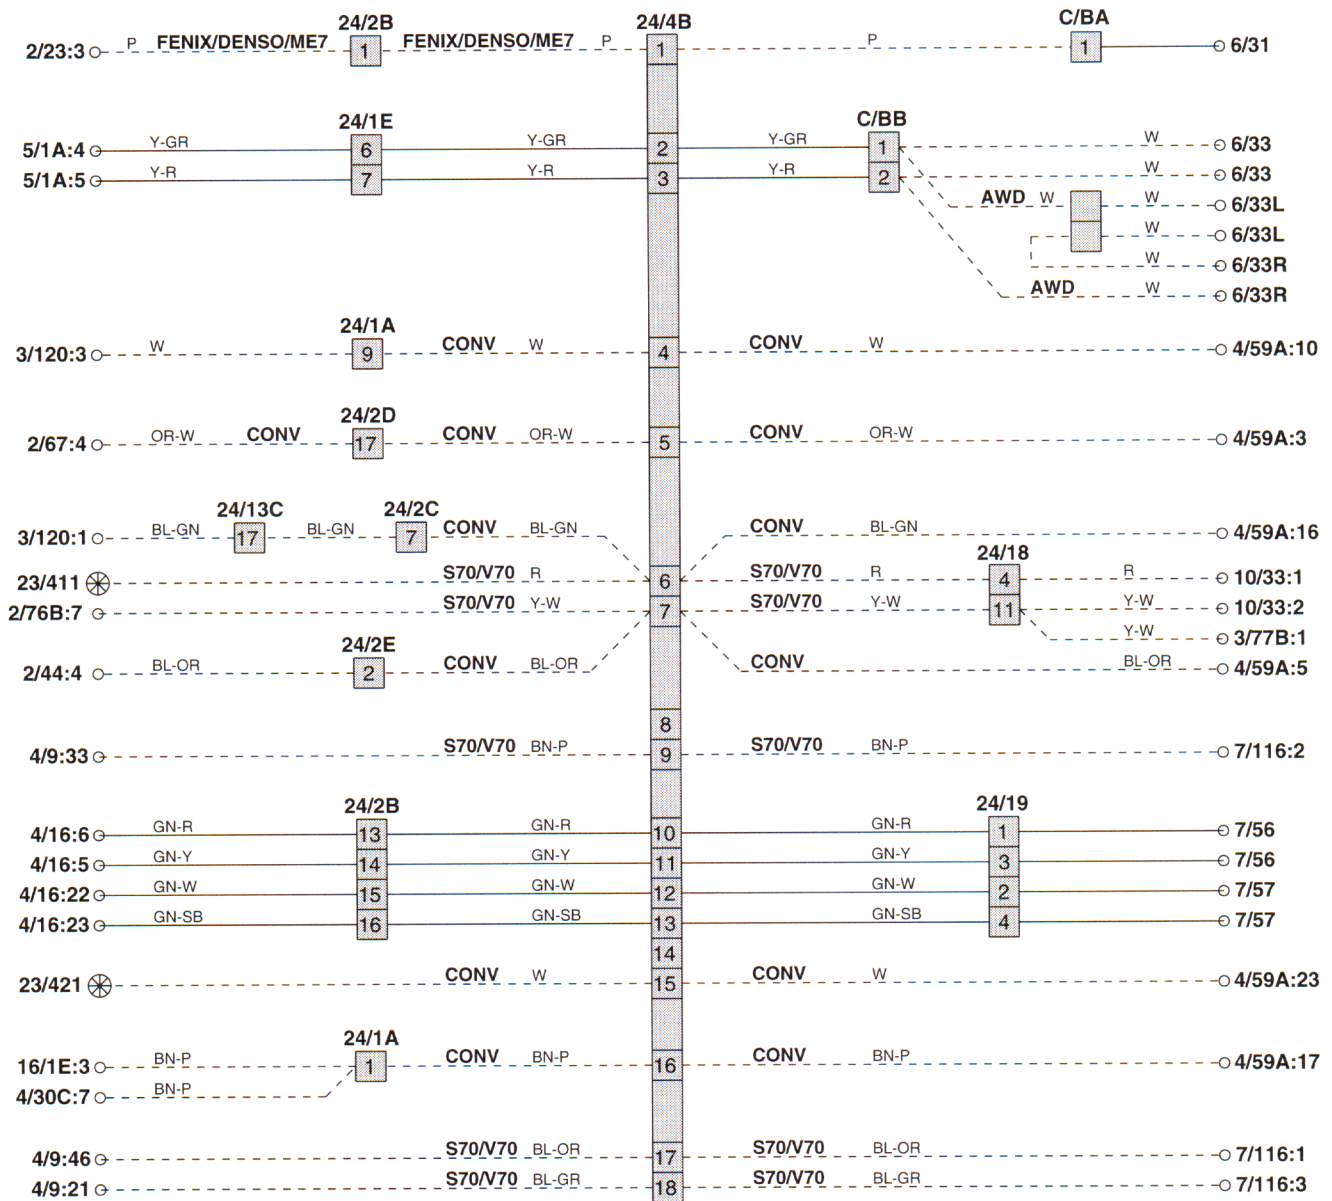


Connector 24/4

24/4C Yellow 12-pin (male - female) Firewall cable harness - Right door sill cable harness

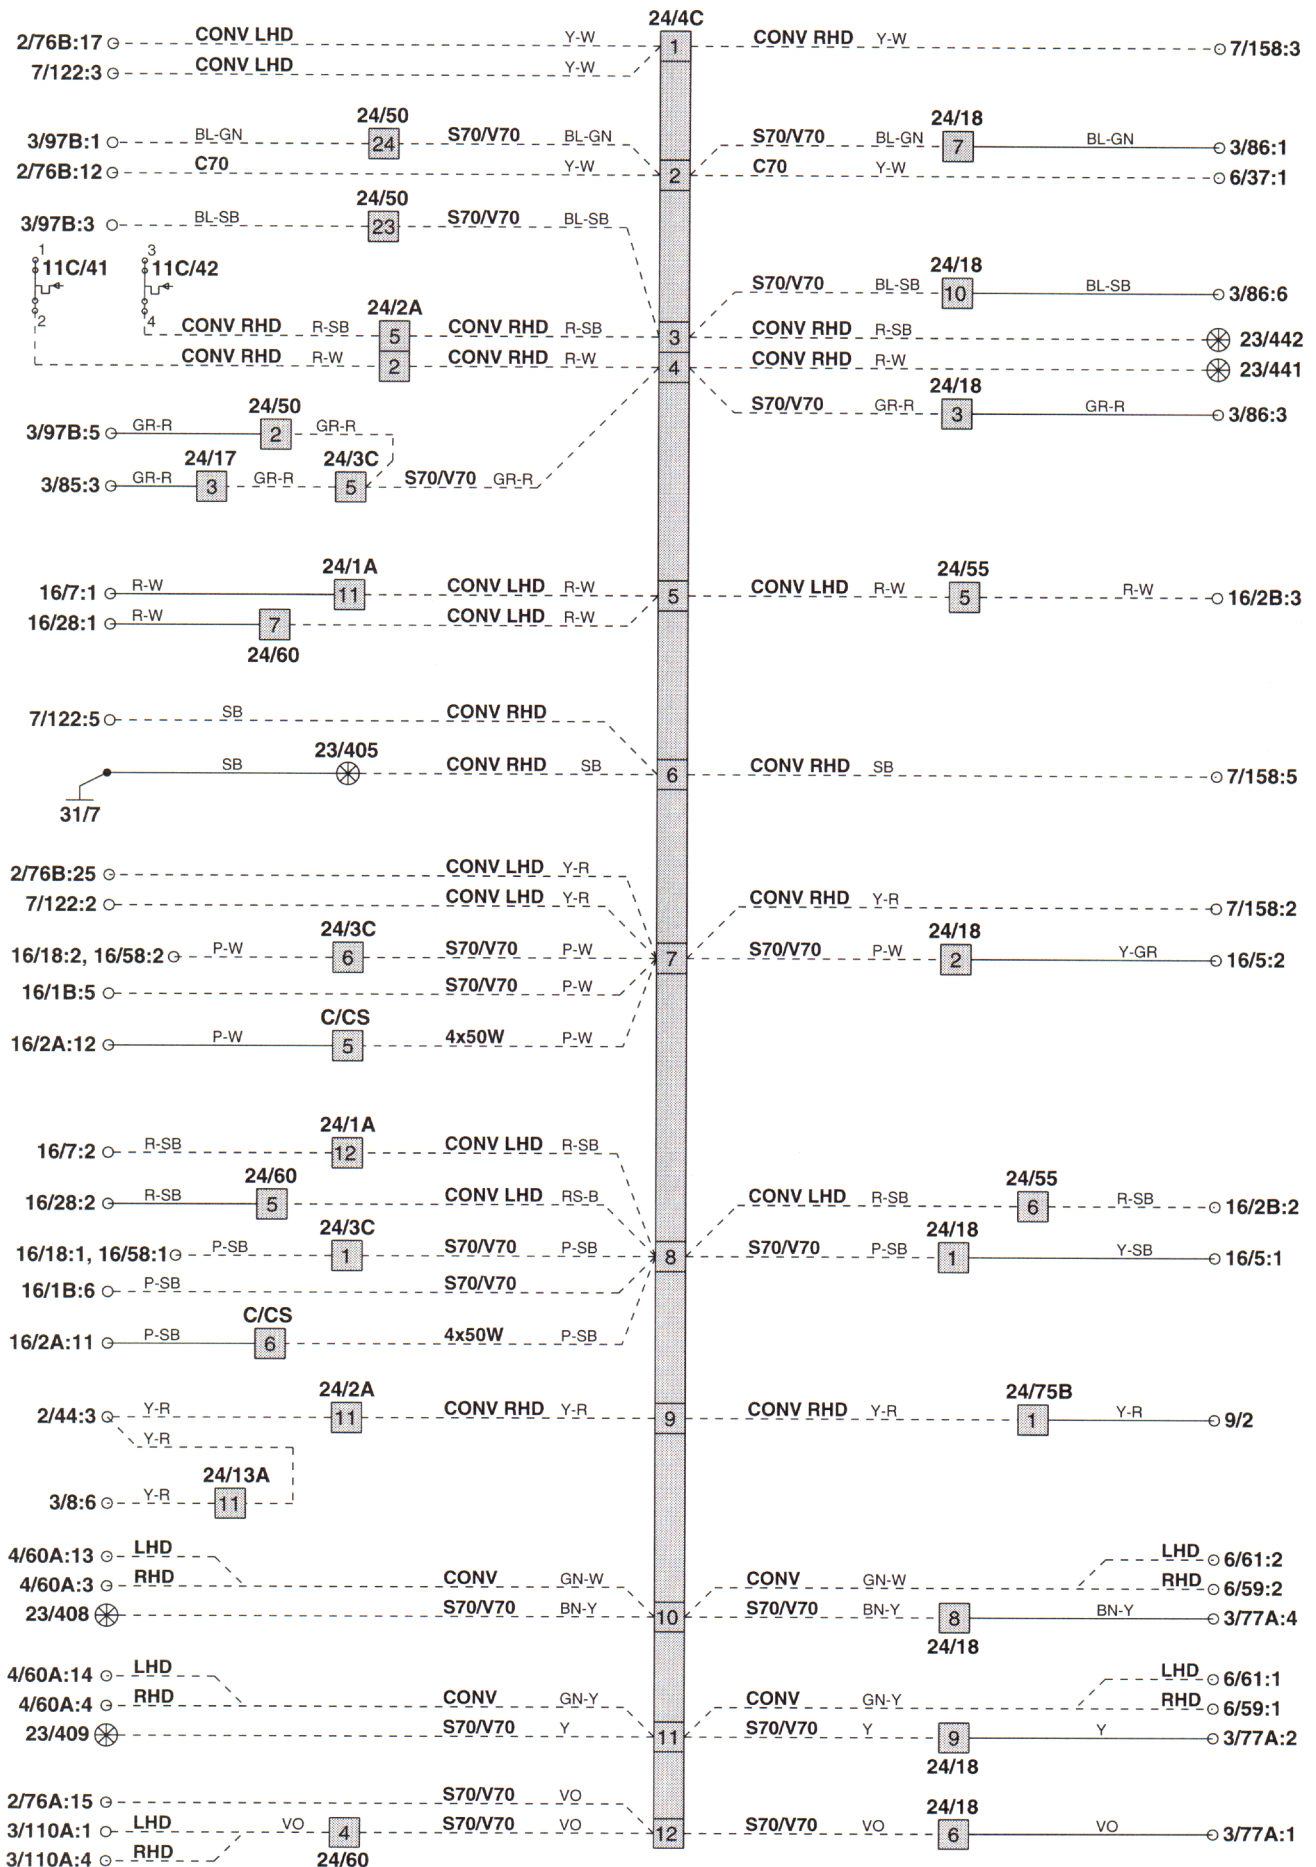


24/4E White 18-pin (female - male) Right door sill cable harness - Firewall cable harness

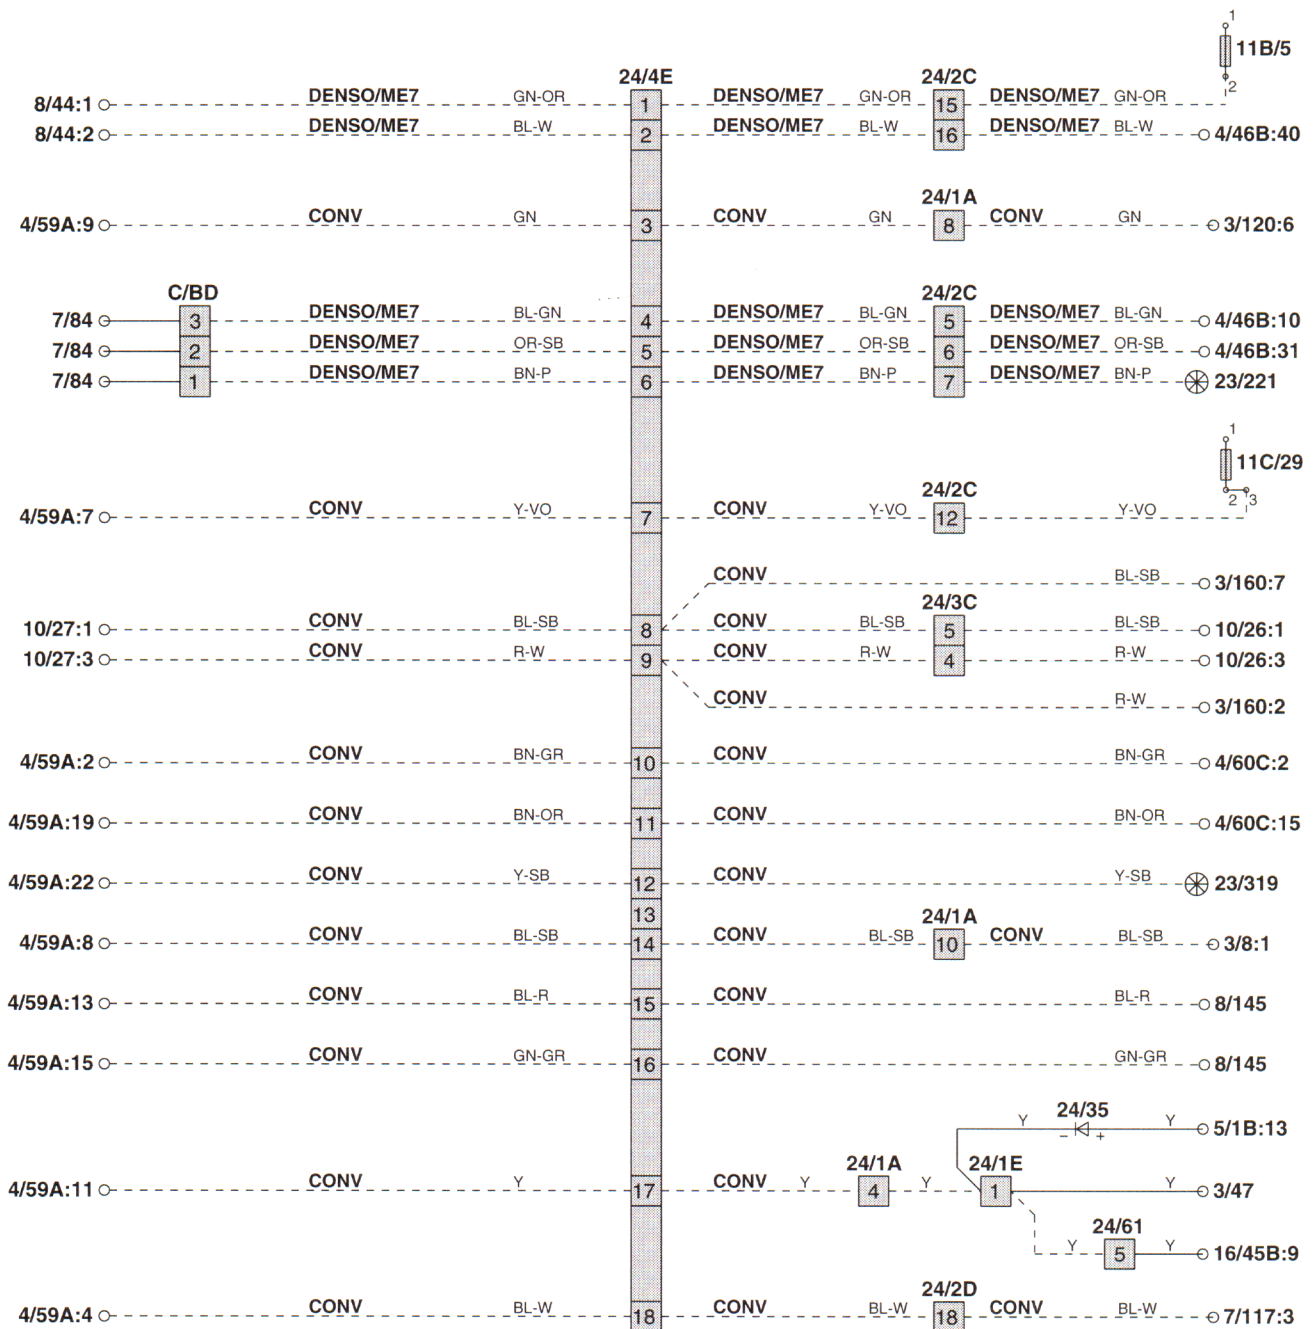


Connector 24/7

24/7A Green 24-pin (male - female) Firewall cable harness - Tunnel cable harness

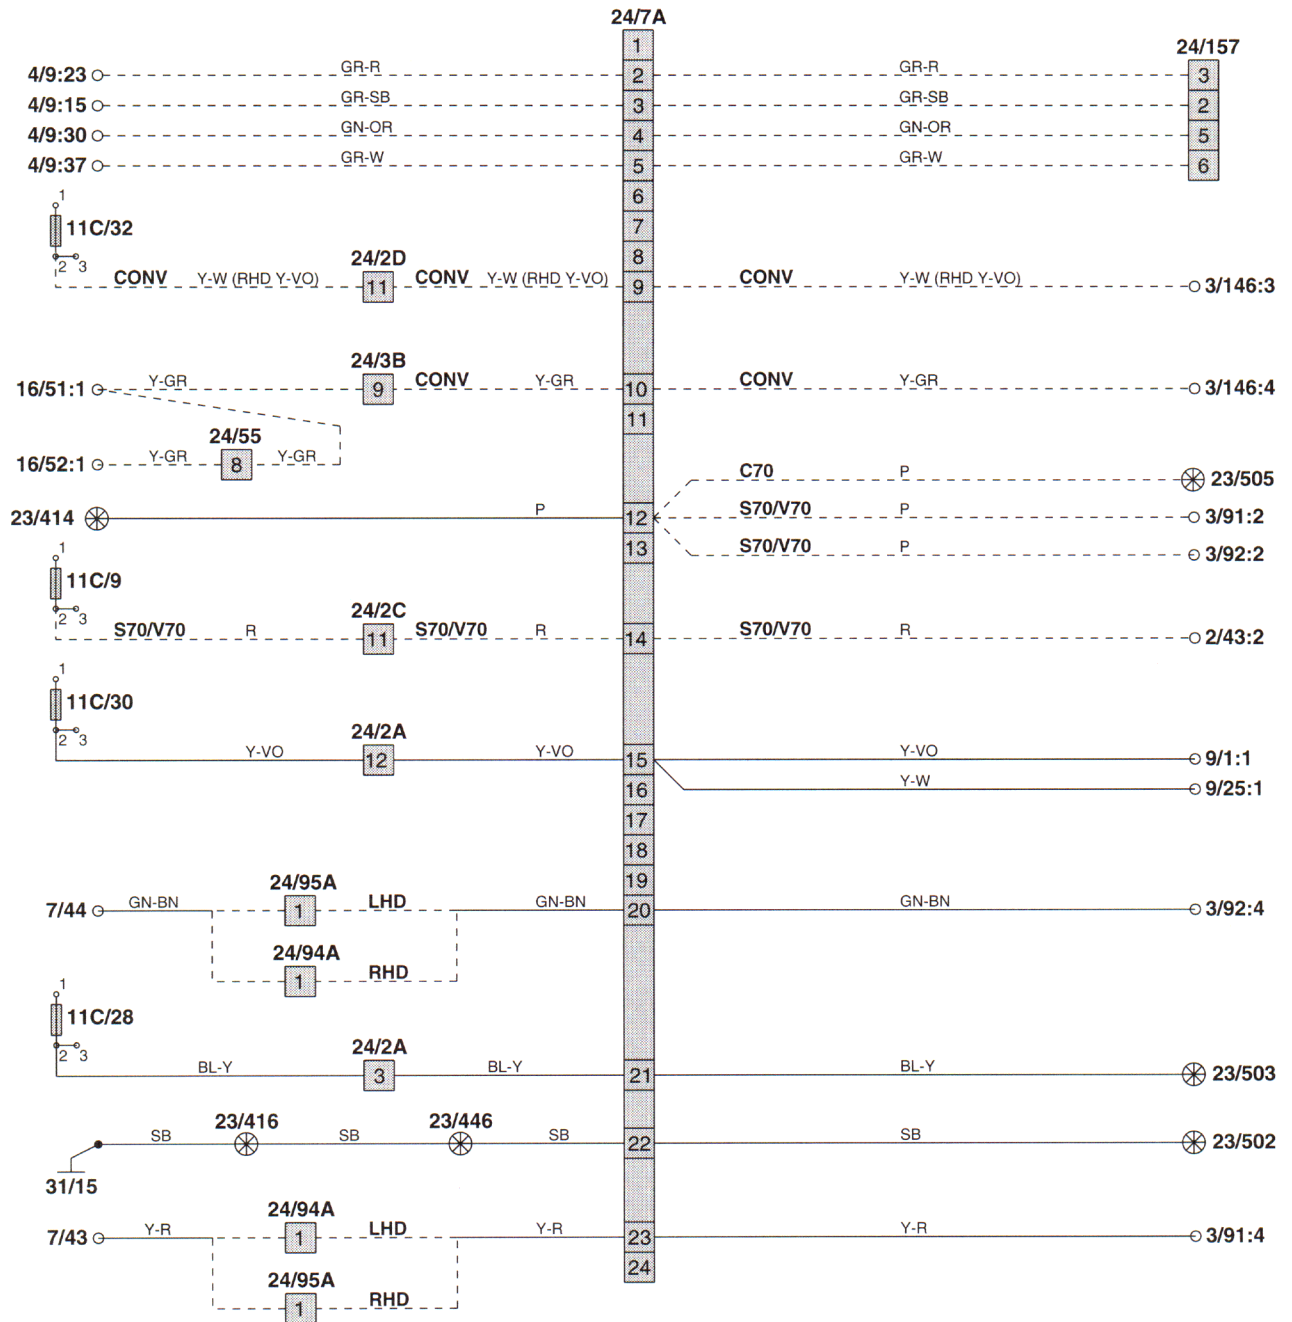


24/7B Natural 10-pin (male - female)
Firewall cable harness - Tunnel cable harness

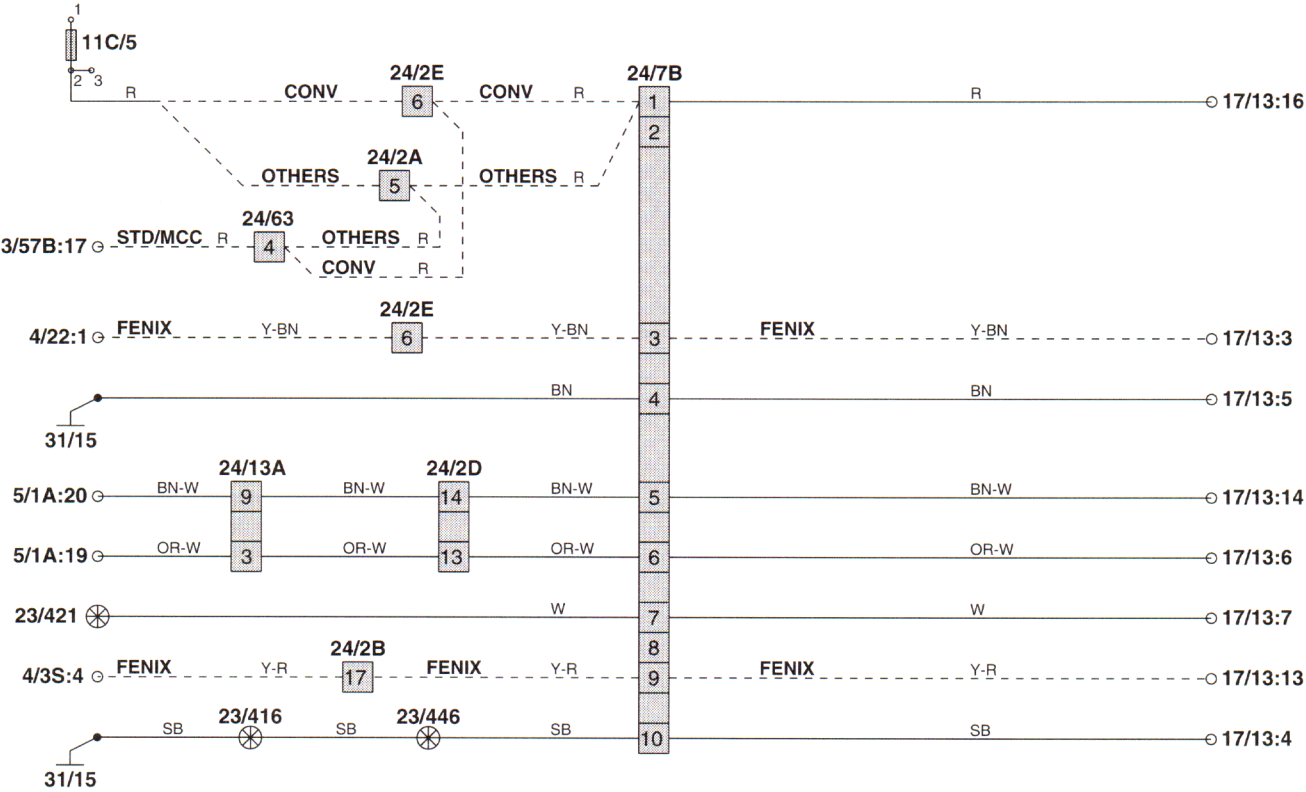


Connector 24/9

**24/9A Green 12-pin (male - female) (COUP/S70/V70)
Firewall cable harness - Roof cable harness**

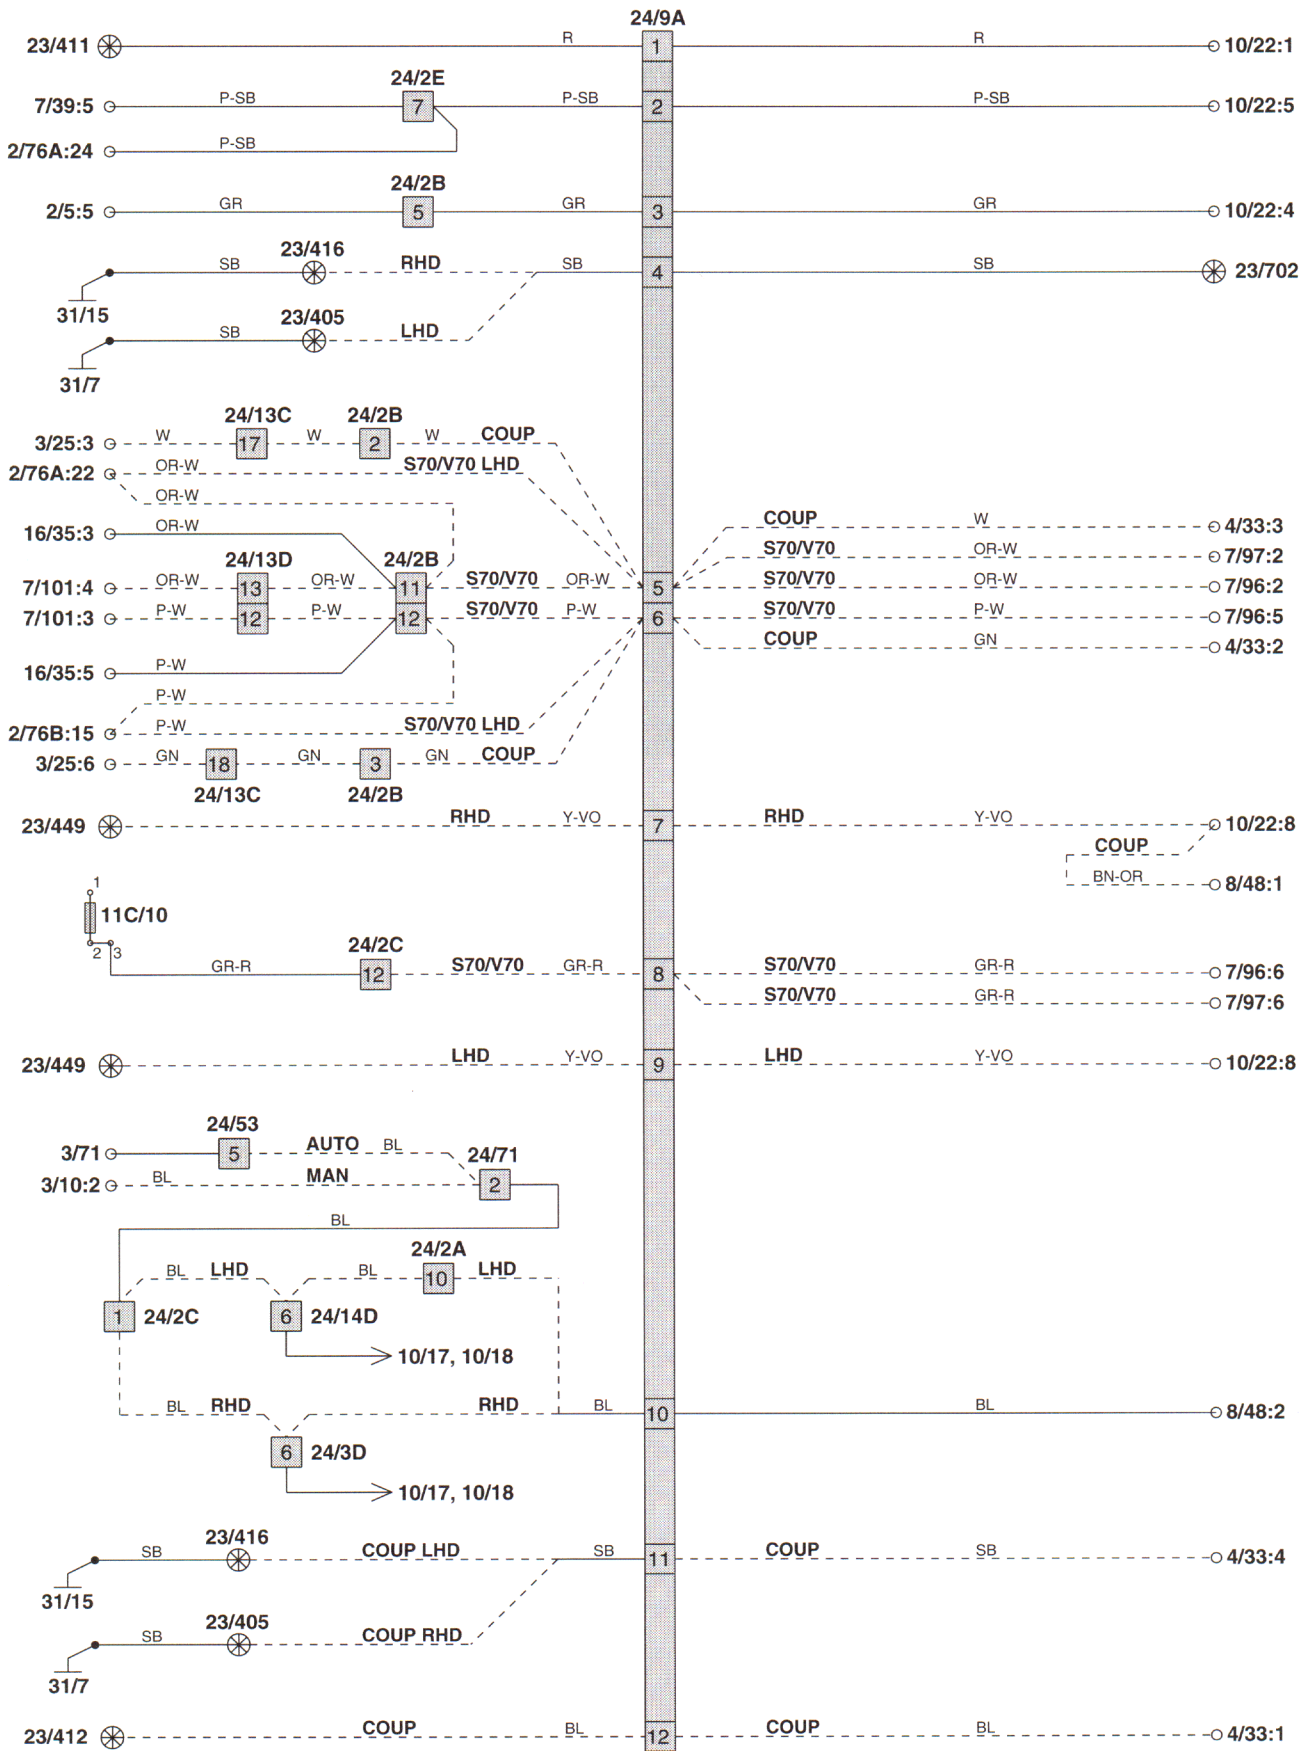


24/13A Green 12-pin (male - female)
Engine compartment cable harness - Instrument panel cable harness

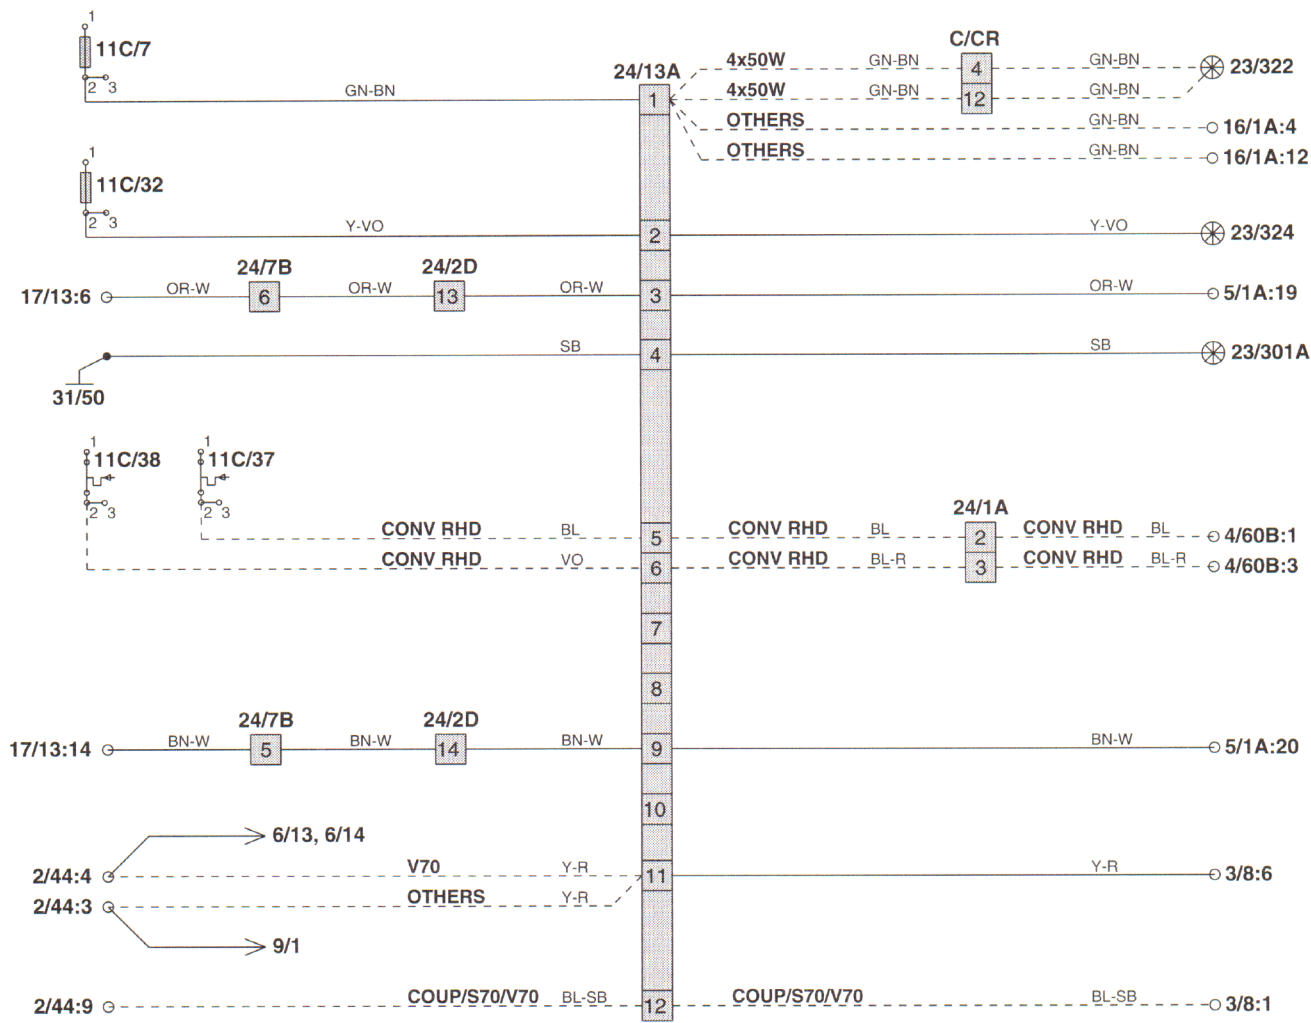


Connector 24/13

24/13B Light blue 18-pin (male - female) Engine compartment cable harness - Instrument panel cable harness

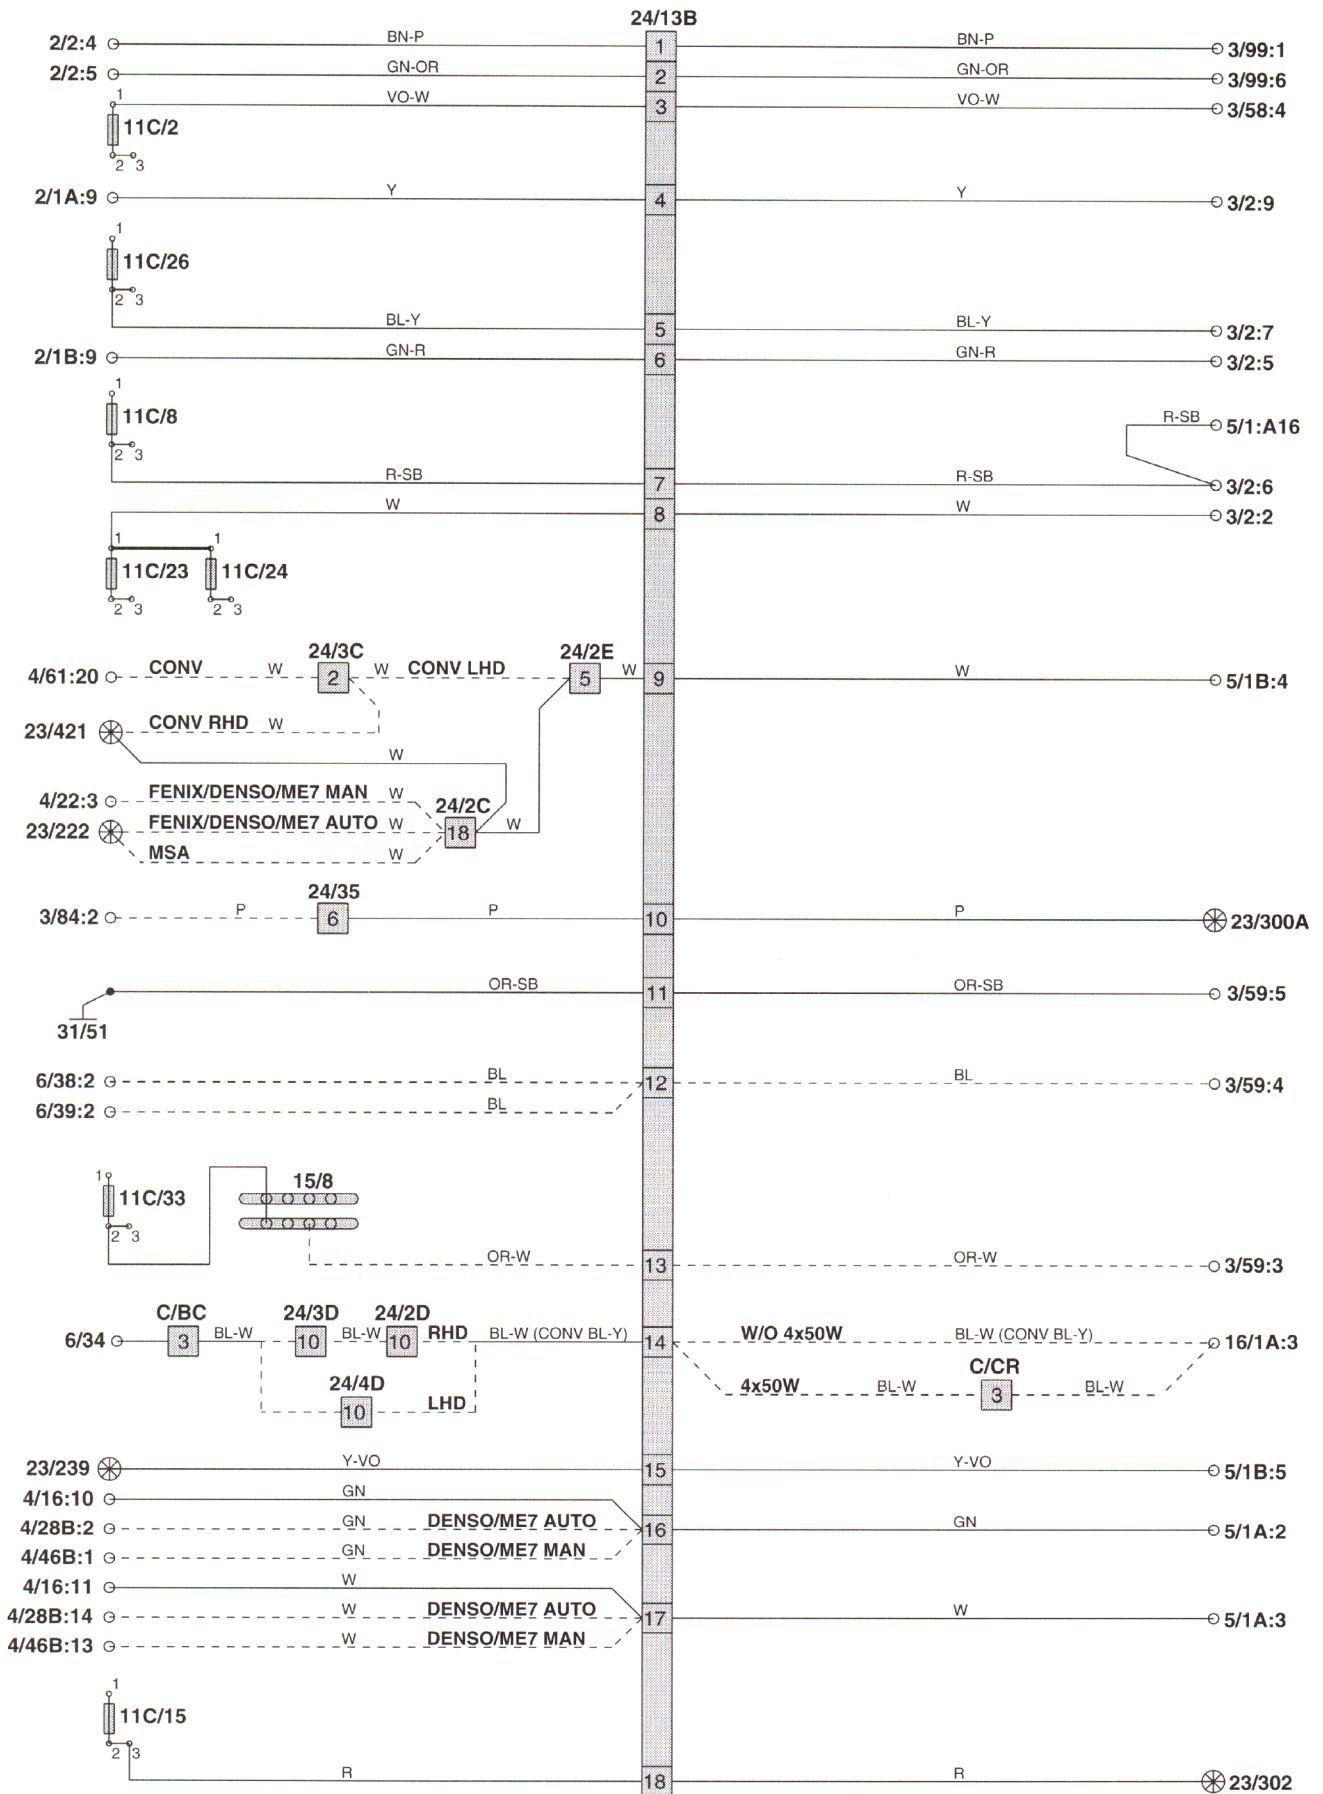


24/13C Yellow 18-pin (male - female) Engine compartment cable harness - Instrument panel cable harness

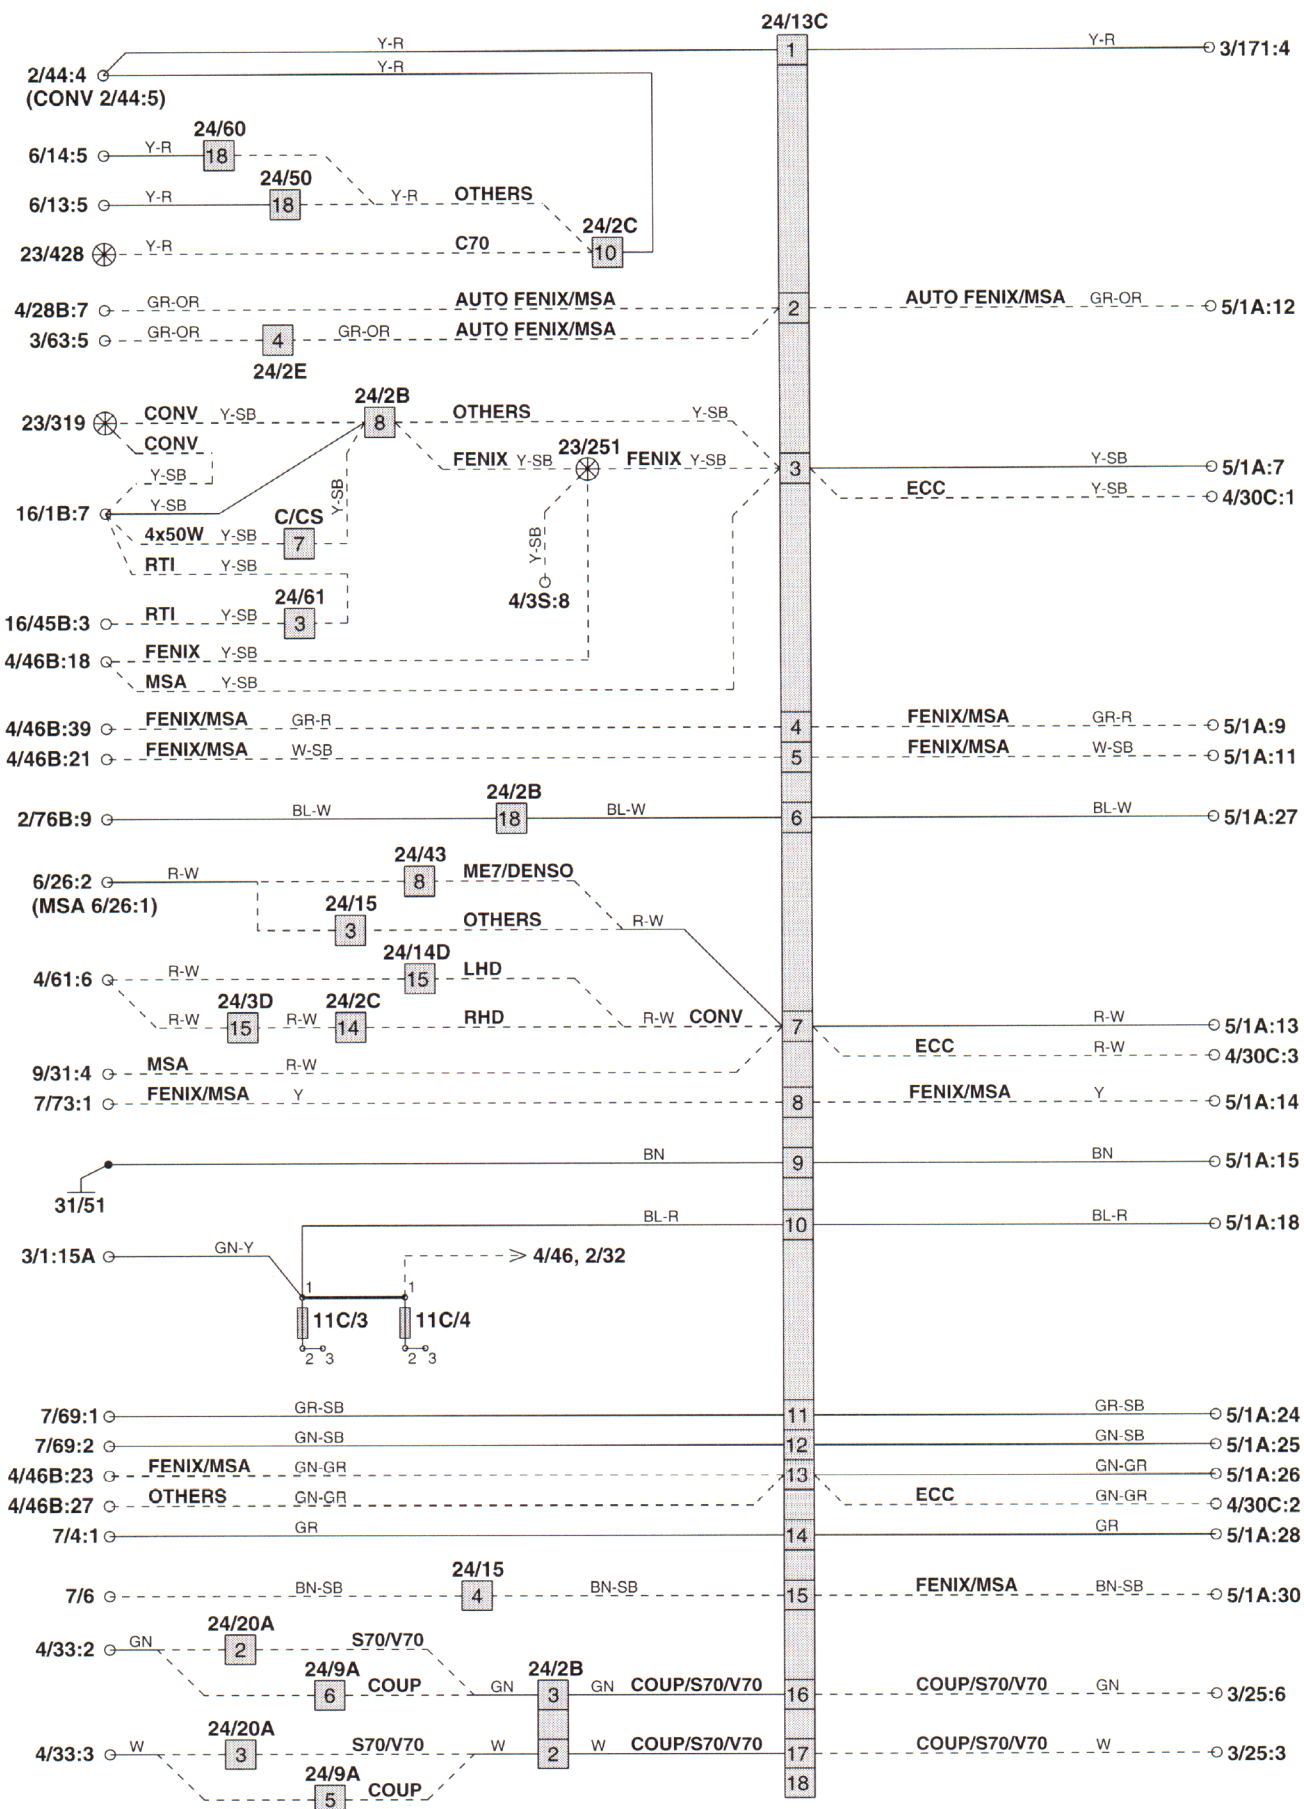


Connector 24/13

24/13D Red 18-pin (male - female) Engine compartment cable harness - Instrument panel cable harness

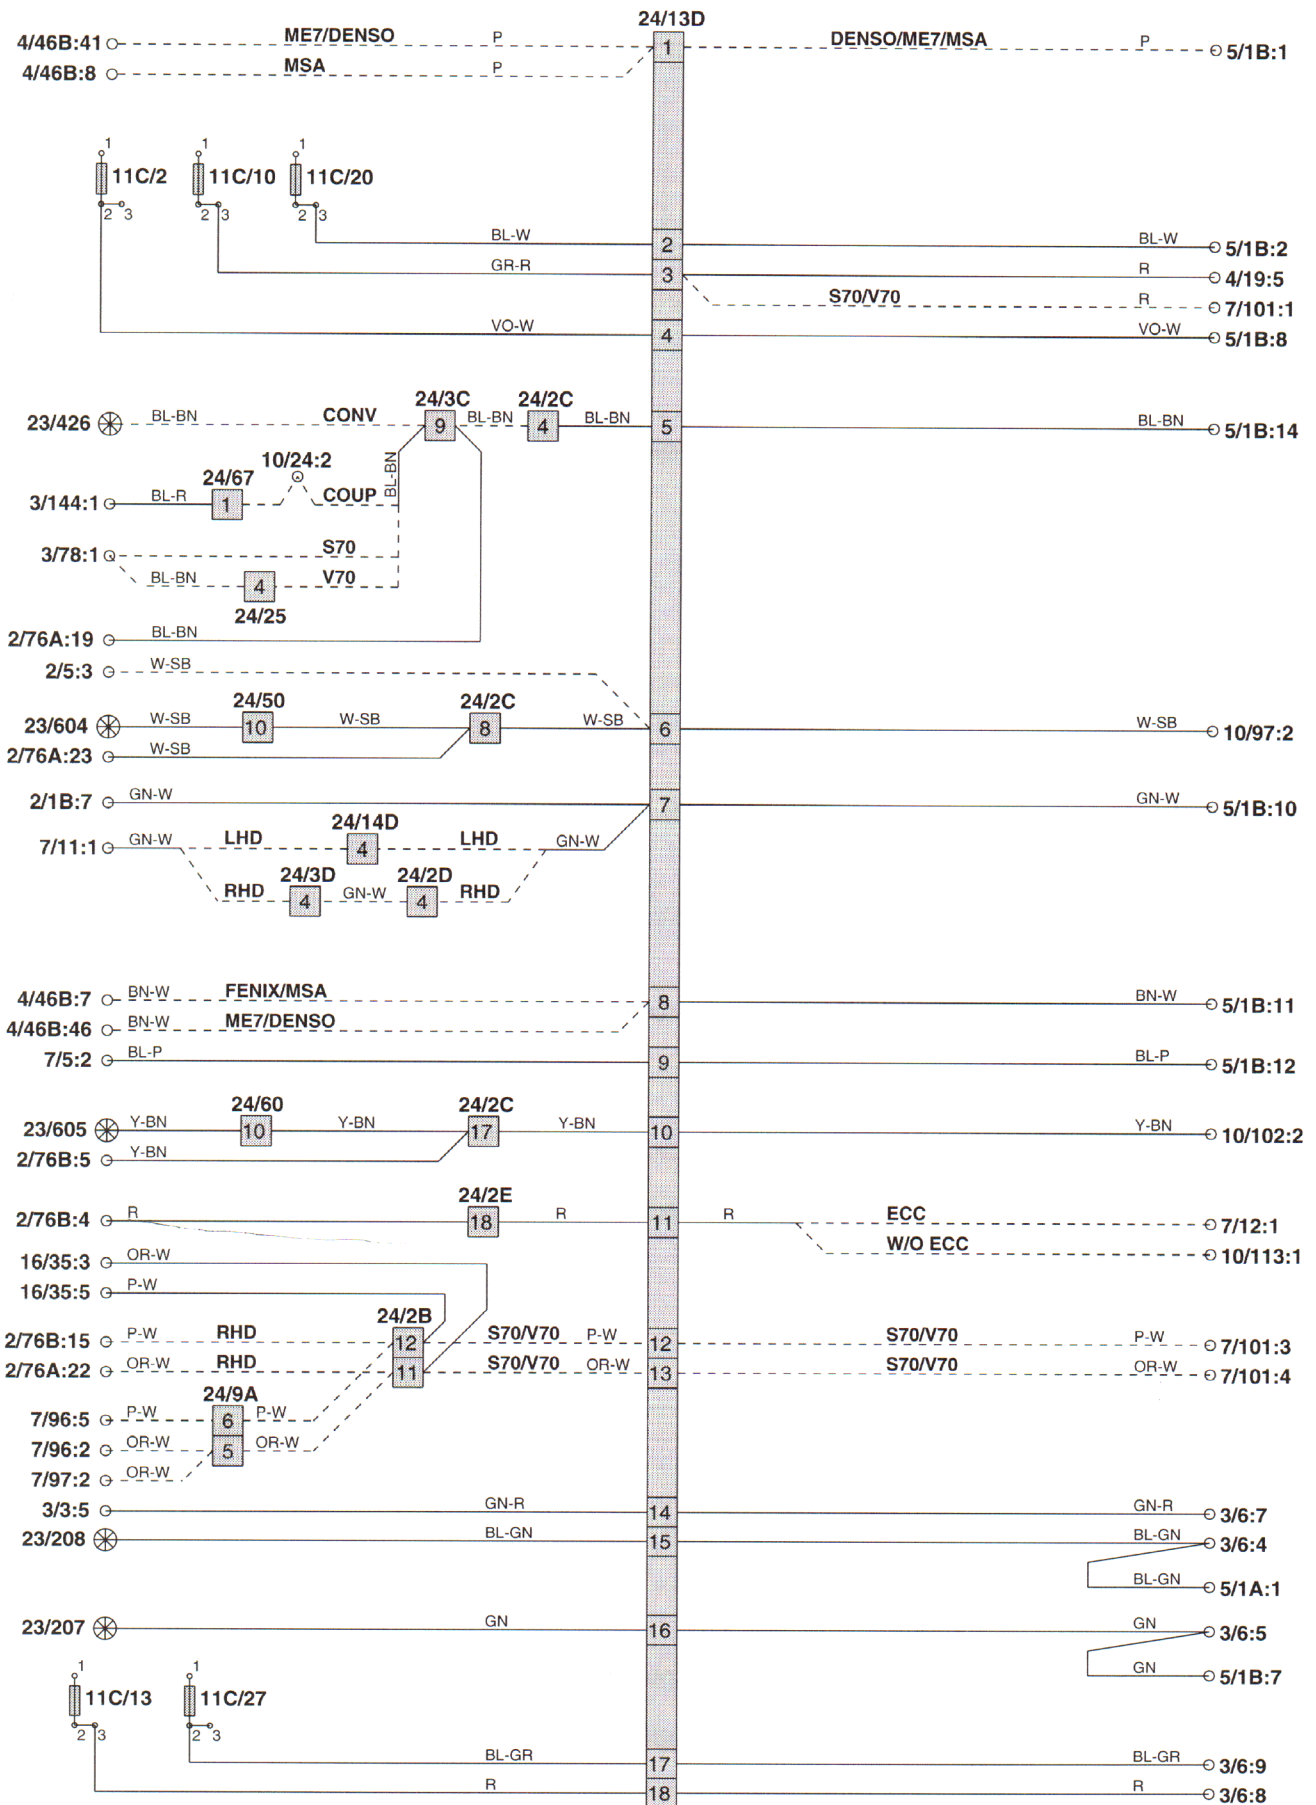


24/14D Red 18-pin (male - female) Engine compartment cable harness - Left door sill cable harness

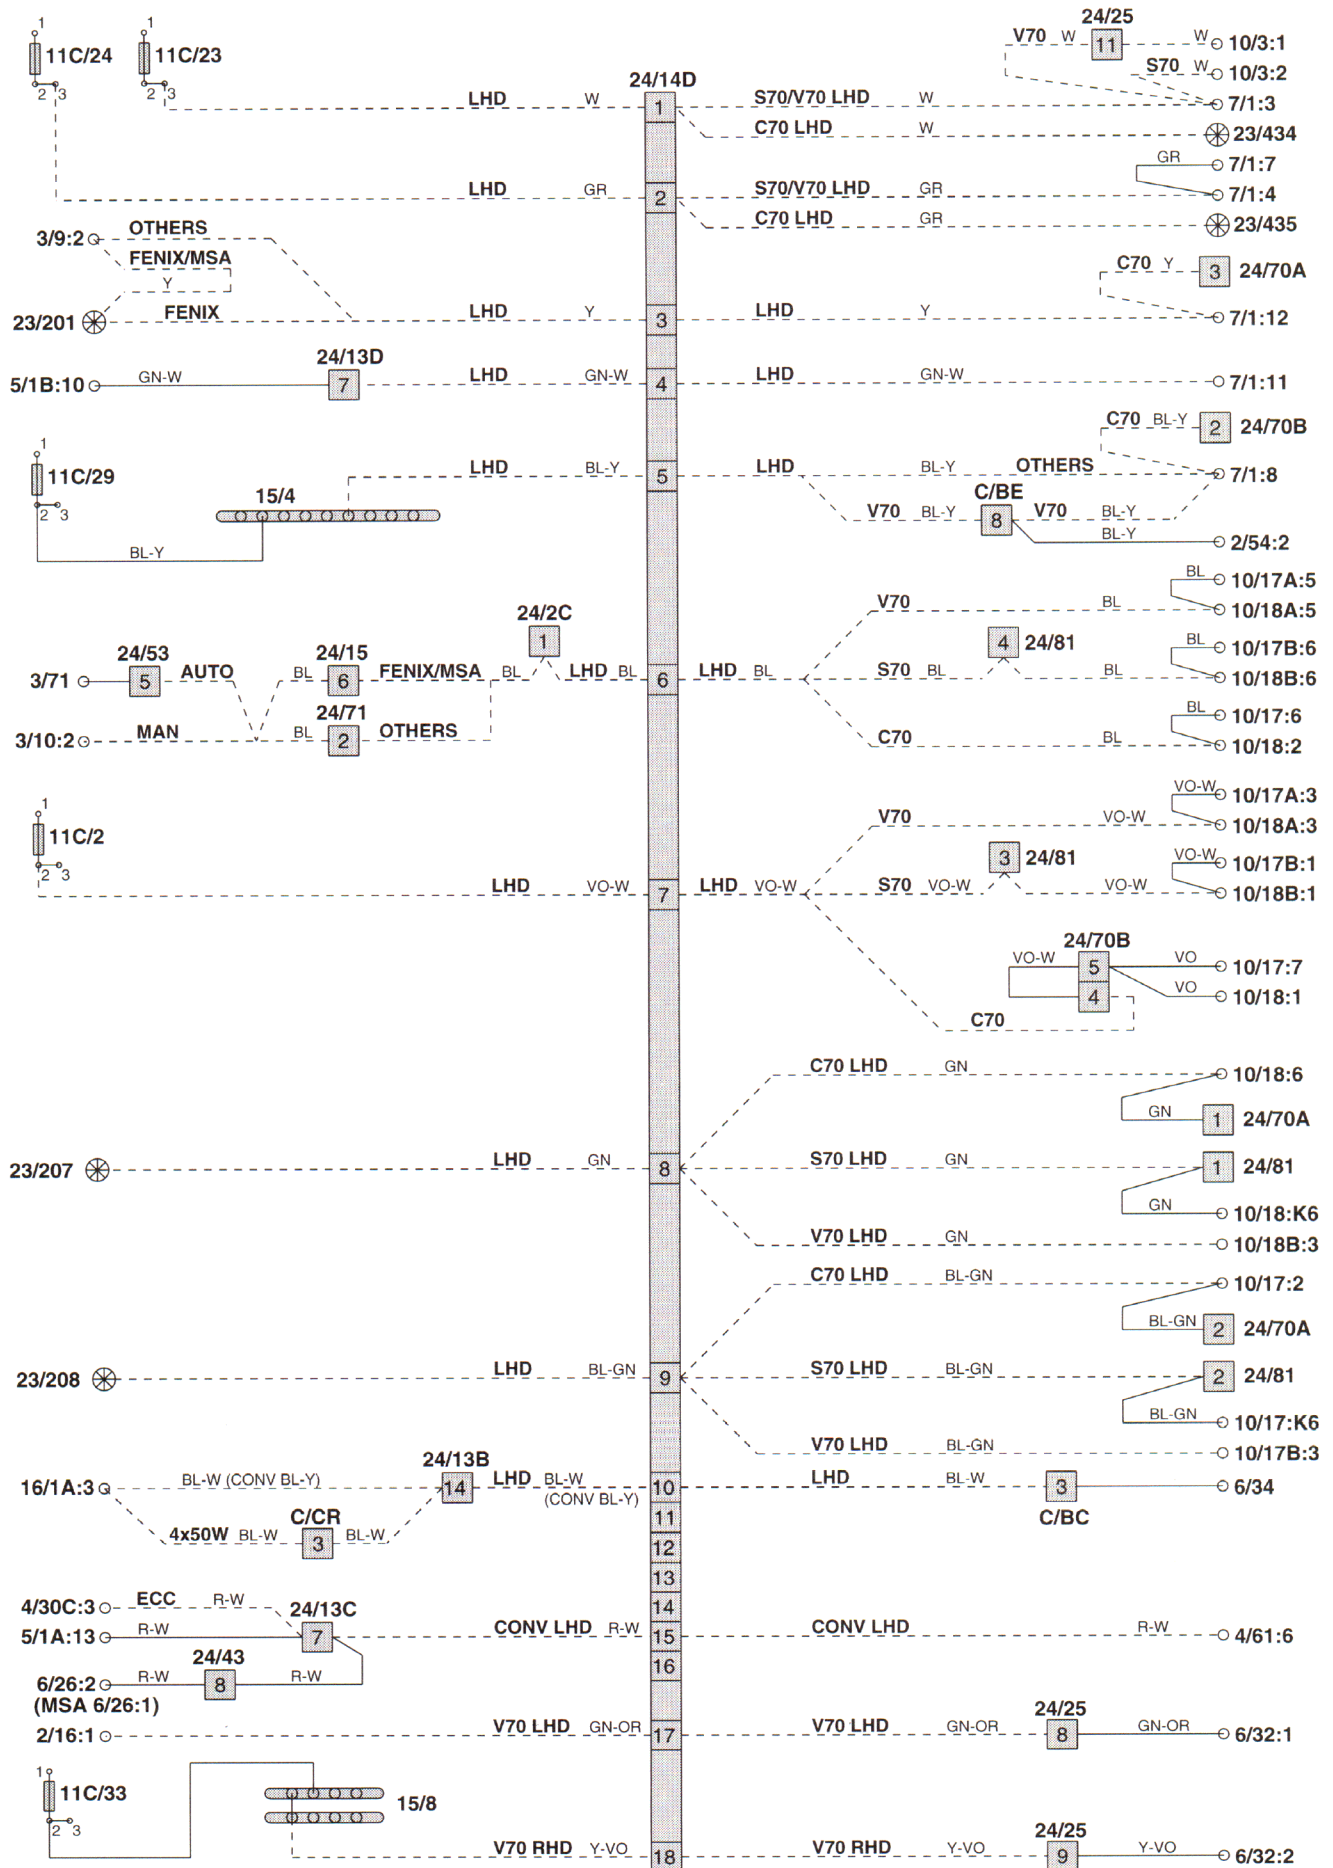

**24/14E White 12-pin (male - female)
Engine compartment cable harness - Left door sill cable harness**




24/15 Light Grey 10-pin (female - male) Engine compartment cable harness - Engine cable harness

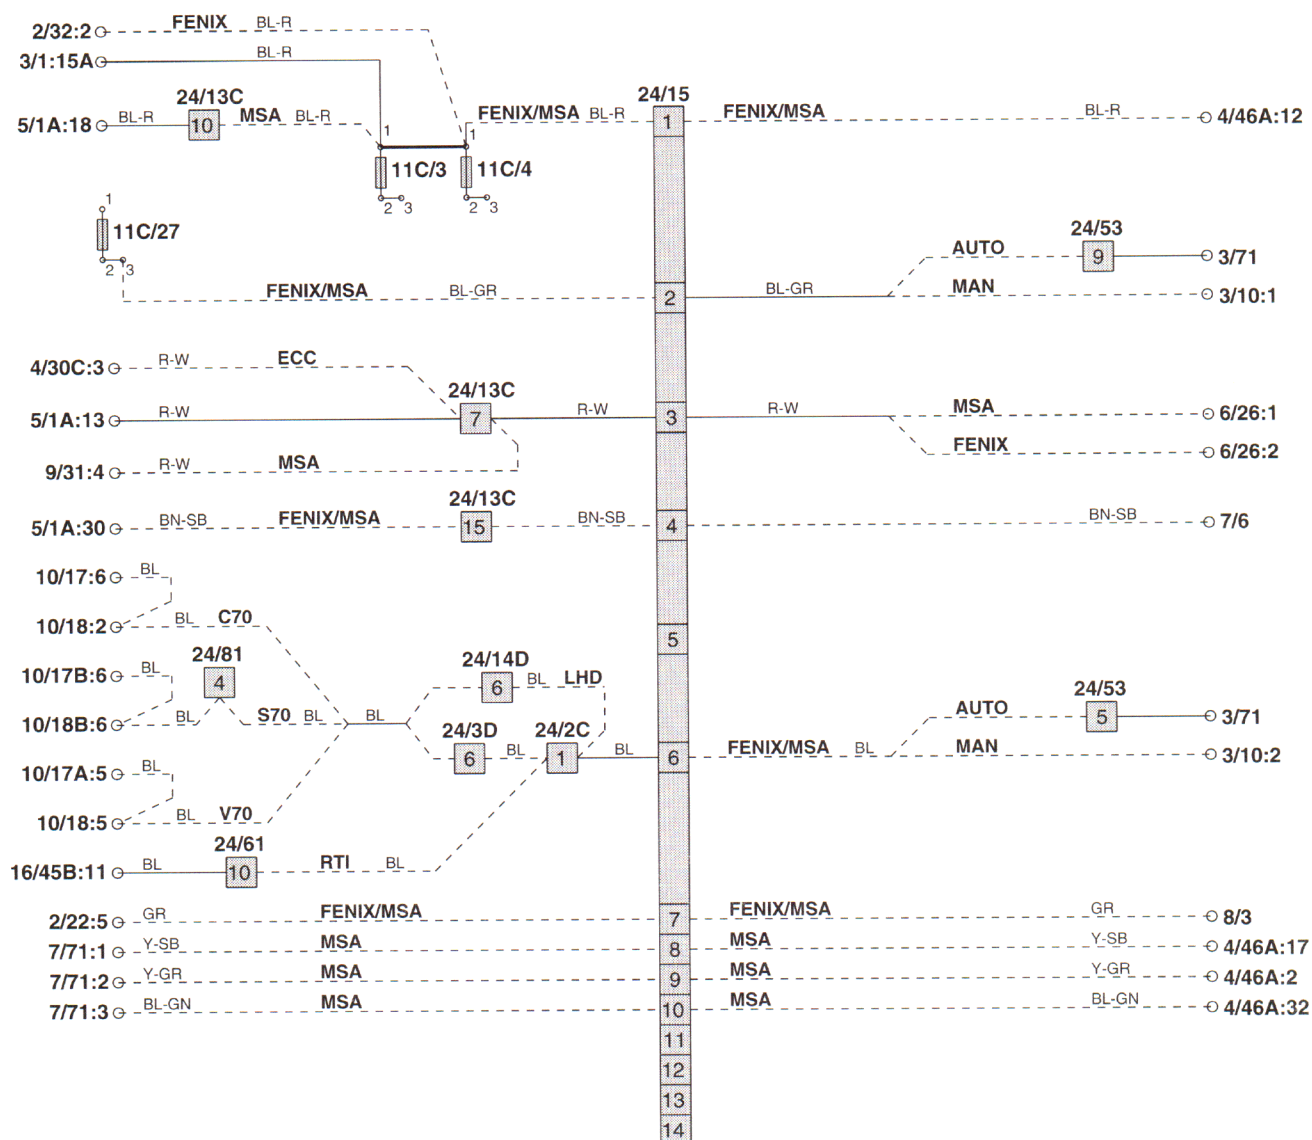


Connector 24/17

24/17 Natural 11-pin (female - male) (S70/V70) Left door sill cable harness - Left rear door cable harness


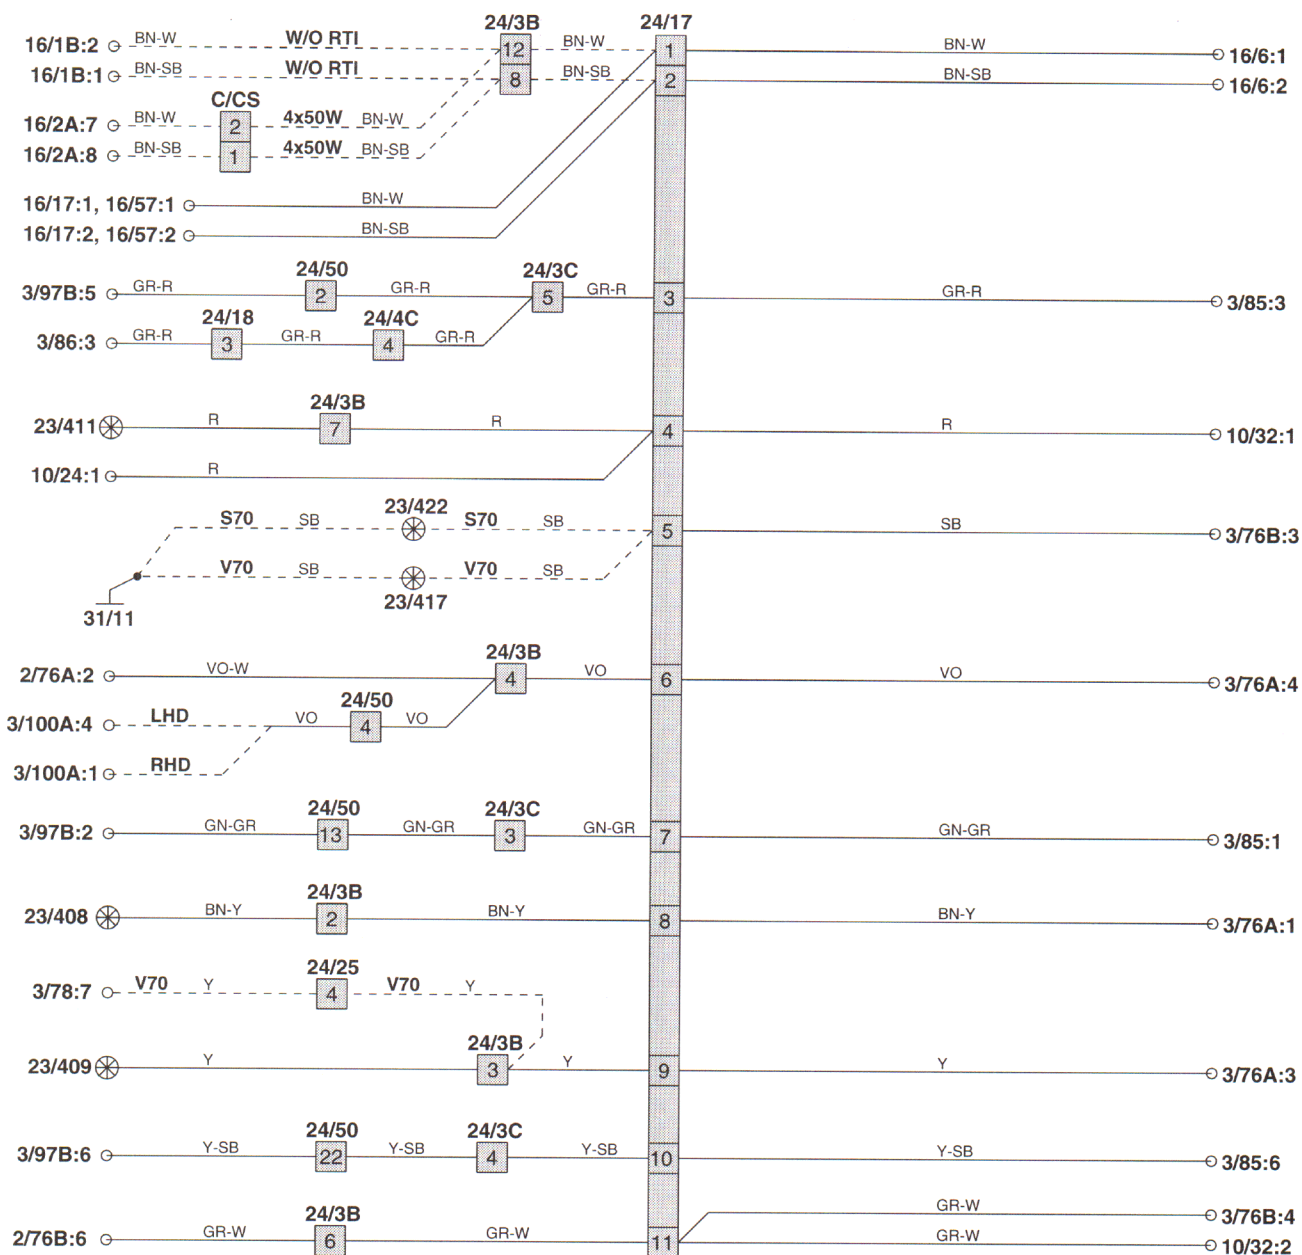


24/18 Natural 11-pin (female - male) (S70/V70) Right door sill cable harness - Right rear door cable harness

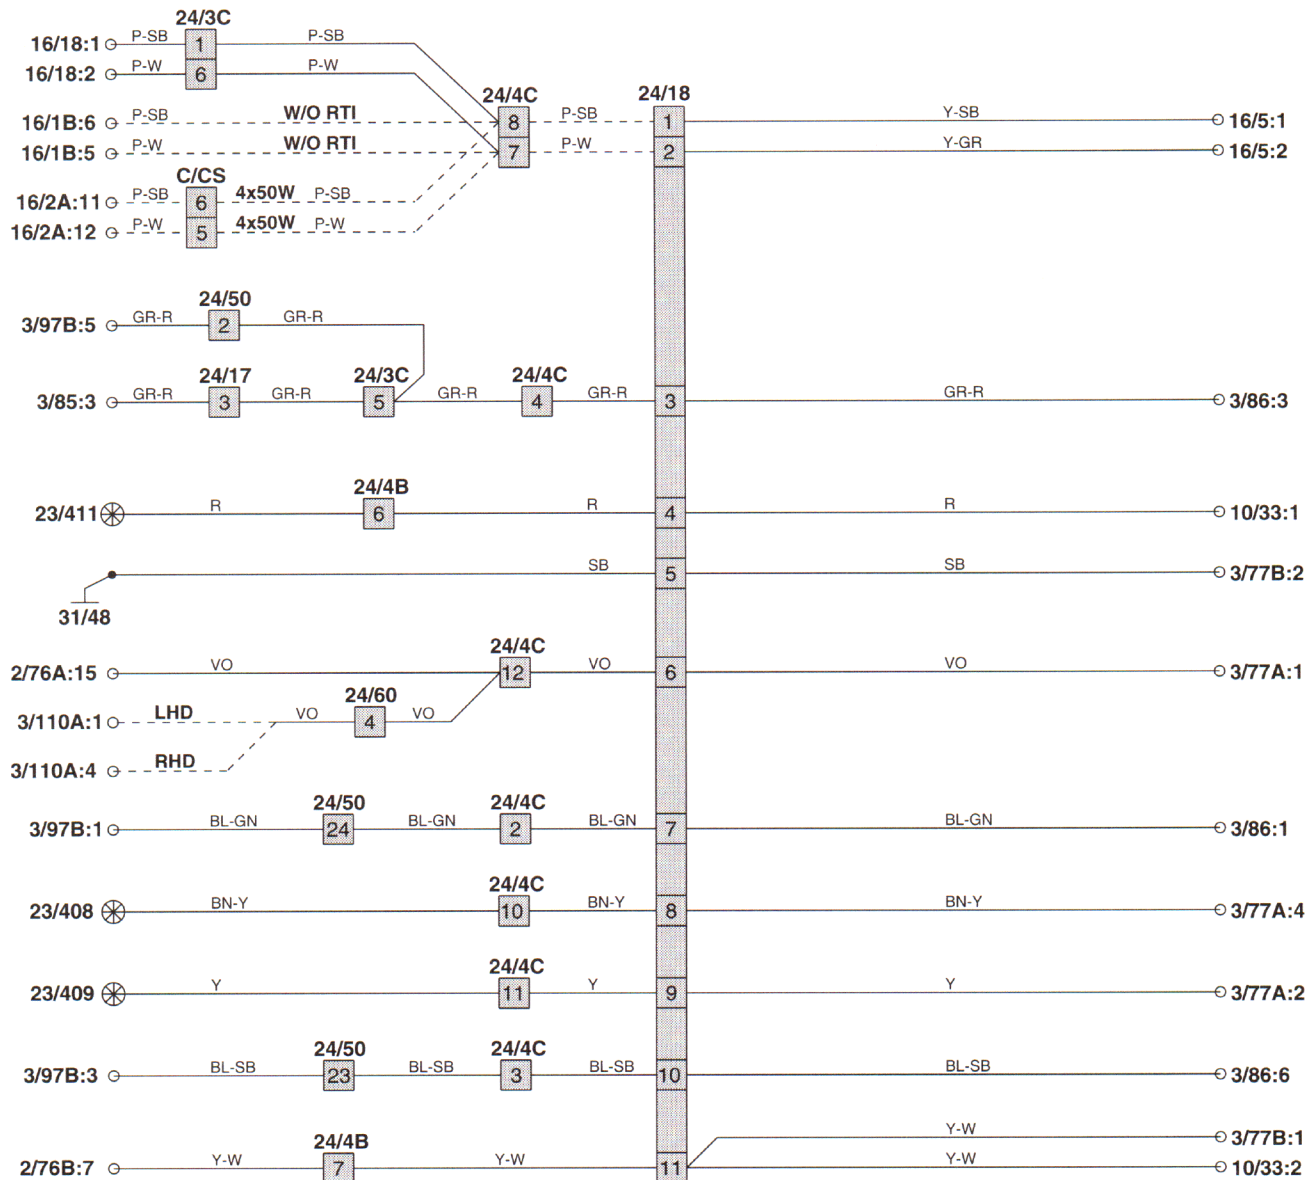


Connectors 24/19 and 24/20

- 24/19** Yellow 4-pin (female - male)
Right door sill cable harness - Rear wheel sensor cable harness
- 24/20A** Green 12-pin (male - female) (S70/V70)
Firewall cable harness - Power sunroof cable harness

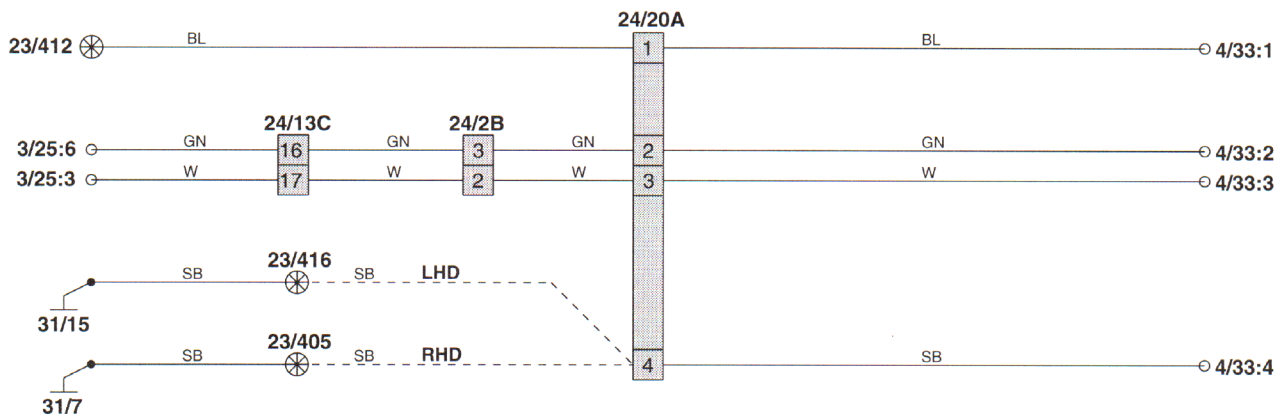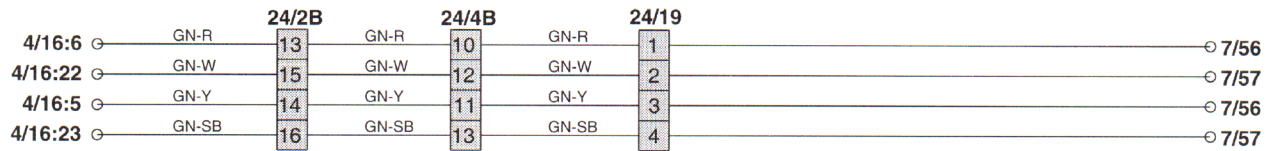


24/25 Natural 11-pin (male - female) (V70) Left door sill cable harness - Tailgate cable harness

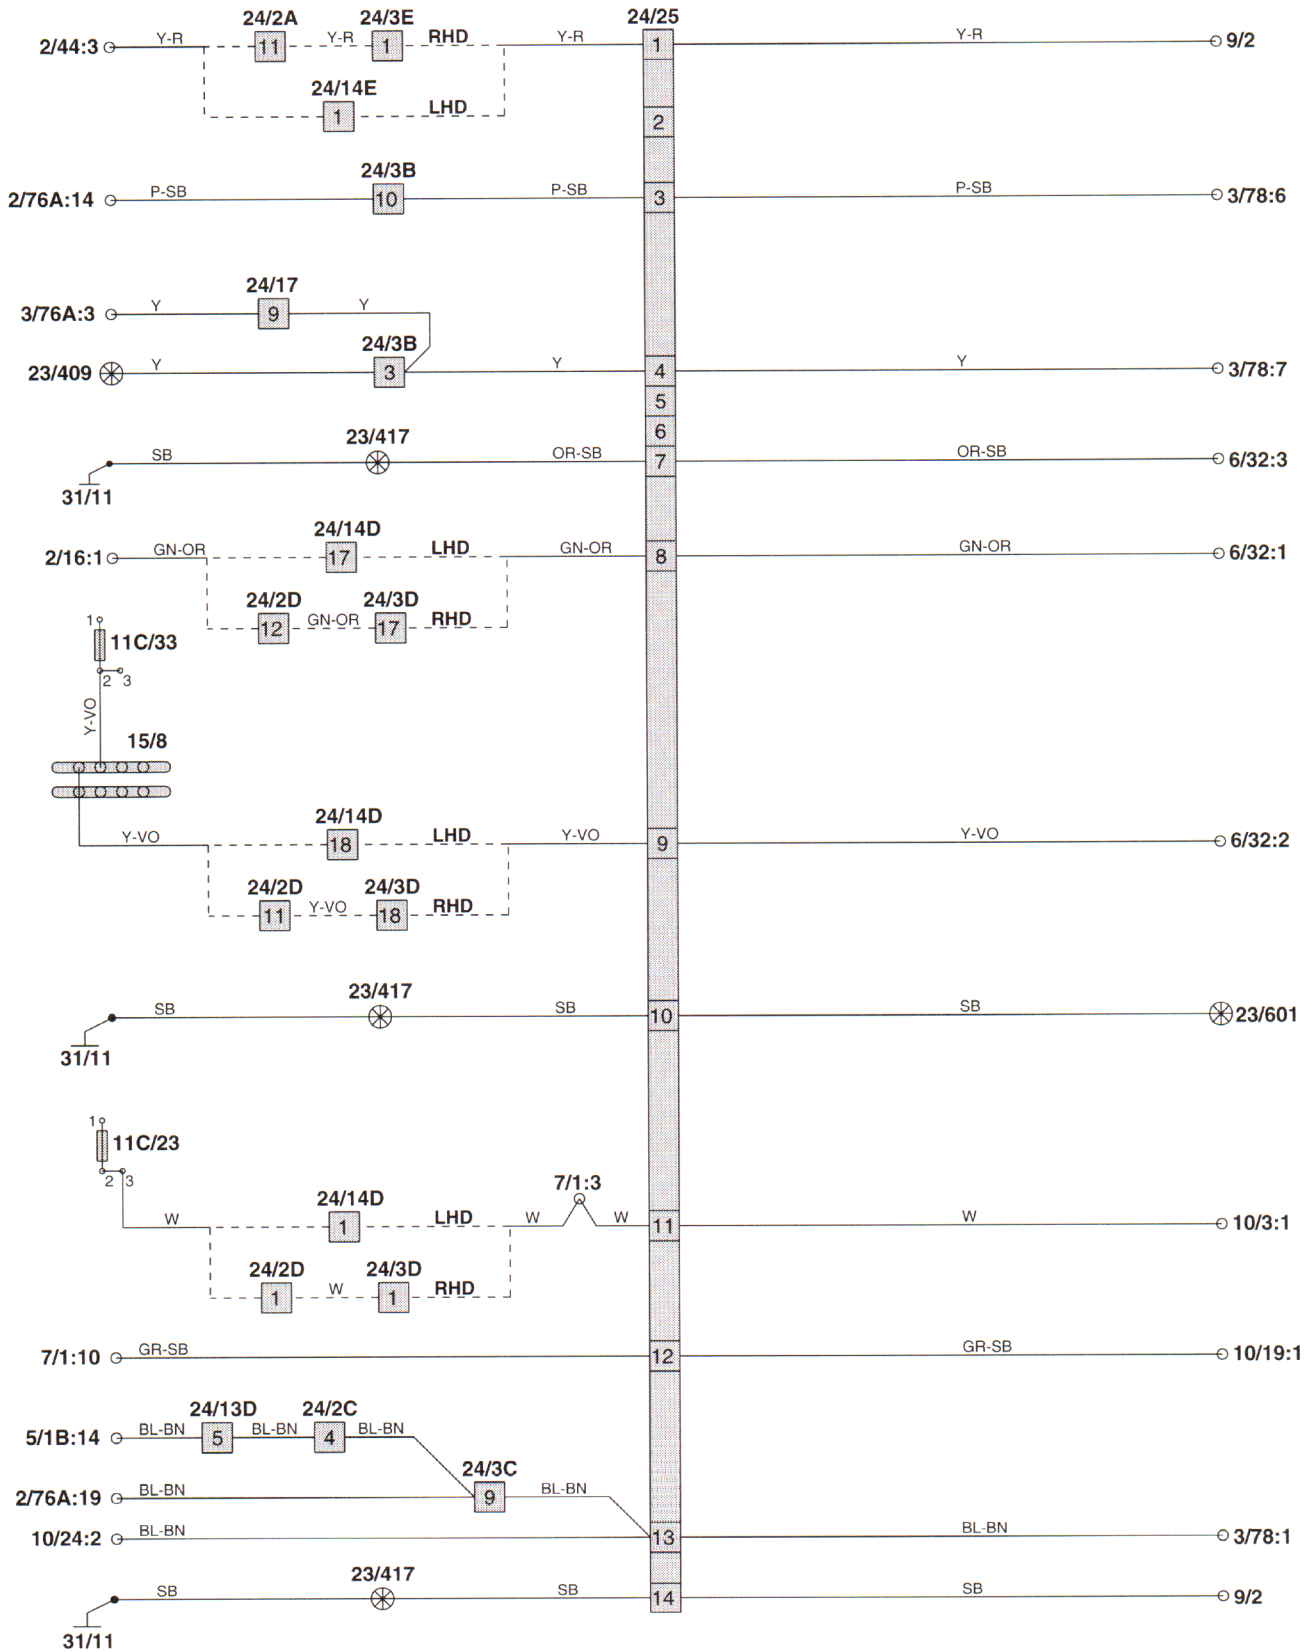


Connectors 24/43 and 24/44

- 24/43** **Black 8-pin (female - male)**
Engine compartment cable harness - Engine cable harness
- 24/44** **Gray 2-pin (female - male)**
Engine compartment cable harness - Engine cable harness

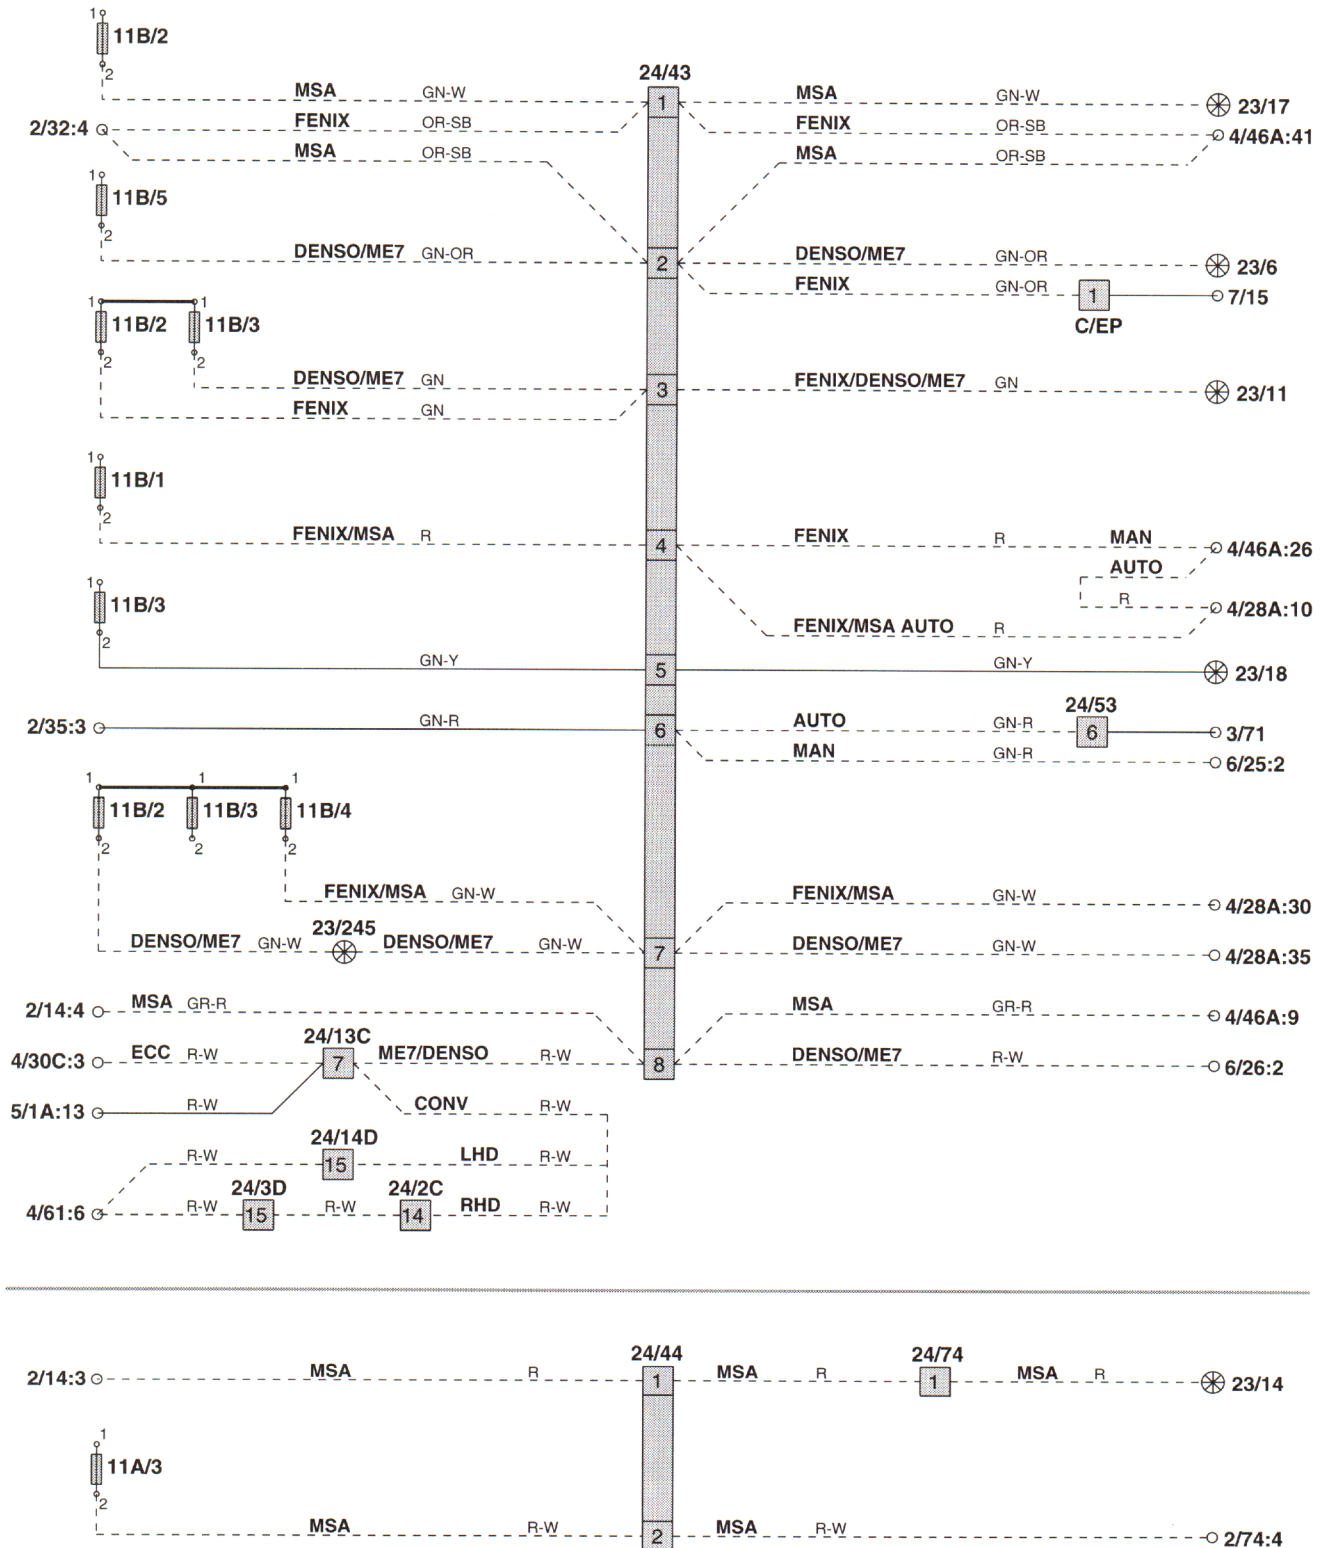


24/50 Black 24-pin (male - female) Firewall cable harness - Driver's door cable harness


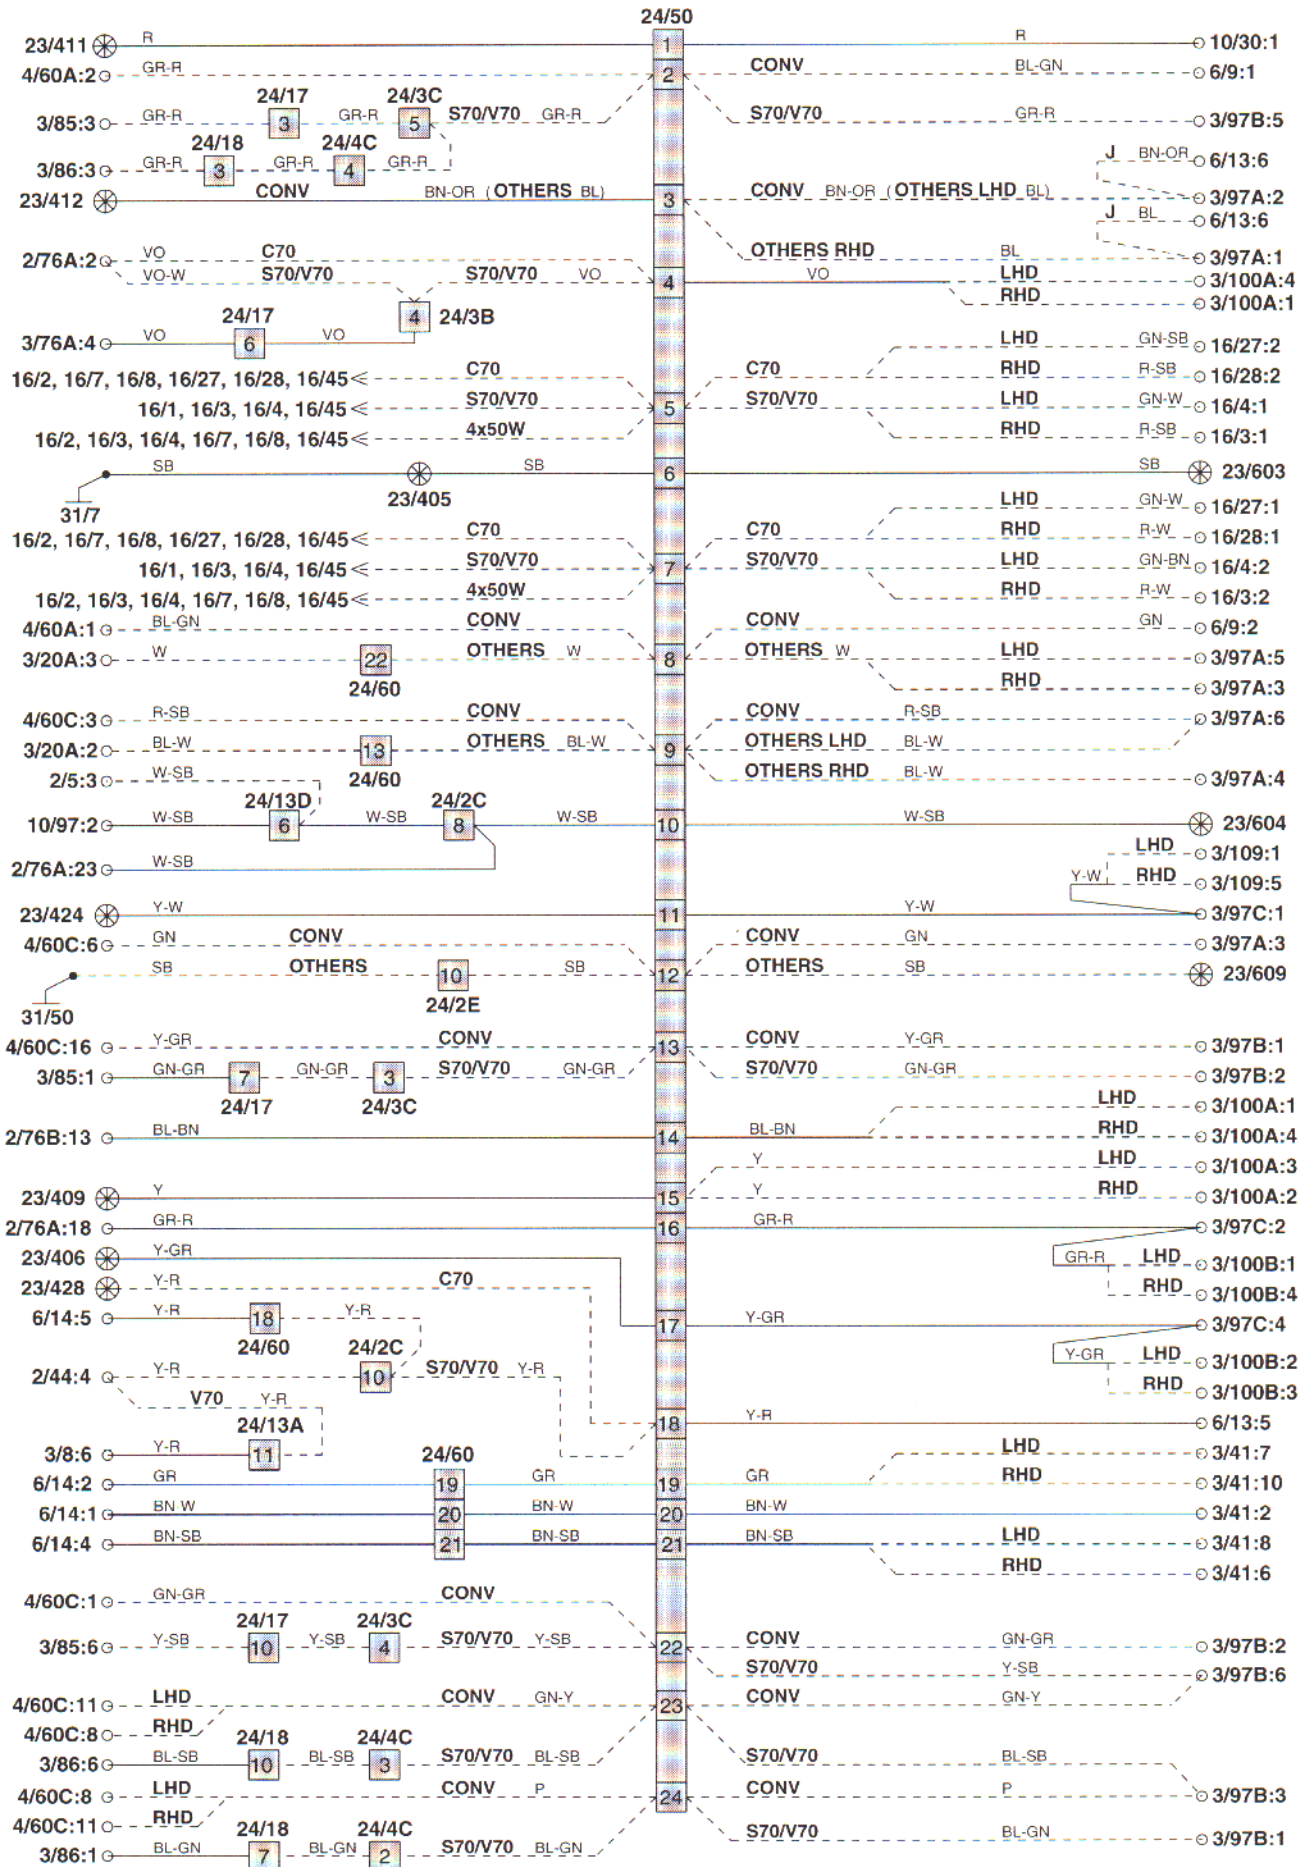


Connector 24/53

24/53 Black 26-pin (female - male) Engine cable harness - AW 50-42

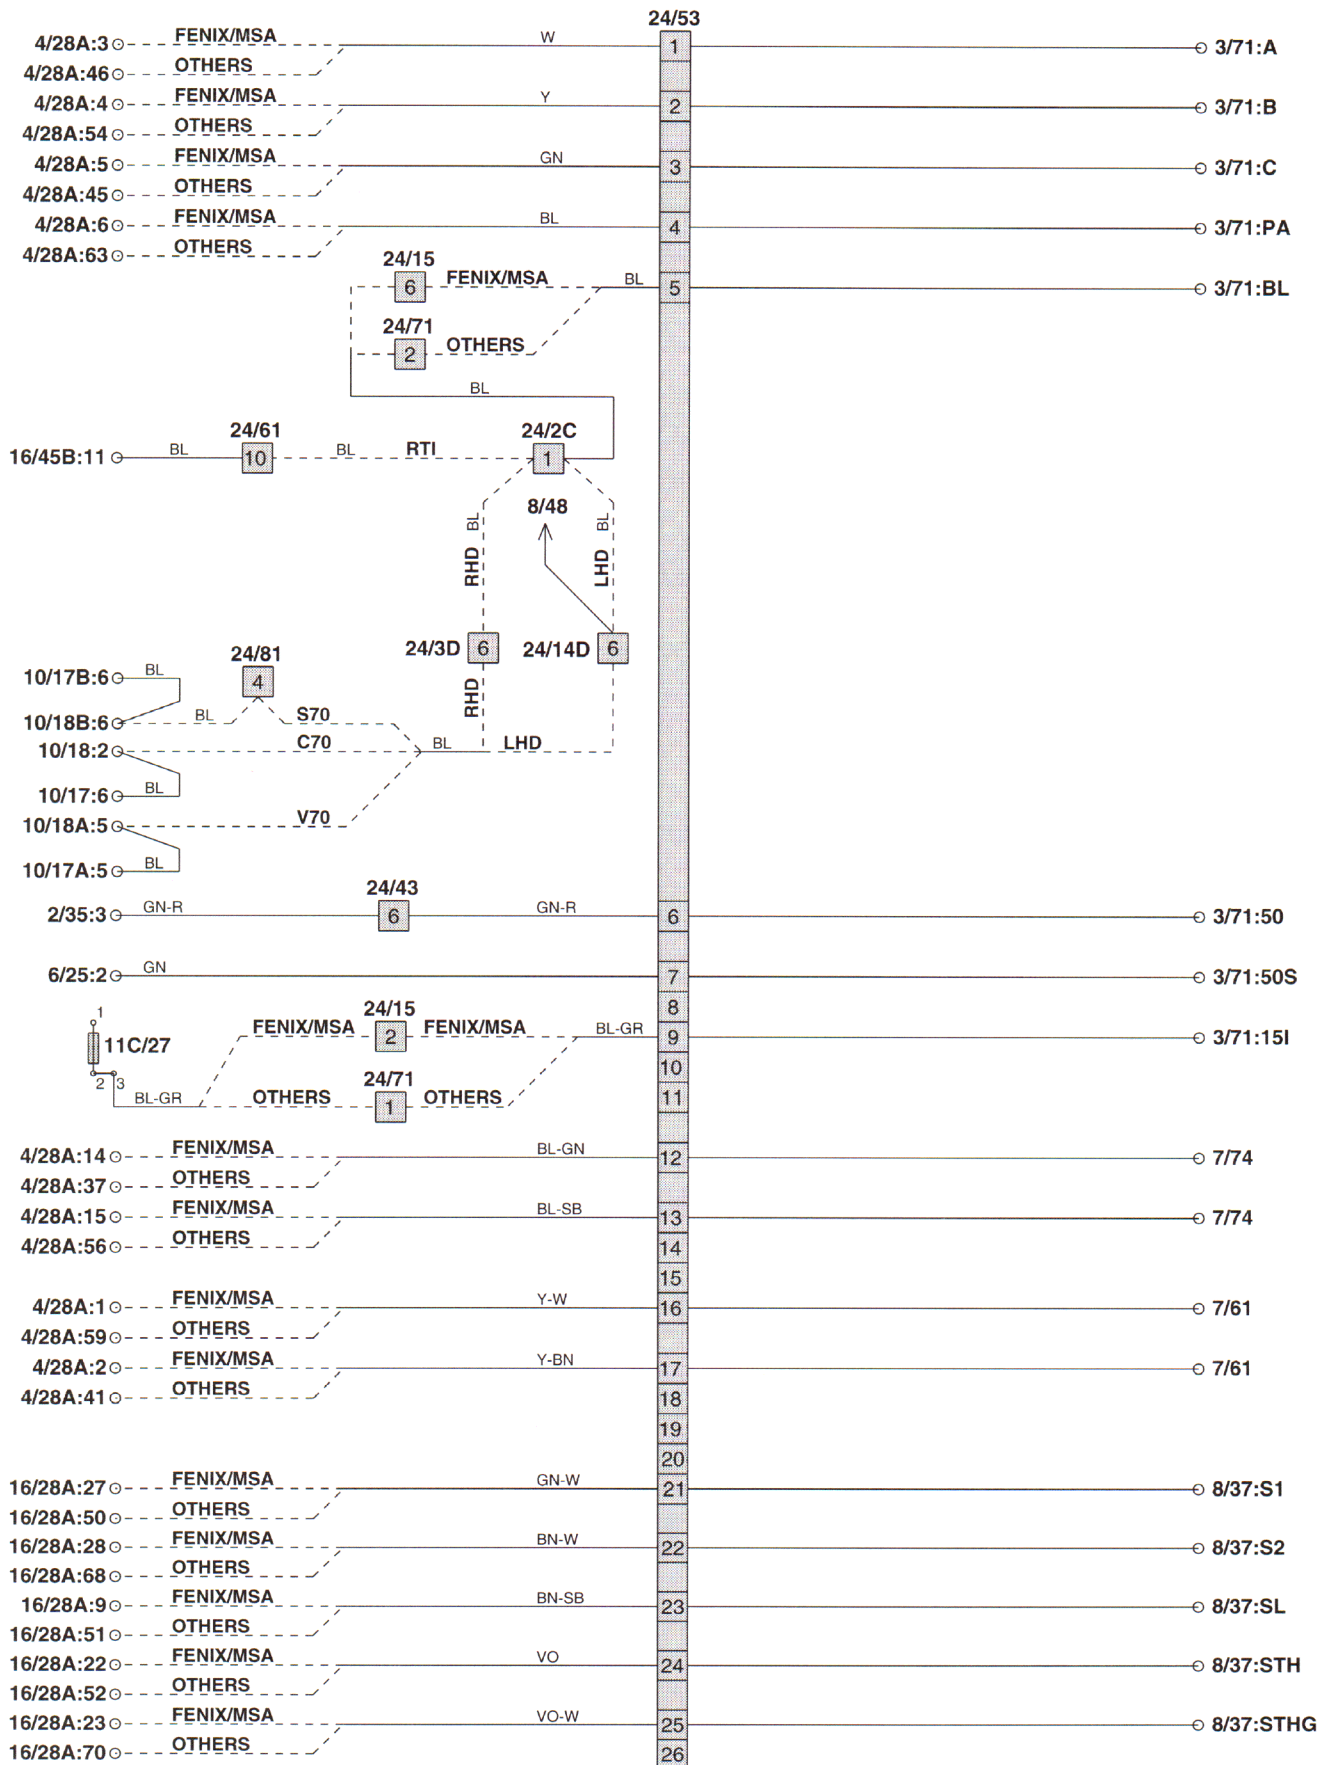


- 24/55** White 11-pin (female - male) (CONV)
Left door sill cable harness - Right door sill cable harness
- 24/59** Natural 16-pin (male - female)
Cable harness RTI - Display RTI

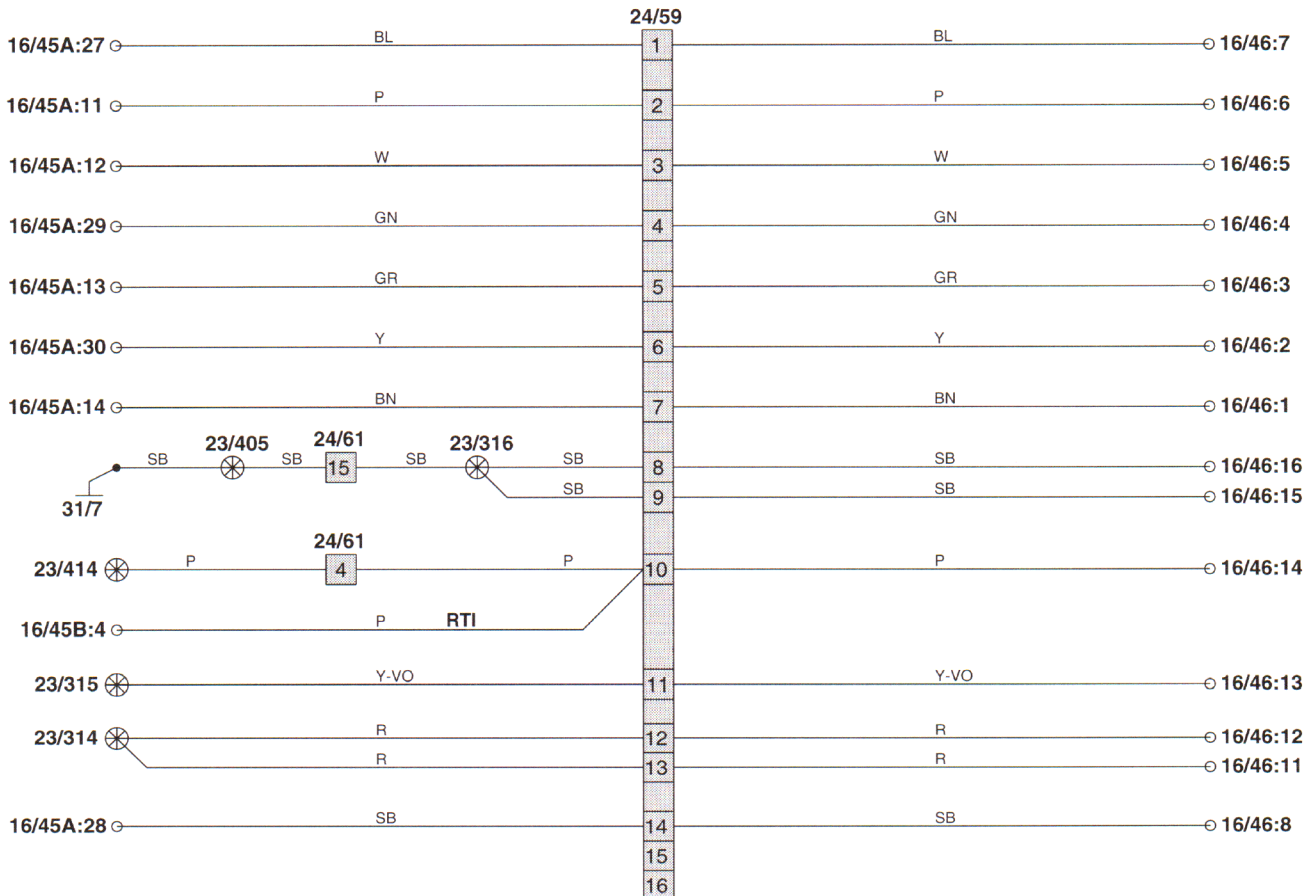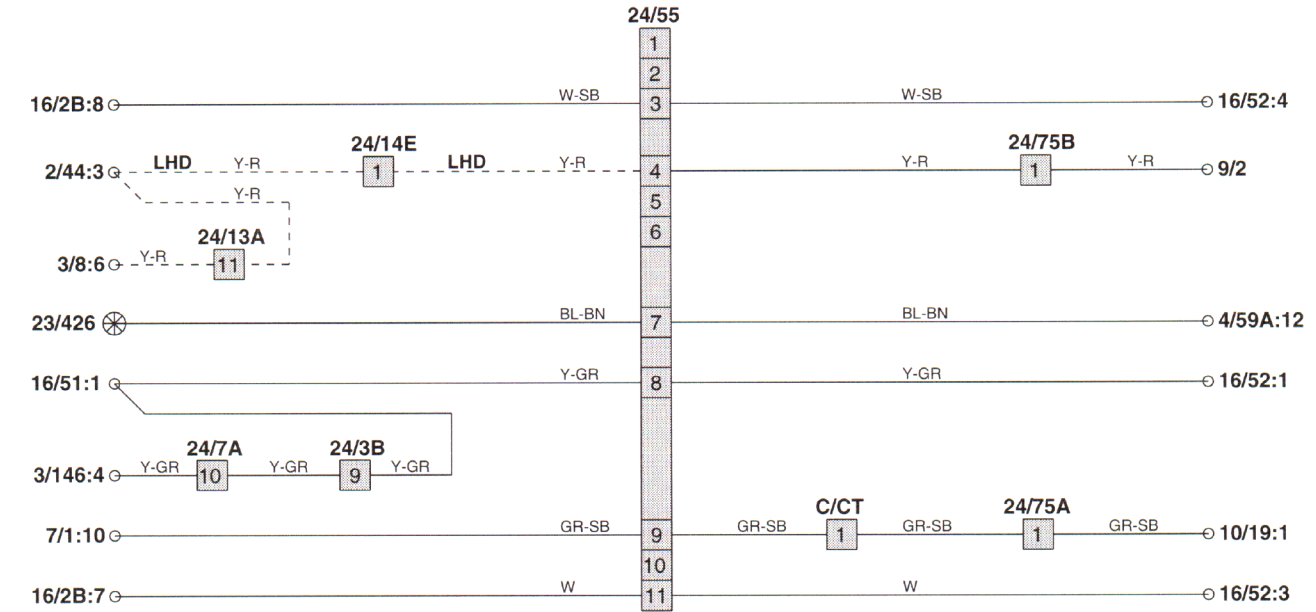


Connector 24/60

24/60 Black 24-pin (male - female) Firewall cable harness - Passenger door cable harness

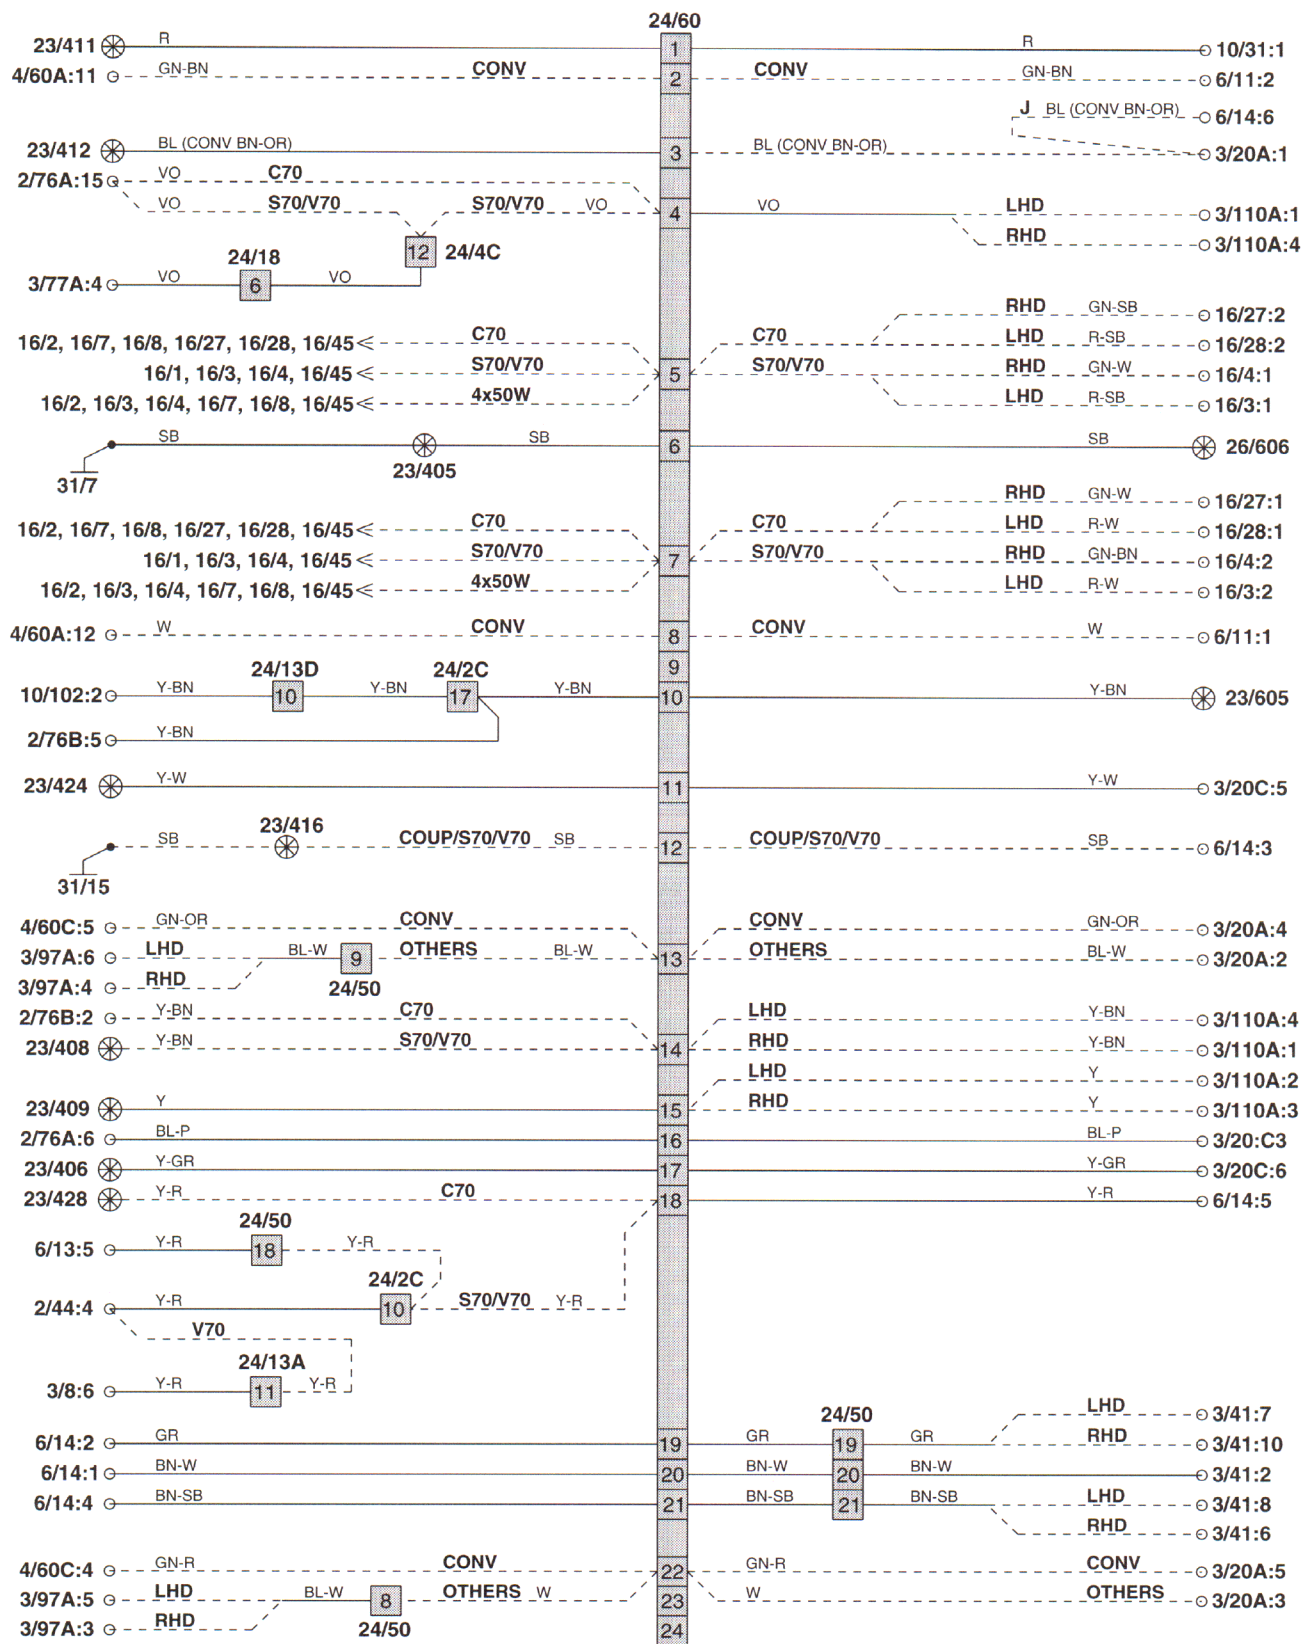


**24/61 White 15-pin (female - male)
Firewall cable harness - RTI cable harness**

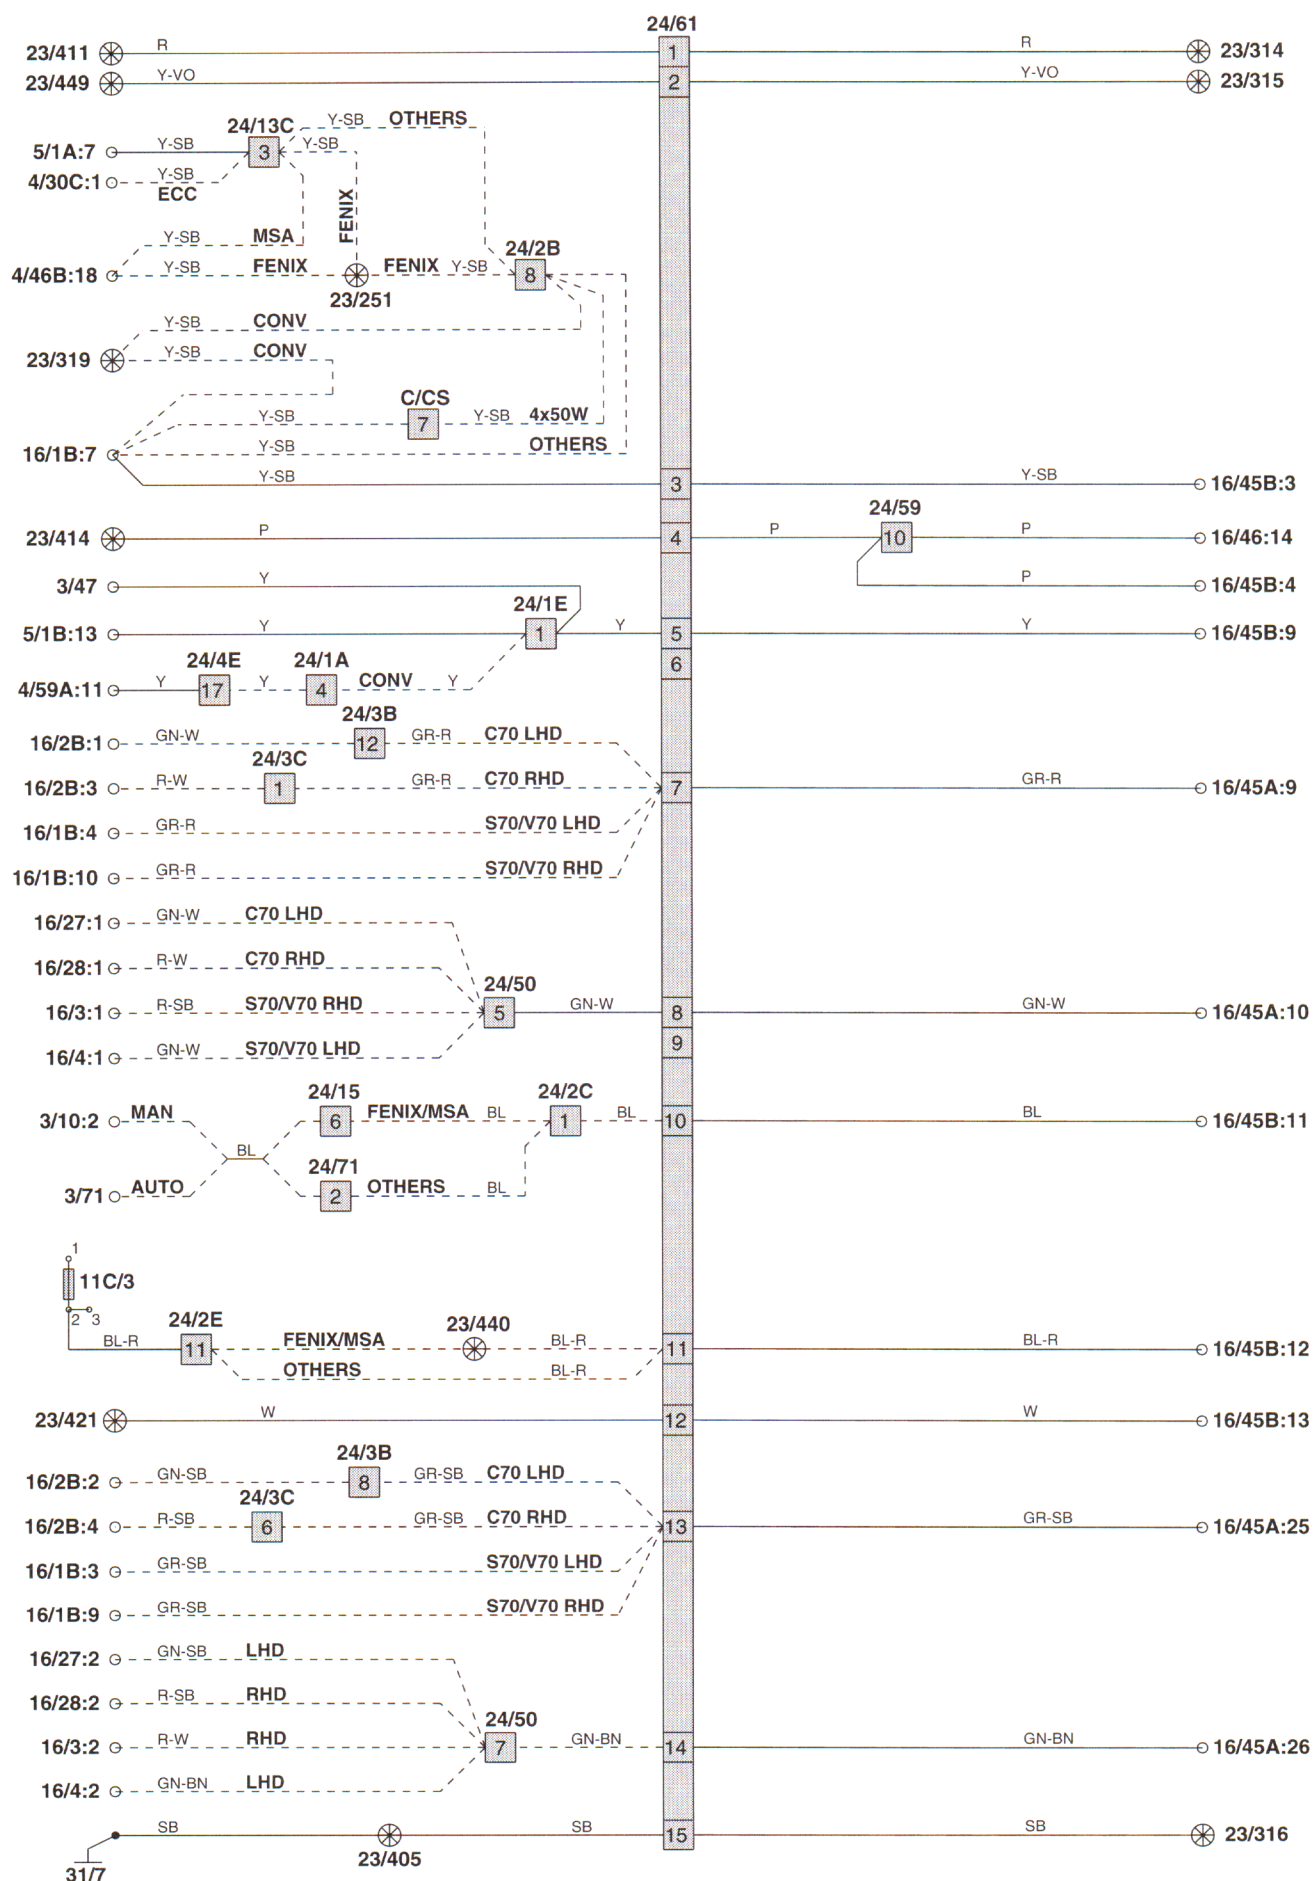


Connector 24/63

24/63 Light Grey 14-pin (female - male) Firewall cable harness - A/C cable harness

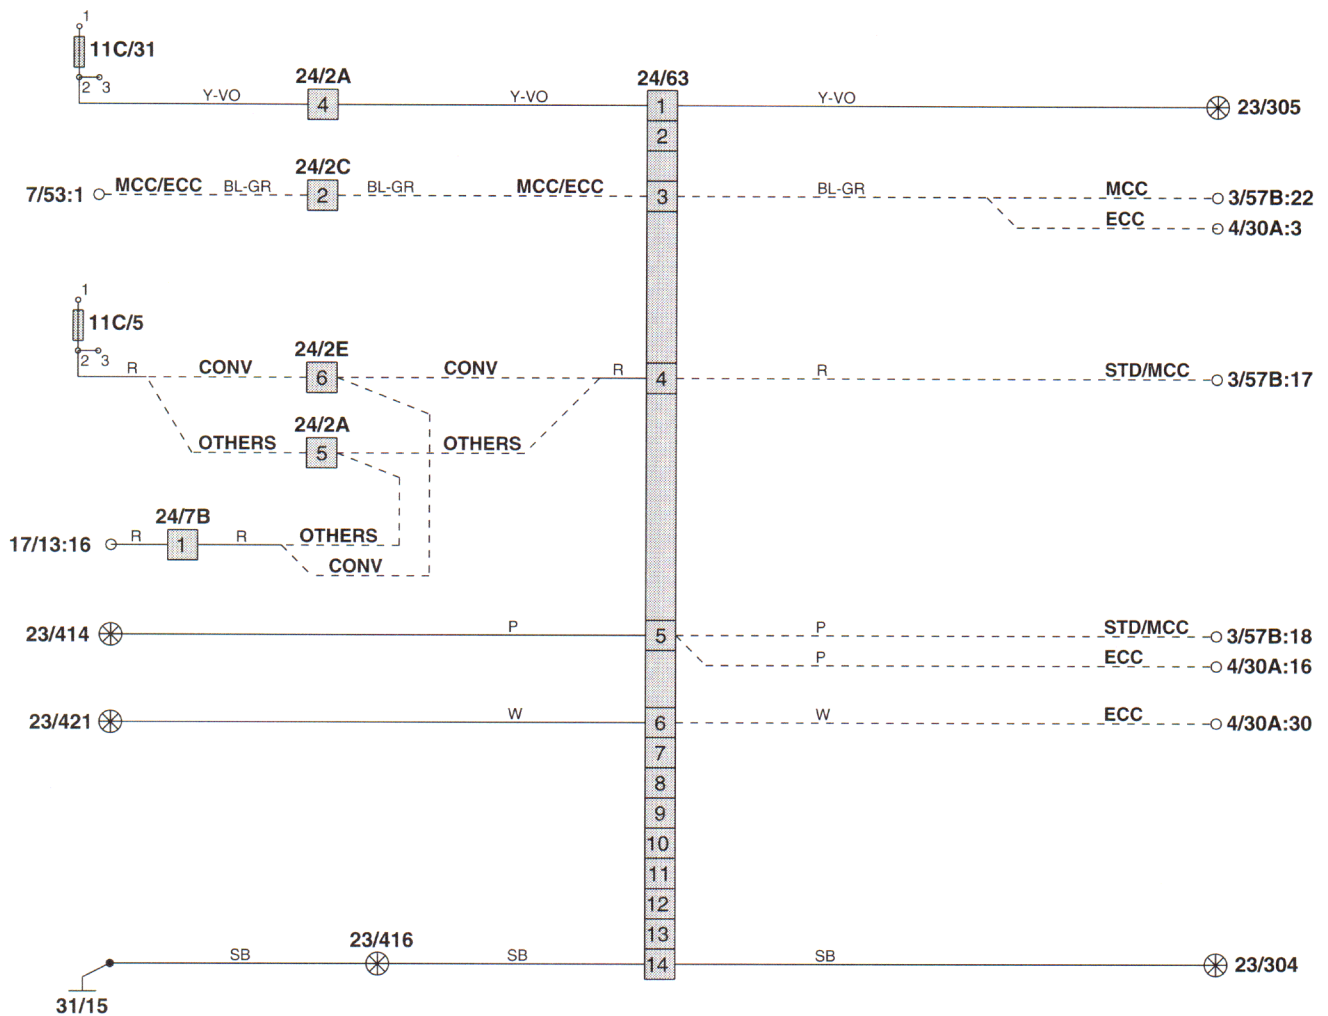


24/67 Natural 6-pin (female - male)
Left door sill cable harness - Tailgate cable harness



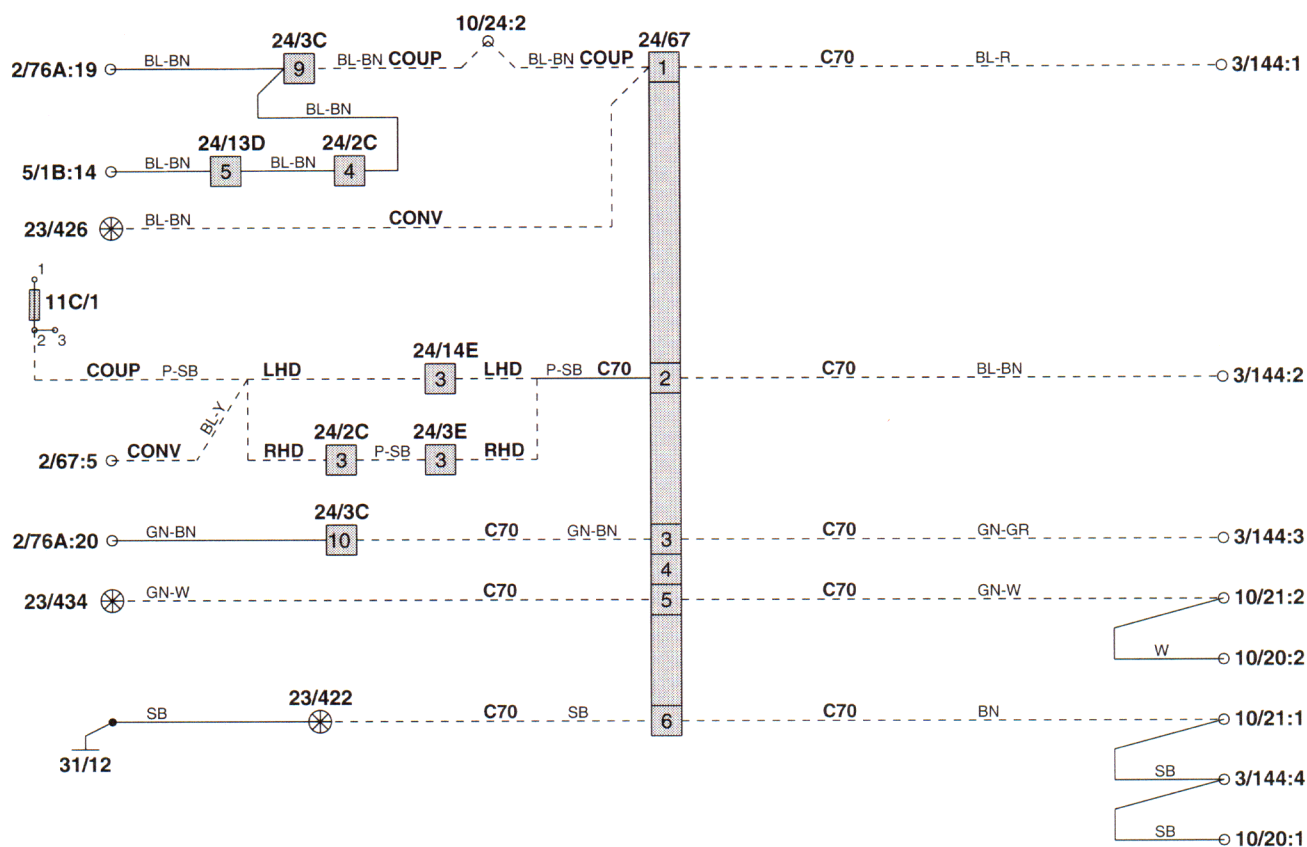


Connector 24/71

24/71 Gray 6-pin (female - male) Engine compartment cable harness - Engine cable harness left side




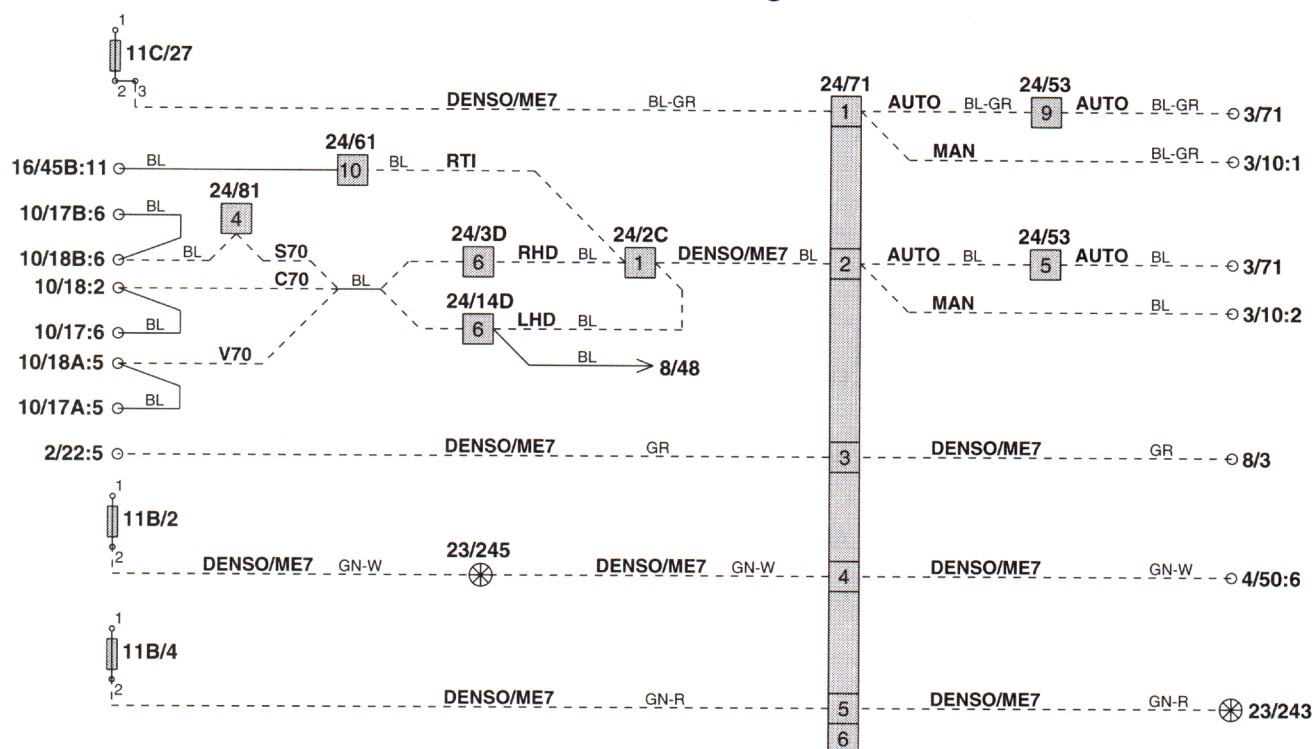





- 24/75A** White 2-pin (female - male)
Right door sill cable harness - Cable harness soft-top
- 24/75B** Gray 2-pin (female - male)
Right door sill cable harness - Cable harness soft-top
- 24/91** Black 2-pin (female - male)
Left door sill cable harness - Right door sill cable harness

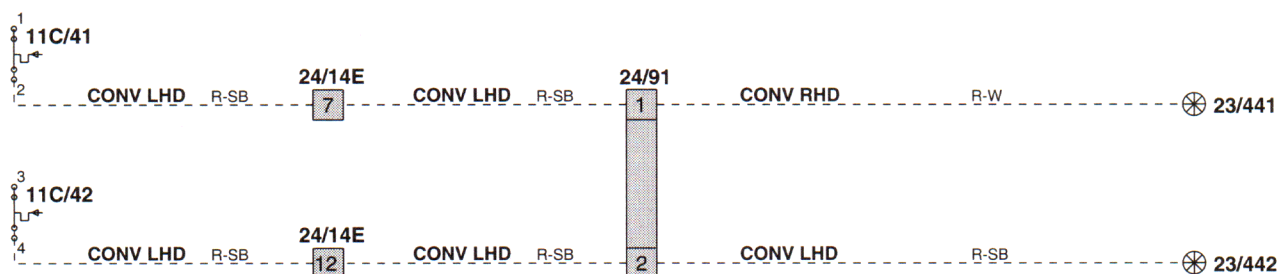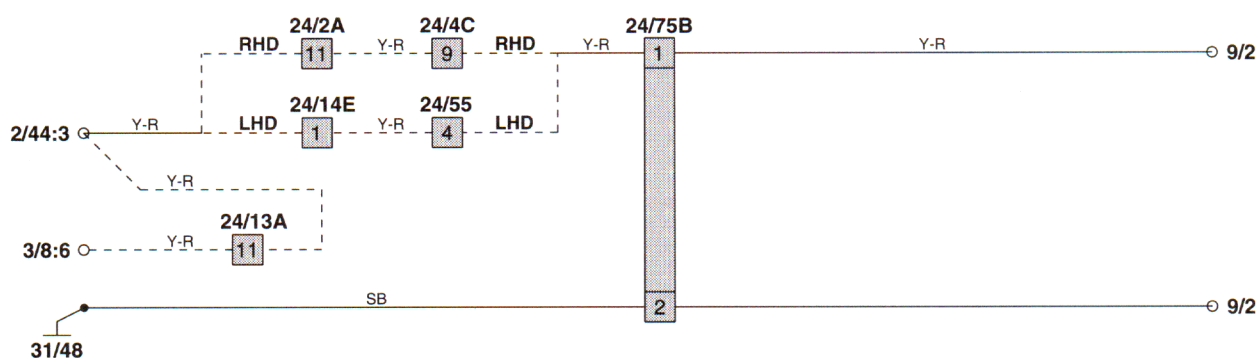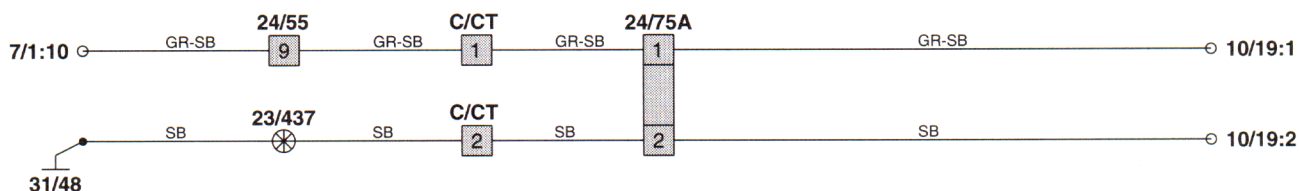




Connectors 24/94 and 24/95





- 24/94A** Natural 6-pin (female - male)
Firewall cable harness - Driver's seat cable harness
- 24/94B** White 3-pin (female - male)
Firewall cable harness - Driver's seat cable harness
- 24/95A** Natural 6-pin (female - male)
Firewall cable harness - Passenger seat cable harness
- 24/95B** White 3-pin (female - male)
Firewall cable harness - Passenger seat cable harness

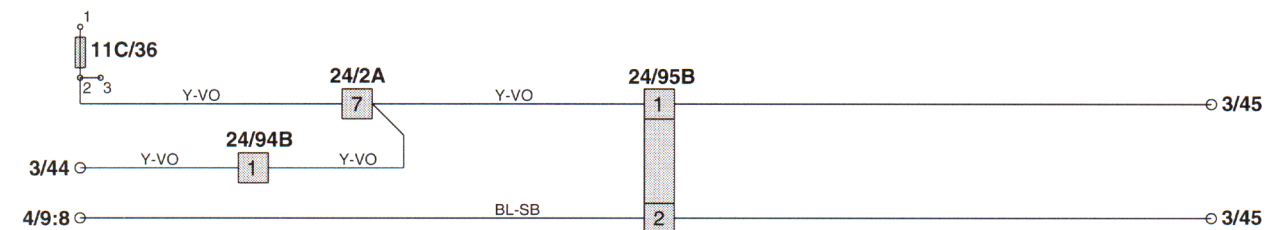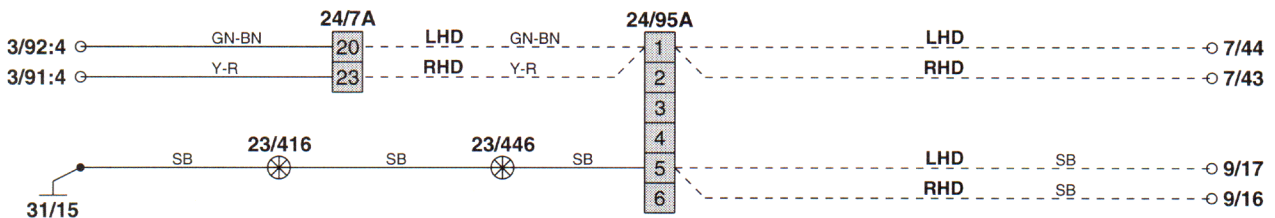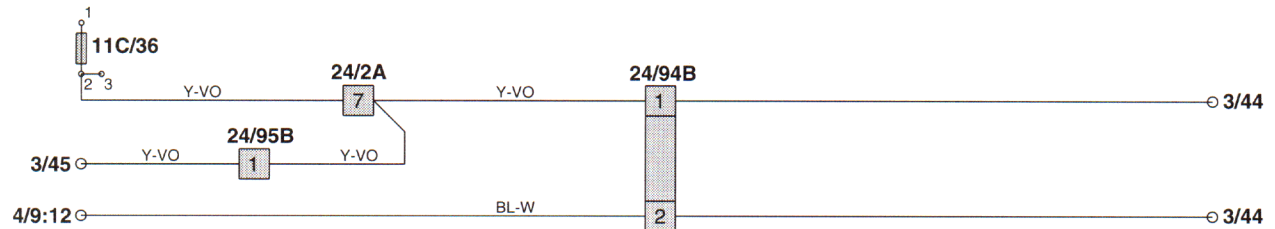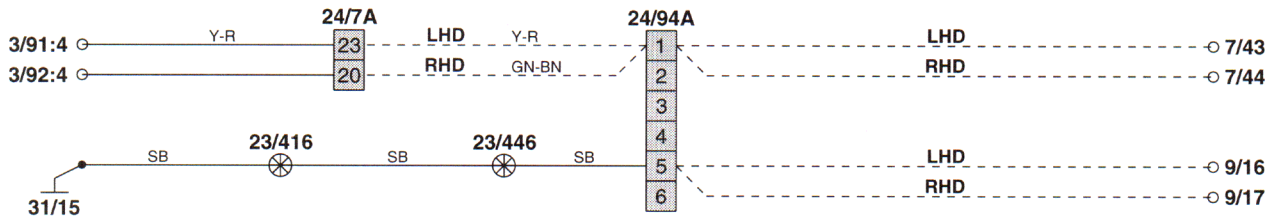

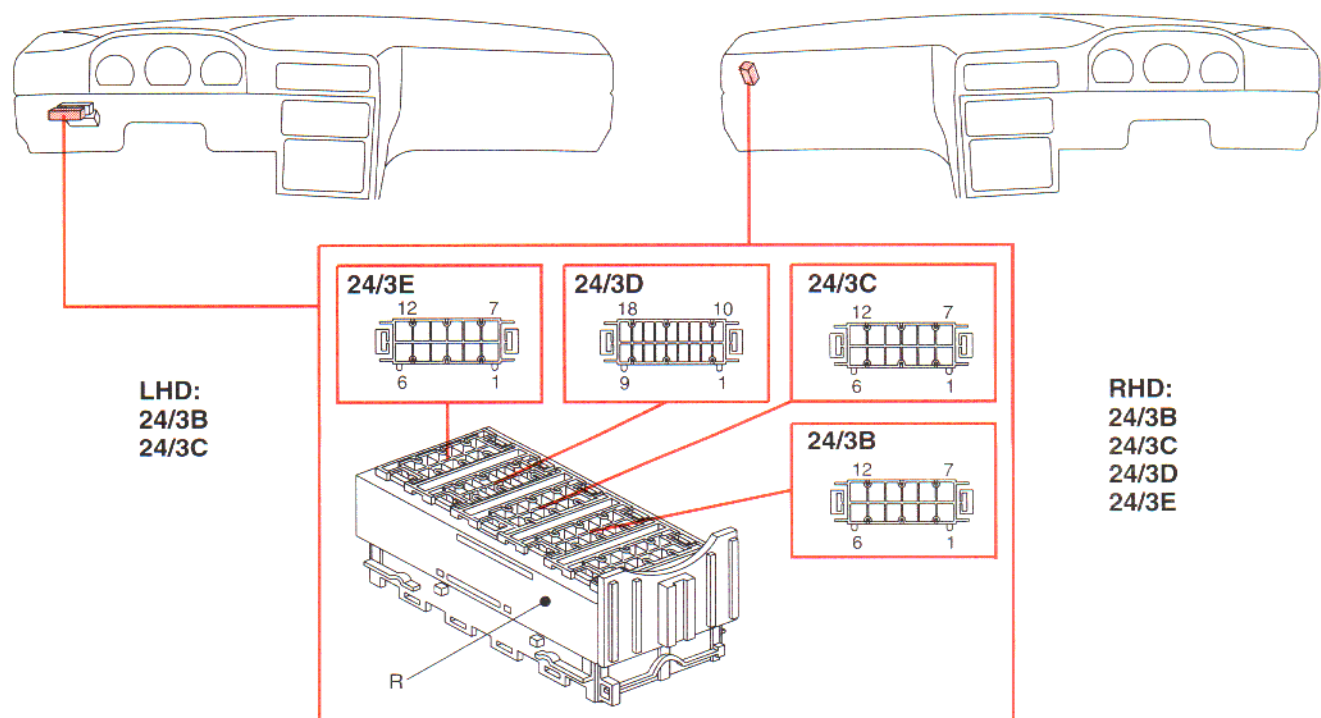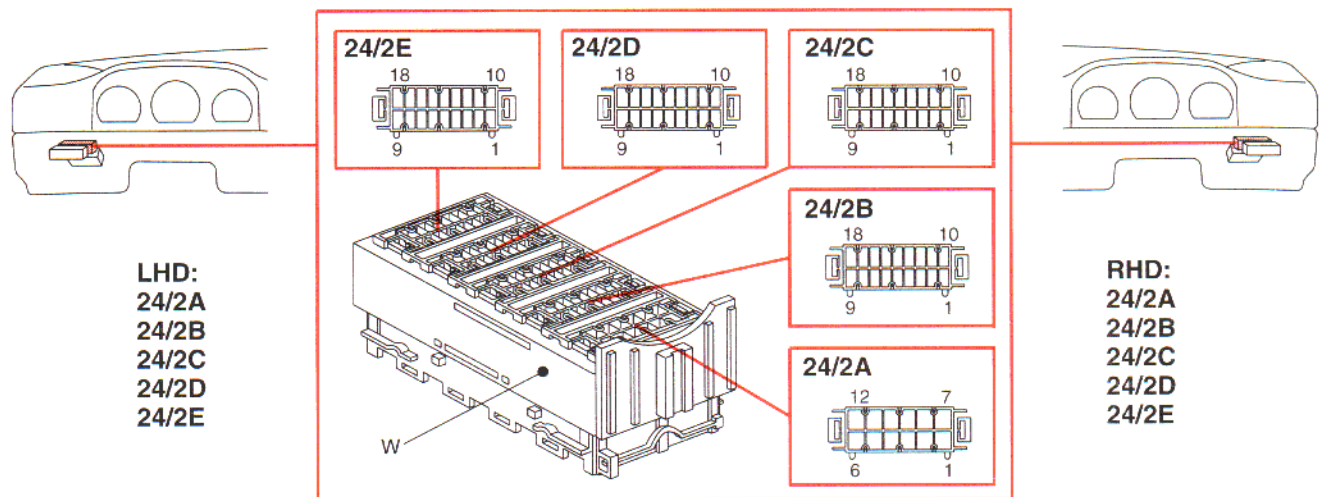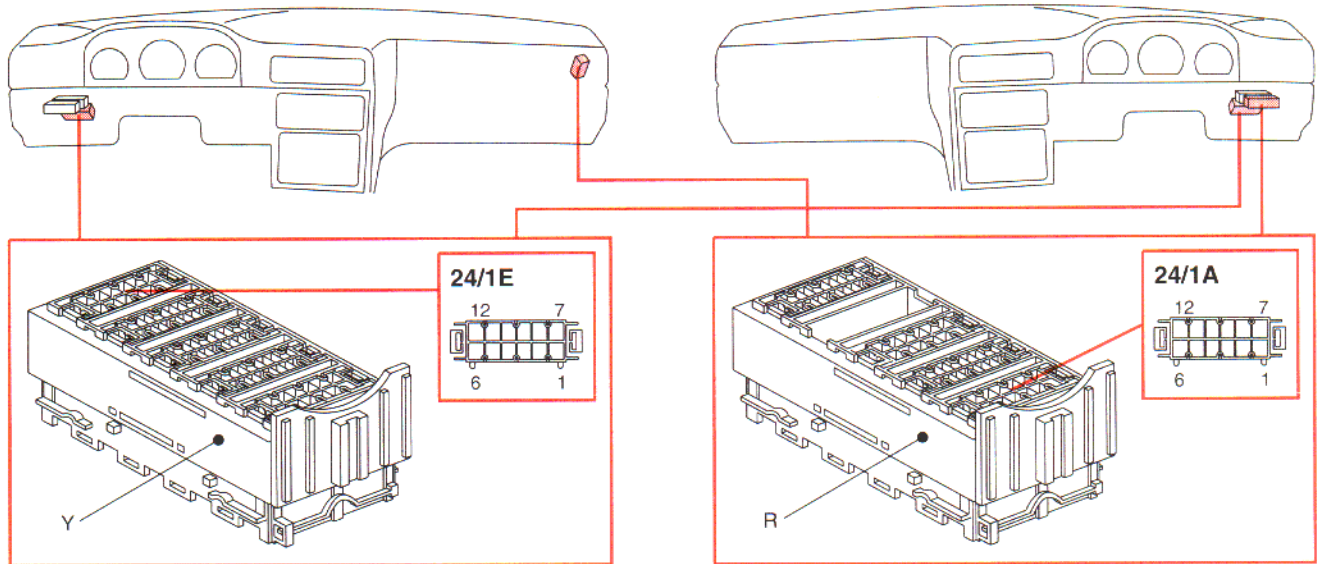


Connector

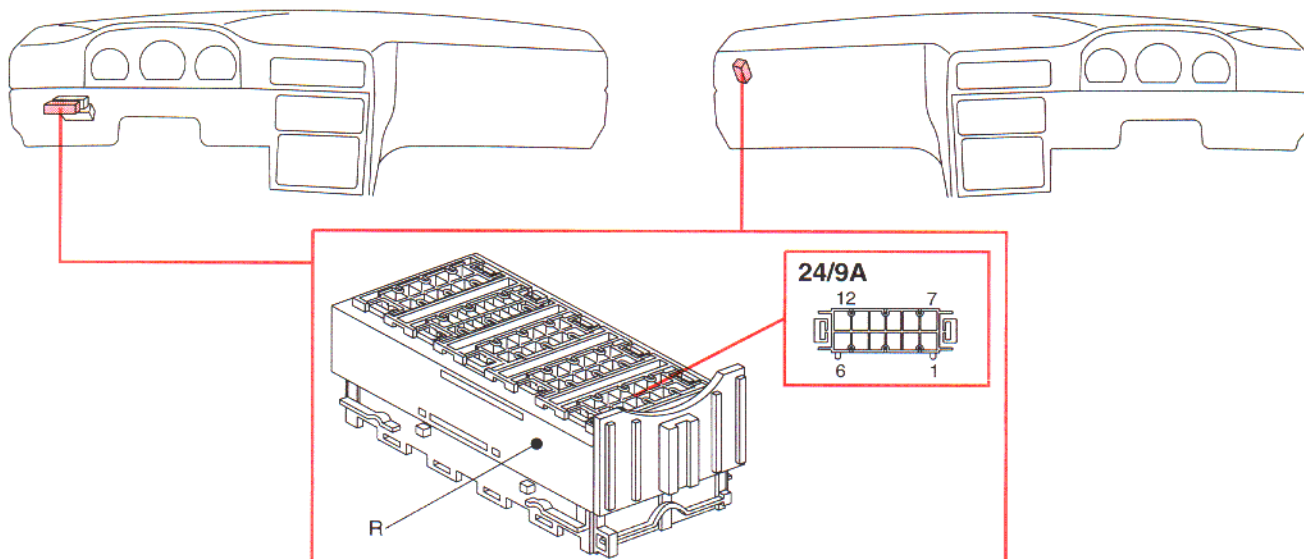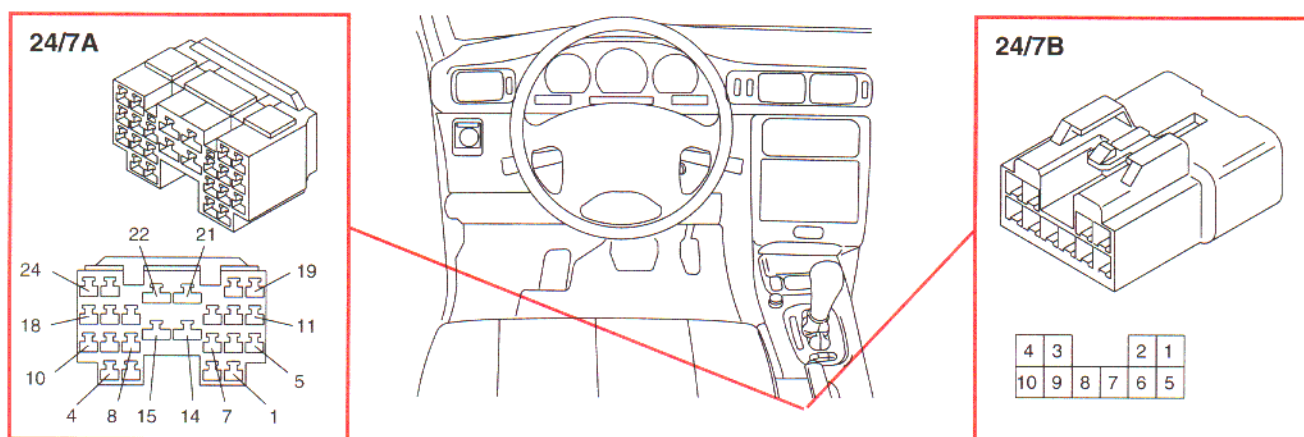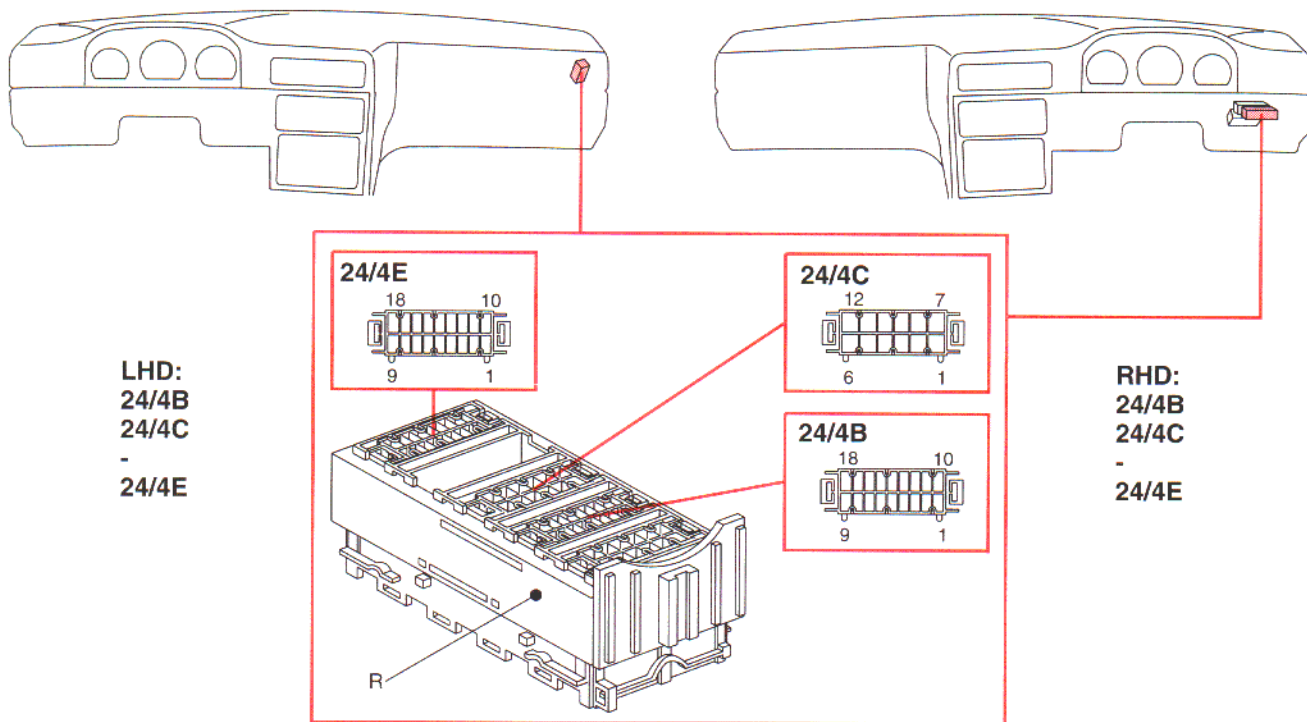


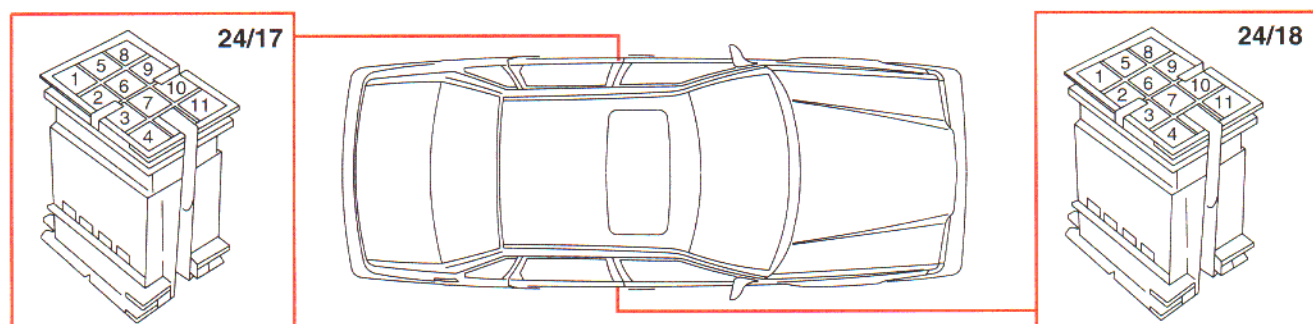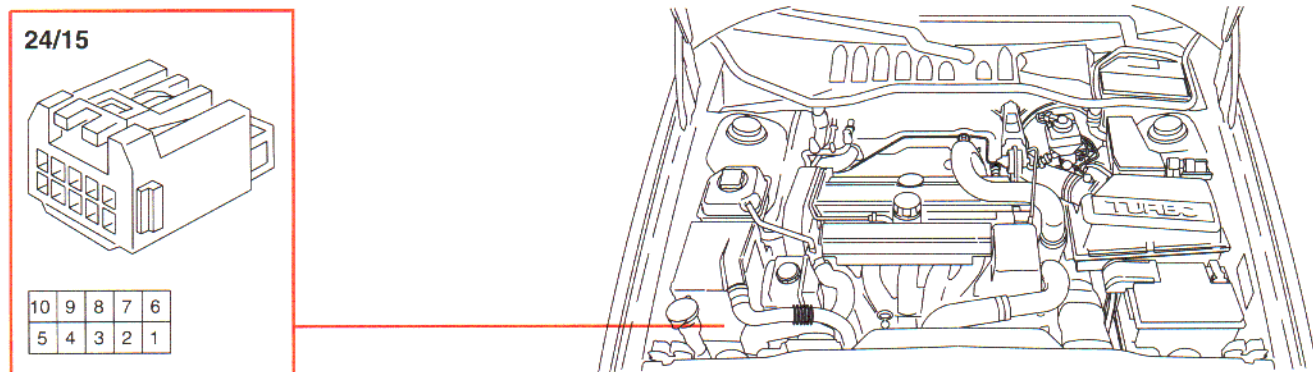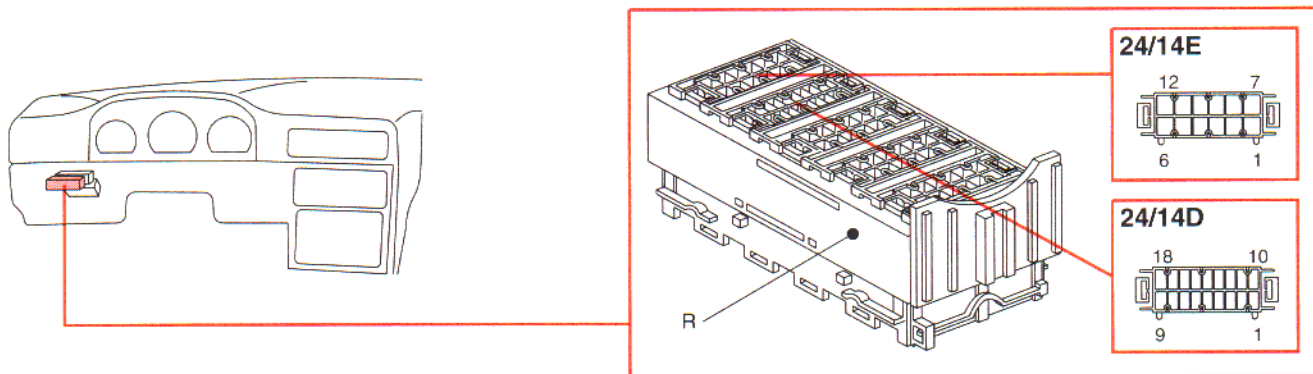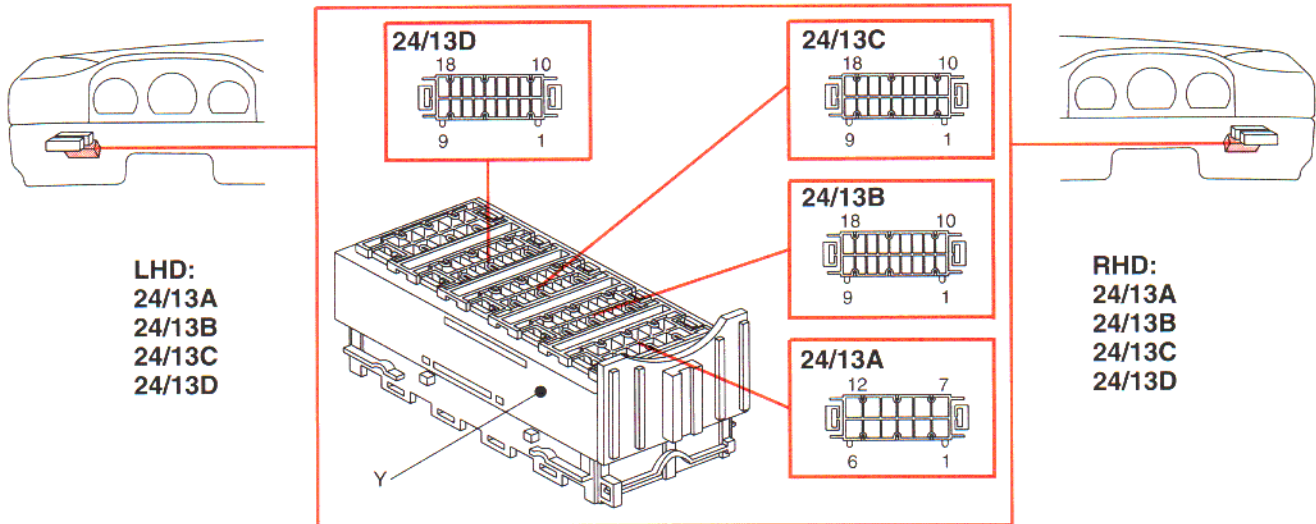

Connector



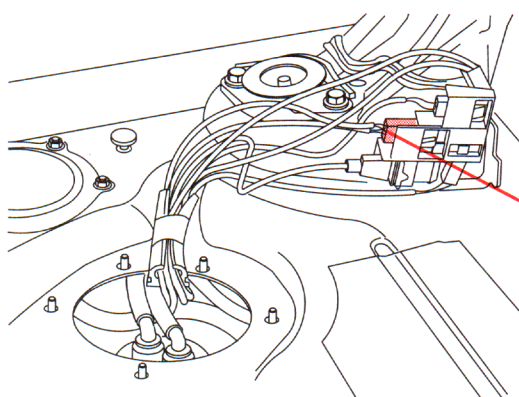


S70, C70

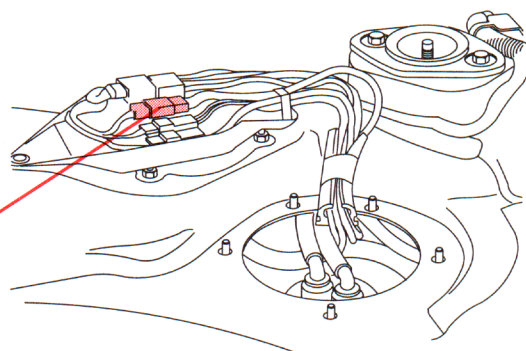


V70

24/19

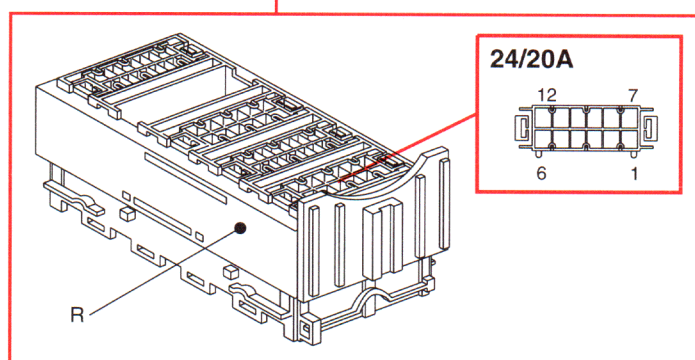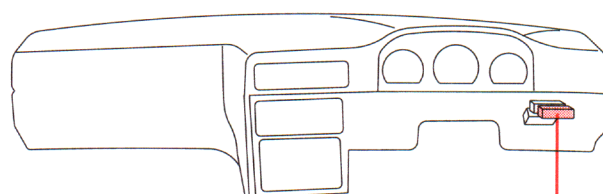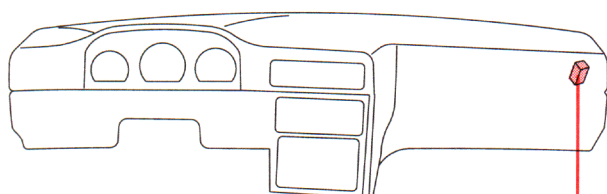


24/20A




R



24/25

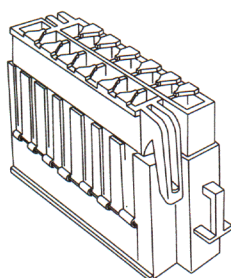



1	2
3	4
5	6
7	8
9	10
11	12
13	14

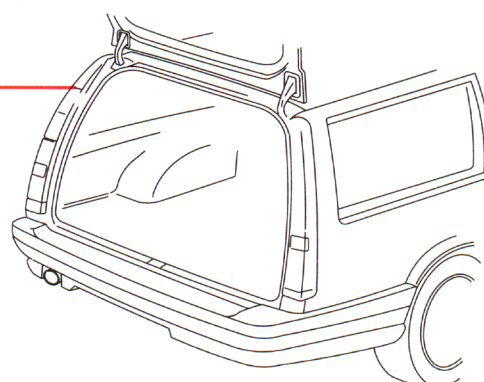



24/44

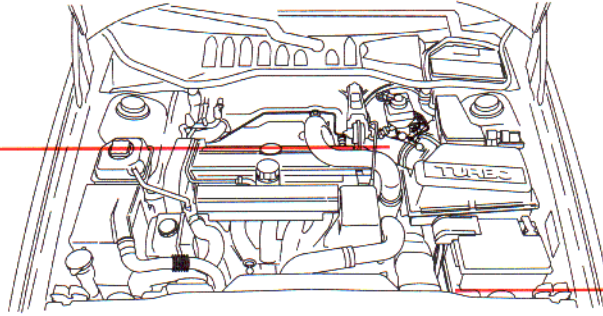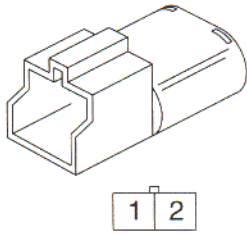



24/43

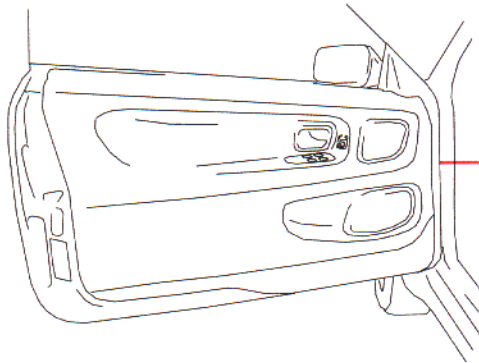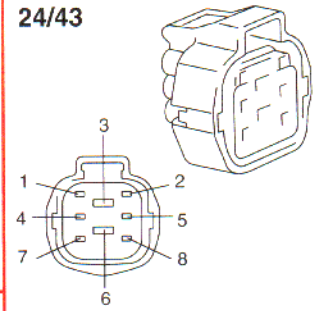


24/50

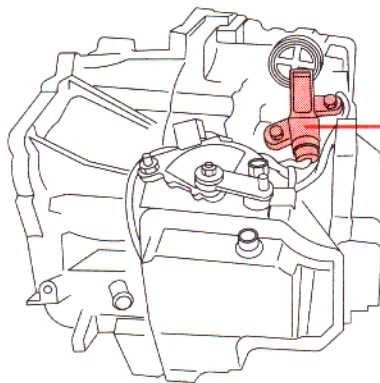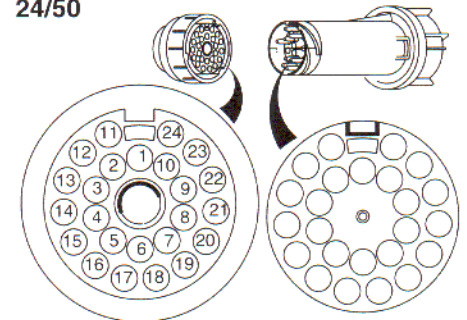


24/53

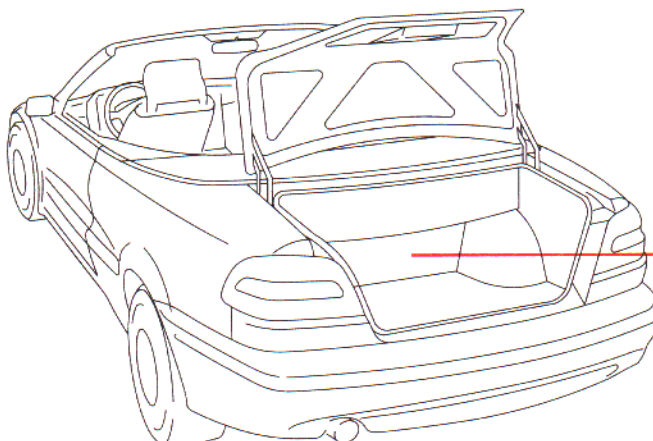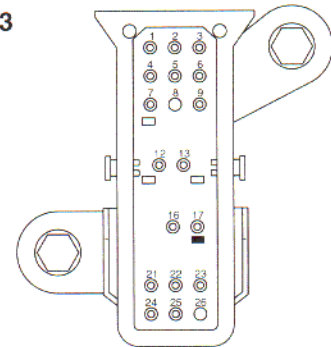

24/55

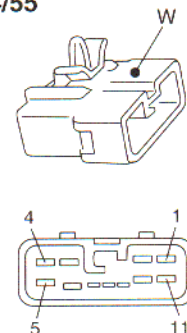

Connector

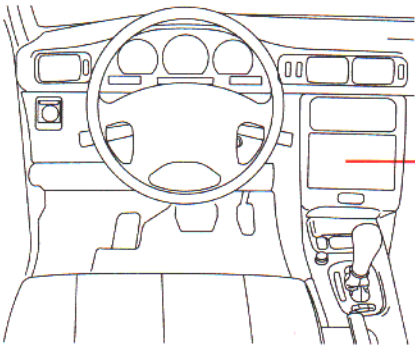

24/59


4	3	
10	9	8
16	15	14

	2	1
7	6	5
13	12	11

24/60

24/61

1	2			3	
4	5	6	7	8	9
10	11	12	13	14	15

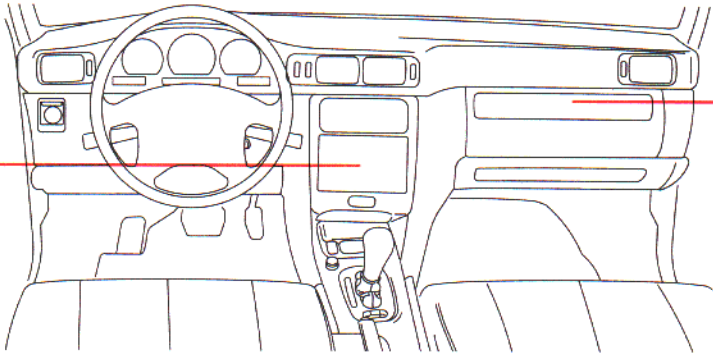


24/63



1	2	3	4	5	6	7
8	9	10	11	12	13	14

24/67



1				2
3	4	5	6	

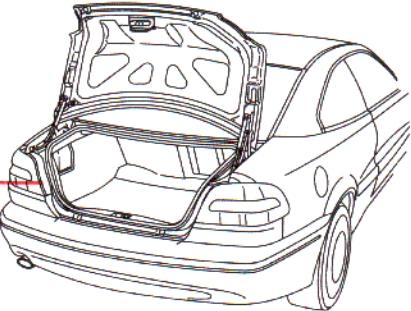


24/71

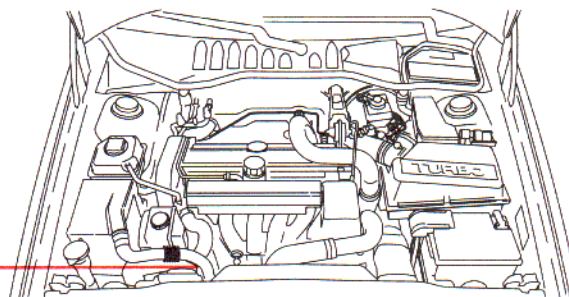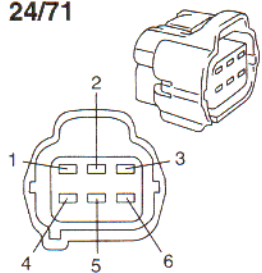


24/75A

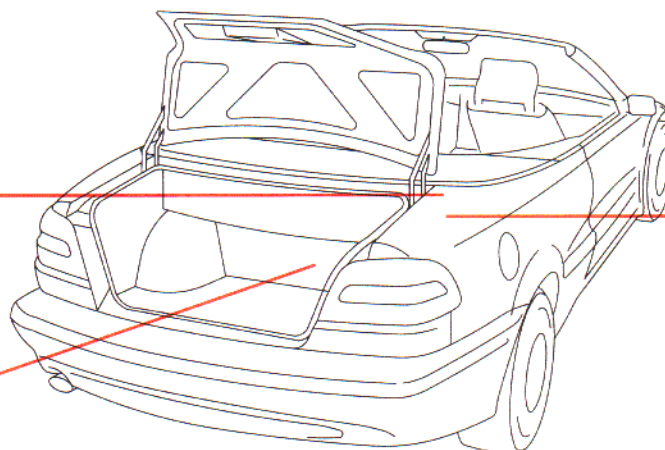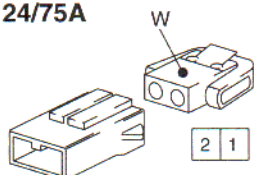



24/75B

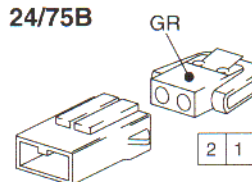



24/91

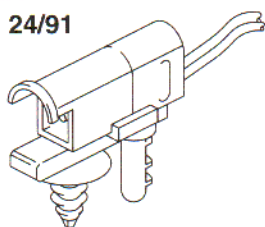



24/95A
(RHD 24/94A)

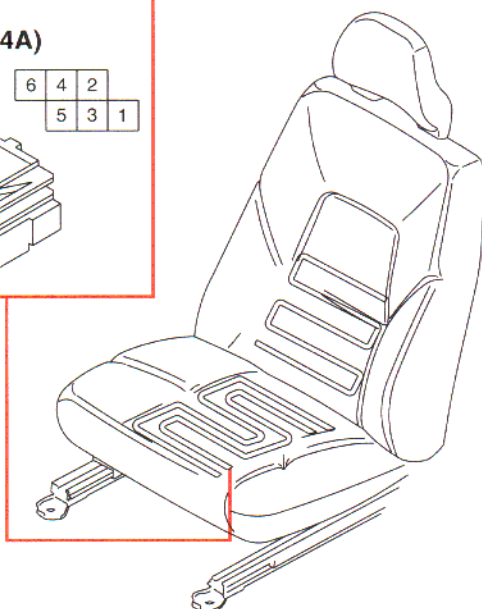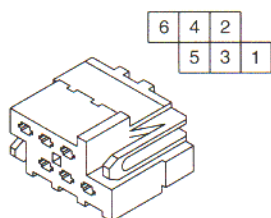

24/94A
(RHD 24/95A)

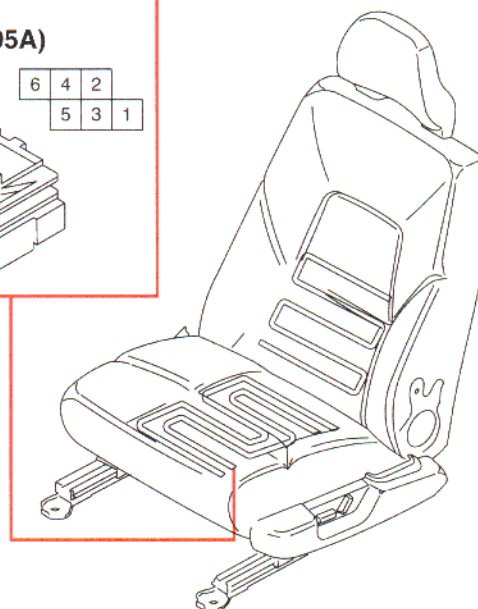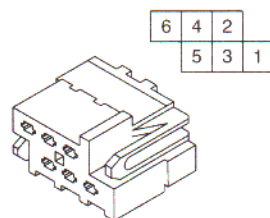

24/94B
(RH 24/95B)

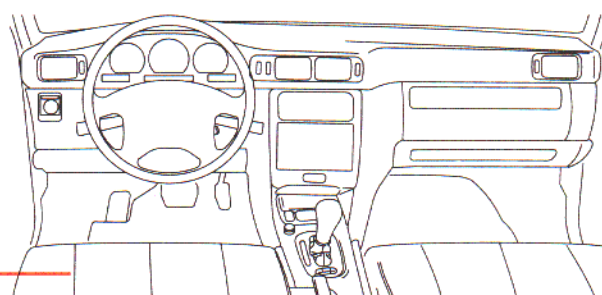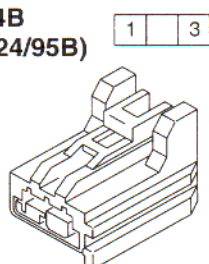


23/8 (Engine cable harness, MSA)

23/9 (Engine cable harness, FENIX)


23/11 (Engine cable harness, FENIX/DENSO/ME7)

23/12 (Engine cable harness, MSA)


23/8 MSA

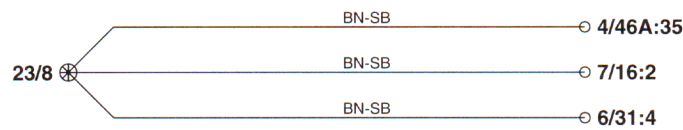


23/9 FENIX

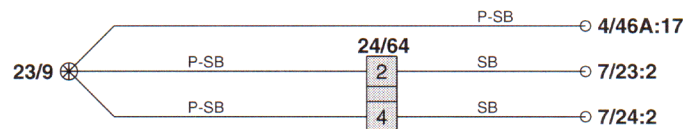

23/11 FENIX/DENSO/ME7

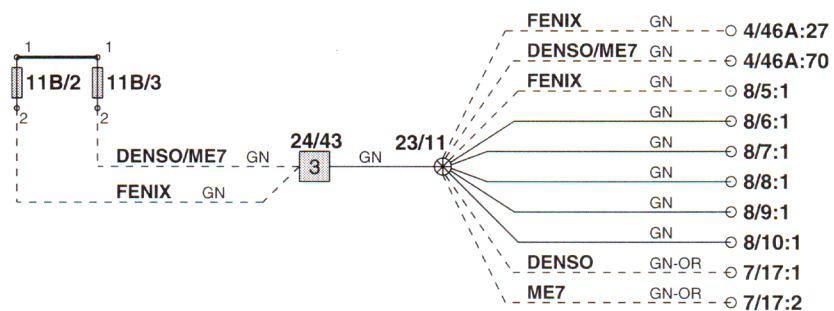

23/12 MSA

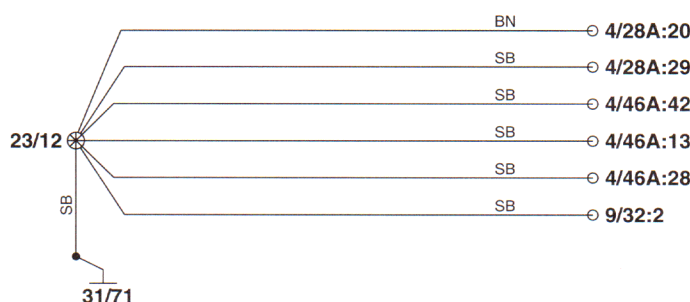

Junction points


23/14 (Adapter wiring glow plugs, MSA)

23/16 (Engine cable harness, MSA)


23/17 (Engine cable harness, MSA)

23/18 (Engine cable harness, MSA)


23/14 MSA

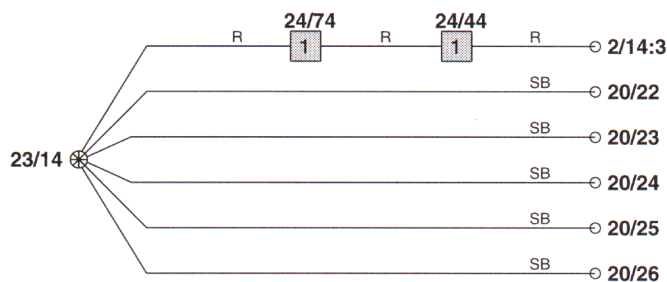


23/16 MSA

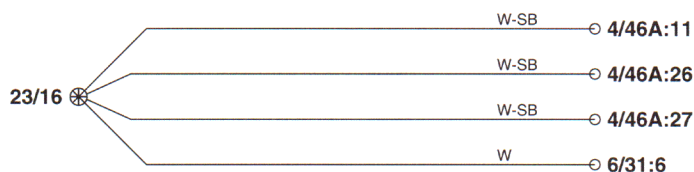

23/17 MSA

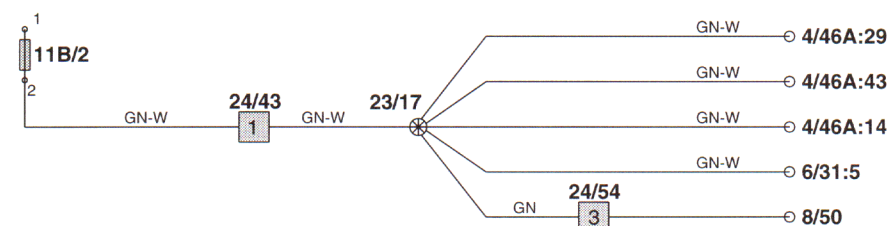

23/18 MSA

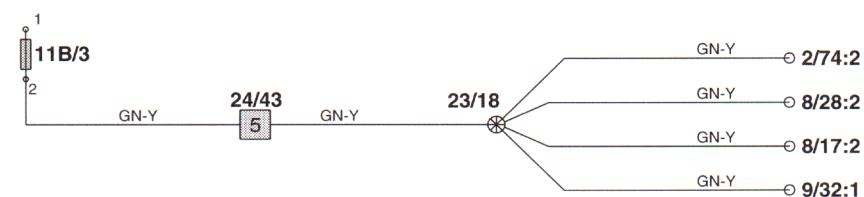


23/22 (Engine cable harness, DENSO)

23/201 (Engine compartment cable harness, FENIX/MSA)


23/203 (Engine compartment cable harness)

23/207 (Engine compartment cable harness, C70)


23/22 DENSO

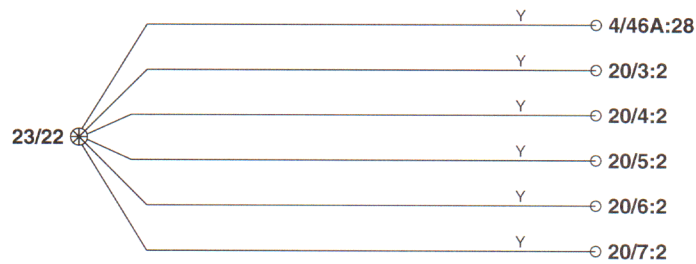


23/201 FENIX/MSA

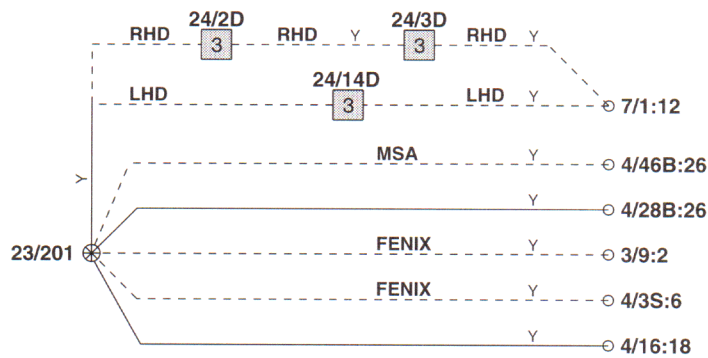

23/203

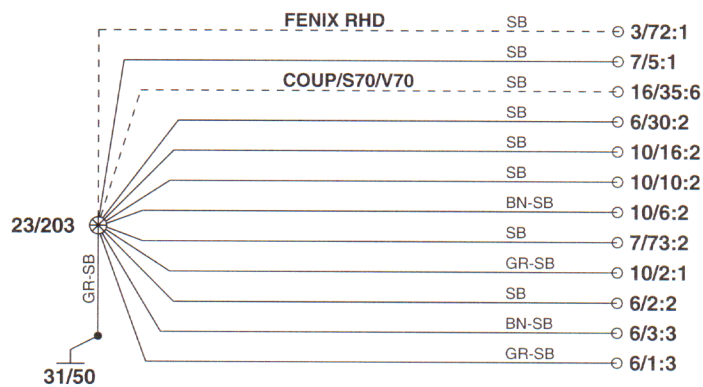

23/207 C70

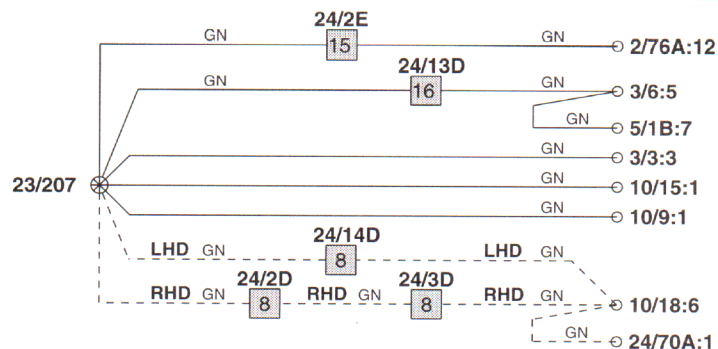





Junction points

23/207 (Engine compartment cable harness, S70)

23/207 (Engine compartment cable harness, V70)

23/208 (Engine compartment cable harness, C70)

23/208 (Engine compartment cable harness, S70)

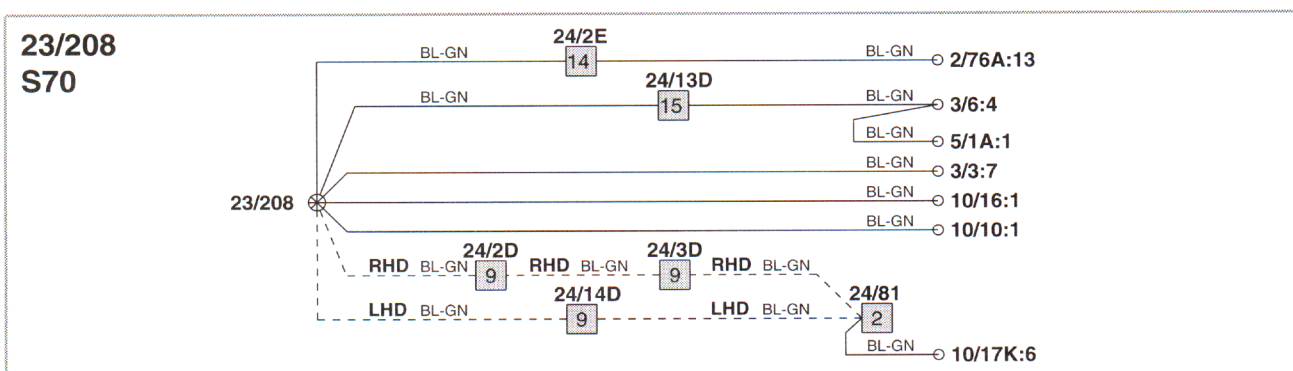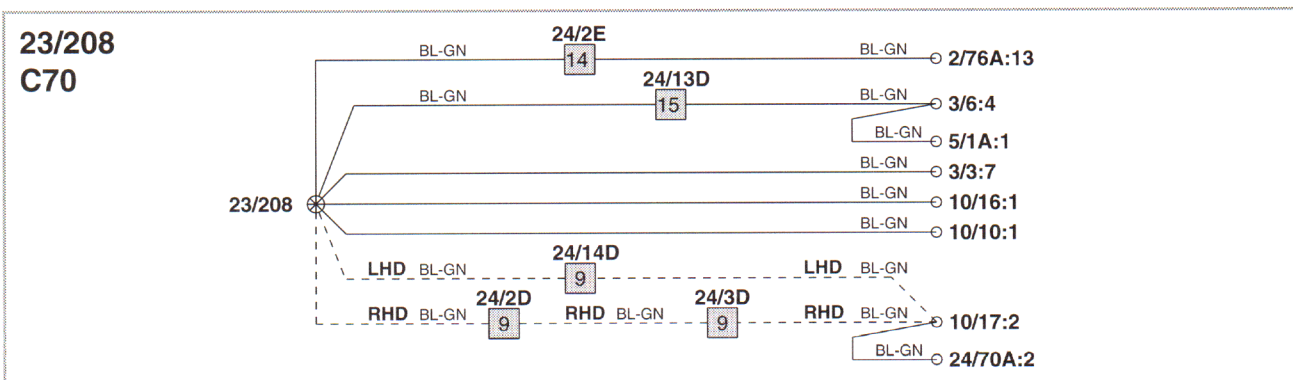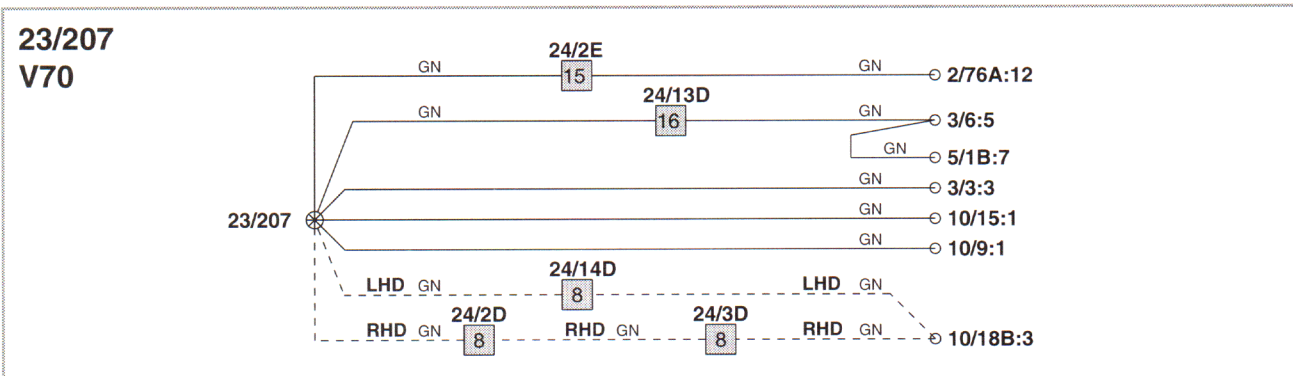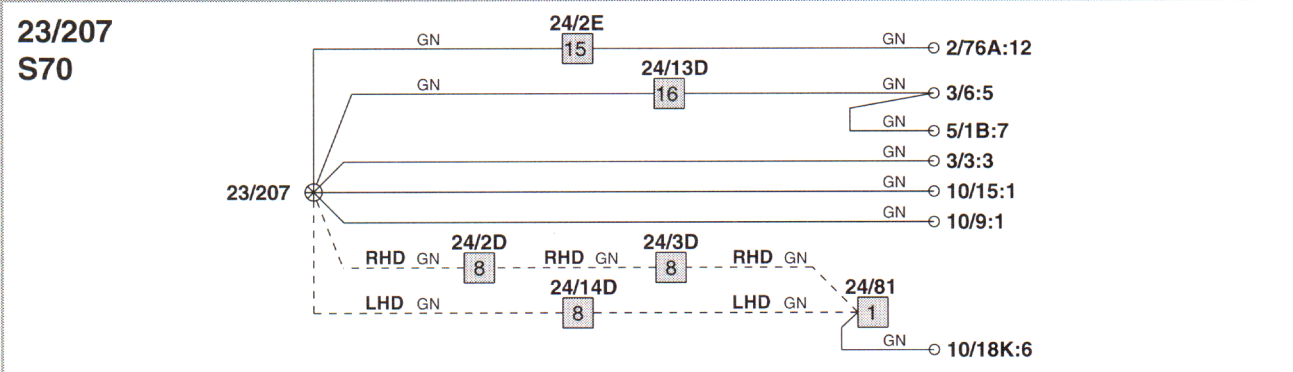


23/208 (Engine compartment cable harness, V70)

23/221 (Engine compartment cable harness, DENSO/ME7)


23/222 (Engine compartment cable harness)

23/223 (Engine compartment cable harness)


**23/208
V70**

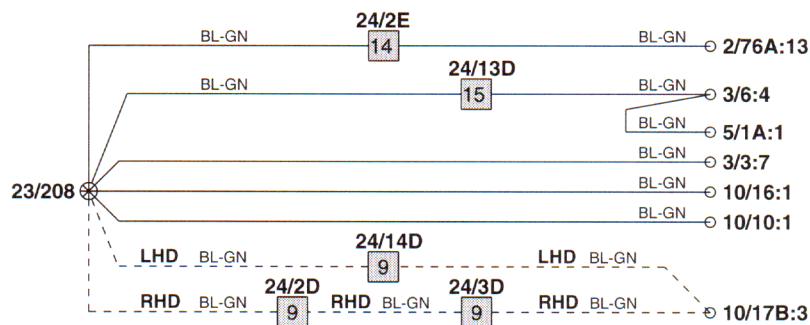


**23/221
DENSO/ME7**

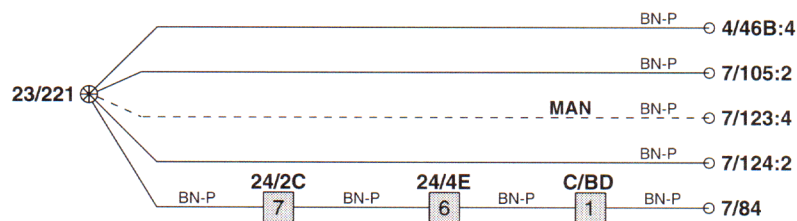

23/222

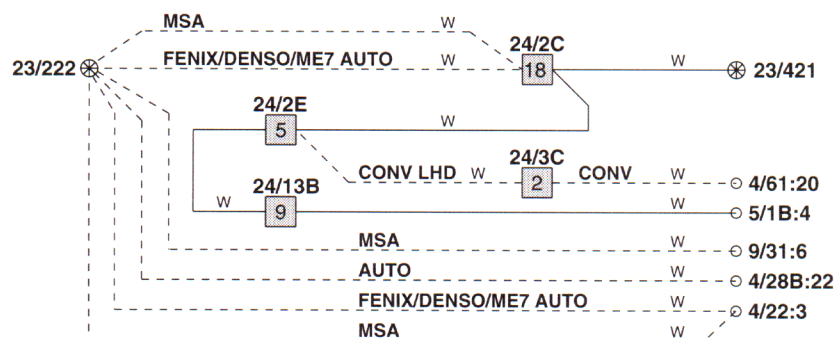

23/223

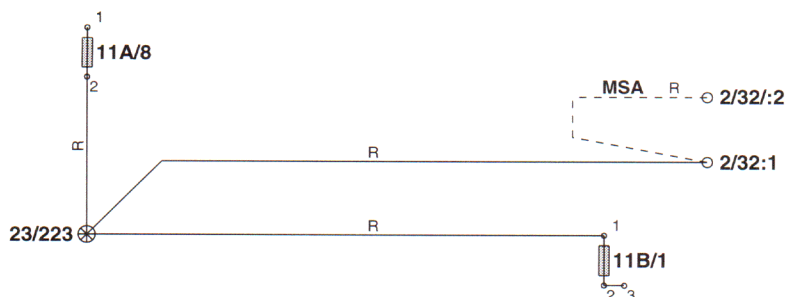

Junction points

23/226 (Engine compartment cable harness)


23/228 (Engine compartment cable harness)

23/229 (Engine compartment cable harness)


23/230 (Engine compartment cable harness)

23/232 (Engine cable harness, FENIX)


23/226

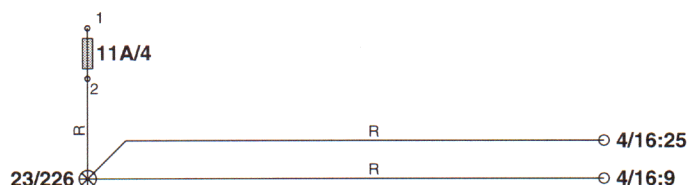


23/228

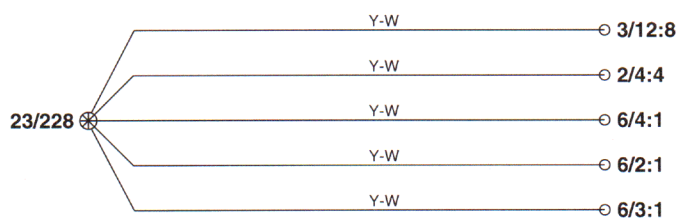


23/229

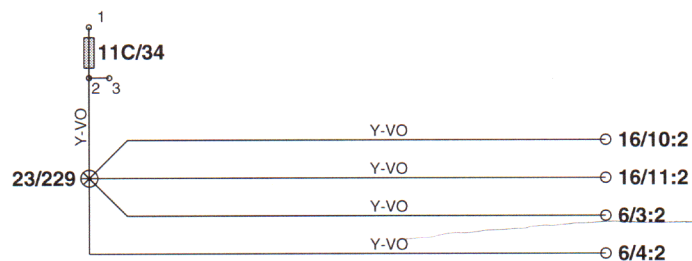

23/230

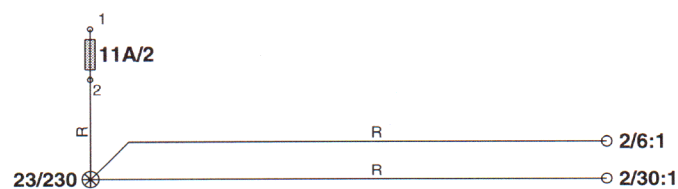

23/232 FENIX



23/232 (Engine cable harness, DENSO)


23/232 (Engine cable harness, ME7)

23/239 (Engine compartment cable harness)


23/240 (Engine compartment cable harness)

23/241 (Engine compartment cable harness)


**23/232
DENSO**




**23/232
ME7**

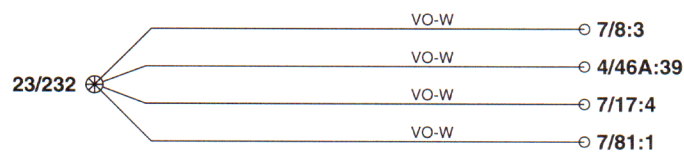


23/239

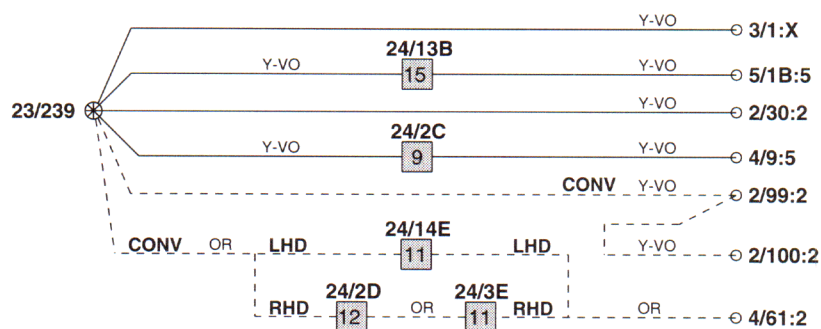

23/240

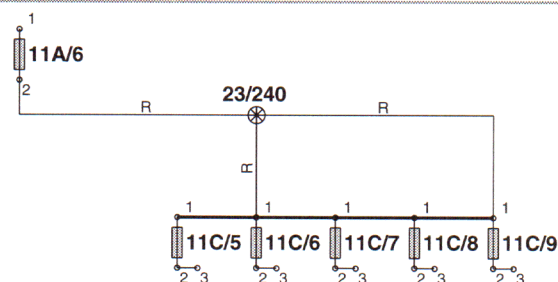

23/241

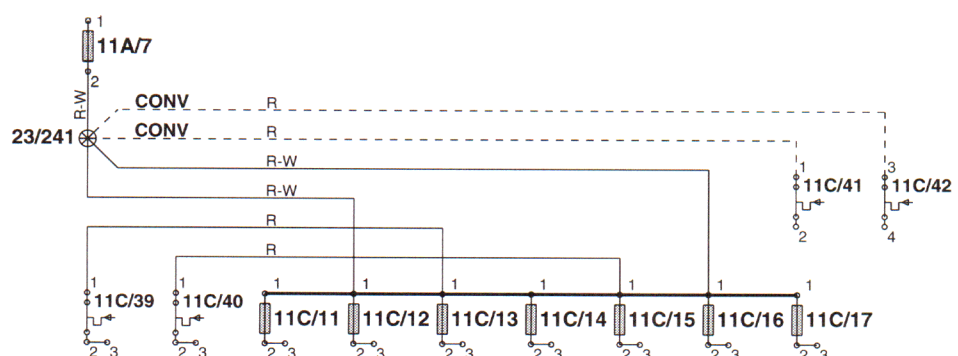

Junction points

23/242 (Left door sill cable harness, C70)


23/243 (Engine cable harness, DENSO/ME7)

23/245 (Engine compartment cable harness, DENSO/ME7)


23/246 (Engine compartment cable harness, DENSO/ME7)

23/249 (Engine compartment cable harness)


**23/242
C70**

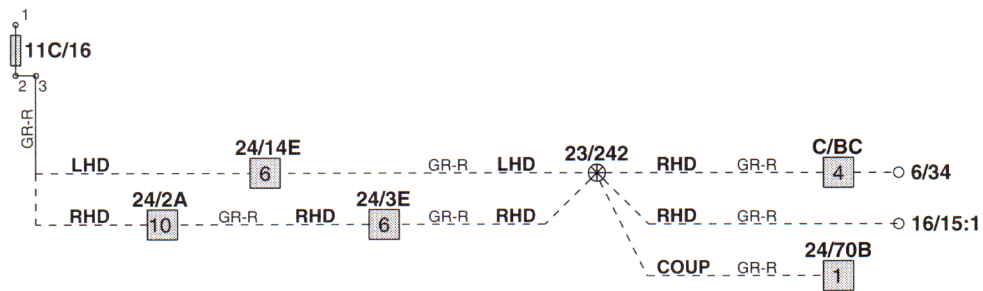


**23/243
DENSO/ME7**

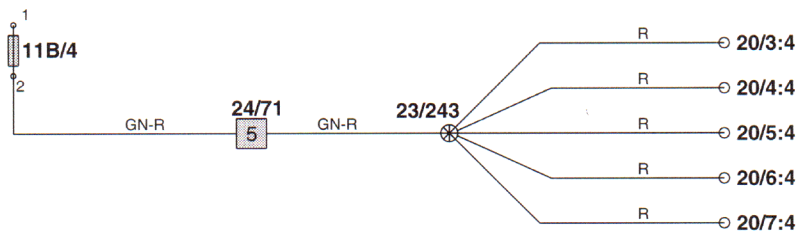


**23/245
DENSO/ME7**

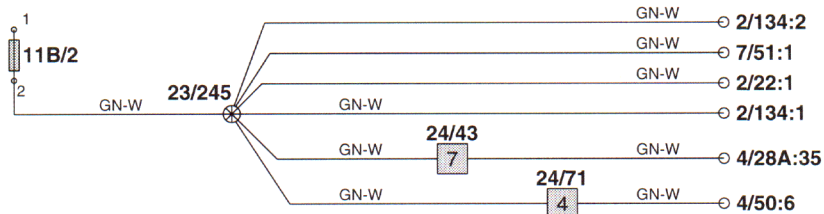

**23/246
DENSO/ME7**

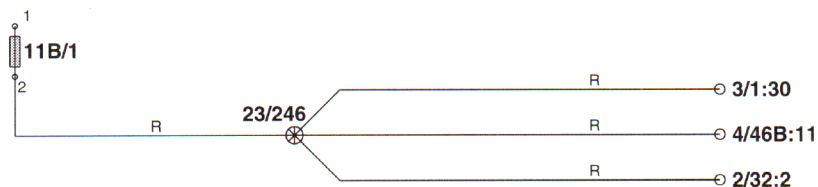

23/249

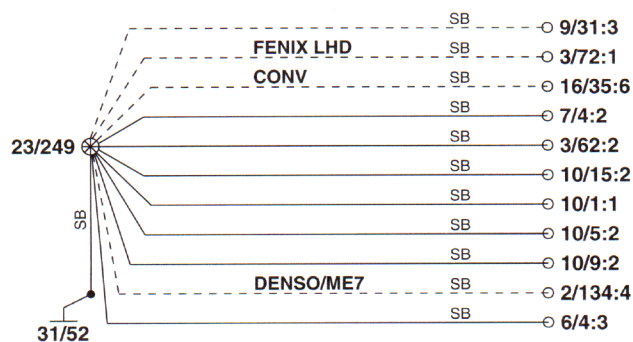


23/250 (Engine compartment cable harness, CONV)

23/251 (Engine compartment cable harness, FENIX)


23/251 (Engine compartment cable harness, FENIX 4x50 W)

23/300A (Dashboard cable harness)


23/250 CONV

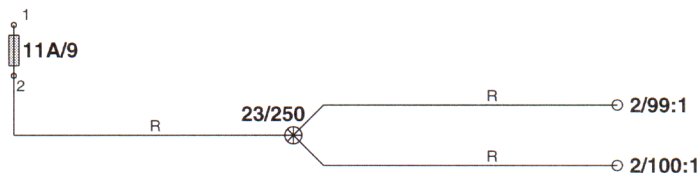


23/251 FENIX

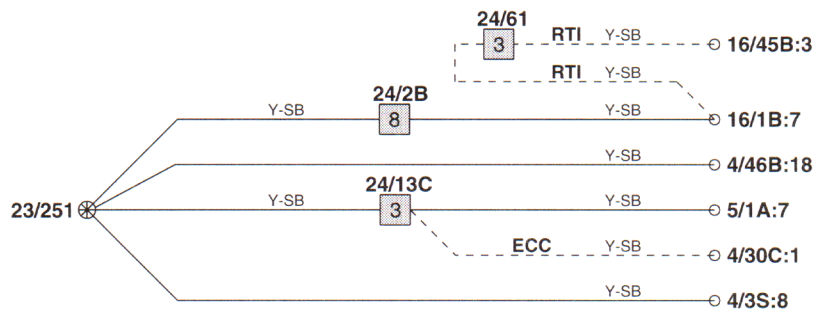

23/251 FENIX 4x50W

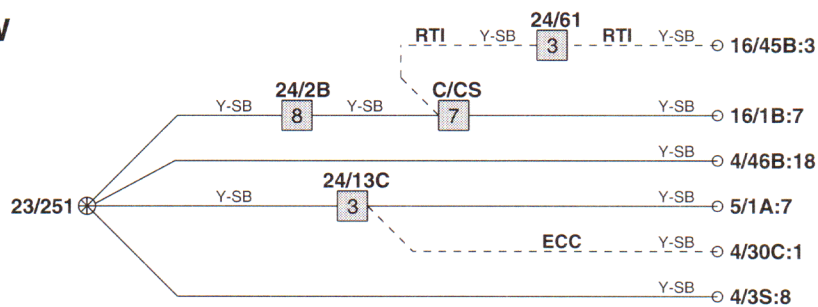

23/300A

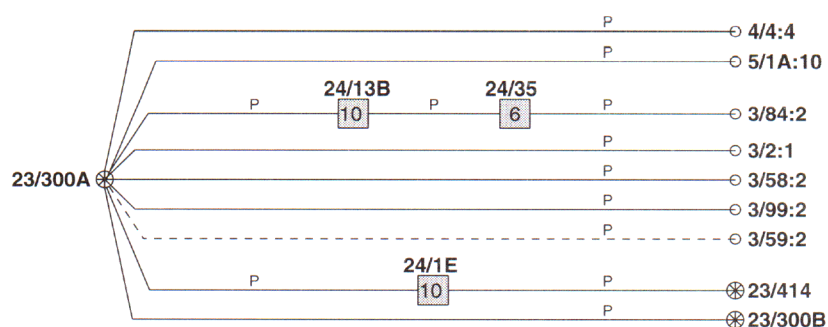

Junction points


23/300B (Dashboard cable harness)

23/301A (Dashboard cable harness)


23/301B (Dashboard cable harness)

23/302 (Dashboard cable harness)


23/300B

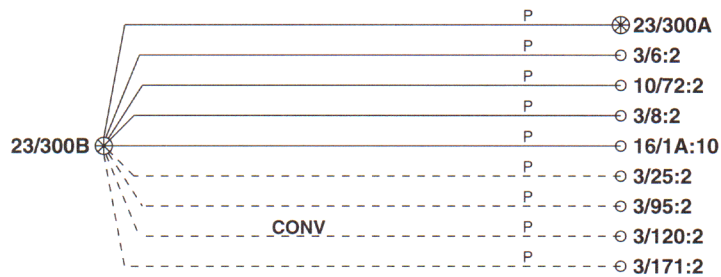


23/301A

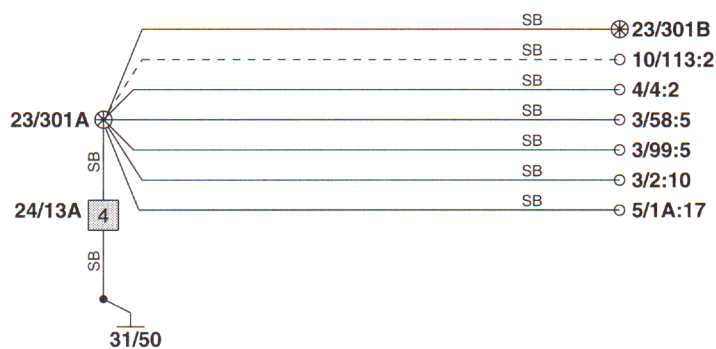

23/301B

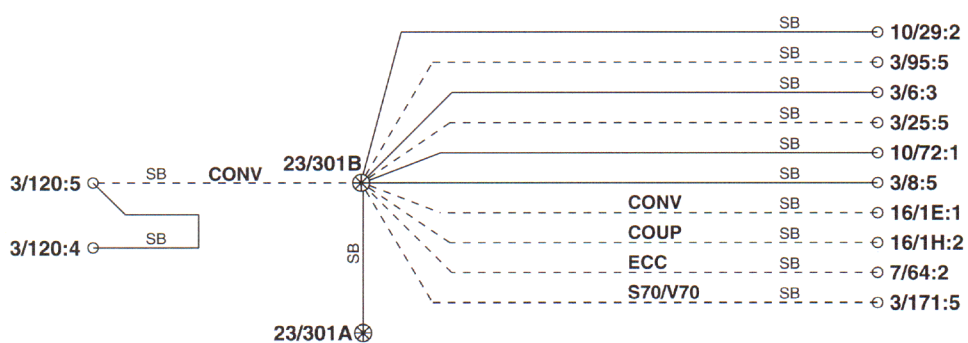

23/302

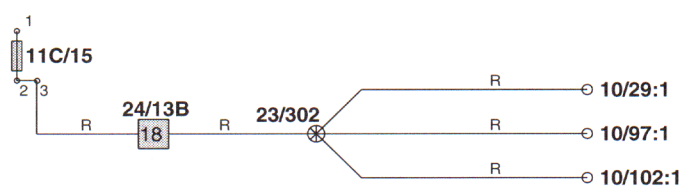


23/304 (Climate control cable harness)

23/305 (Climate control cable harness)


23/306 (Climate control cable harness, ECC)

23/307 (Climate control cable harness, ECC)


23/304

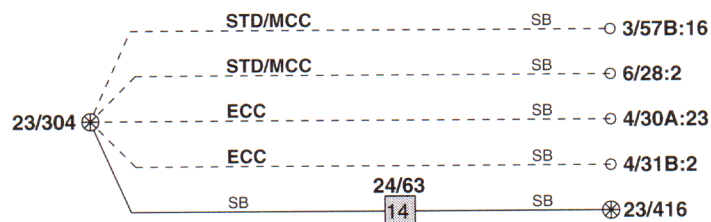


23/305

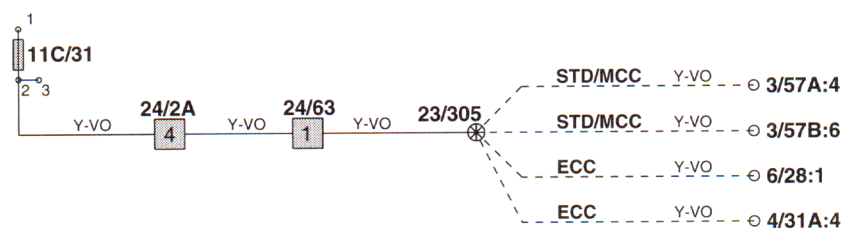

23/306 ECC

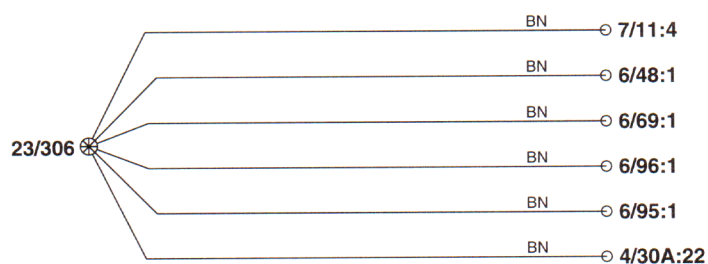

23/307 ECC

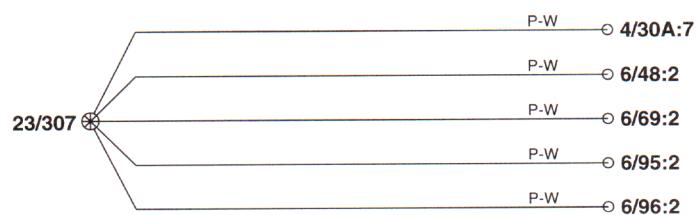

Junction points


23/311 (Dashboard cable harness, ECC)

23/313 (Climate control cable harness, STD/MCC)


23/314 (RTI cable harness, not shown)

23/315 (RTI cable harness, not shown)


23/311 ECC

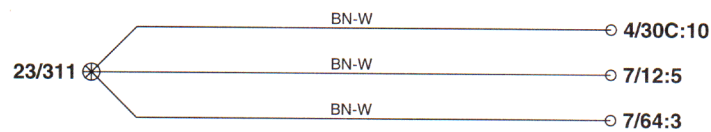


23/313 STD/MCC

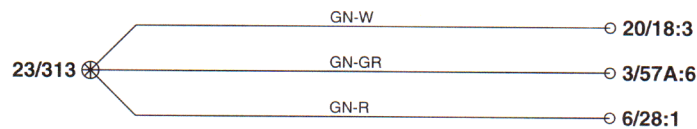

23/314 RTI

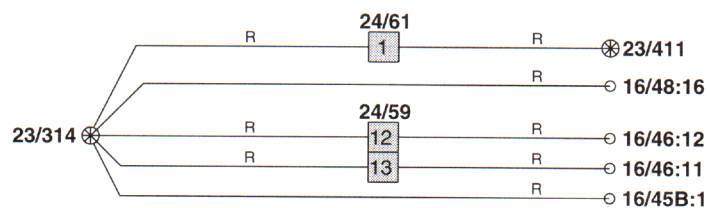


23/315 RTI

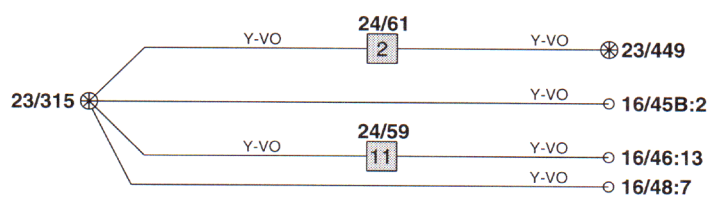


23/316 (RTI cable harness, not shown)
 23/319 (Firewall cable harness, CONV)
 23/320 (Instrument panel cable harness)
 23/321 (Radio, 4x50 W)


23/316 RTI

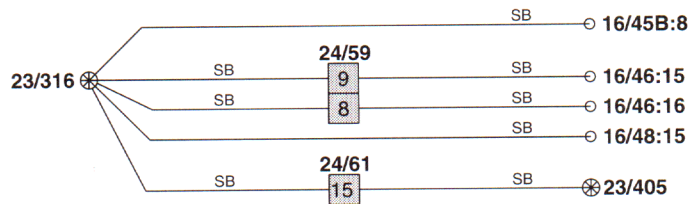


23/319 CONV

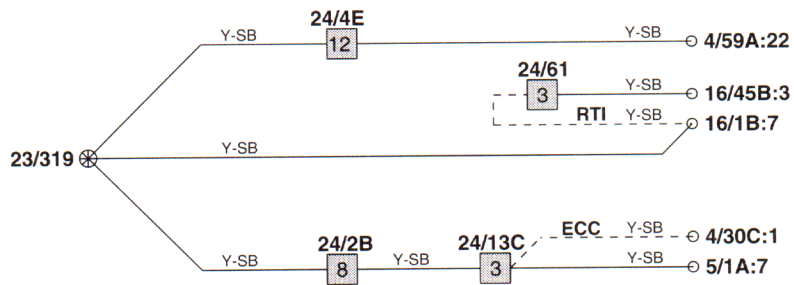

23/320

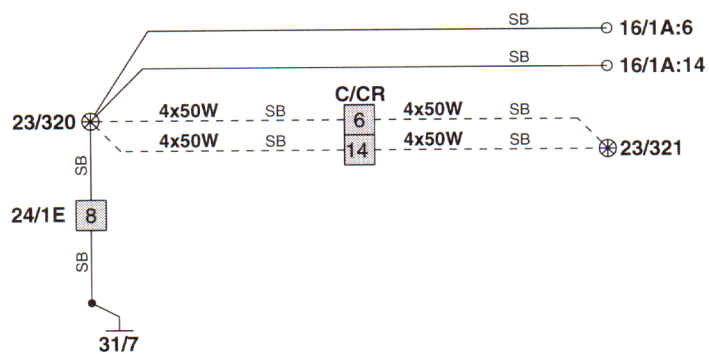

23/321 4x50W

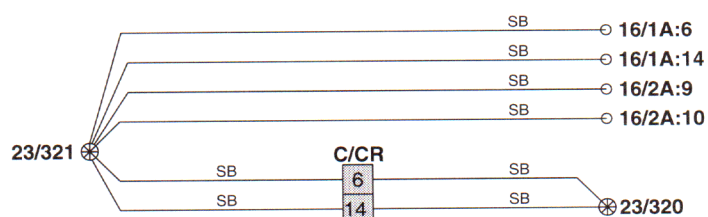

Junction points


23/322 (Radio, 4x50 W)

23/324 (Instrument panel cable harness)


23/405 (Firewall cable harness, CONV)

23/405 (Firewall cable harness, COUP/S70/V70)


23/322 4x50W

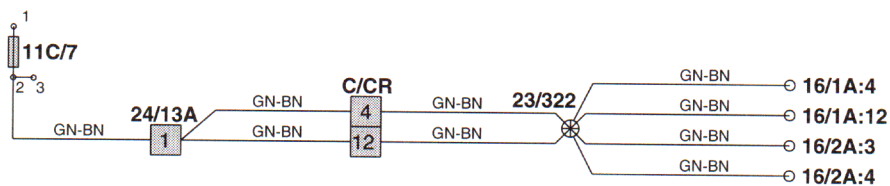


23/324

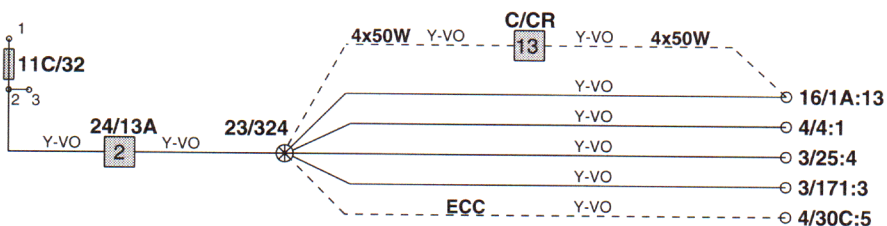

23/405 CONV

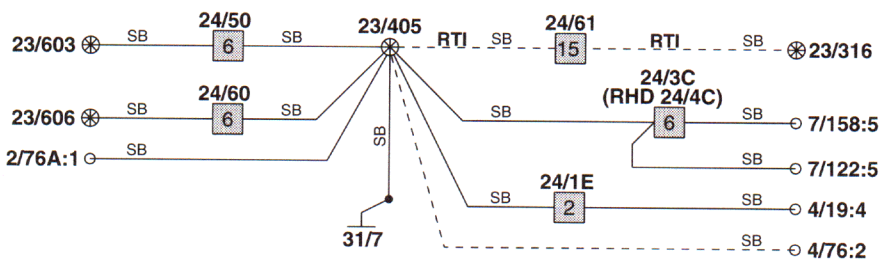


23/405 COUP/ S70/V70

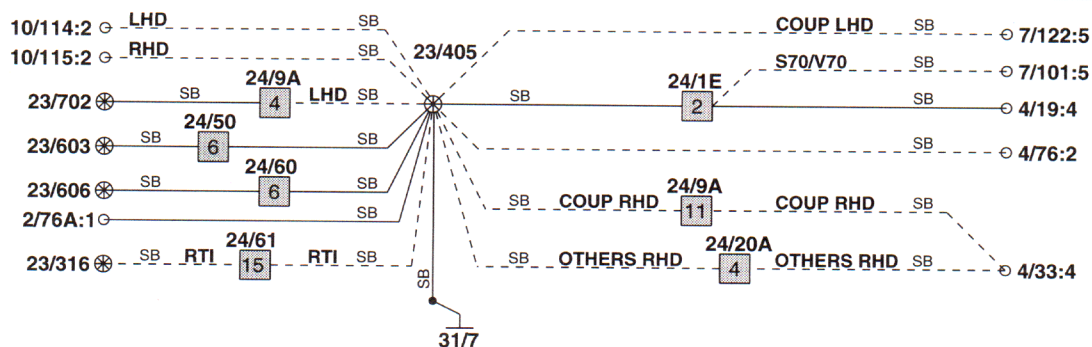


- 23/406 (Firewall cable harness)
- 23/408 (Firewall cable harness, S70/V70)
- 23/409 (Firewall cable harness)
- 23/411 (Firewall cable harness, CONV)


23/406

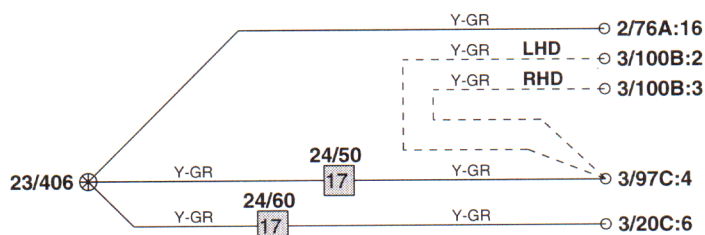


23/408 S70/V70

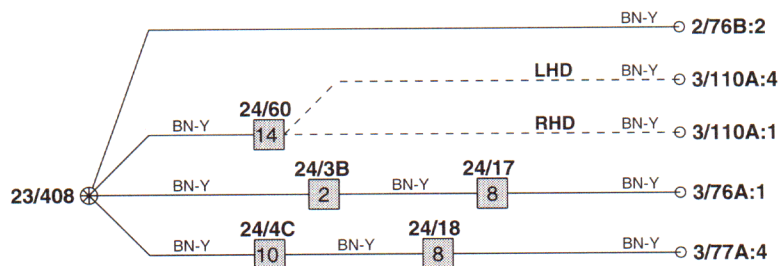

23/409

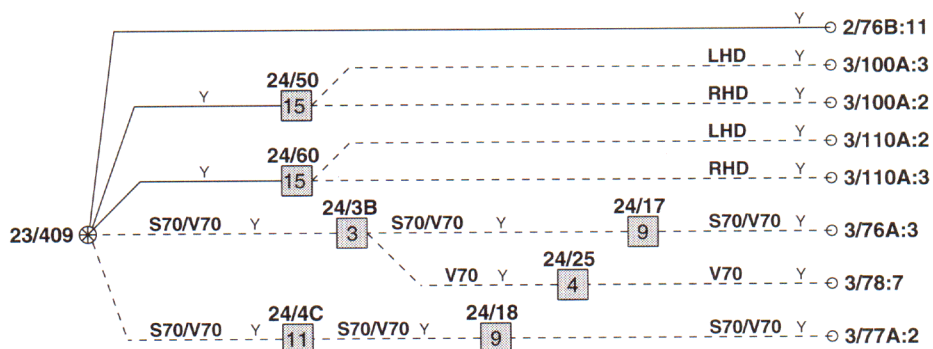

23/411 CONV

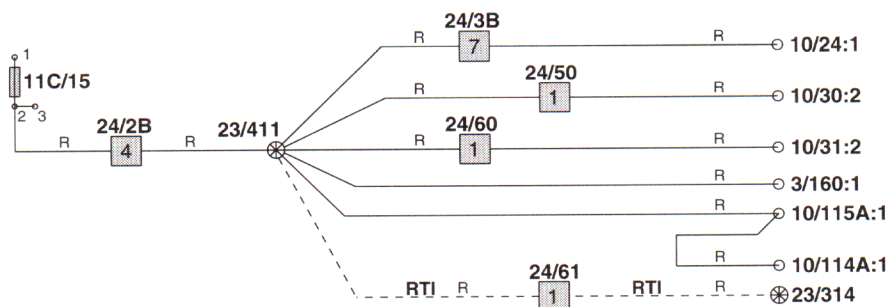

Junction points


23/411 (Firewall cable harness, COUP/S70/V70)

23/412 (Firewall cable harness, CONV)


23/412 (Firewall cable harness, COUP/S70/V70)

23/414 (Firewall cable harness)


23/411 COUP/ S70/V70

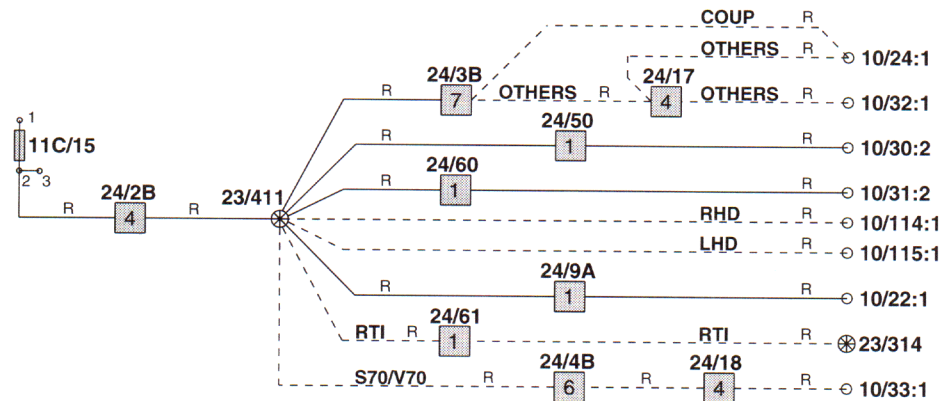


23/412 CONV

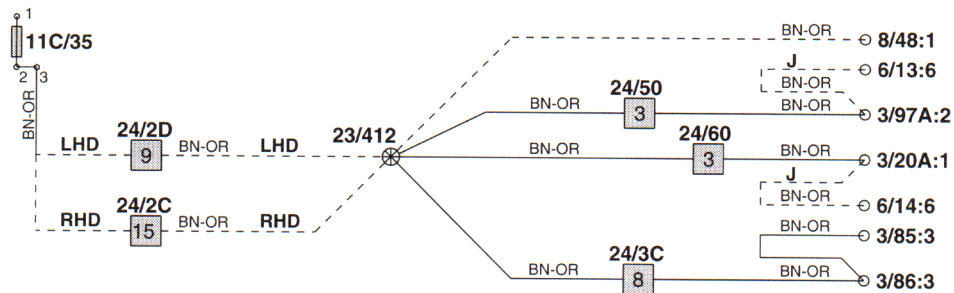

23/412 COUP/ S70/V70

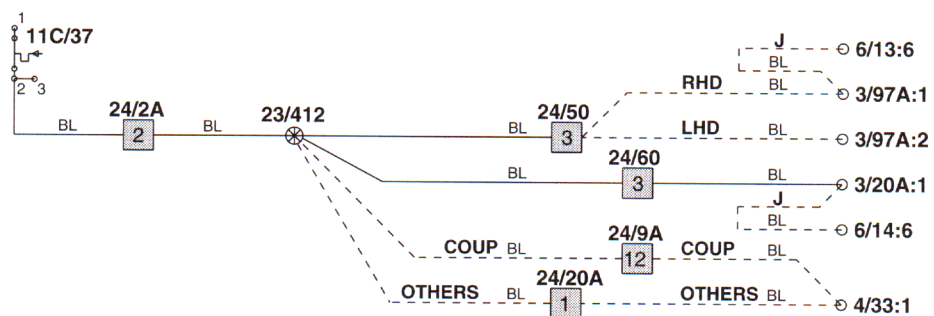

23/414




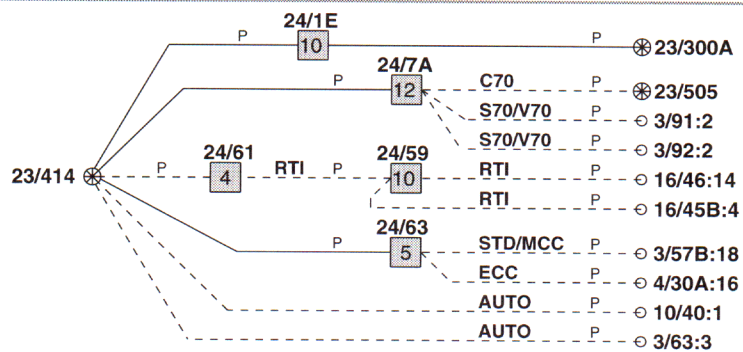


23/416 (Firewall cable harness, CONV)

23/416 (Firewall cable harness, COUP/S70/V70)

23/417 (Left door sill cable harness V70)

23/421 (Firewall cable harness)

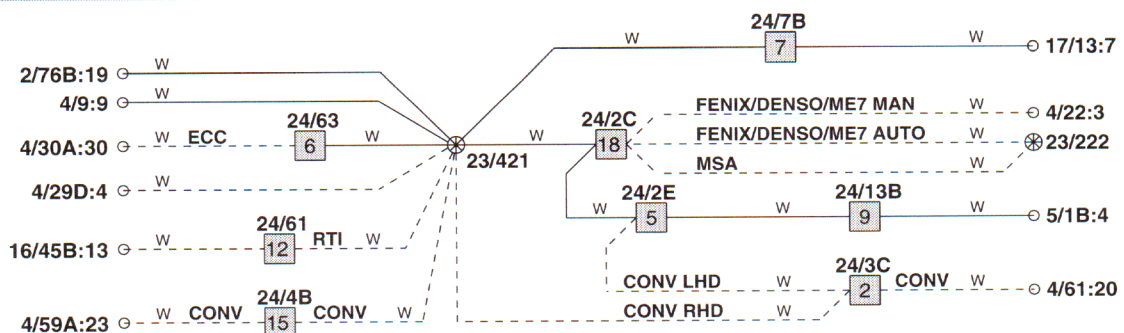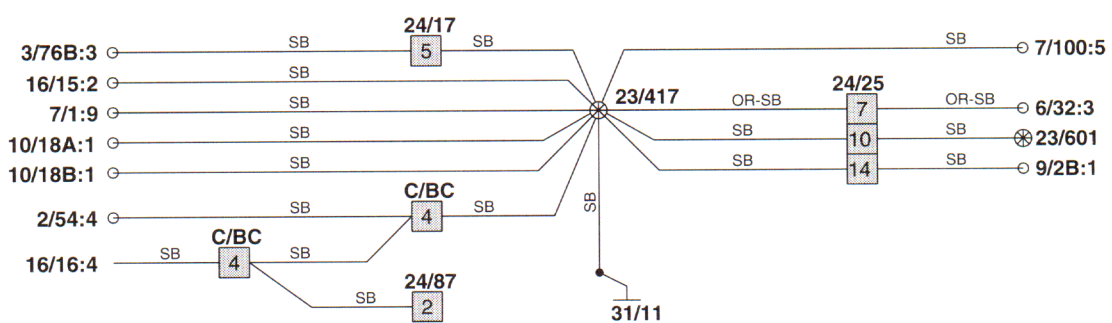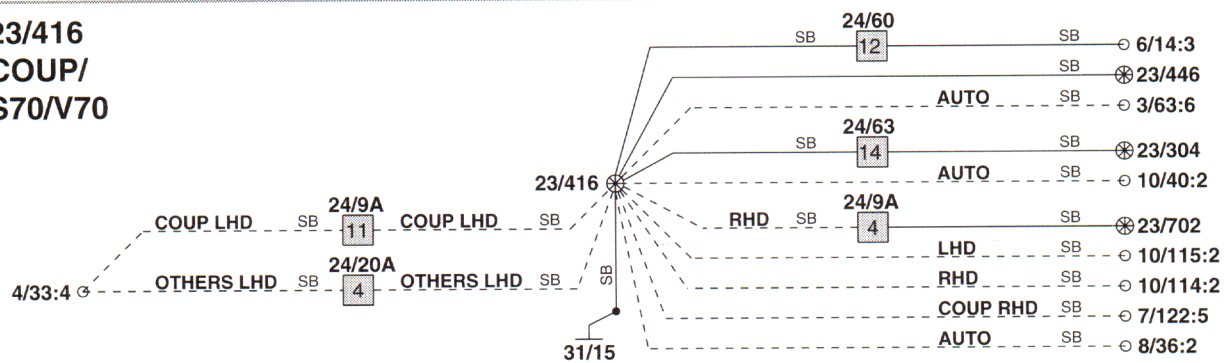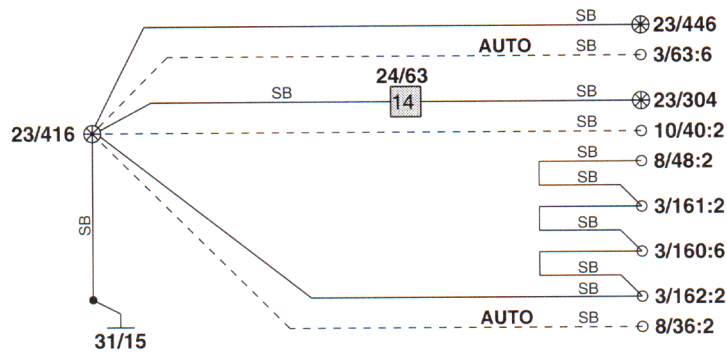

Junction points


23/422 (Left door sill cable harness, C70)

23/422 (Left door sill cable harness, S70)


23/424 (Firewall cable harness)

23/426 (Left door sill cable harness, CONV)


23/422 C70

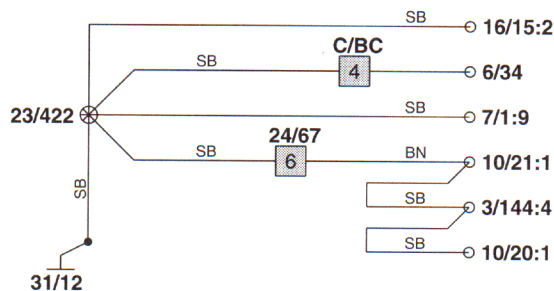


23/422 S70

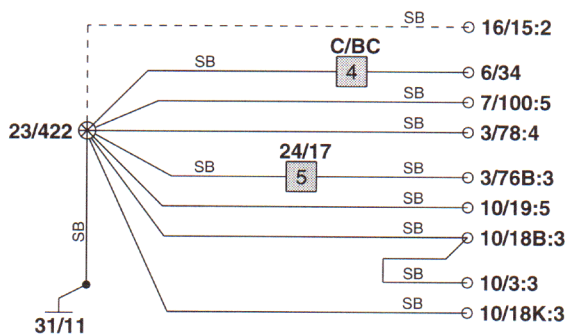

23/424

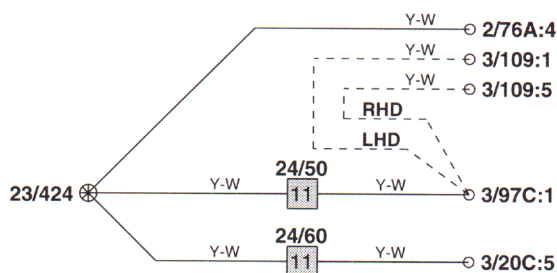

23/426 CONV

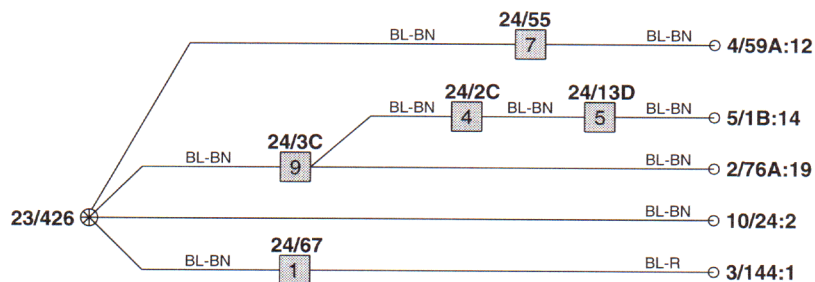


23/428 (Firewall cable harness C70)

23/434 (Left door sill cable harness, C70)


23/435 (Left door sill cable harness, C70)

23/437 (Right door sill cable harness CONV)


23/428
C70

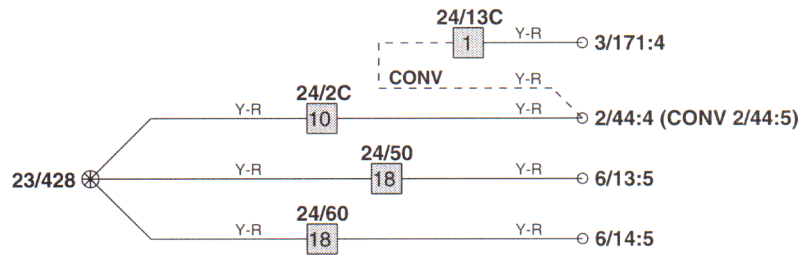


23/434
C70

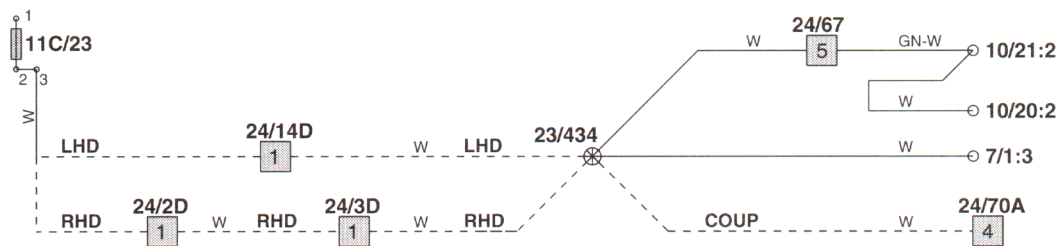

23/435
C70

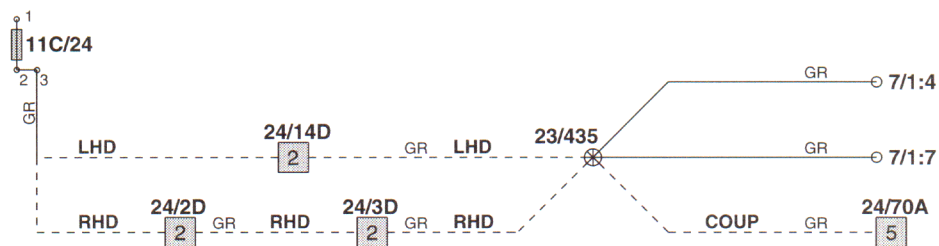

23/437
CONV

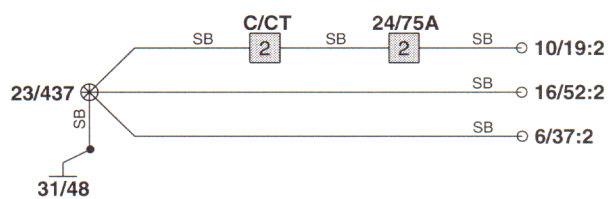

Junction points


23/440 (Engine compartment cable harness, FENIX/MSA RTI)

23/441 (Right door sill cable harness CONV)


23/442 (Right door sill cable harness CONV)

23/443 (Right door sill cable harness CONV)


23/440 FENIX/MSA RTI

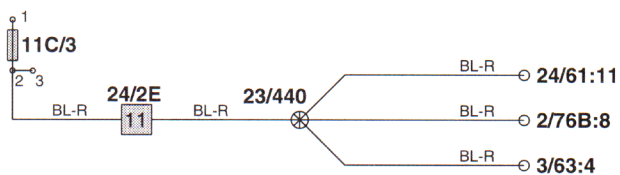


23/441 CONV

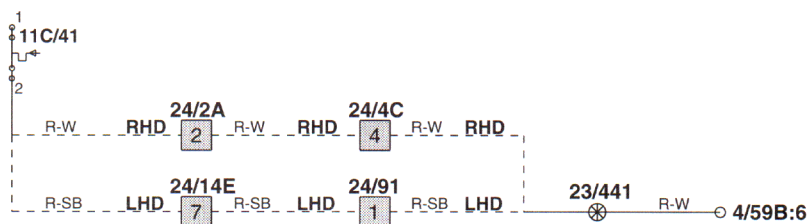

23/442 CONV

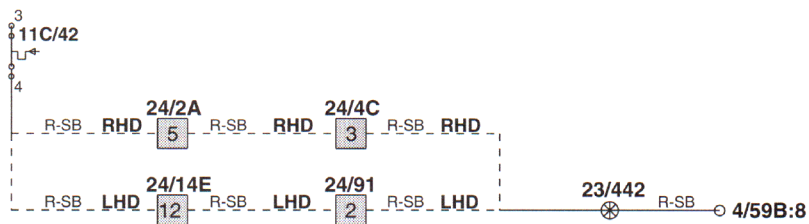

23/443 CONV



23/444 (Right door sill cable harness CONV)


23/445 (Left door sill cable harness, CONV)

23/446 (Firewall cable harness)


23/449 (Firewall cable harness, CONV)

23/449 (Firewall cable harness, COUP/S70/V70)


**23/444
CONV**




**23/445
CONV**

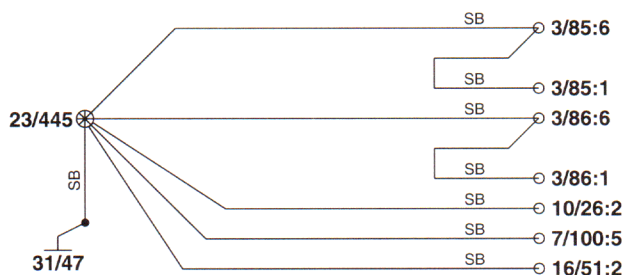


23/446

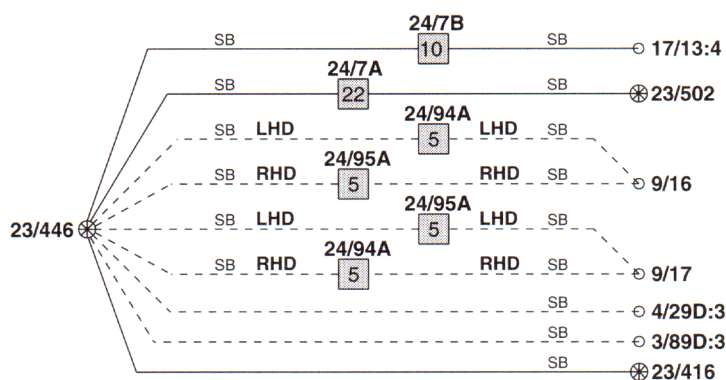

**23/449
CONV**

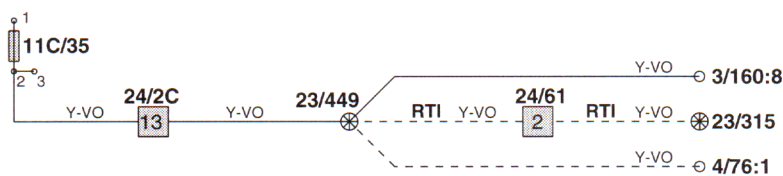

**23/449
COUP/
S70/V70**

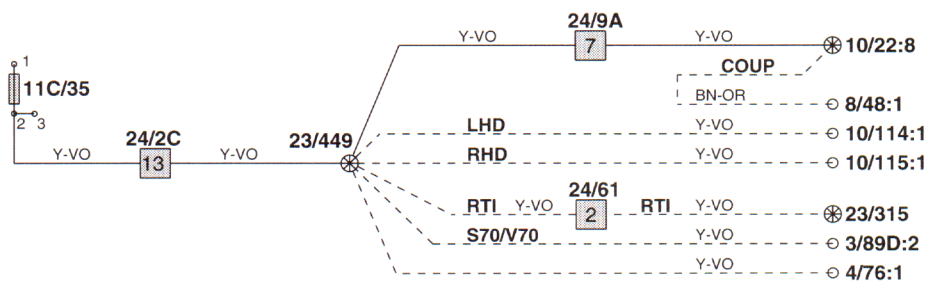

Junction points

23/450 (Cable harness soft-top)


23/451 (Cable harness soft-top)

23/502 (Tunnel cable harness)


23/503 (Tunnel cable harness)

23/505 (Tunnel cable harness, C70)


**23/450
CONV**

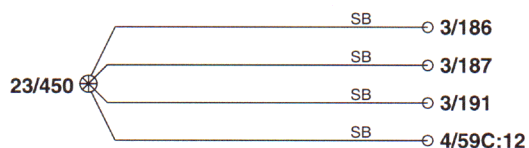


**23/451
CONV**

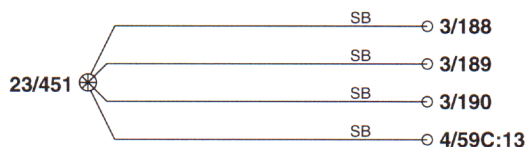


23/502

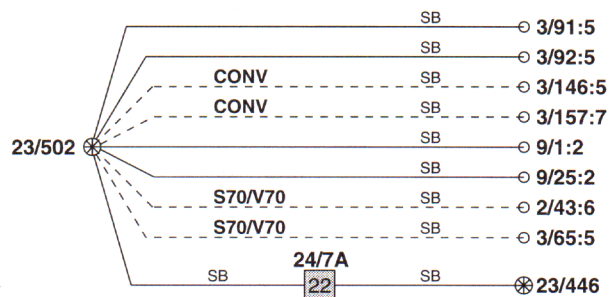

23/503

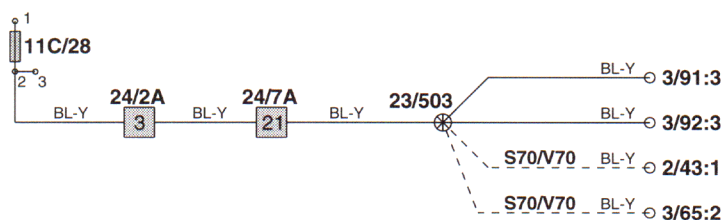


**23/505
C70**

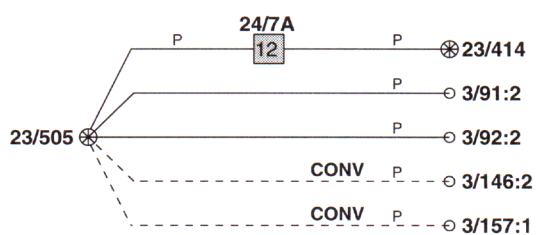


- 23/601 (Tailgate cable harness, V70)
- 23/603 (Driver door cable harness)
- 23/604 (Driver door cable harness)
- 23/605 (Passenger door cable harness)


23/601 V70

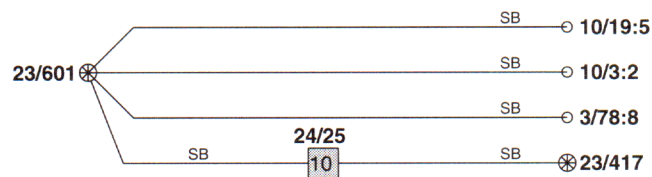


23/603

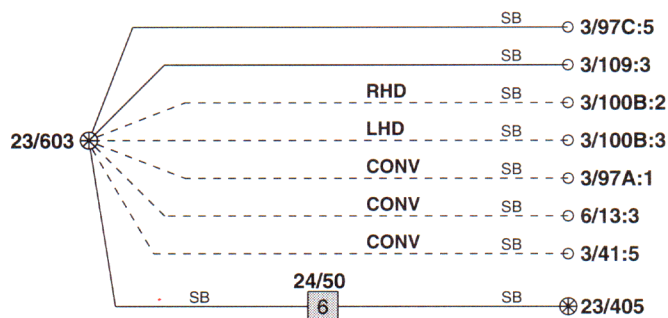

23/604

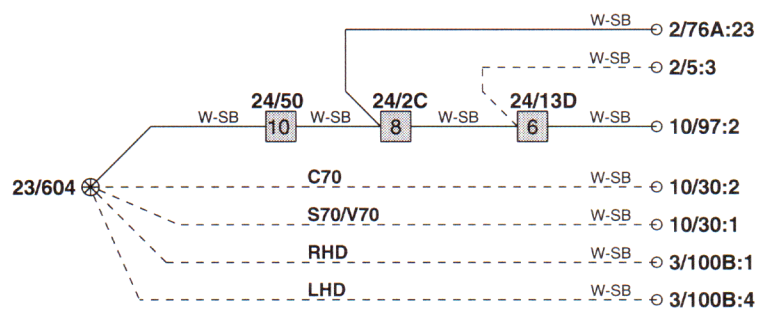

23/605

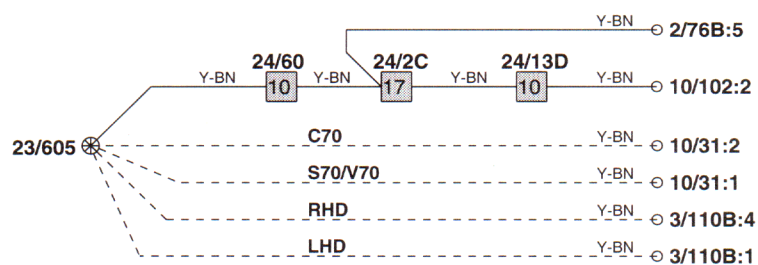

Junction points


23/606 (Passenger door cable harness)

23/609 (Driver door cable harness, COUP/S70/V70)


23/702 (Roof cable harness, COUP)

23/702 (Roof cable harness, S70/V70)


23/606

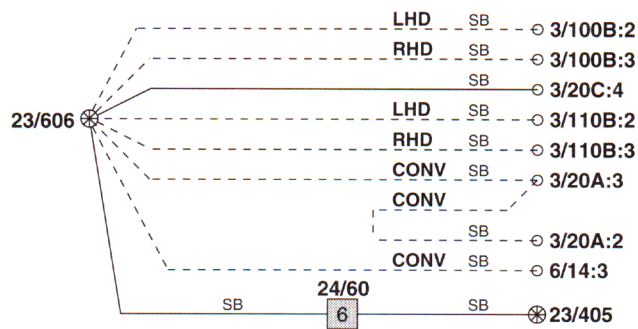


**23/609
COUP/S70/V70**

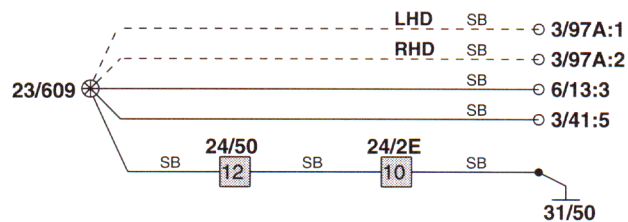

**23/702
COUP**

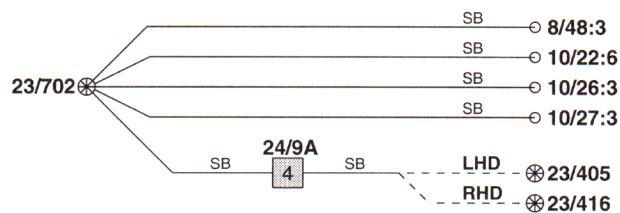


**23/702
S70/V70**

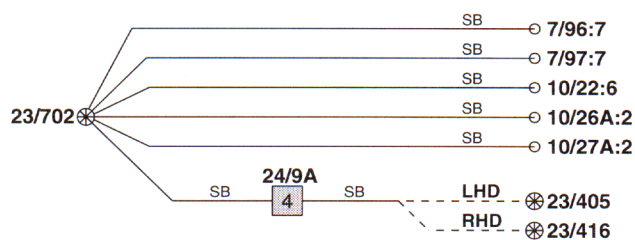


Routing of cable harnesses in the car

Firewall cable harness

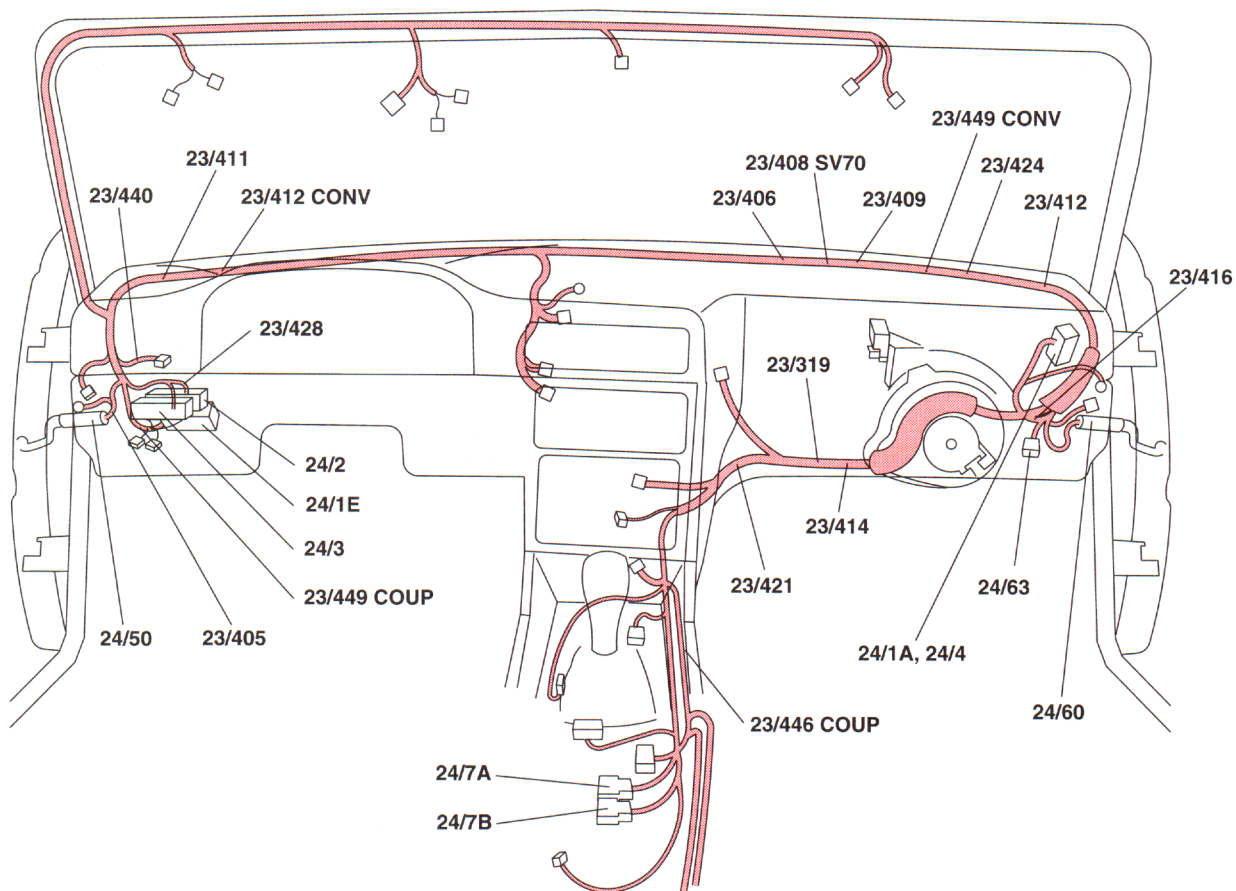


Instrument panel cable harness

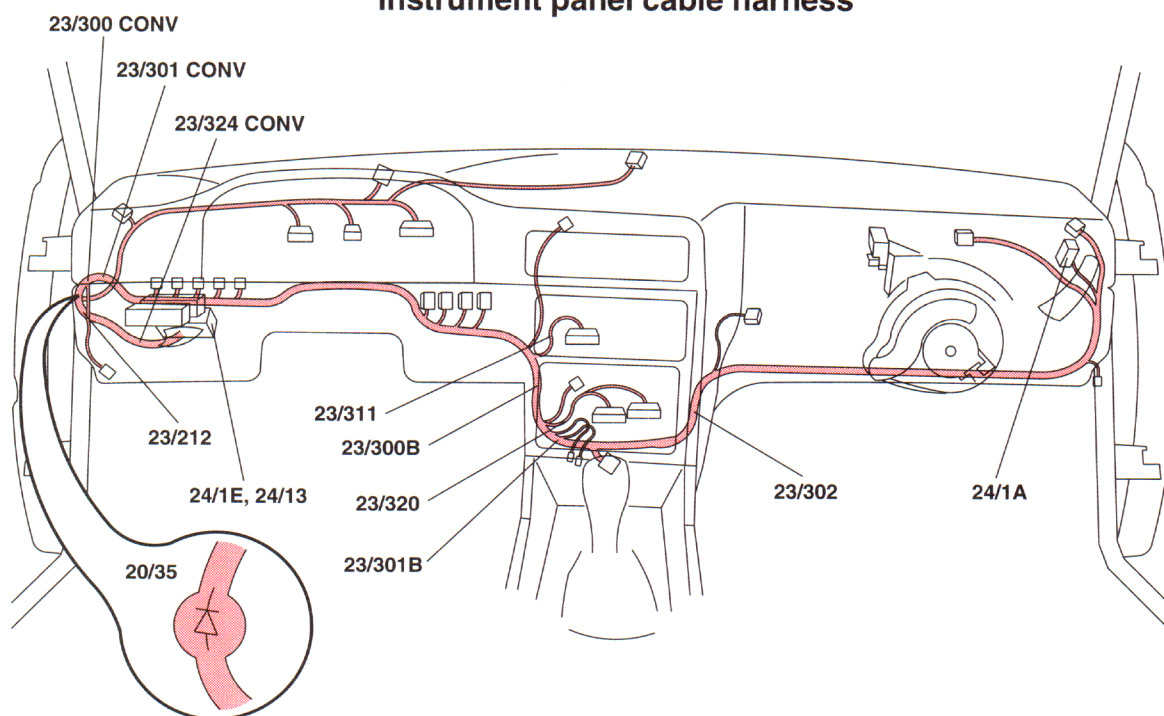


Routing of cable harnesses in the car

Climate control cable harness

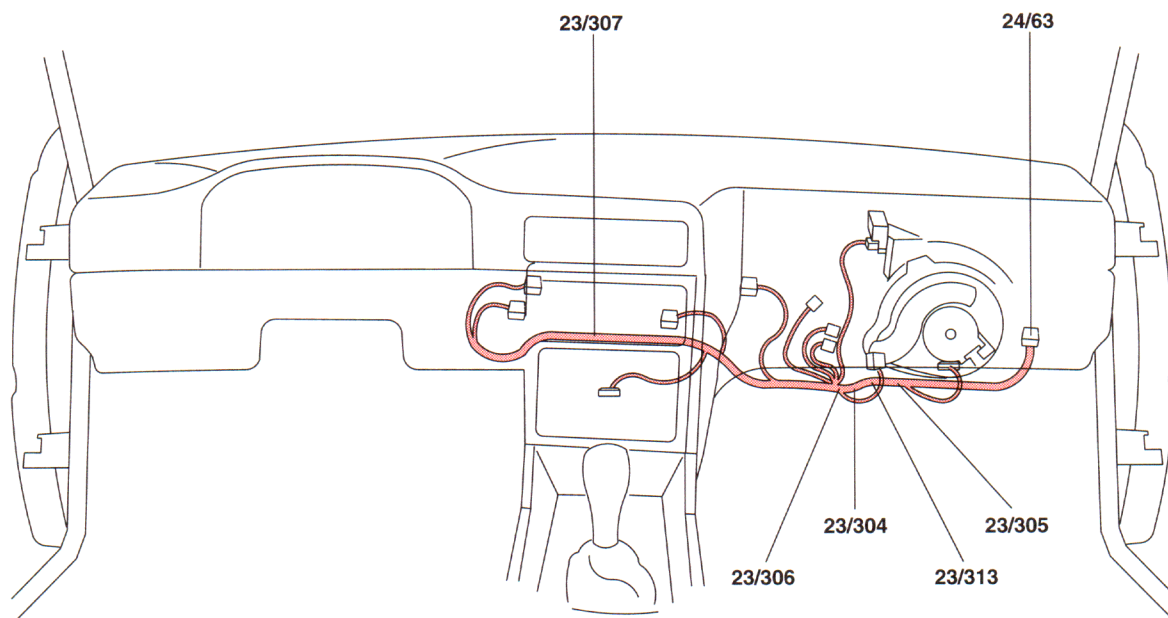


Tunnel cable harness

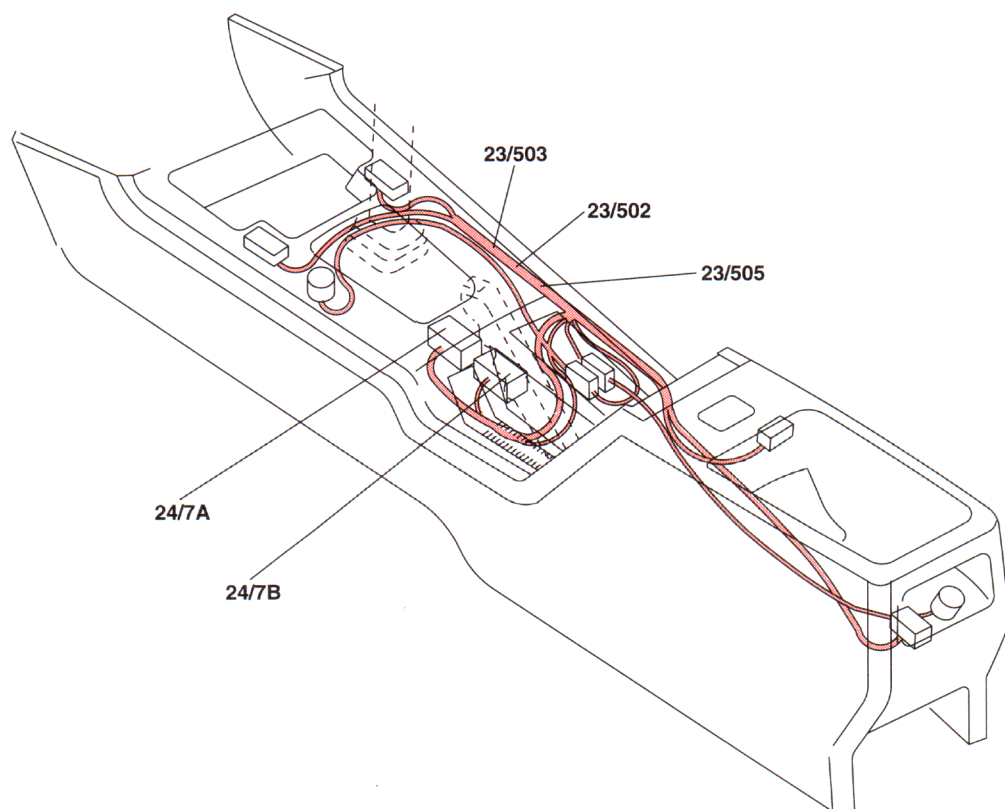


Routing of cable harnesses in the car

Left door sill cable harness, C70

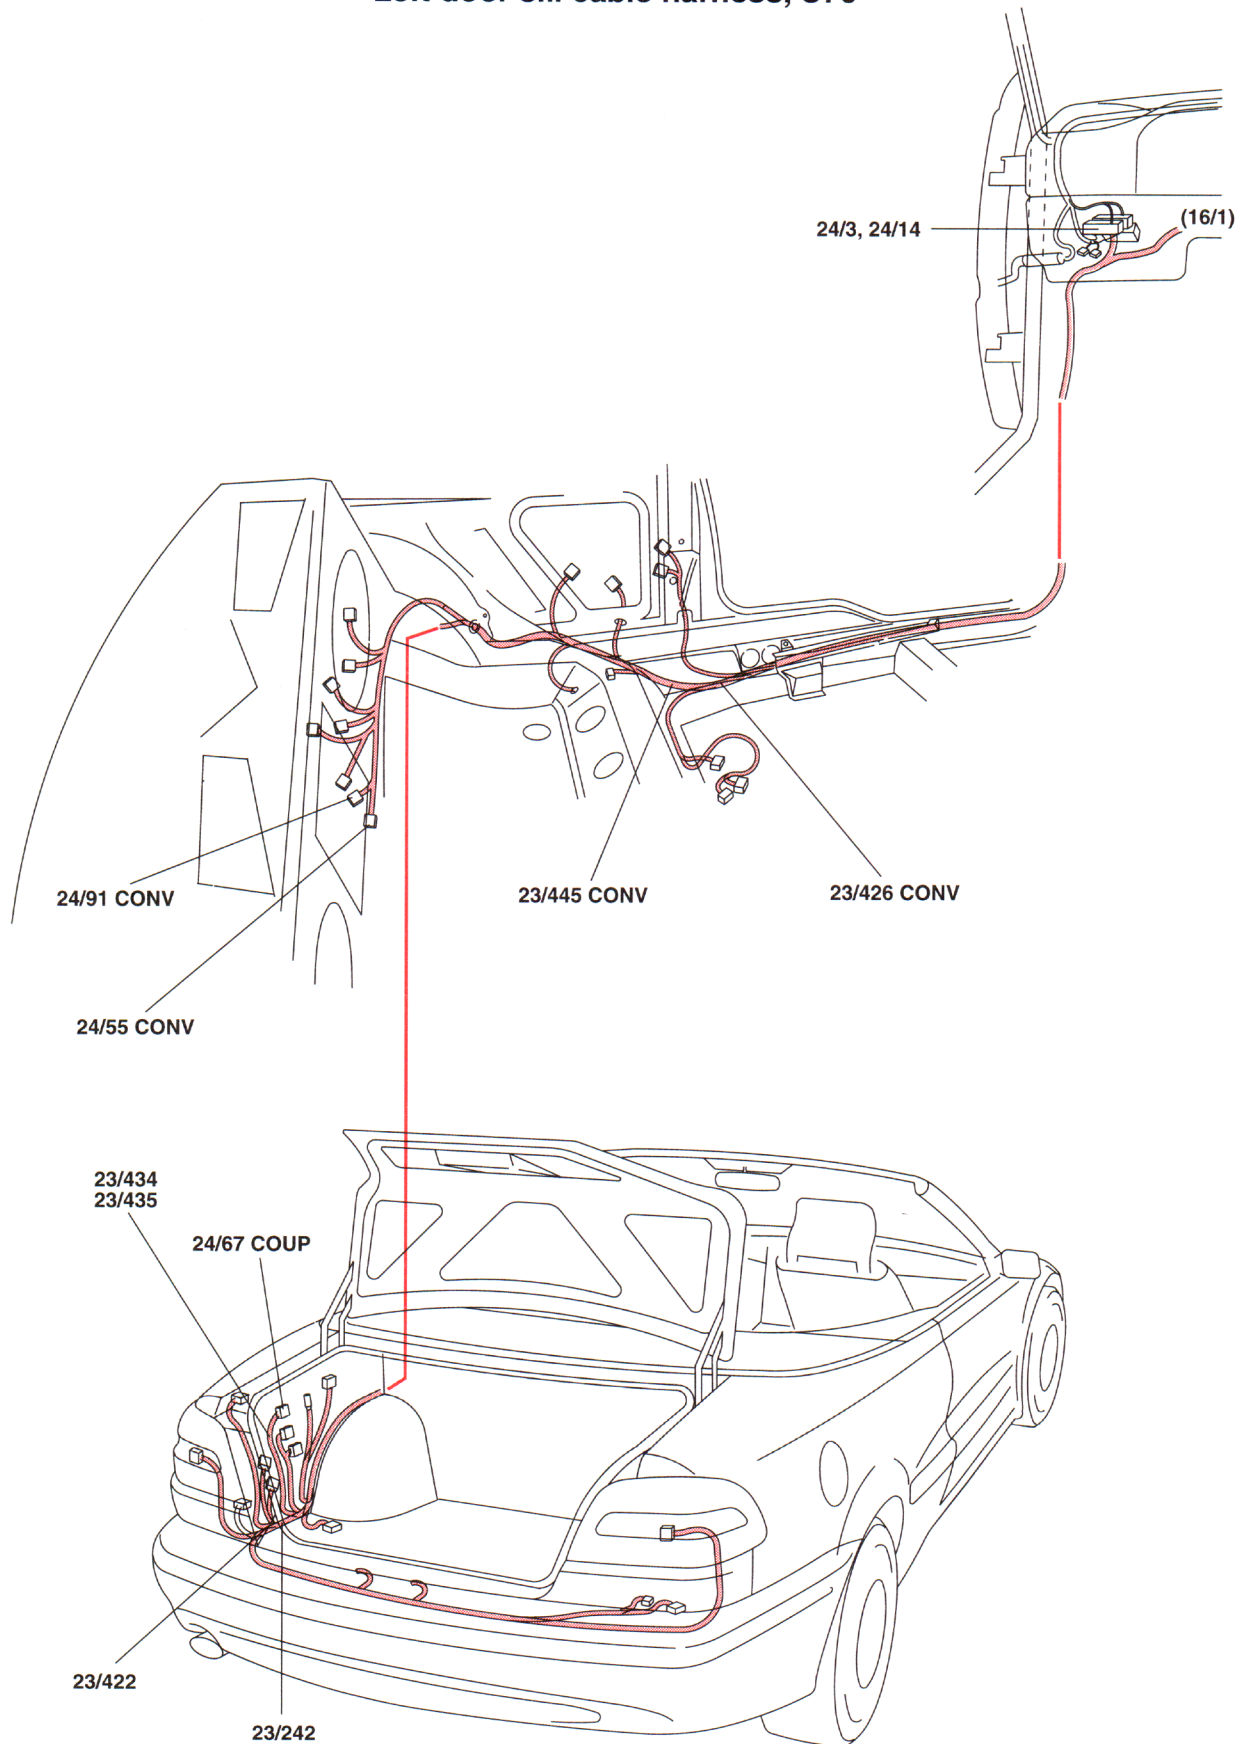


Routing of cable harnesses in the car


Left door sill cable harness, S70/V70

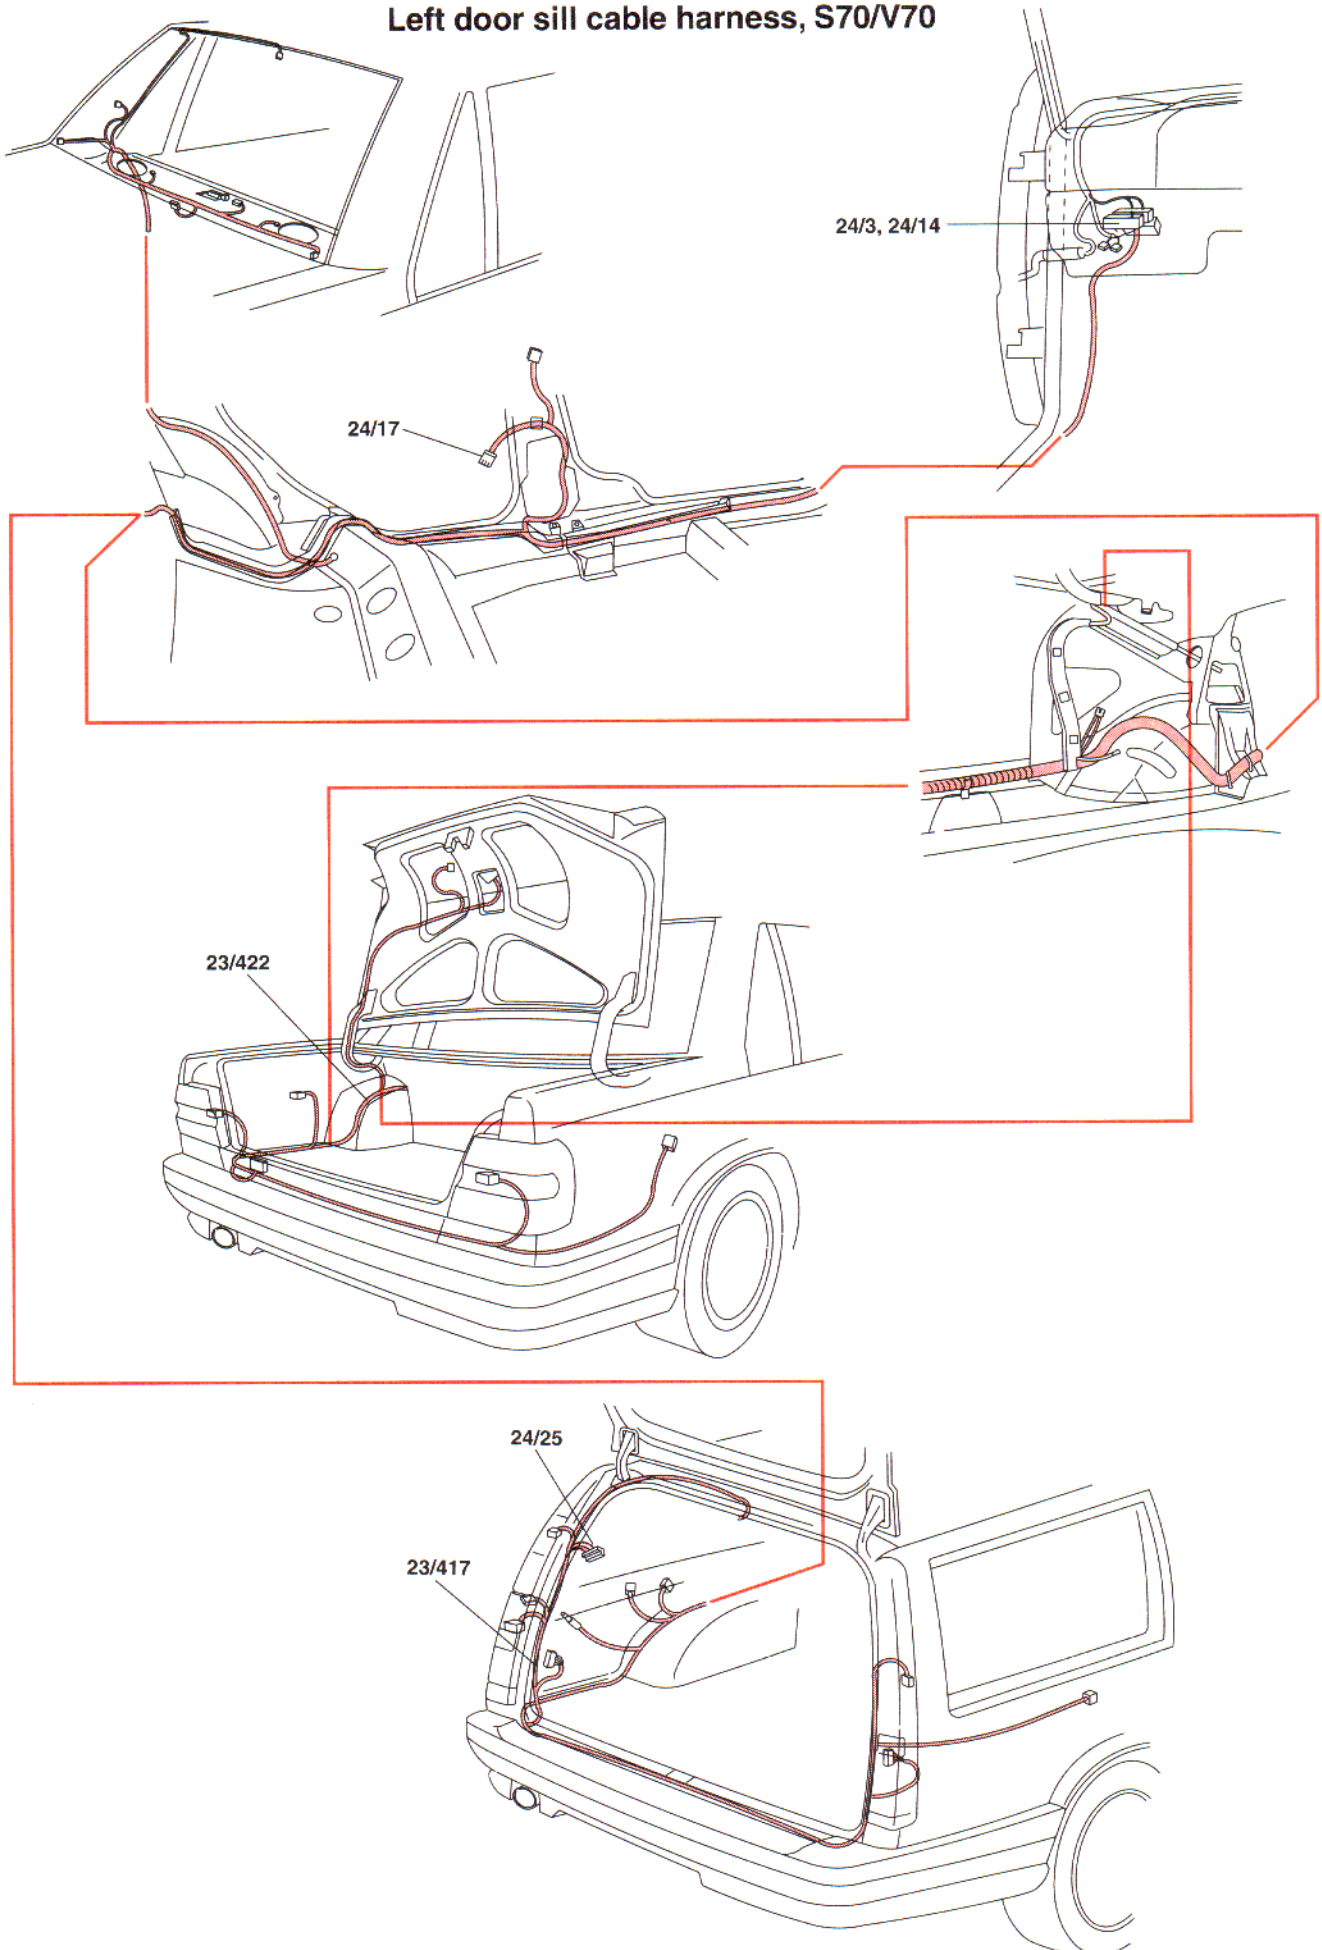


Routing of cable harnesses in the car

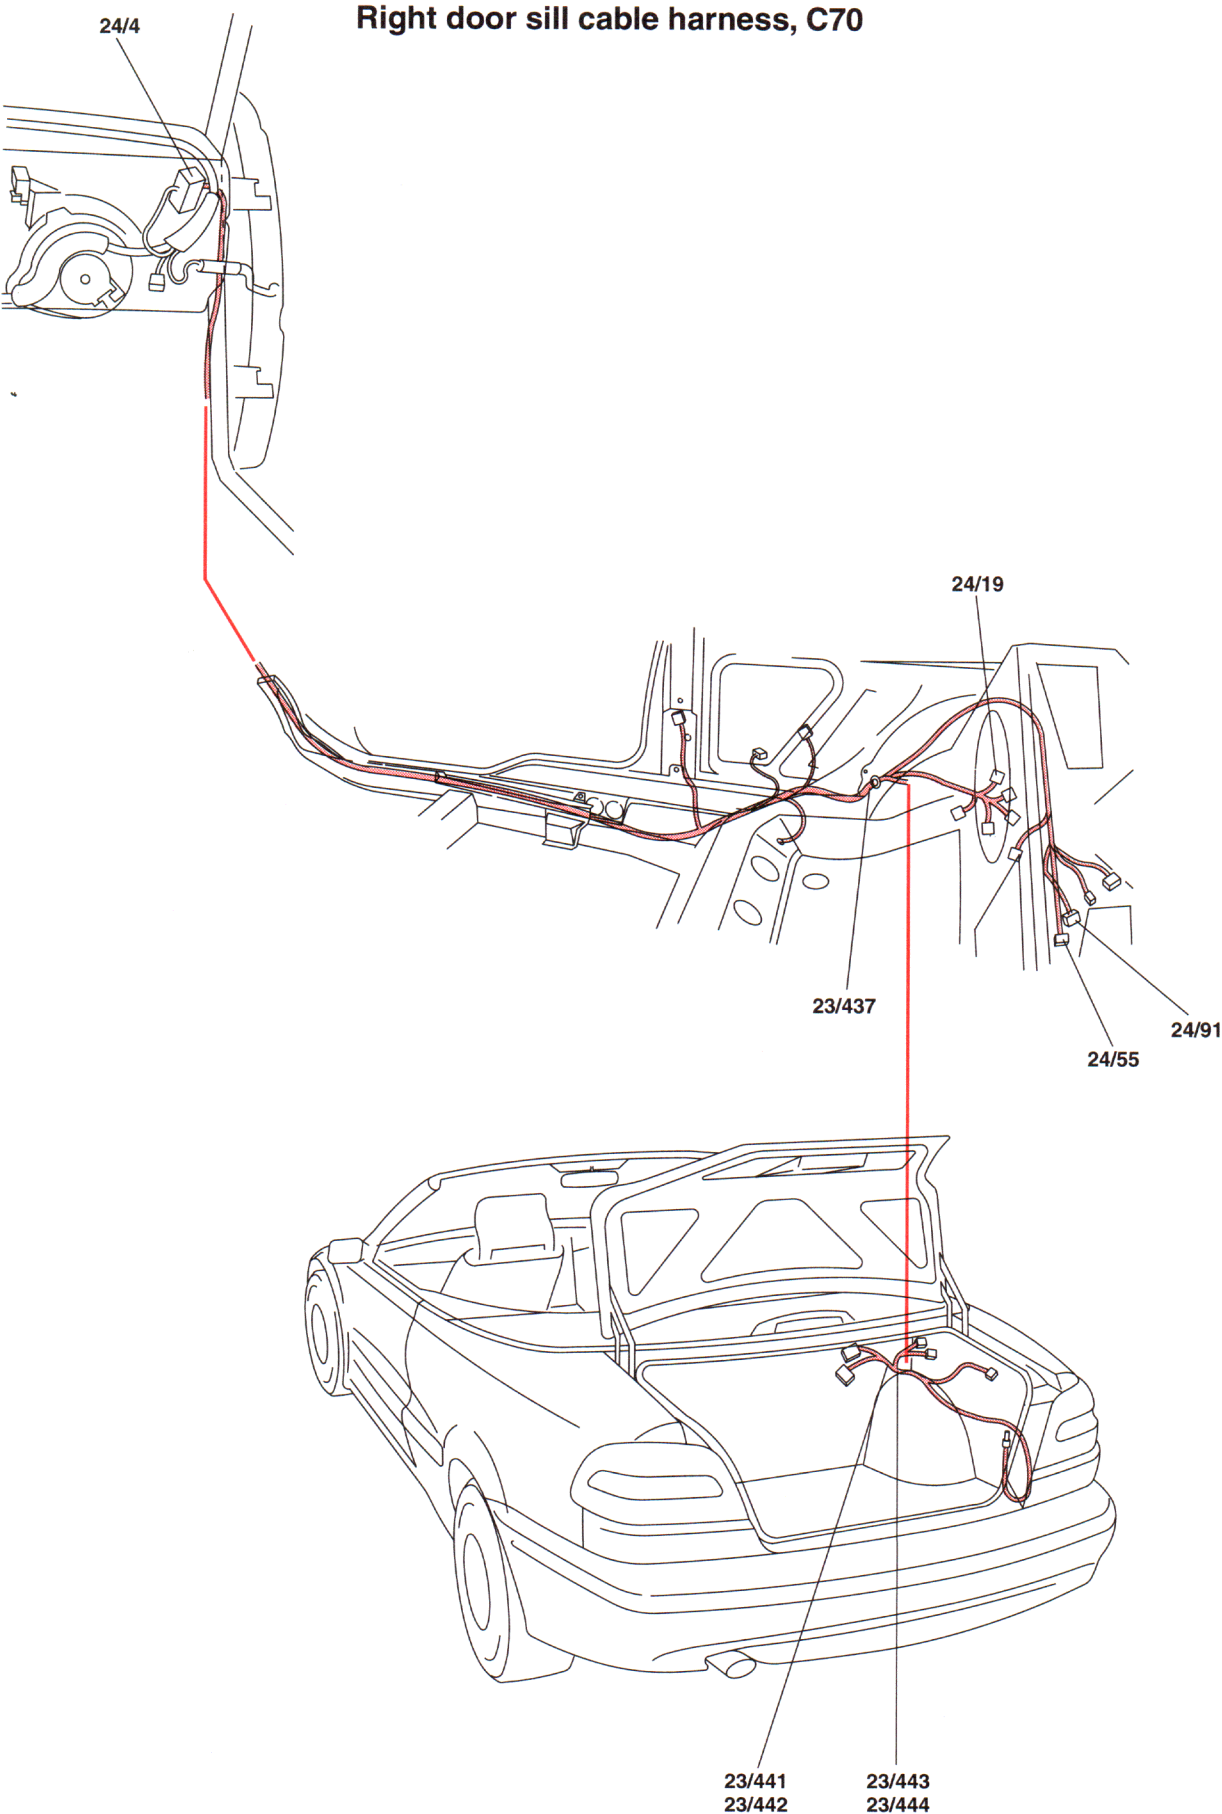

Right door sill cable harness, S70/V70

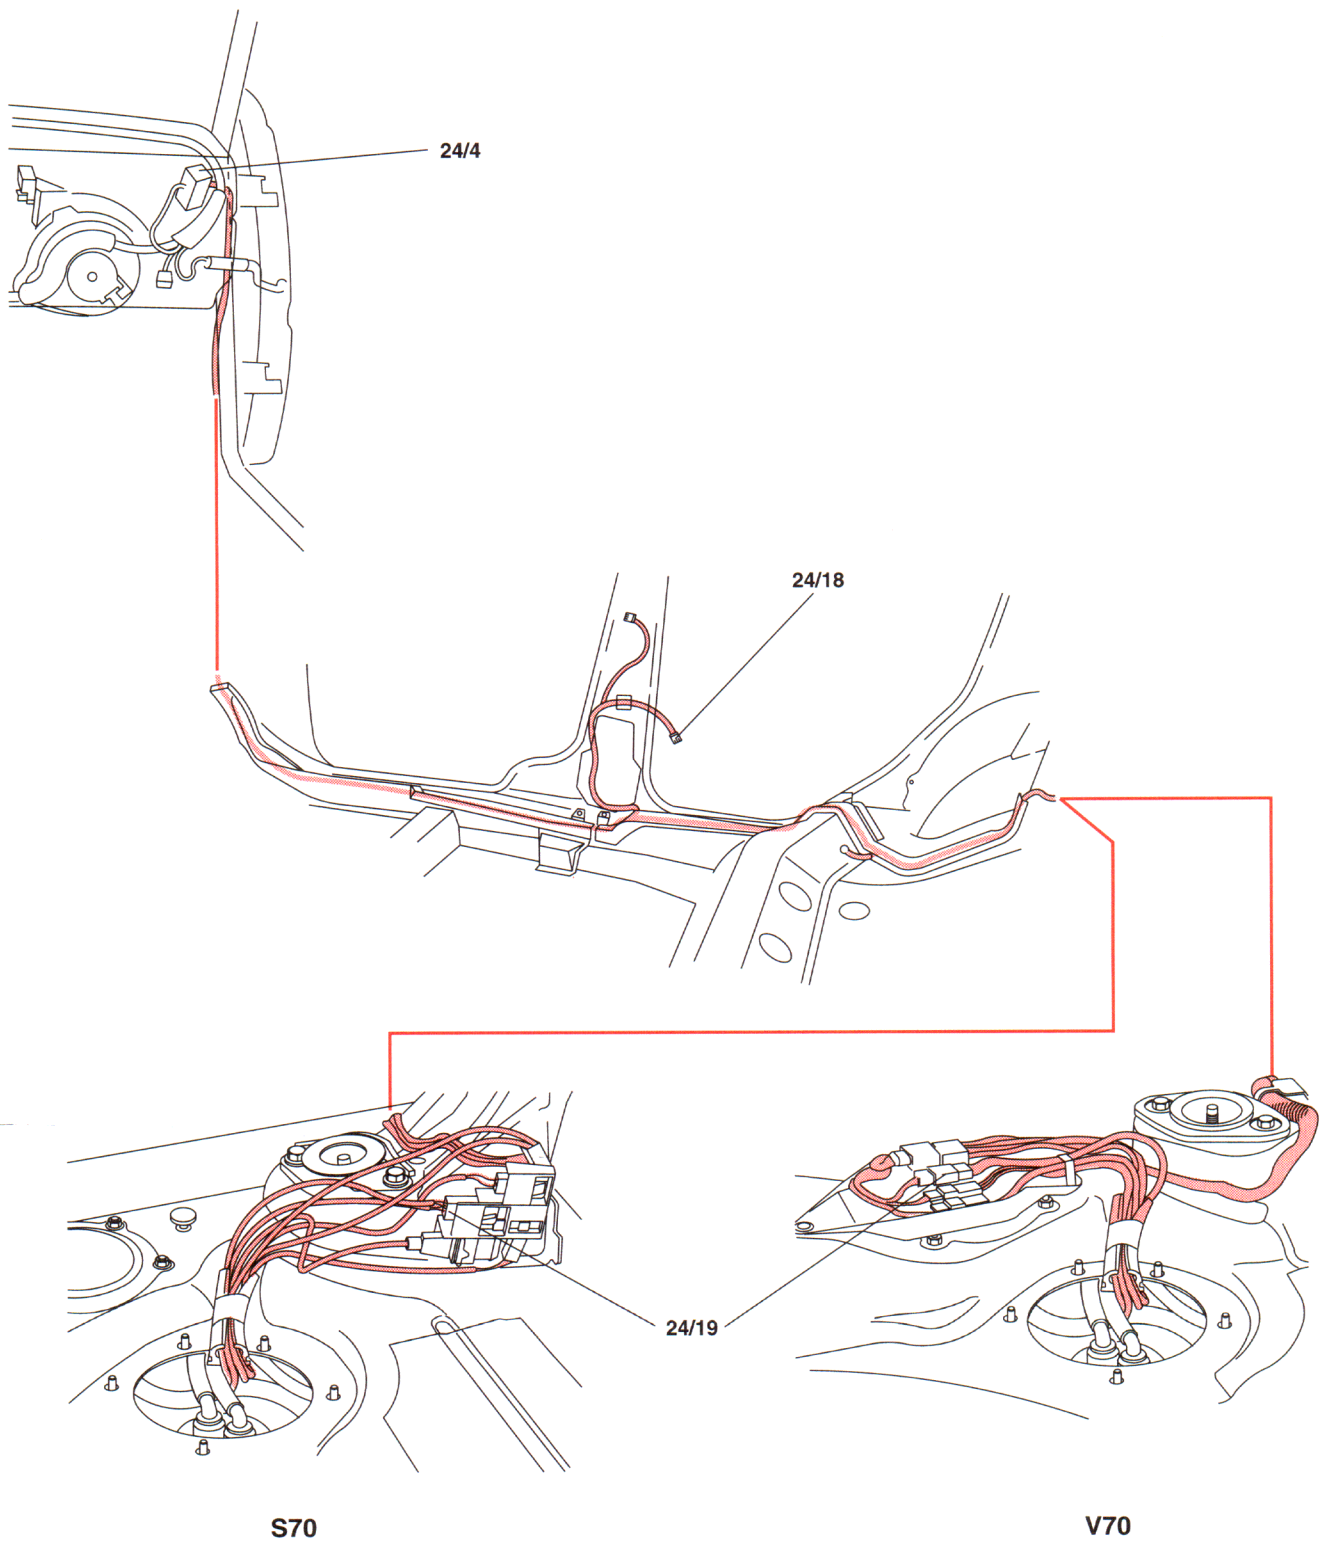


Soft-top cable harness

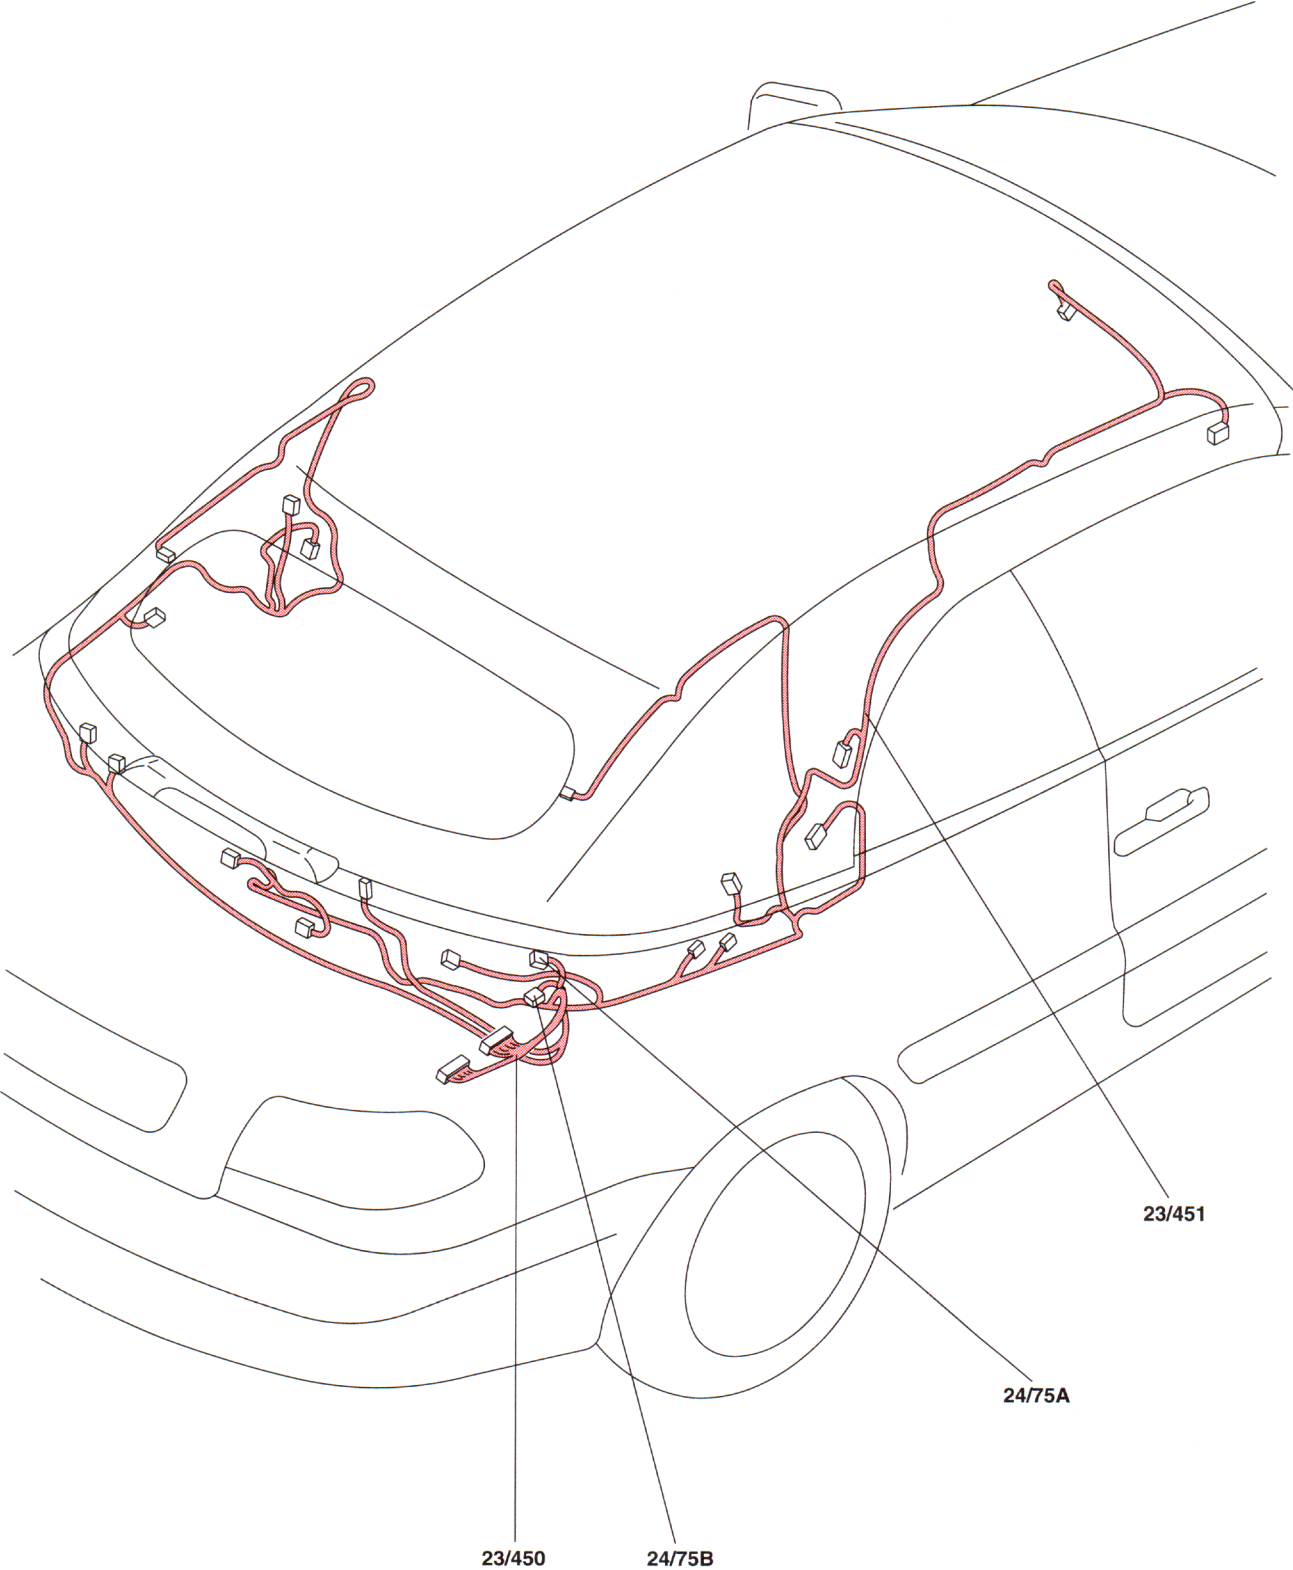


Routing of cable harnesses in the car

Roof cable harness, C70 coupé

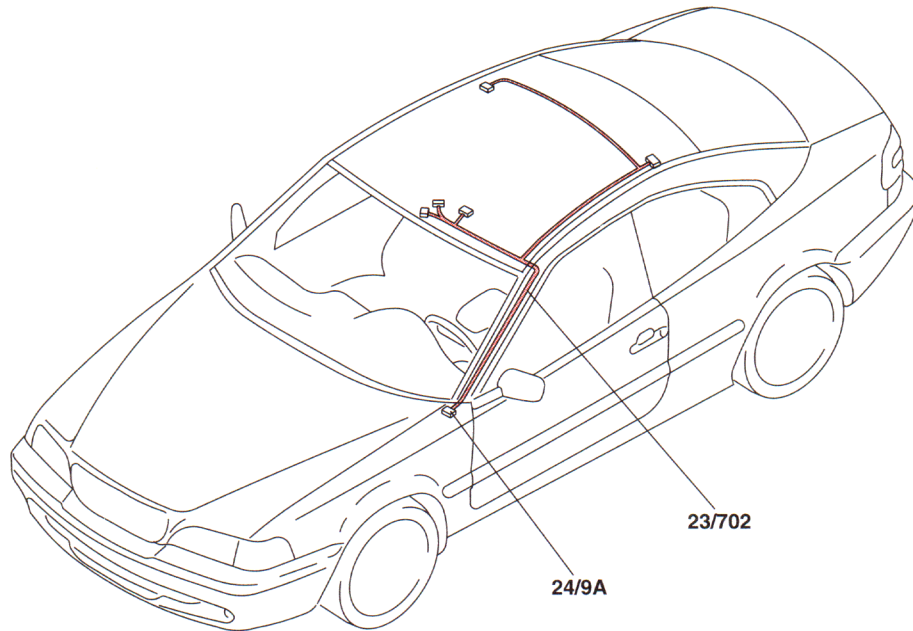


Power sunroof cable harness


Roof cable harness, S70/V70

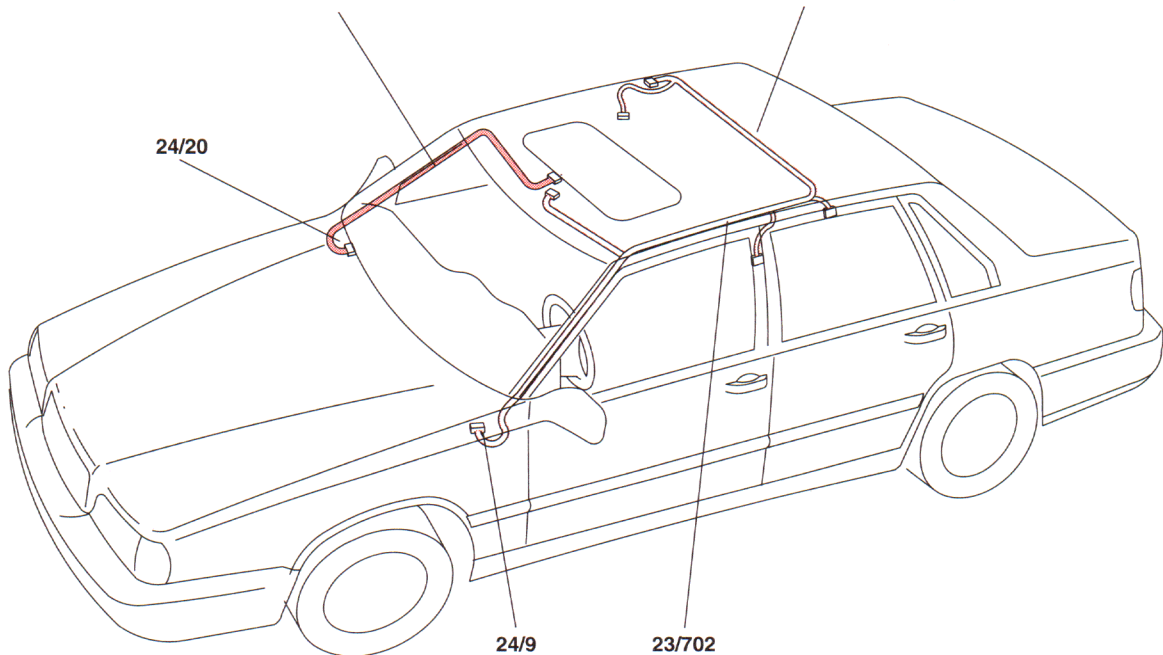


Routing of cable harnesses in the car

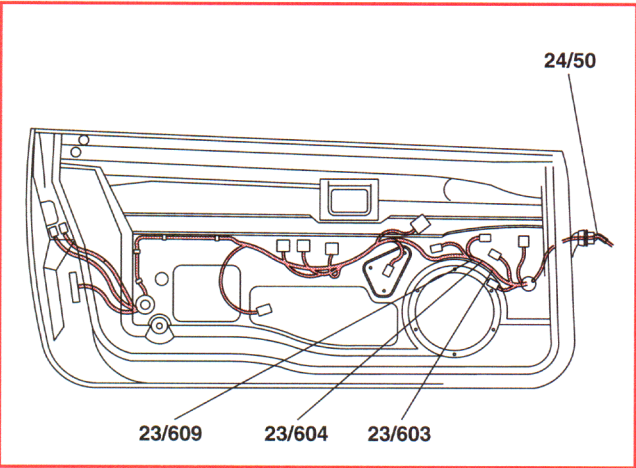

Driver door cable harness

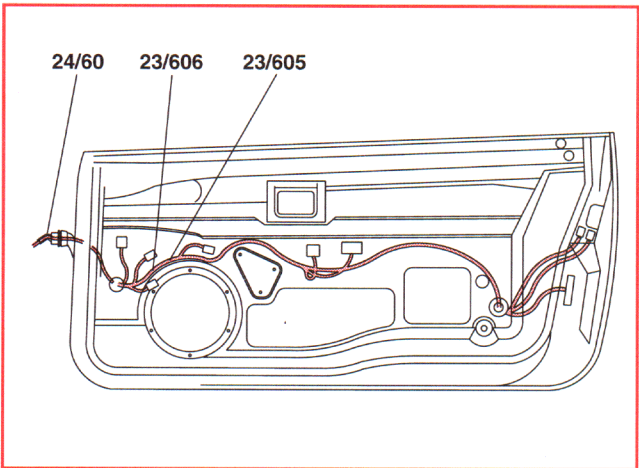


Passenger door cable harness

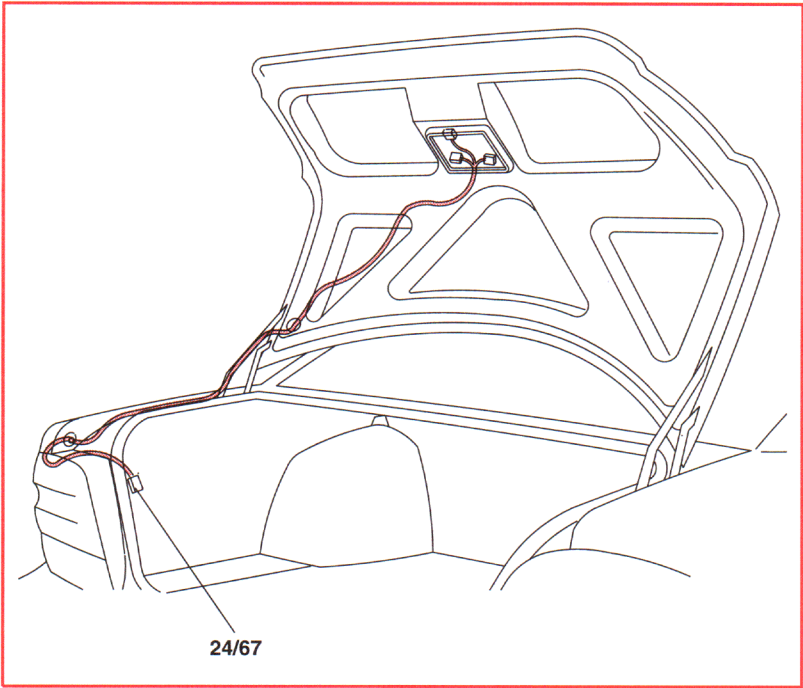


Trunk lid cable harness


Routing of cable harnesses in the car

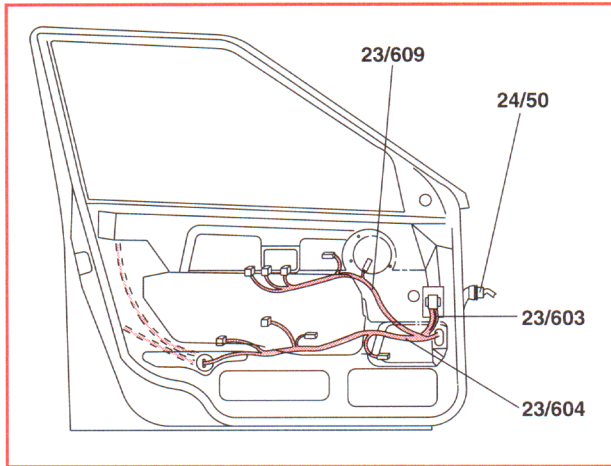


Driver door cable harness

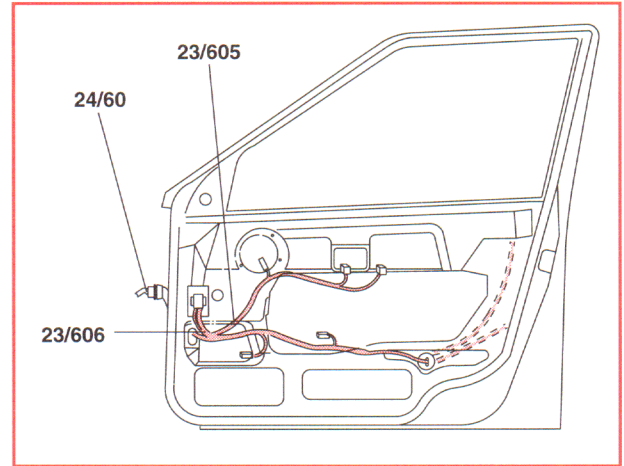


Passenger door cable harness

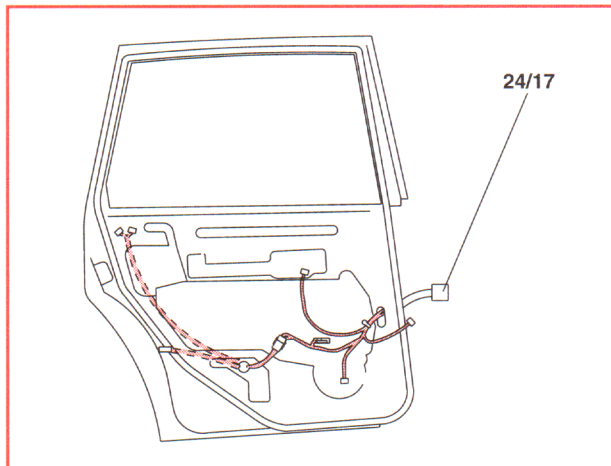

Left rear door cable harness

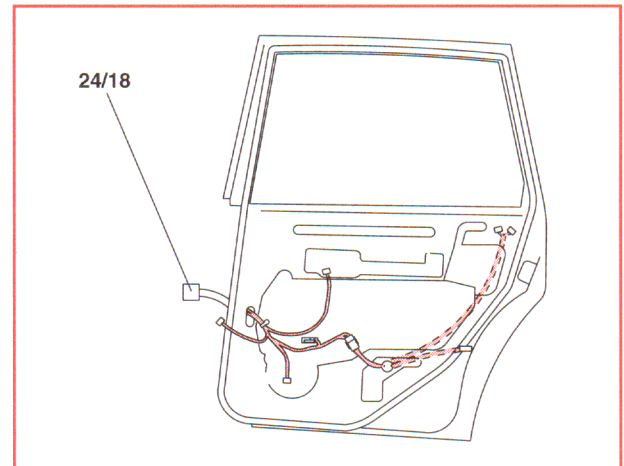


Right rear door cable harness

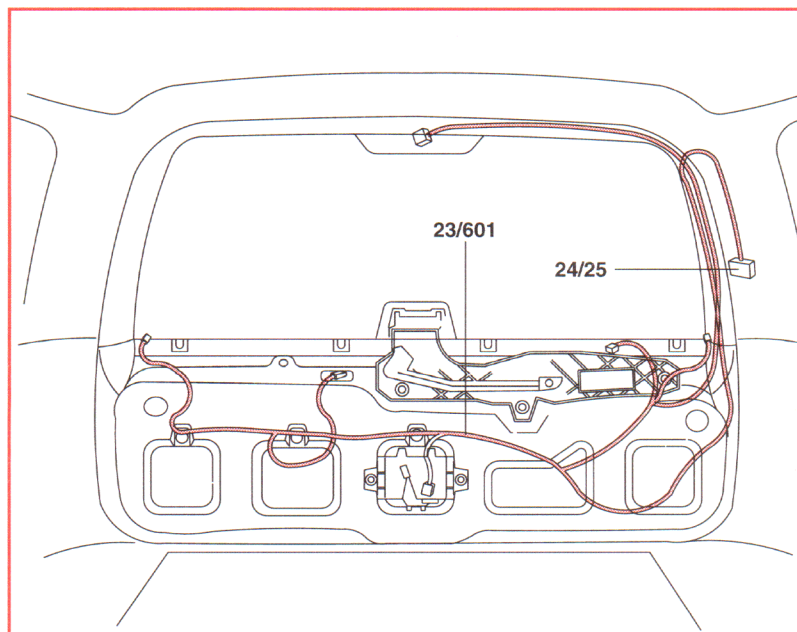


Trunk lid cable harness

Engine management system













Fenix 5.2

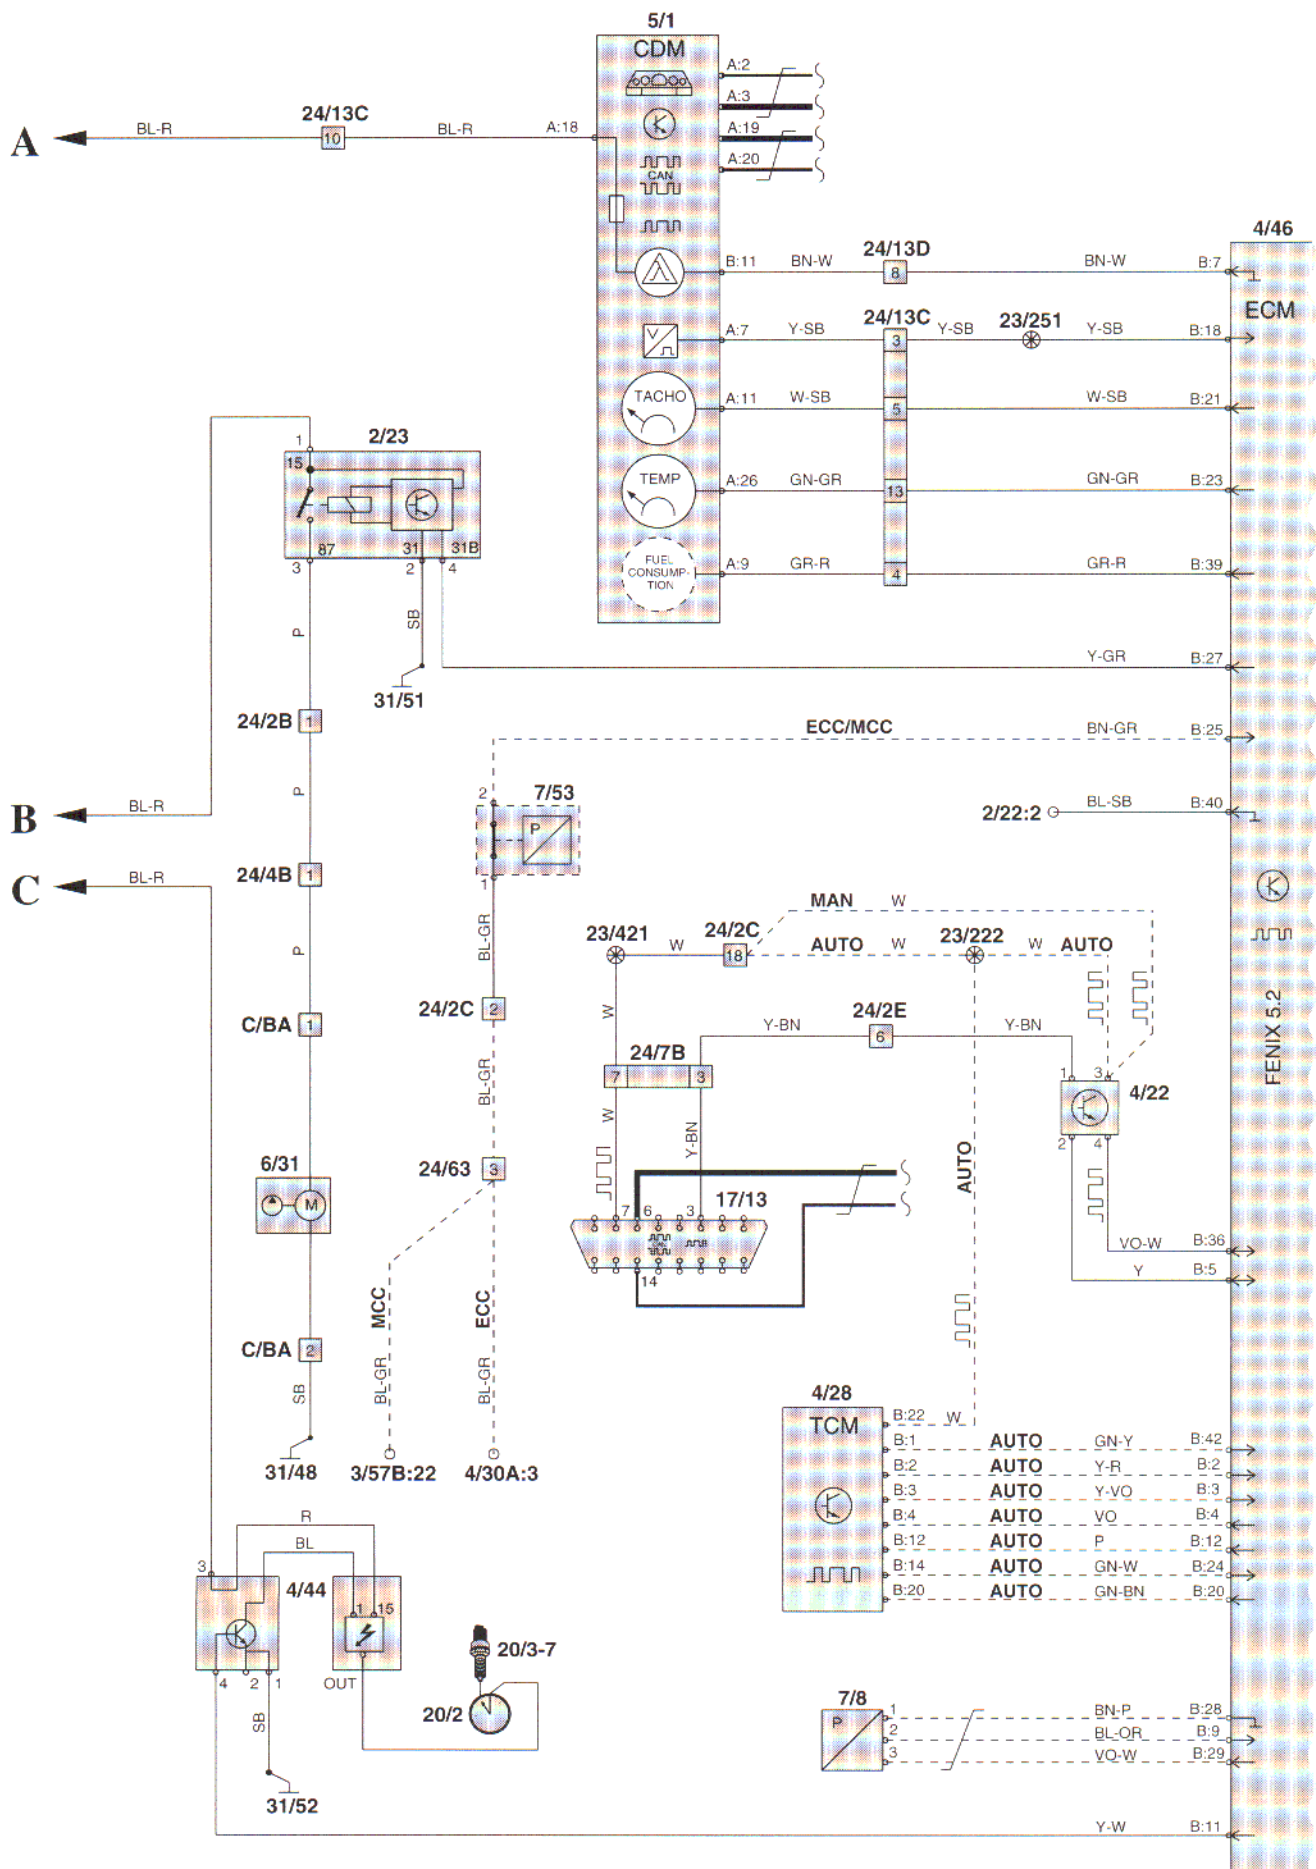


Engine management system Fenix 5.2

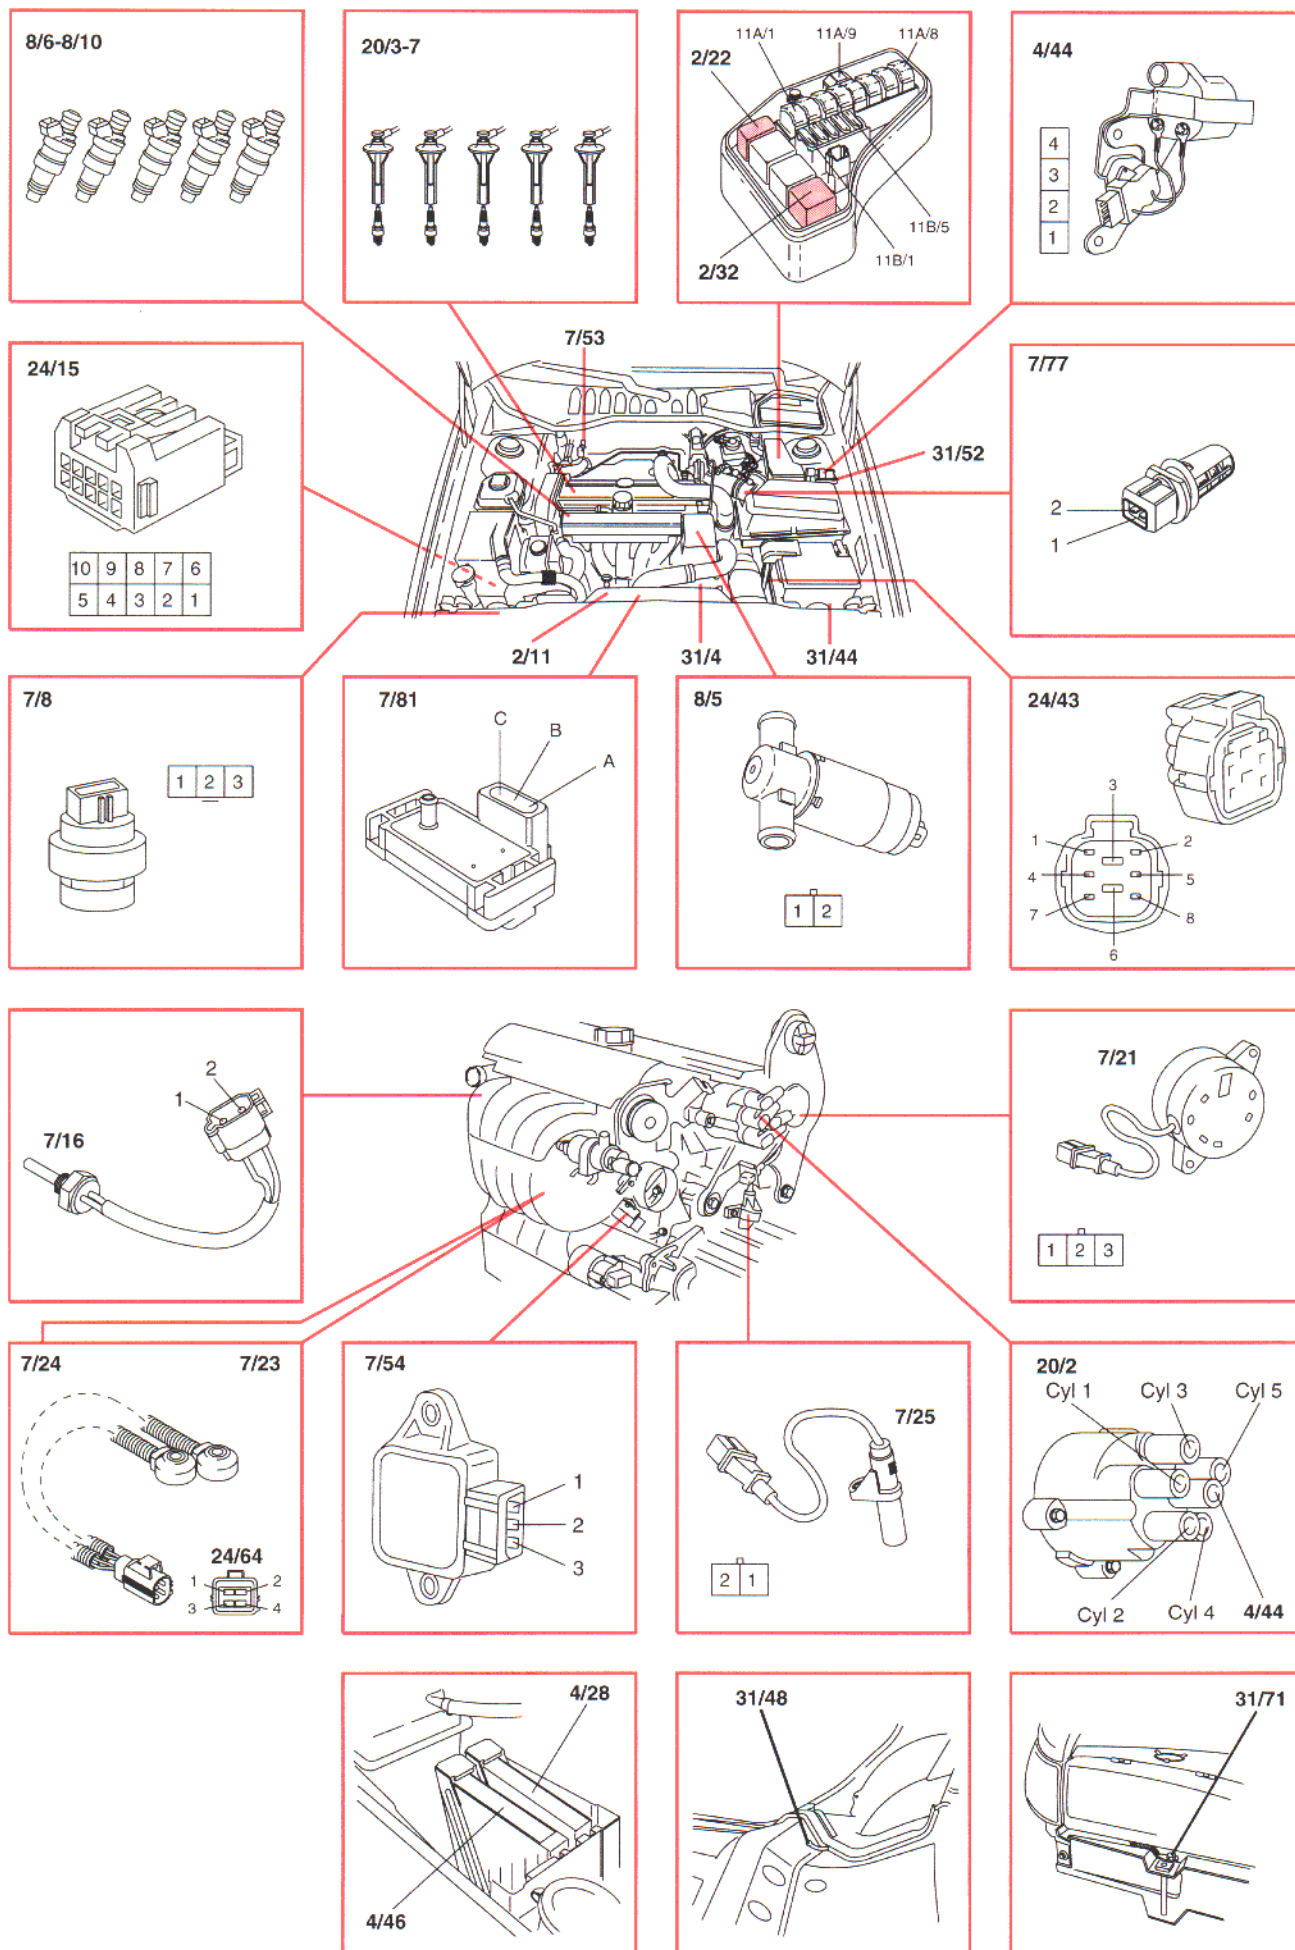





















Engine management system Fenix 5.2

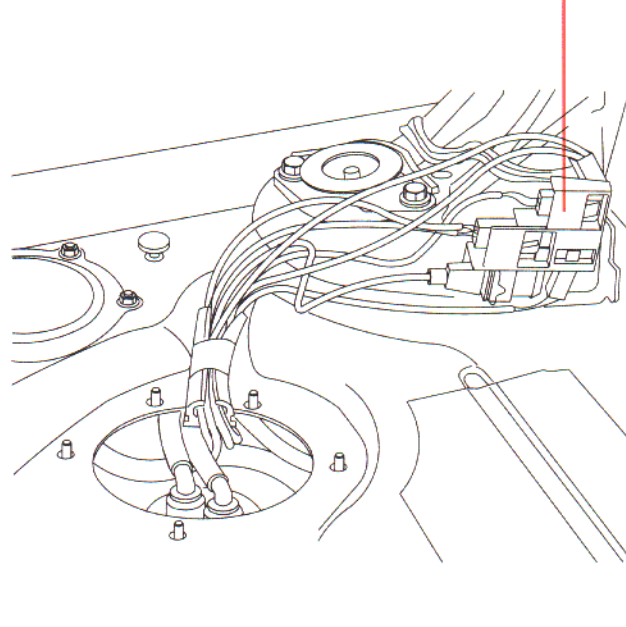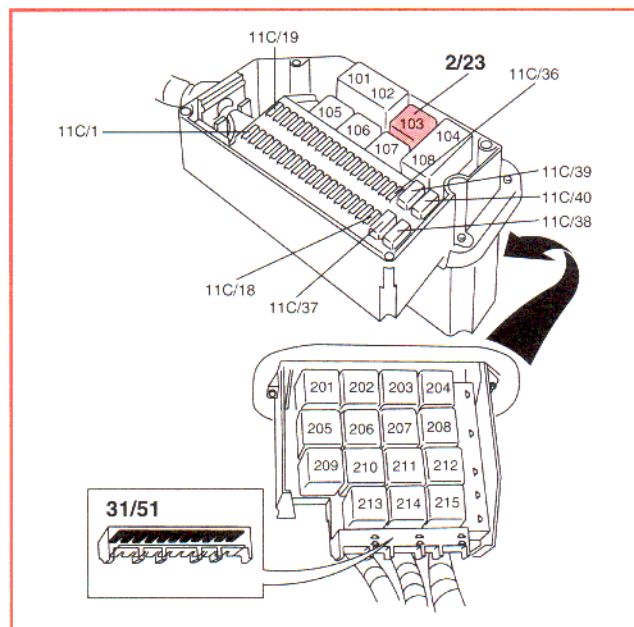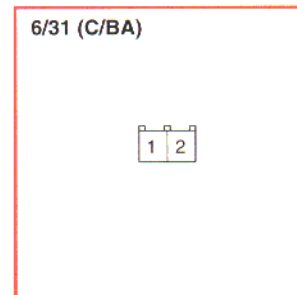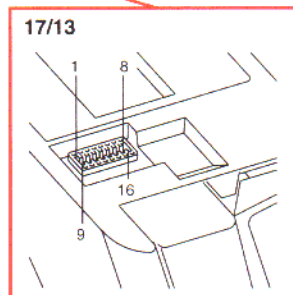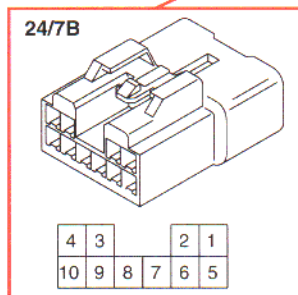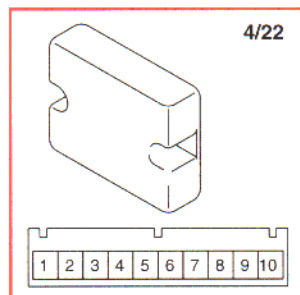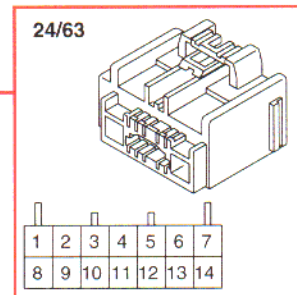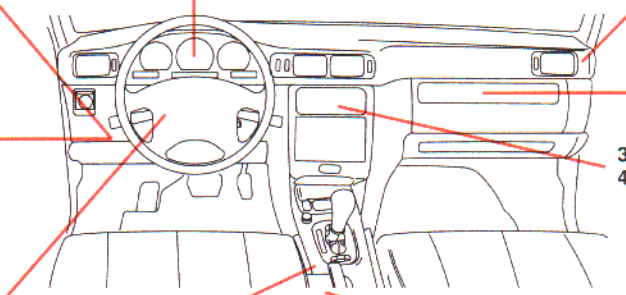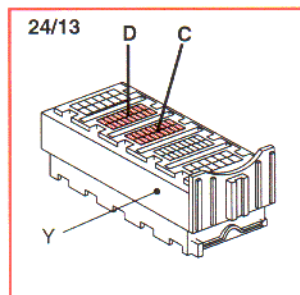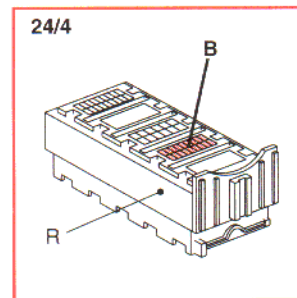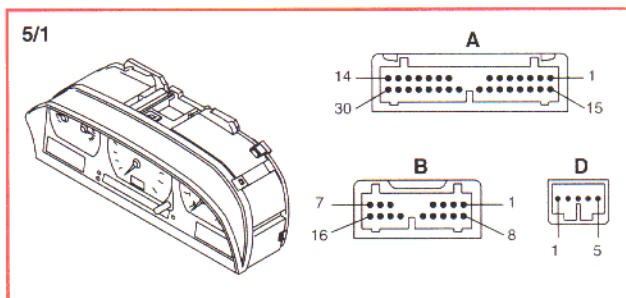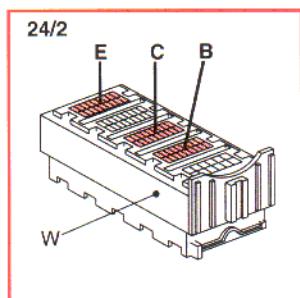

Engine management system Denso

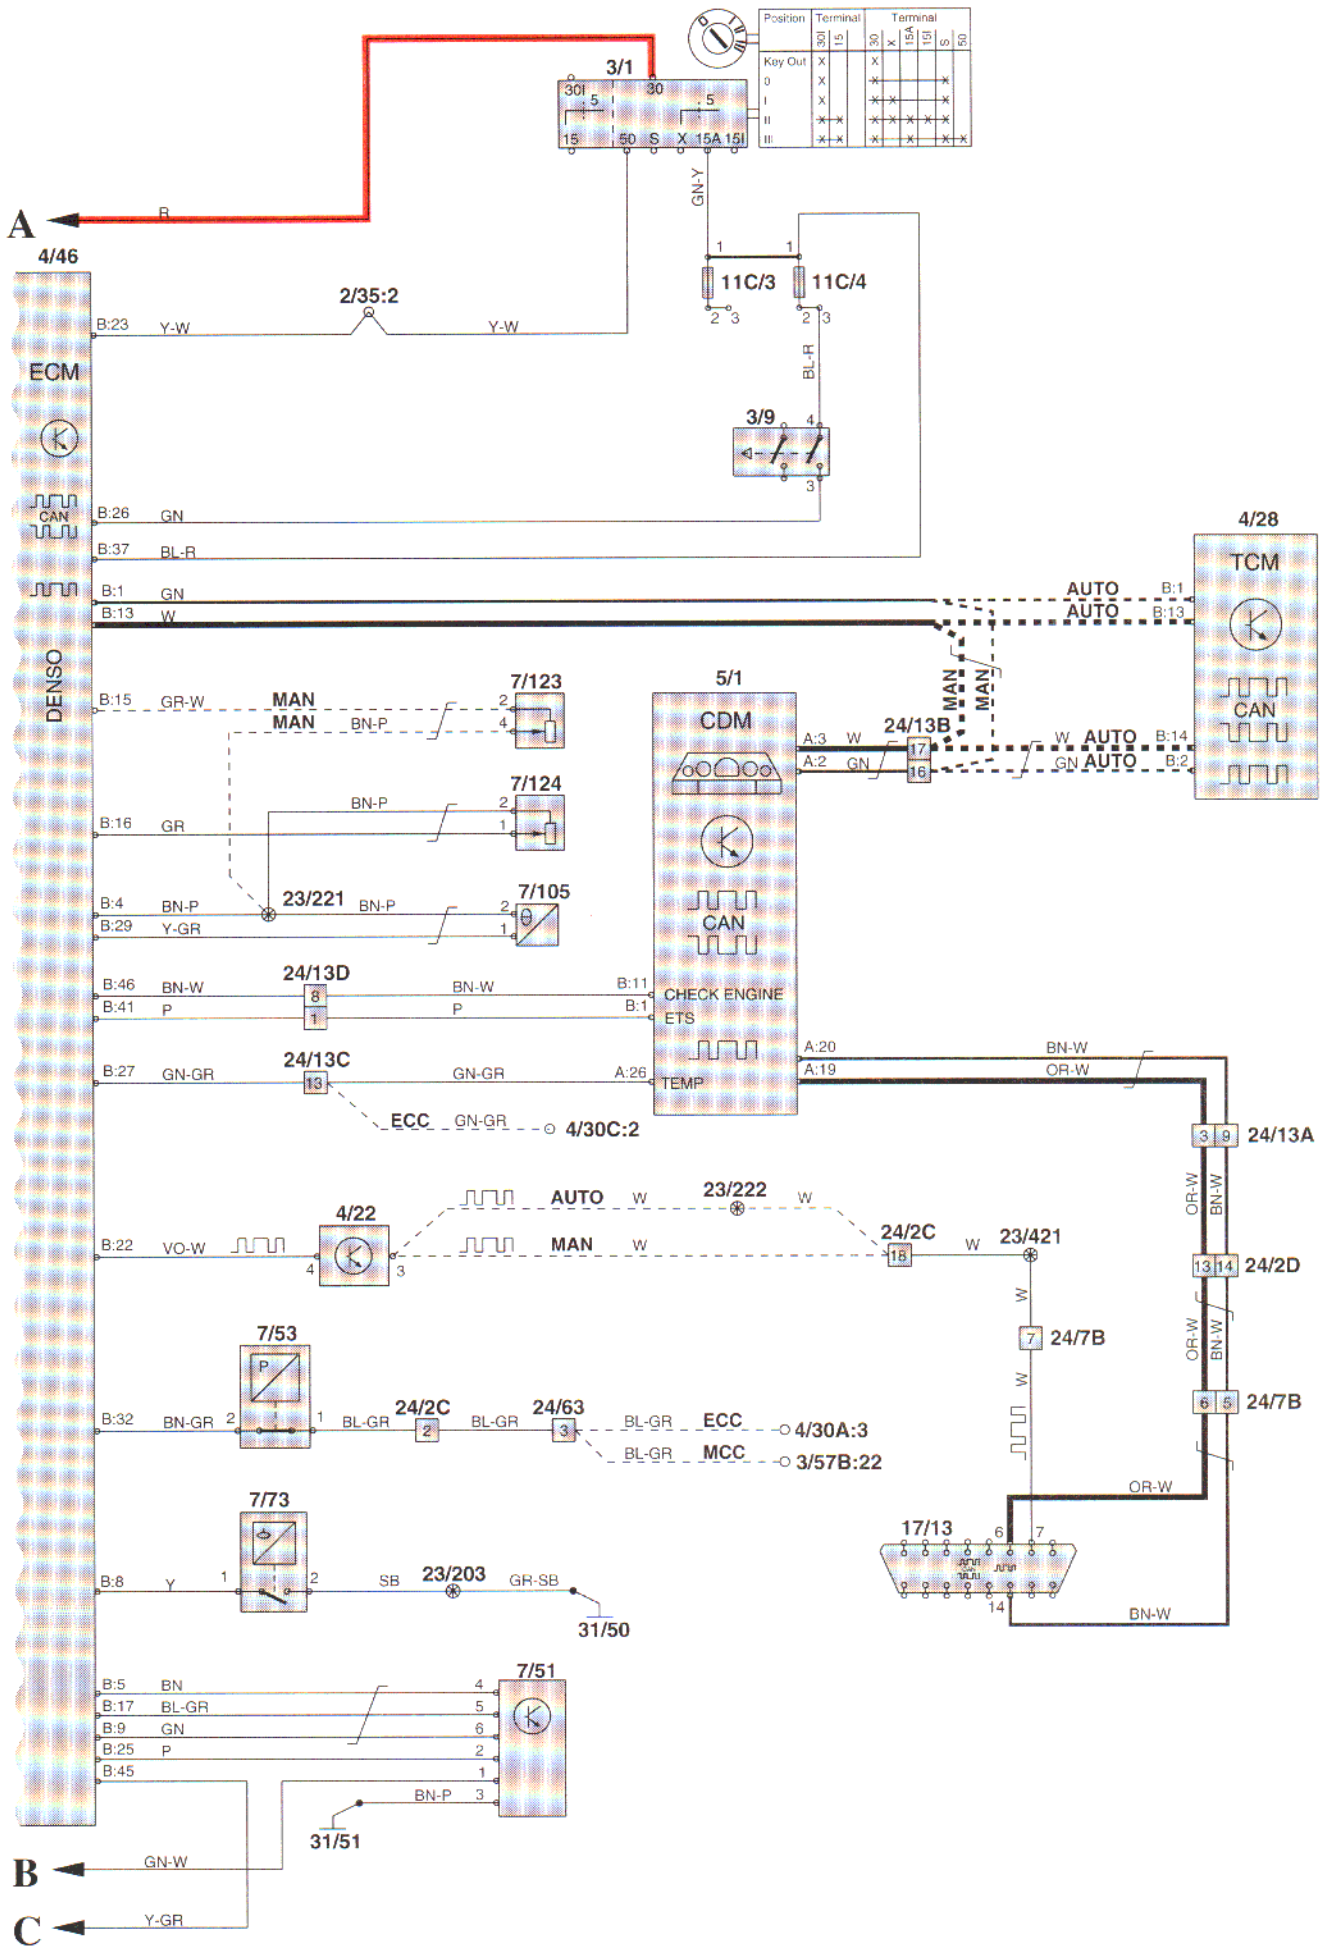


Engine management system Denso

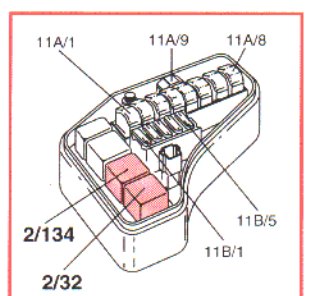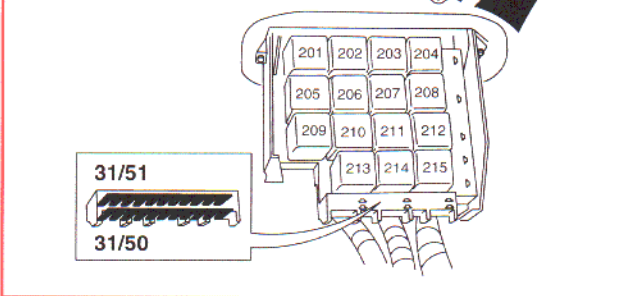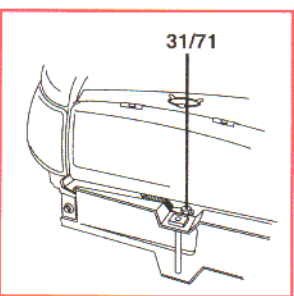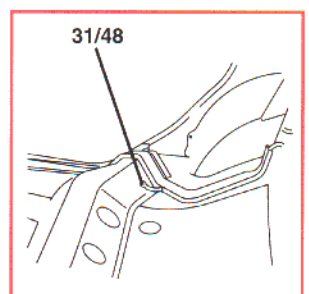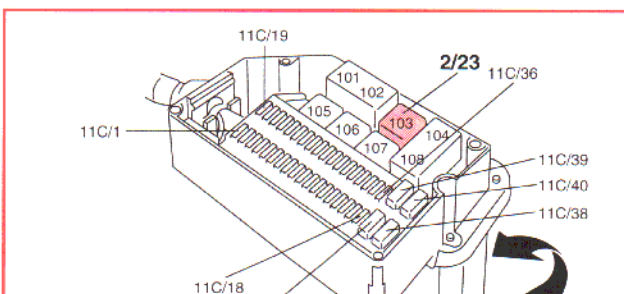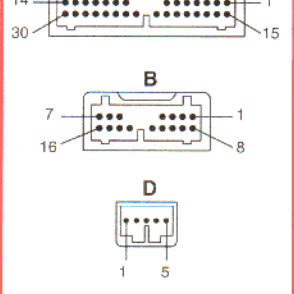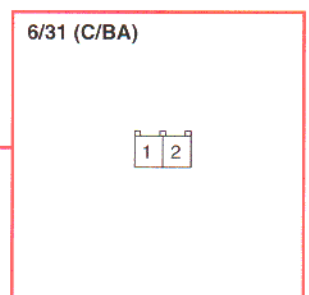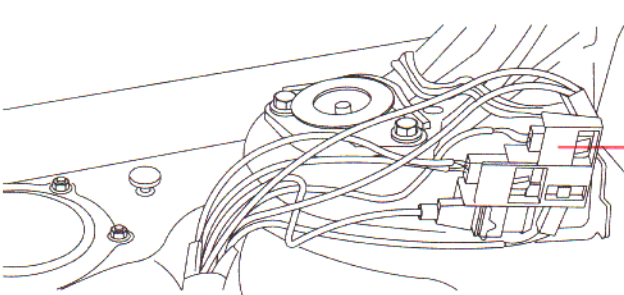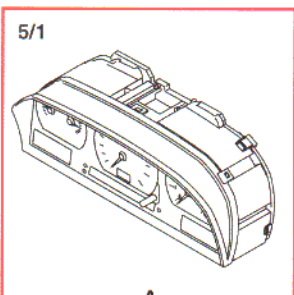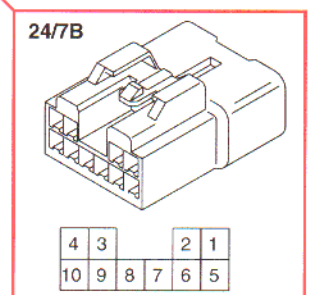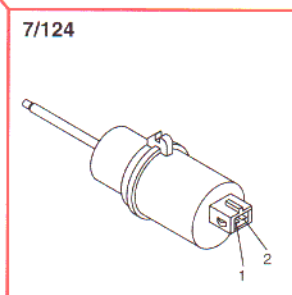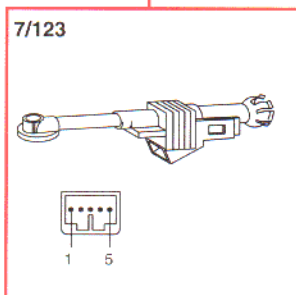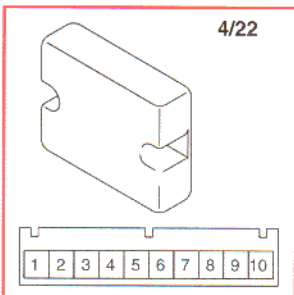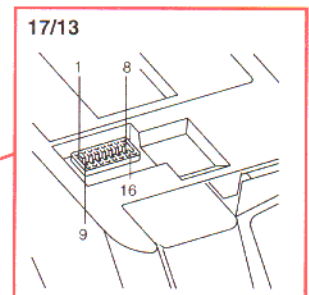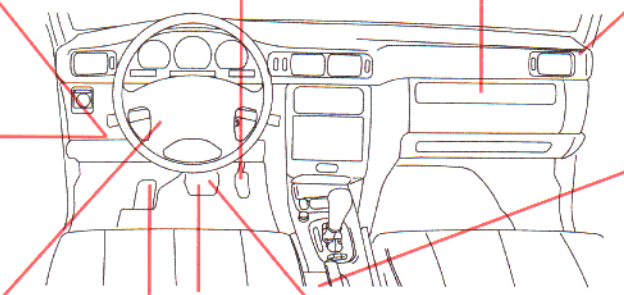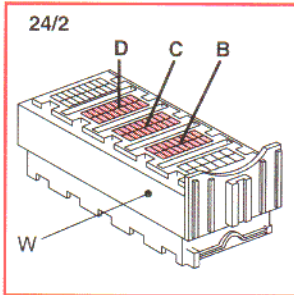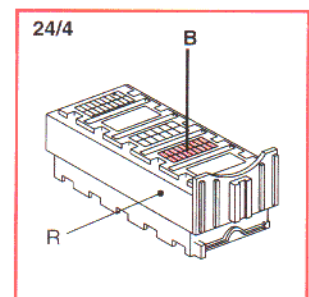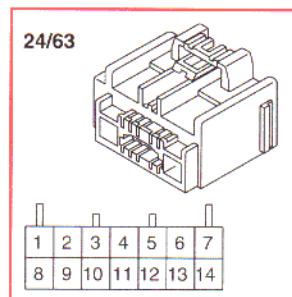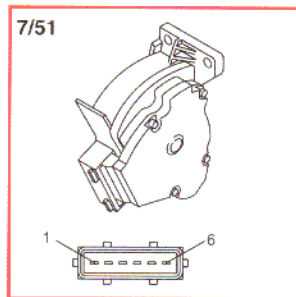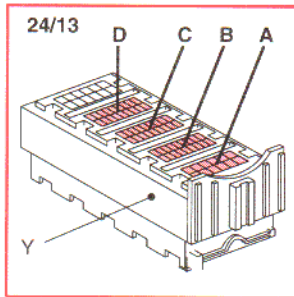


Engine management system Denso


20/3-20/7

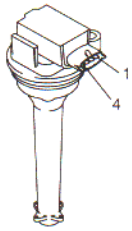

8/35

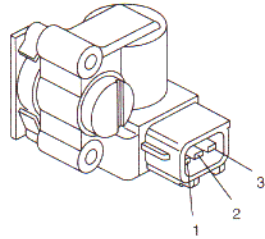


7/17

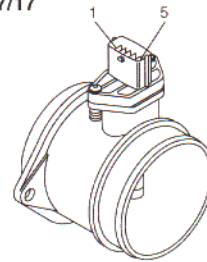


7/105

1 2

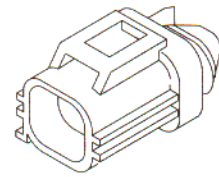


7/73

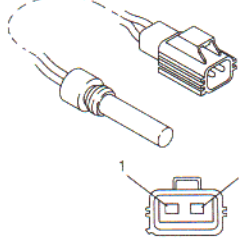


7/53

31/91



31/52

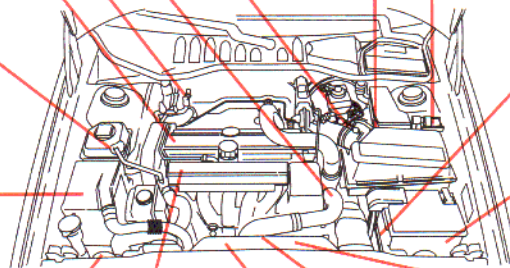

24/43

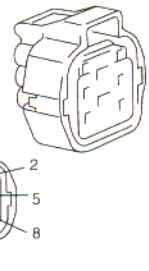


4/50

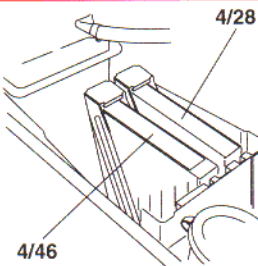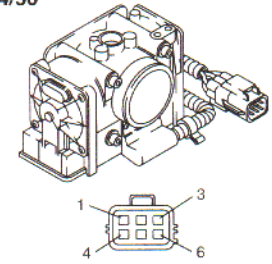


7/8


1 2 3




8/6-8/10




24/71

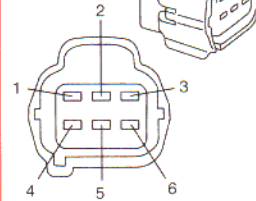


7/81

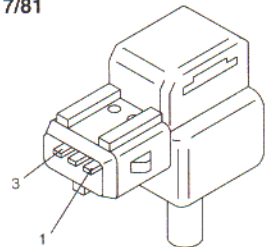


7/16

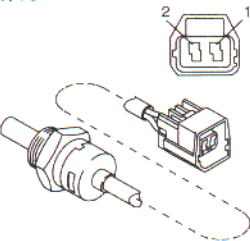


31/88 31/89

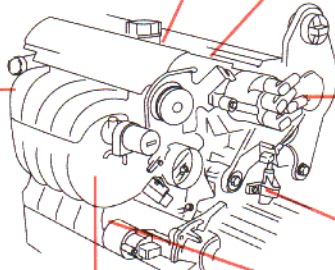


7/21

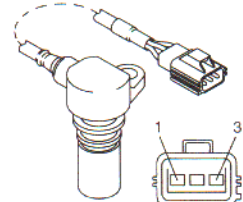


7/24

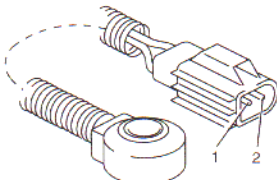


7/6

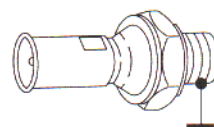


















7/25

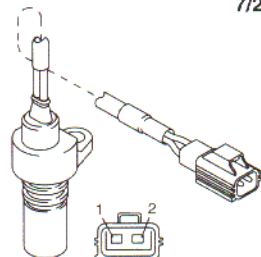


Engine management system ME7

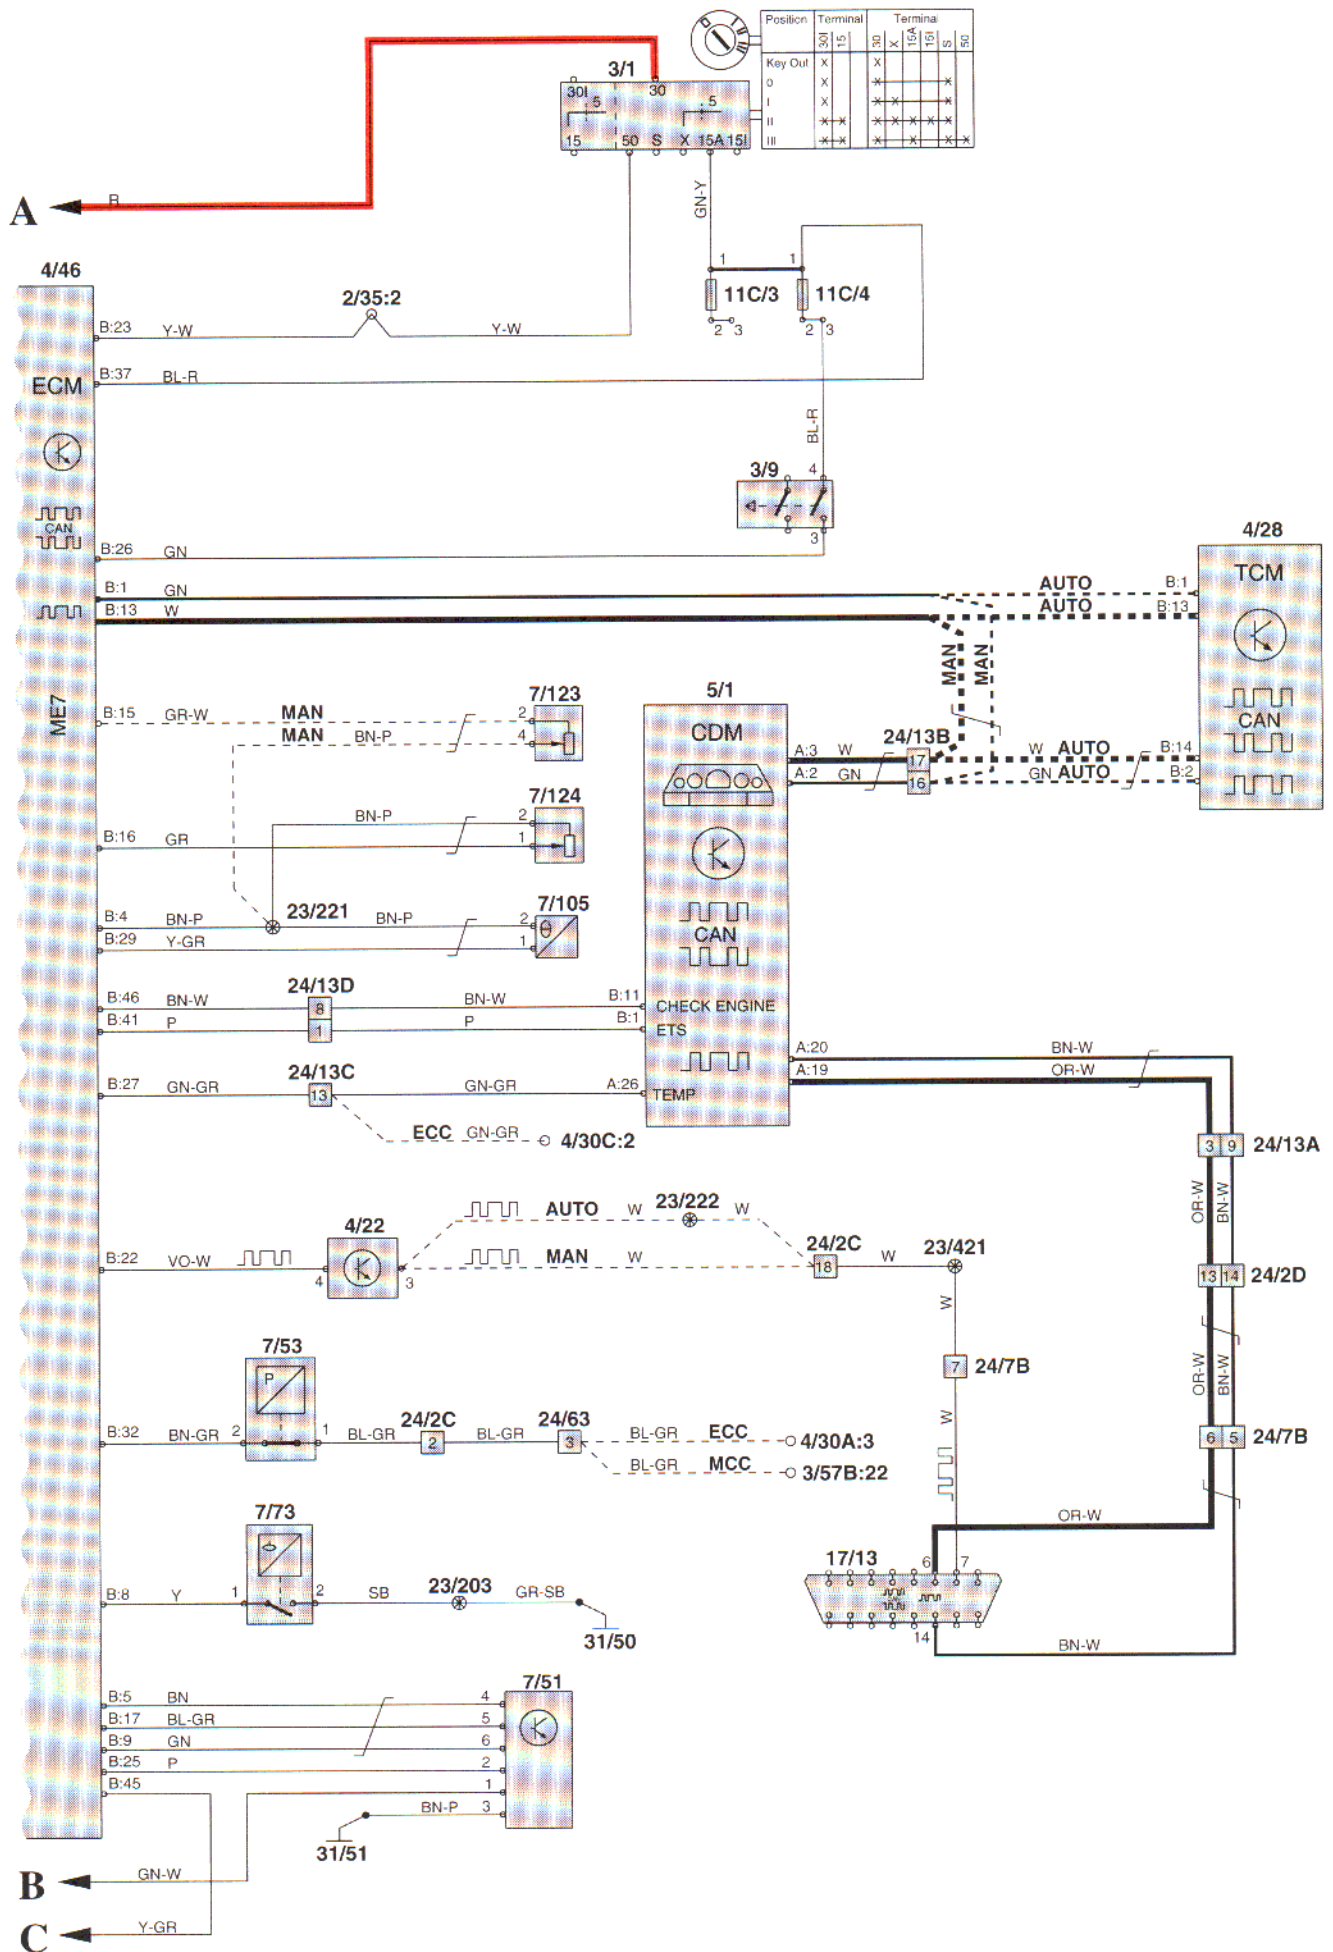








Engine management system ME7

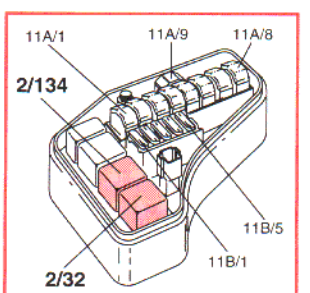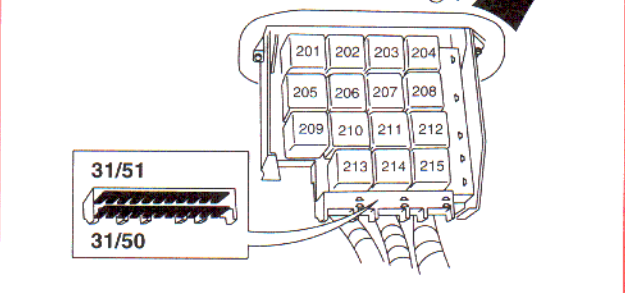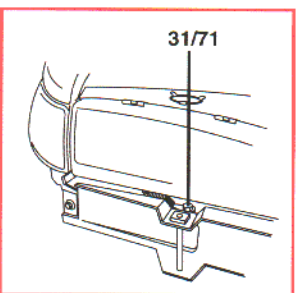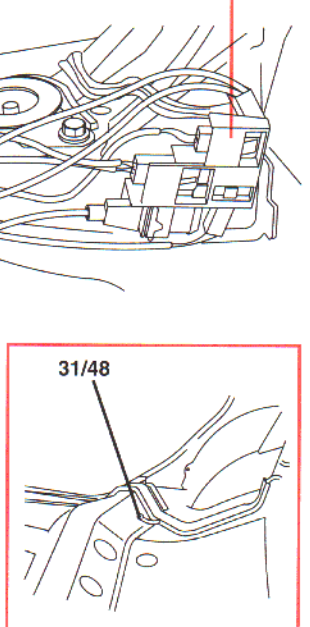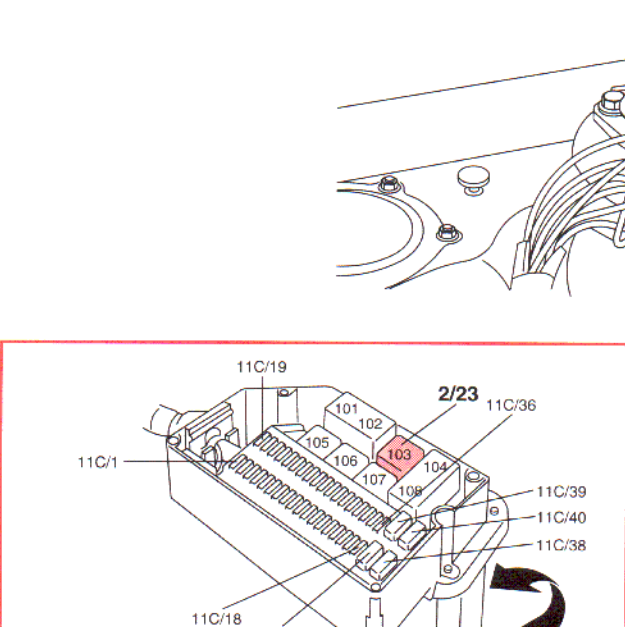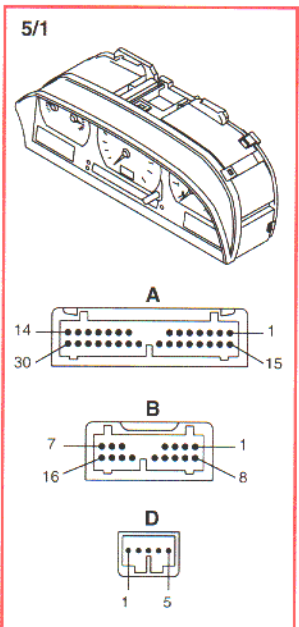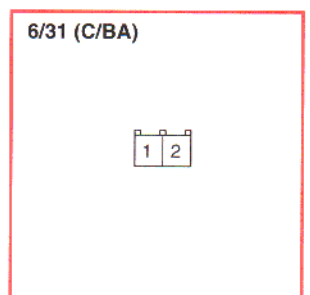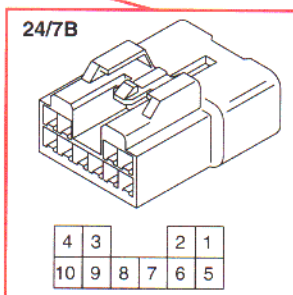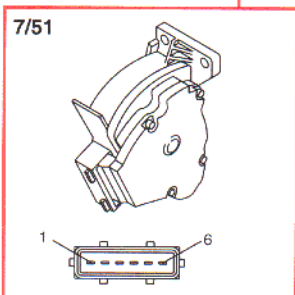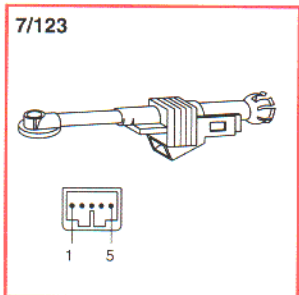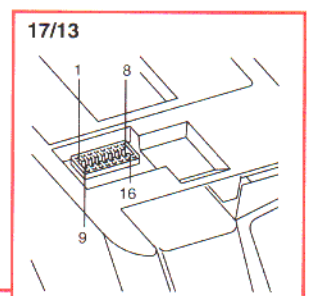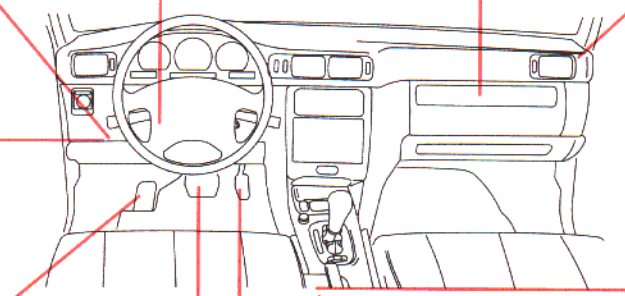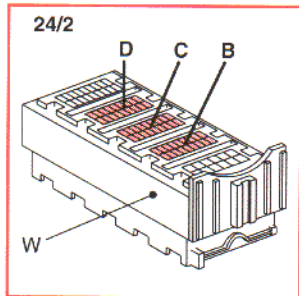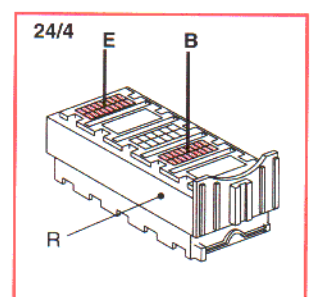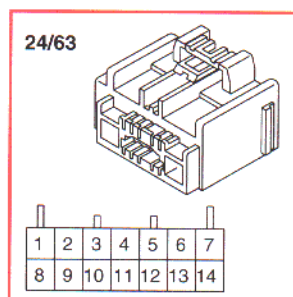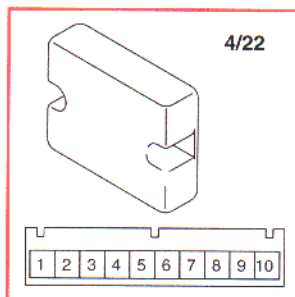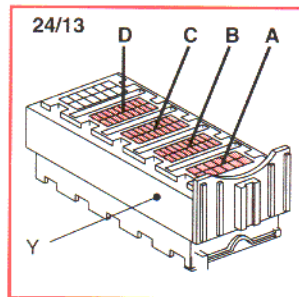
















Engine management system ME7















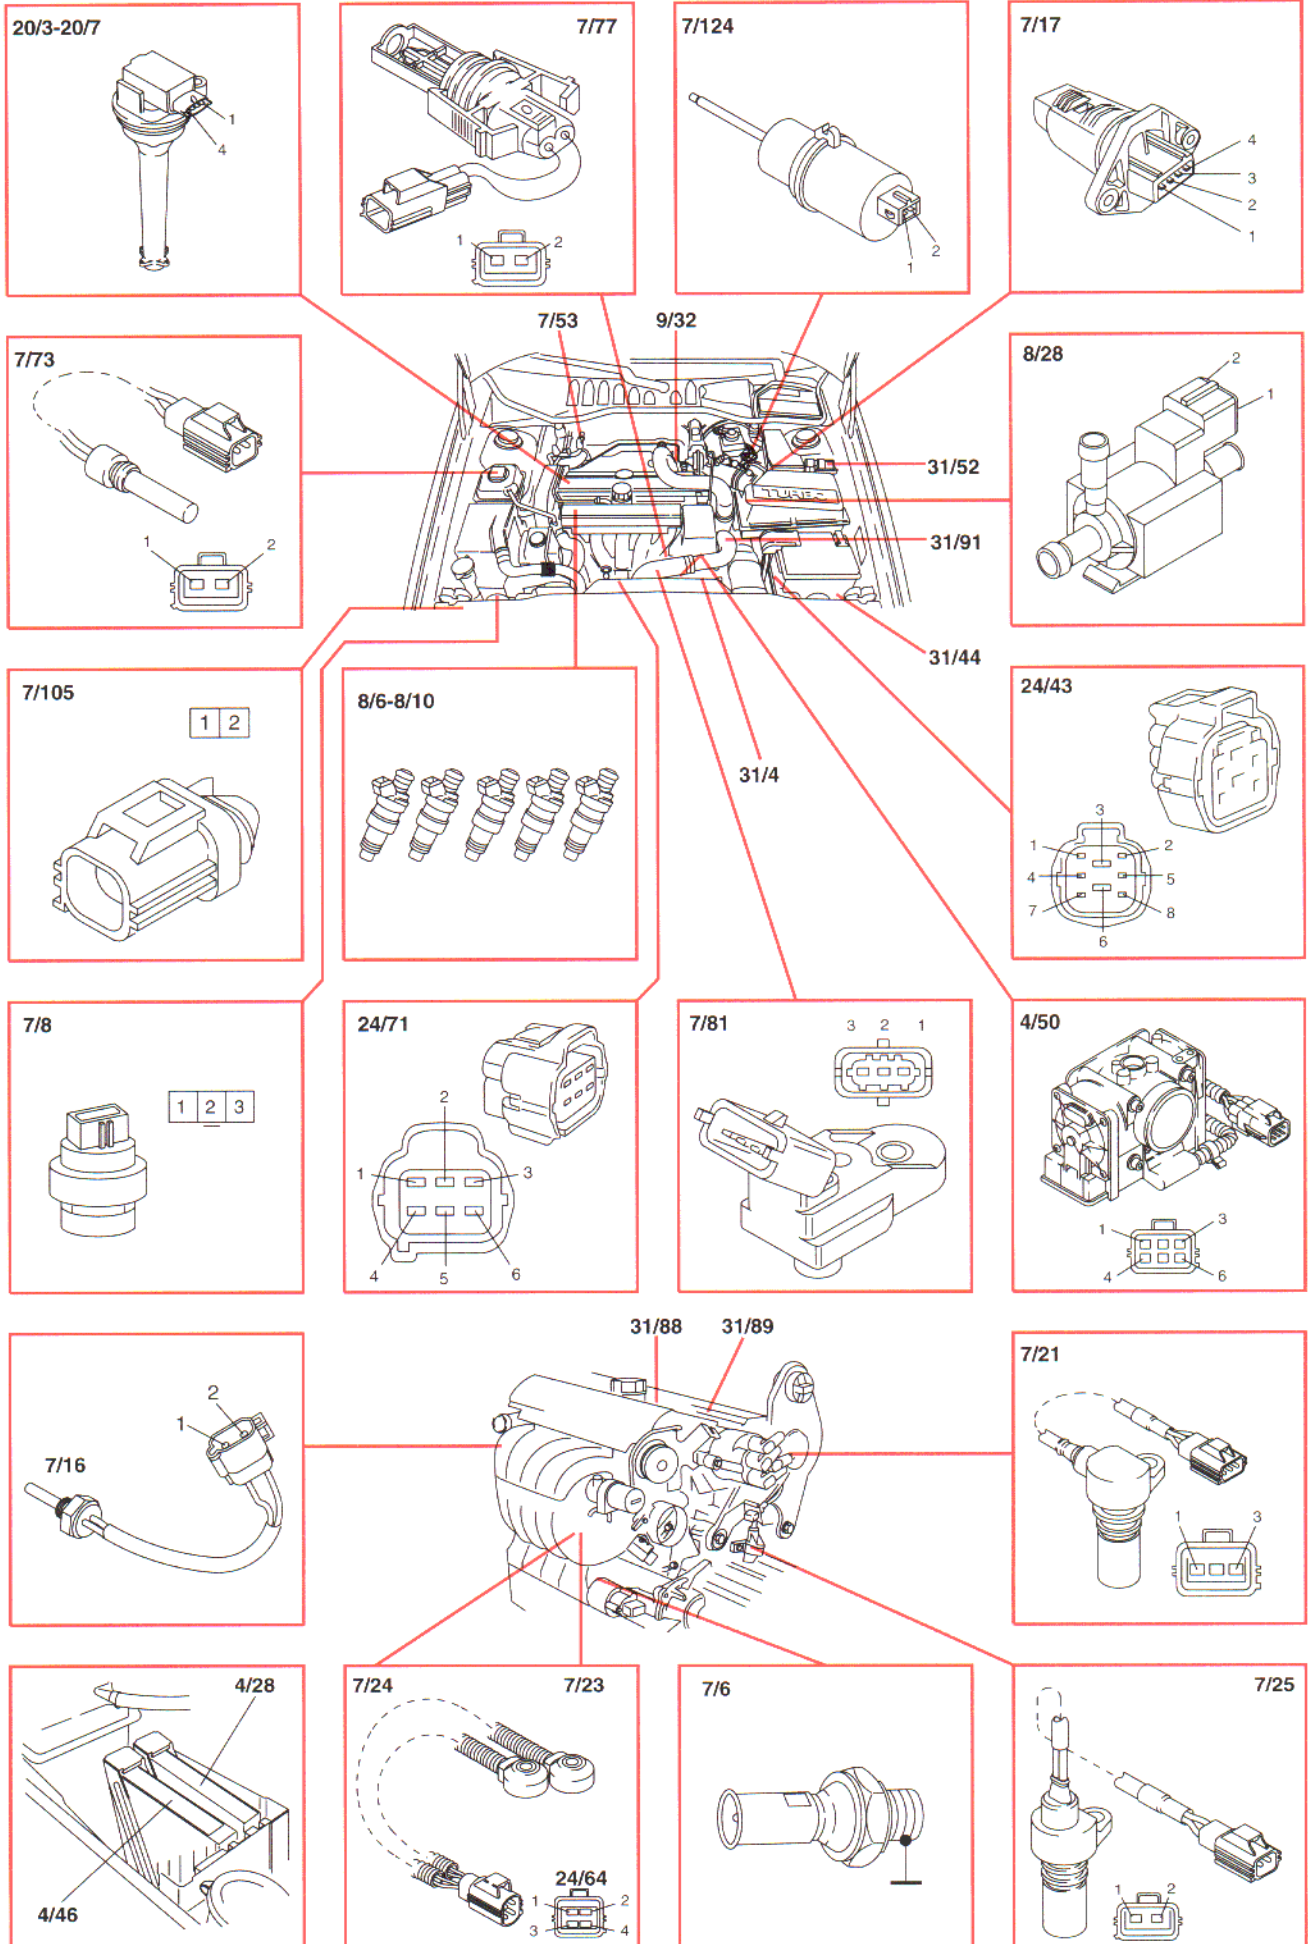


Emissions control Fenix 5.2

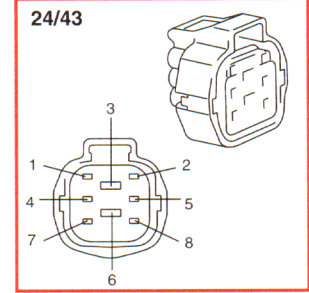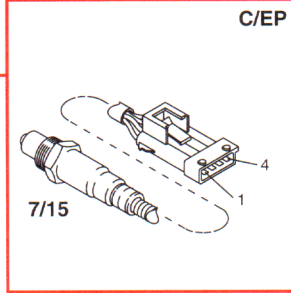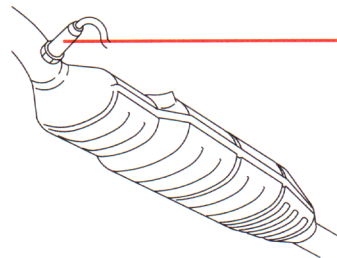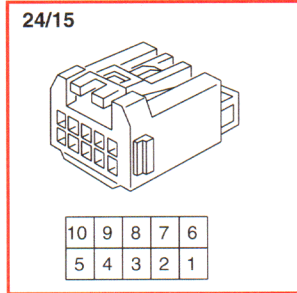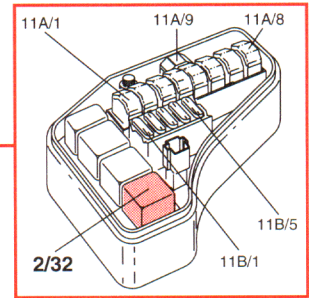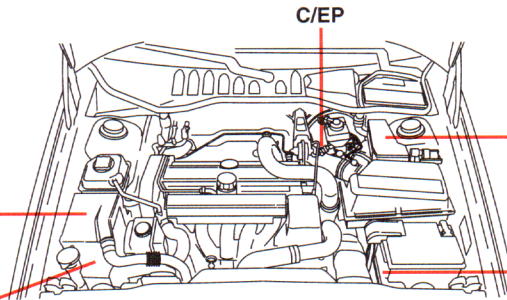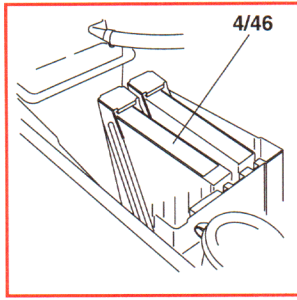



Emissions control Denso

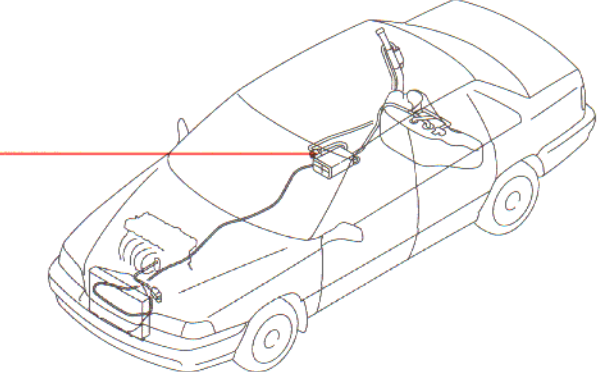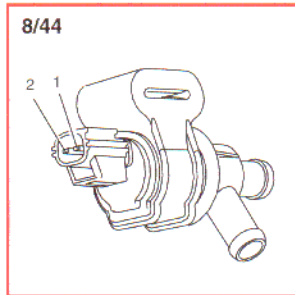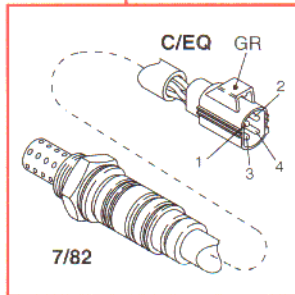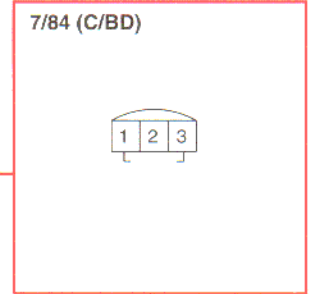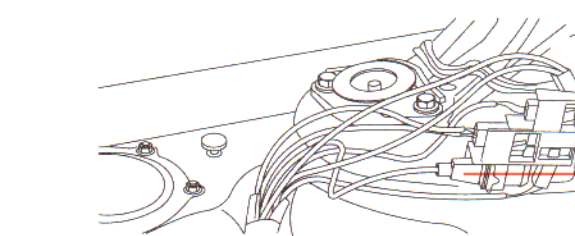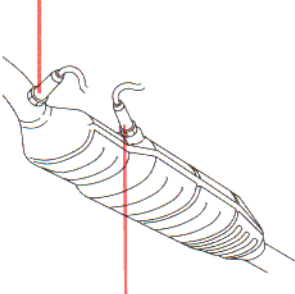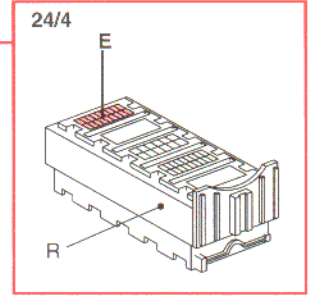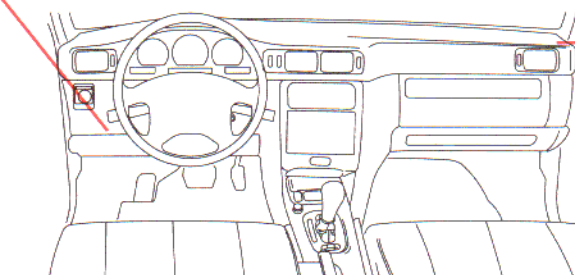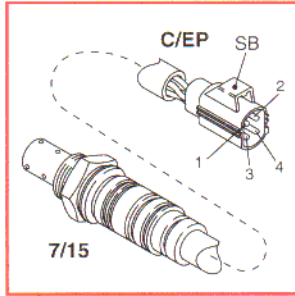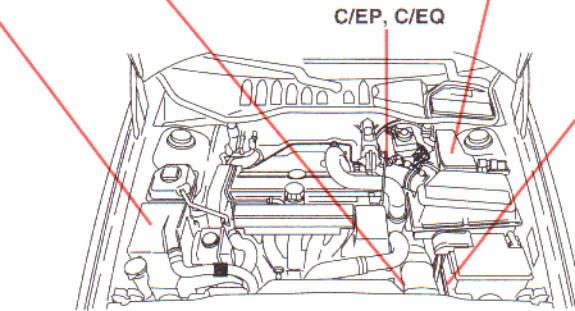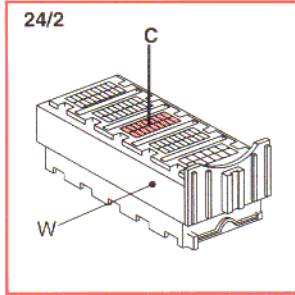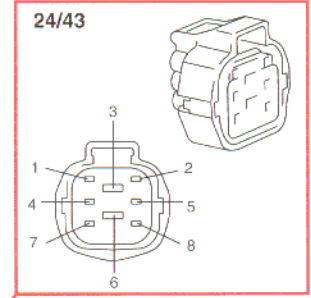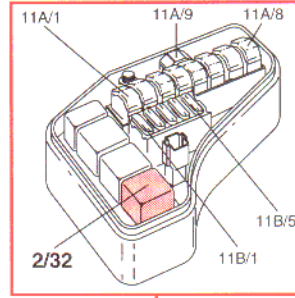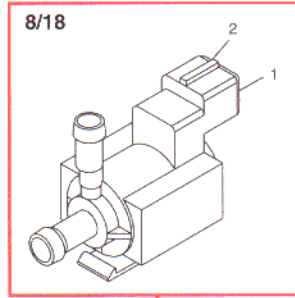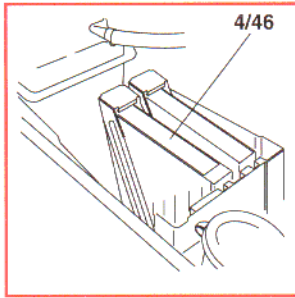

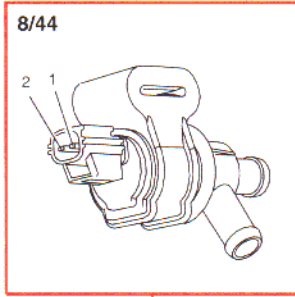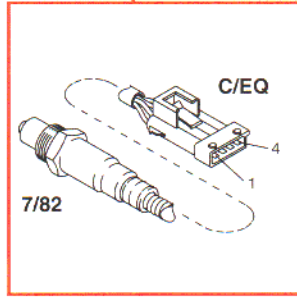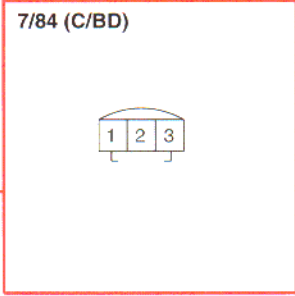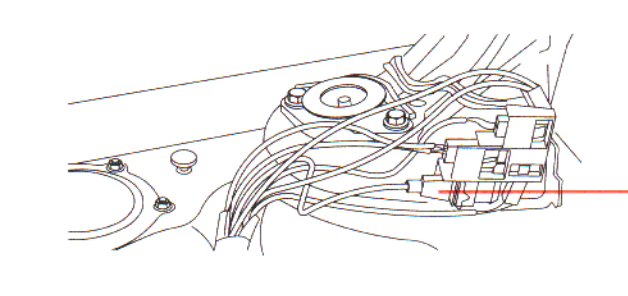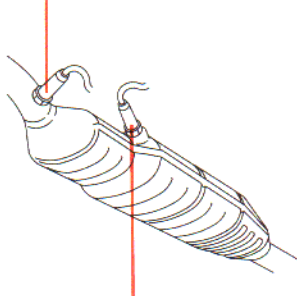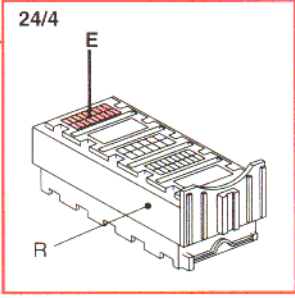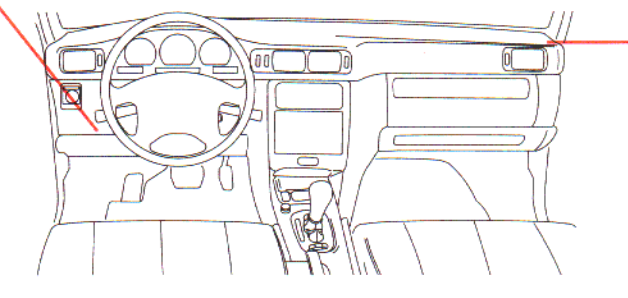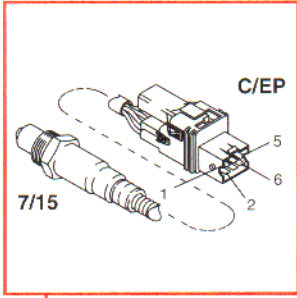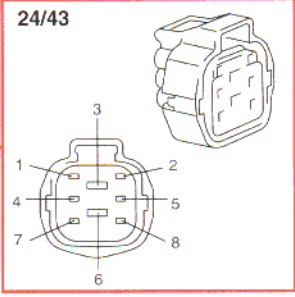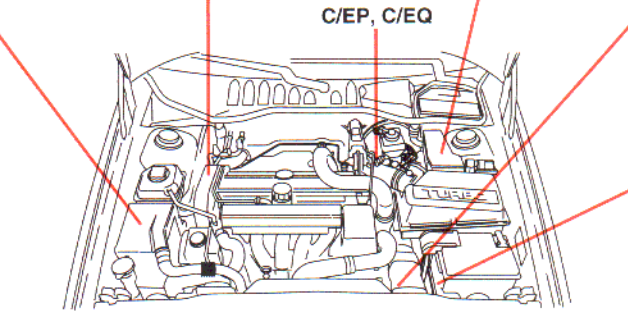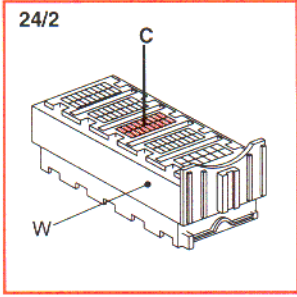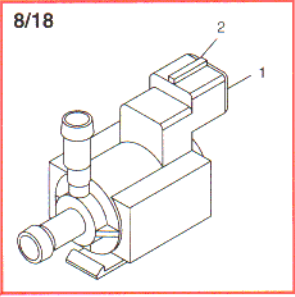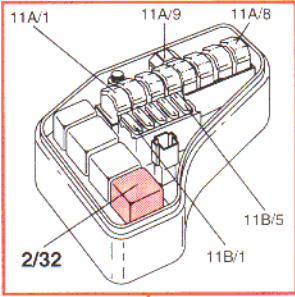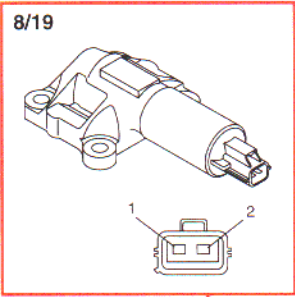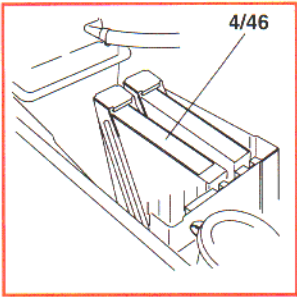


W/O AWD


AWD

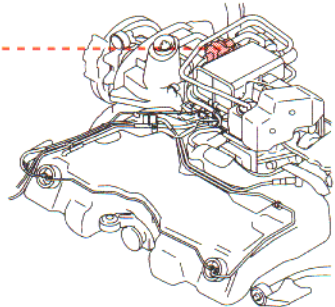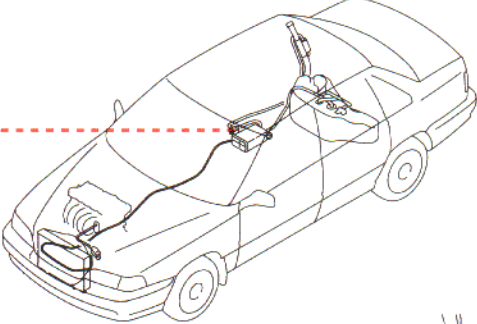


Engine management system MSA 15.7

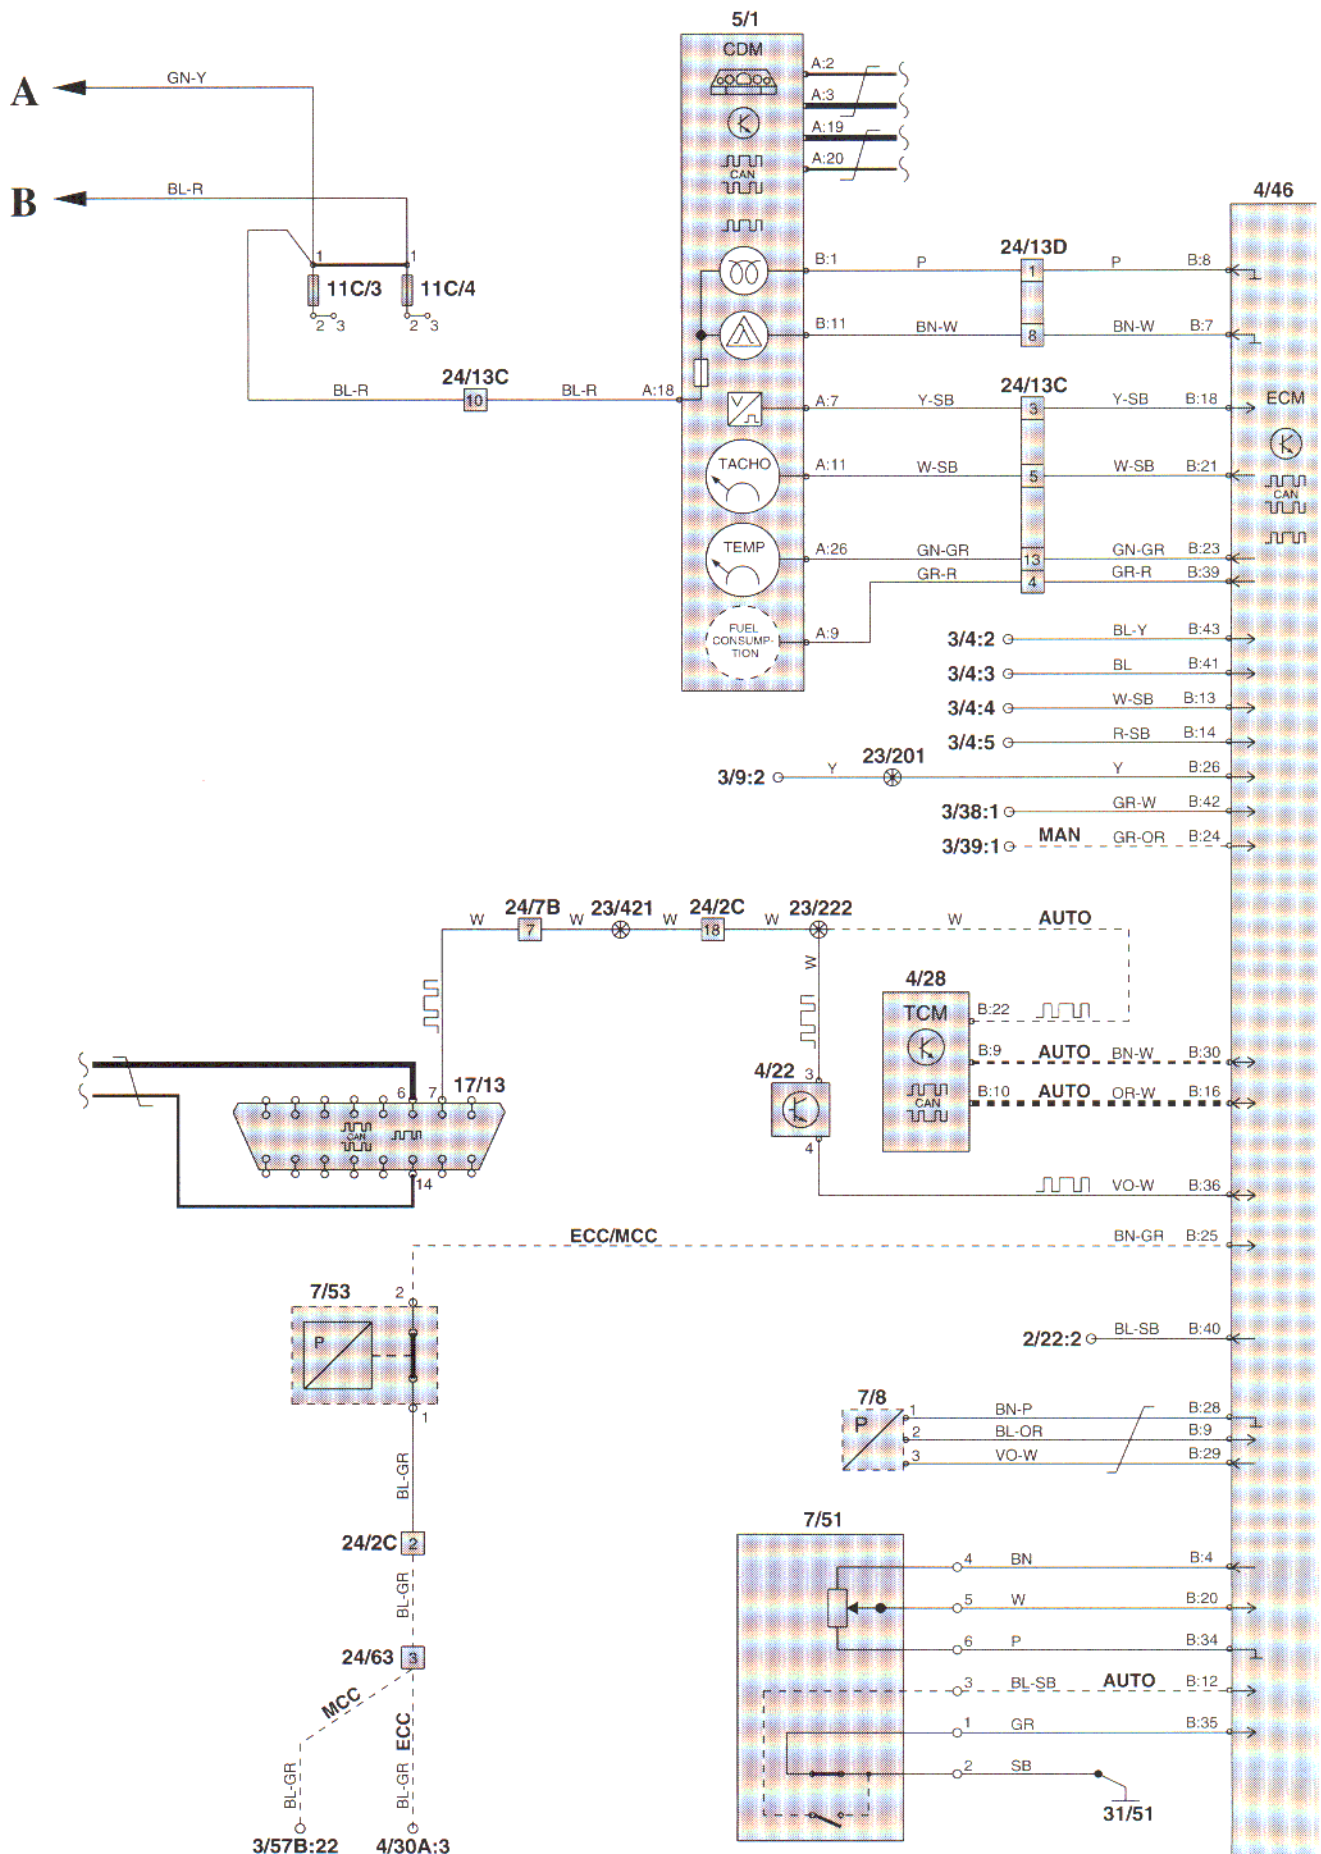


















Engine management system MSA 15.7

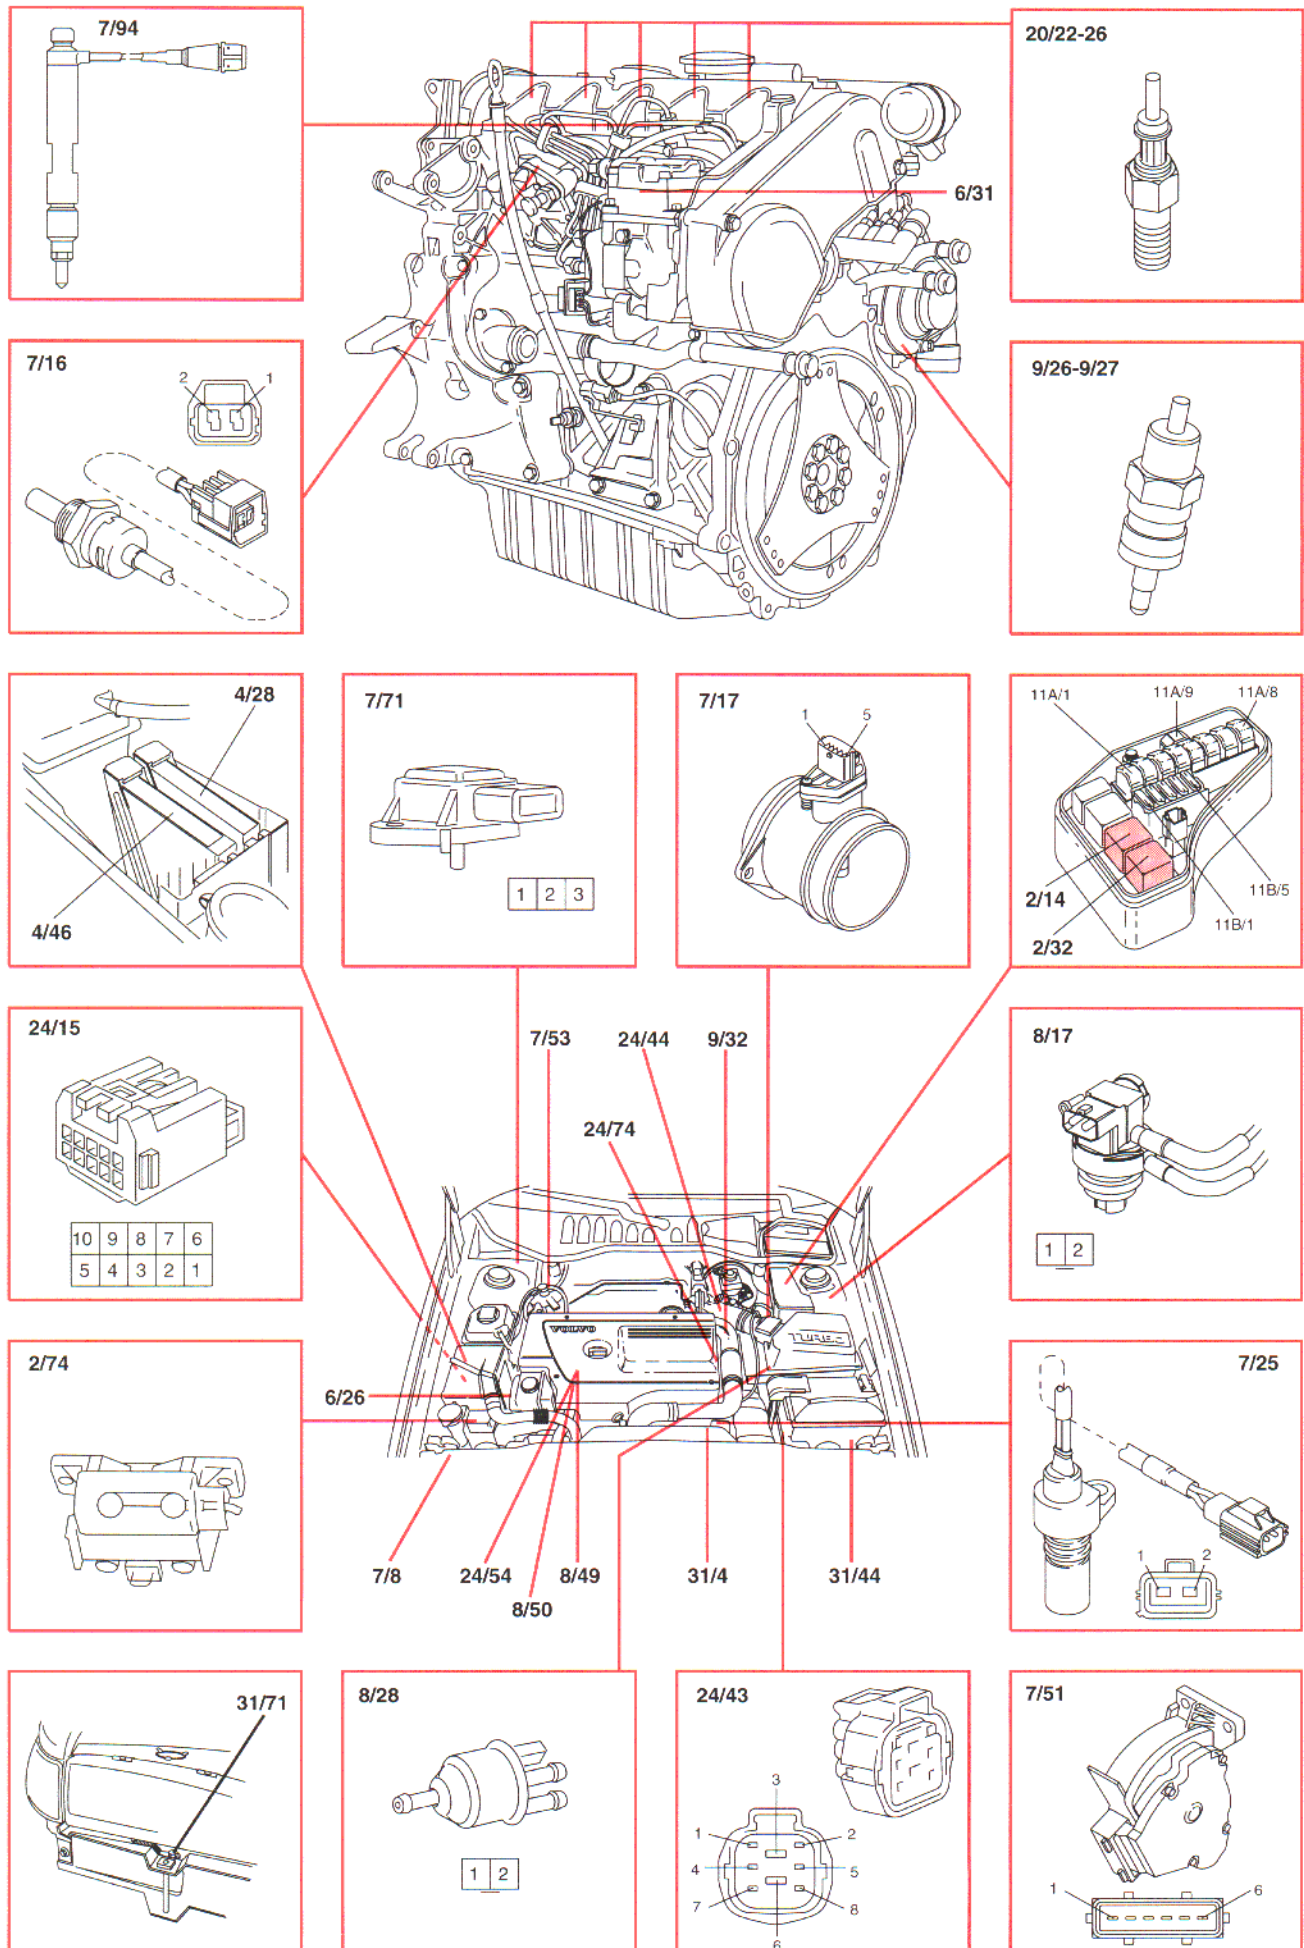


















Engine management system MSA 15.7

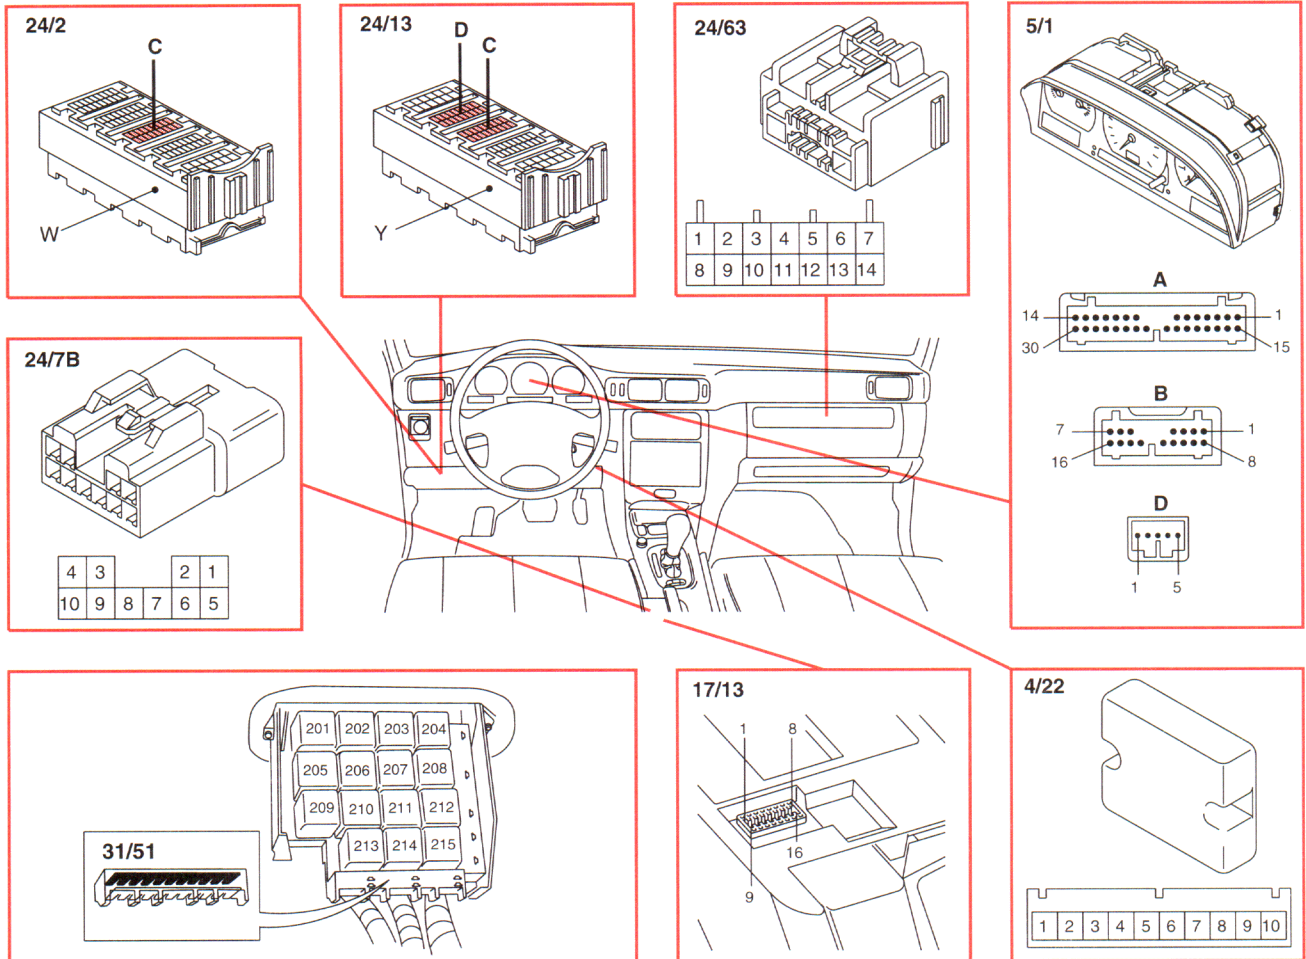


















Engine cooling fan (FC) Fenix 5.2

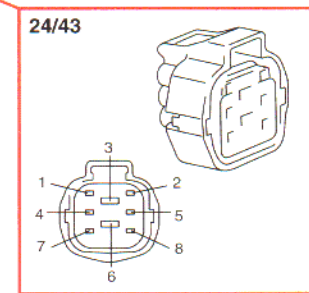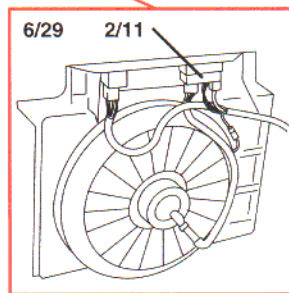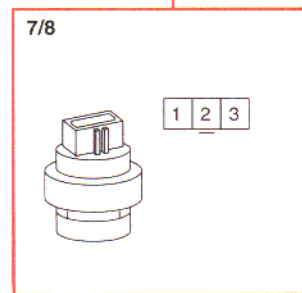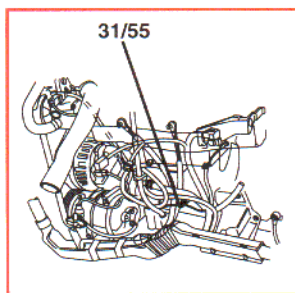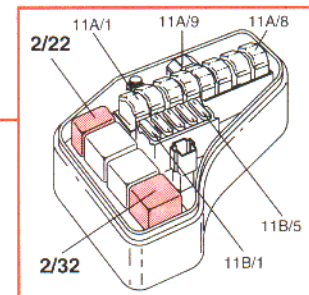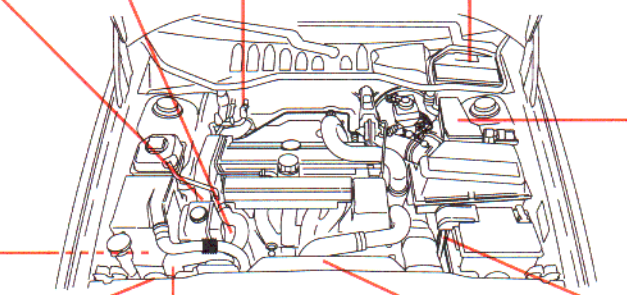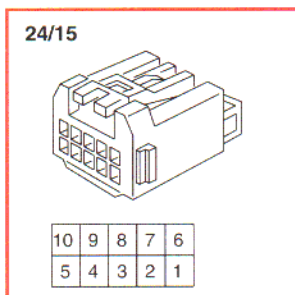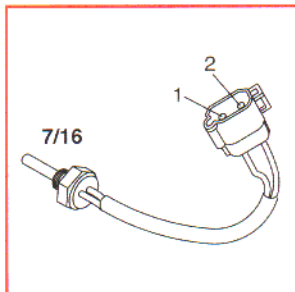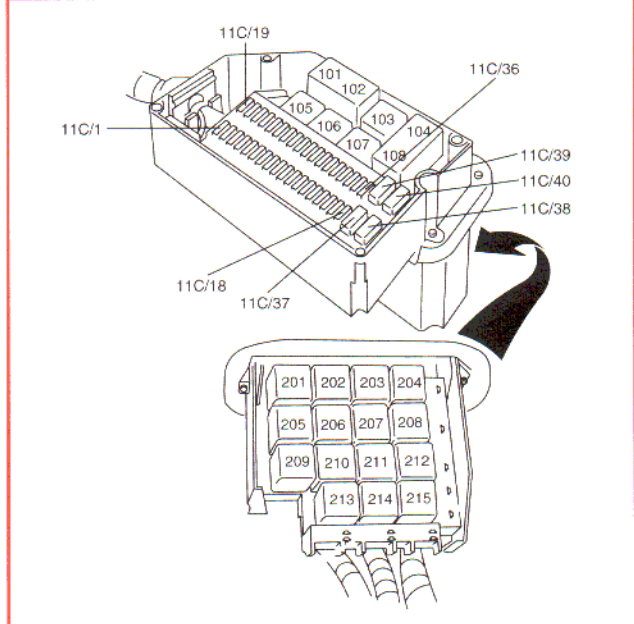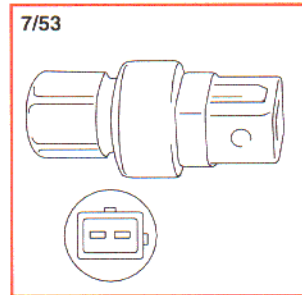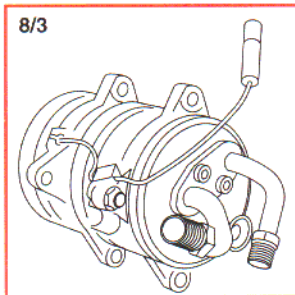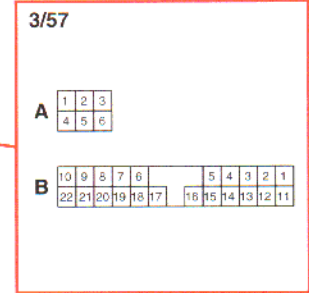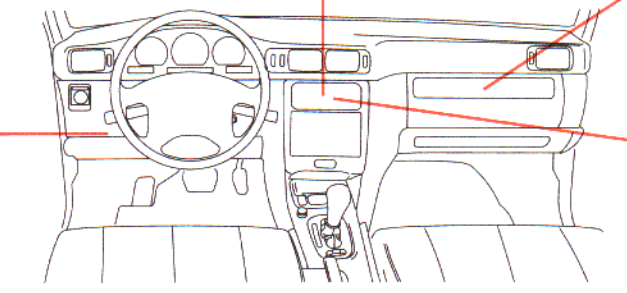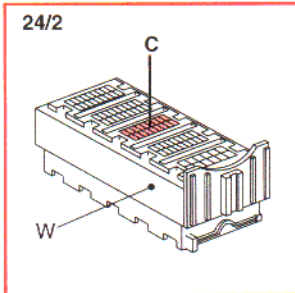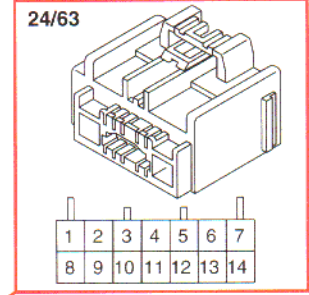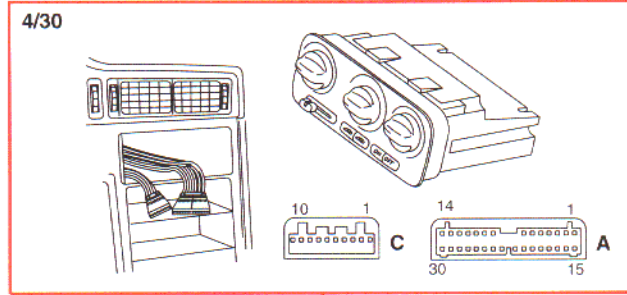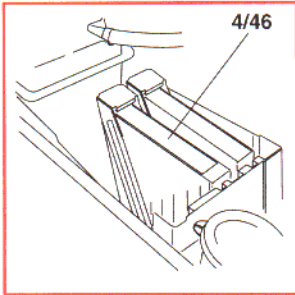
















Engine cooling fan (FC)
Denso, ME7

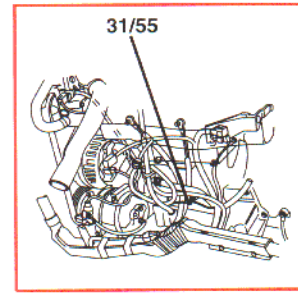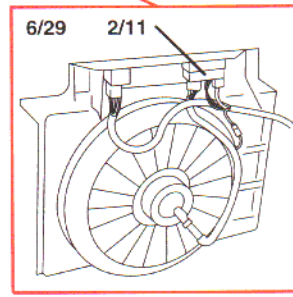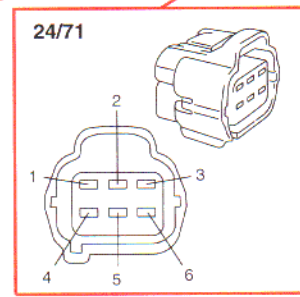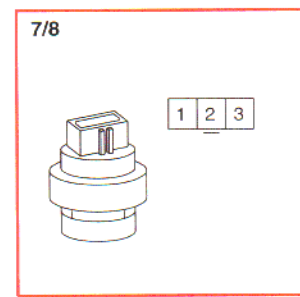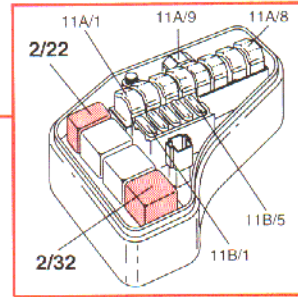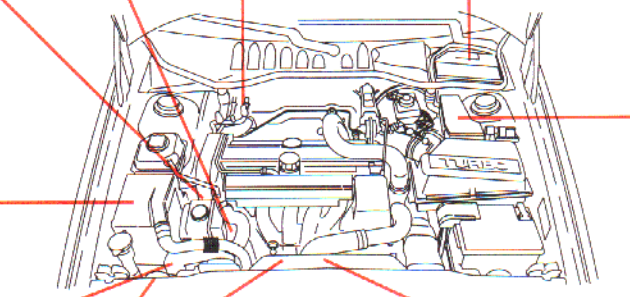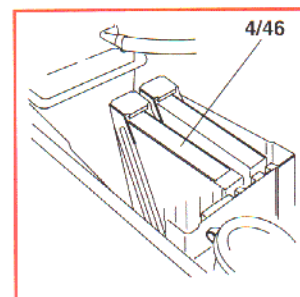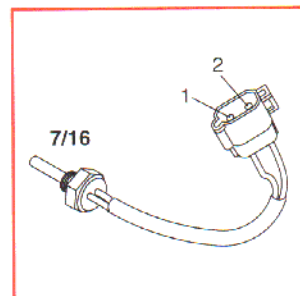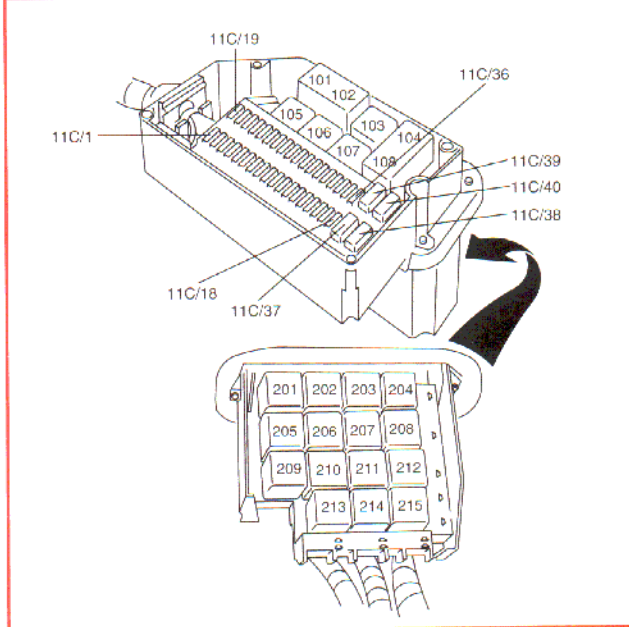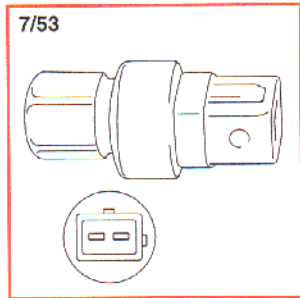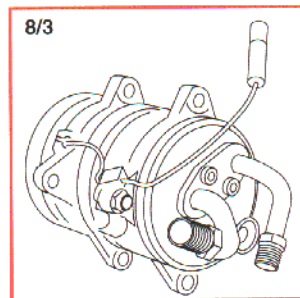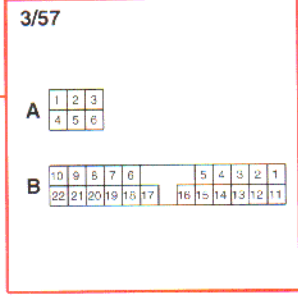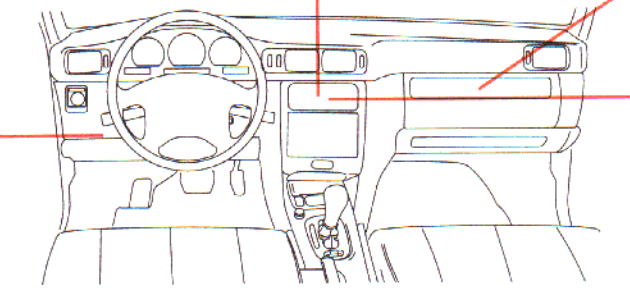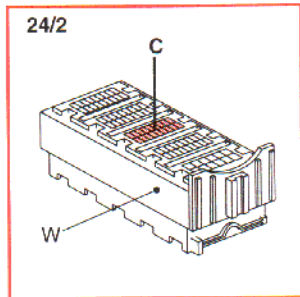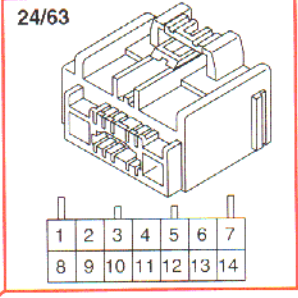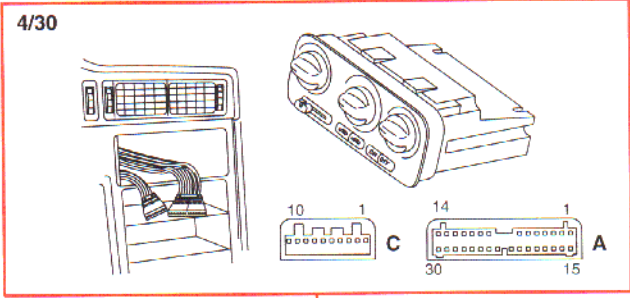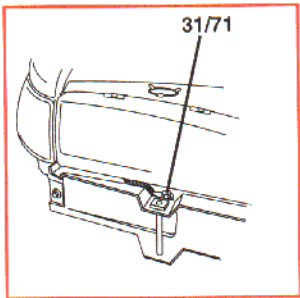


Engine cooling fan (FC)
MSA 15.7

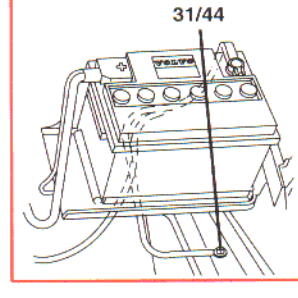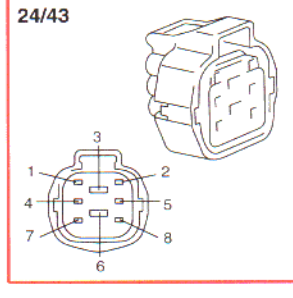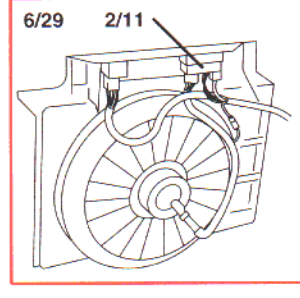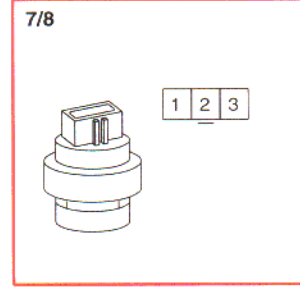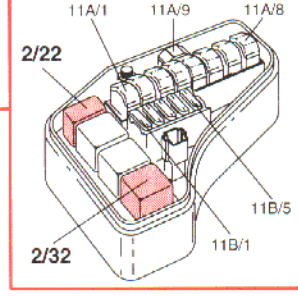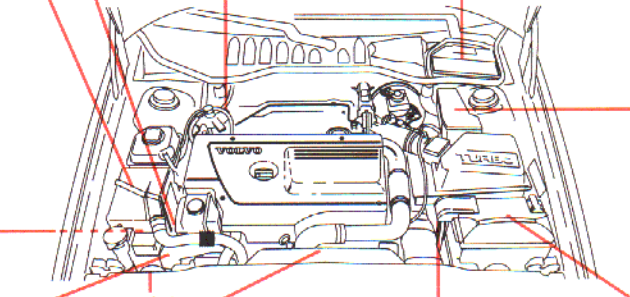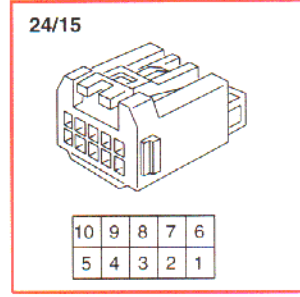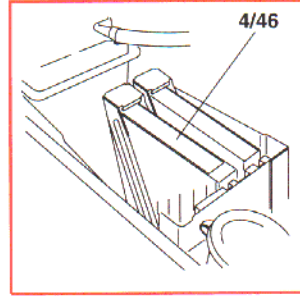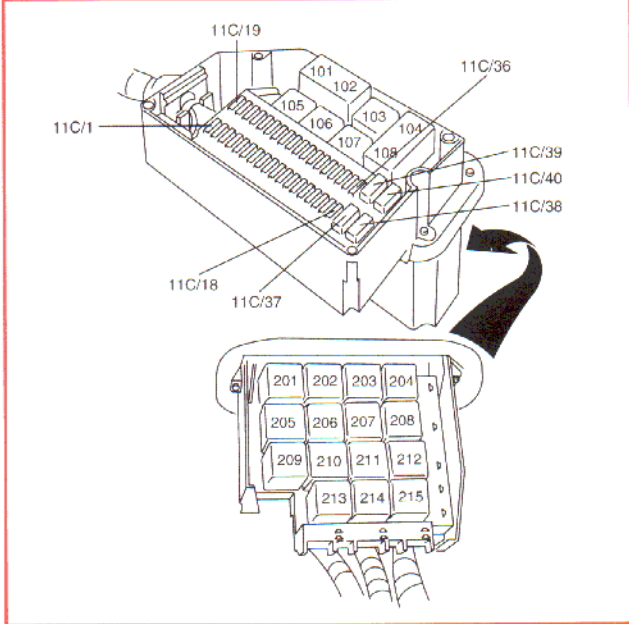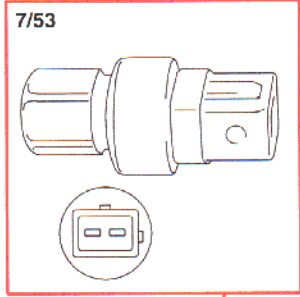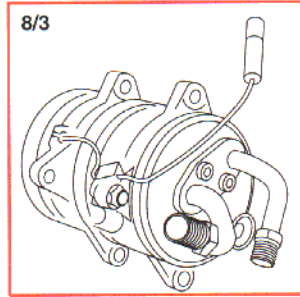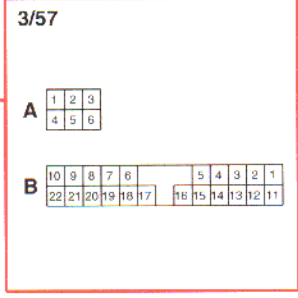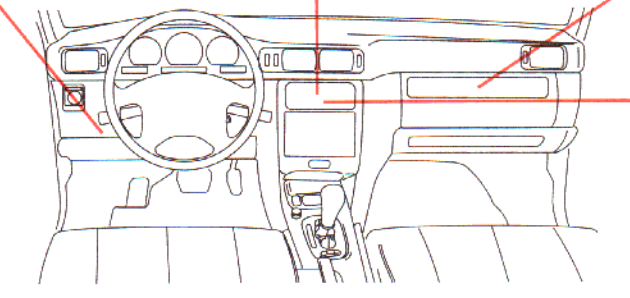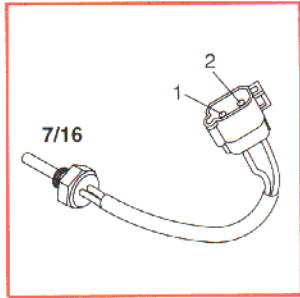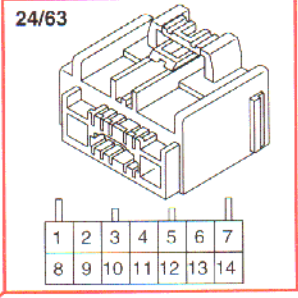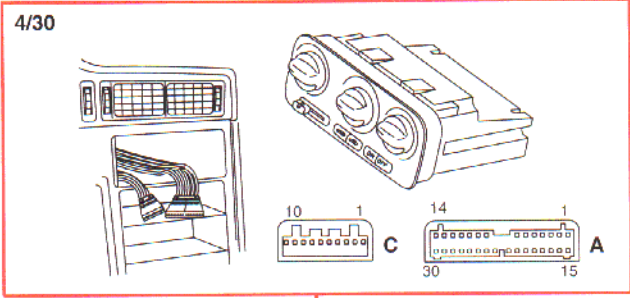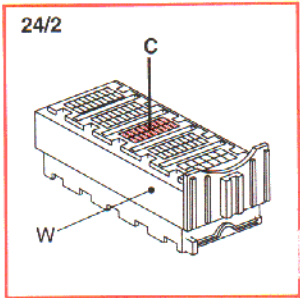


Cruise control
Fenix 5.2



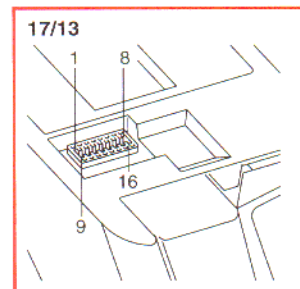
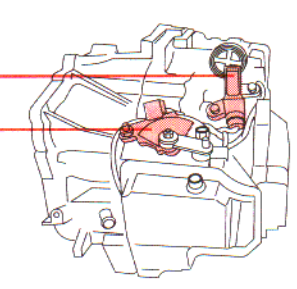
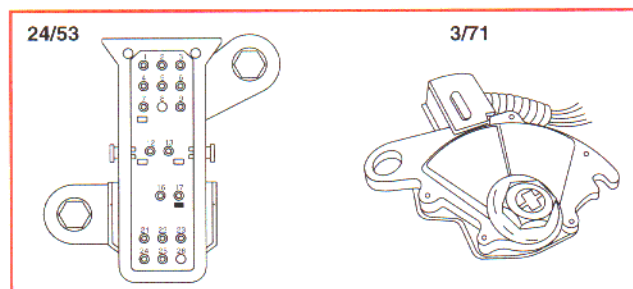
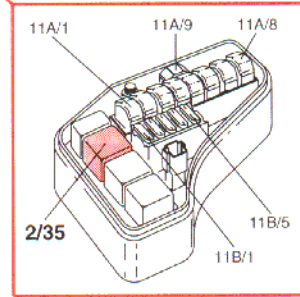
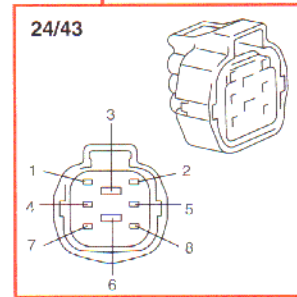
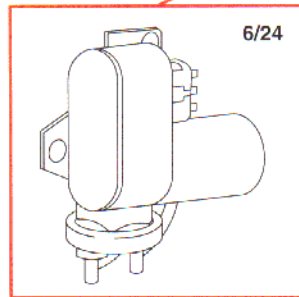
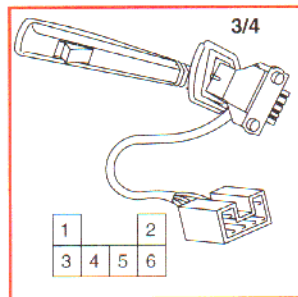
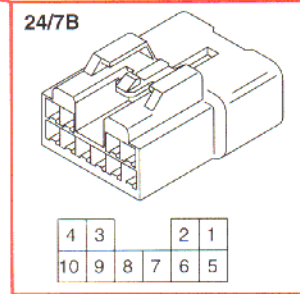
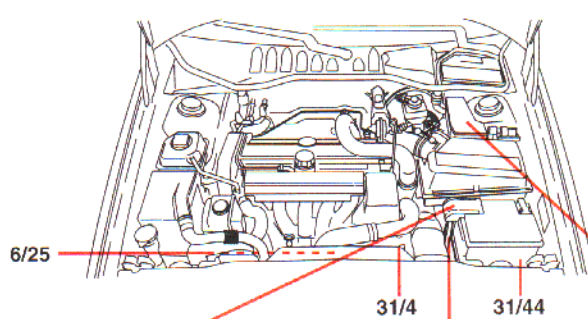
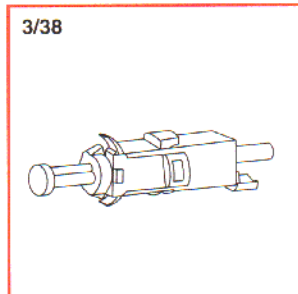
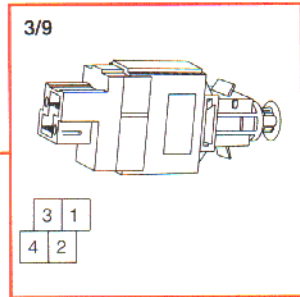
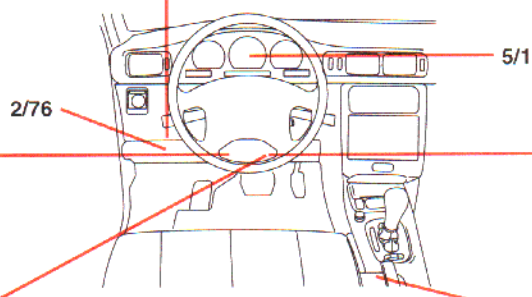
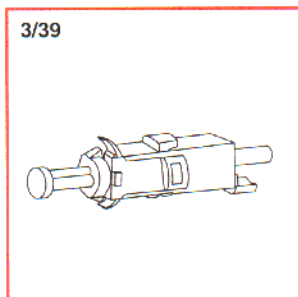
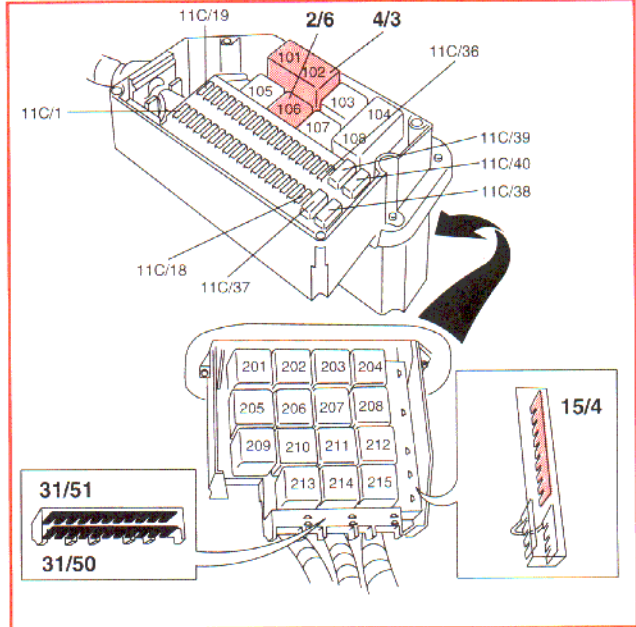
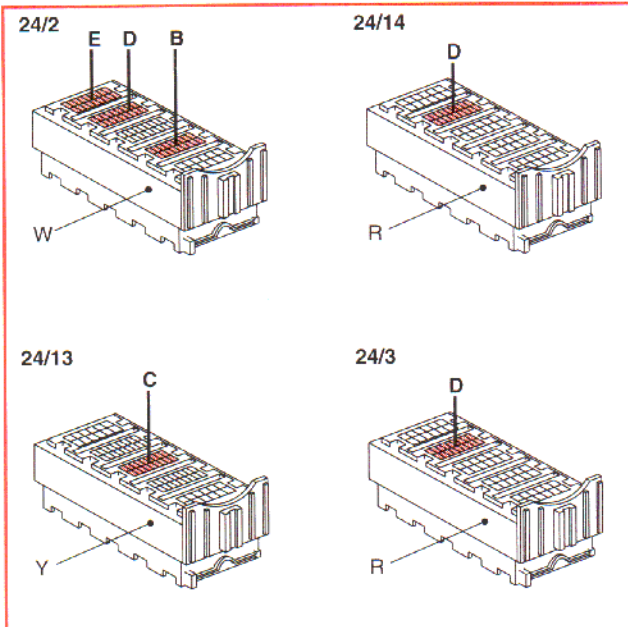


Cruise control Denso, ME7











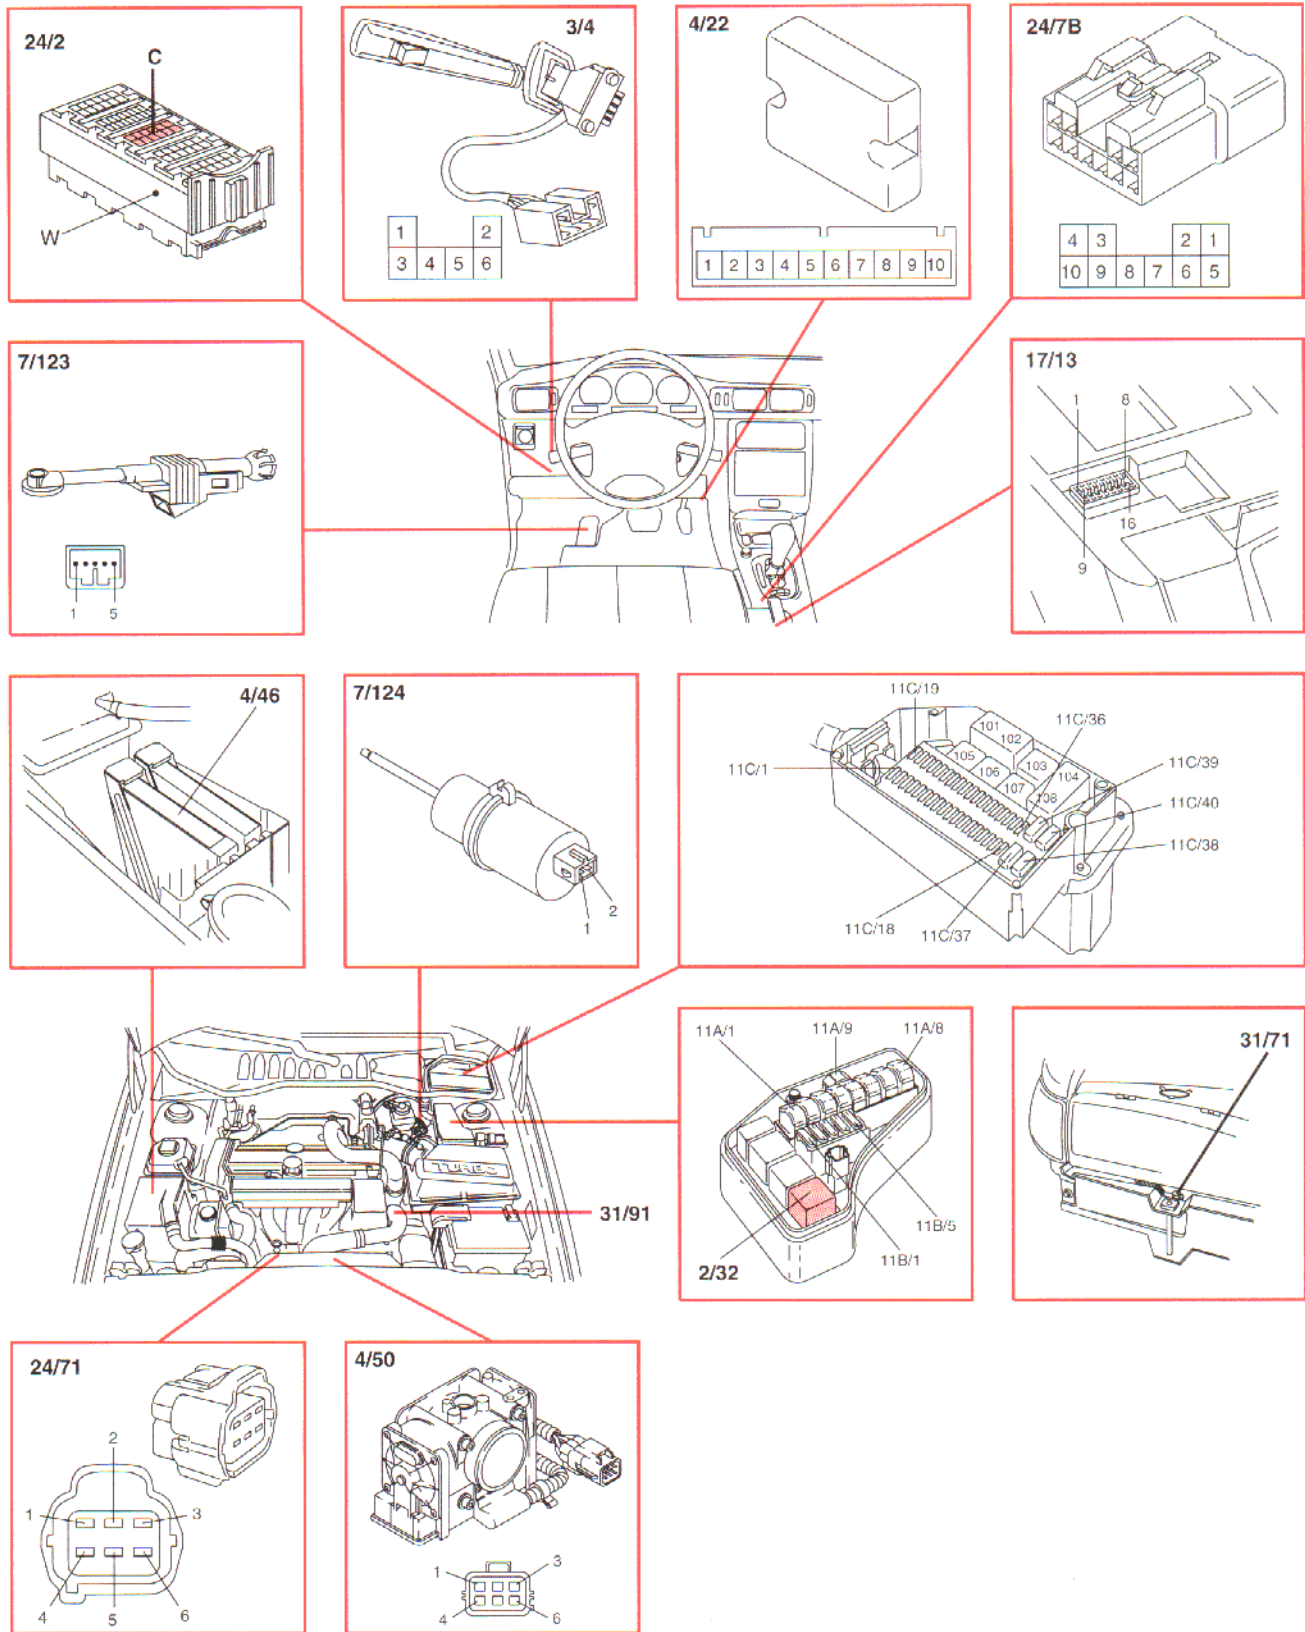


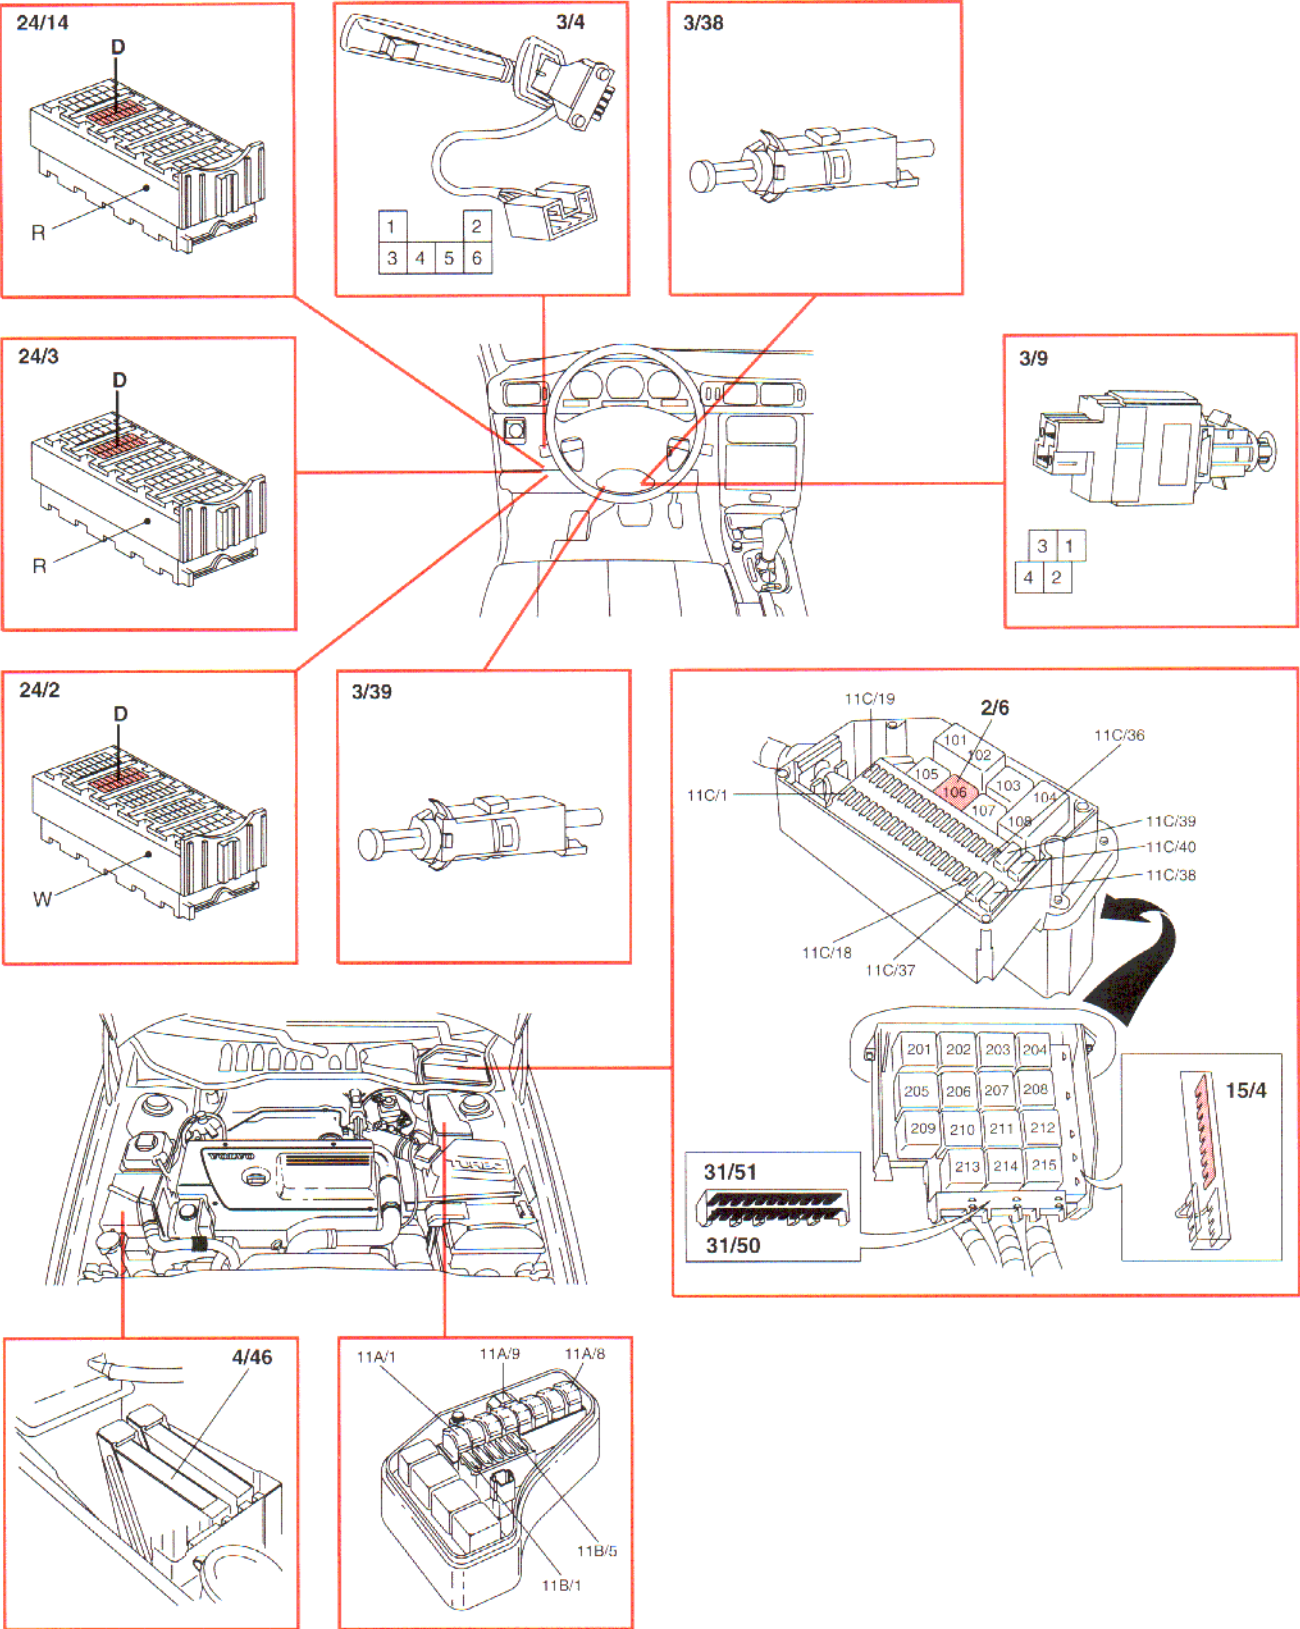









Power supply and starter system

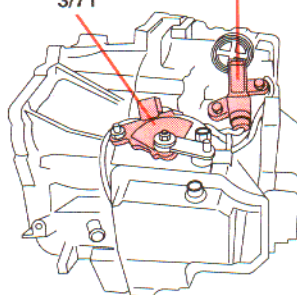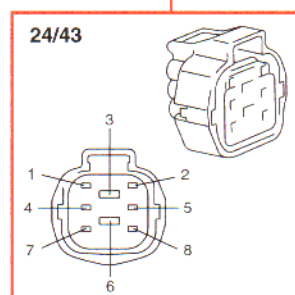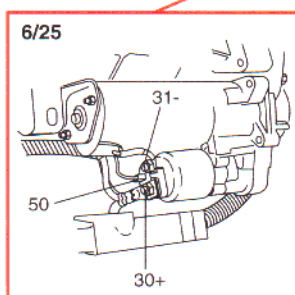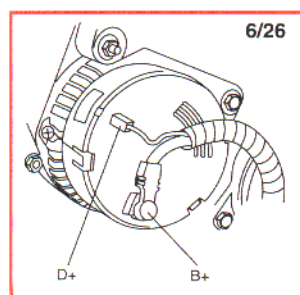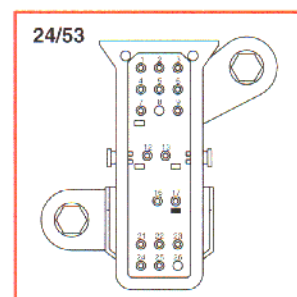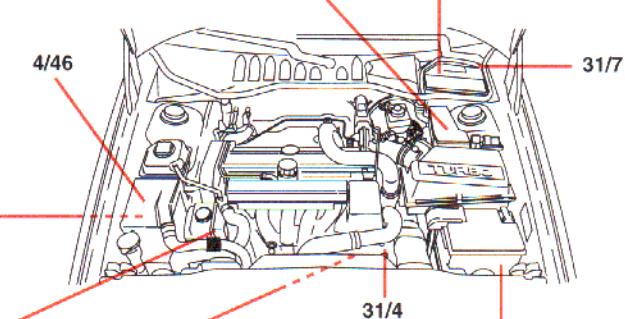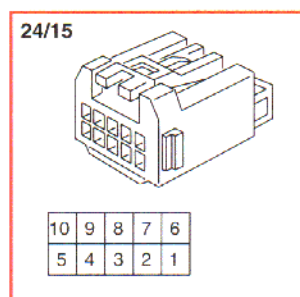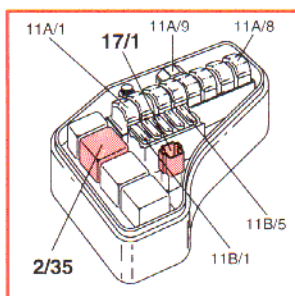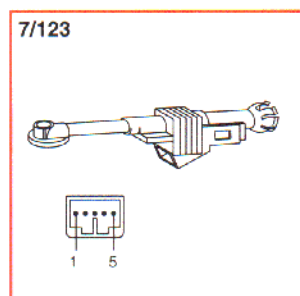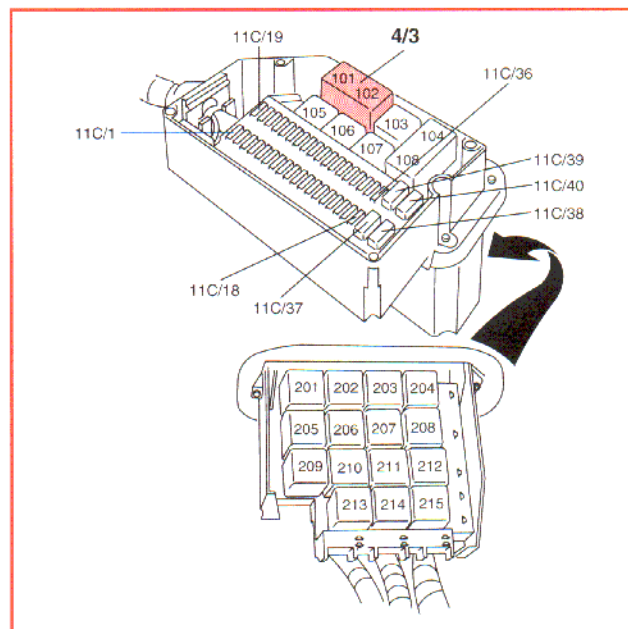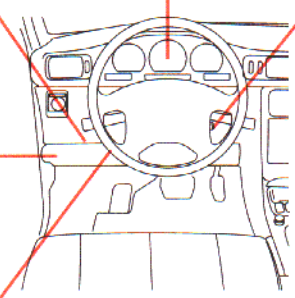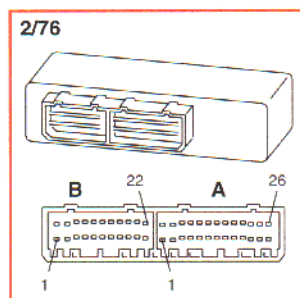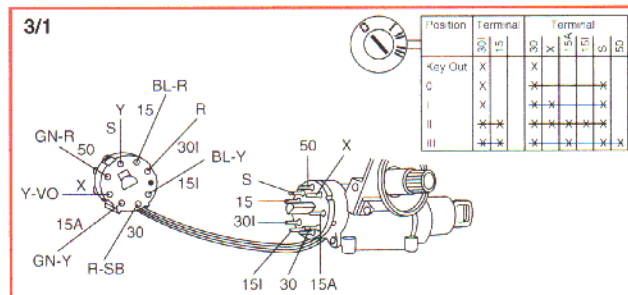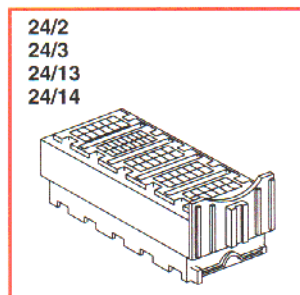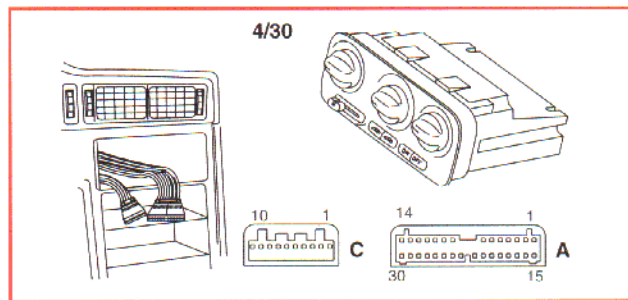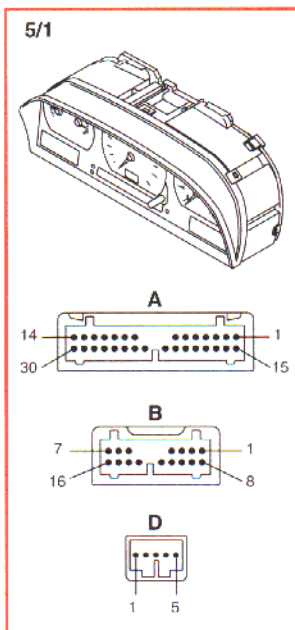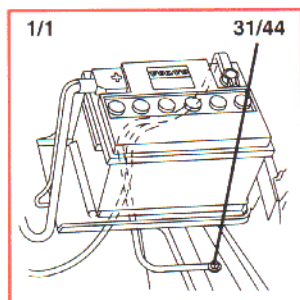


















High and low beams

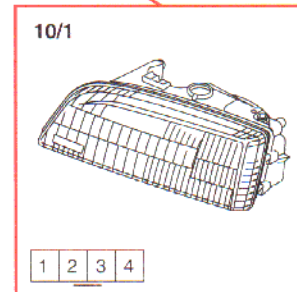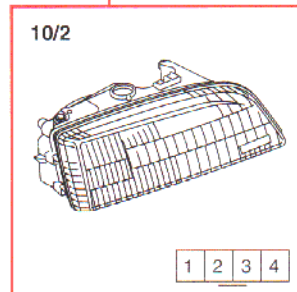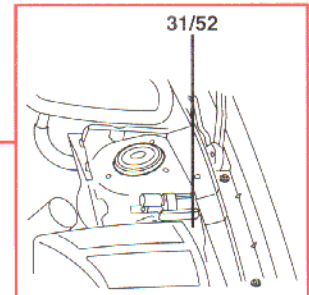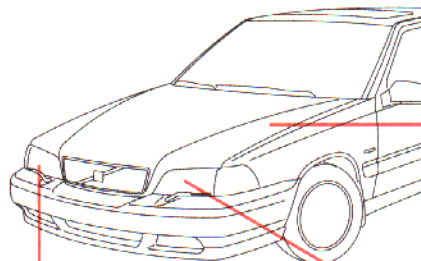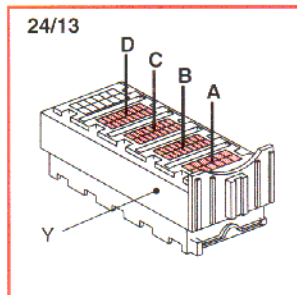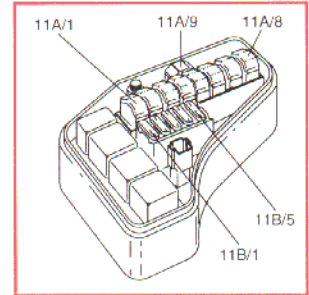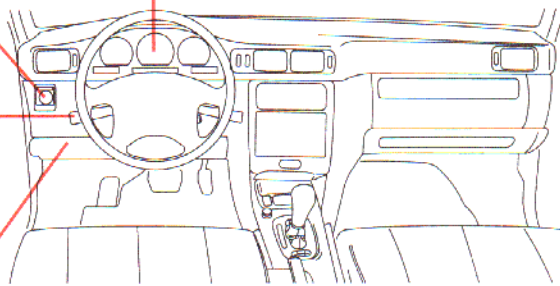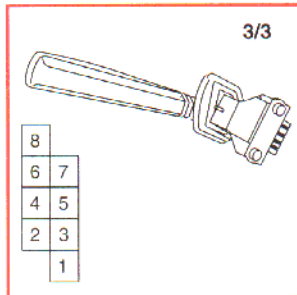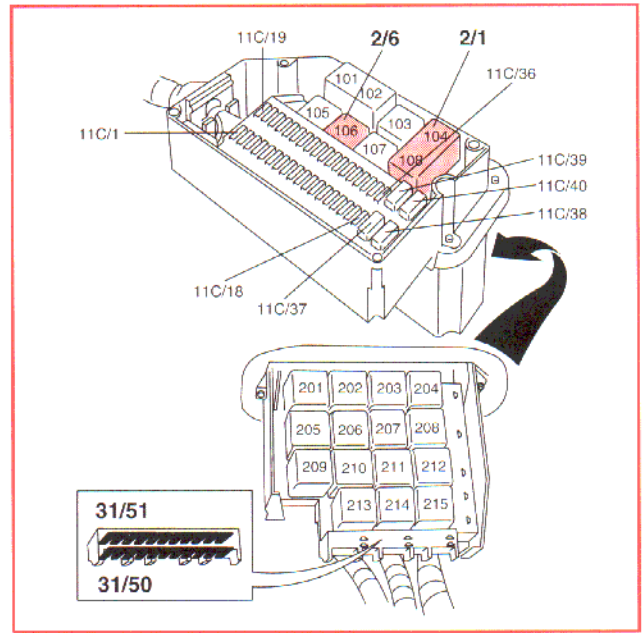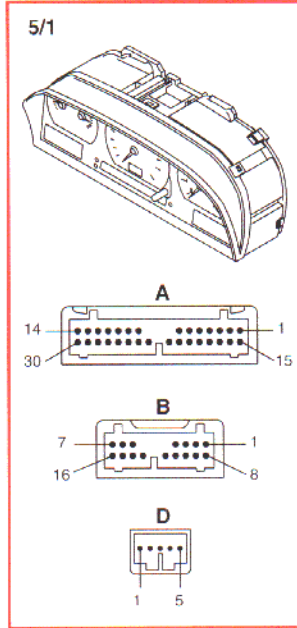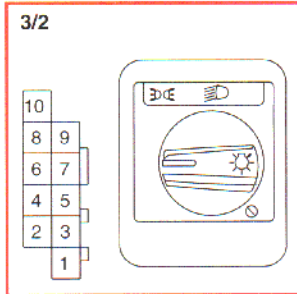




















Headlamp range adjustment

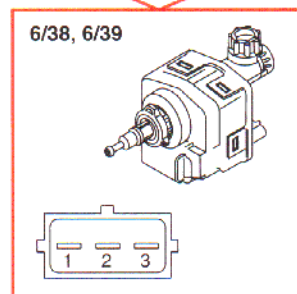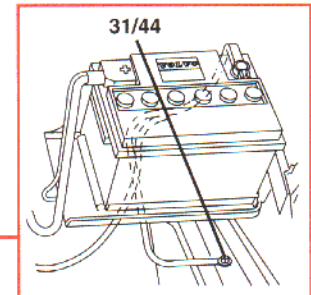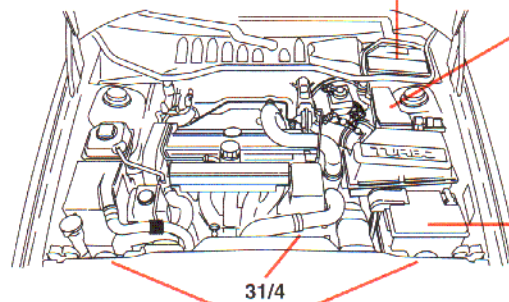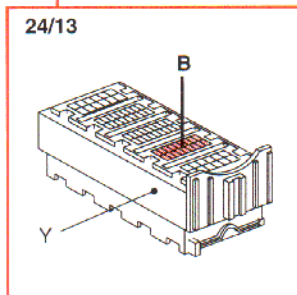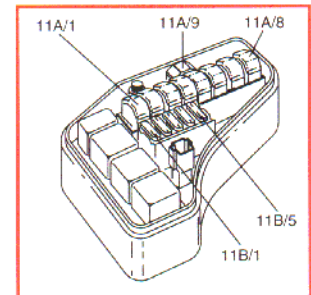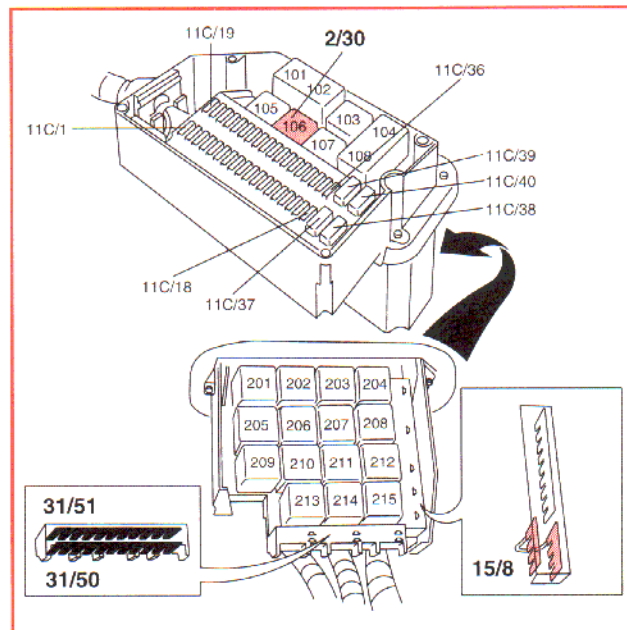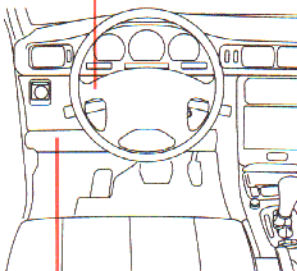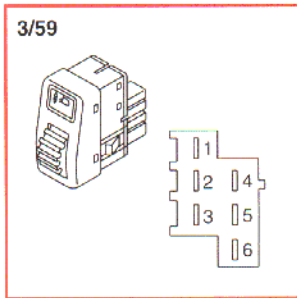




















Fog lamp C70

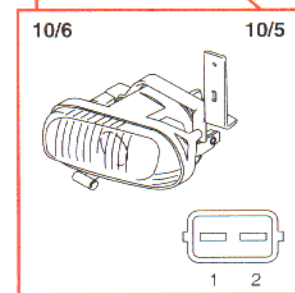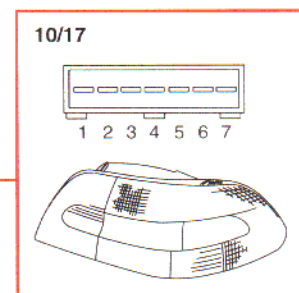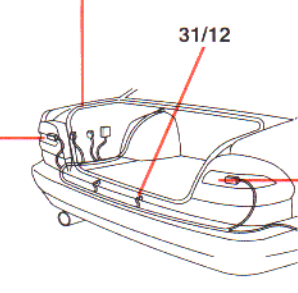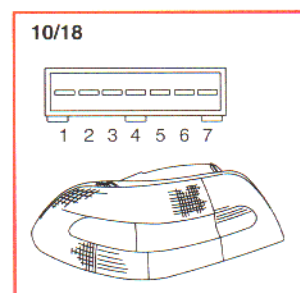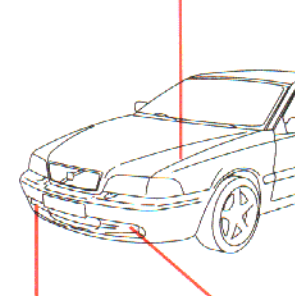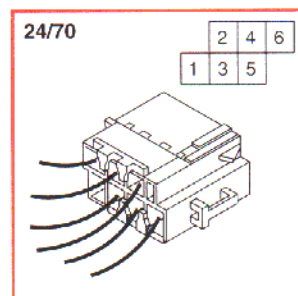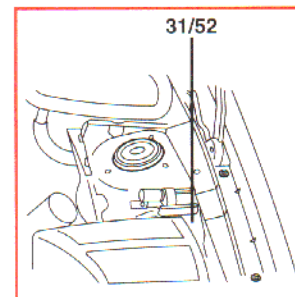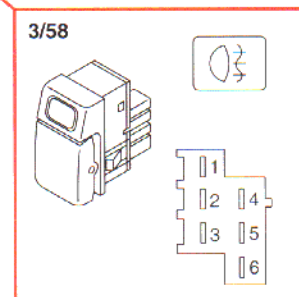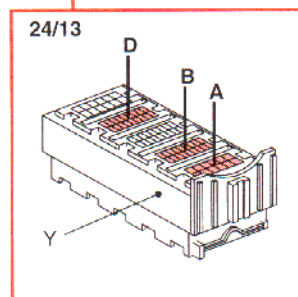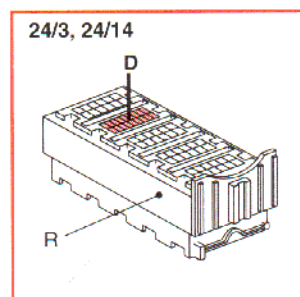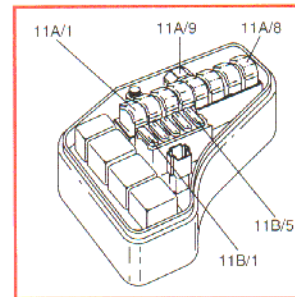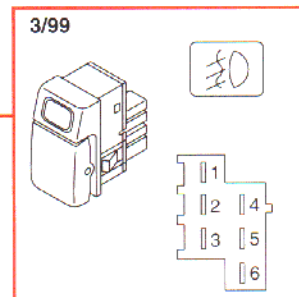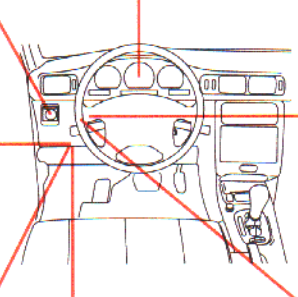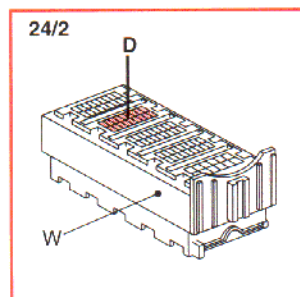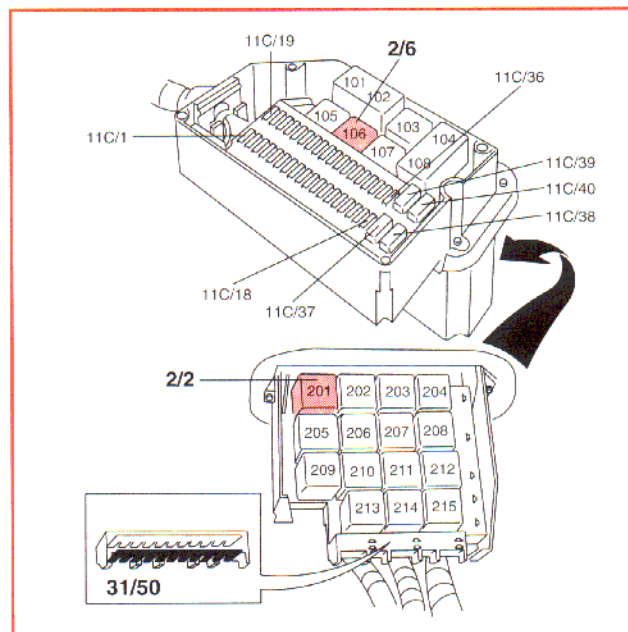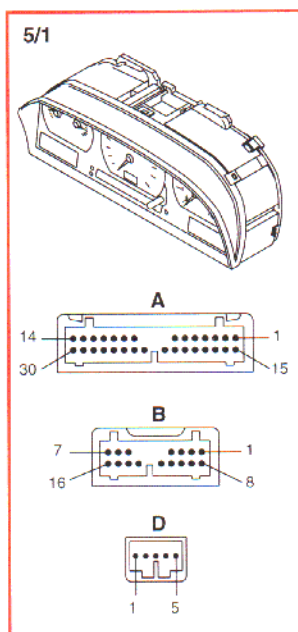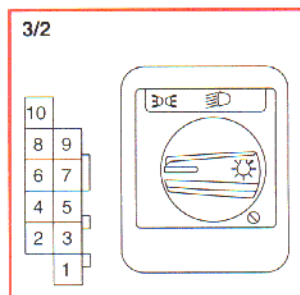


















Fog lamp S70, V70

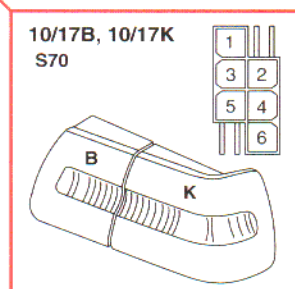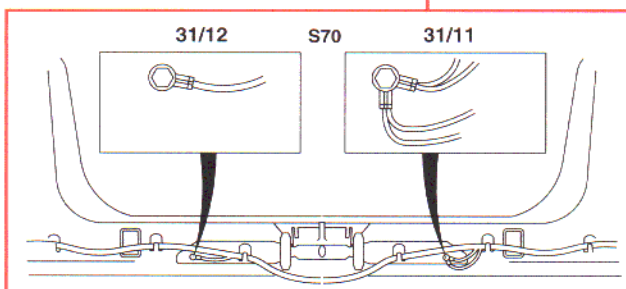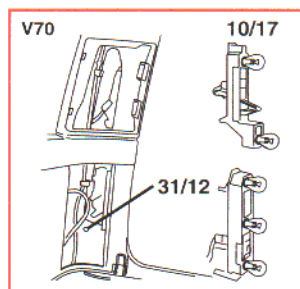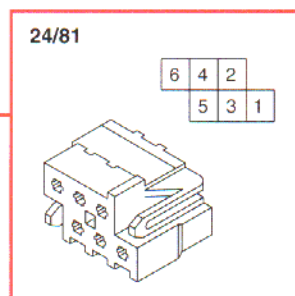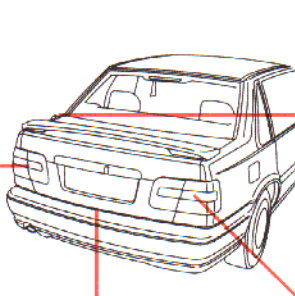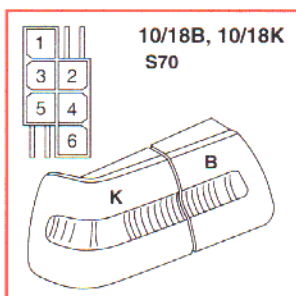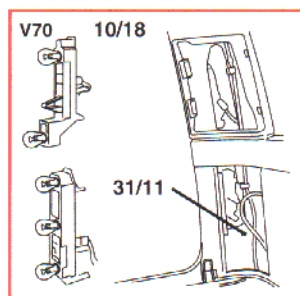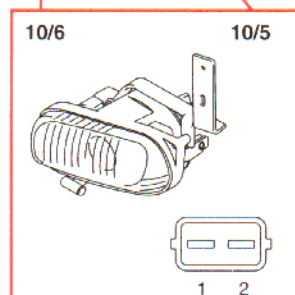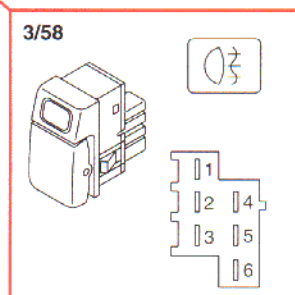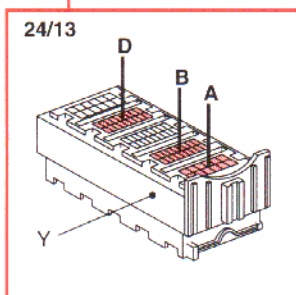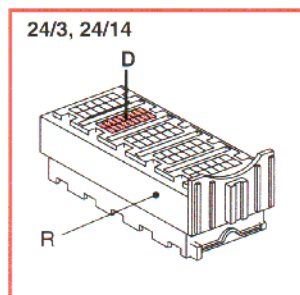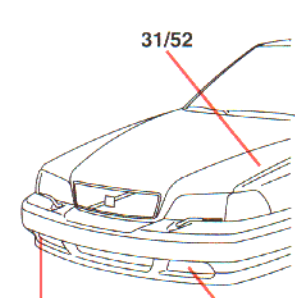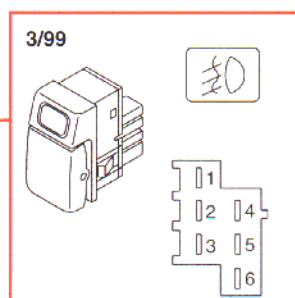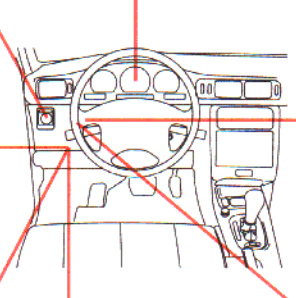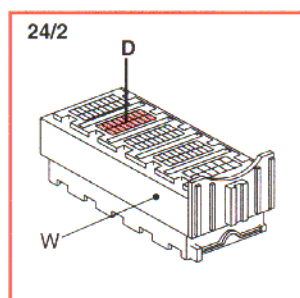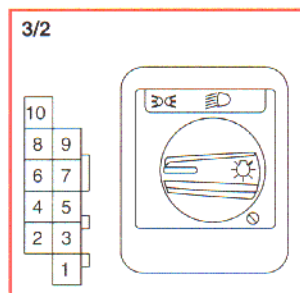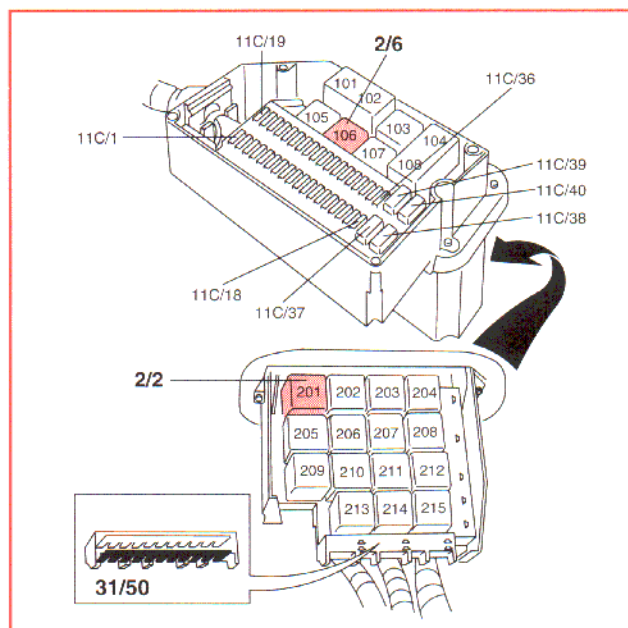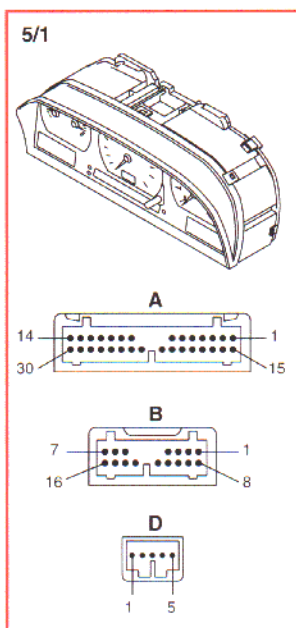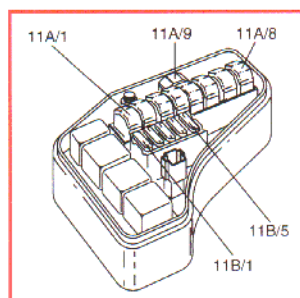


















Parking lamps, tail lamps and license (number) plate lighting C70

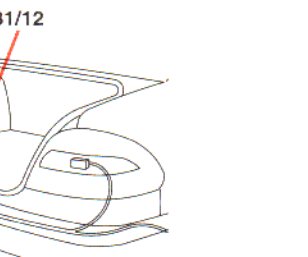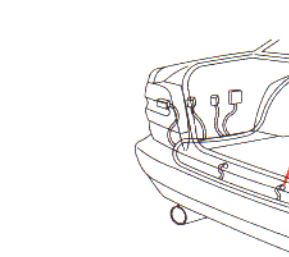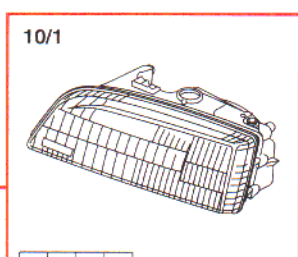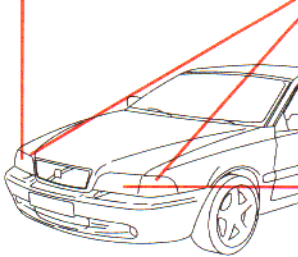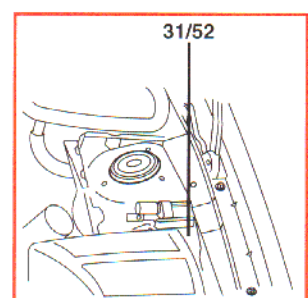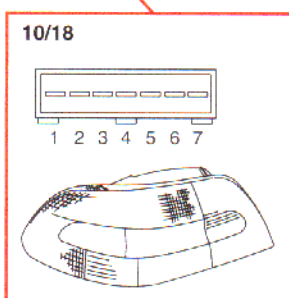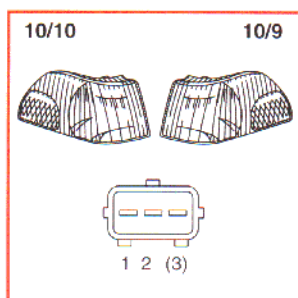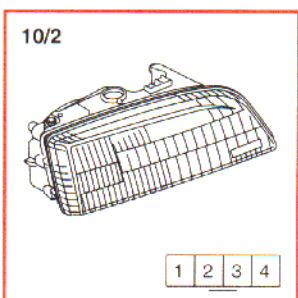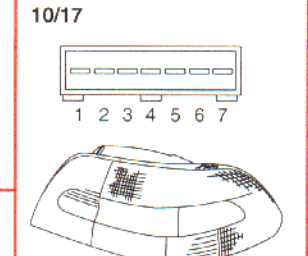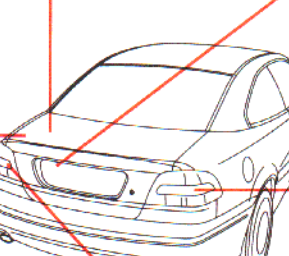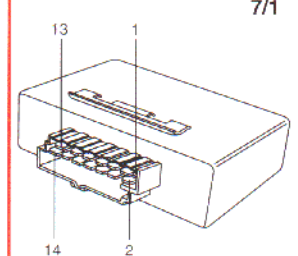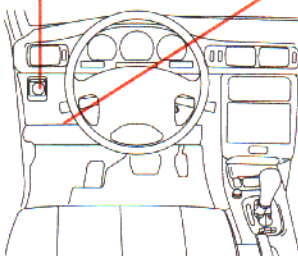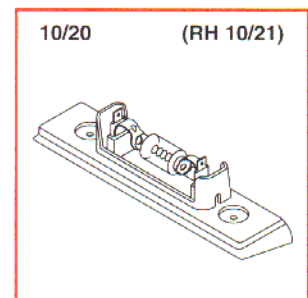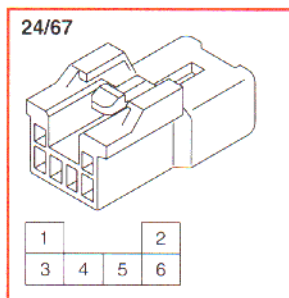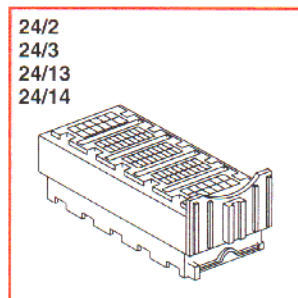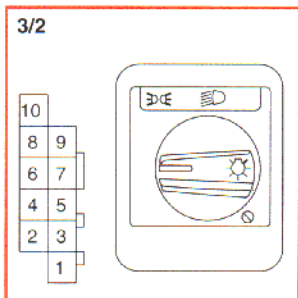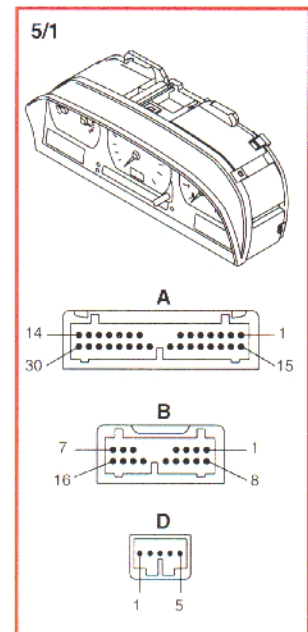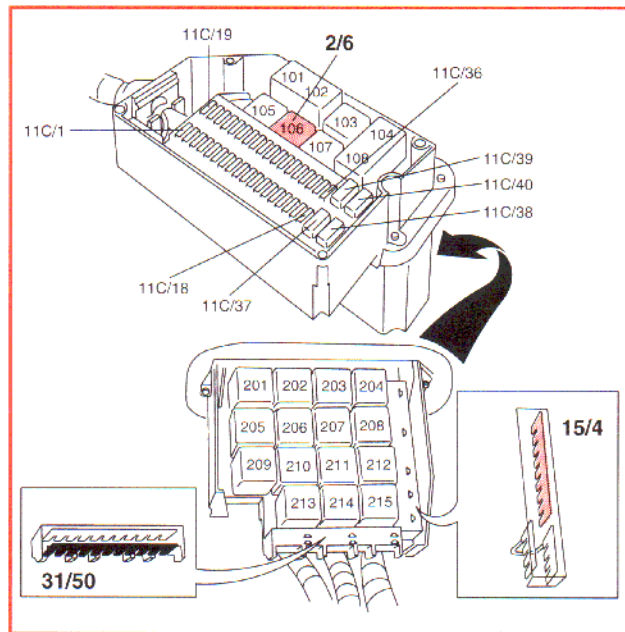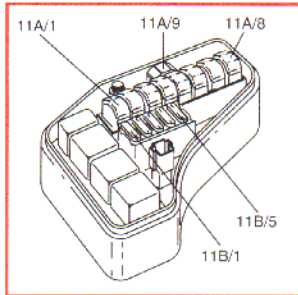



















Parking lamps, tail lamps and license (number) plate lighting S70

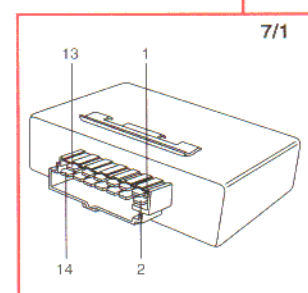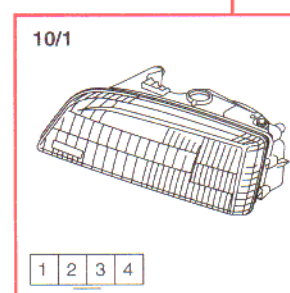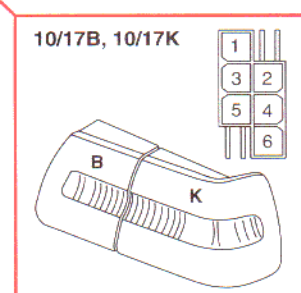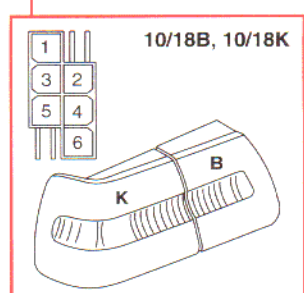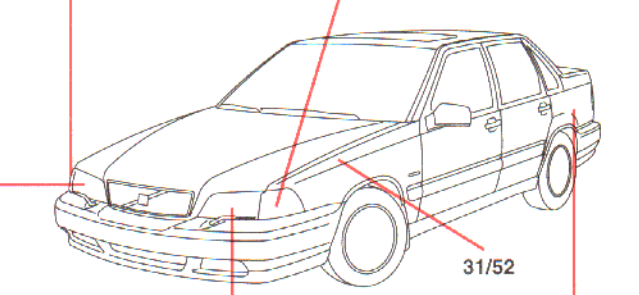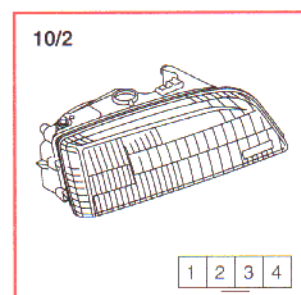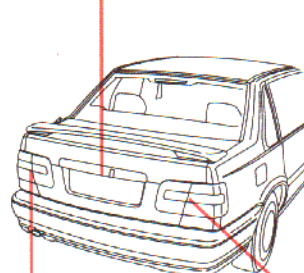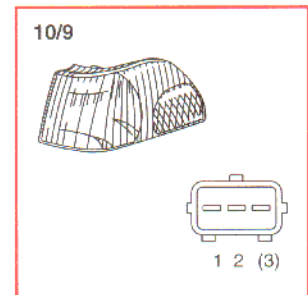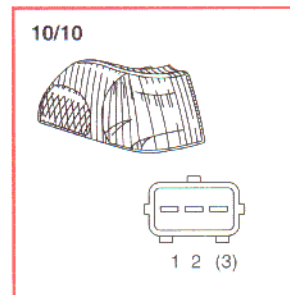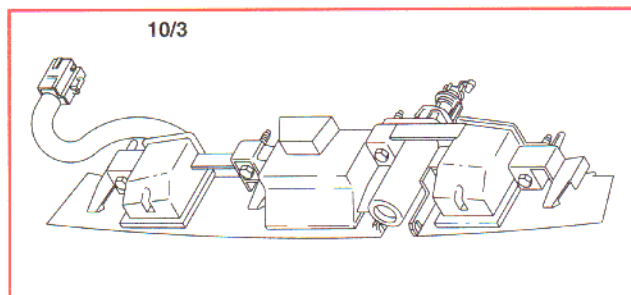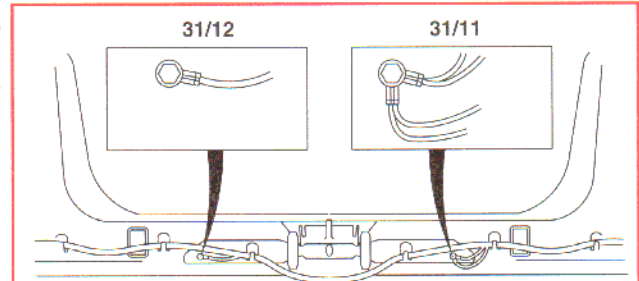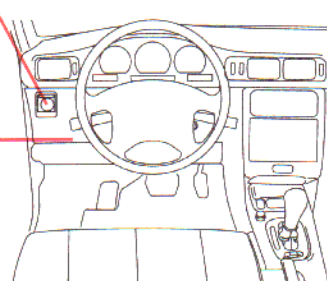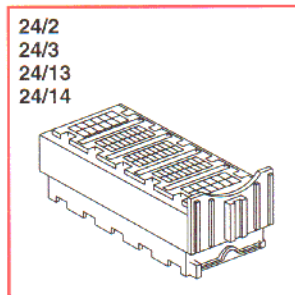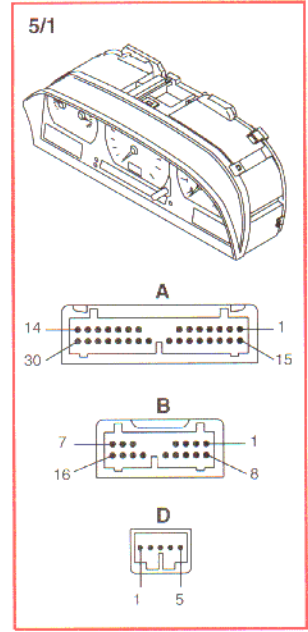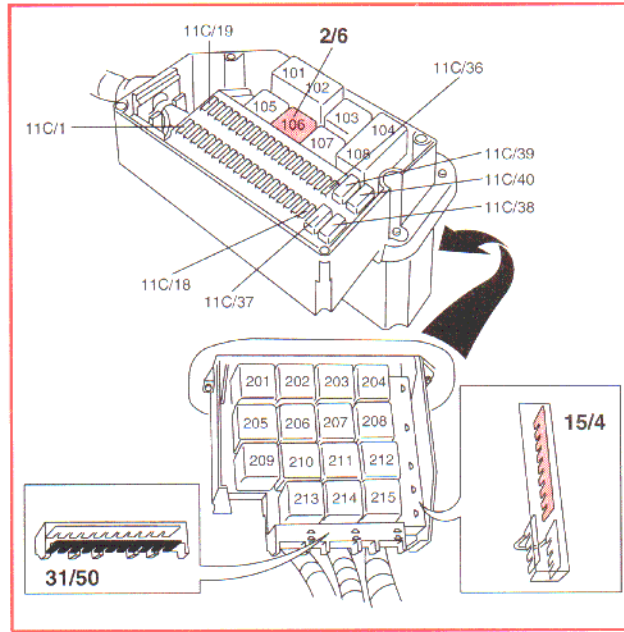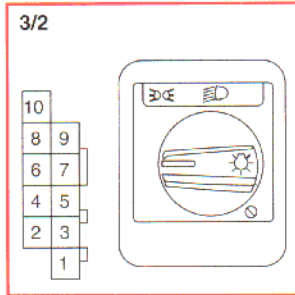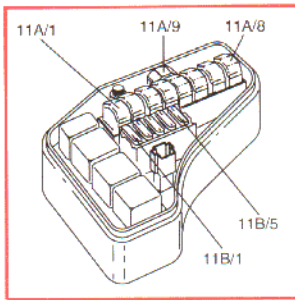

















Parking lamps, tail lamps and license (number) plate lighting V70

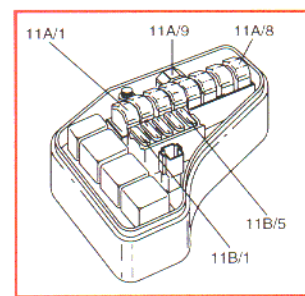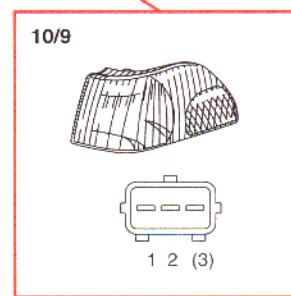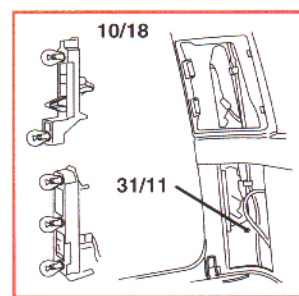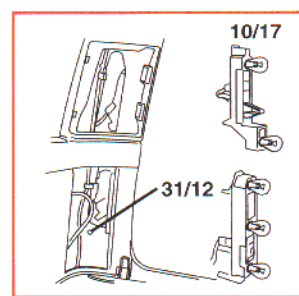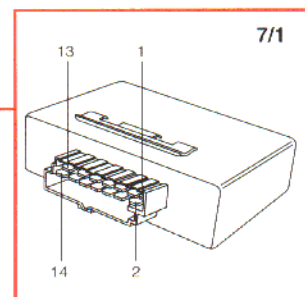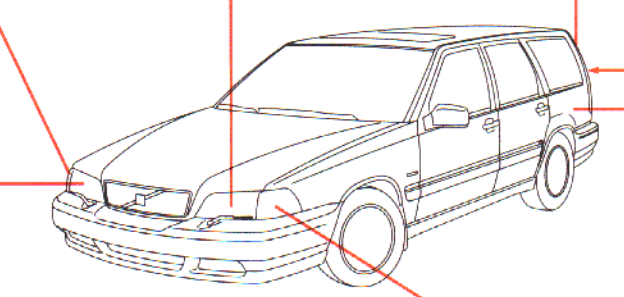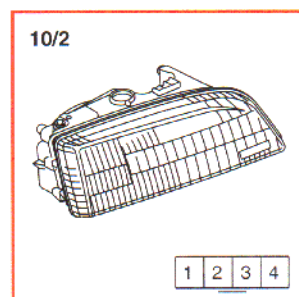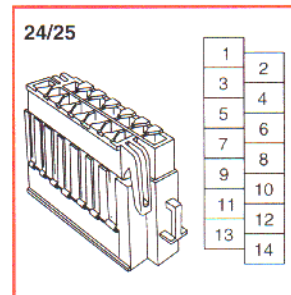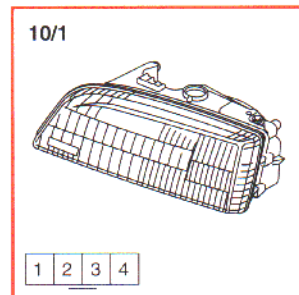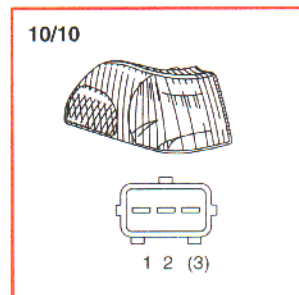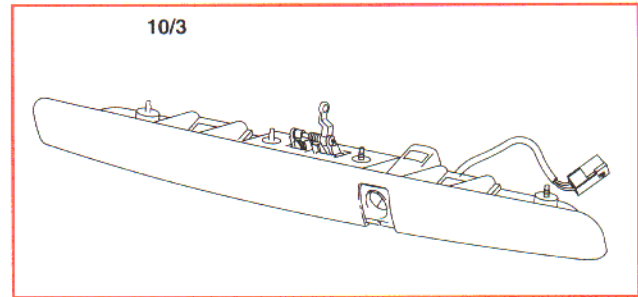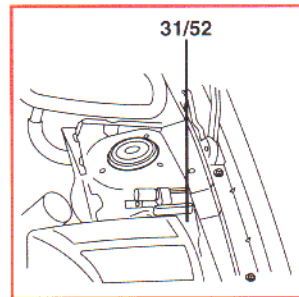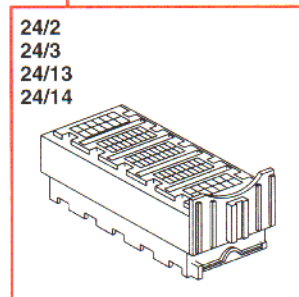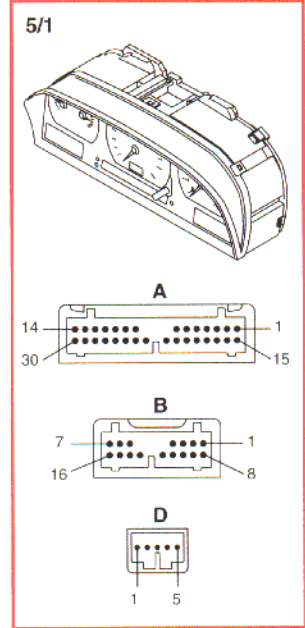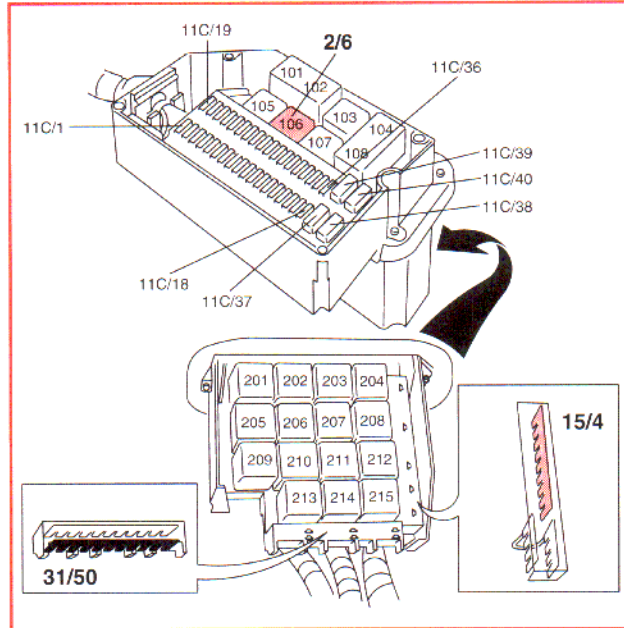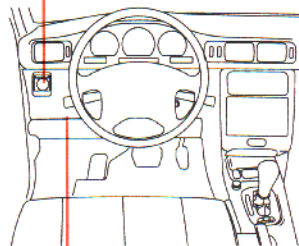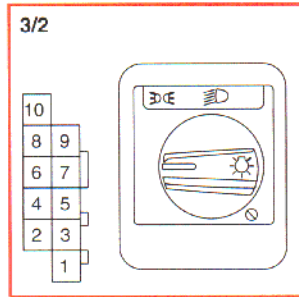

















Brake (stop) lamps C70

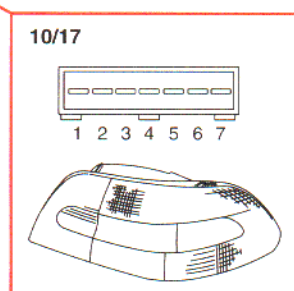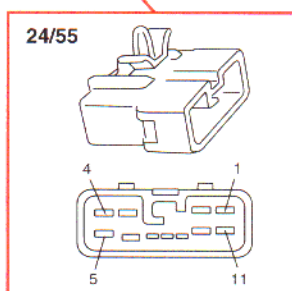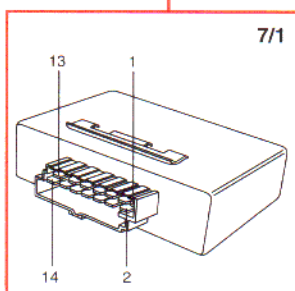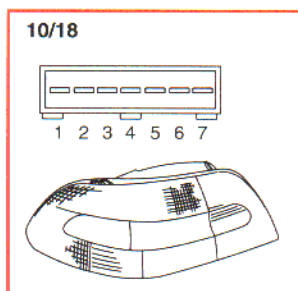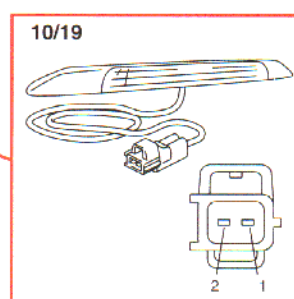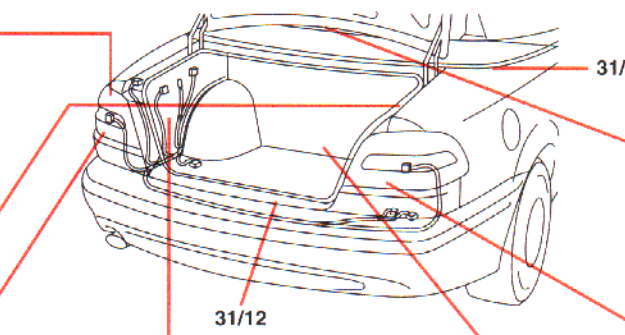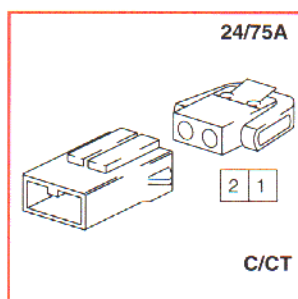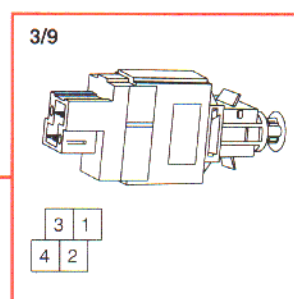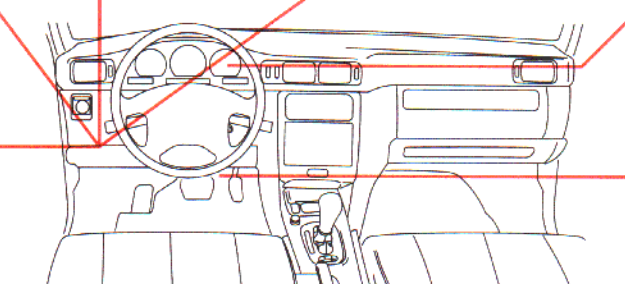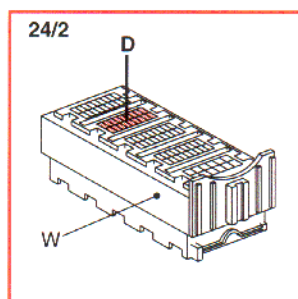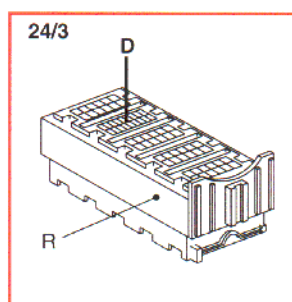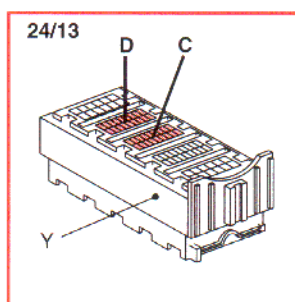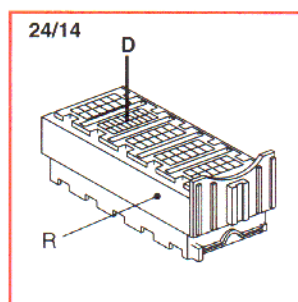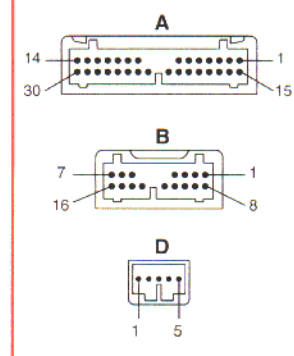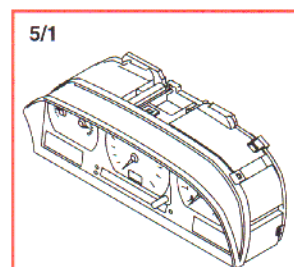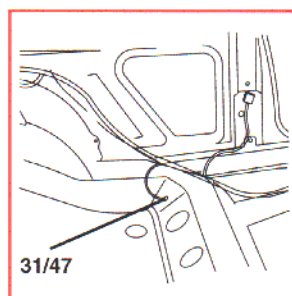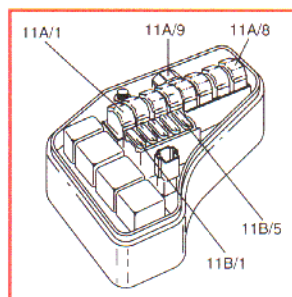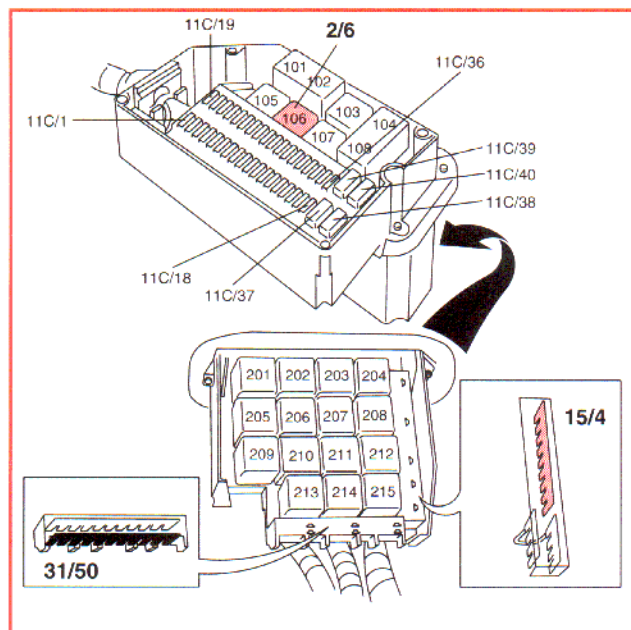

Brake (stop) lamps S70

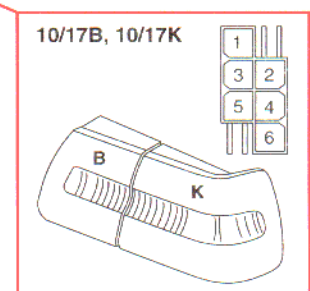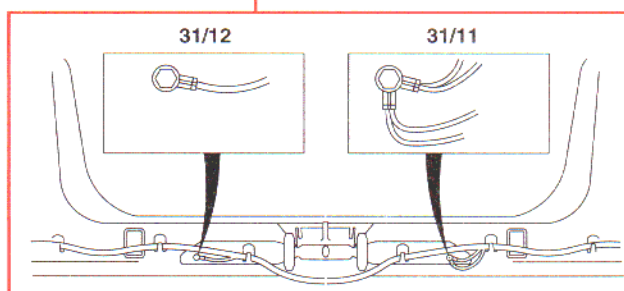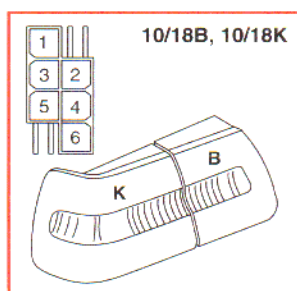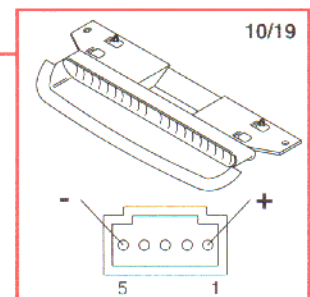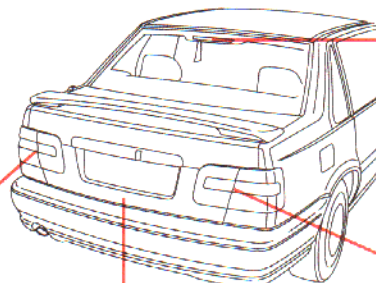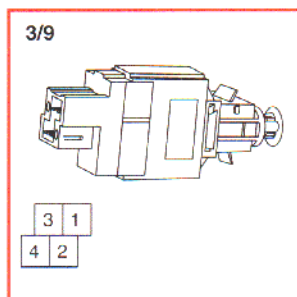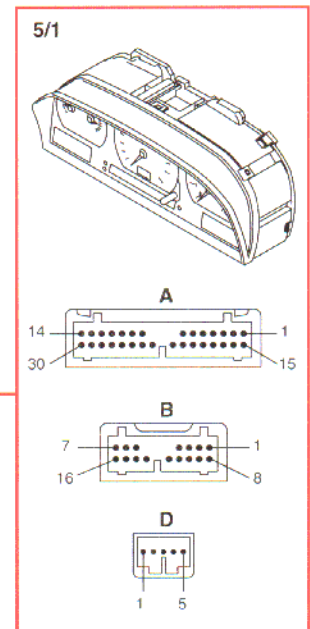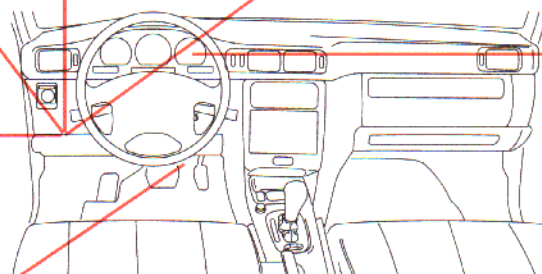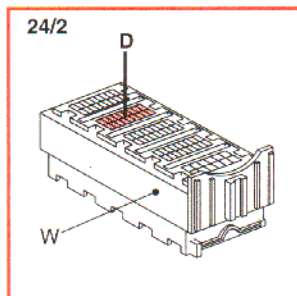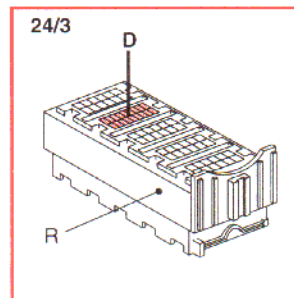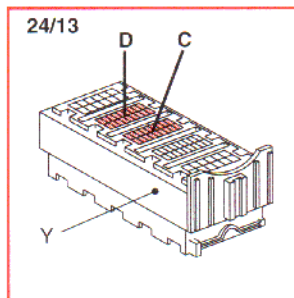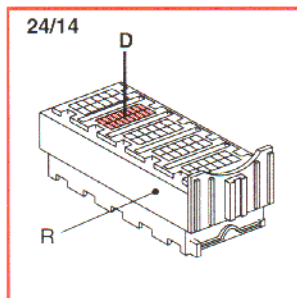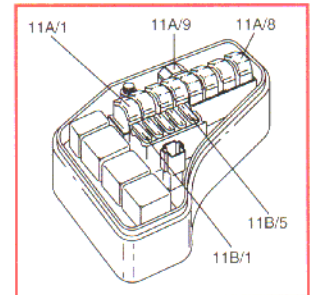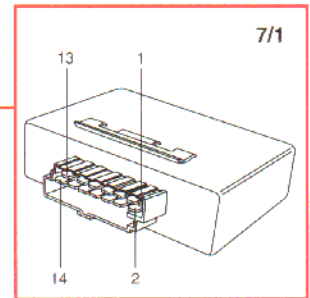
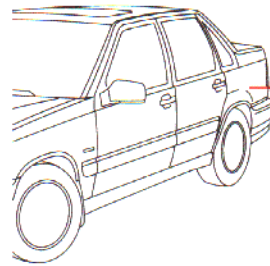
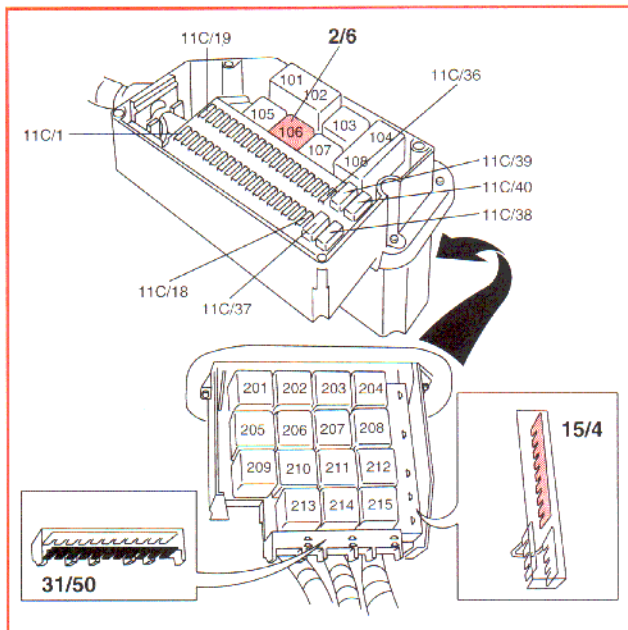


Brake (stop) lamps V70

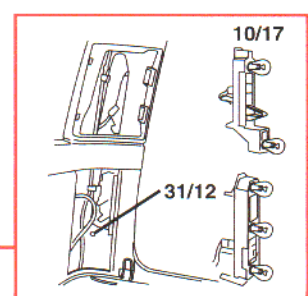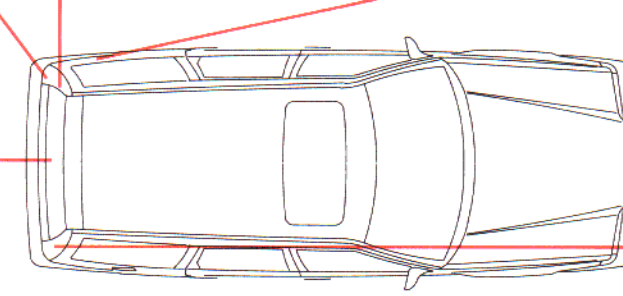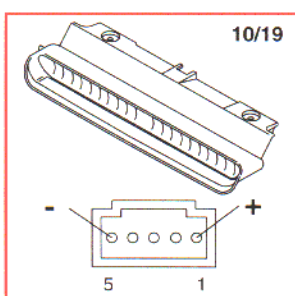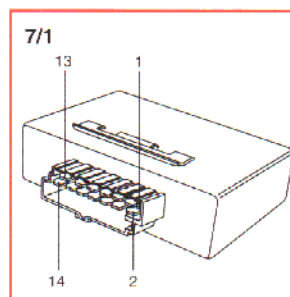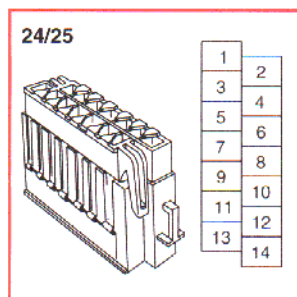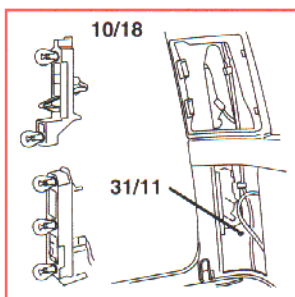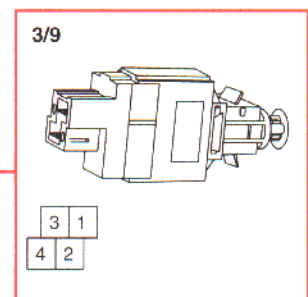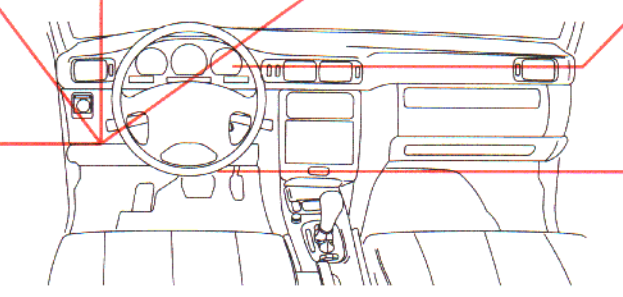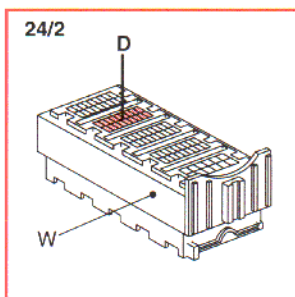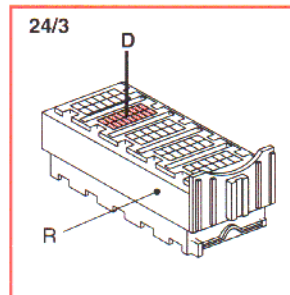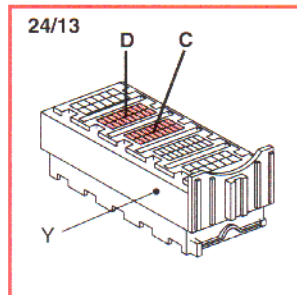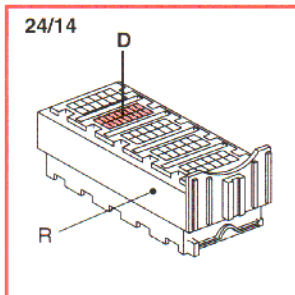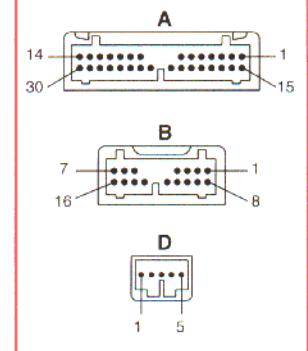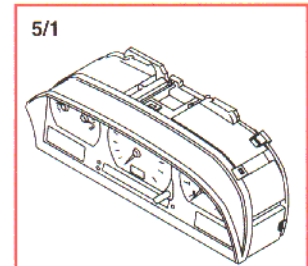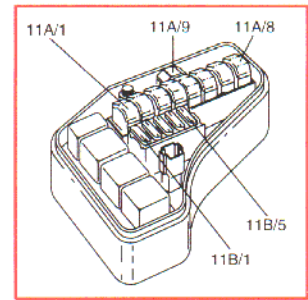
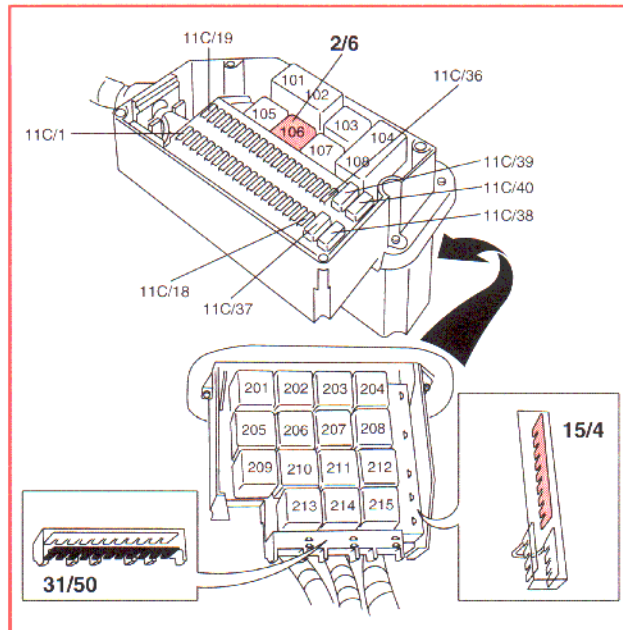


Reversing lamp




24/53

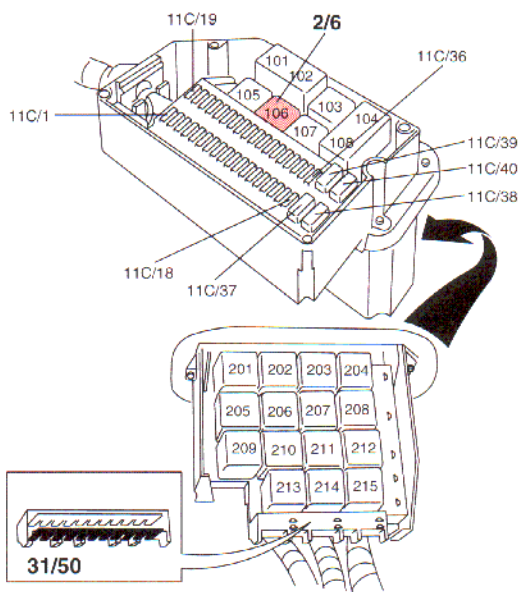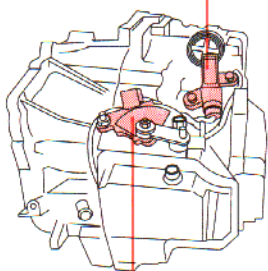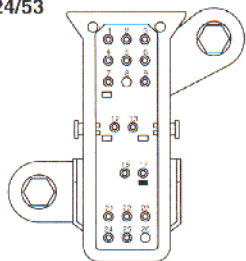


24/2
24/3
24/14

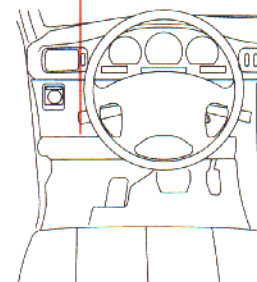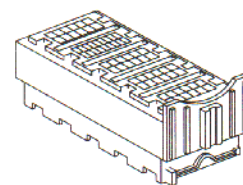



3/71

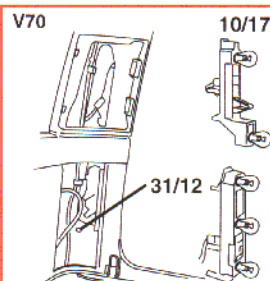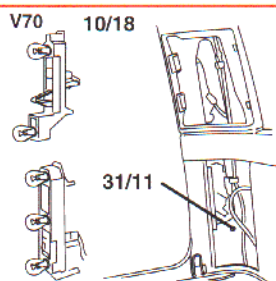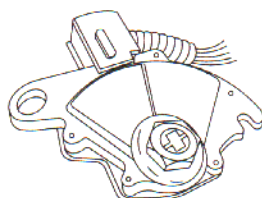



3/10

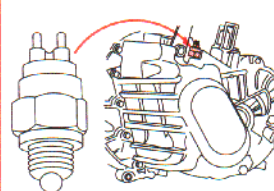


10/18 C70

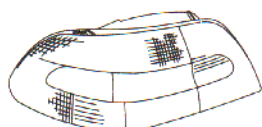



10/17 C70

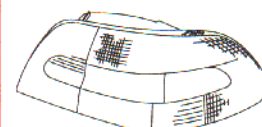




10/18B, 10/18K
S70

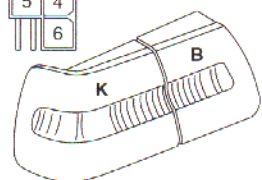


10/17B, 10/17K
S70

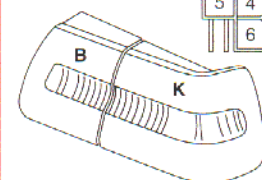




















24/81

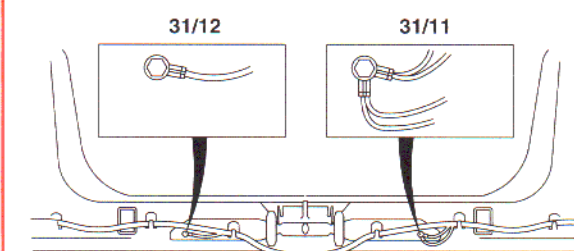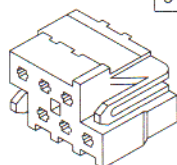



















24/71
24/15

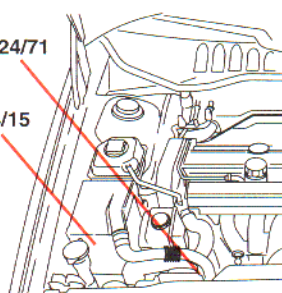



















Interior lighting C70 Convertible

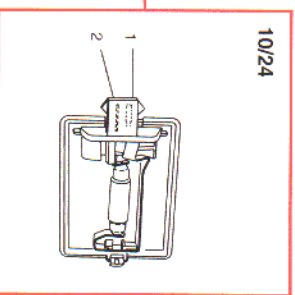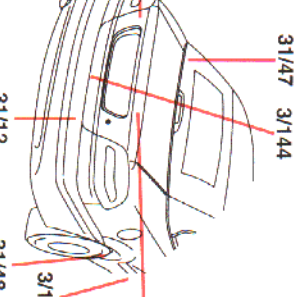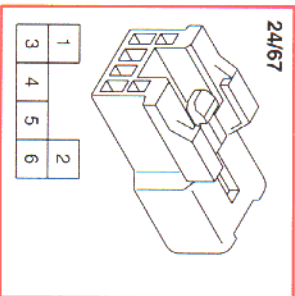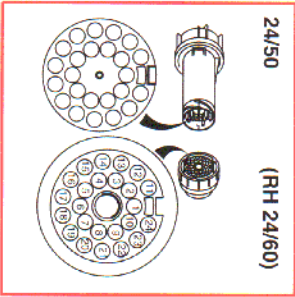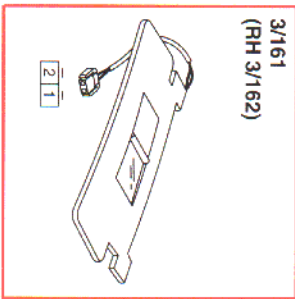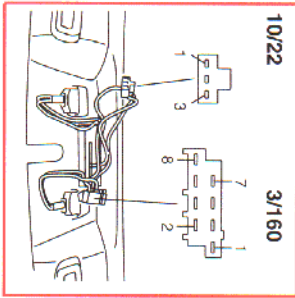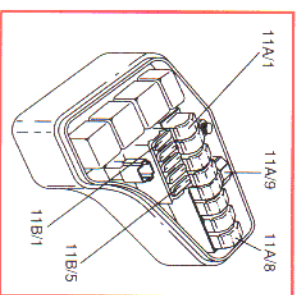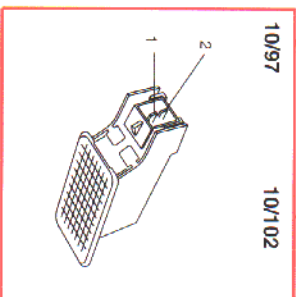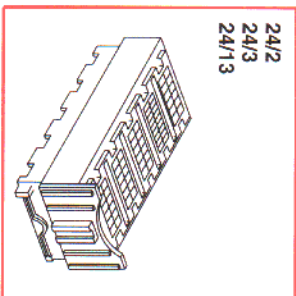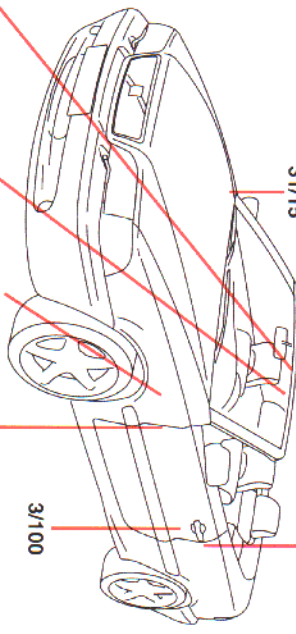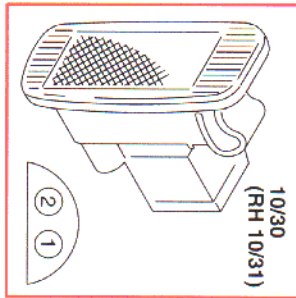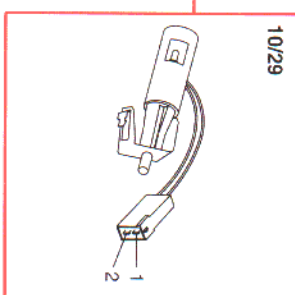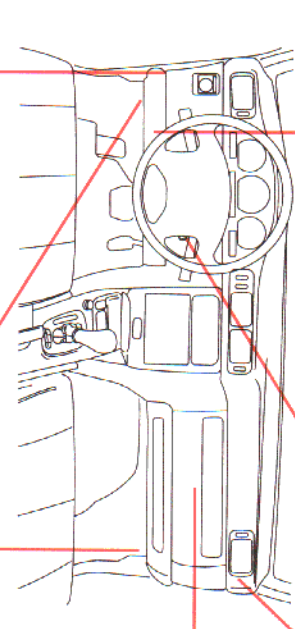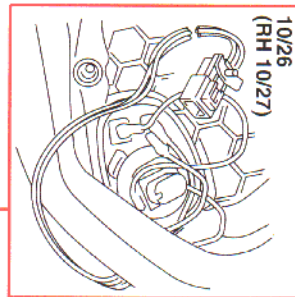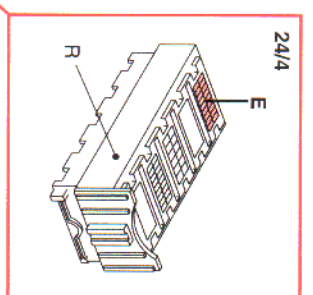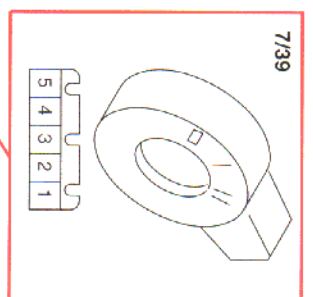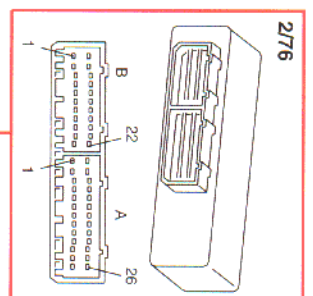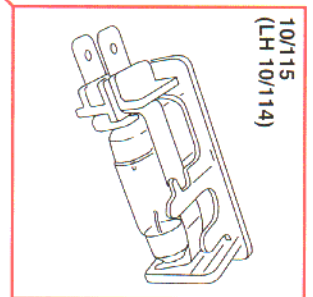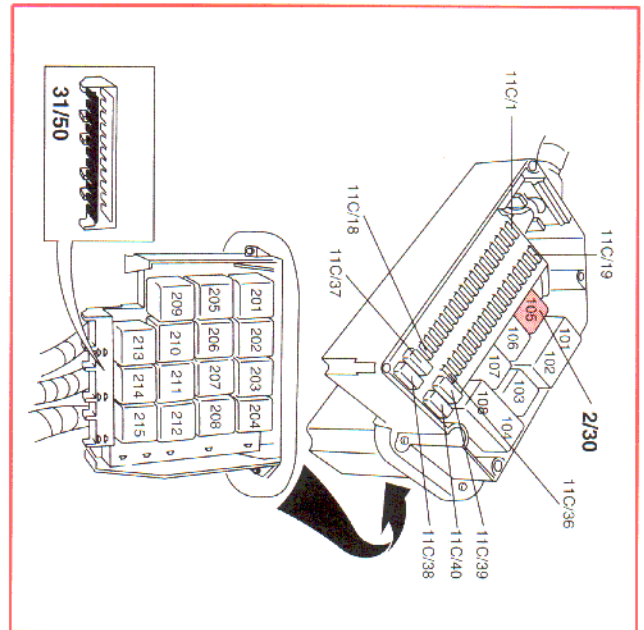


Interior lighting C70 coupé

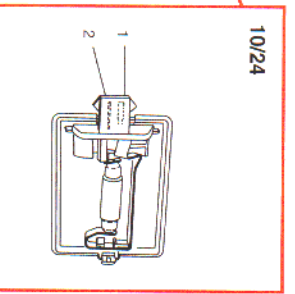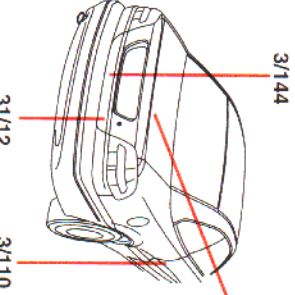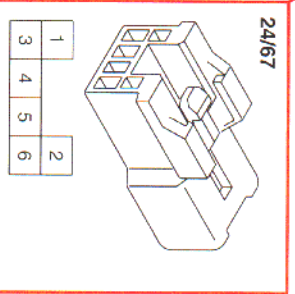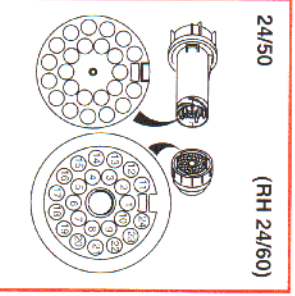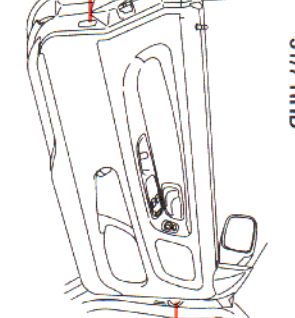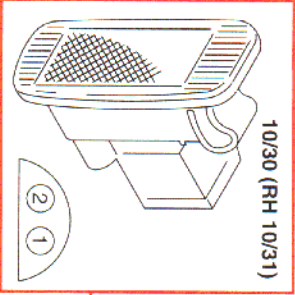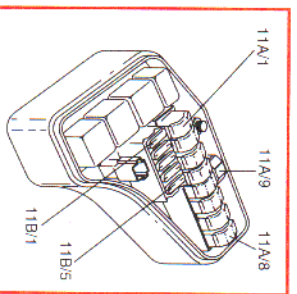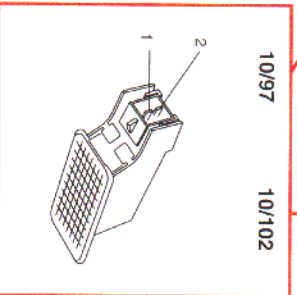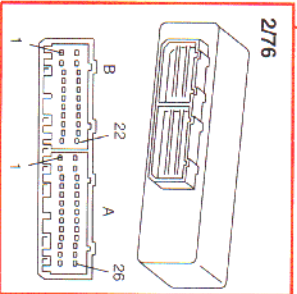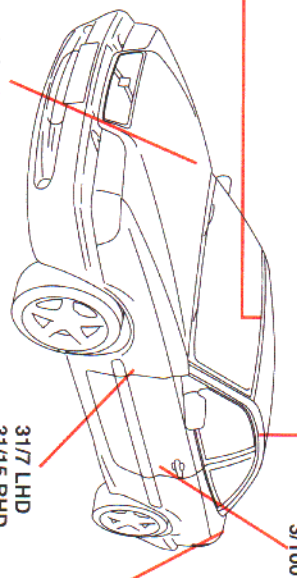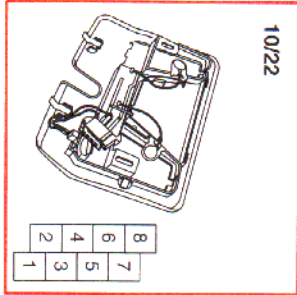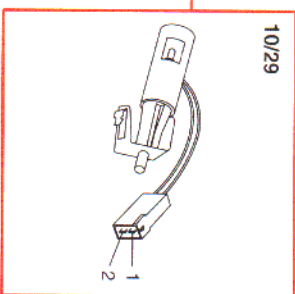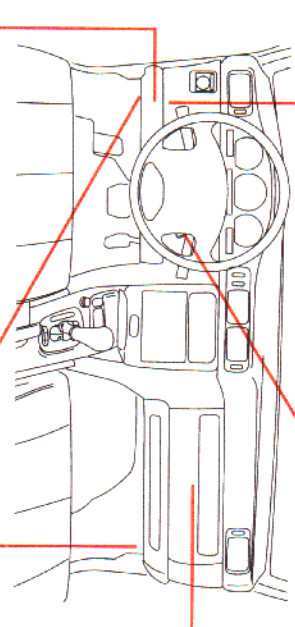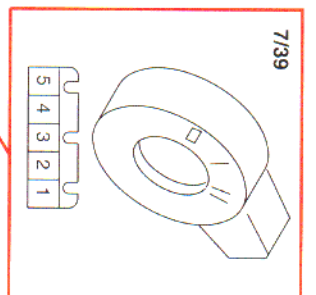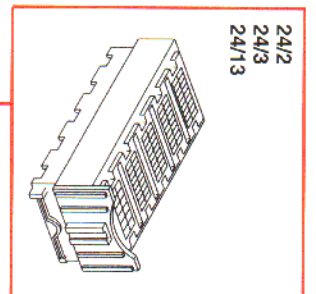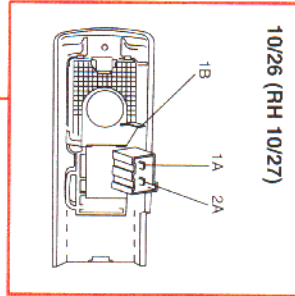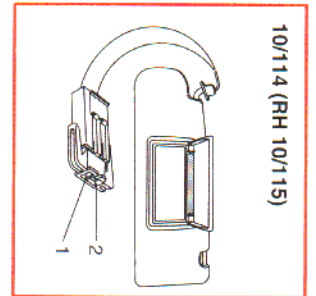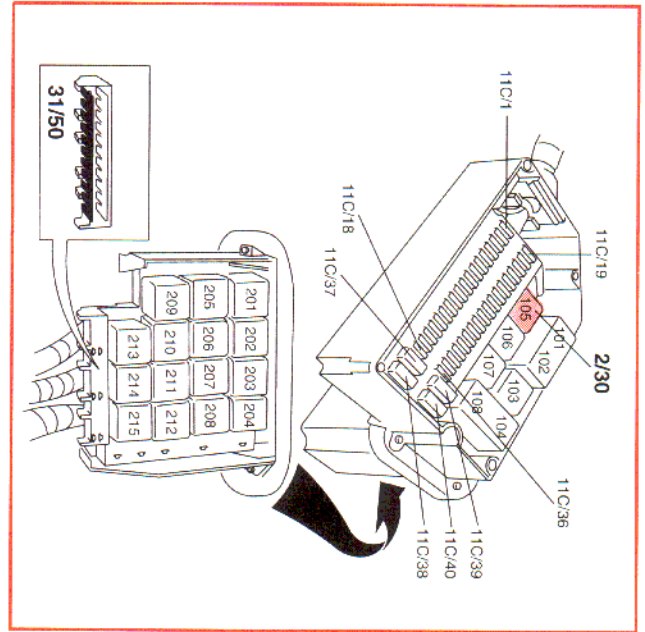


Interior lighting S70, V70

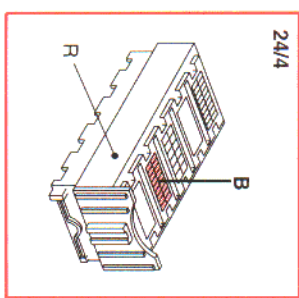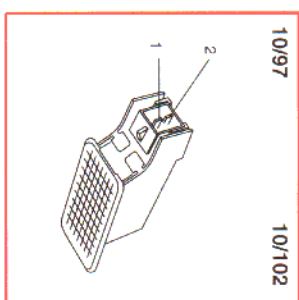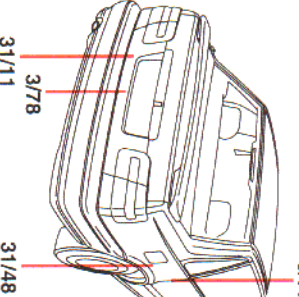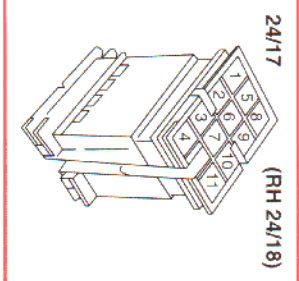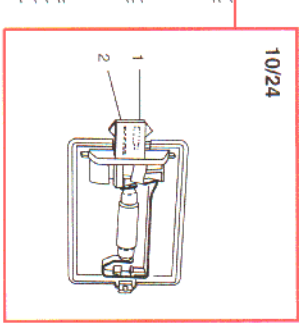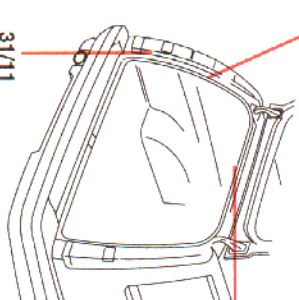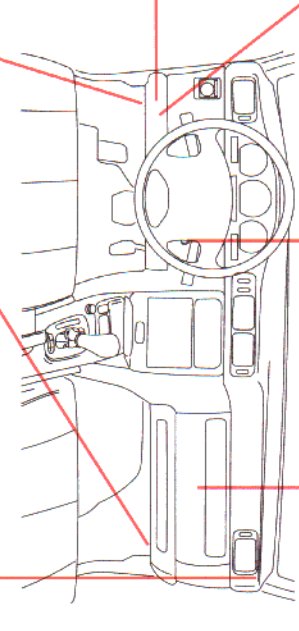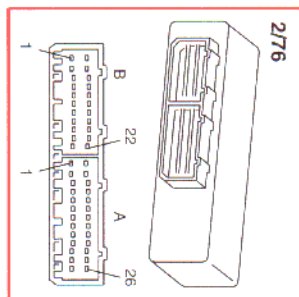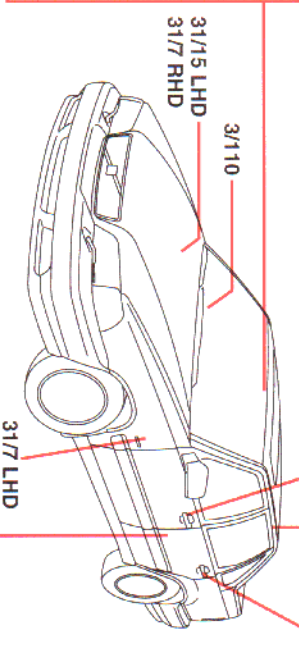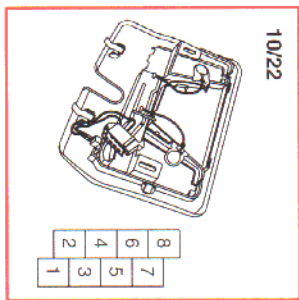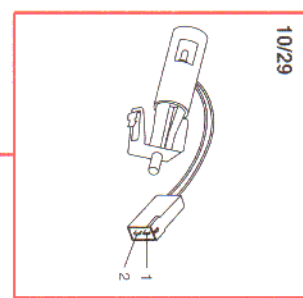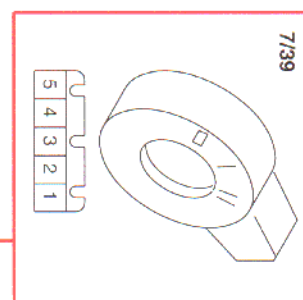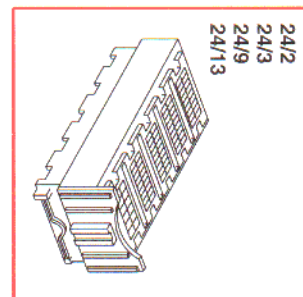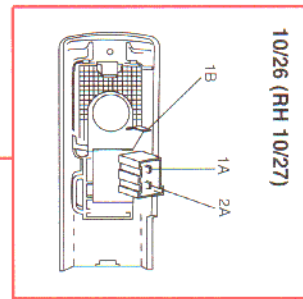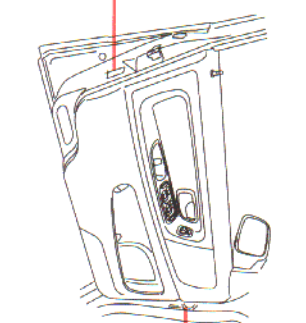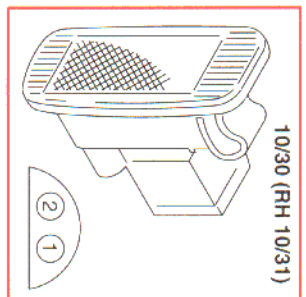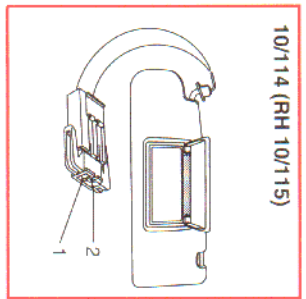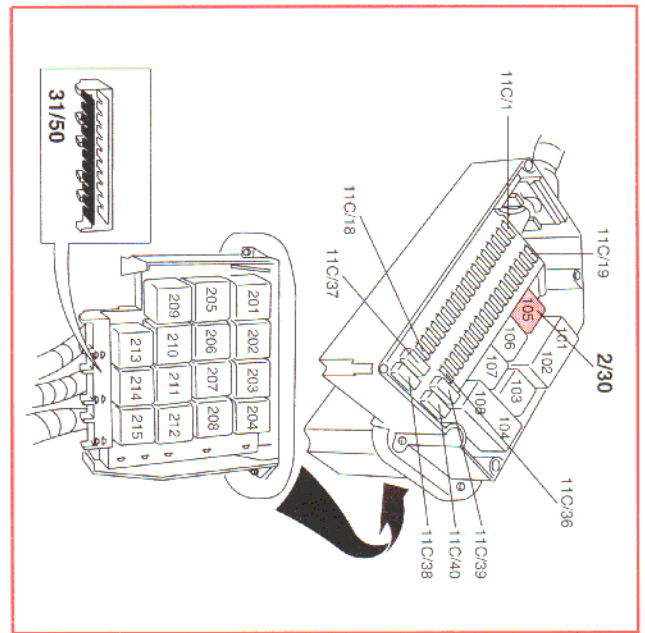



Instrument and control lighting

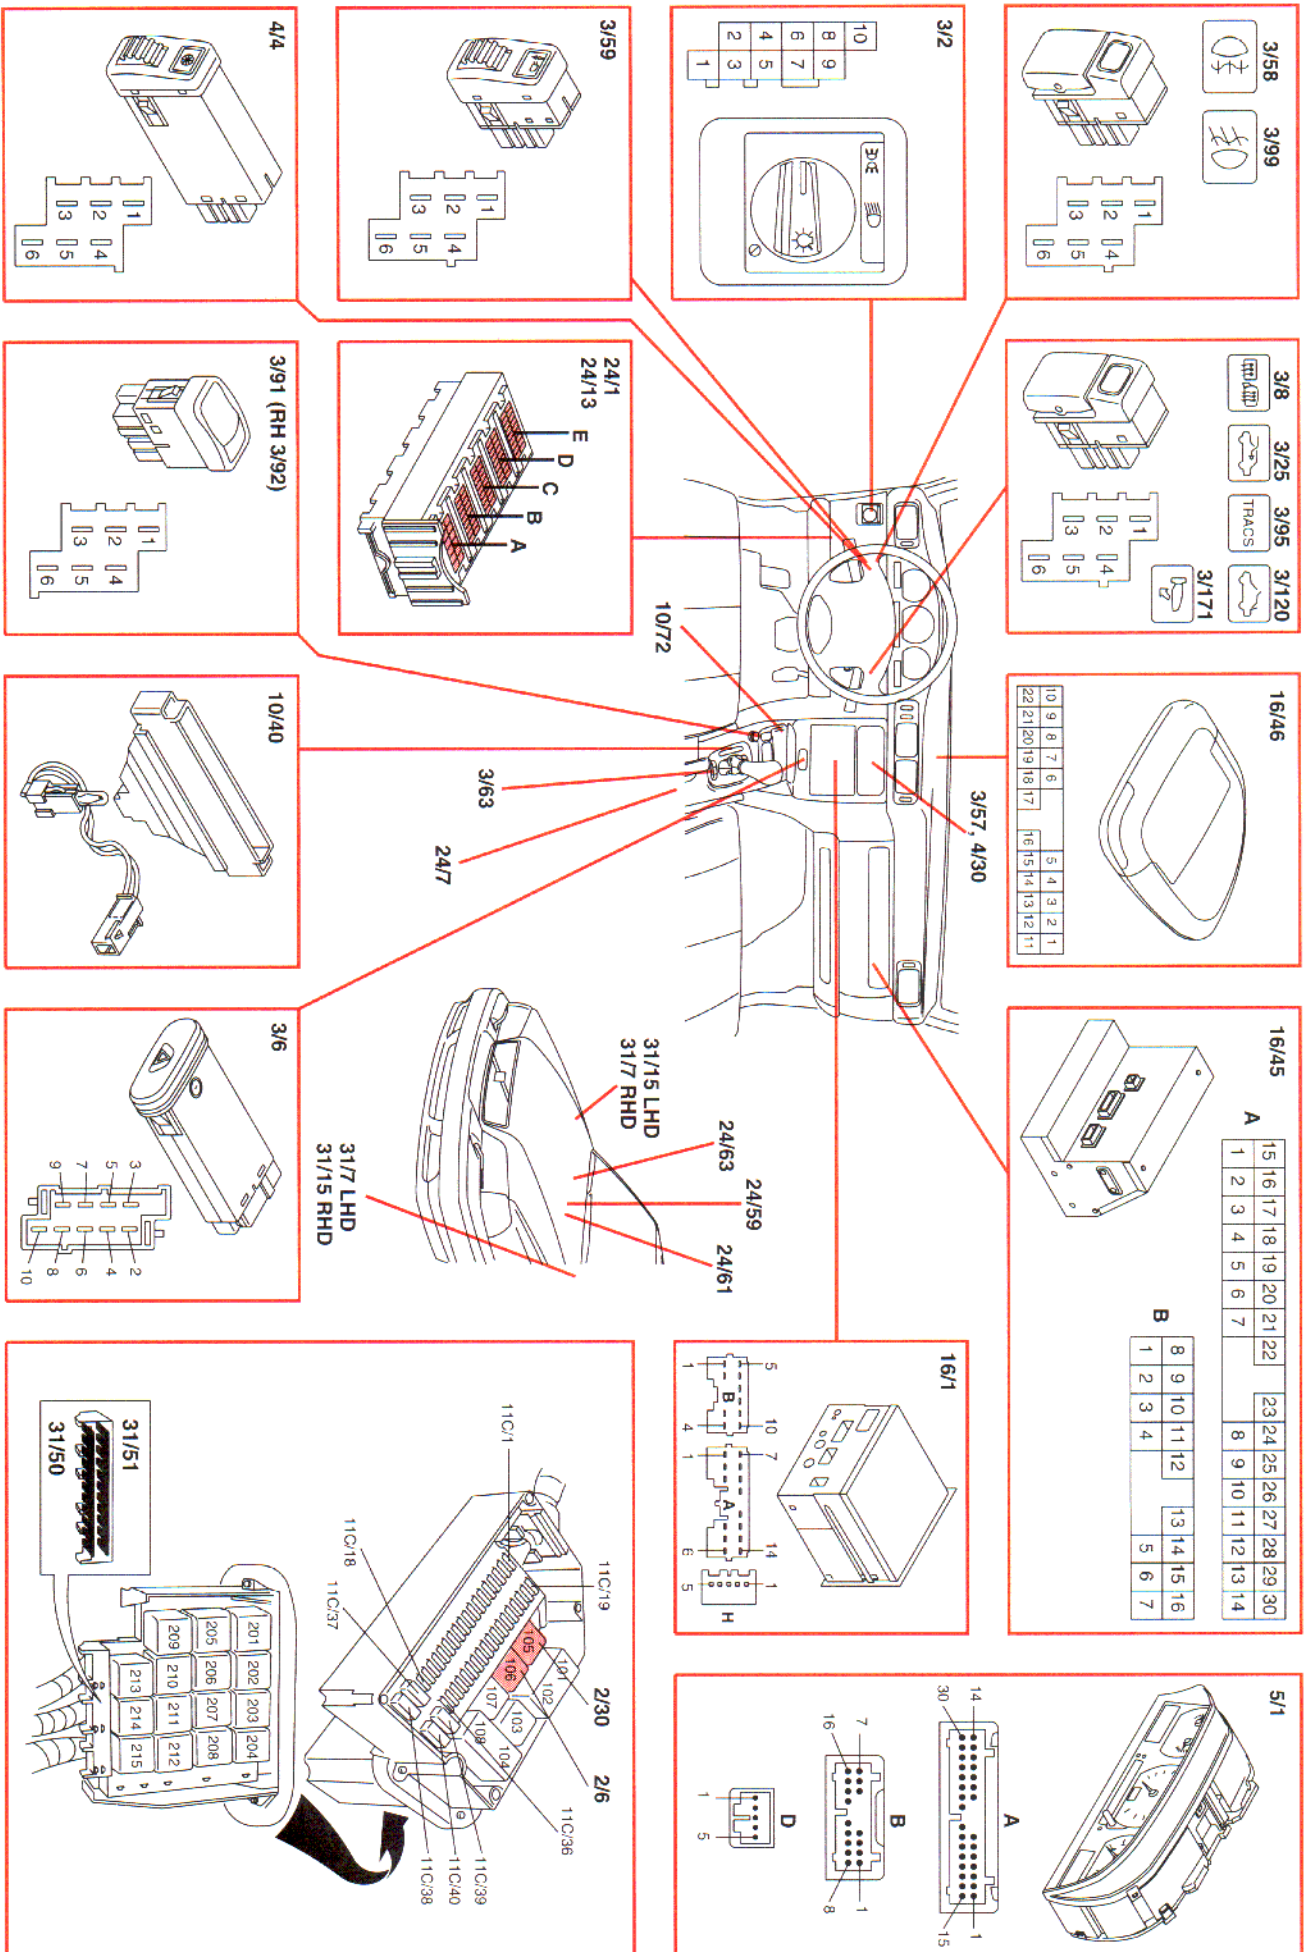




Turn signal lamps and hazard warning signal flashers C70

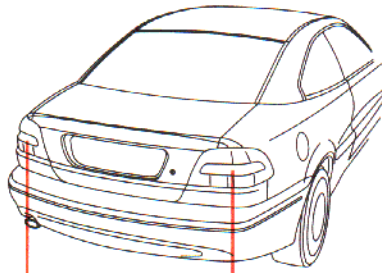


10/18

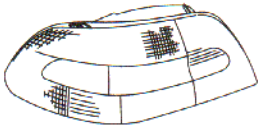



10/17

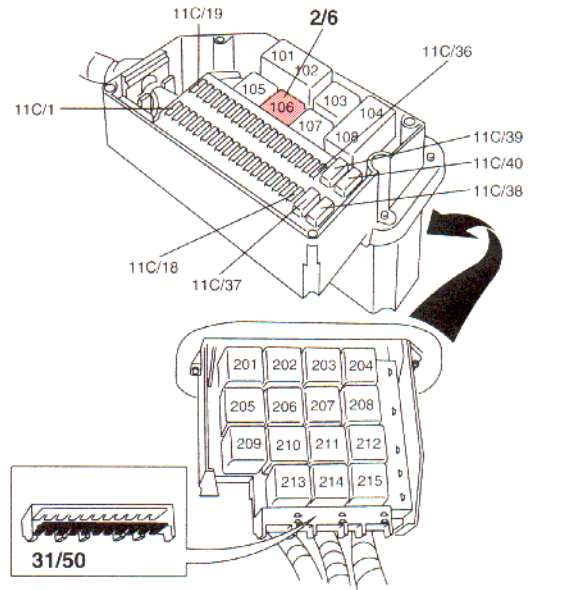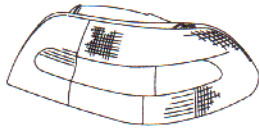


24/14 LHD
24/3 RHD

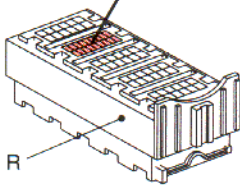


3/3

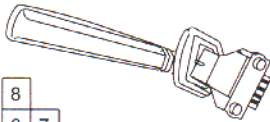



31/12

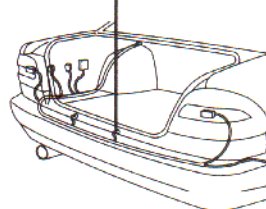

5/1

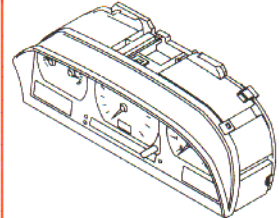


24/13

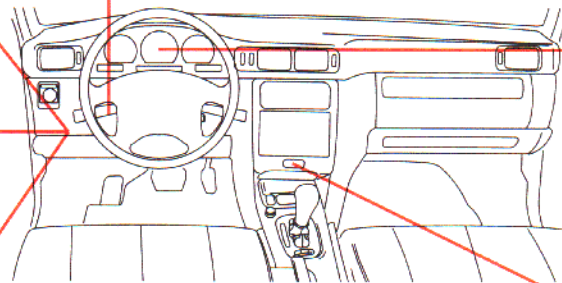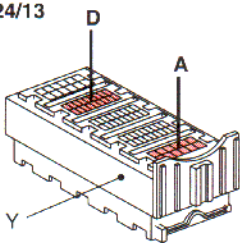


A




B



D




24/2

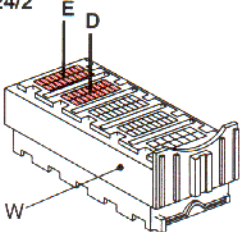


10/16


10/15

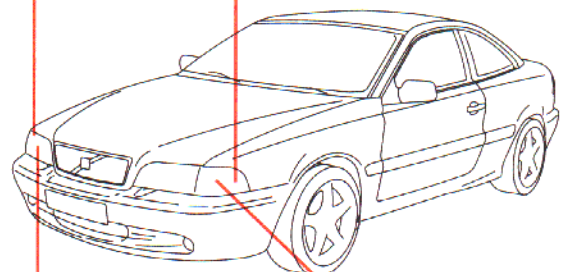

3/6


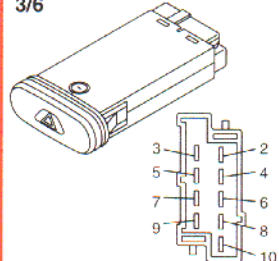


31/52

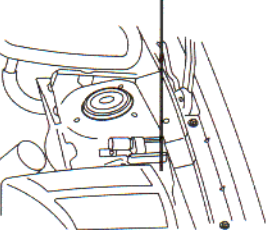


















10/10

10/9

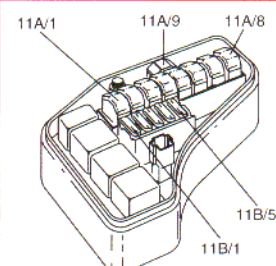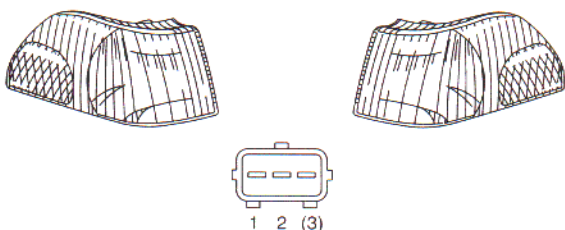


Turn signal lamps and hazard warning signal flashers






S70

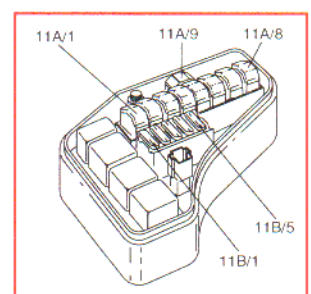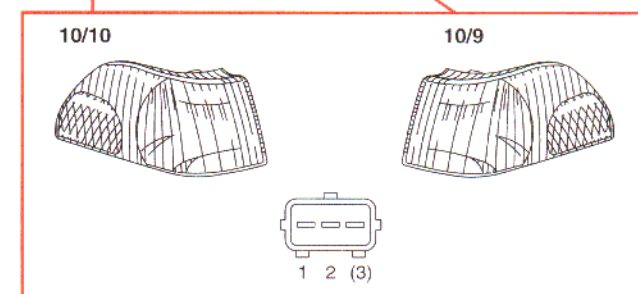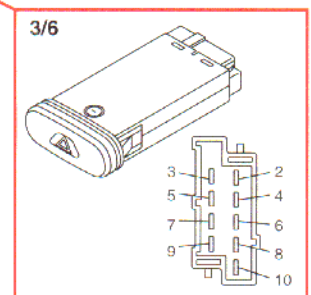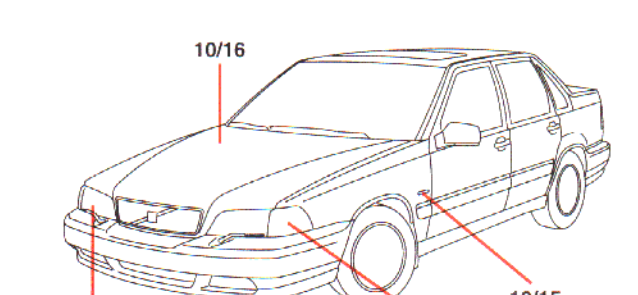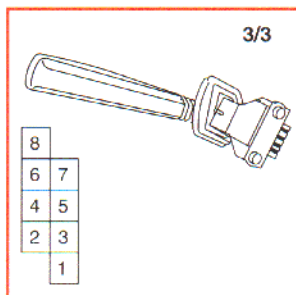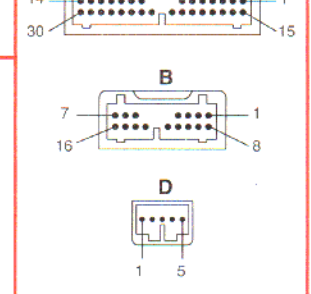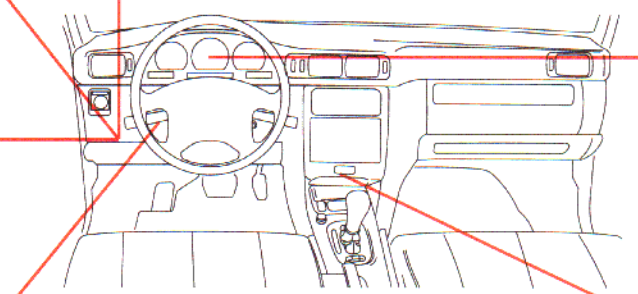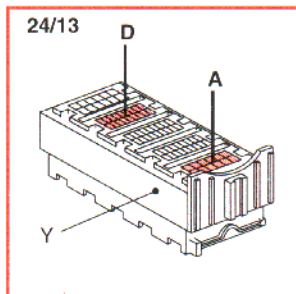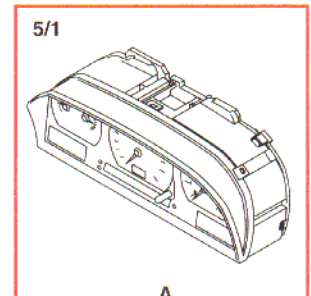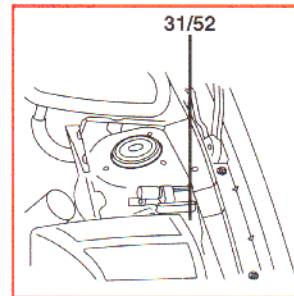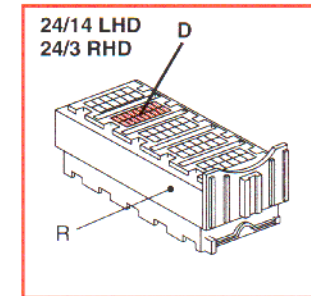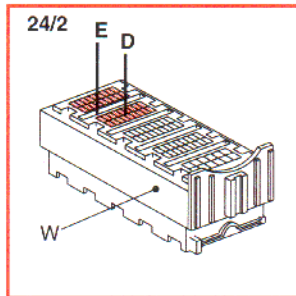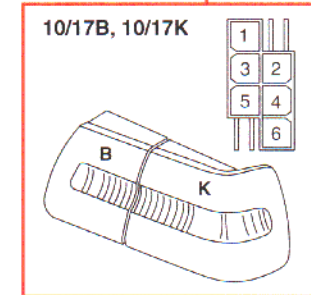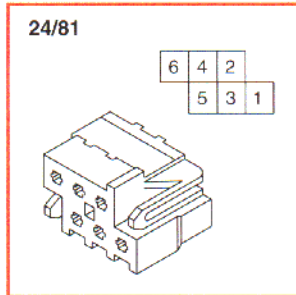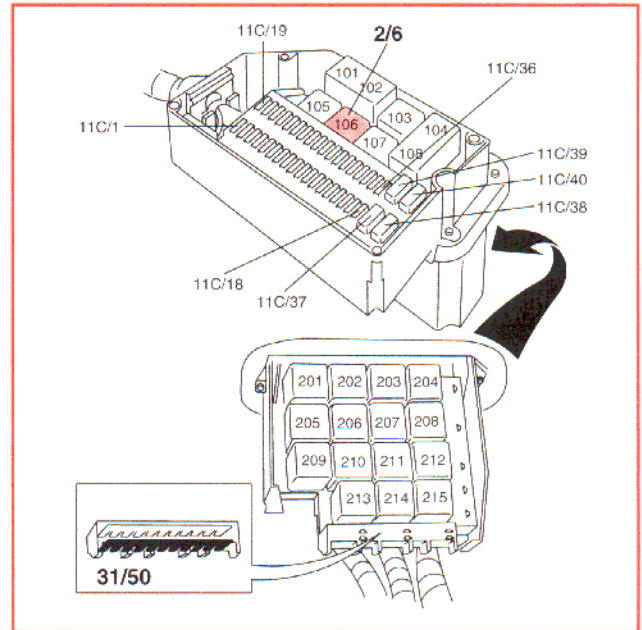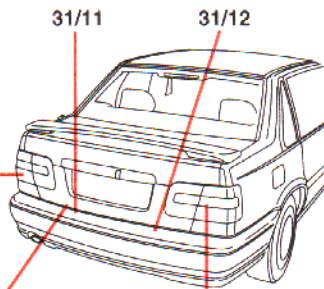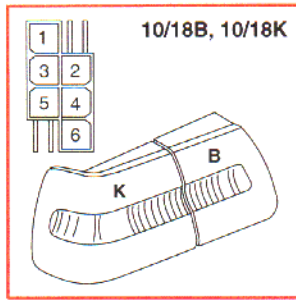











Turn signal lamps and hazard warning signal flashers V70

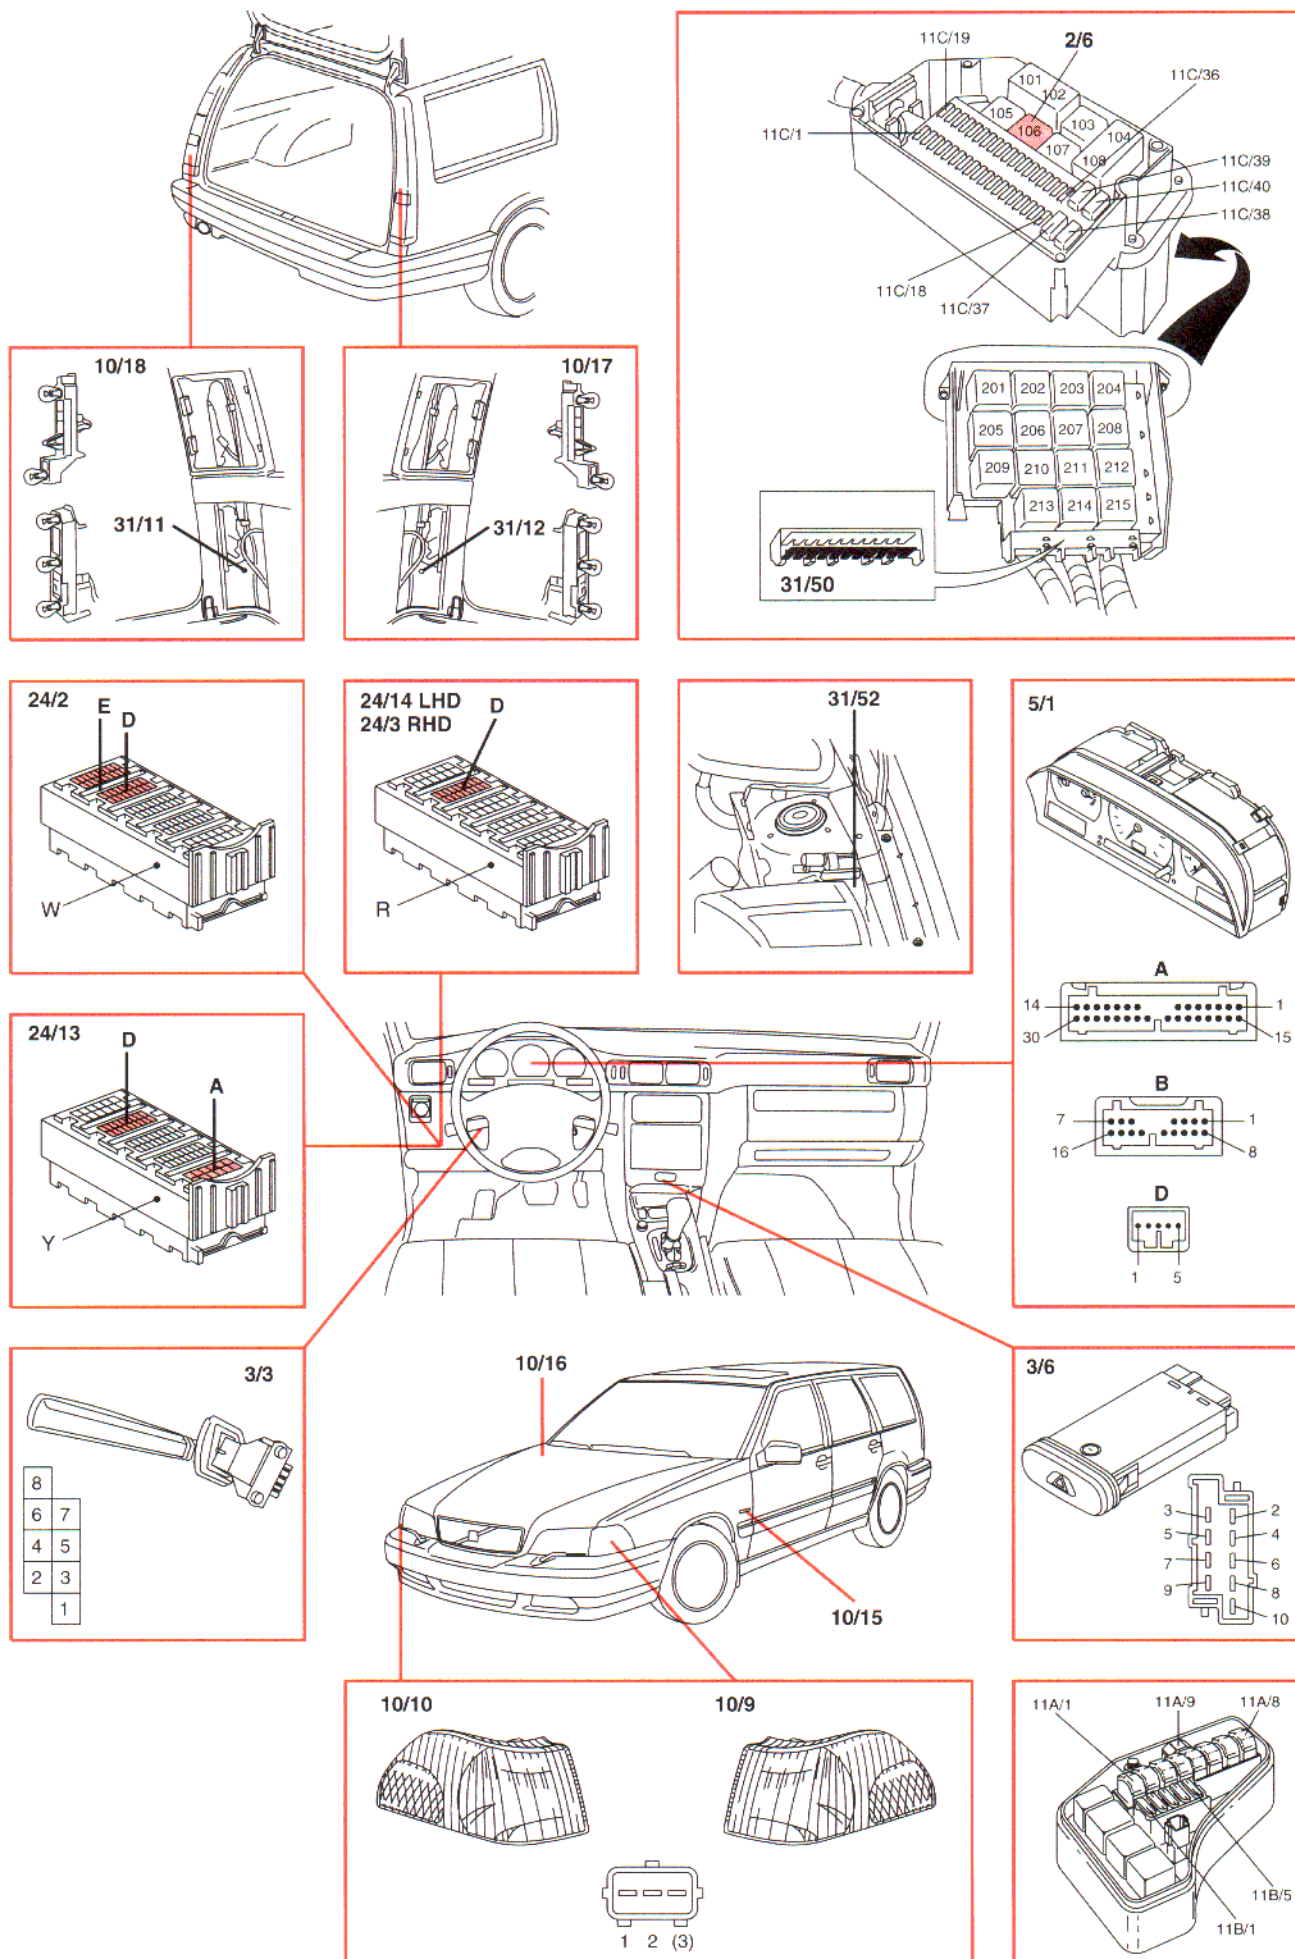

Signal horn

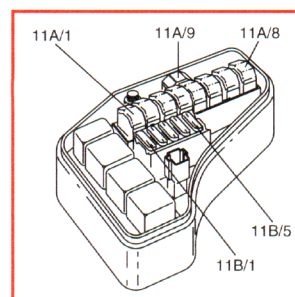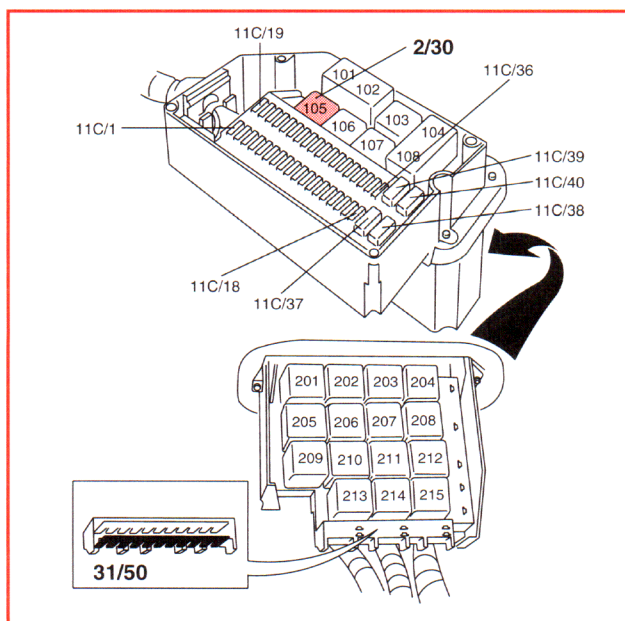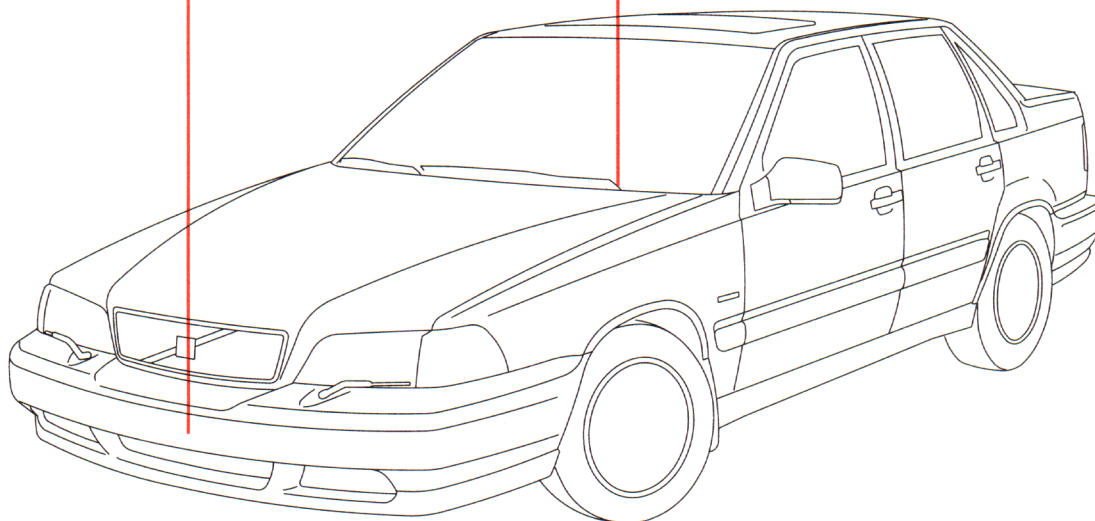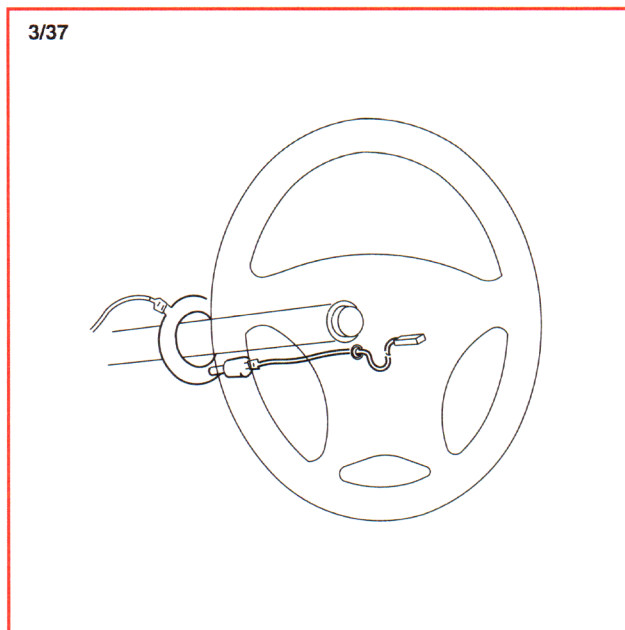
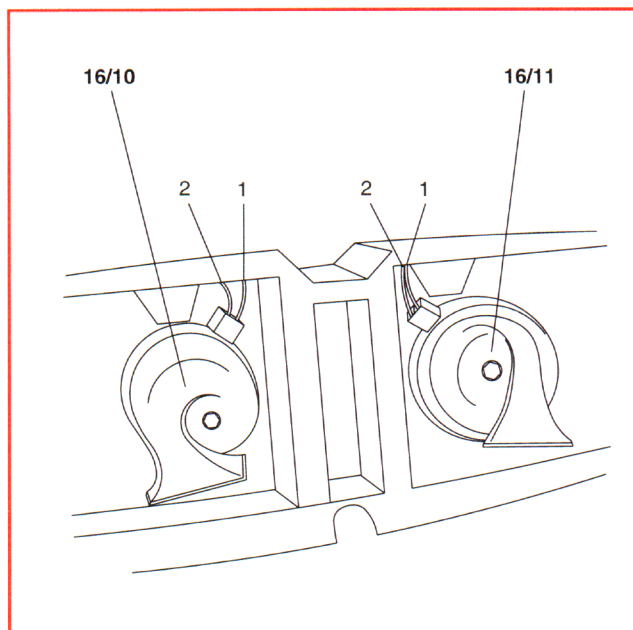


Washers
windshield and headlamp

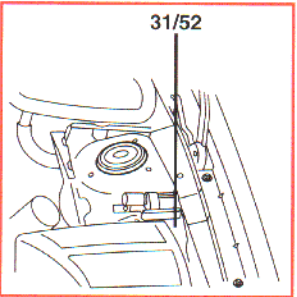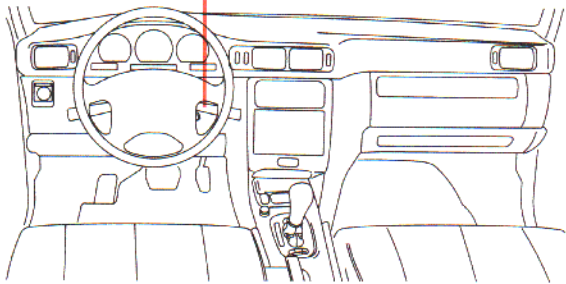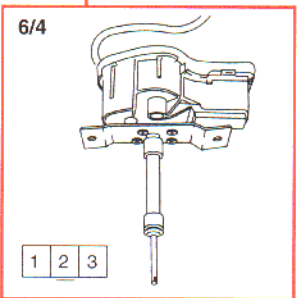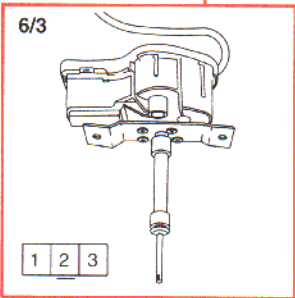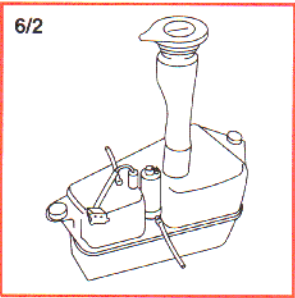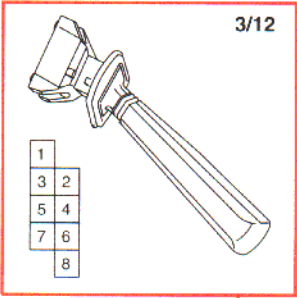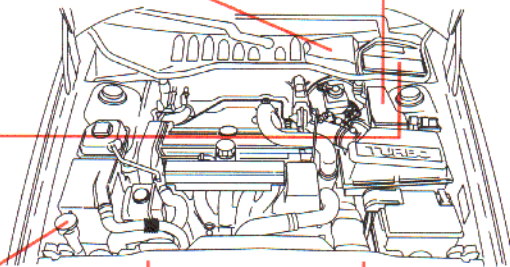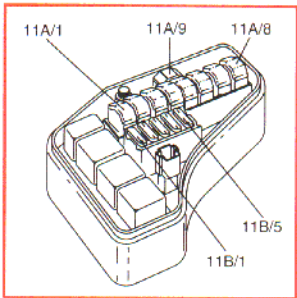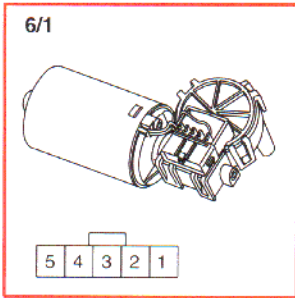
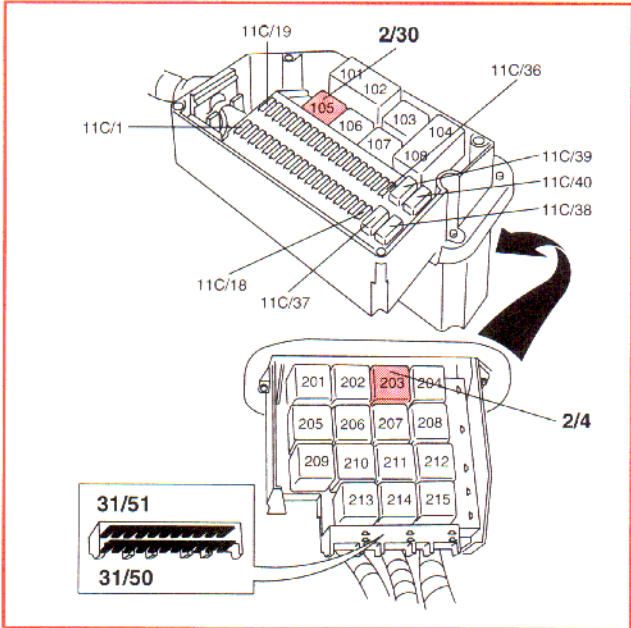


Washers rear windshield


24/25

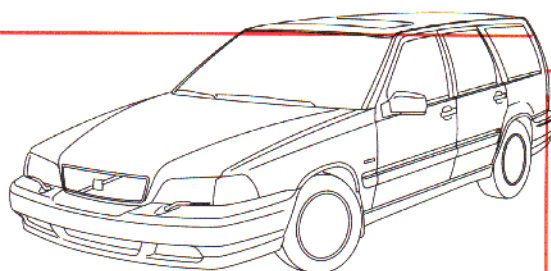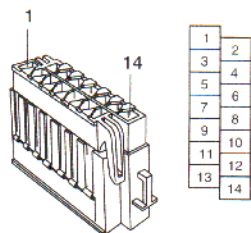




6/32

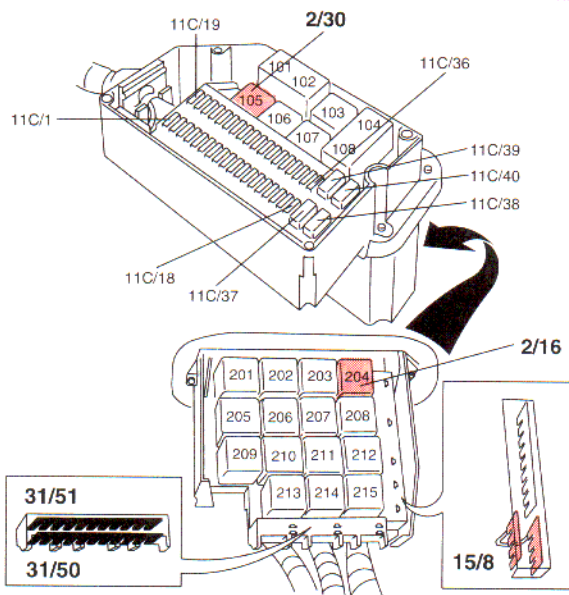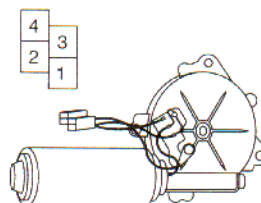


31/11

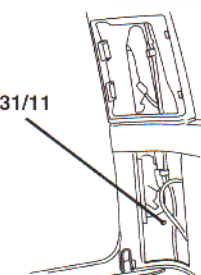


3/13

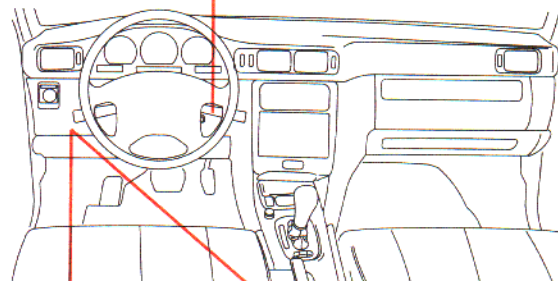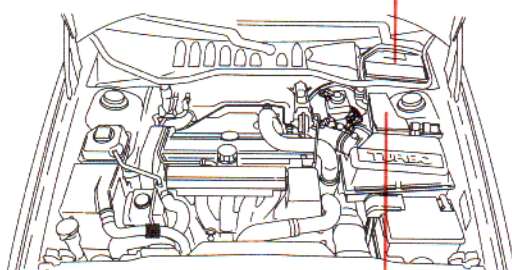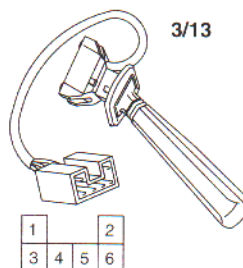


6/30

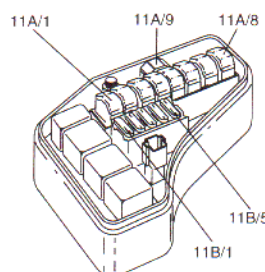


24/2

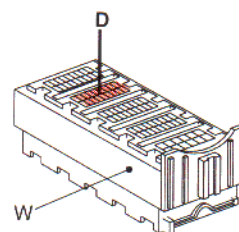


24/3 RHD
24/14 LHD

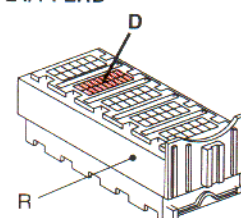


Cigarette lighter/12V outlet

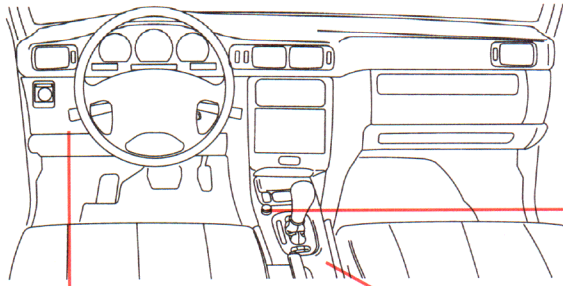


9/1

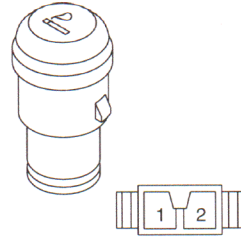




9/25

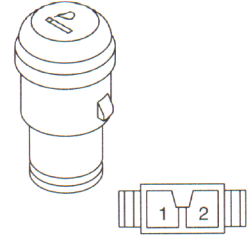



24/2

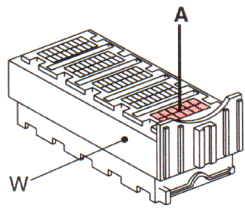


24/7A

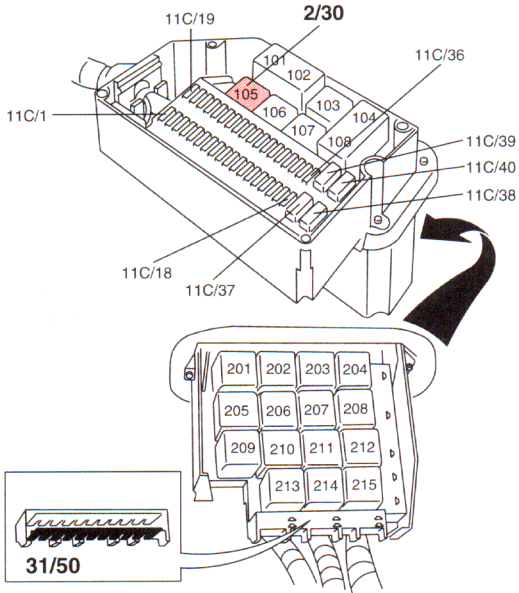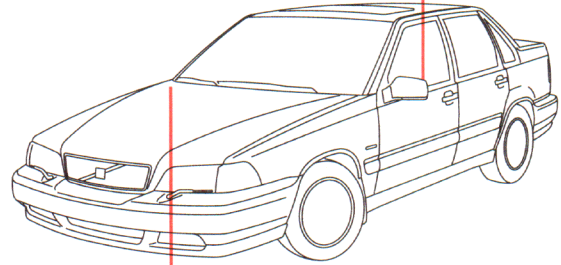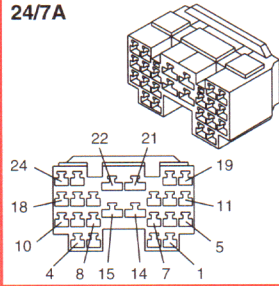


31/15

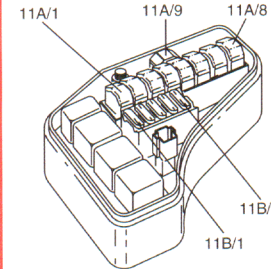


Anti-theft alarm
C70 Convertible

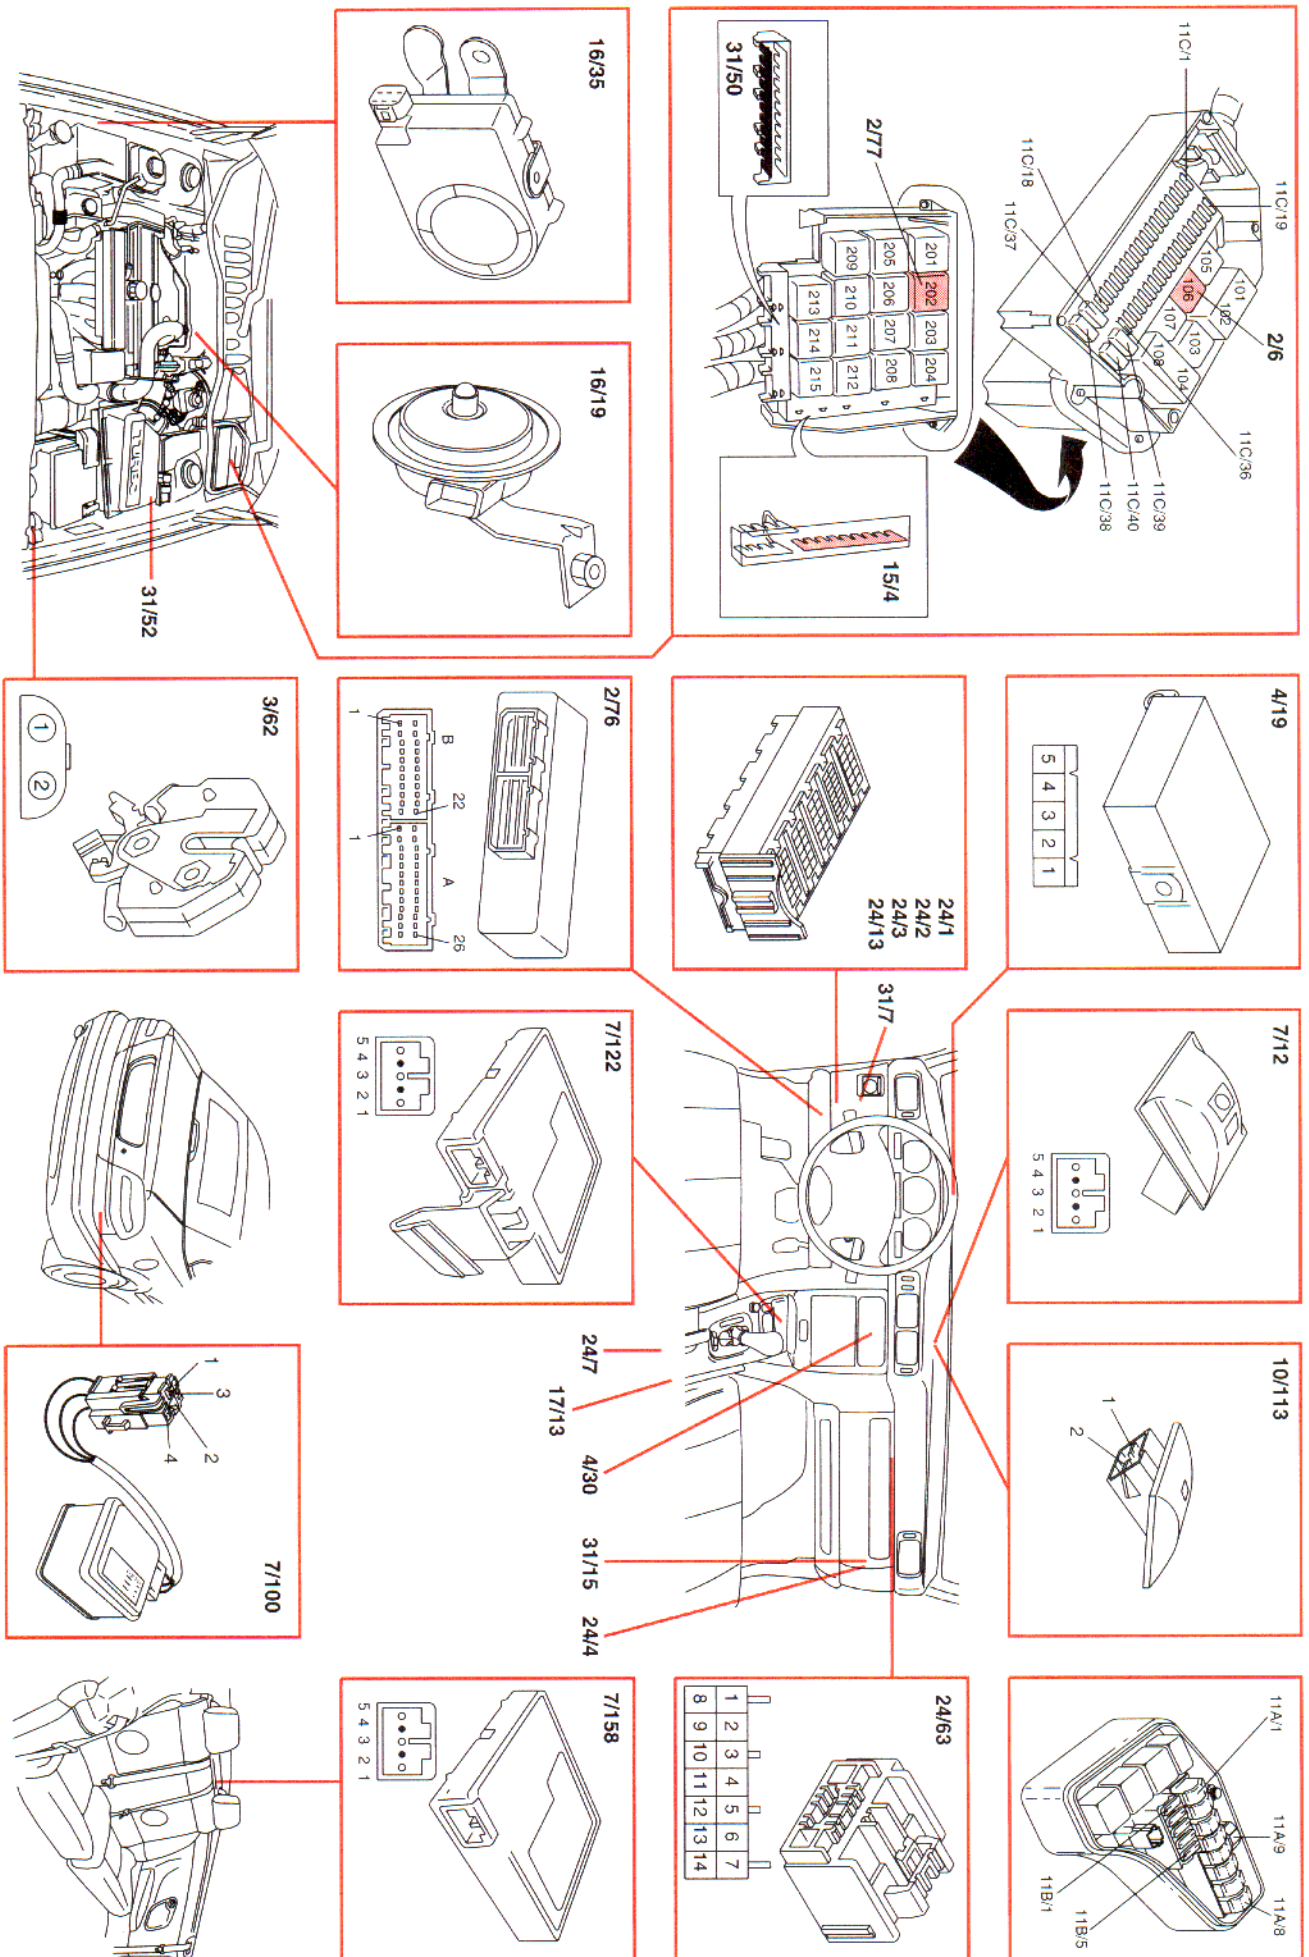


Anti-theft alarm C70 coupé

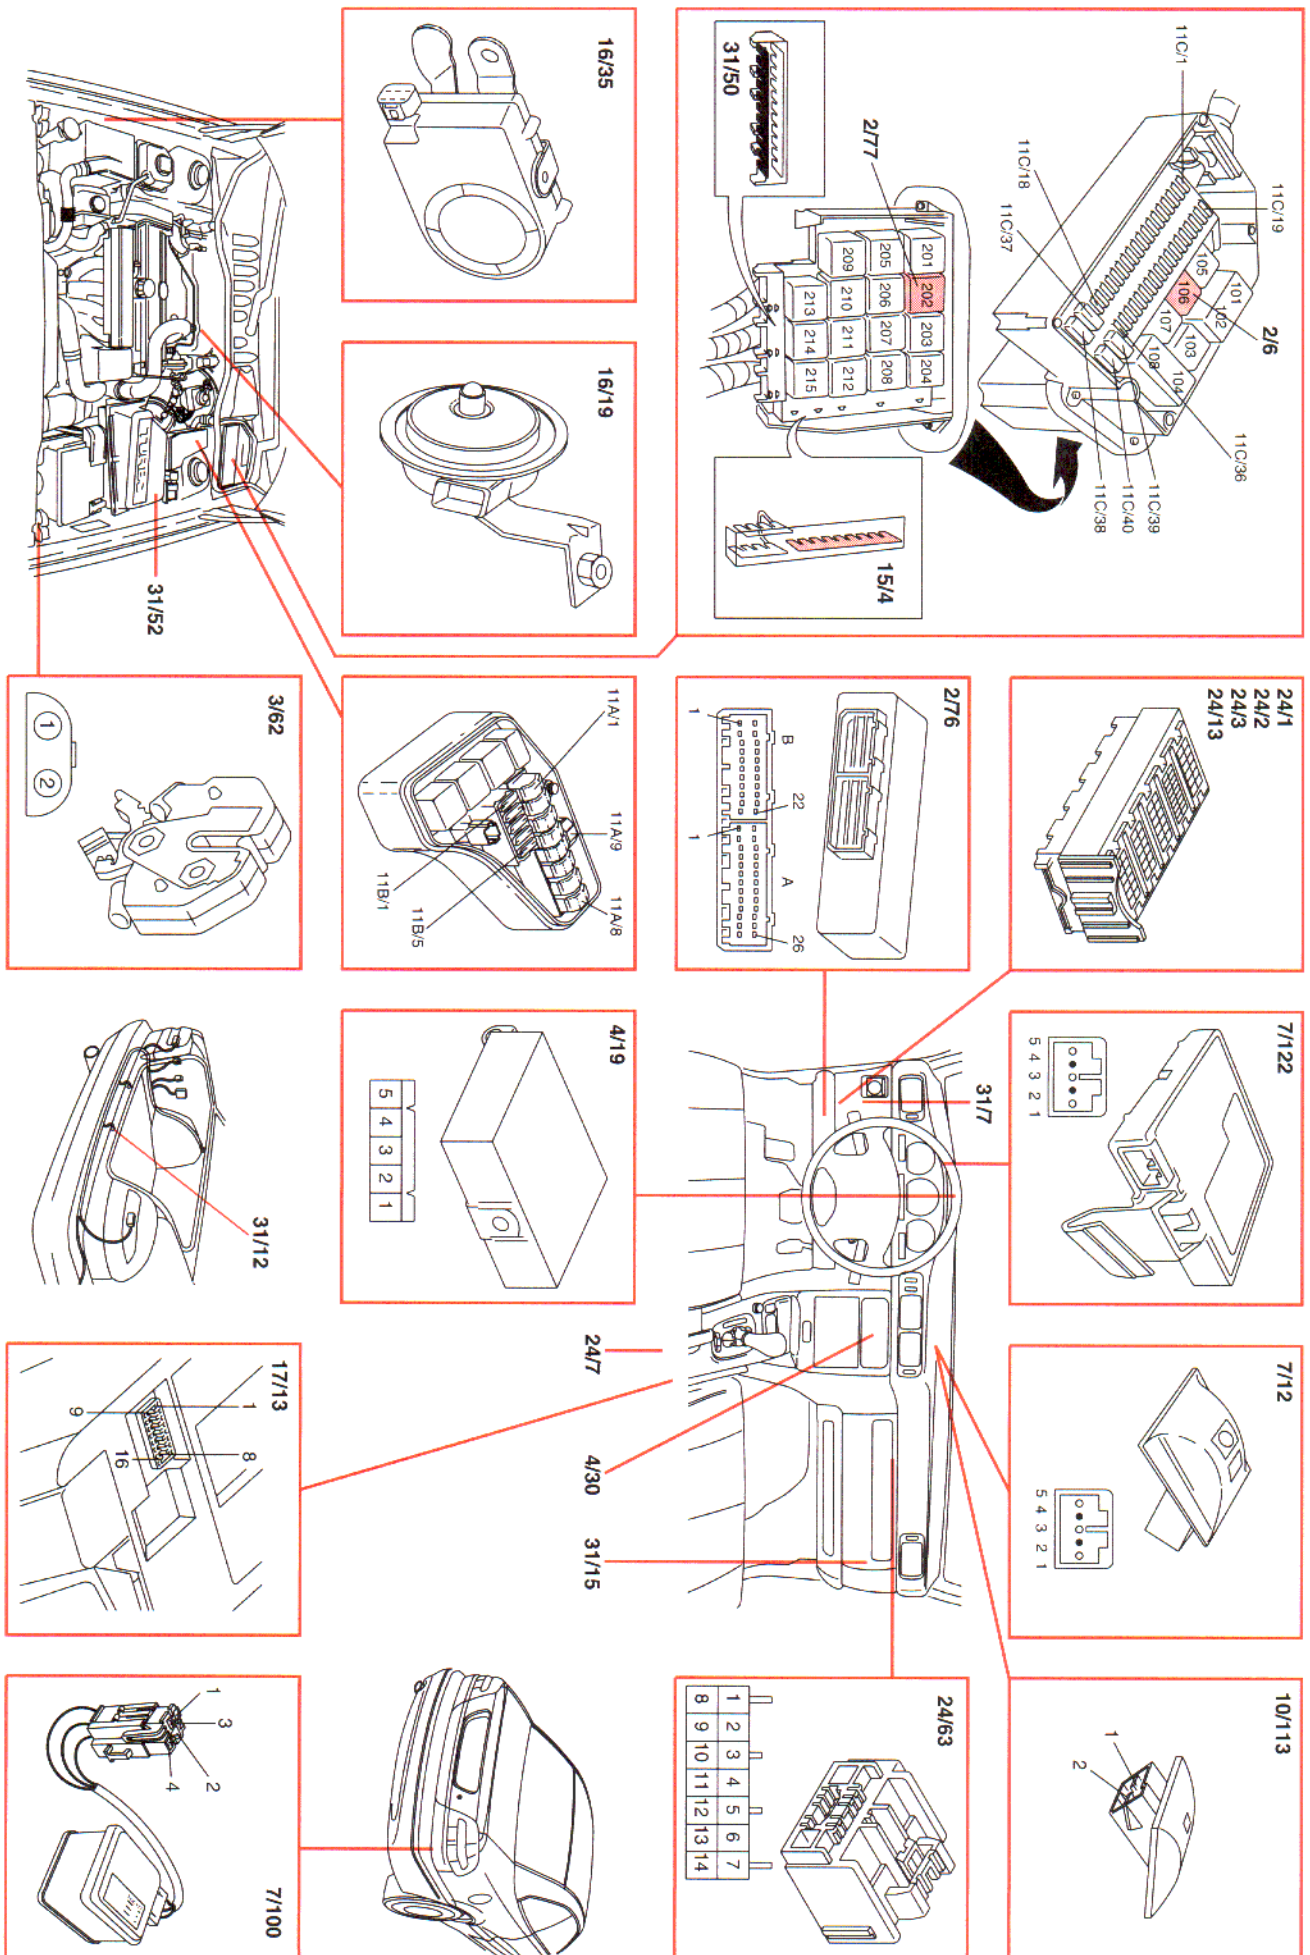

Anti-theft alarm S70, V70




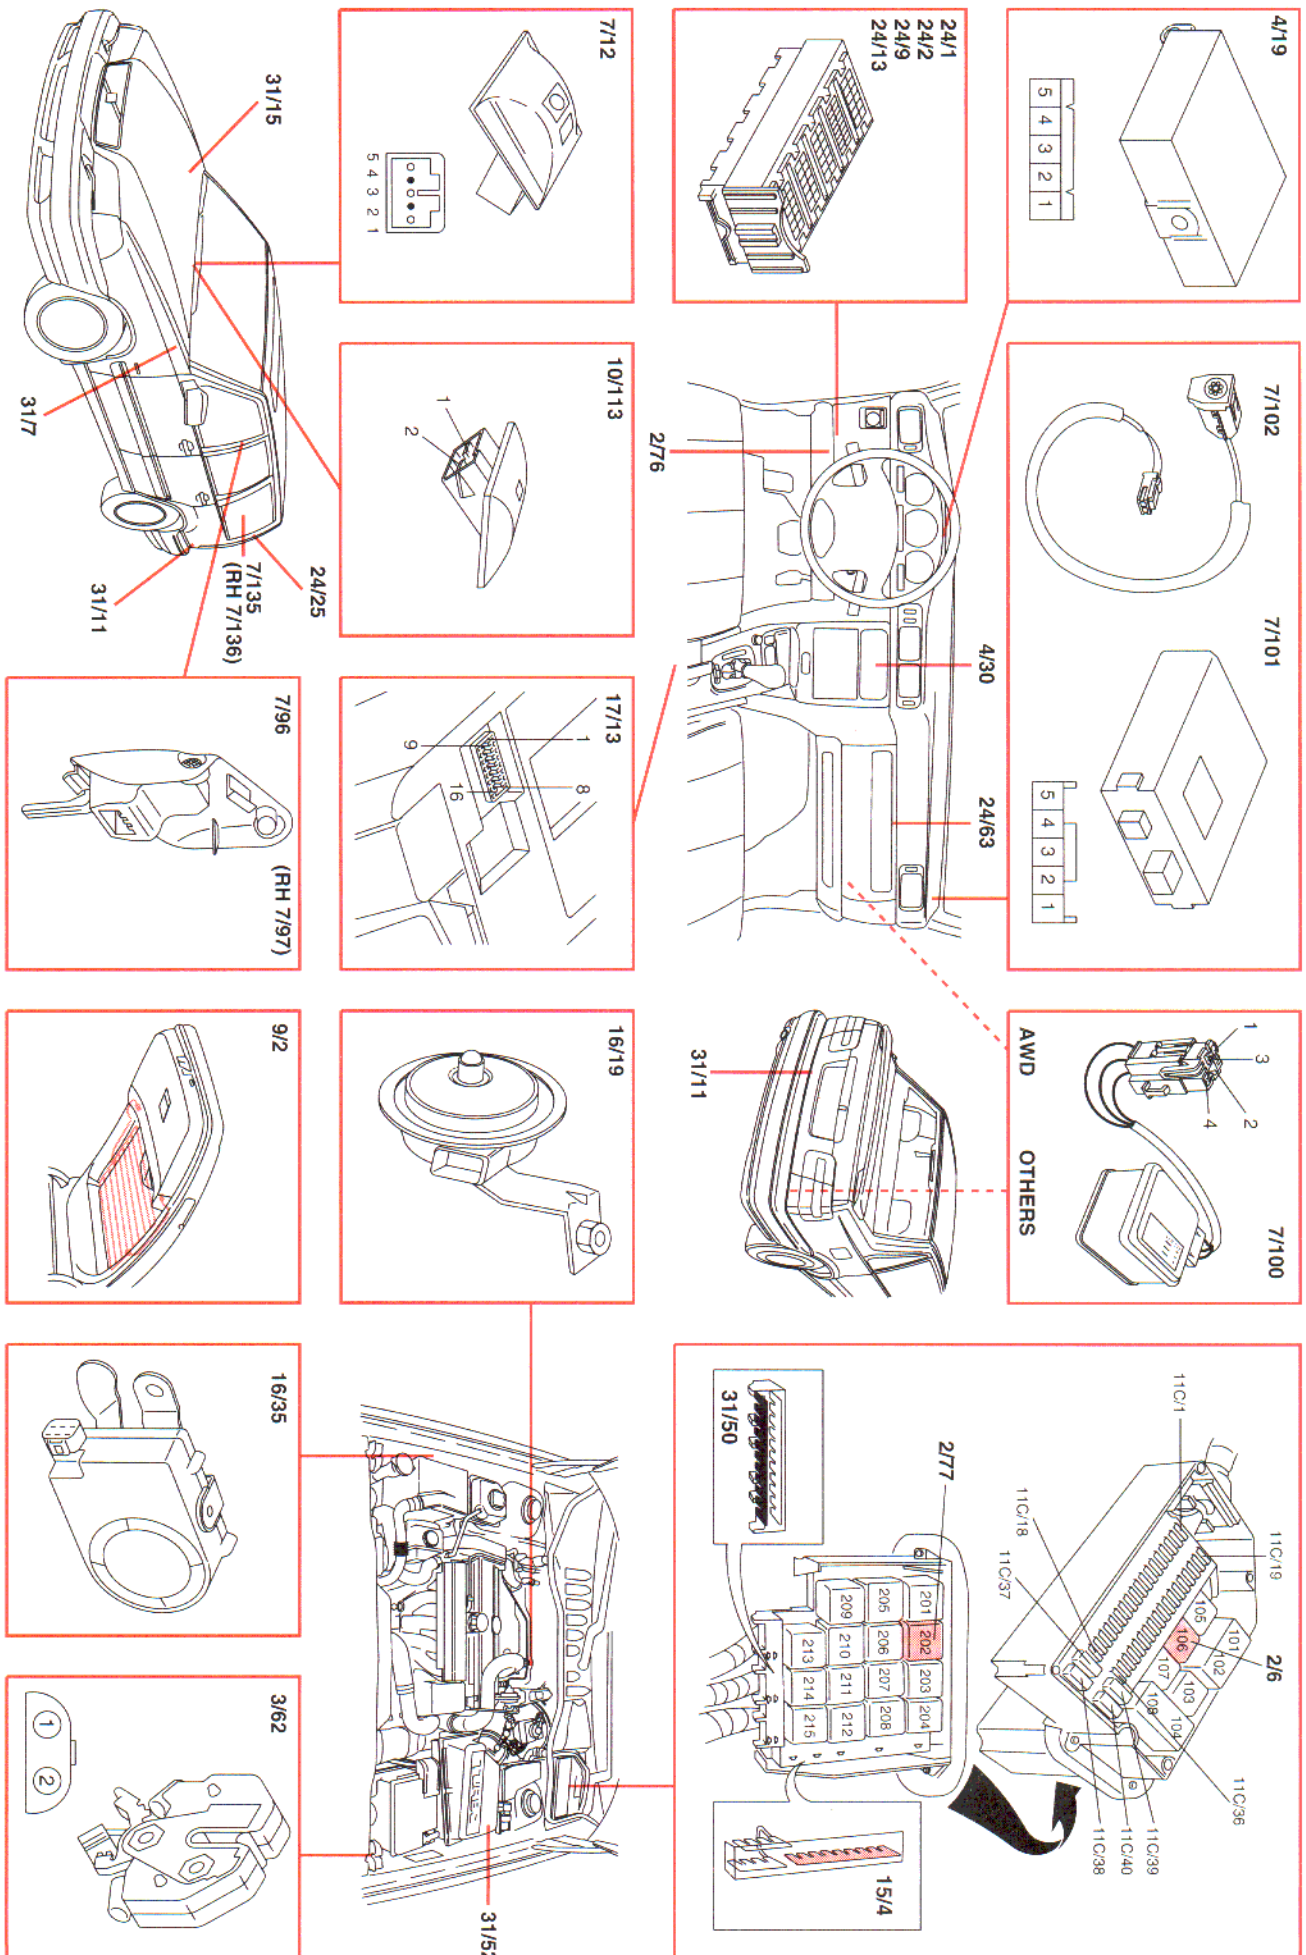


Immobilizer Fenix 5.2, Denso, ME7

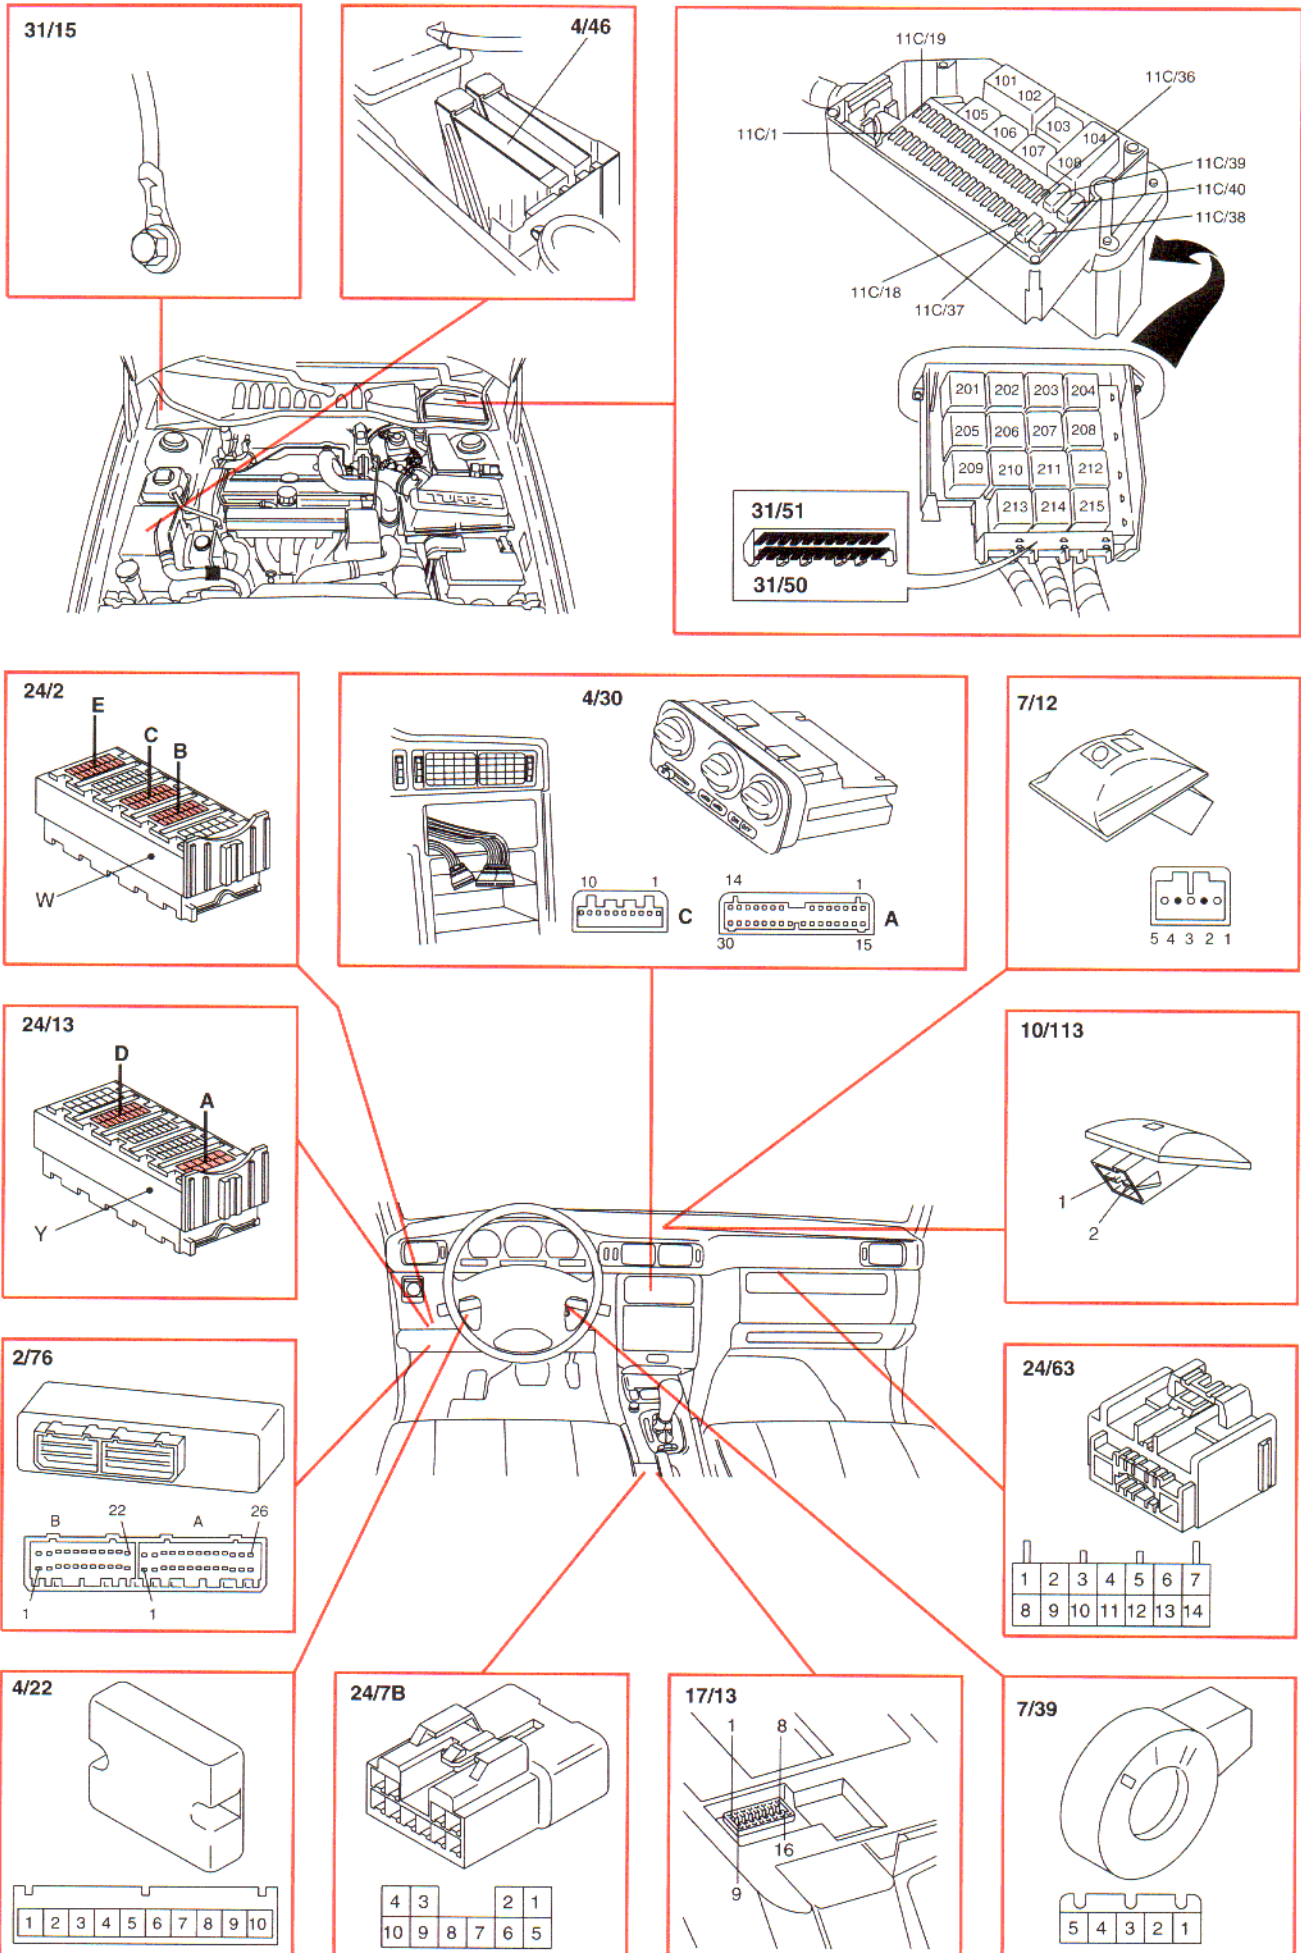


Immobilizer MSA 15.7


31/15

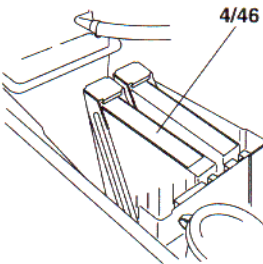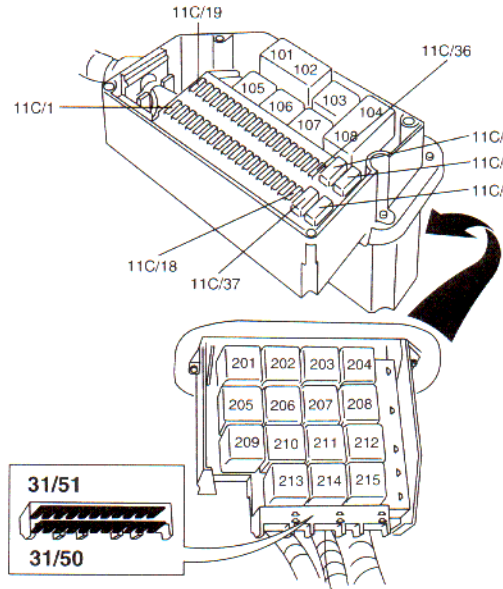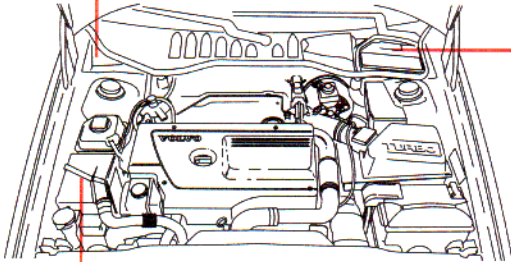


4/30

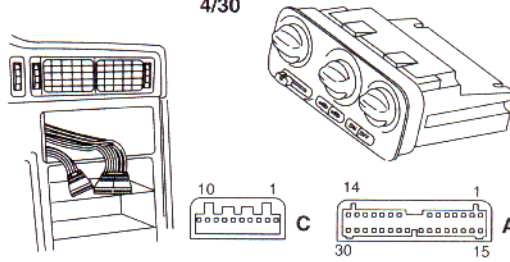


7/12

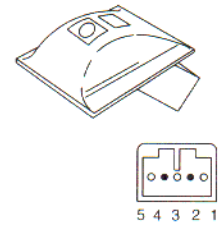


24/2

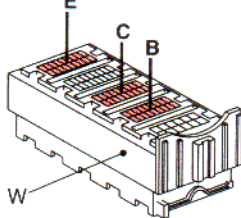


2/76

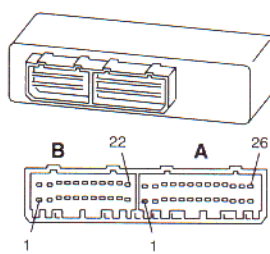


10/113

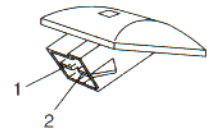



24/13

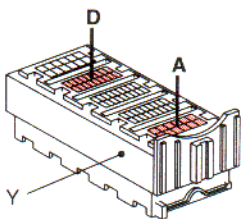



24/63

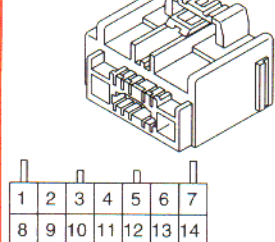


4/22

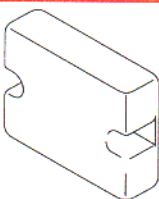


24/7B

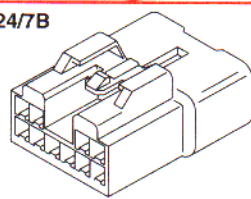


















17/13

















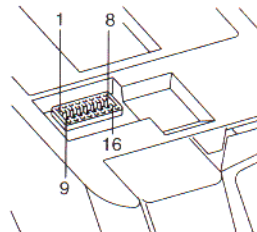


7/39












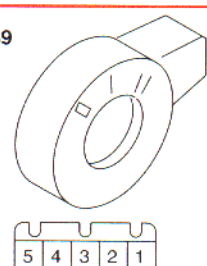











Diagnostics Fenix 5.2, Denso, ME7

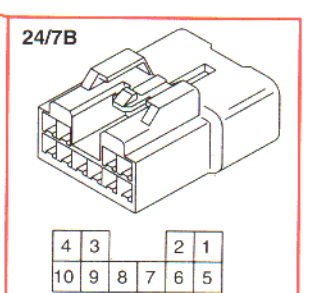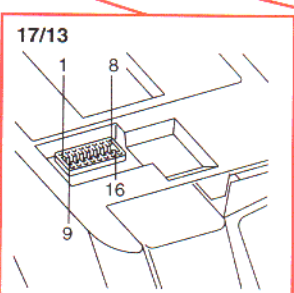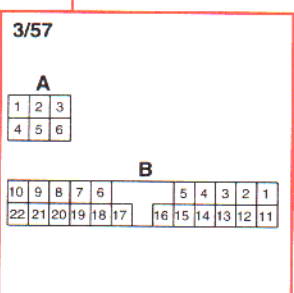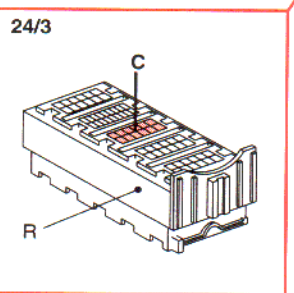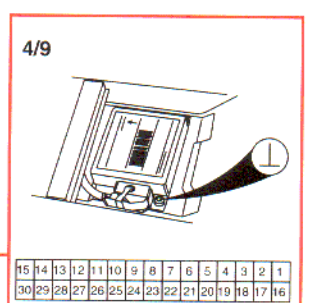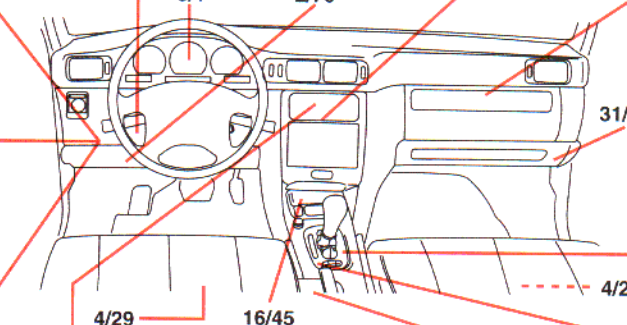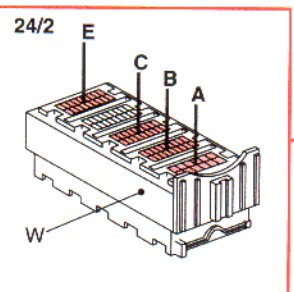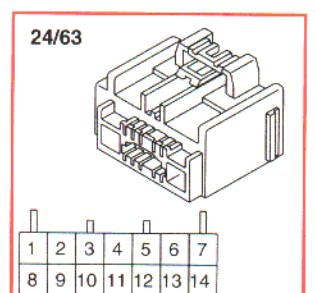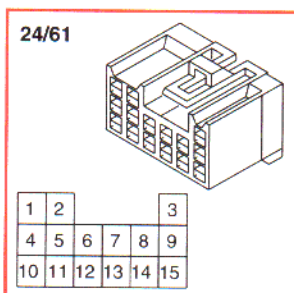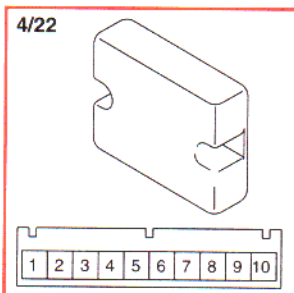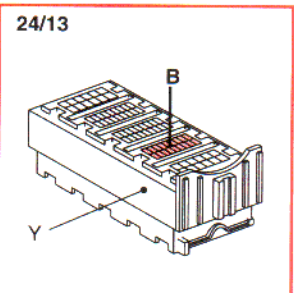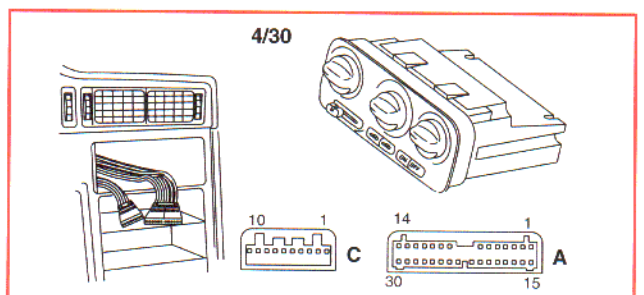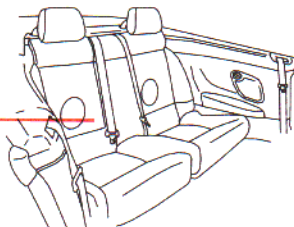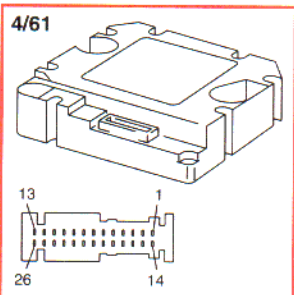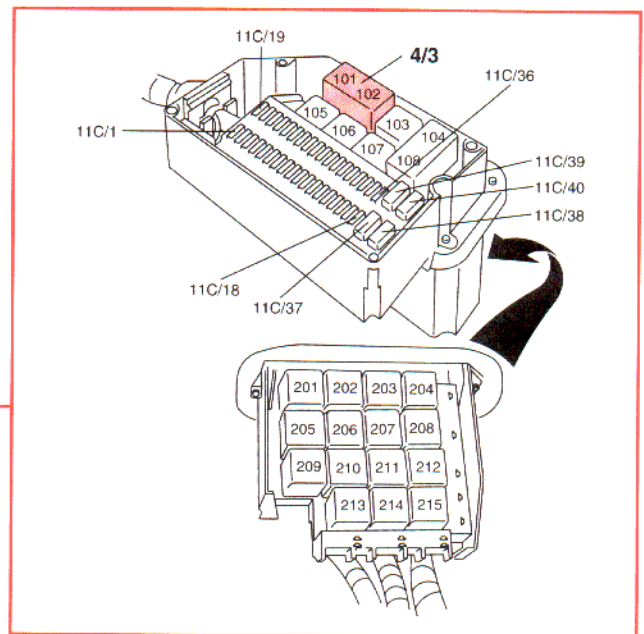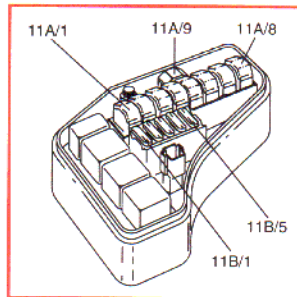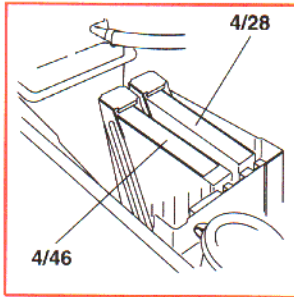

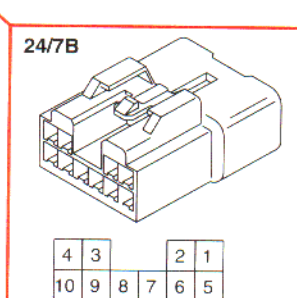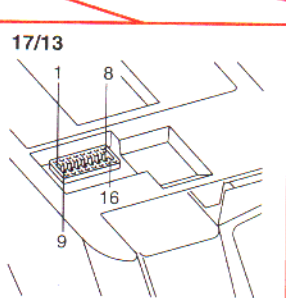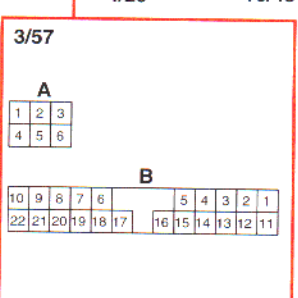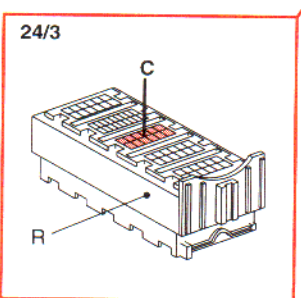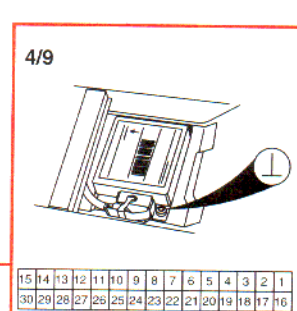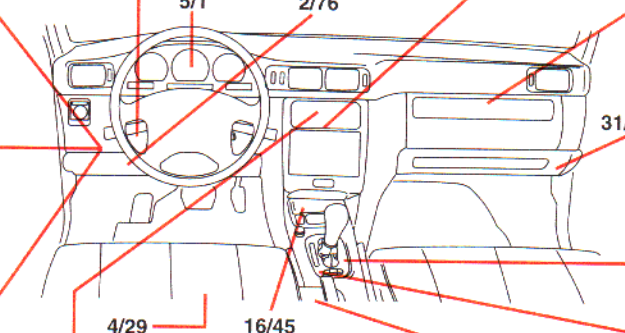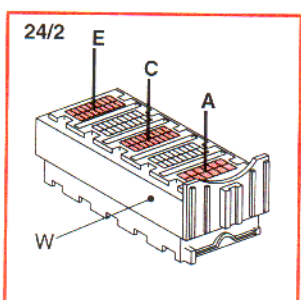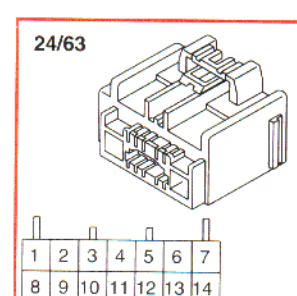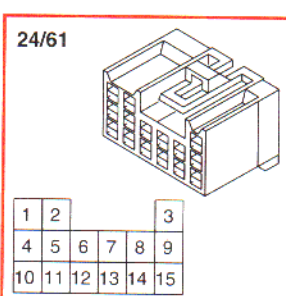
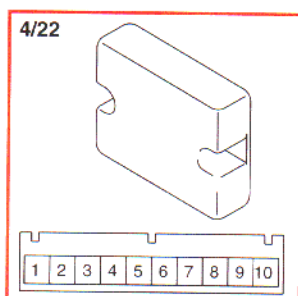
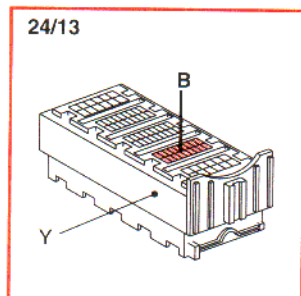
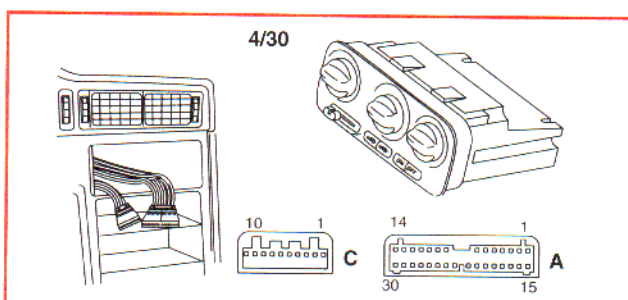
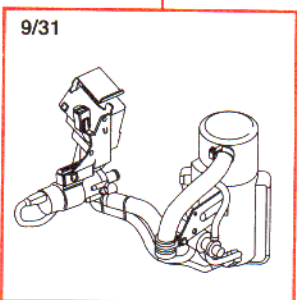
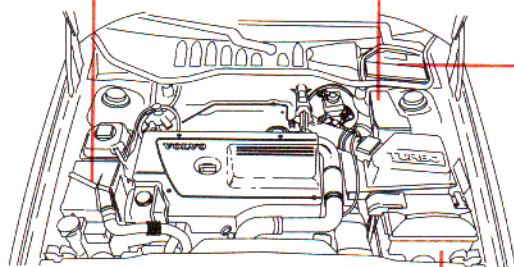
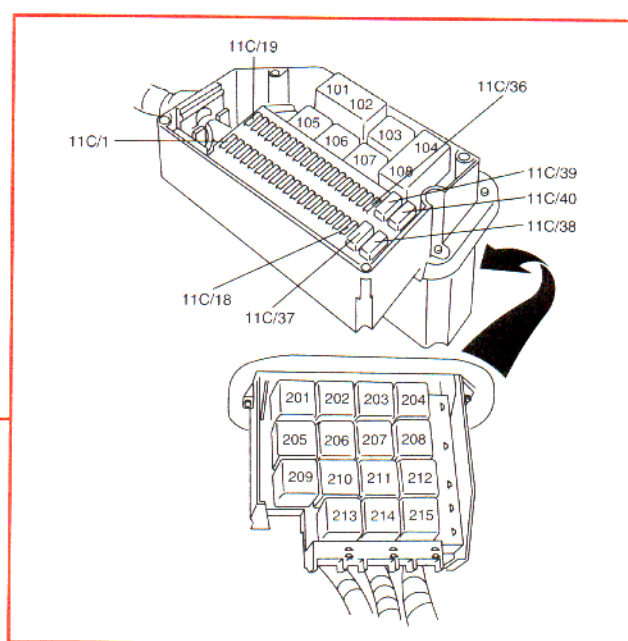
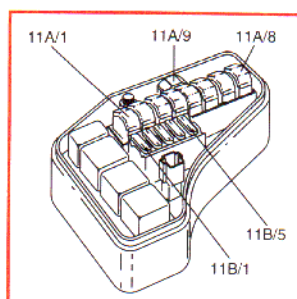
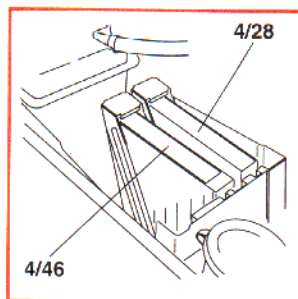


Tow hitch wiring COUP

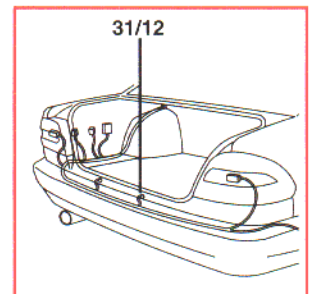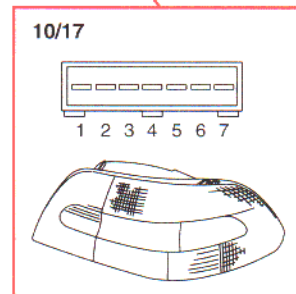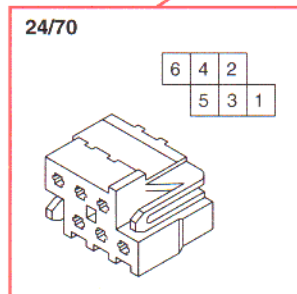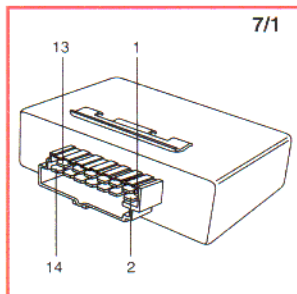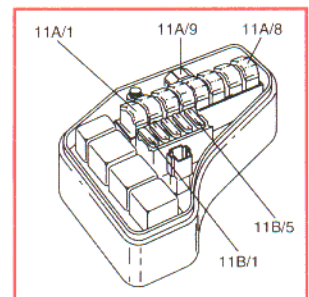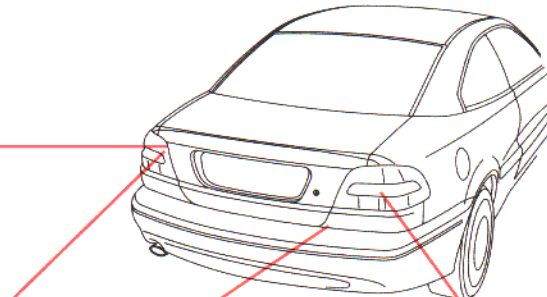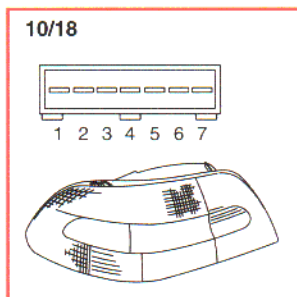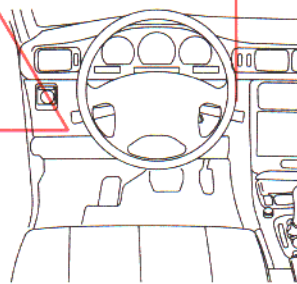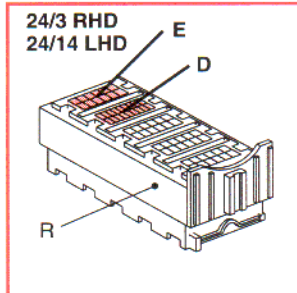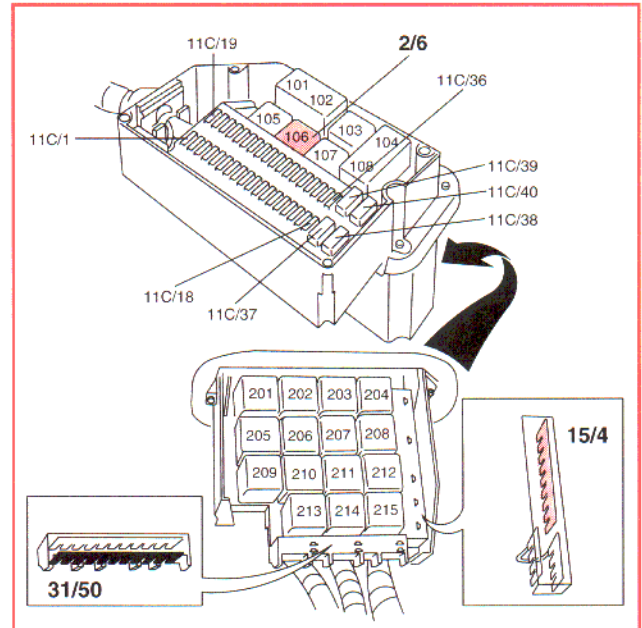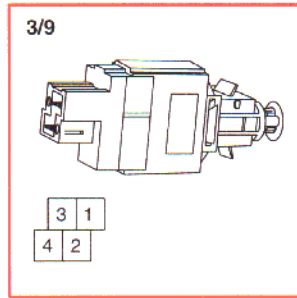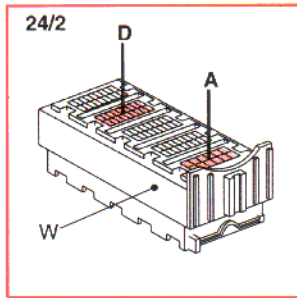


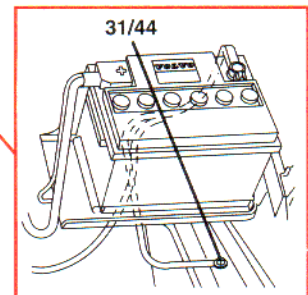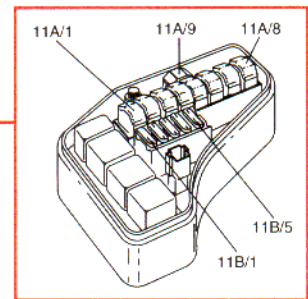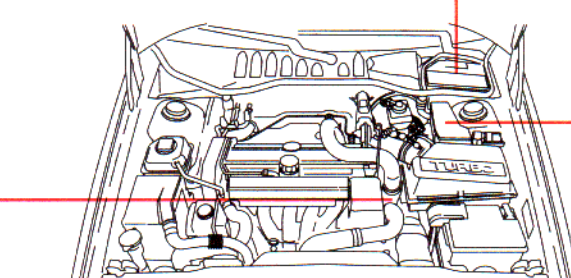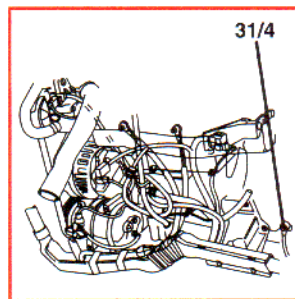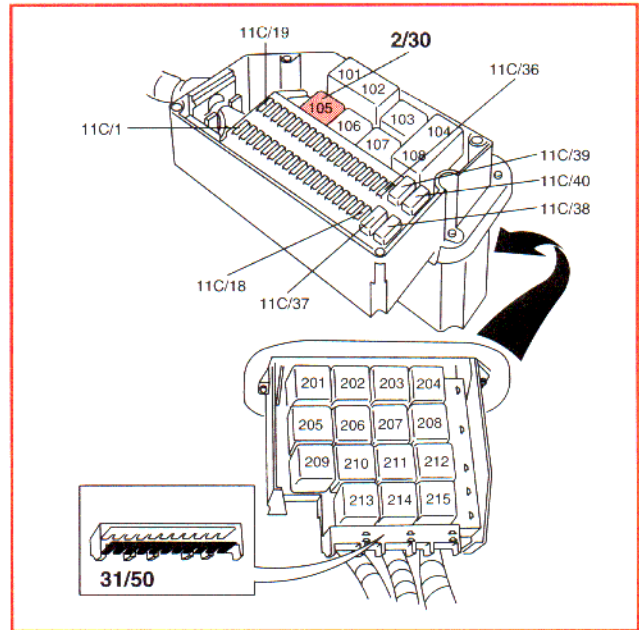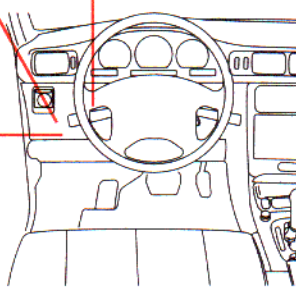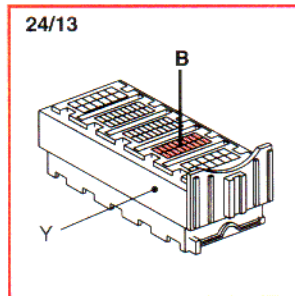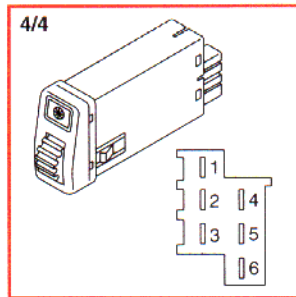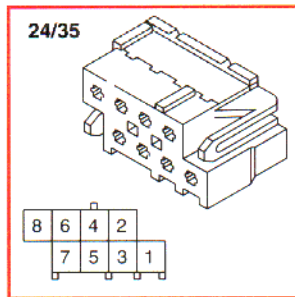

















Coolbox wiring

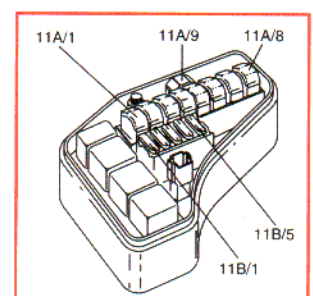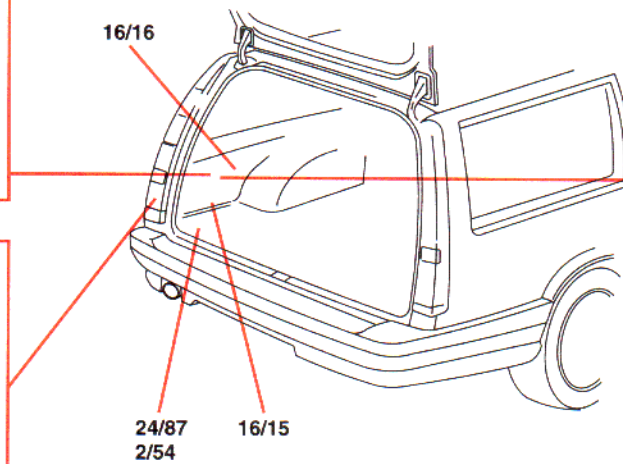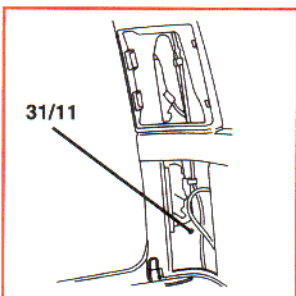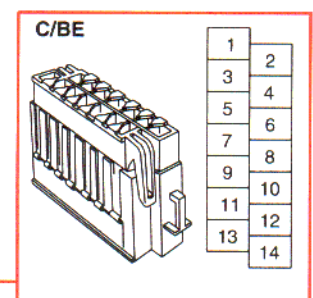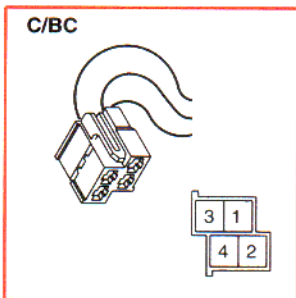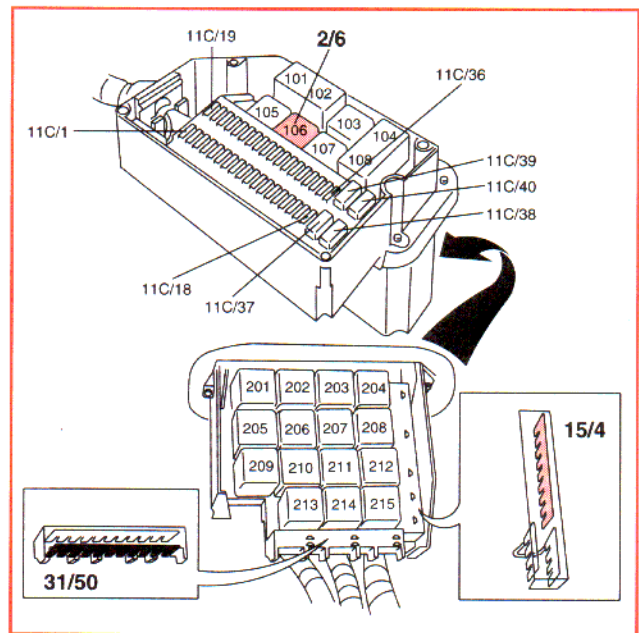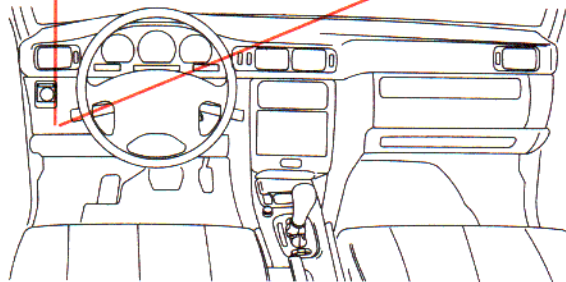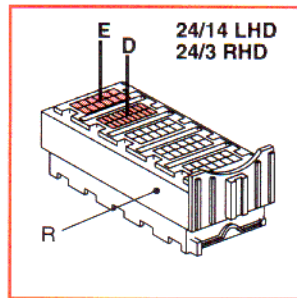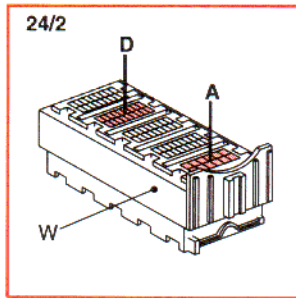


Seat belt reminder

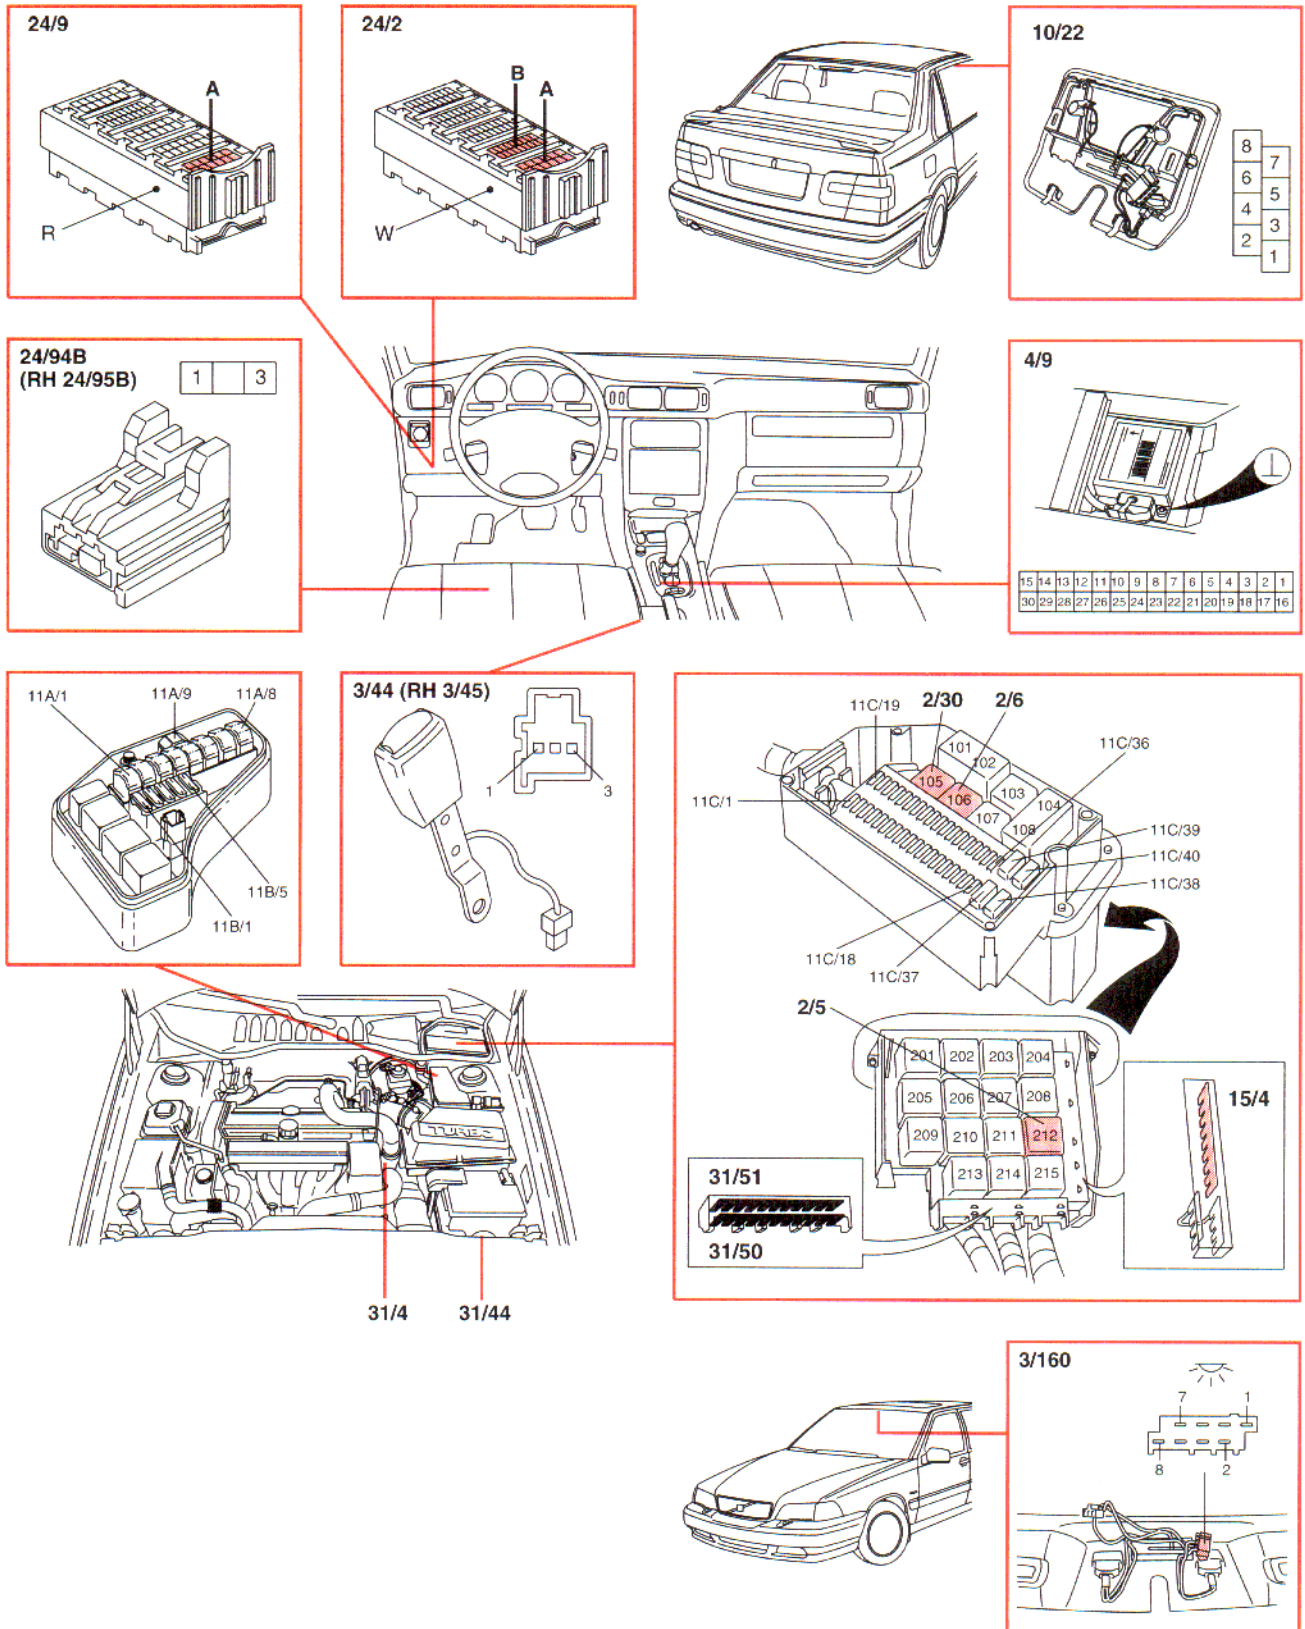



















Seat belt and key reminder USA, Canada, Korea and Australia

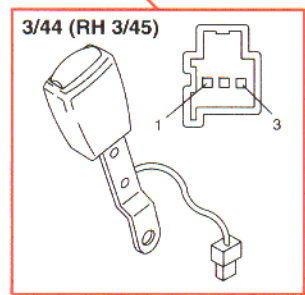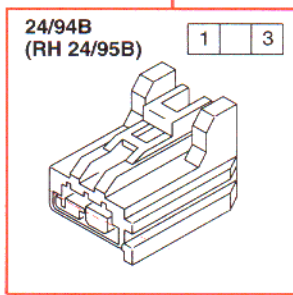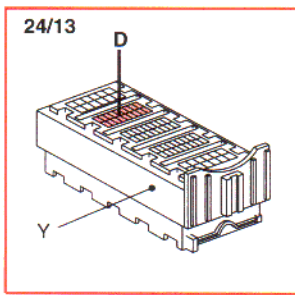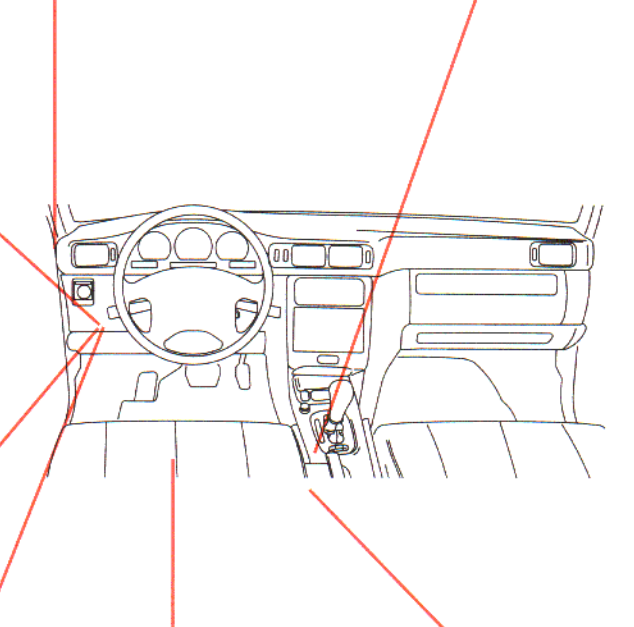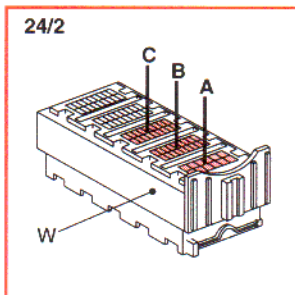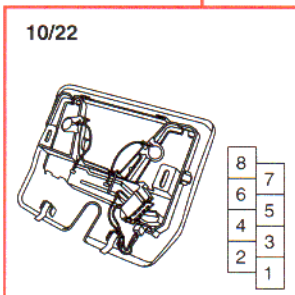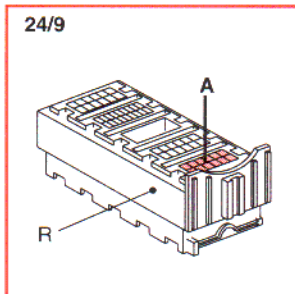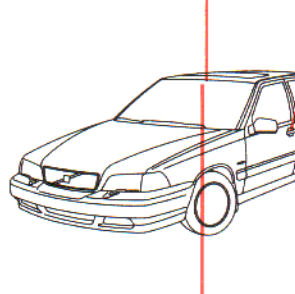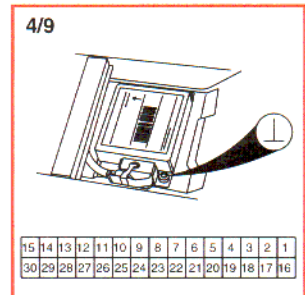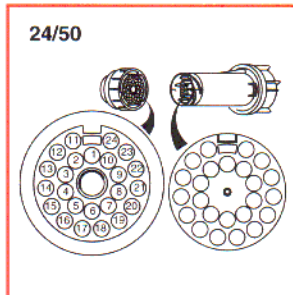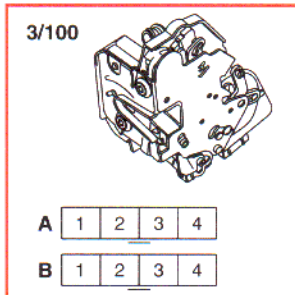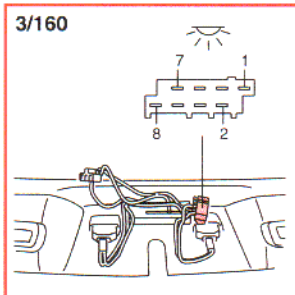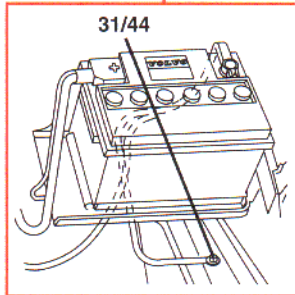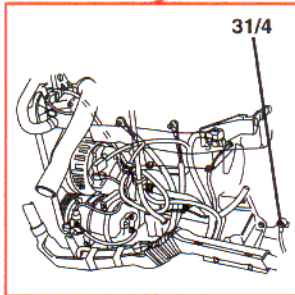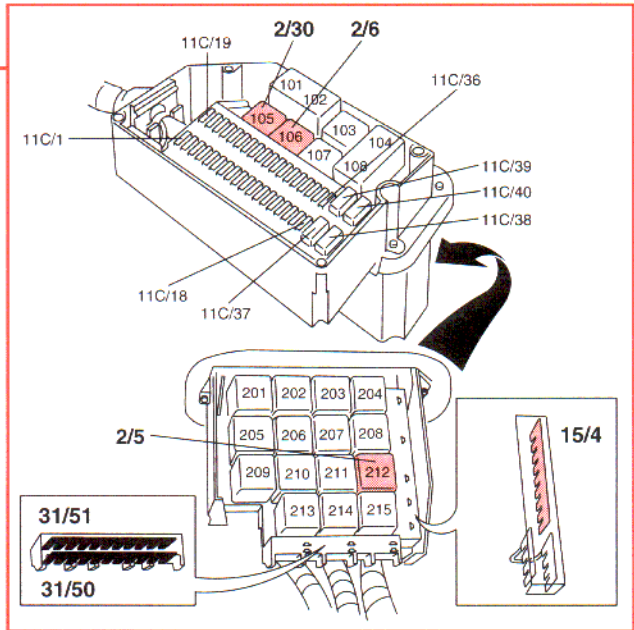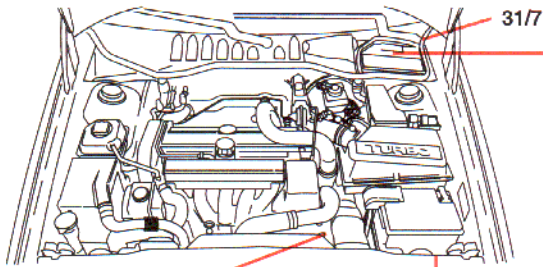


Combined instrument panel

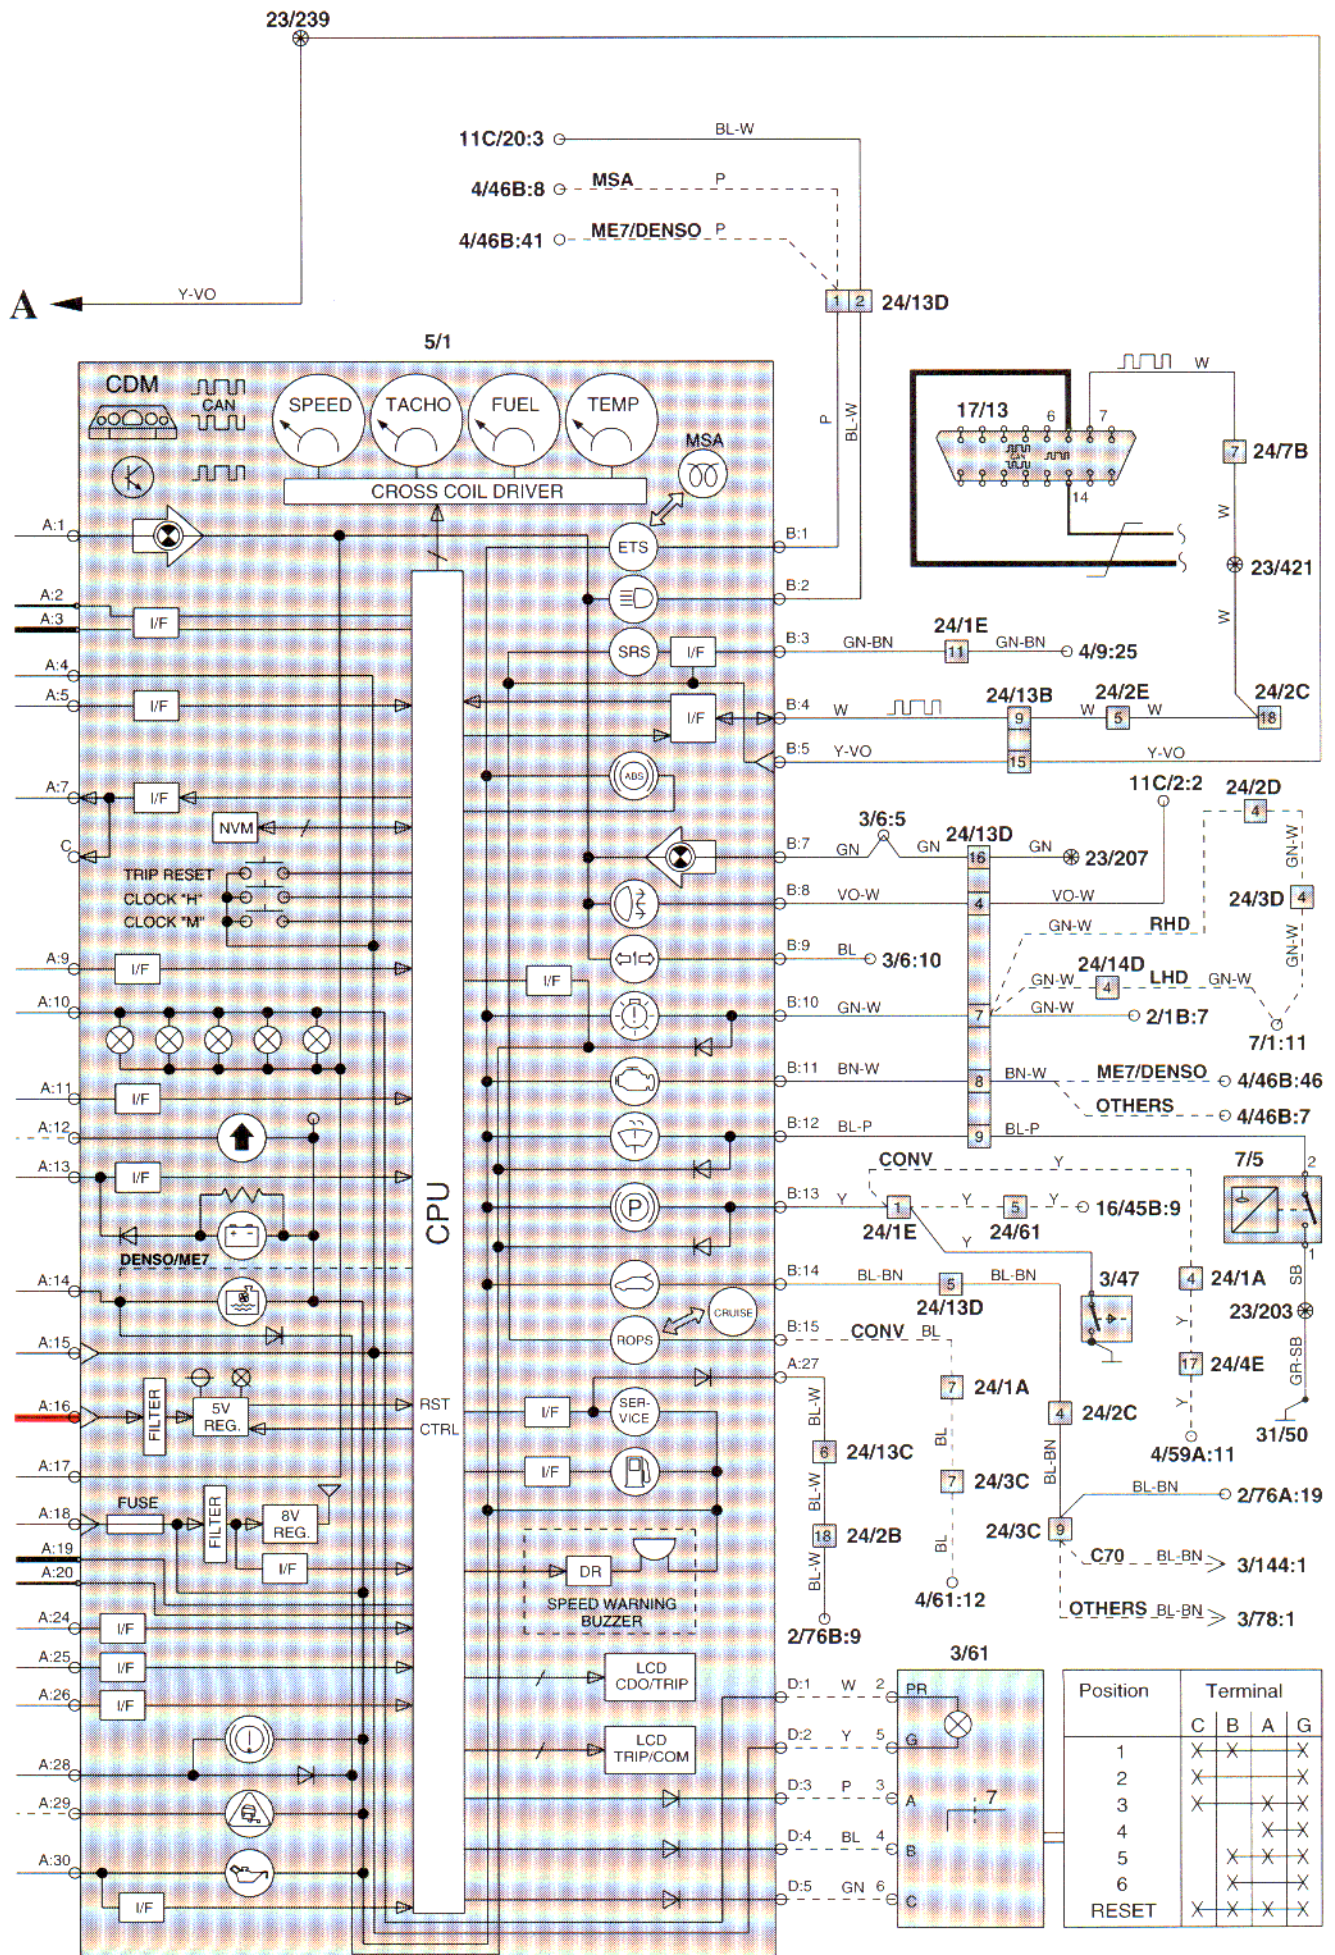

Combined instrument panel

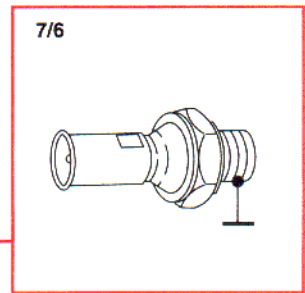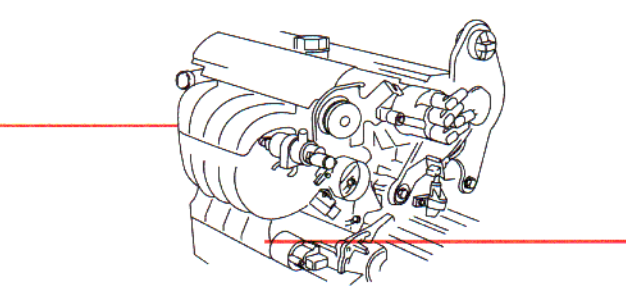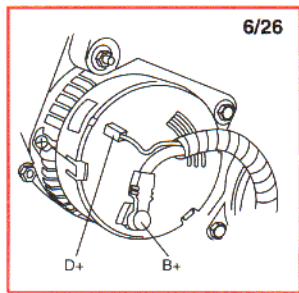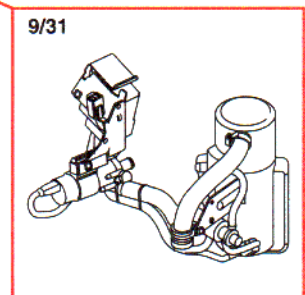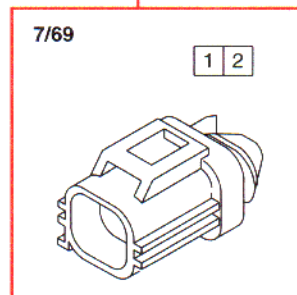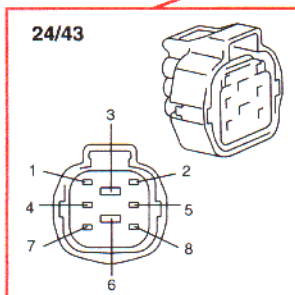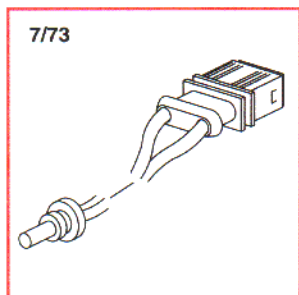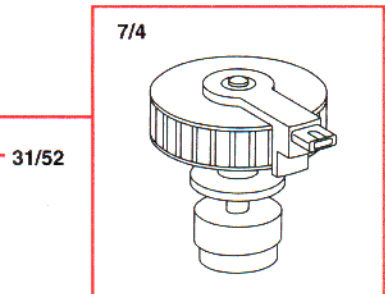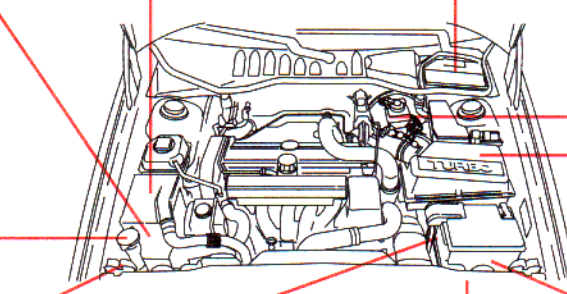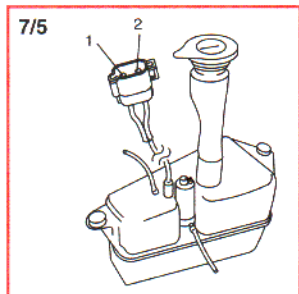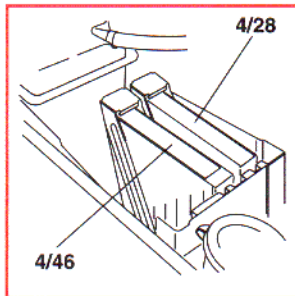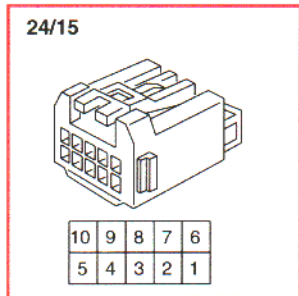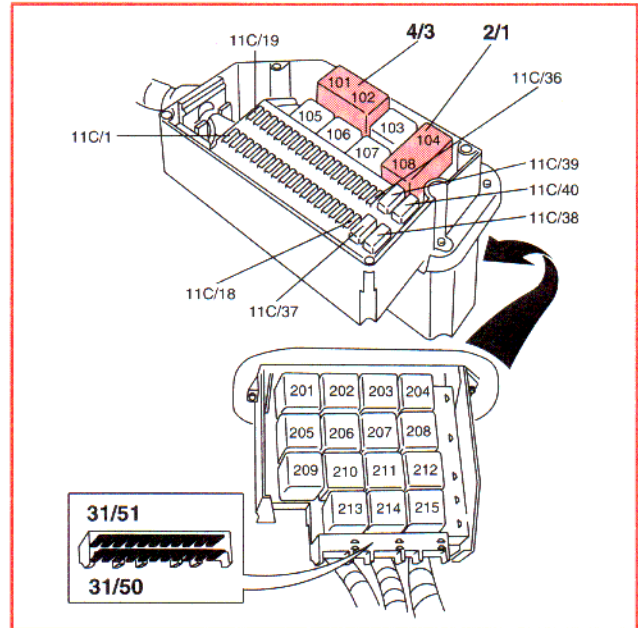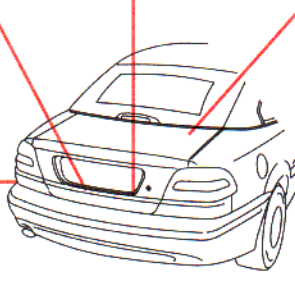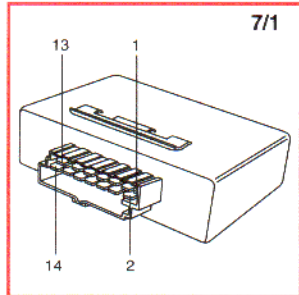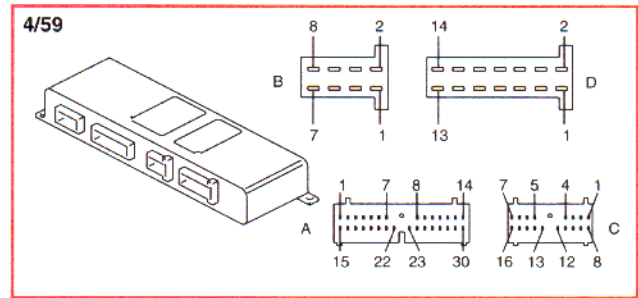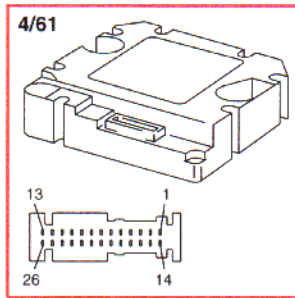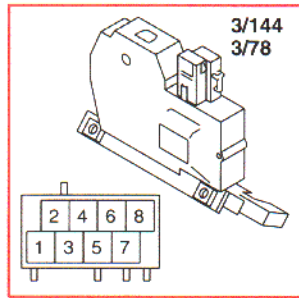

Combined instrument panel

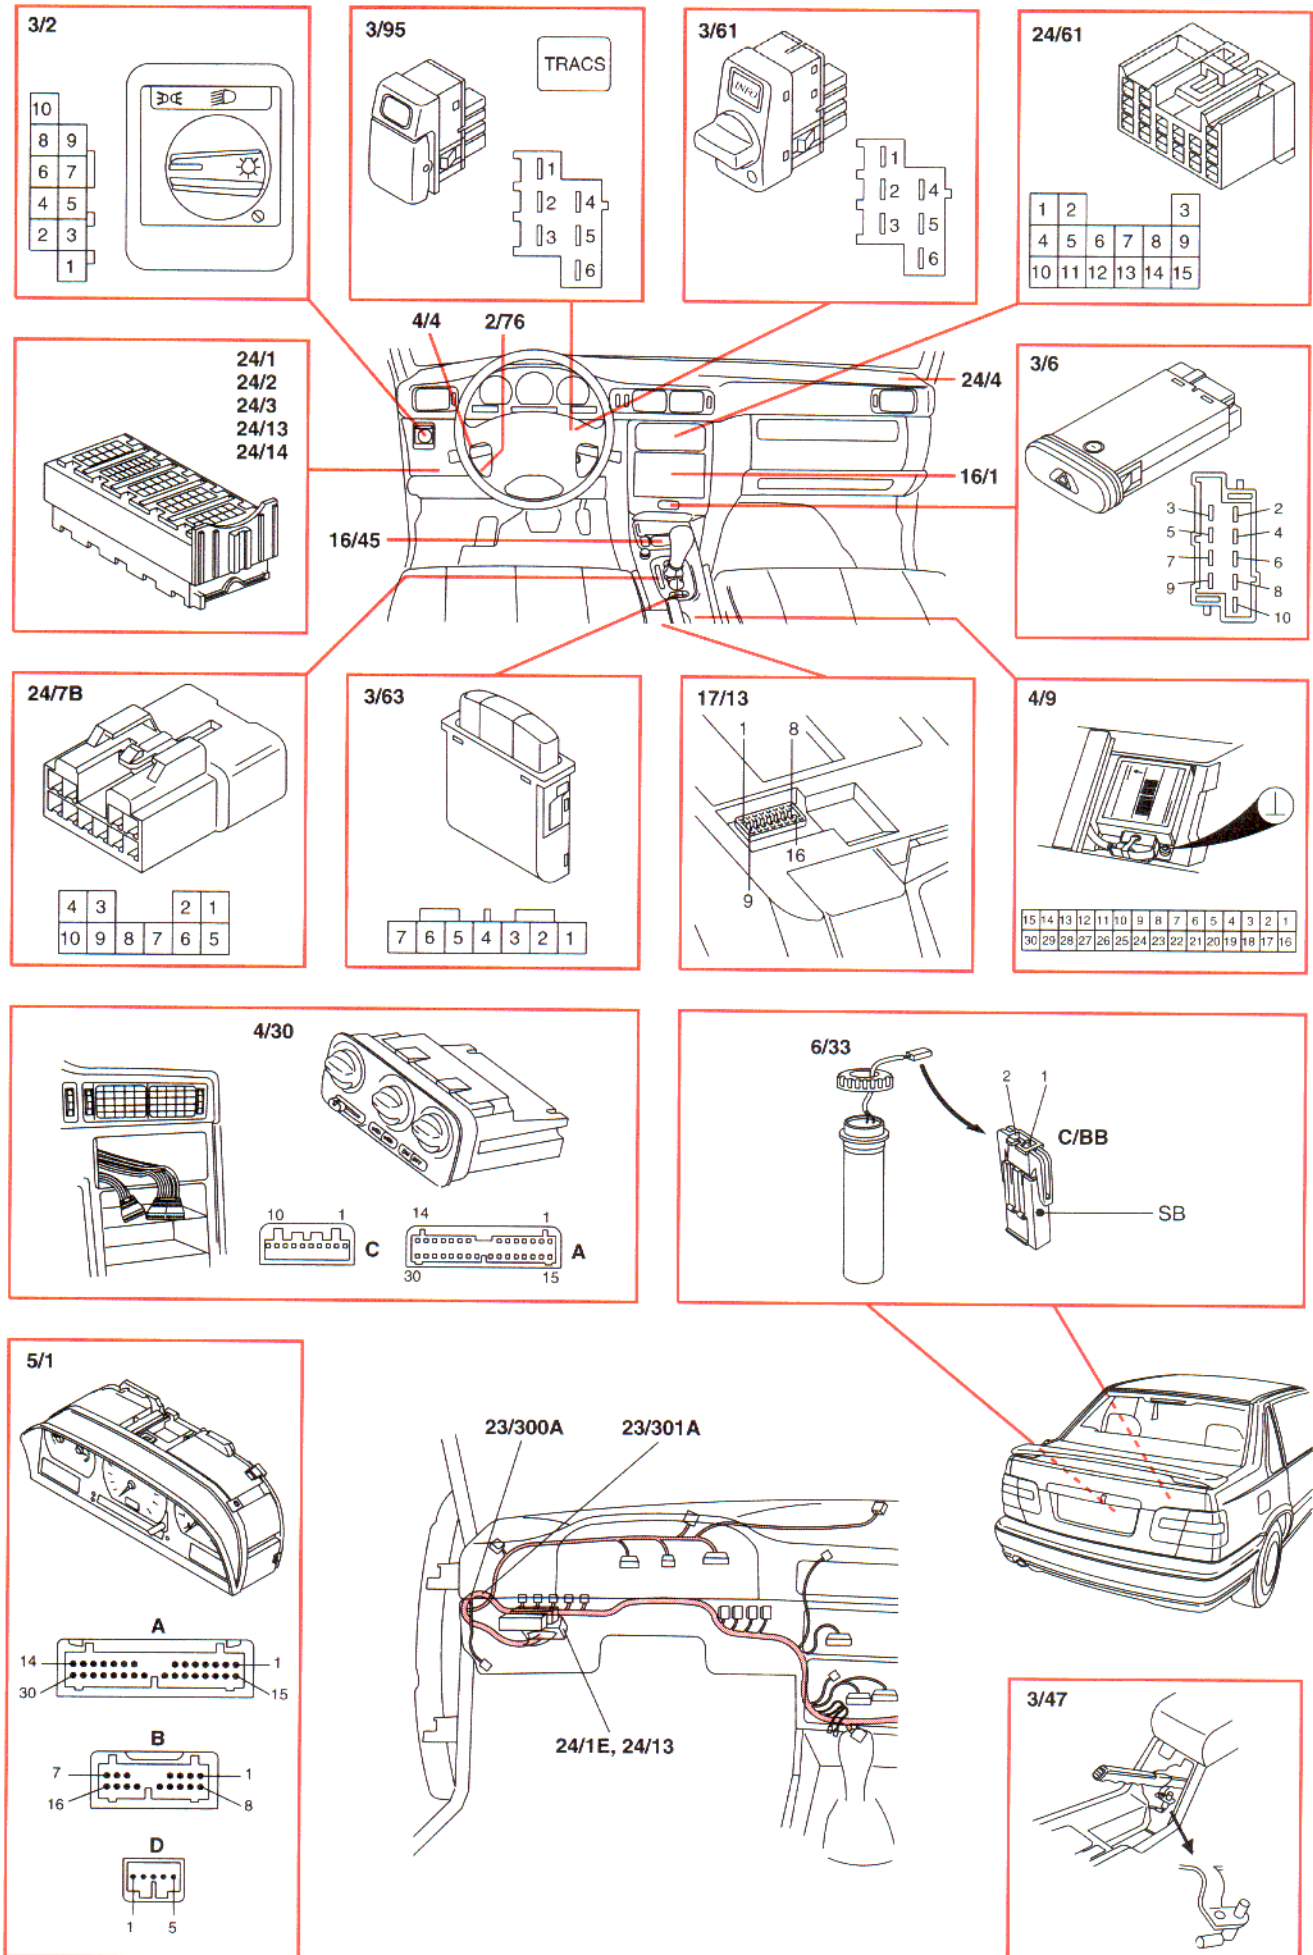

Combined instrument panel

Connectors in combined instrument panel

A 30-pin connector

1	Turn signal, right (+)
2	CAN-communication
3	CAN-communication
4	Fuel level sensor (-)
5	Fuel level sensor (+)
6	Digital speedometer output, 48 pulses/revolution
7	Digital speedometer output, 12 pulses/revolution
8	-
9	Fuel consumption
10	Rheostat, instrument lighting (+)
11	Tachometer, input signal
12	Winter program and low gear selection (automatic transmission)
13	Generator signal, D+
14	Engine coolant level switch
15	Signal ground (31/51)
16	30-supply
17	Power ground (31/50)
18	15-supply
19	CAN-communication
20	CAN-communication
21-23	-
24	Outside temperature sensor (+)
25	Outside temperature sensor (-)
26	Engine coolant temperature (ECT) sensor
27	-
28	Brake fluid level sensor (-)
29	TRACS
30	Oil pressure sensor (-)

B 16-pin connector

1	ETS / Diesel preheating
2	Brake (stop) lamps (+)
3	SRS sensor unit
4	Data Link Connector (DLC)
5	X-supply
6	ABS Anti-lock braking system
7	Turn signal, left (+)
8	Tail lamp (+)
9	Turn signal, trailer (+)
10	Bulb failure warning sensor (-)
11	Check engine (-)
12	Brake fluid level sensor (-)
13	Parking brake switch (-)
14	Trunk lid open
15	Control module rollover bar (-) / Cruise control
16	-

C 1-pin connector

Digital speedometer output, 12 pulses/revolution
(for accessories)


D 5-pin connector

1	Rheostat, instrument lighting (+)
2	Signal ground (31/51)
3	Function signal
4	Function signal
5	Function signal






















Instrument lamps

1	Left turn signal lamp	12	Warning lamp, SRS
2	Turn signal, right	13	Warning lamp, charging
3	ROPS indicator lamp (CONV) Cruise control indicator lamp (Not CONV)	14	Warning lamp, oil pressure
4	Windshield washer reservoir level indicator lamp	15	Brake warning lamp
5	Warning lamp, fuel level	16	Warning lamp, parking brake
6	Fog tail lamp indicator lamp	17	Warning lamp, ABS
7	High beam warning lamp	18	Winter program indicator lamp/ shift indicator
8	Trunk lid indicator lamp	19	Warning lamp, coolant level
9	Bulb failure warning lamp	20	Warning lamp, TRACS
10	Warning lamp, trailer	21	Warning lamp, Check engine
11	Diesel preheating indicator lamp (MSA) ETS indicator lamp (Not MSA)	22	Service reminder indicator (SRI)



















Combined instrument panel



















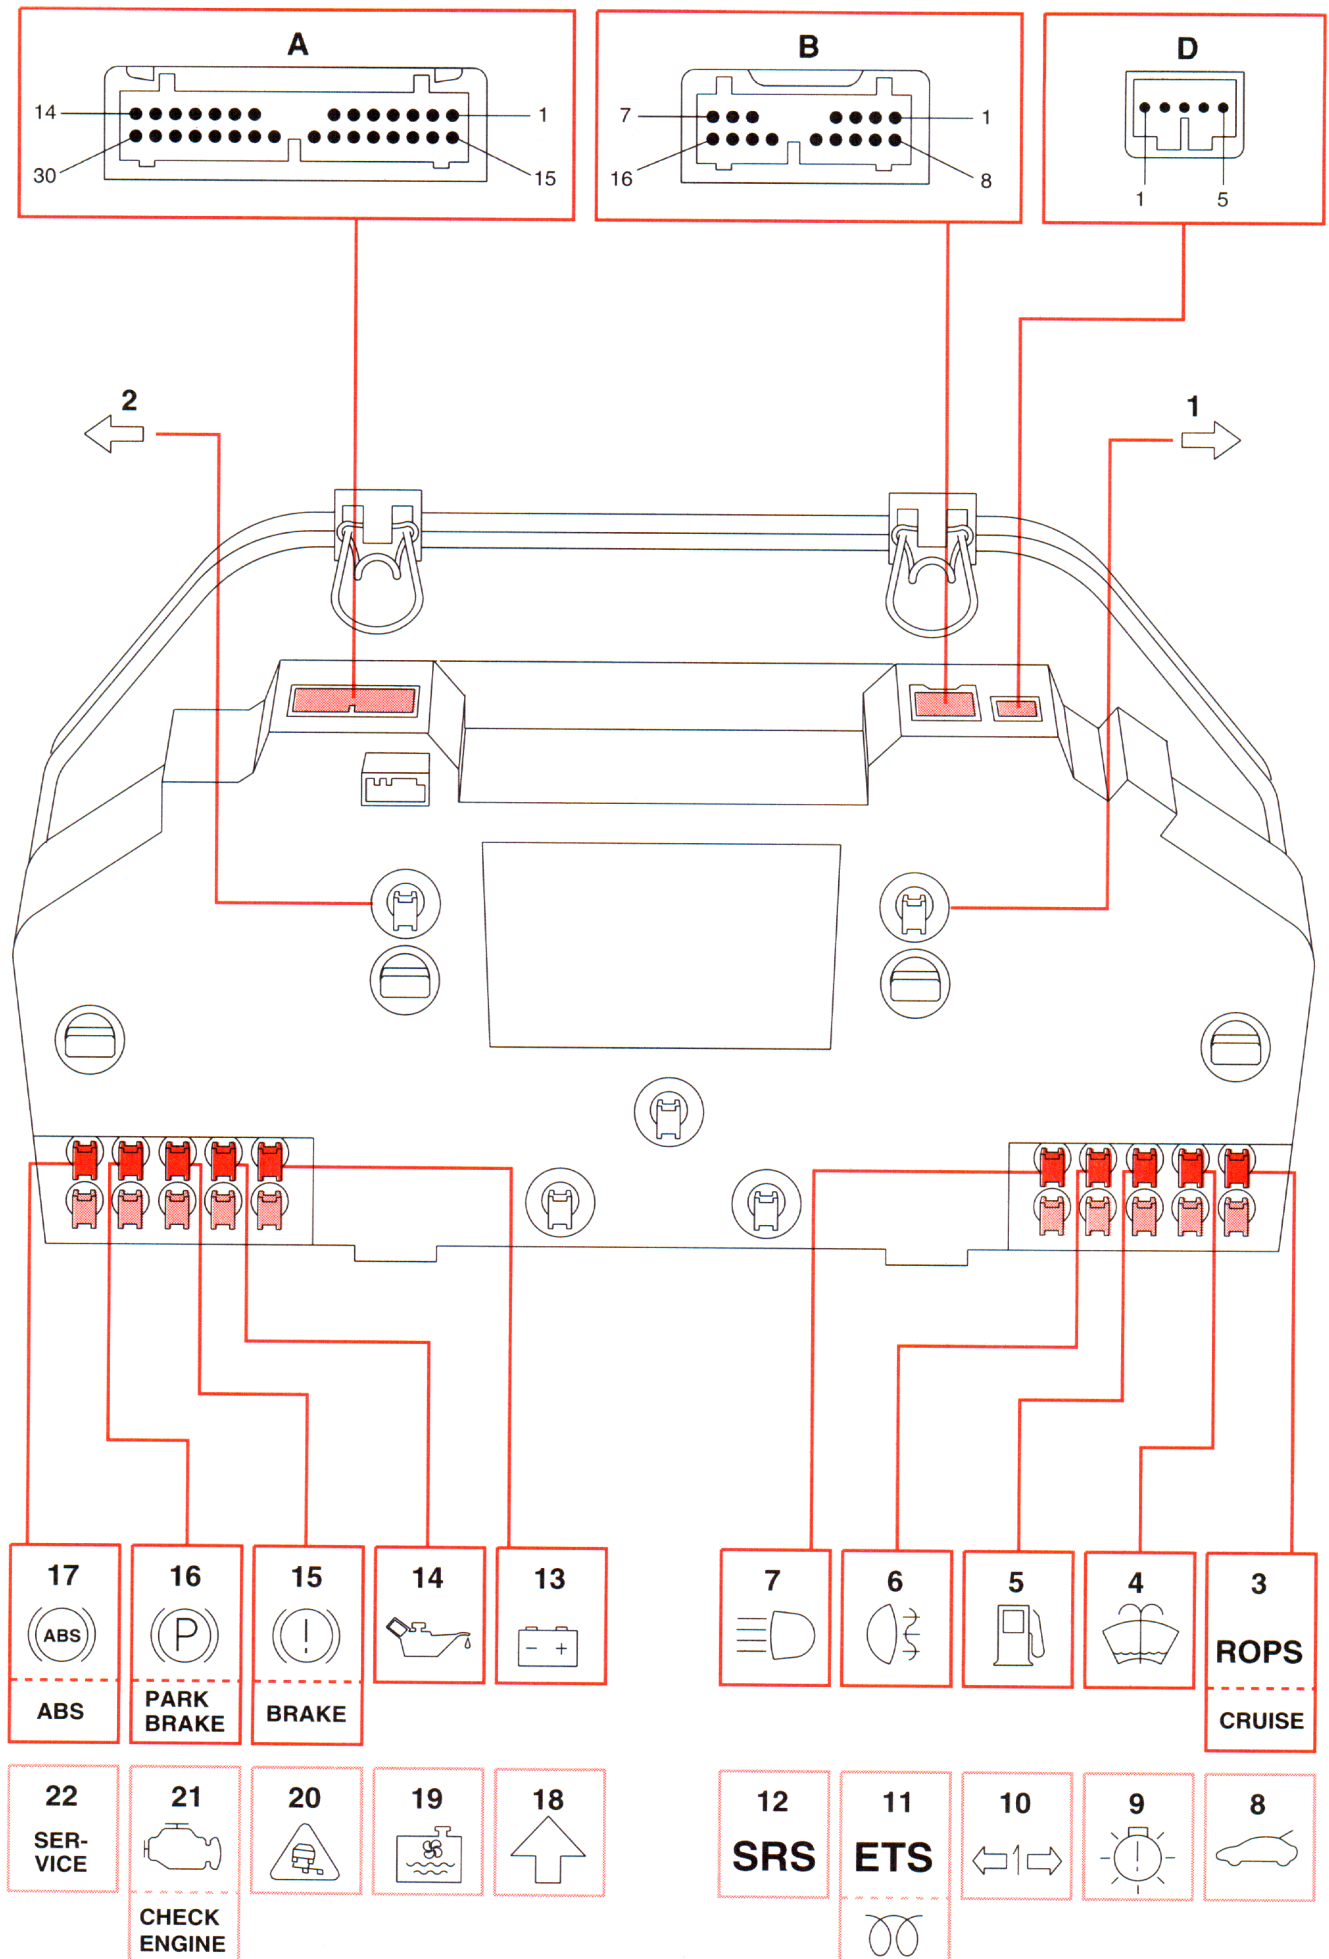


Radio C70 Convertible

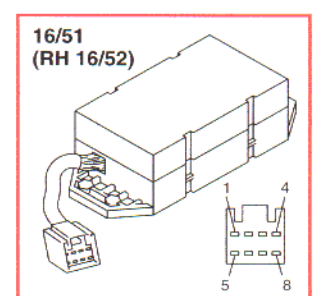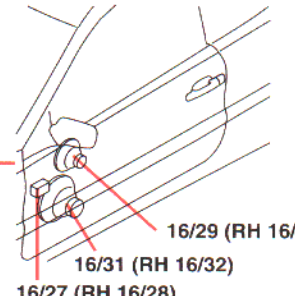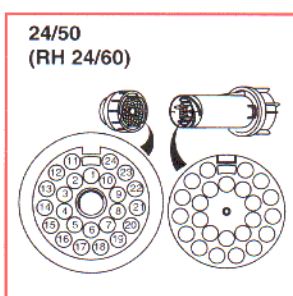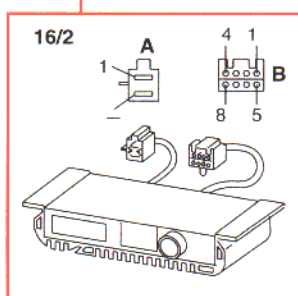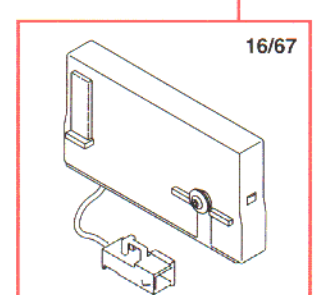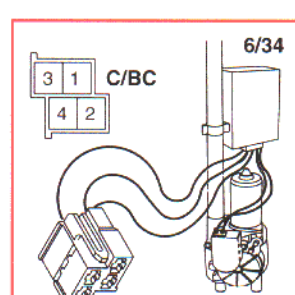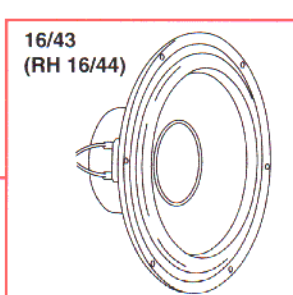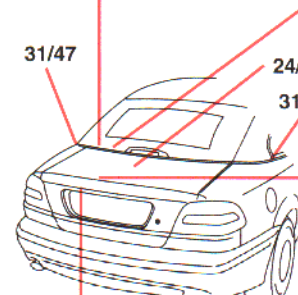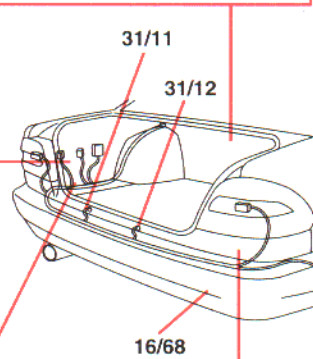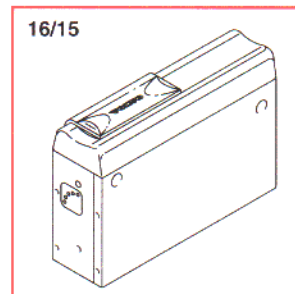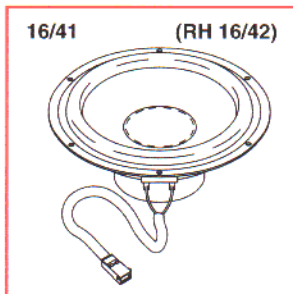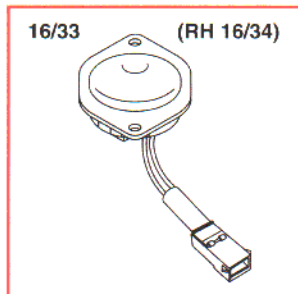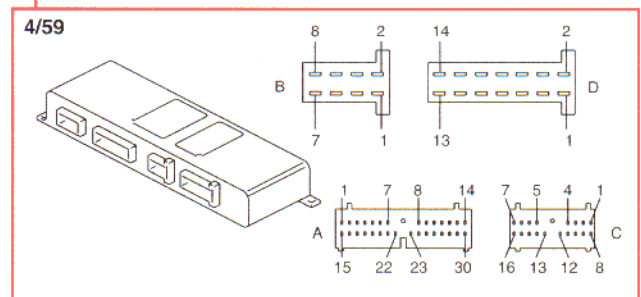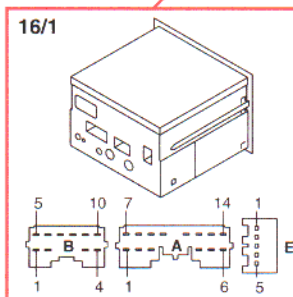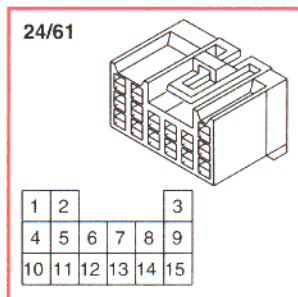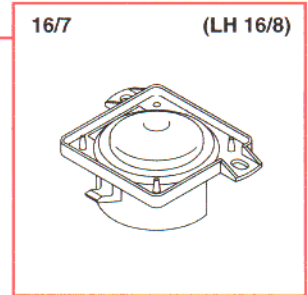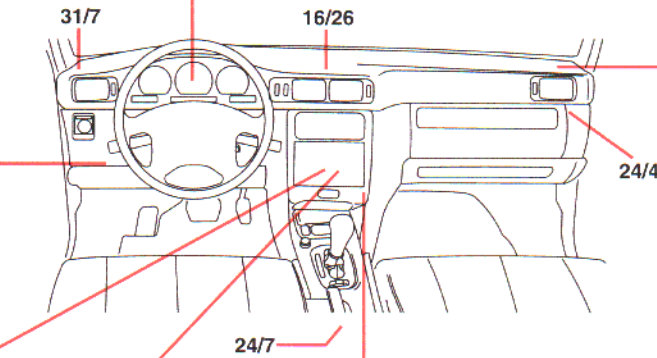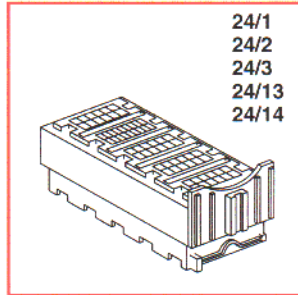
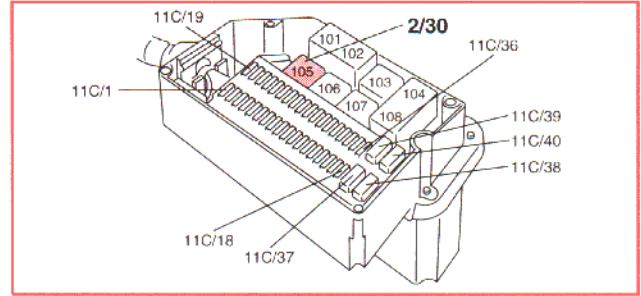
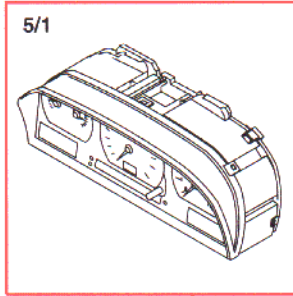
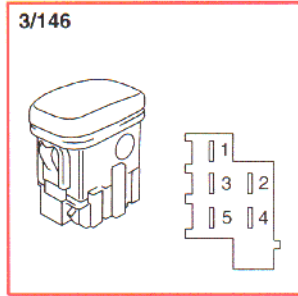


Radio C70 coupé

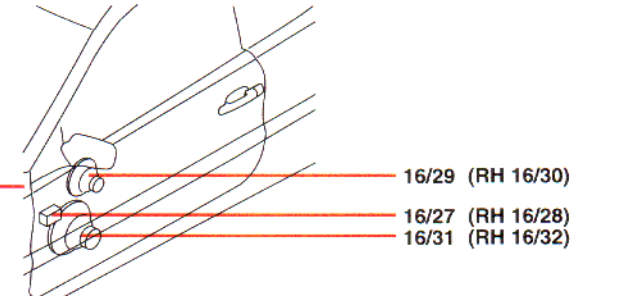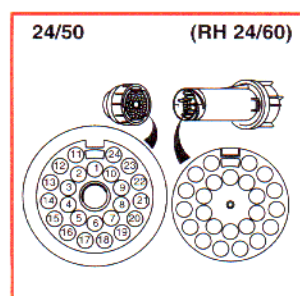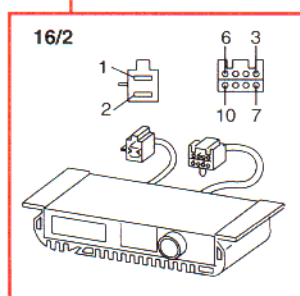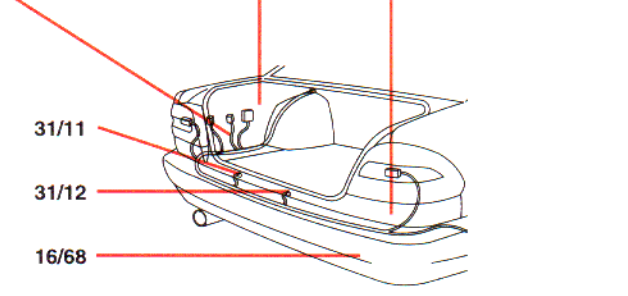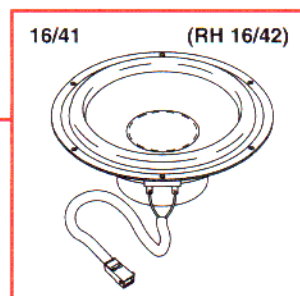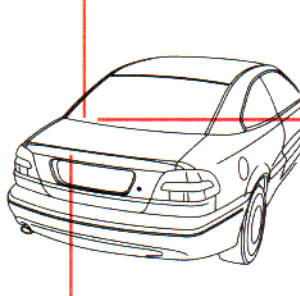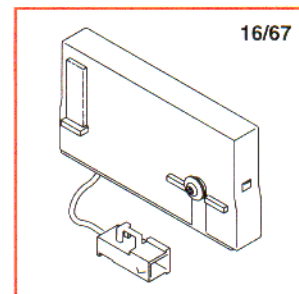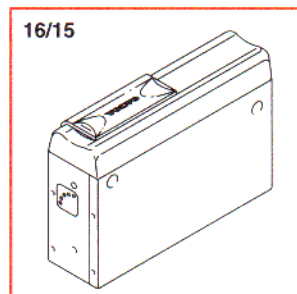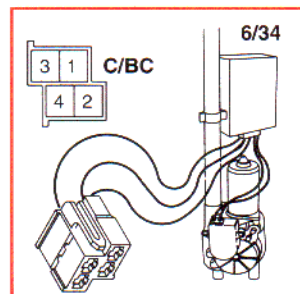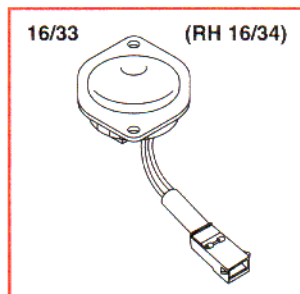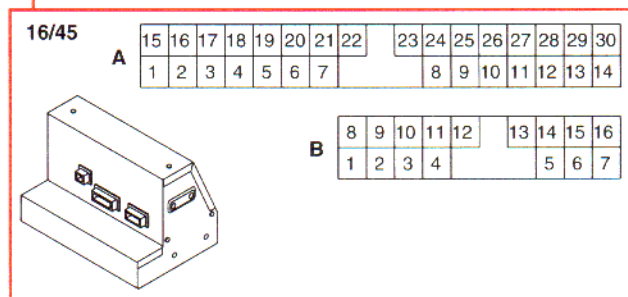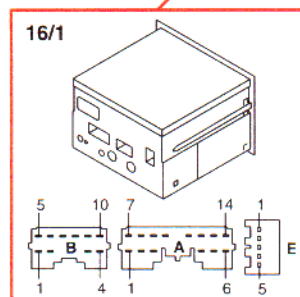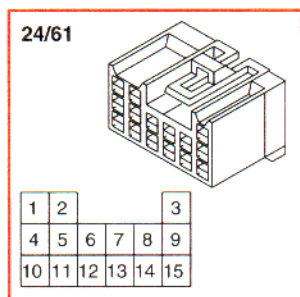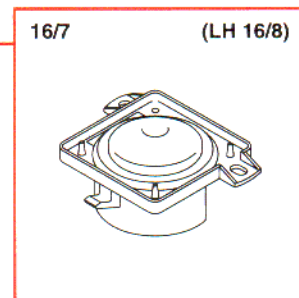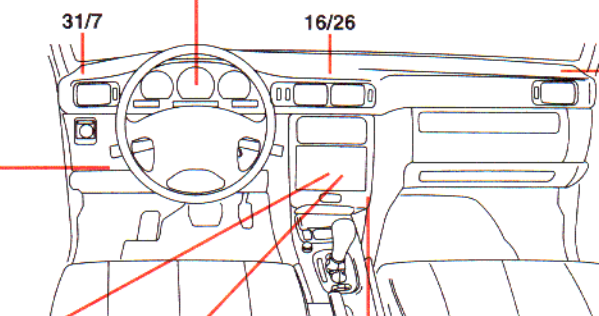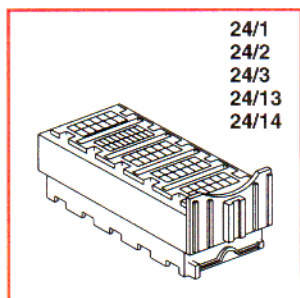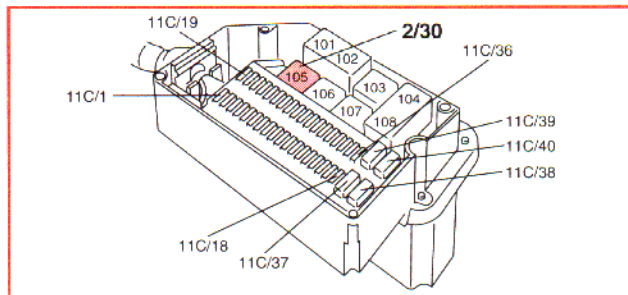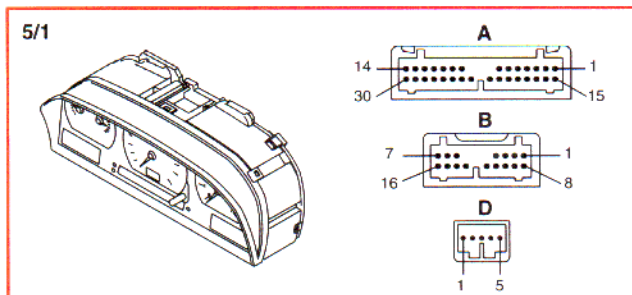


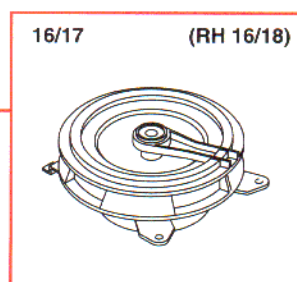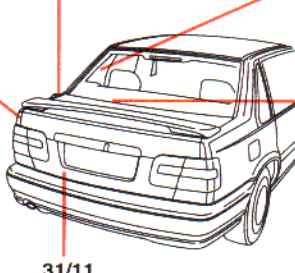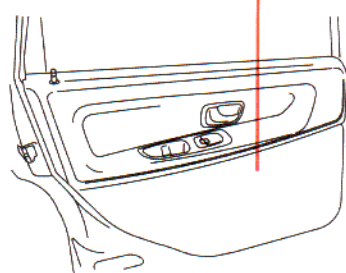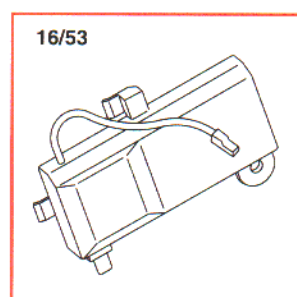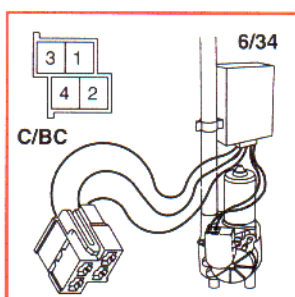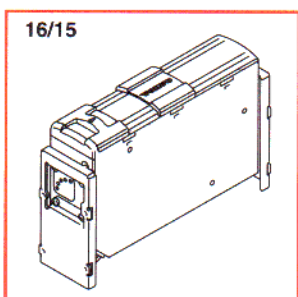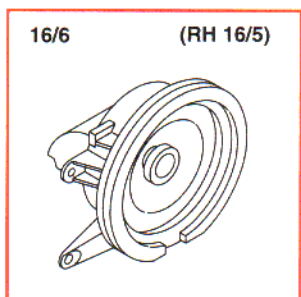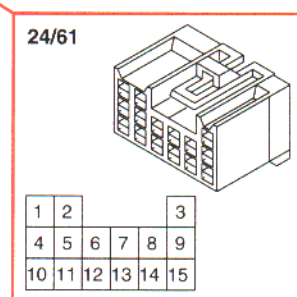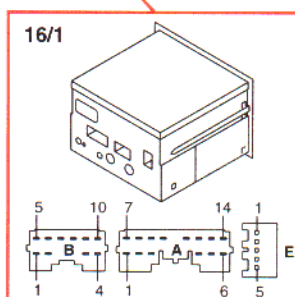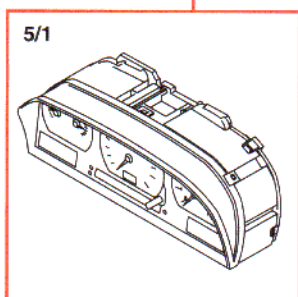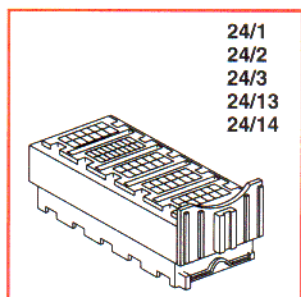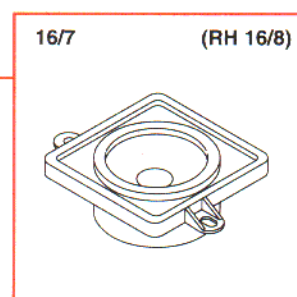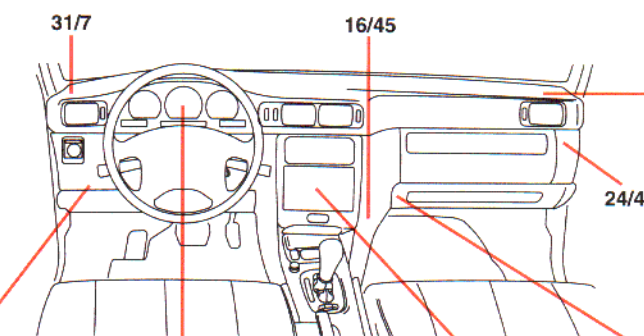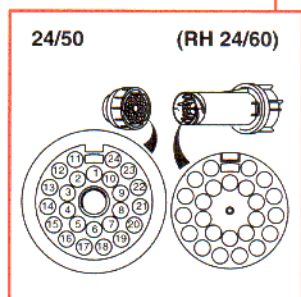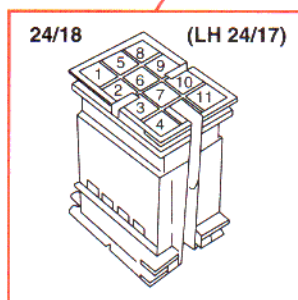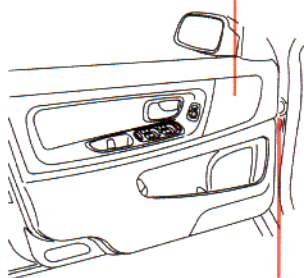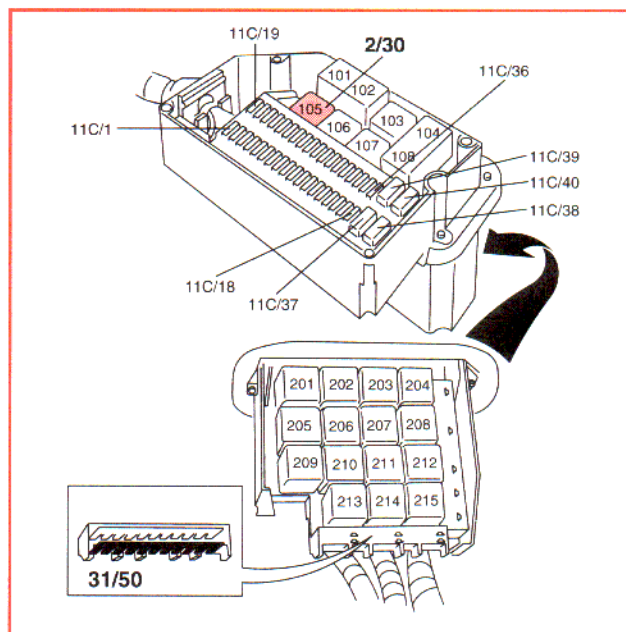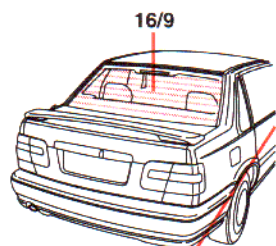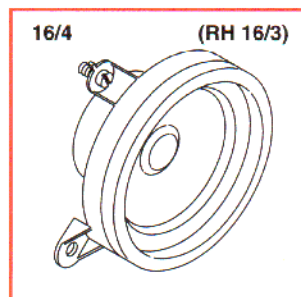



16/4 (RH 16/3)

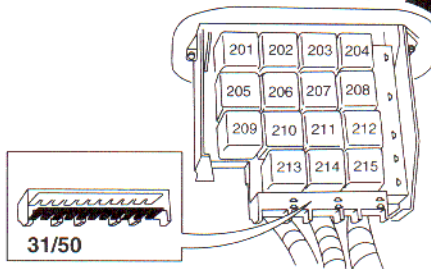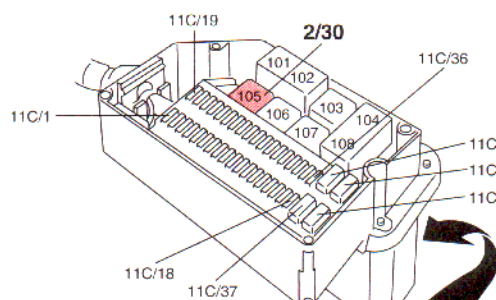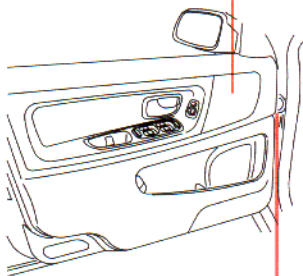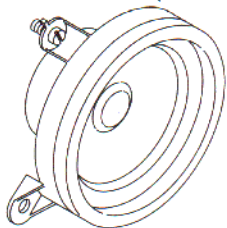


16/7 (LH 16/8)

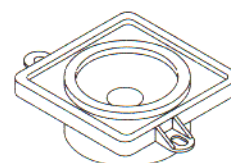

24/50 (RH 24/60)

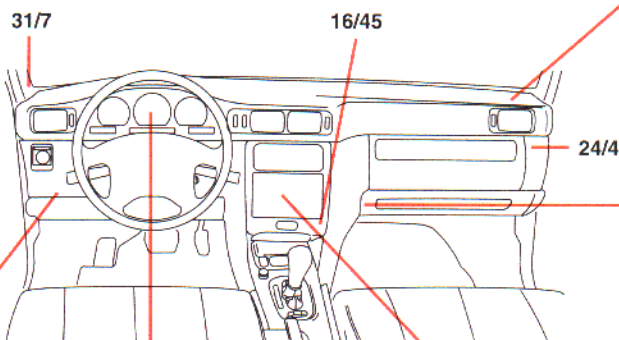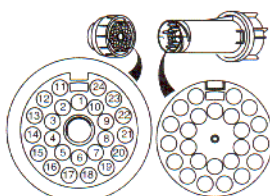


24/61

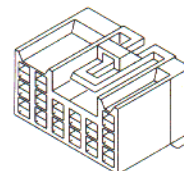


1	2		3
4	5	6	7
10	11	12	13


24/1
24/2
24/3
24/13
24/14

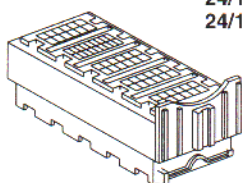


5/1

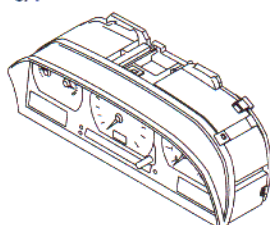


16/1

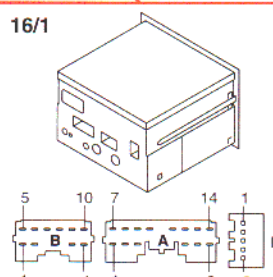


24/17 (RH 24/18)

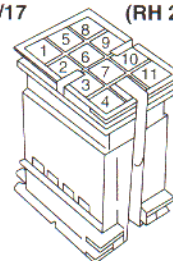



16/15

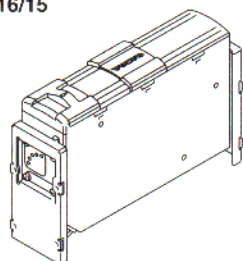


16/16

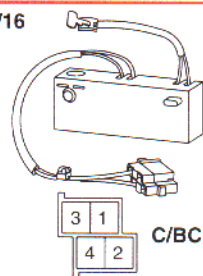


16/9

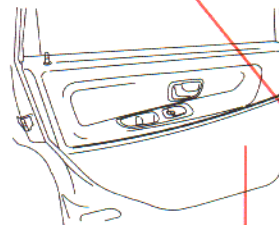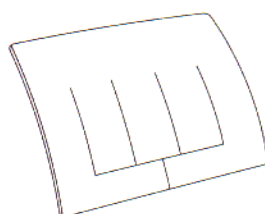


16/57 (RH 16/58)

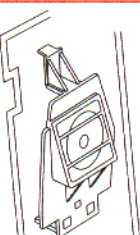


31/11

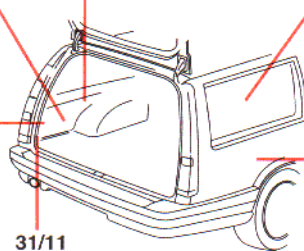





















16/53

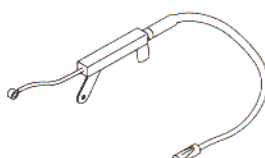

16/6 (RH 16/5)



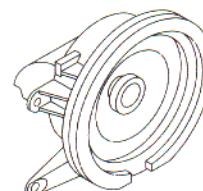


Radio with 4x50 W extra amplifier S70

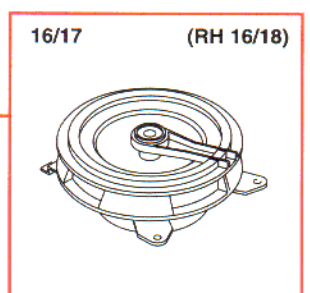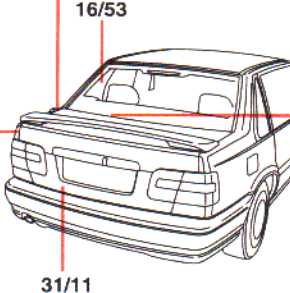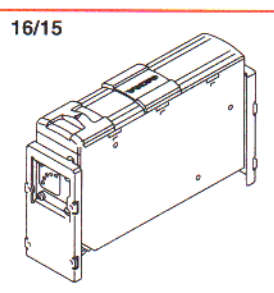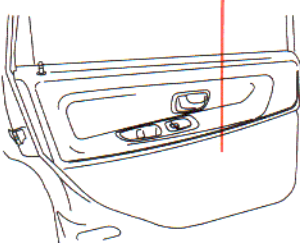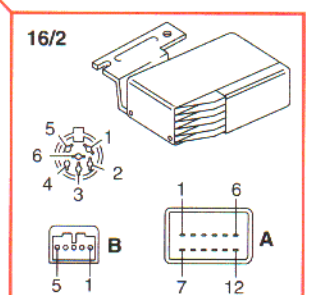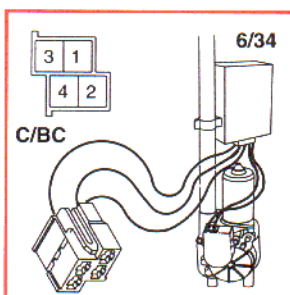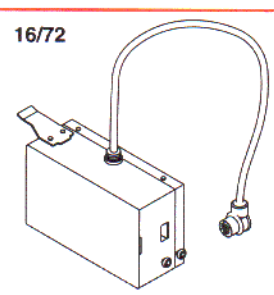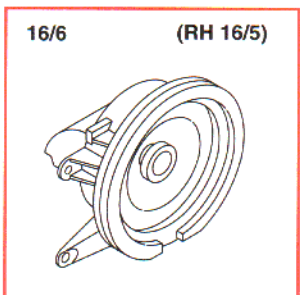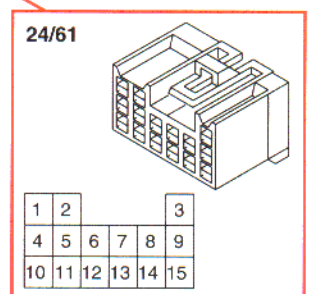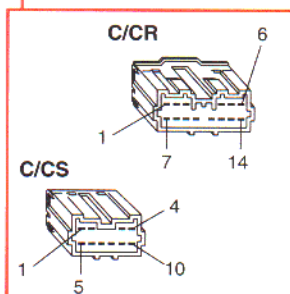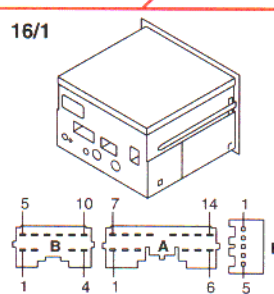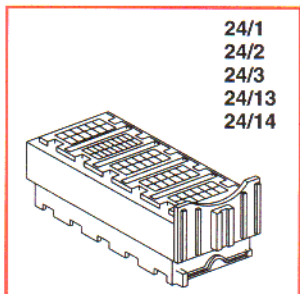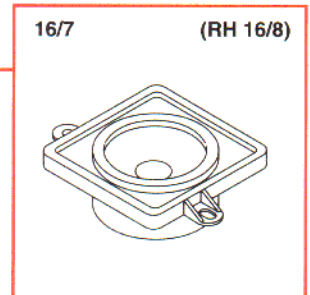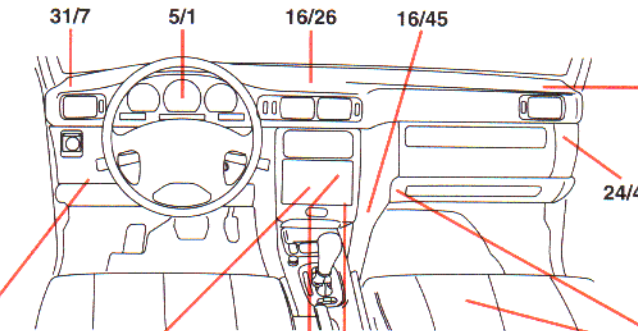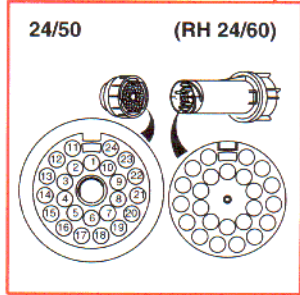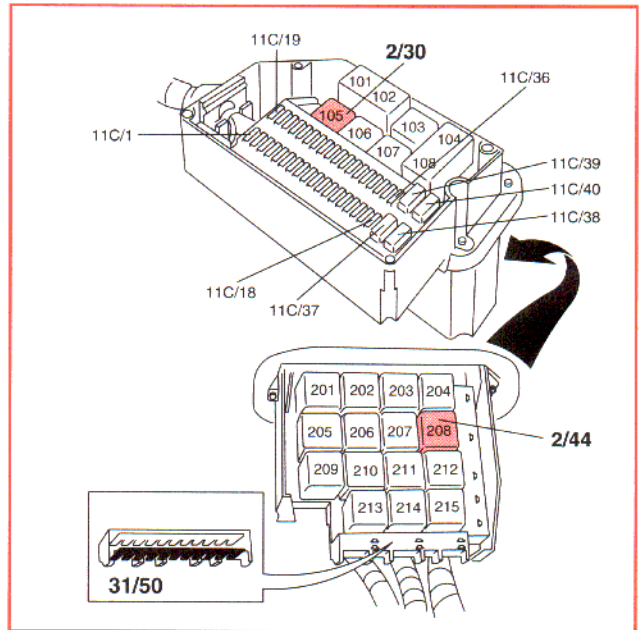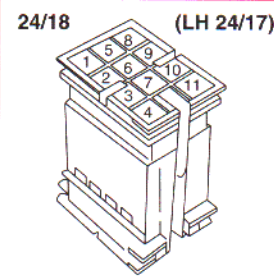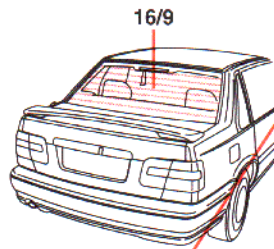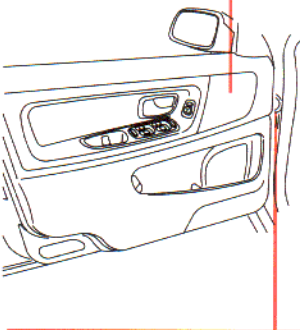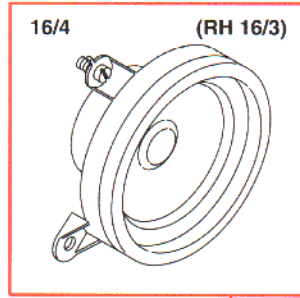


Radio with 4x50 W extra amplifier V70


16/4 (RH 16/3)

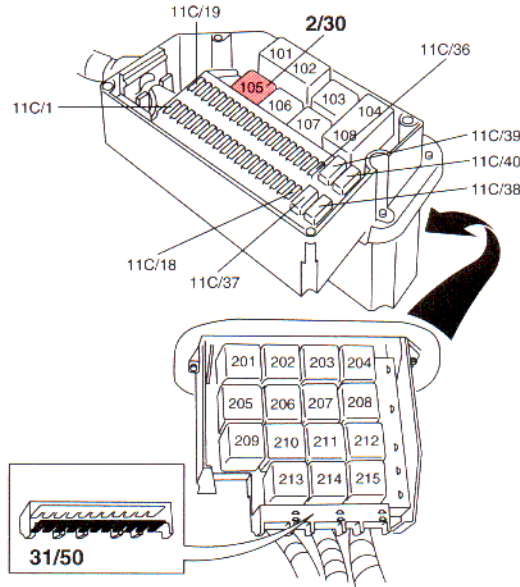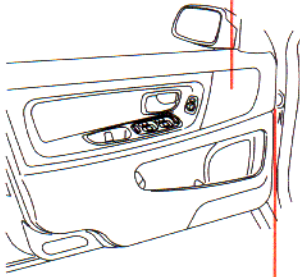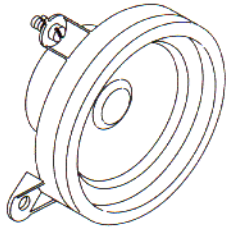


C/CR





C/CS




16/7 (LH 16/8)

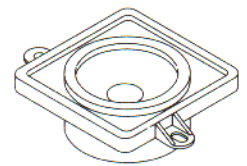

24/50 (RH 24/60)

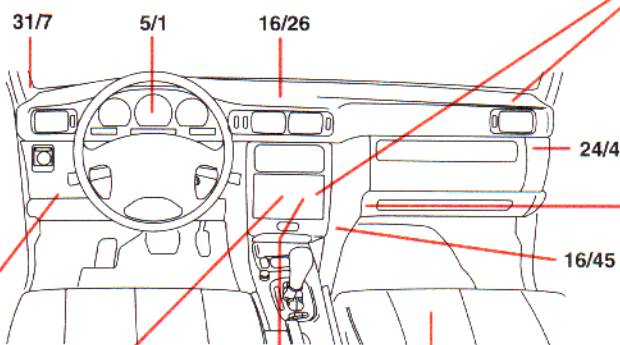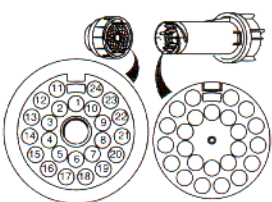


24/61

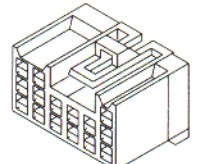


1	2	3			
4	5	6	7	8	9
10	11	12	13	14	15


24/1
24/2
24/3
24/13
24/14

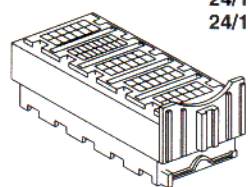


16/1

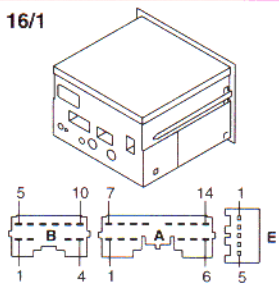


16/2

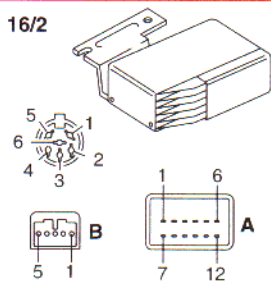


24/17 (RH 24/18)

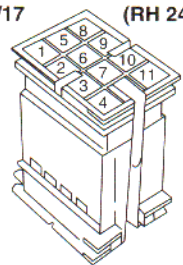



16/15

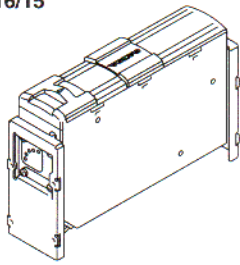



16/16

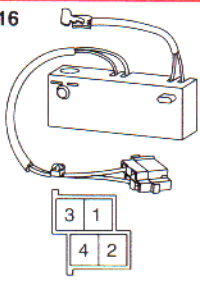


16/72

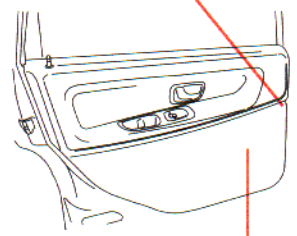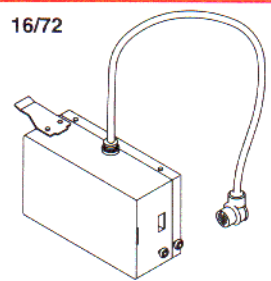


16/57 (RH 16/58)

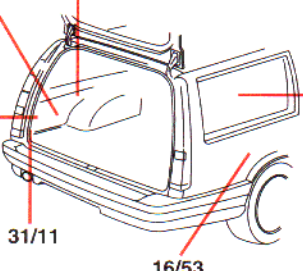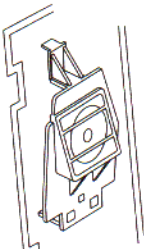



16/9

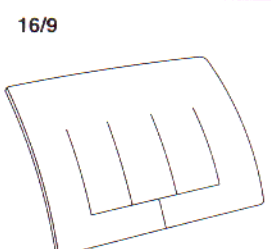


16/6 (RH 16/5)

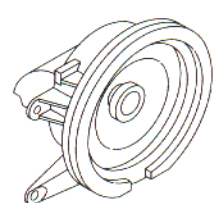


















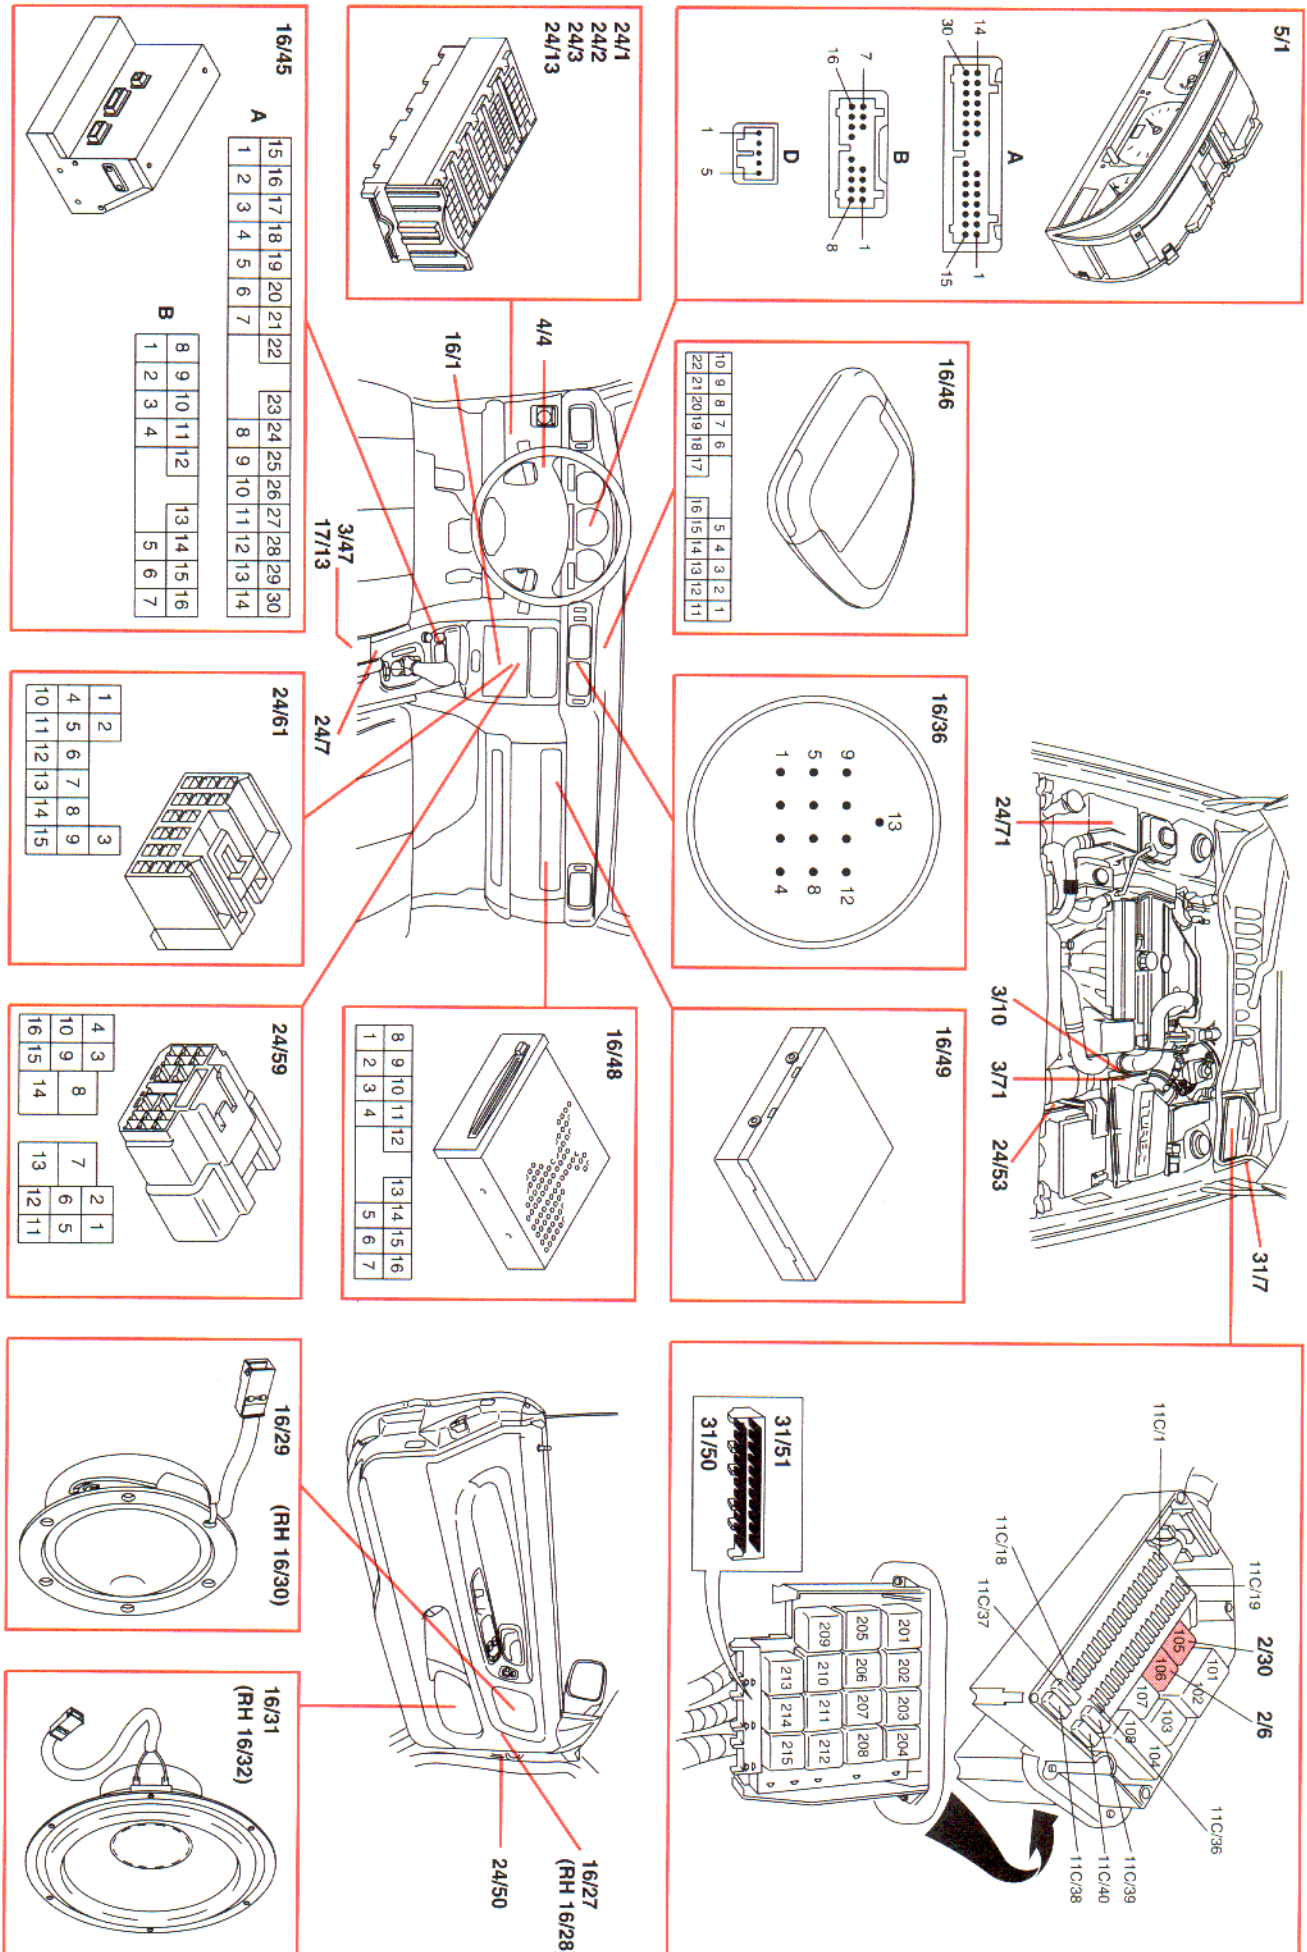


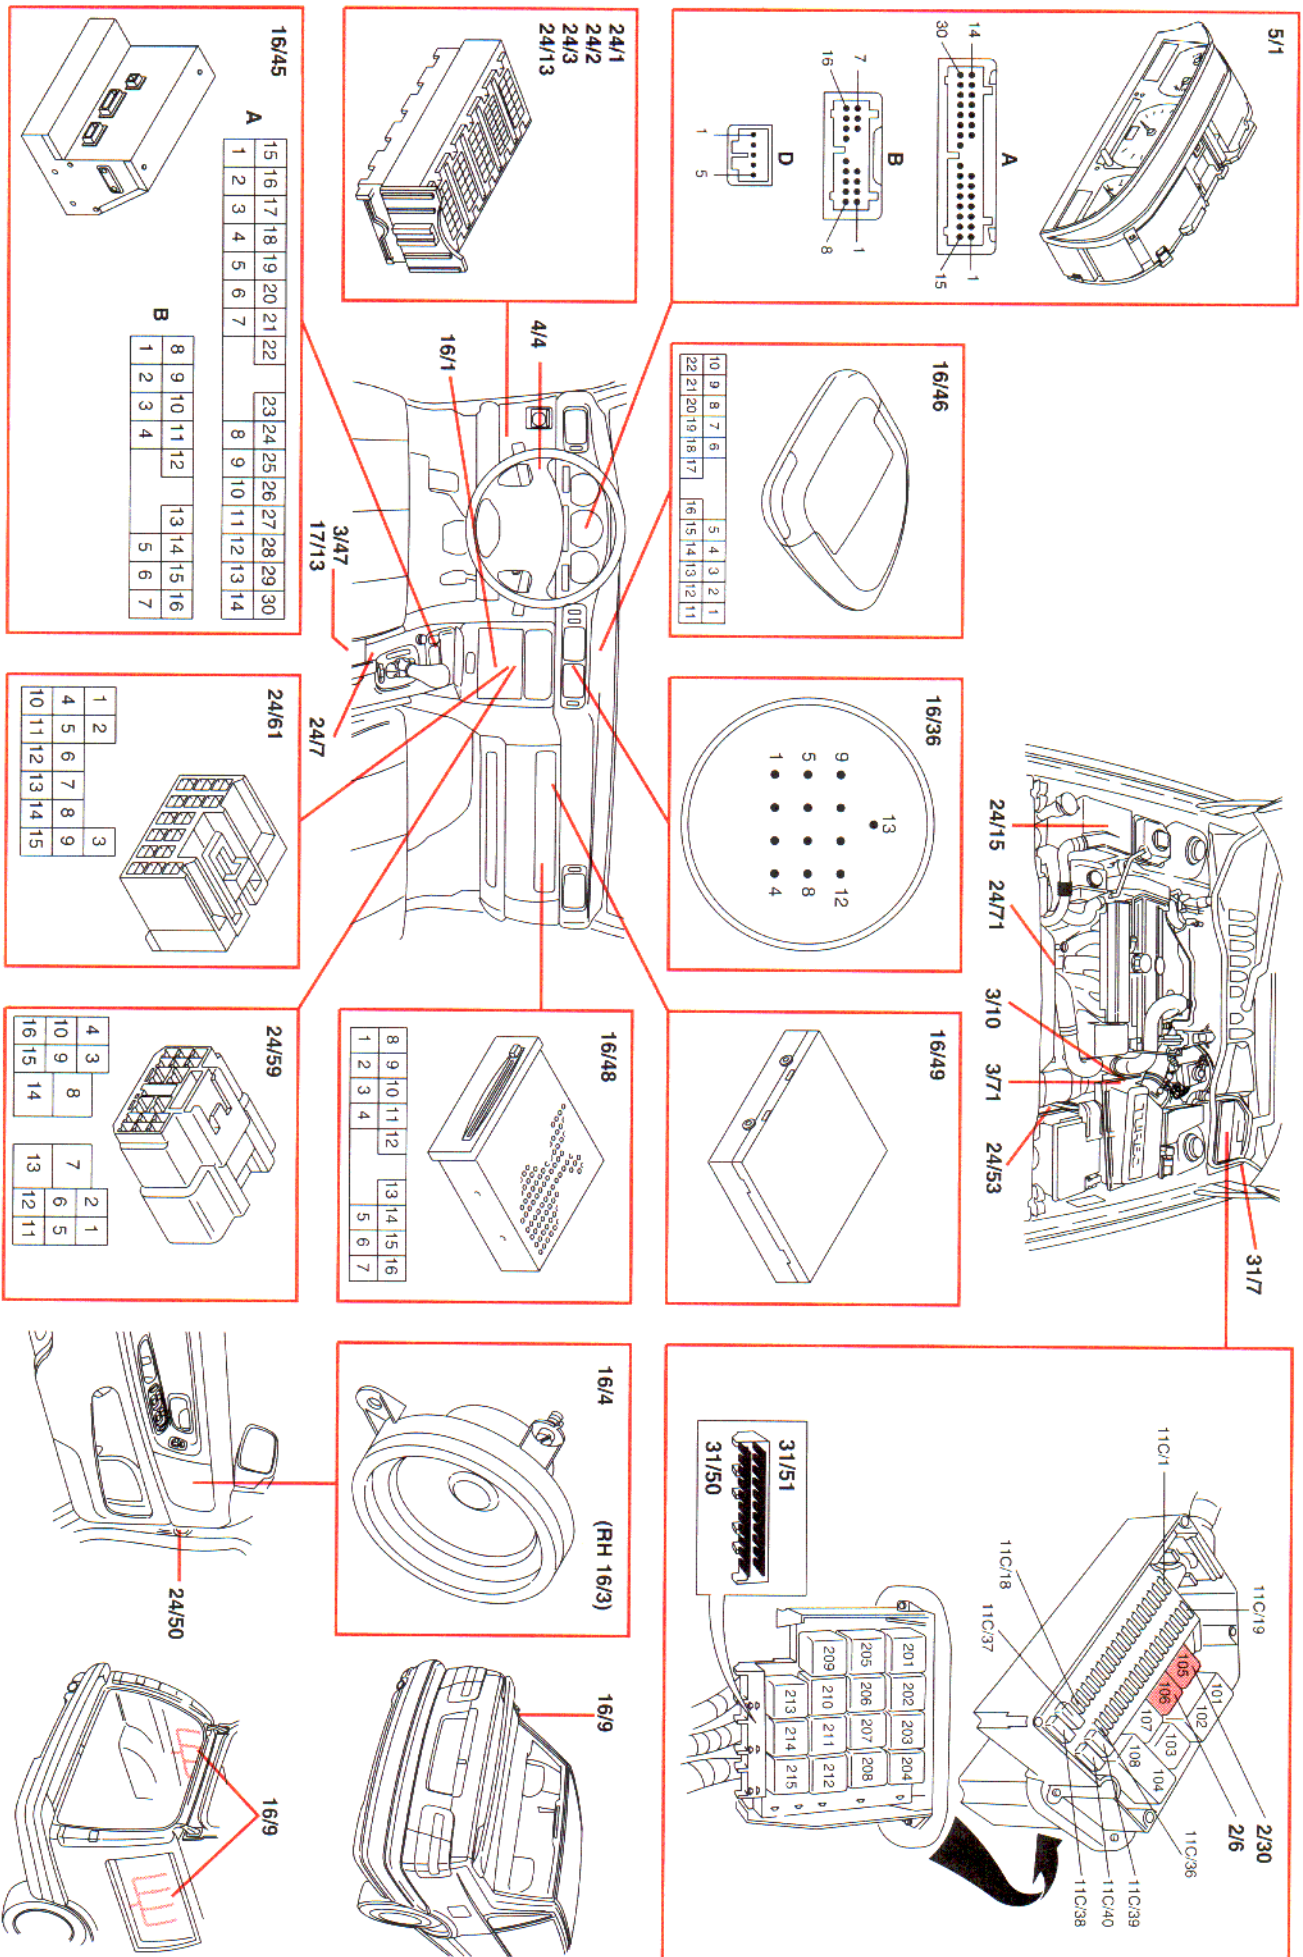RTI Road Traffic Information
S70, V70


Electronically controlled automatic transmission AW 50-42 Fenix 5.2, MSA 15.7

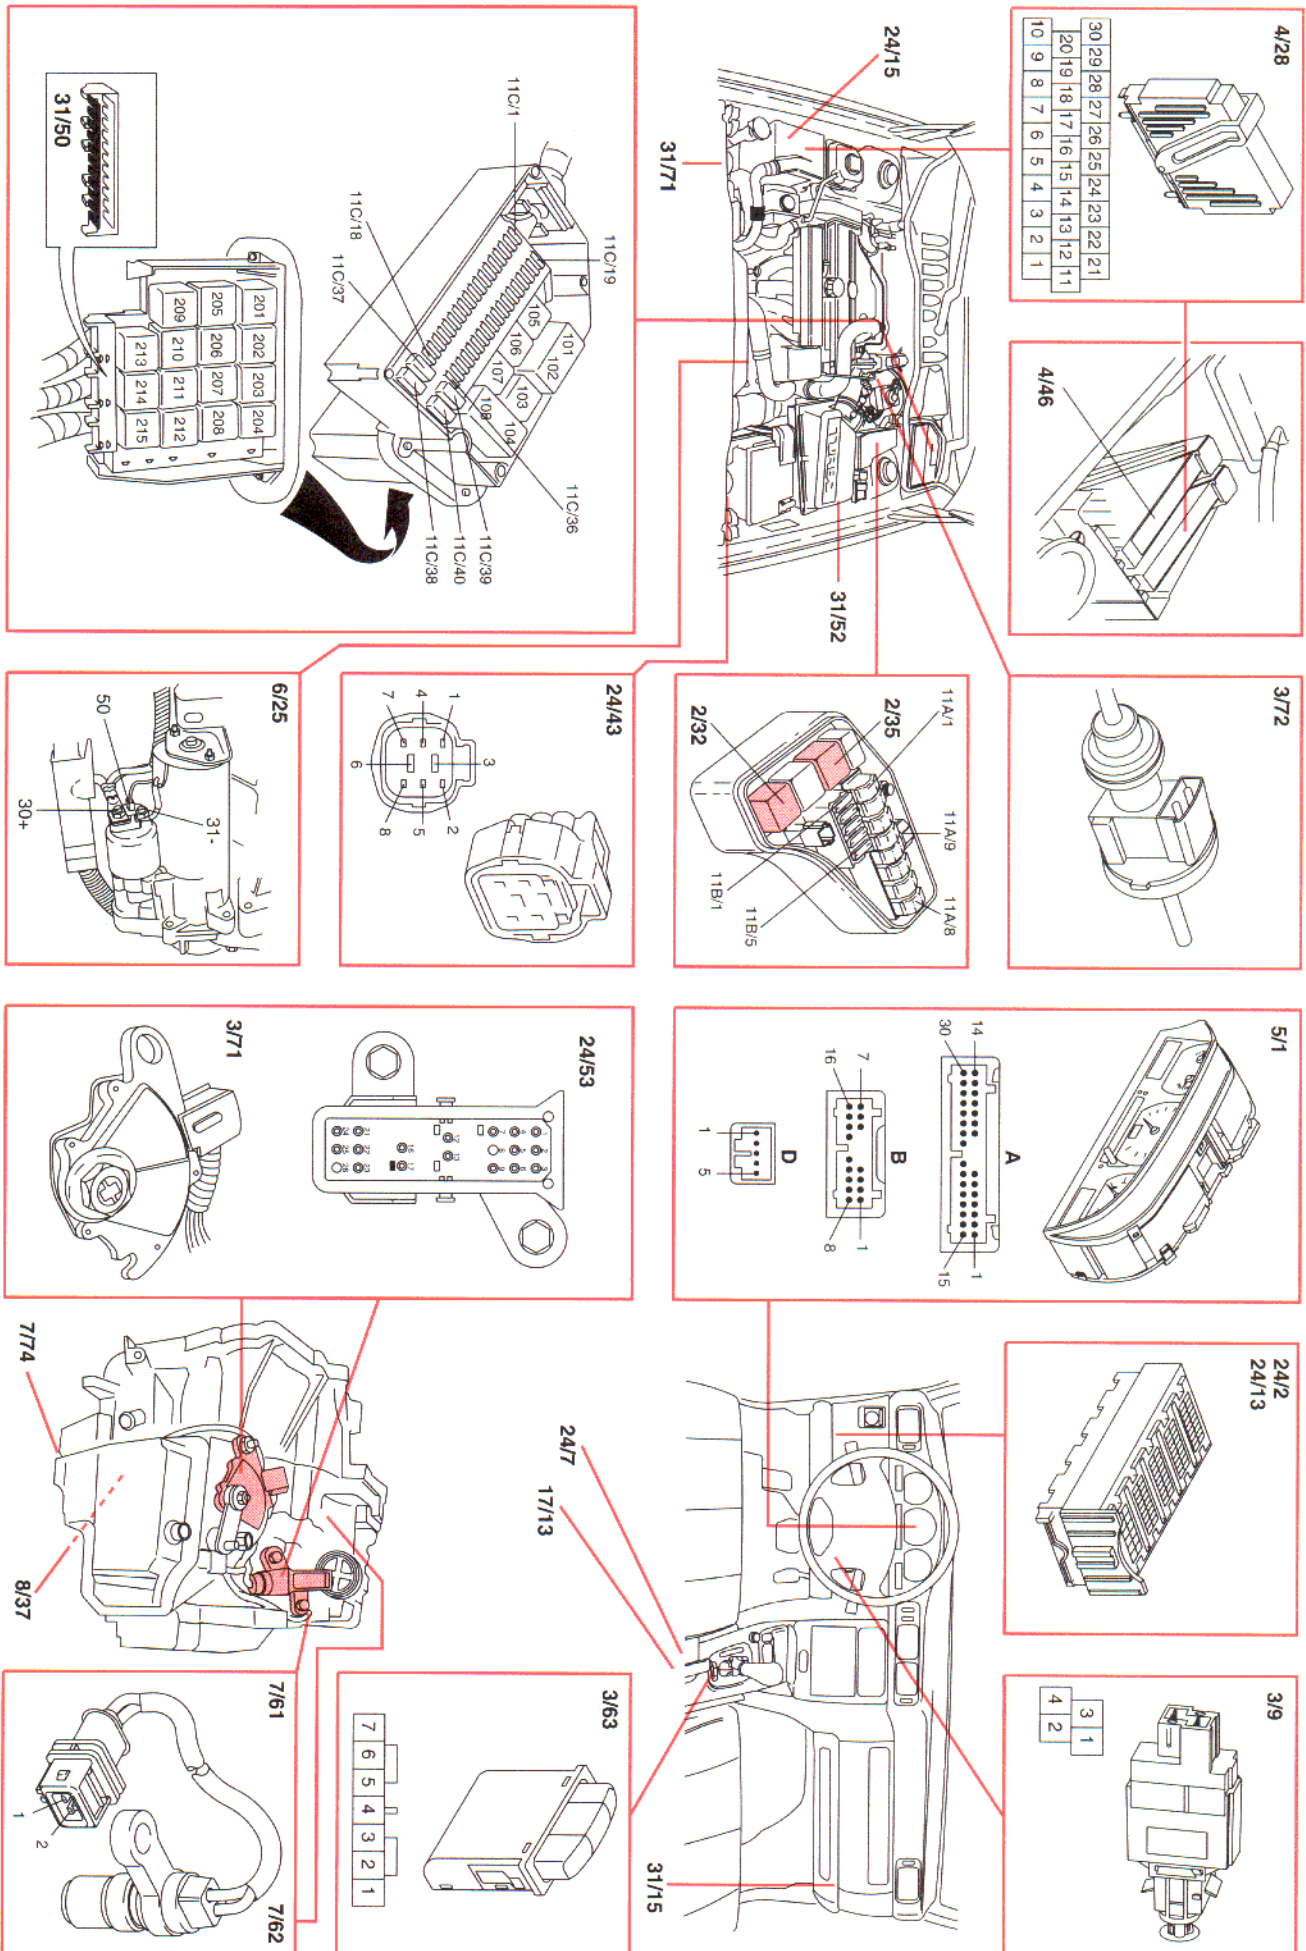


Electronically controlled automatic transmission AW 50-42 Denso, ME7

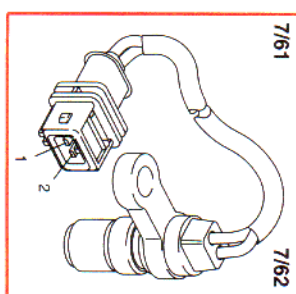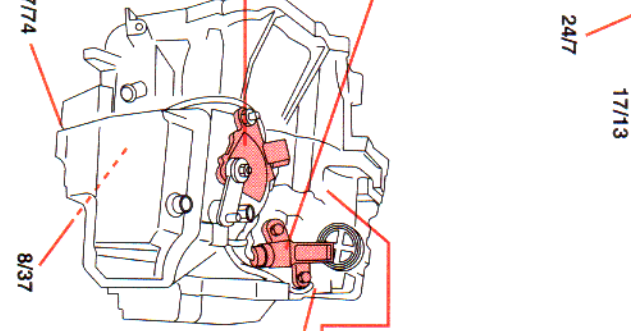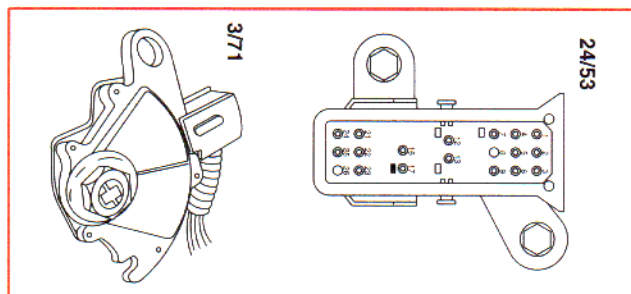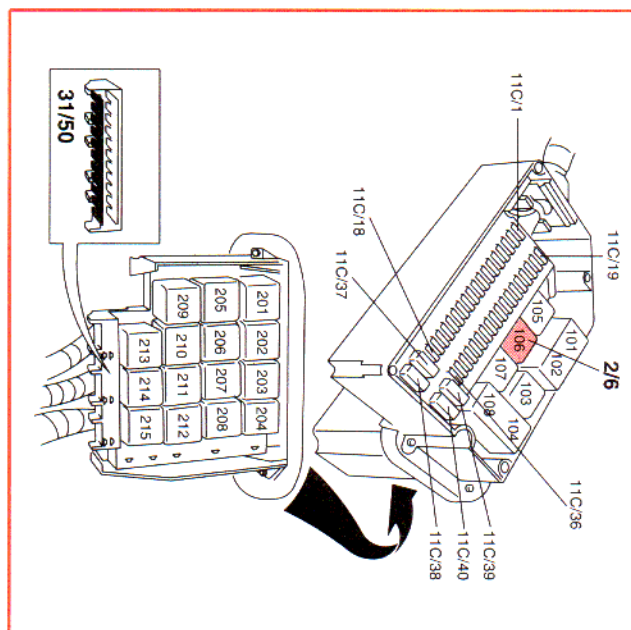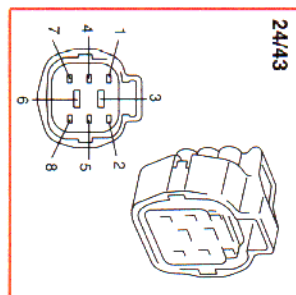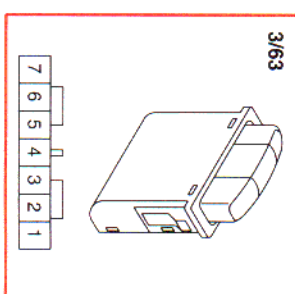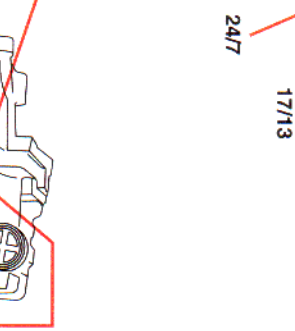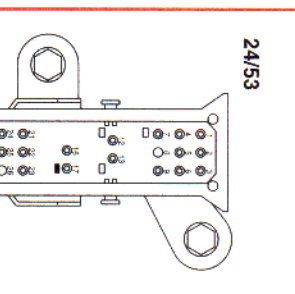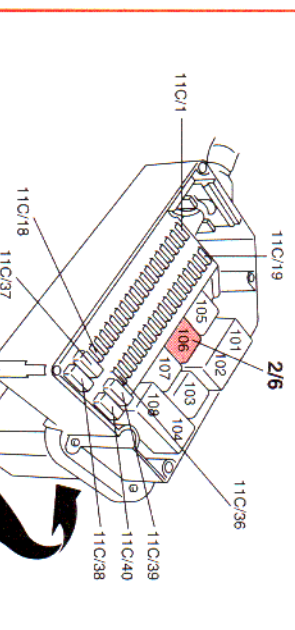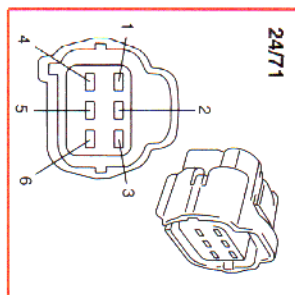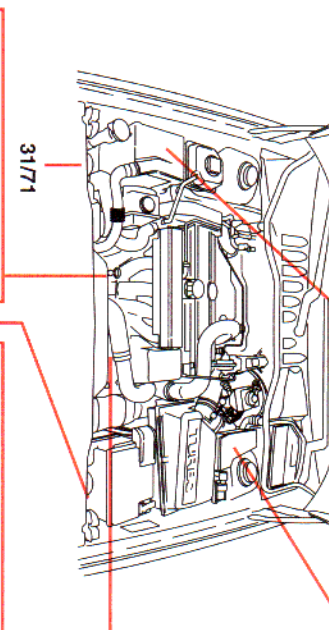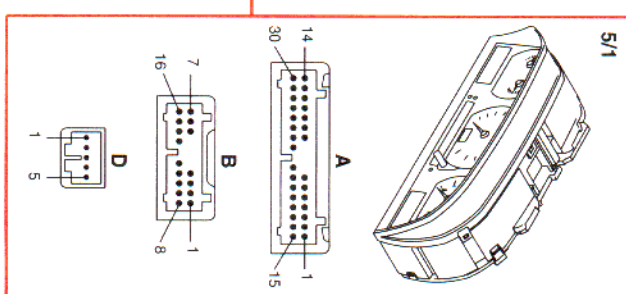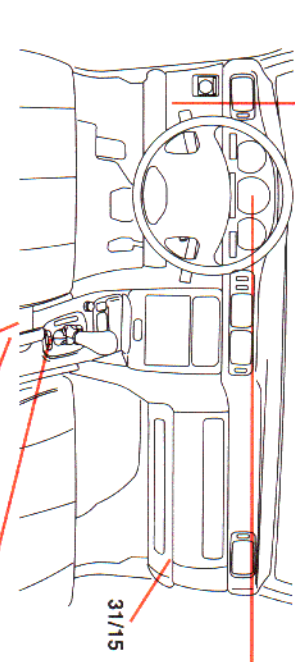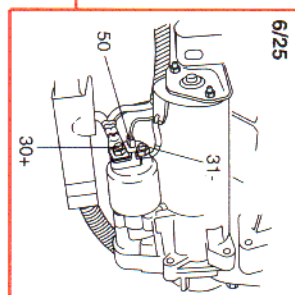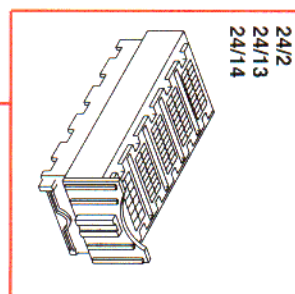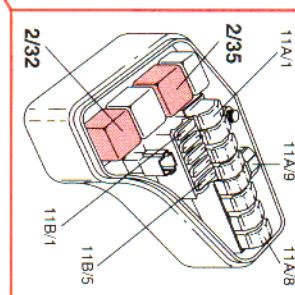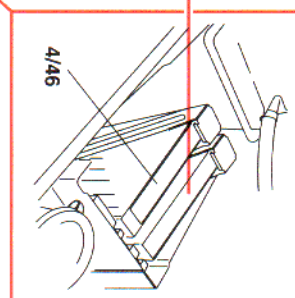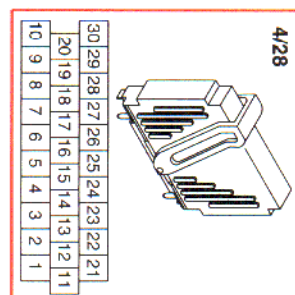

P-shift lock, automatic transmission

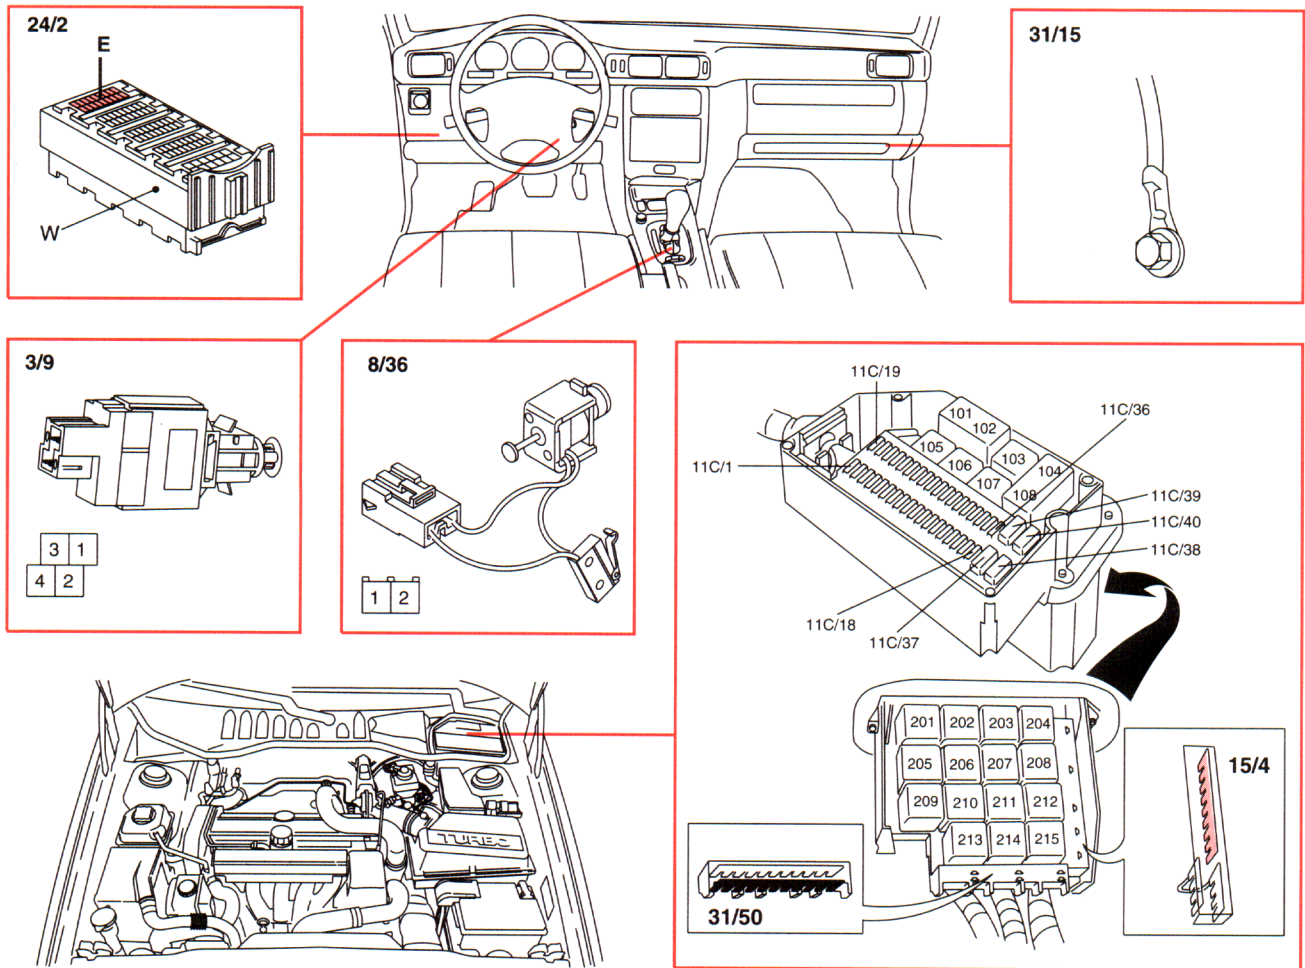


ABS Anti-lock braking system

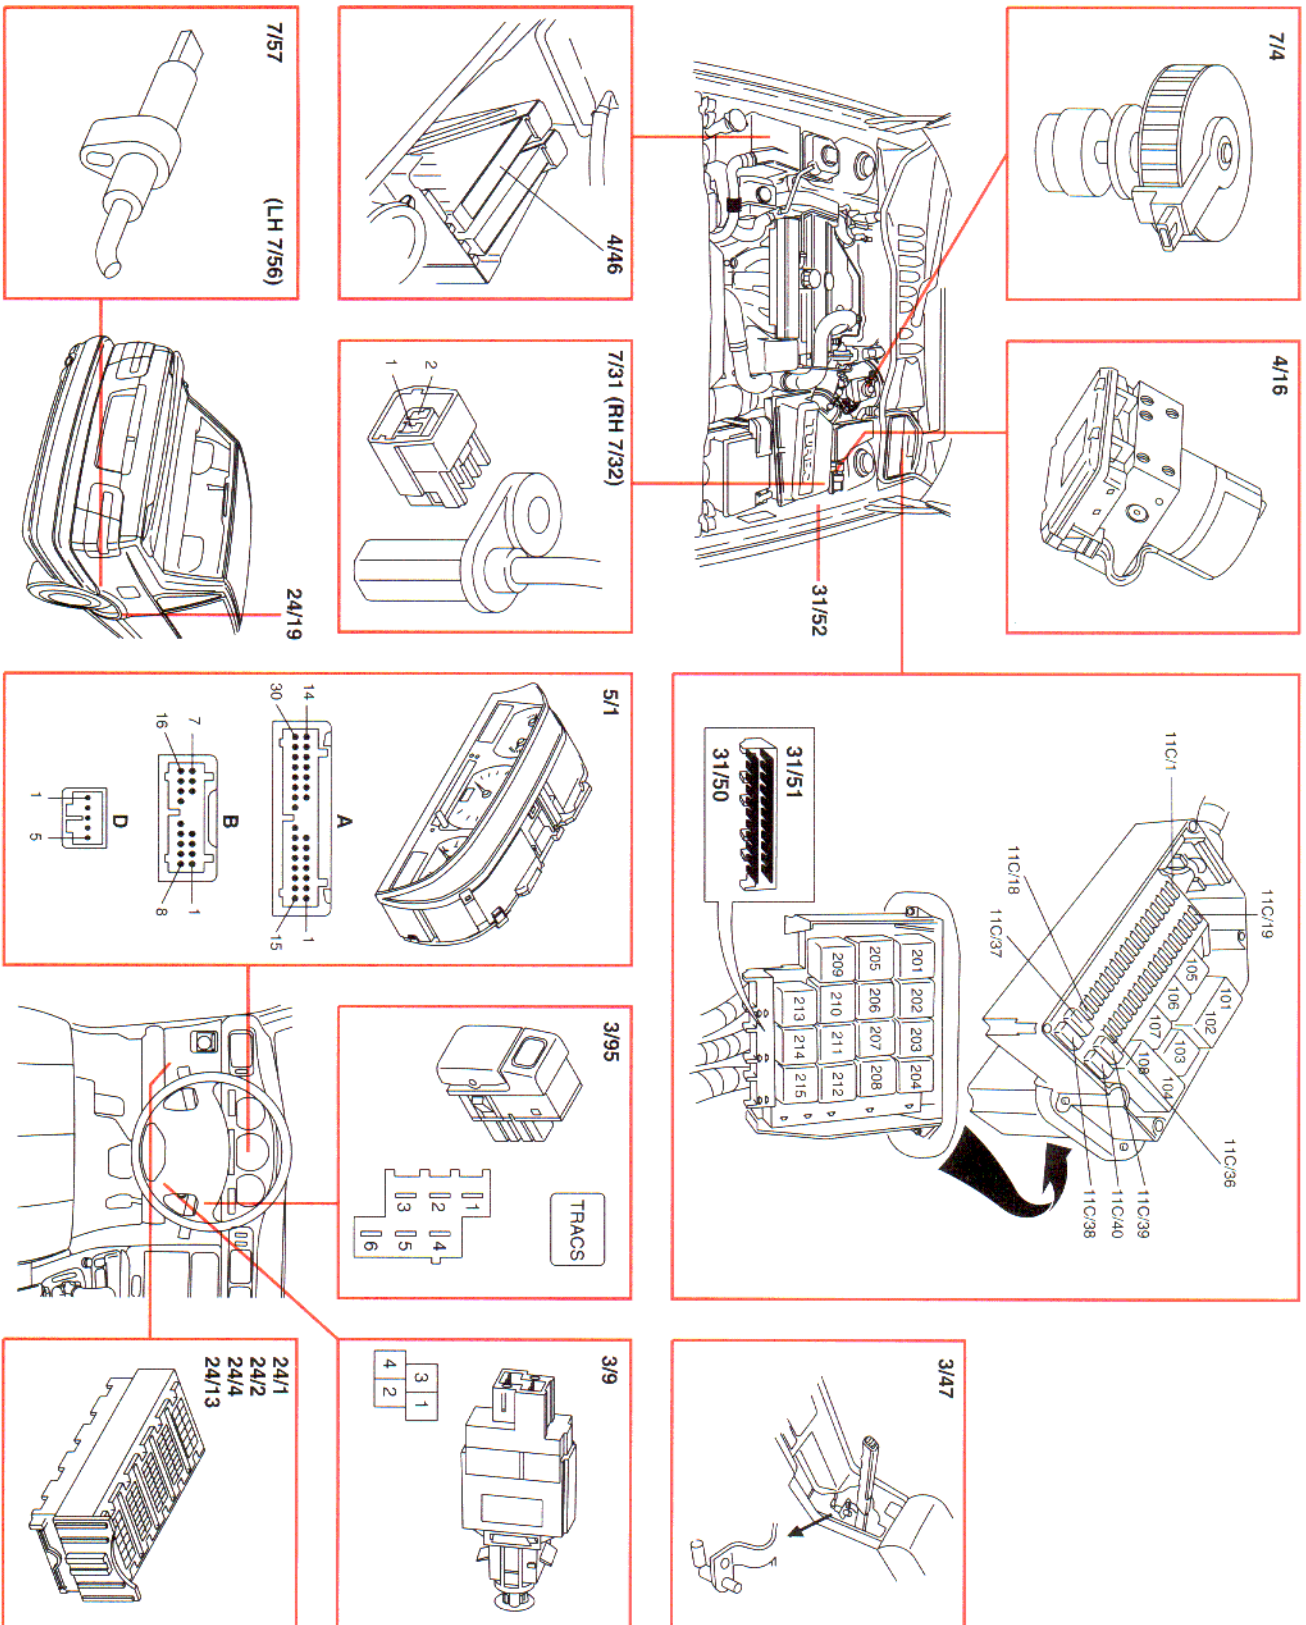



Central locking C70 Convertible

With deadlock
position:

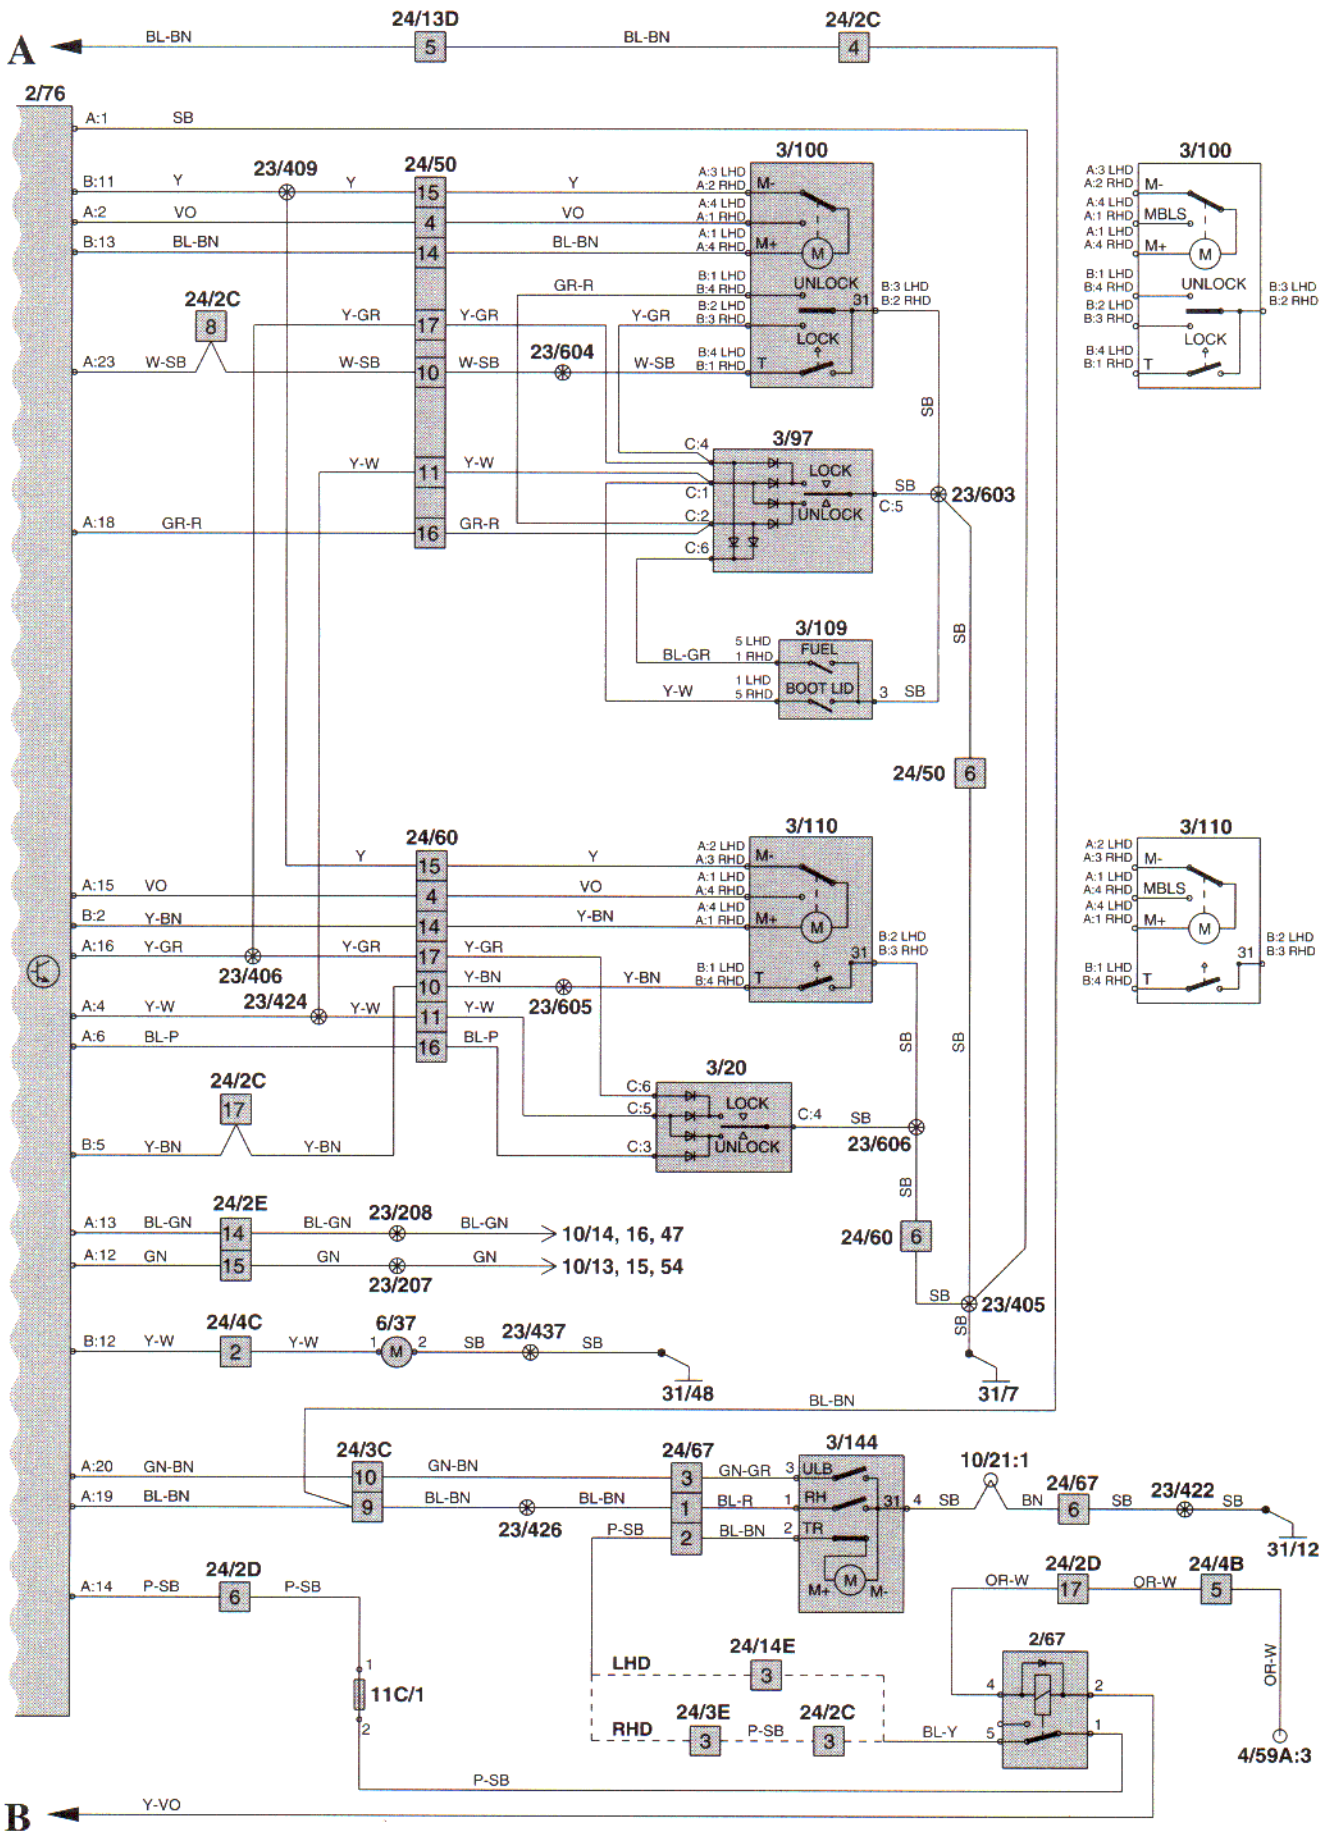


Central locking C70 Convertible


5/1

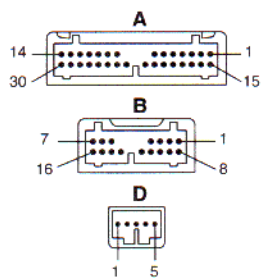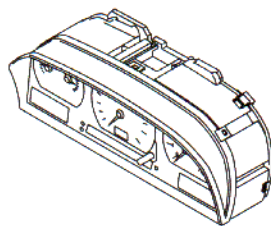


24/3
24/14

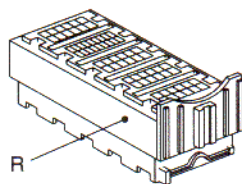


4/19

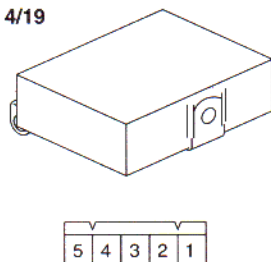


24/2

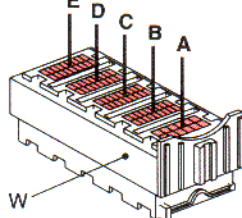


31/7




24/1
24/13

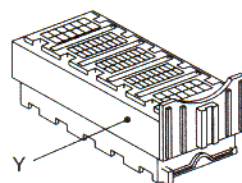


2/76

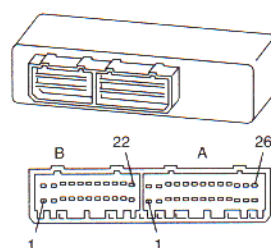


17/13

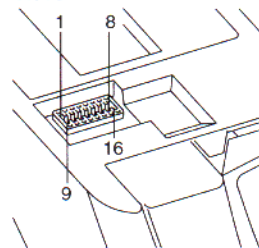





24/50
(RH 24/60)

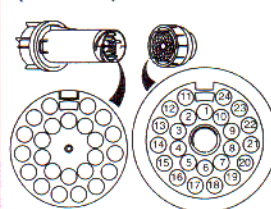














24/4

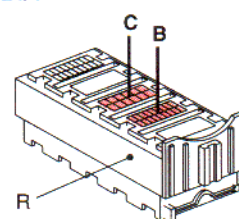

24/7B

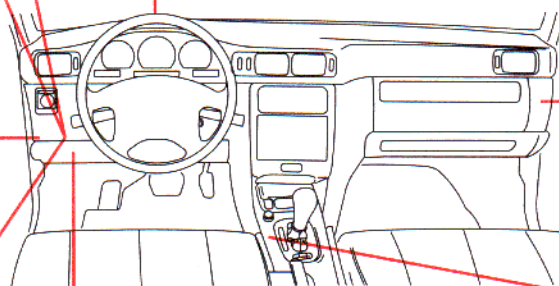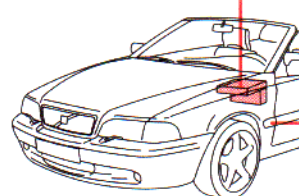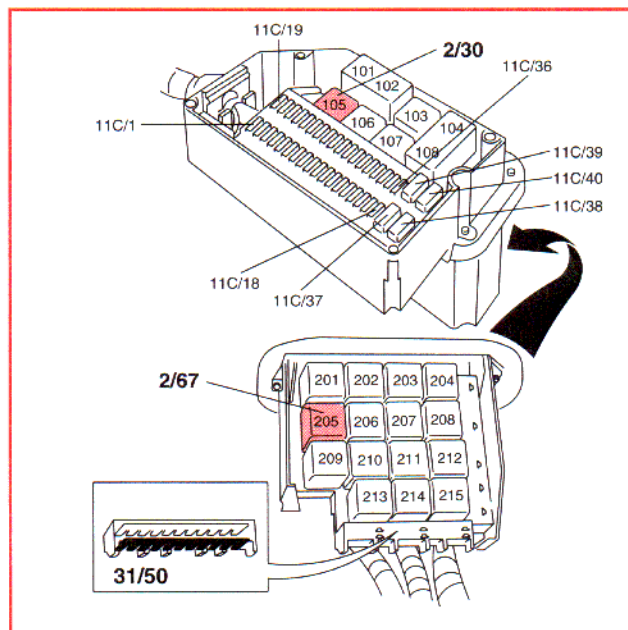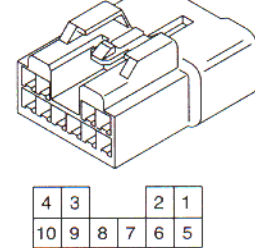


Central locking C70 Convertible



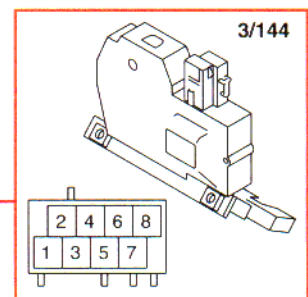
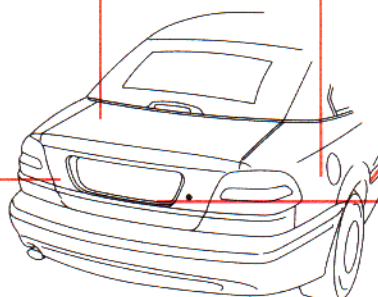
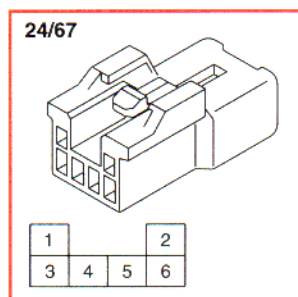
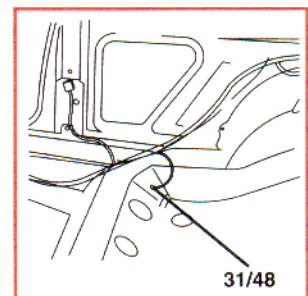
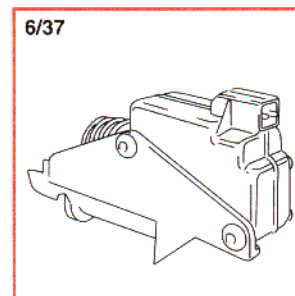
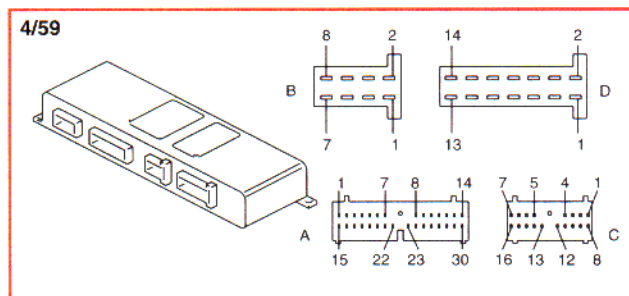
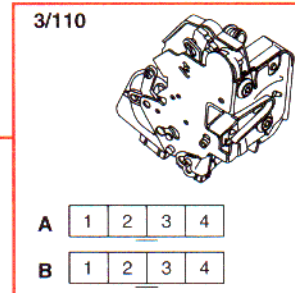
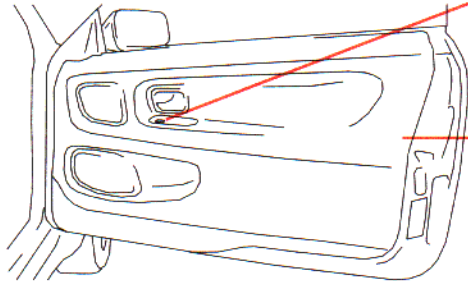
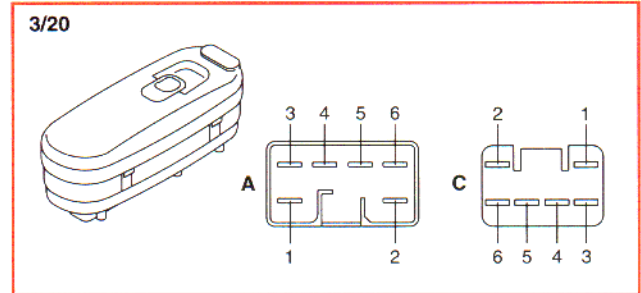
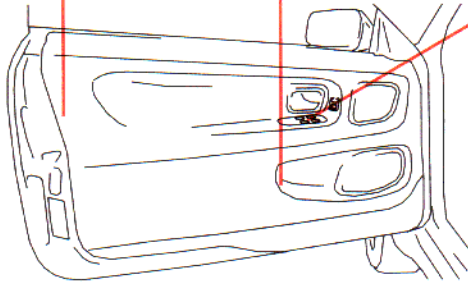
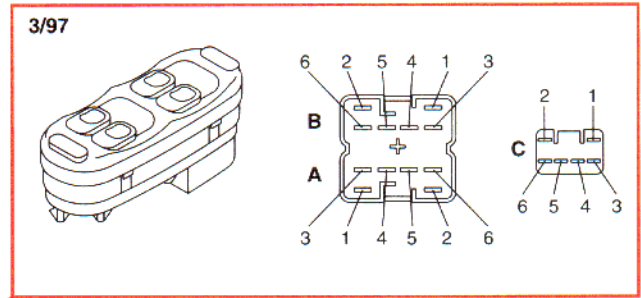
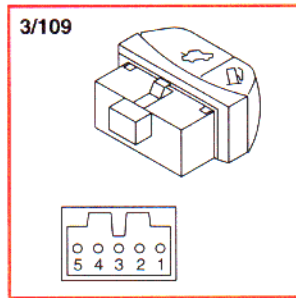
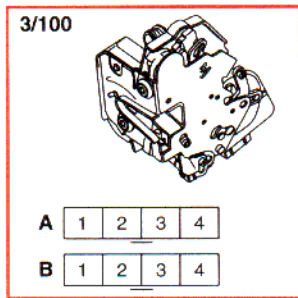


Central locking C70 coupé














With deadlock
position:

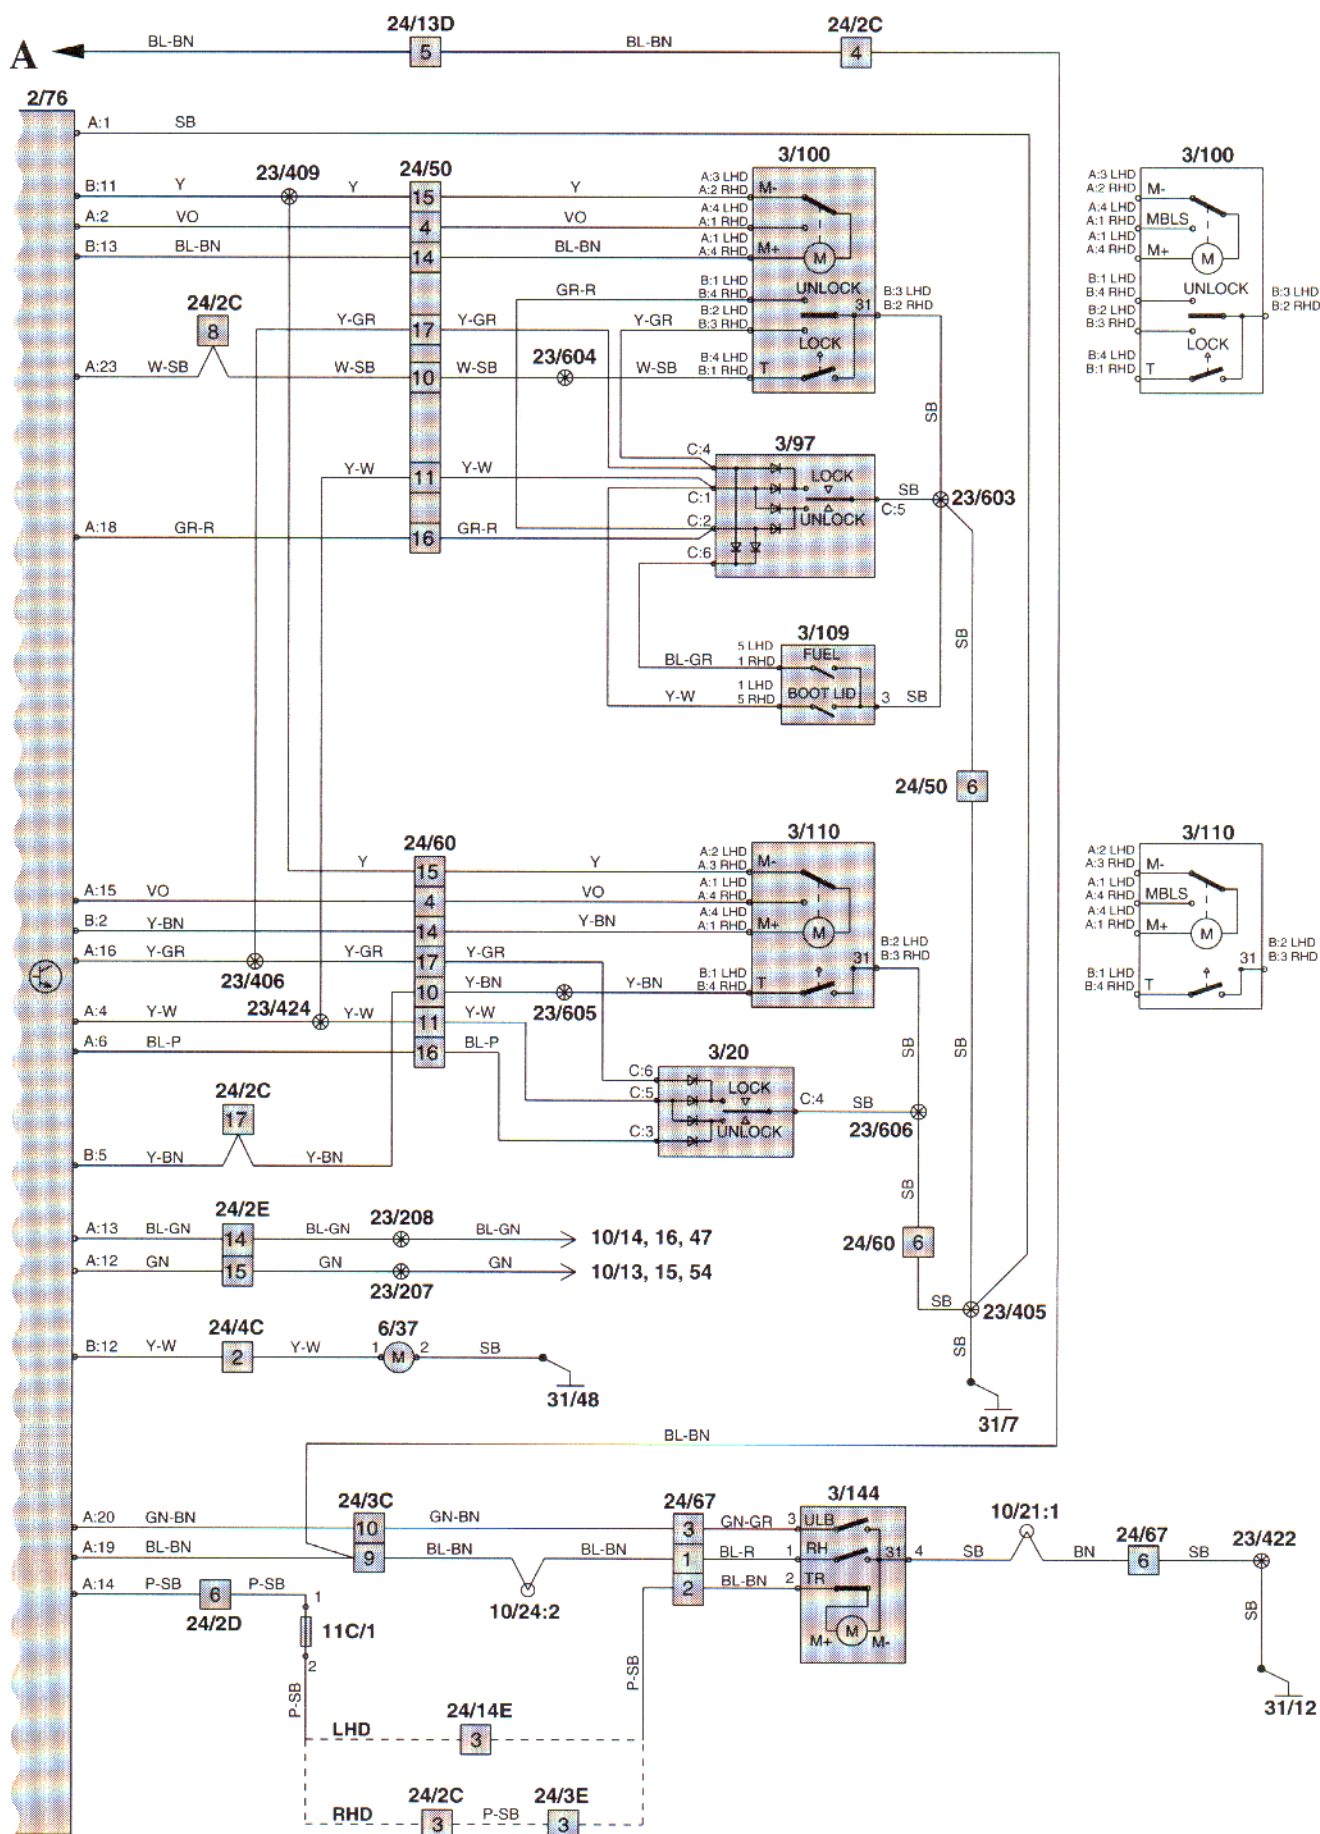

Central locking
C70 coupé

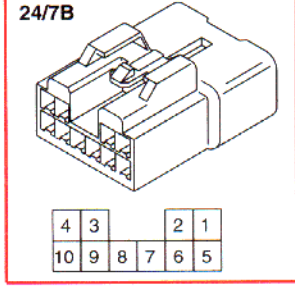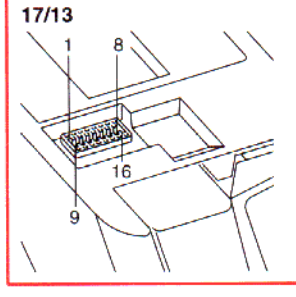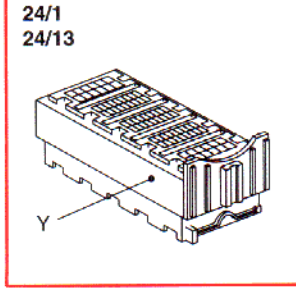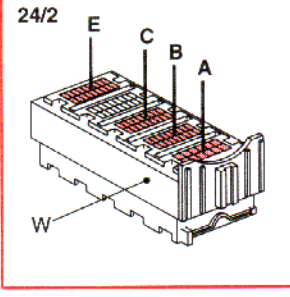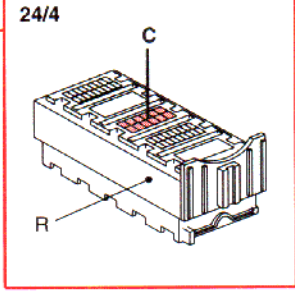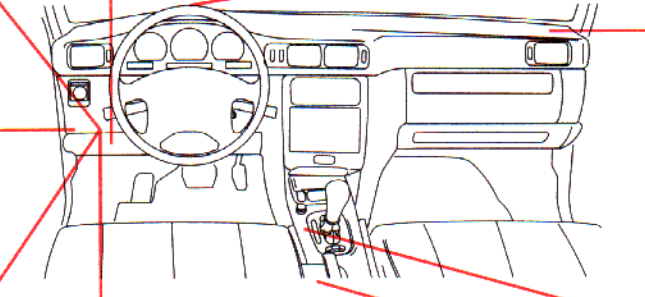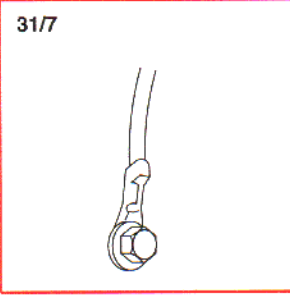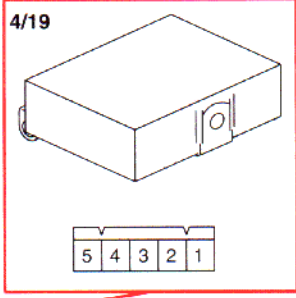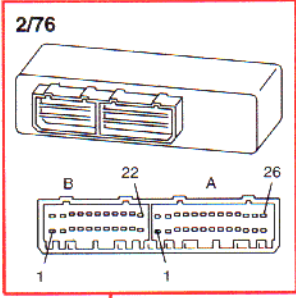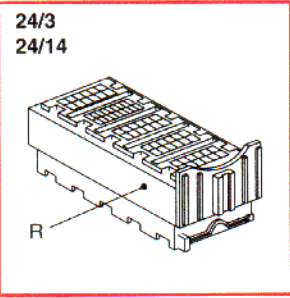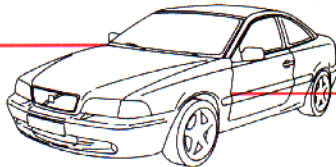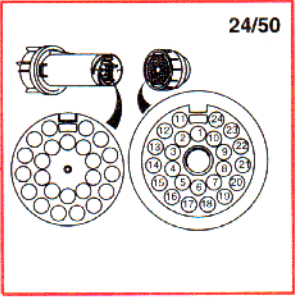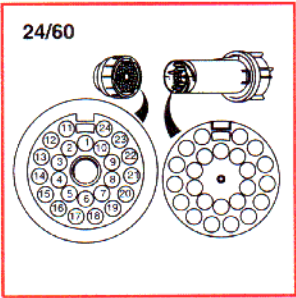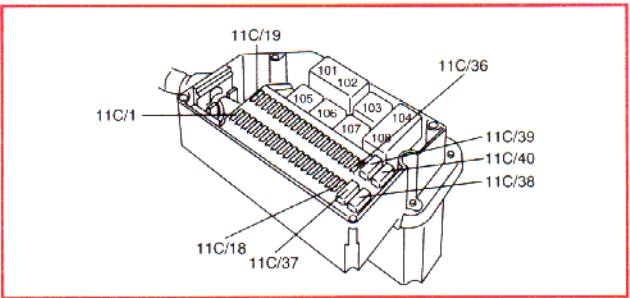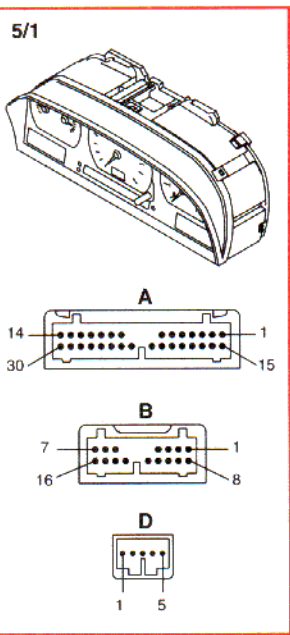













Central locking C70 coupé

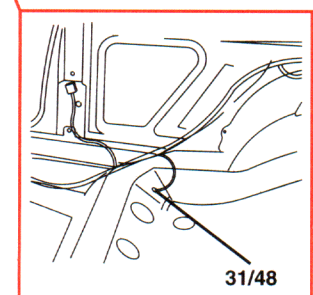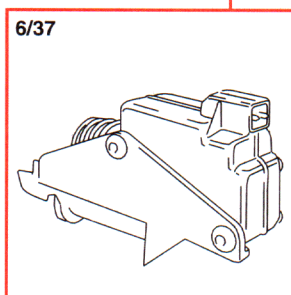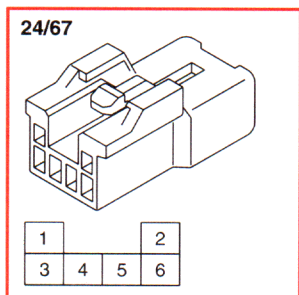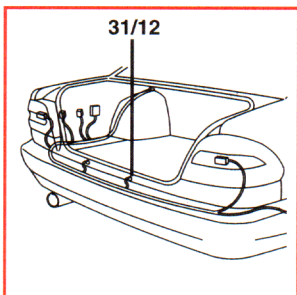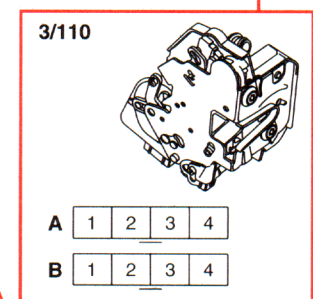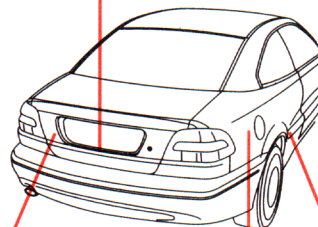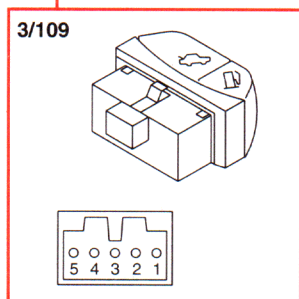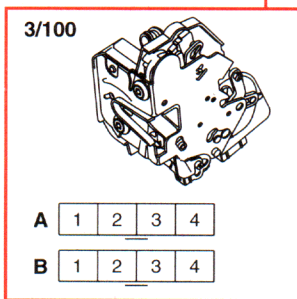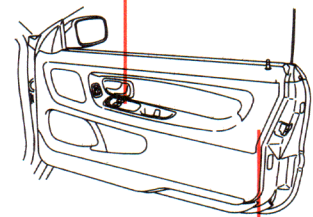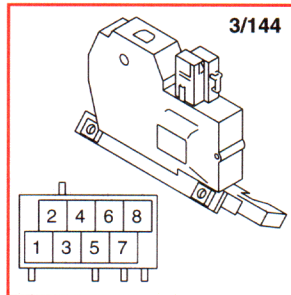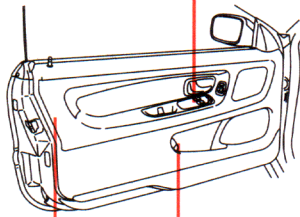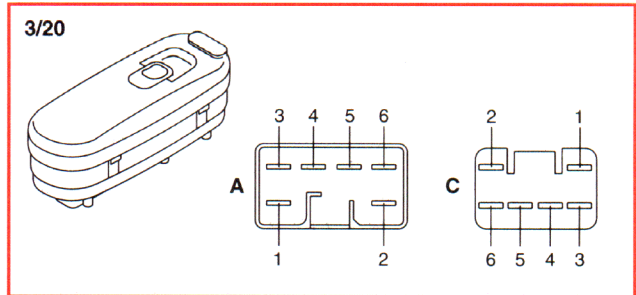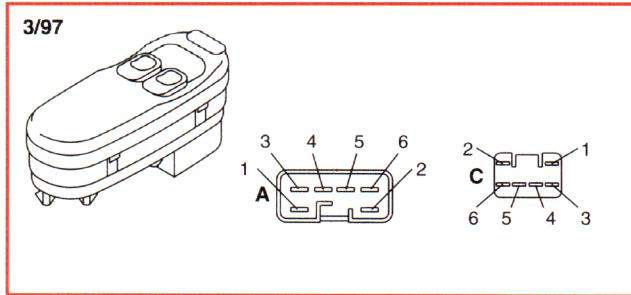

















With deadlock position:



Central locking S70

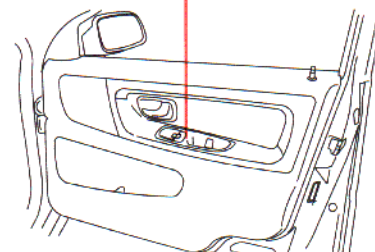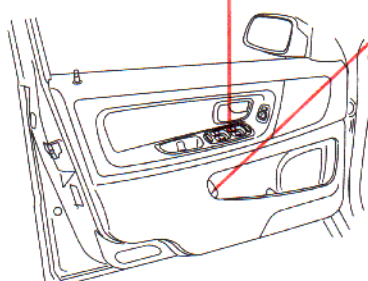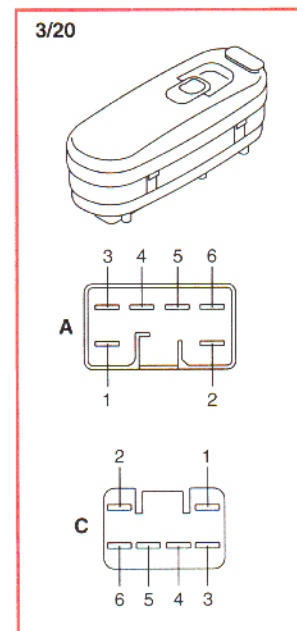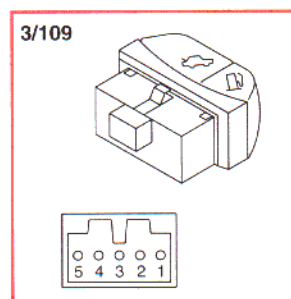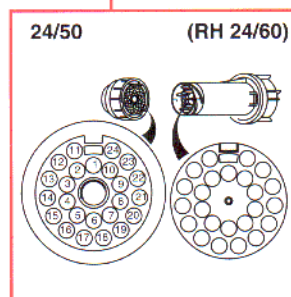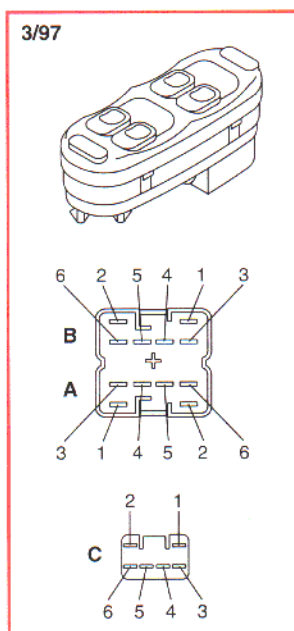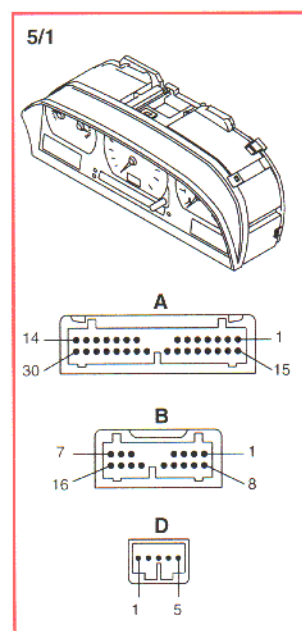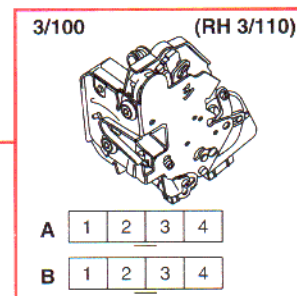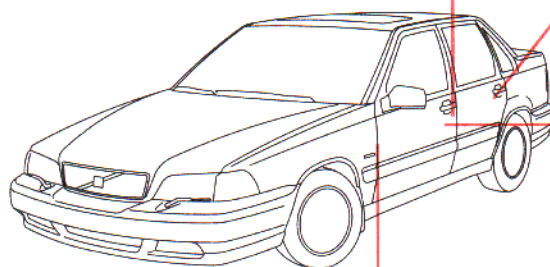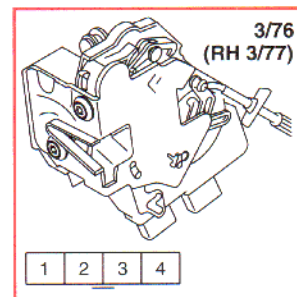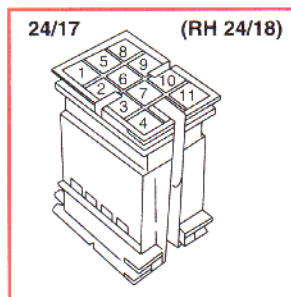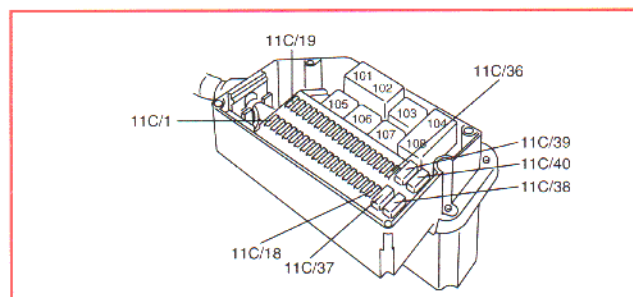














Central locking S70

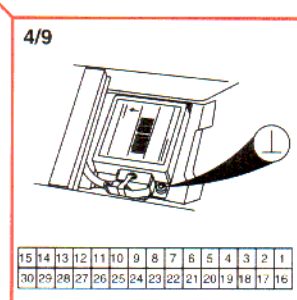
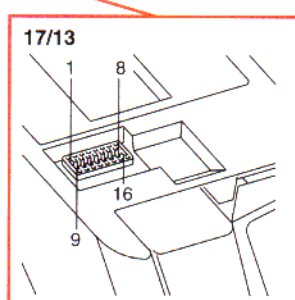
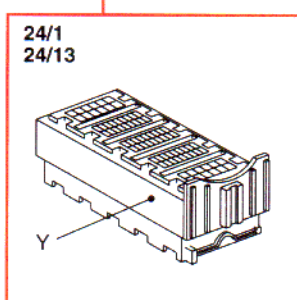
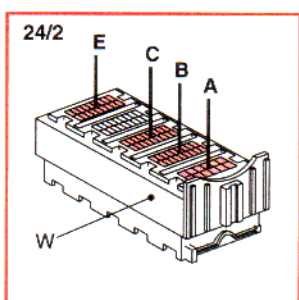
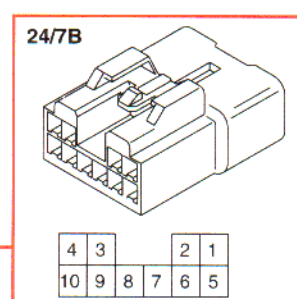
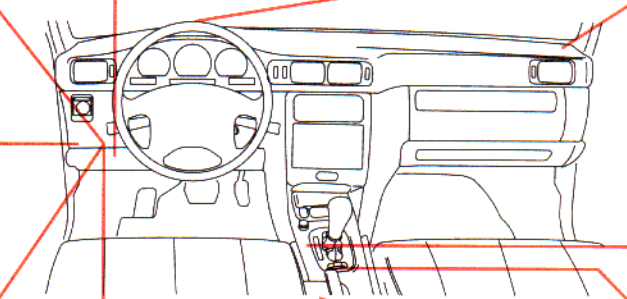
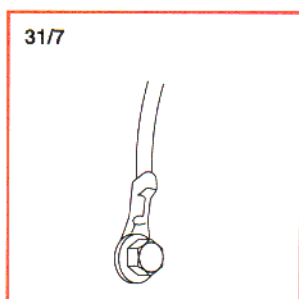
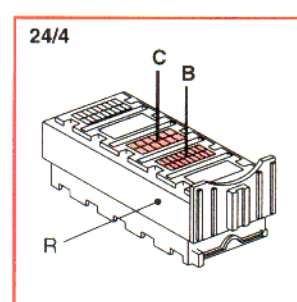
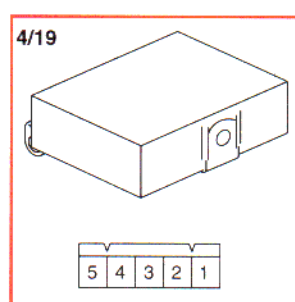
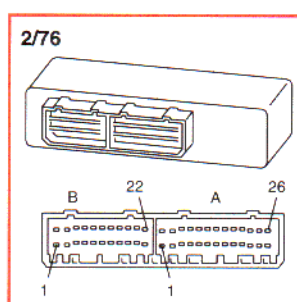
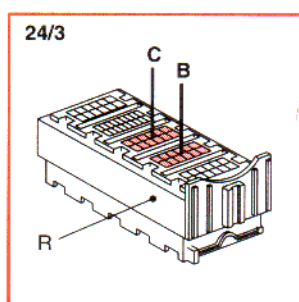
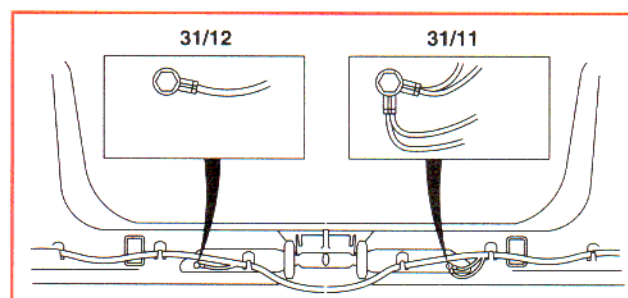
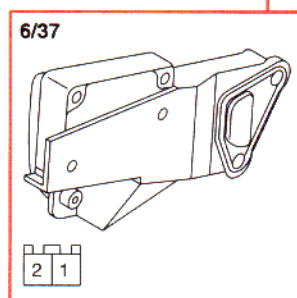
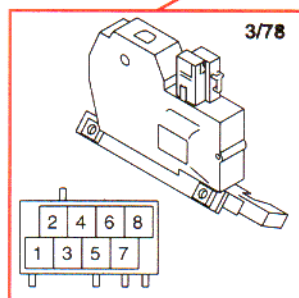
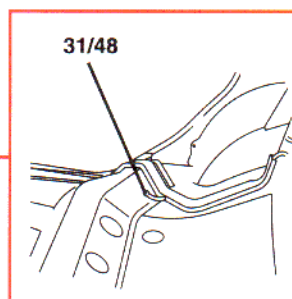
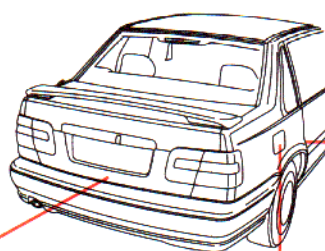



With deadlock position:

















Central locking V70








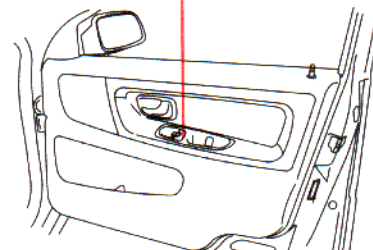
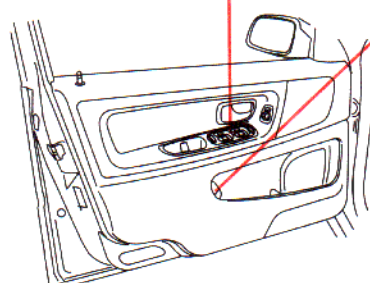
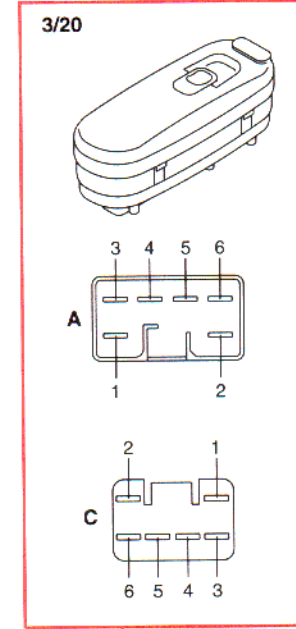
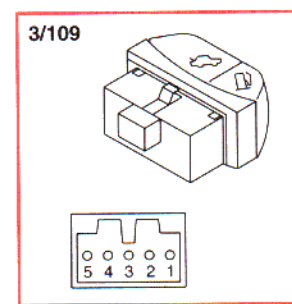
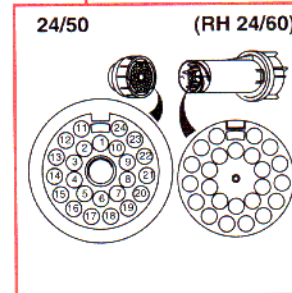
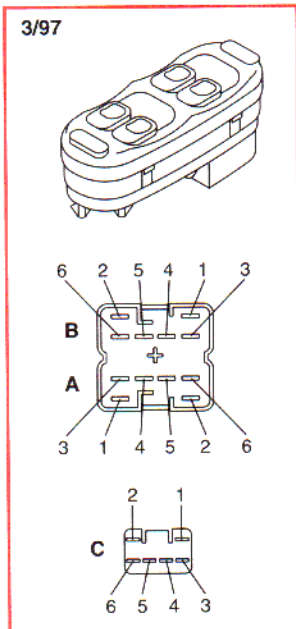
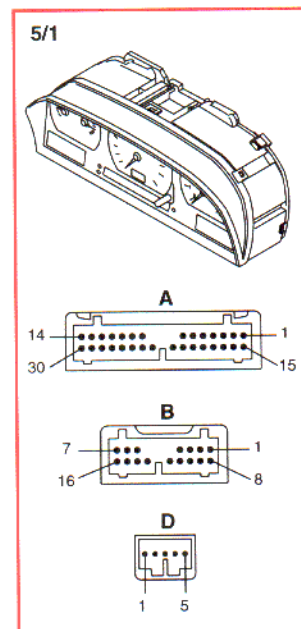
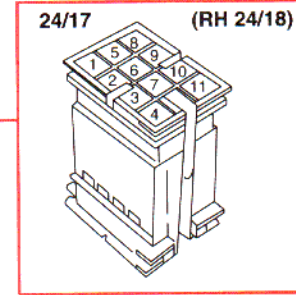
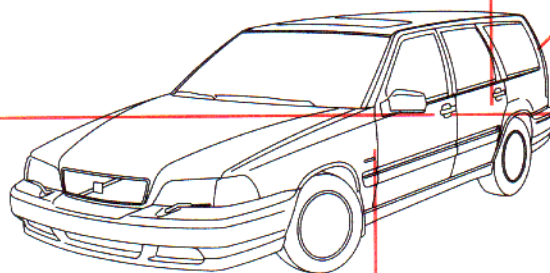
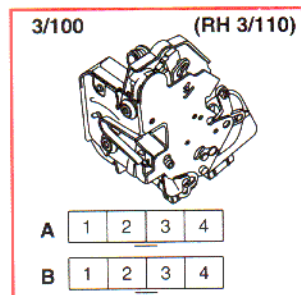
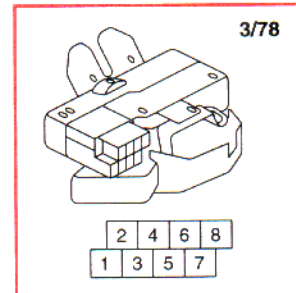
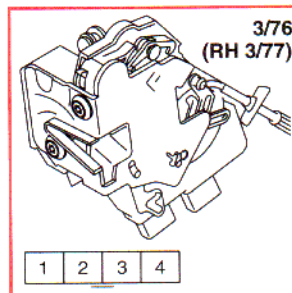
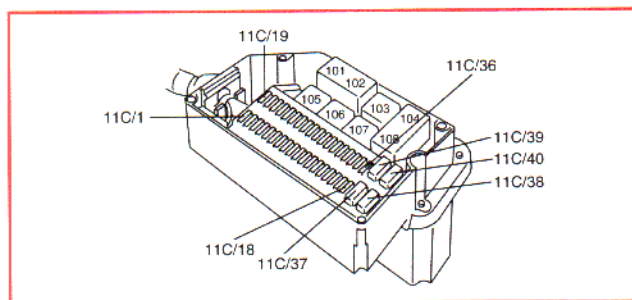


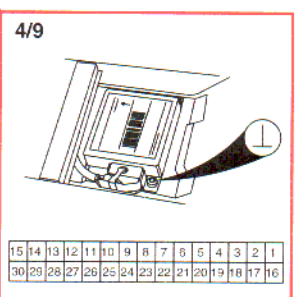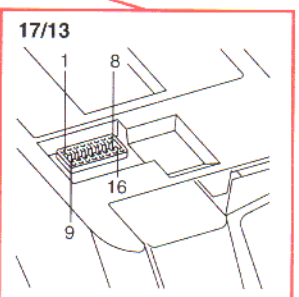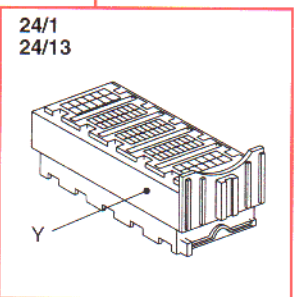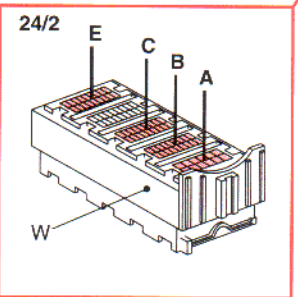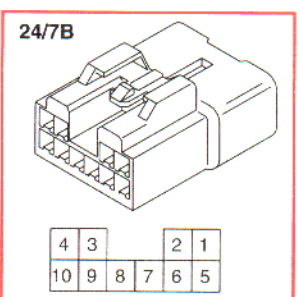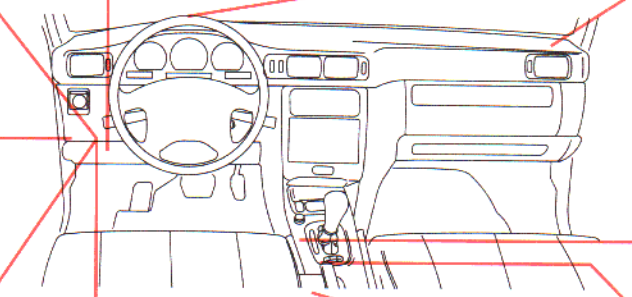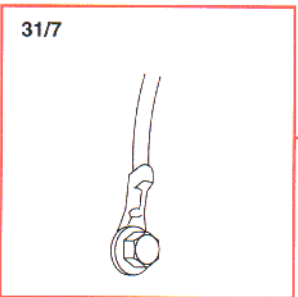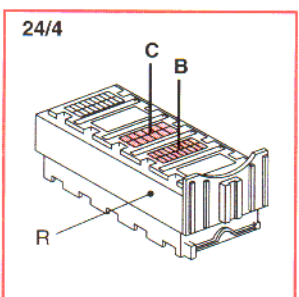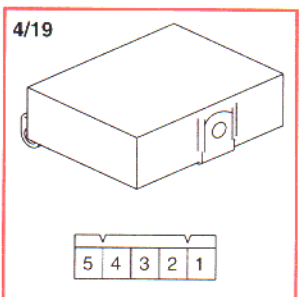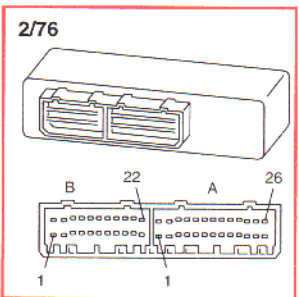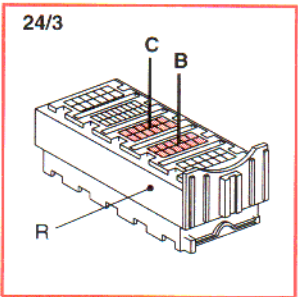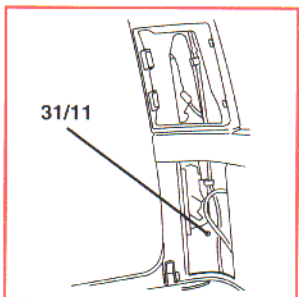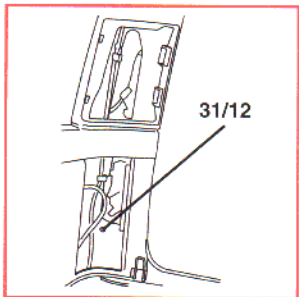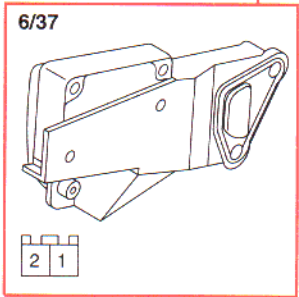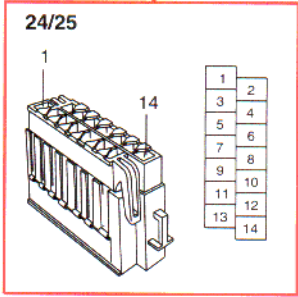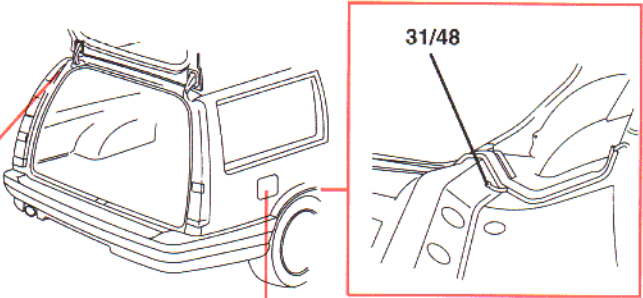














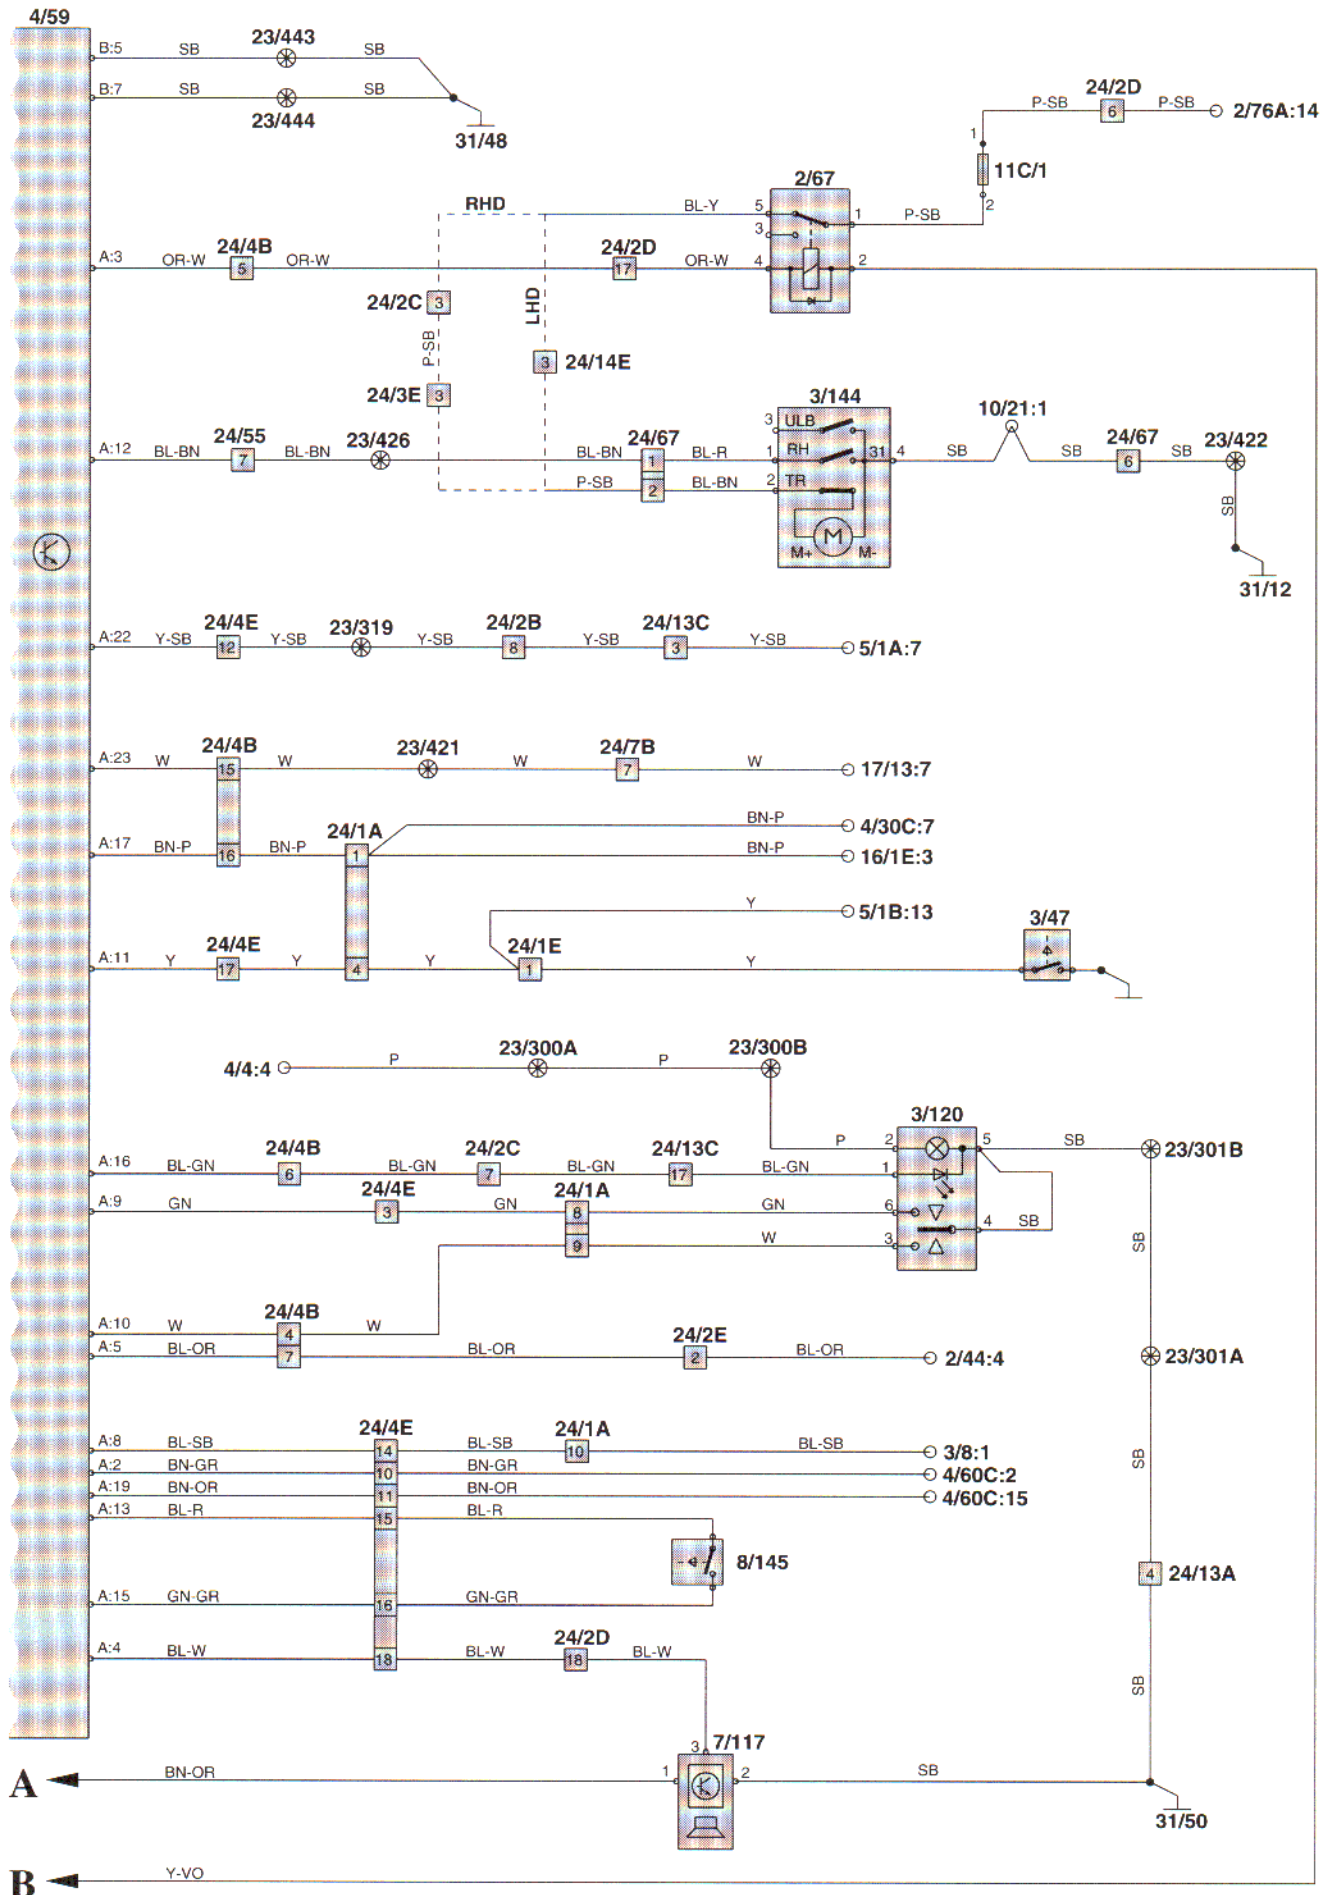


Soft top operation

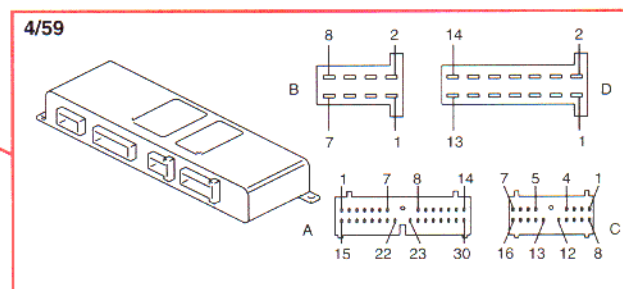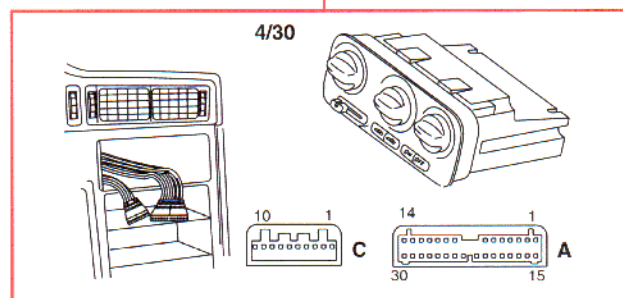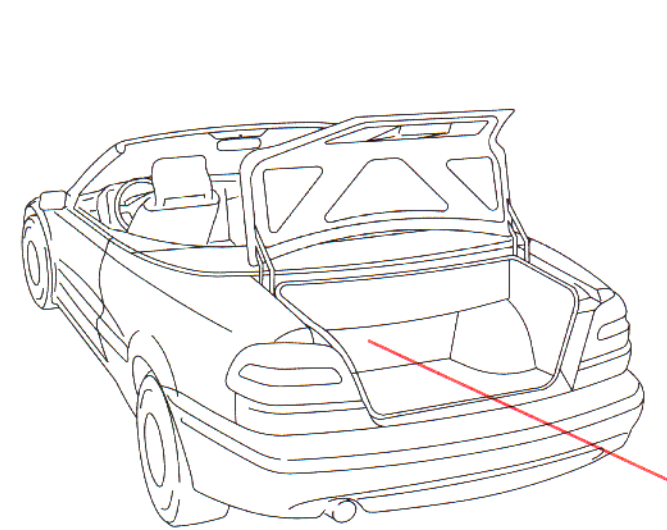
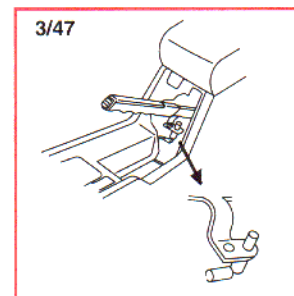
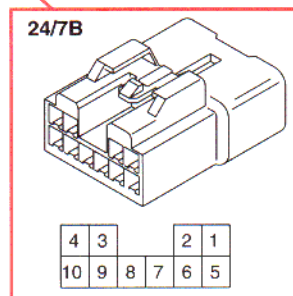
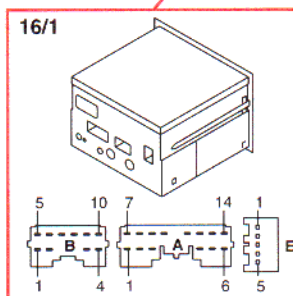
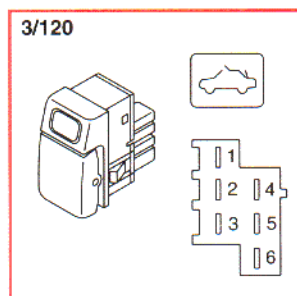
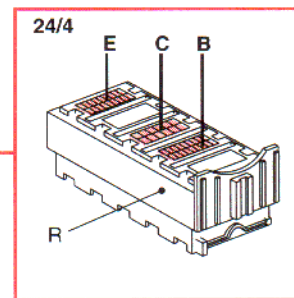
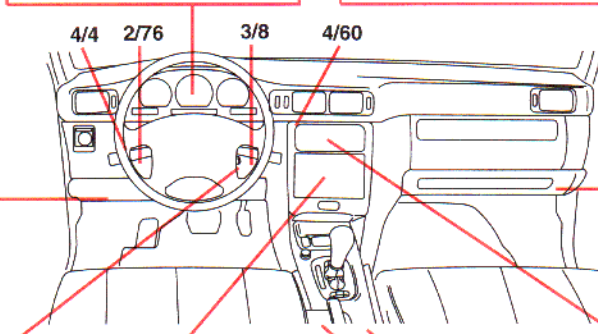
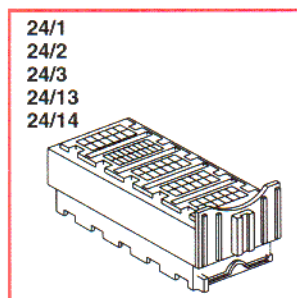
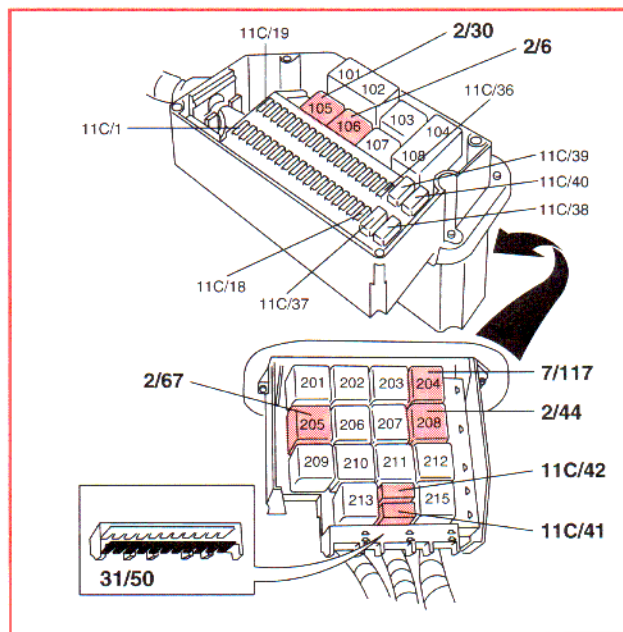
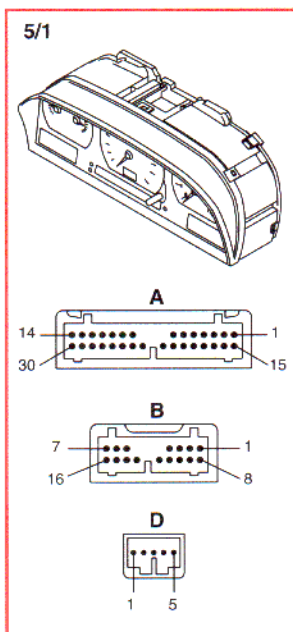
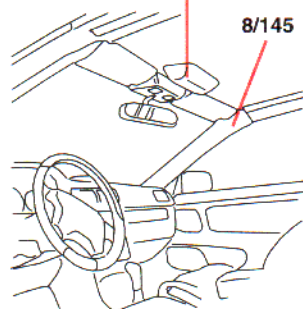
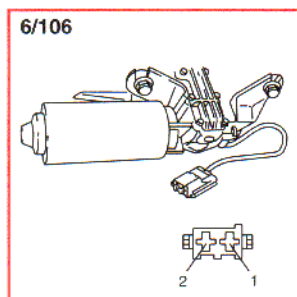


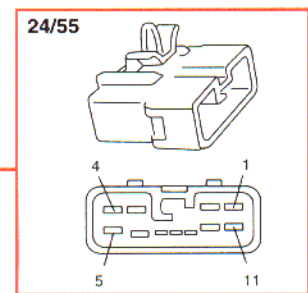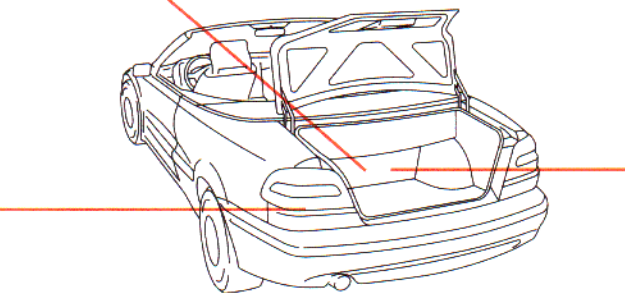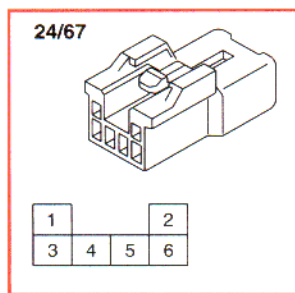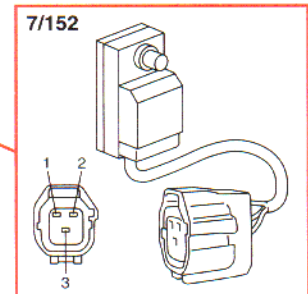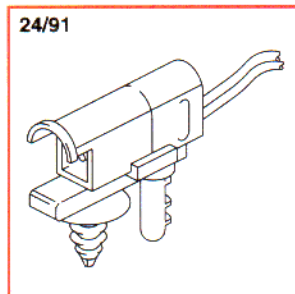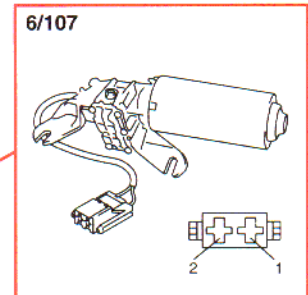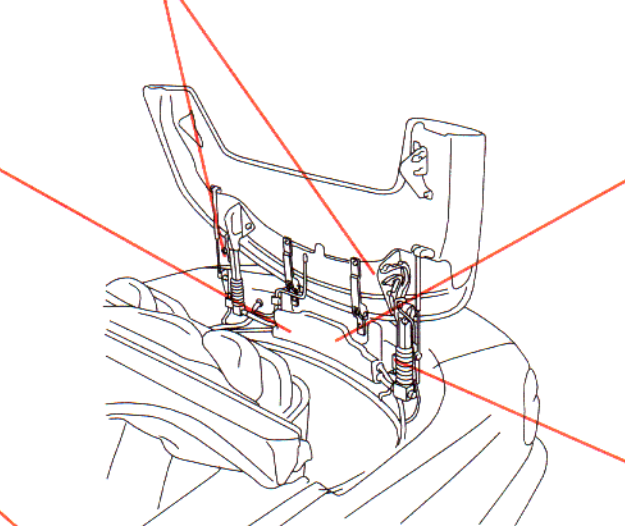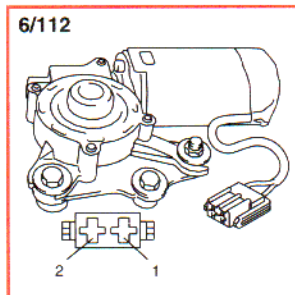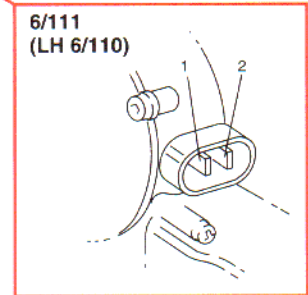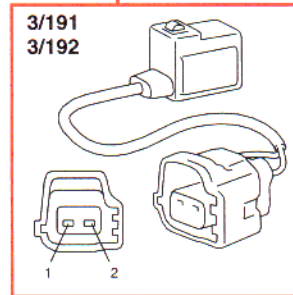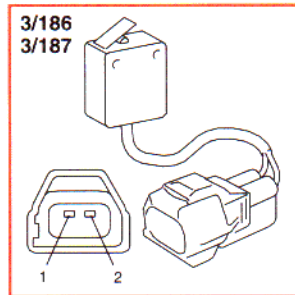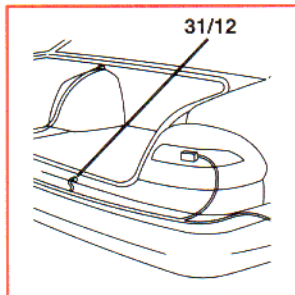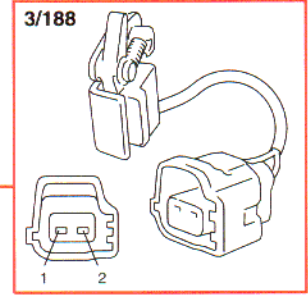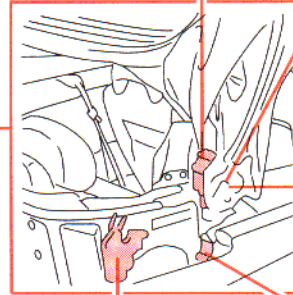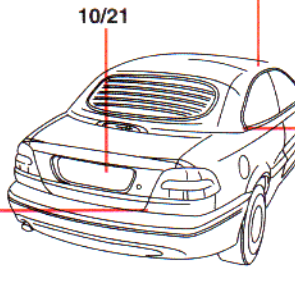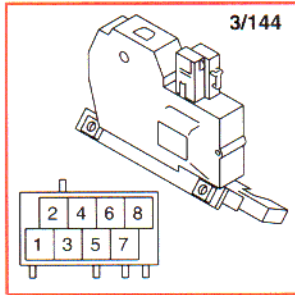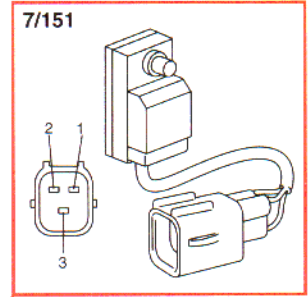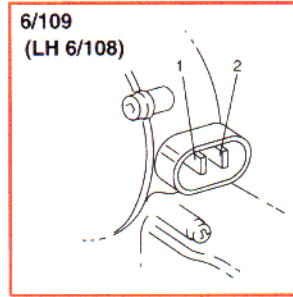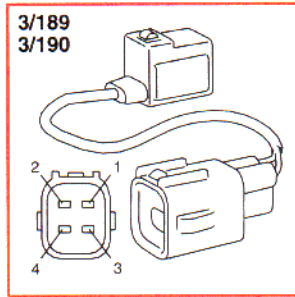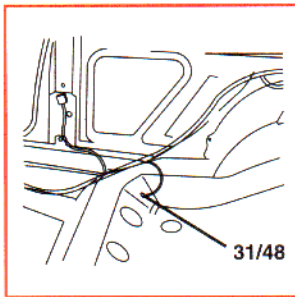

















Power windows C70 Convertible

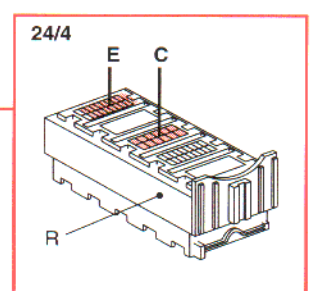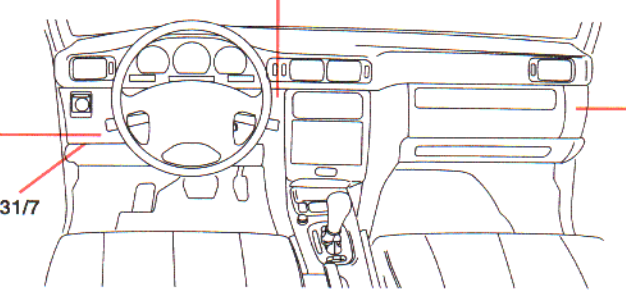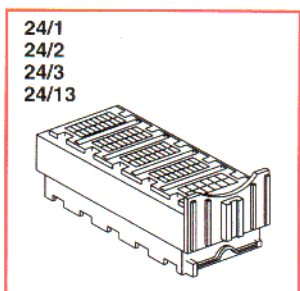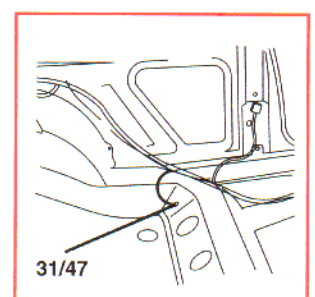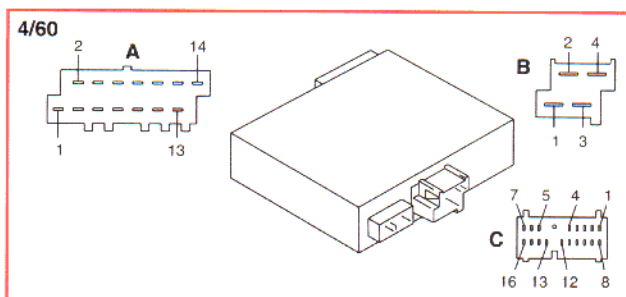
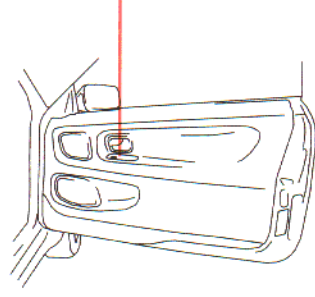
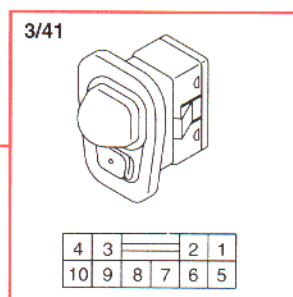
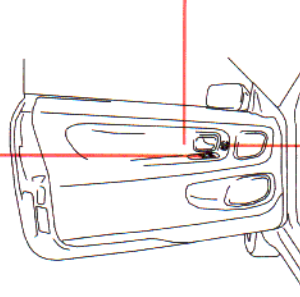
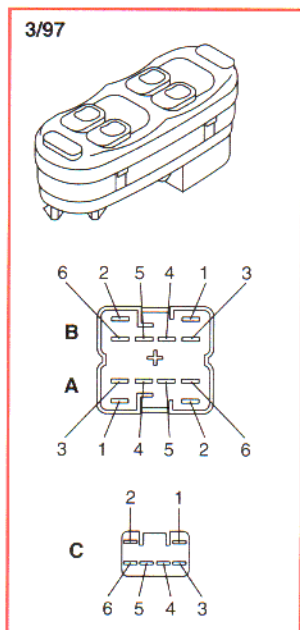
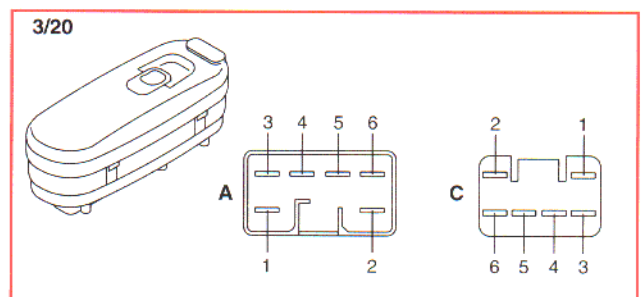
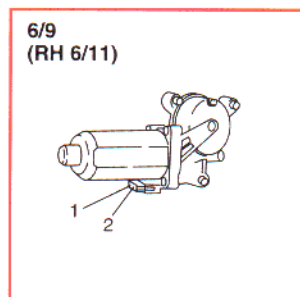
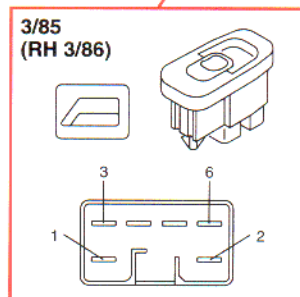
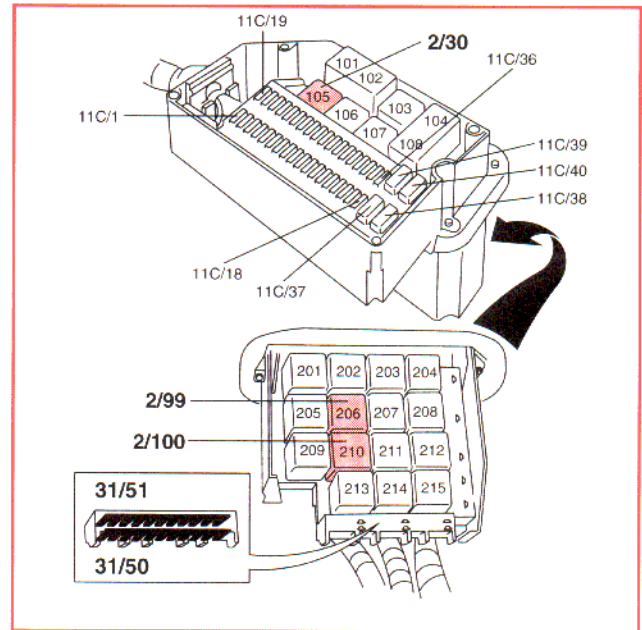
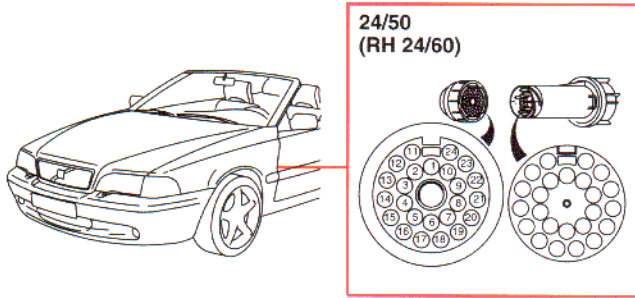


Power windows C70 coupé

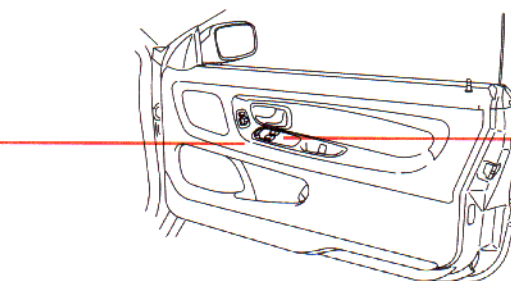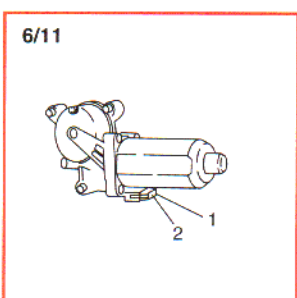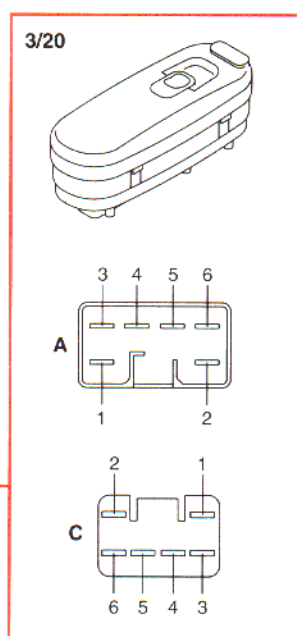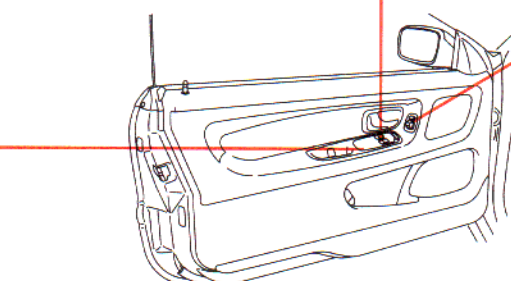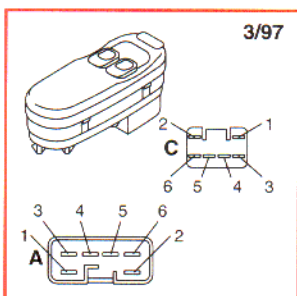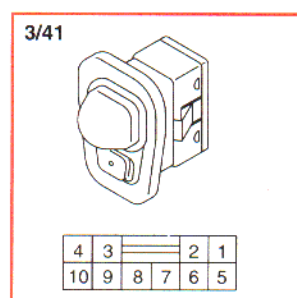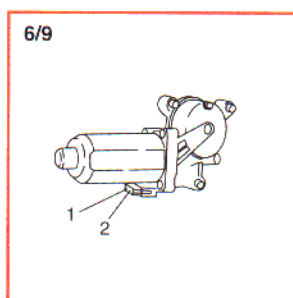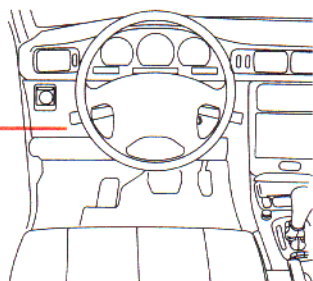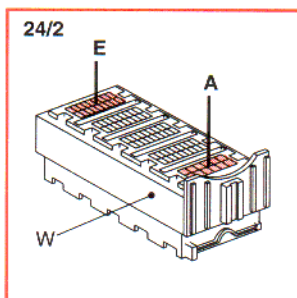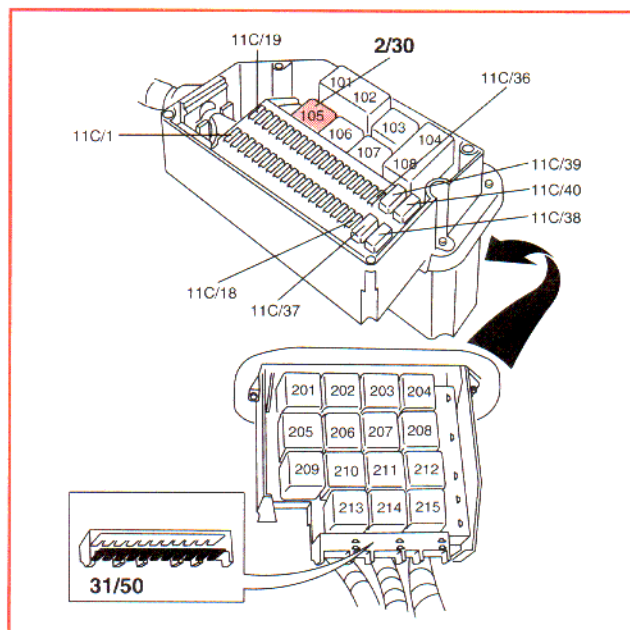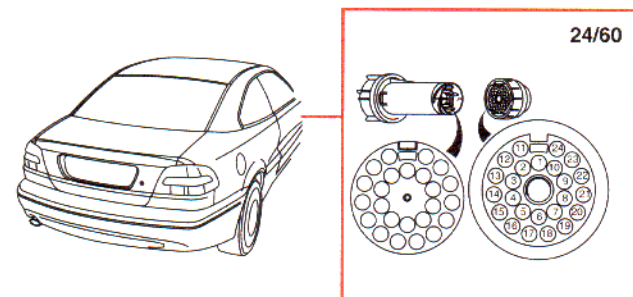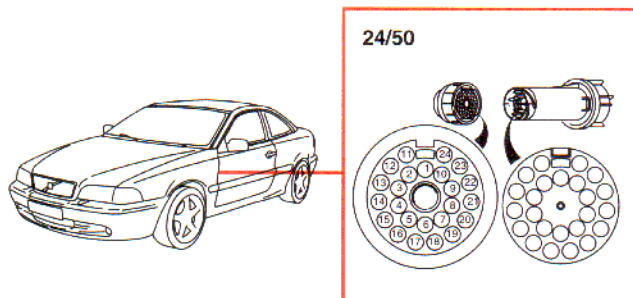


Power windows S70, V70

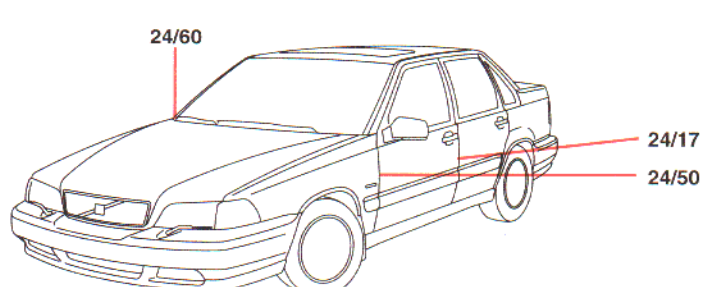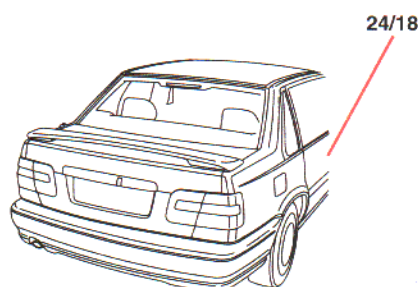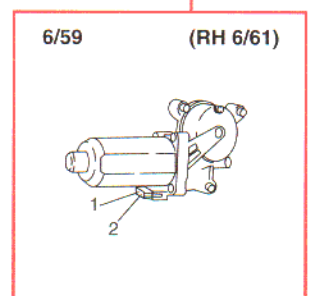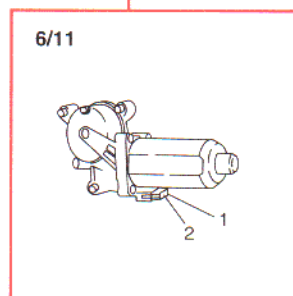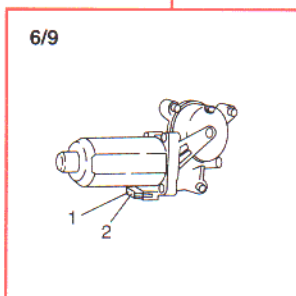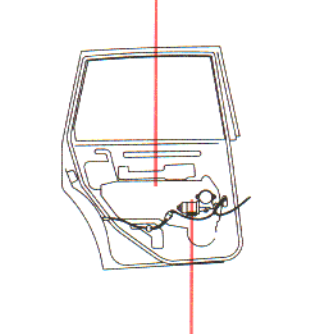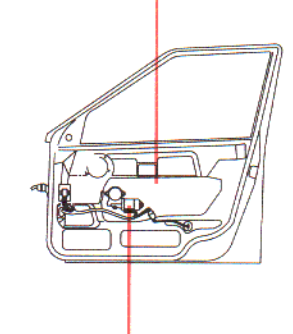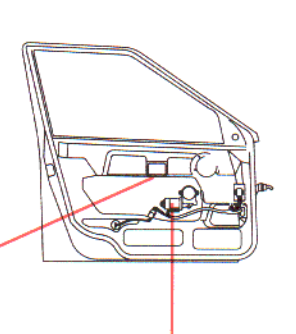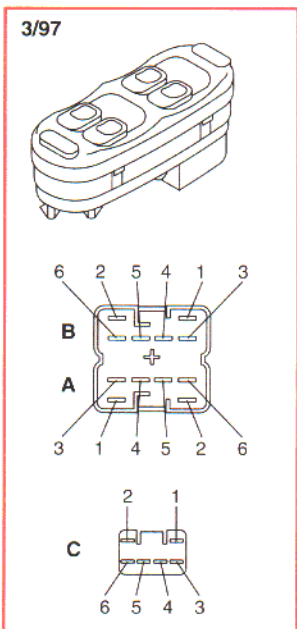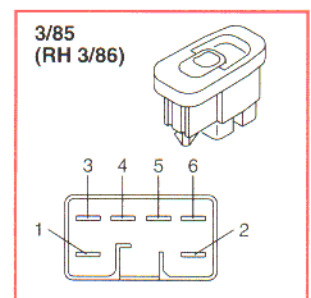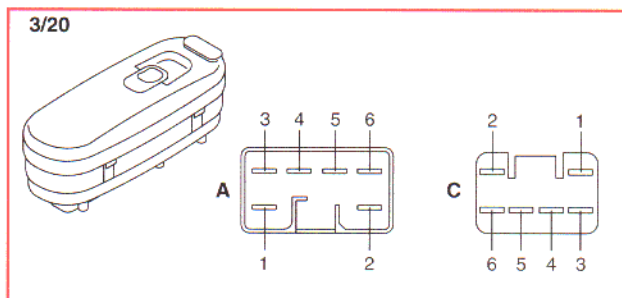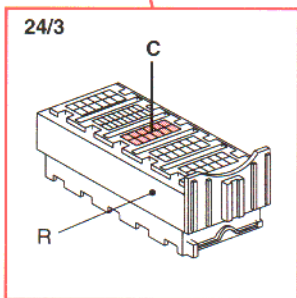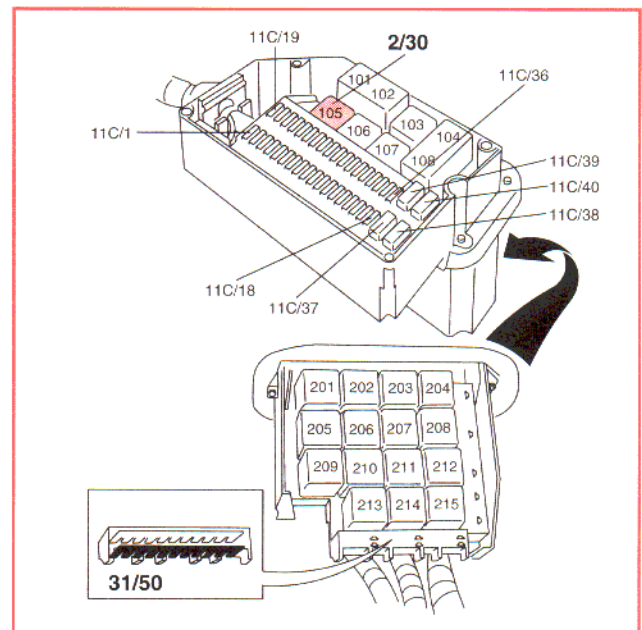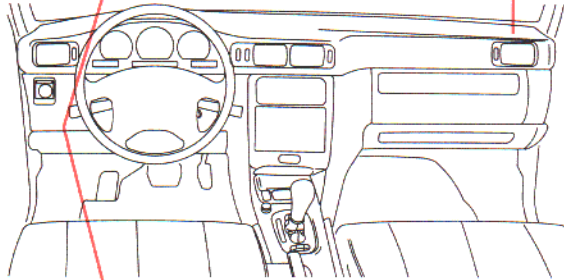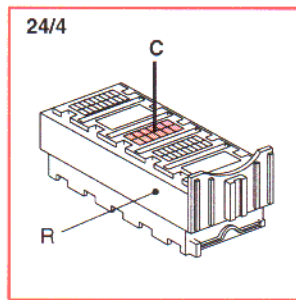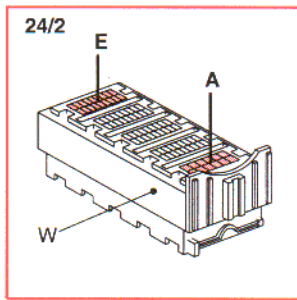

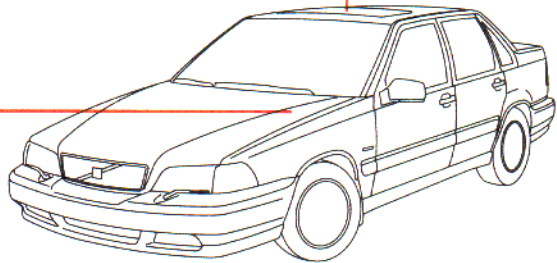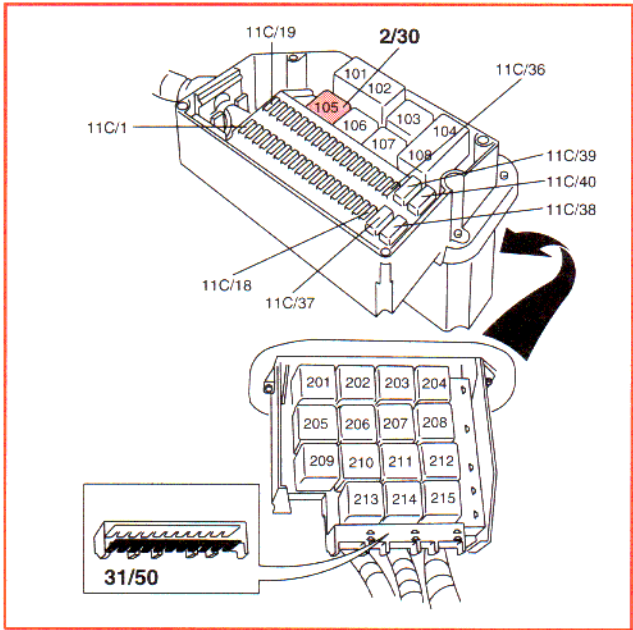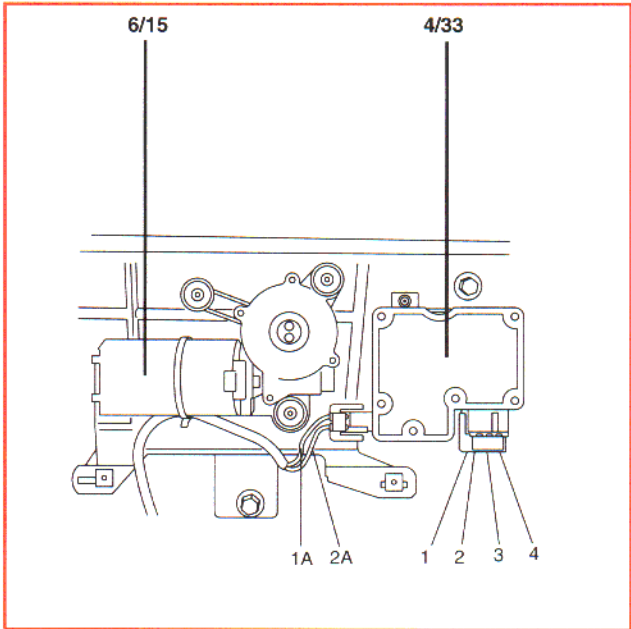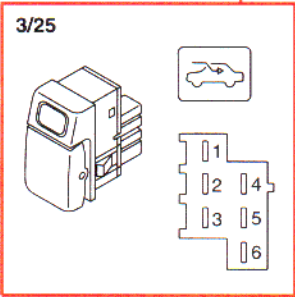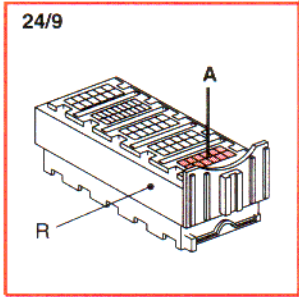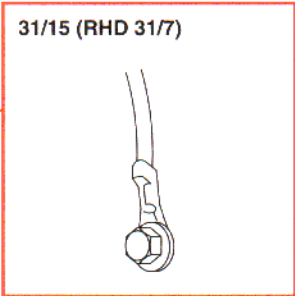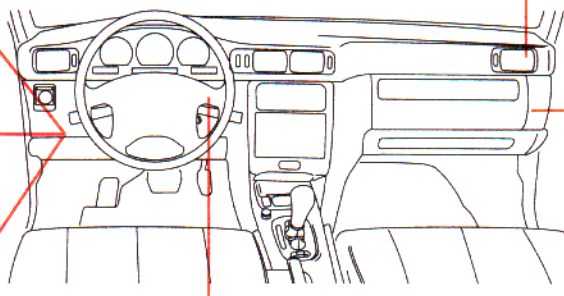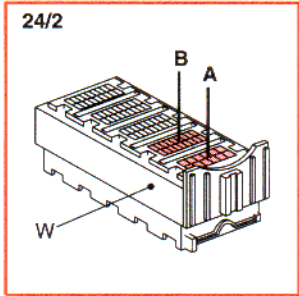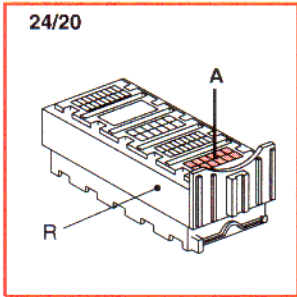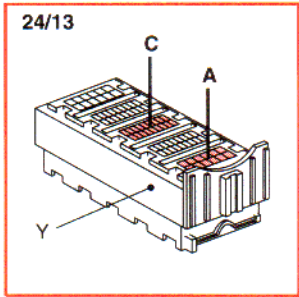


Heated rear window and heated door mirrors C70 Convertible


24/75B

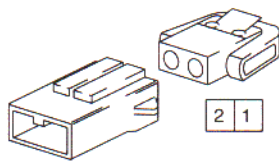


24/55

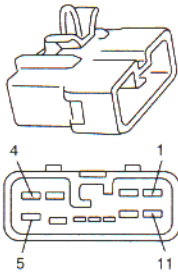


9/2

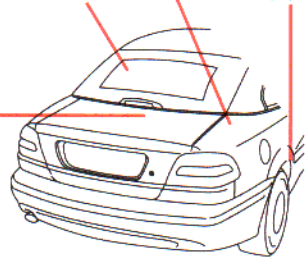


31/48

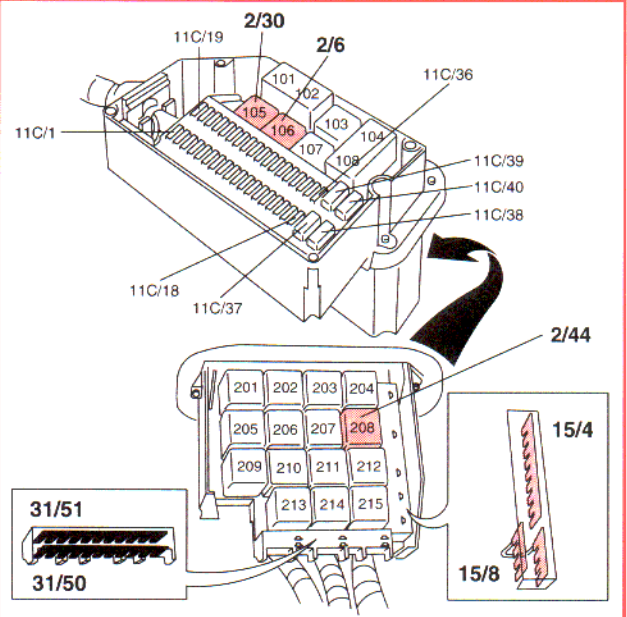


24/14

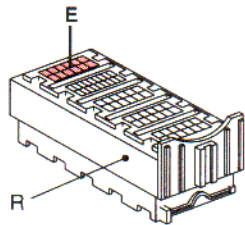


24/2

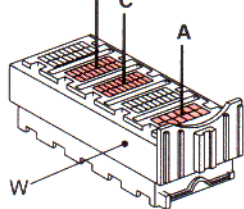



24/13

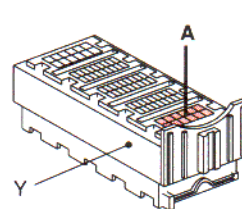


3/8

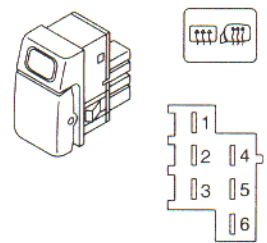


31/7

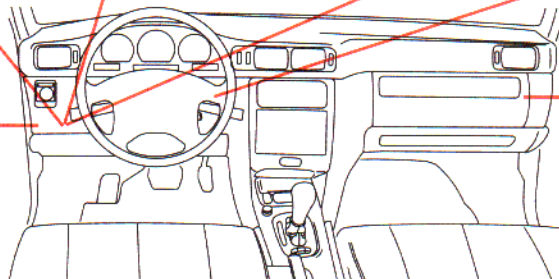


24/4

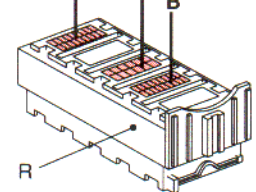


6/13
(RH 6/14)

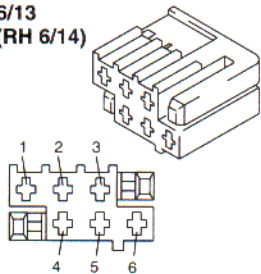


4/59

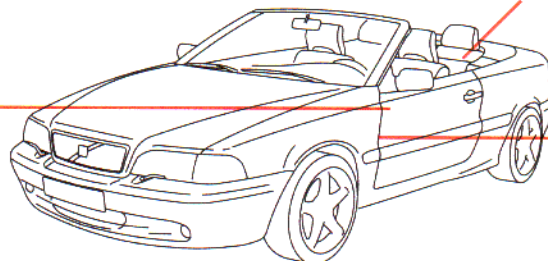


24/50
RH 24/60)













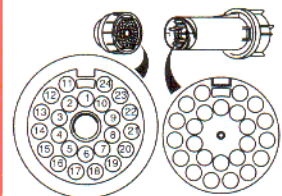


Heated rear window and heated door mirrors C70 coupé, S70, V70












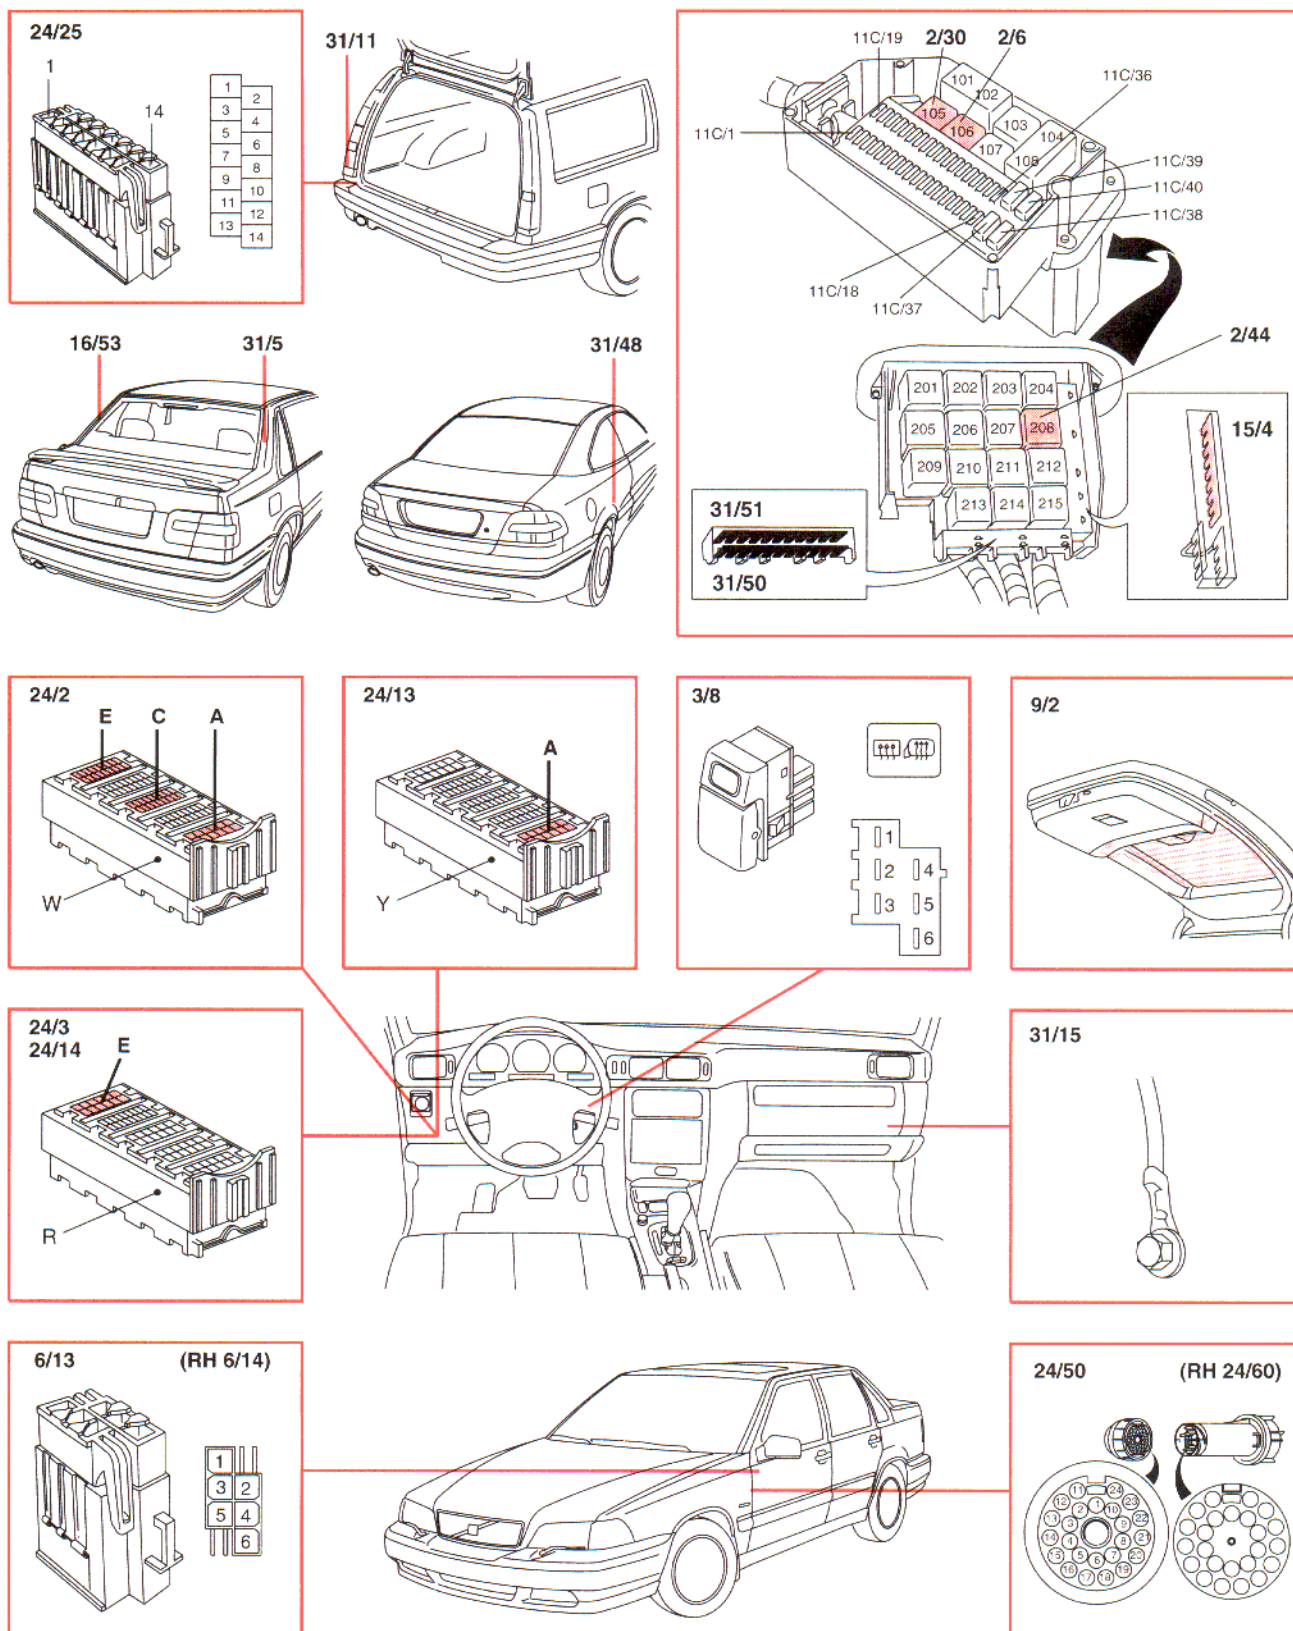


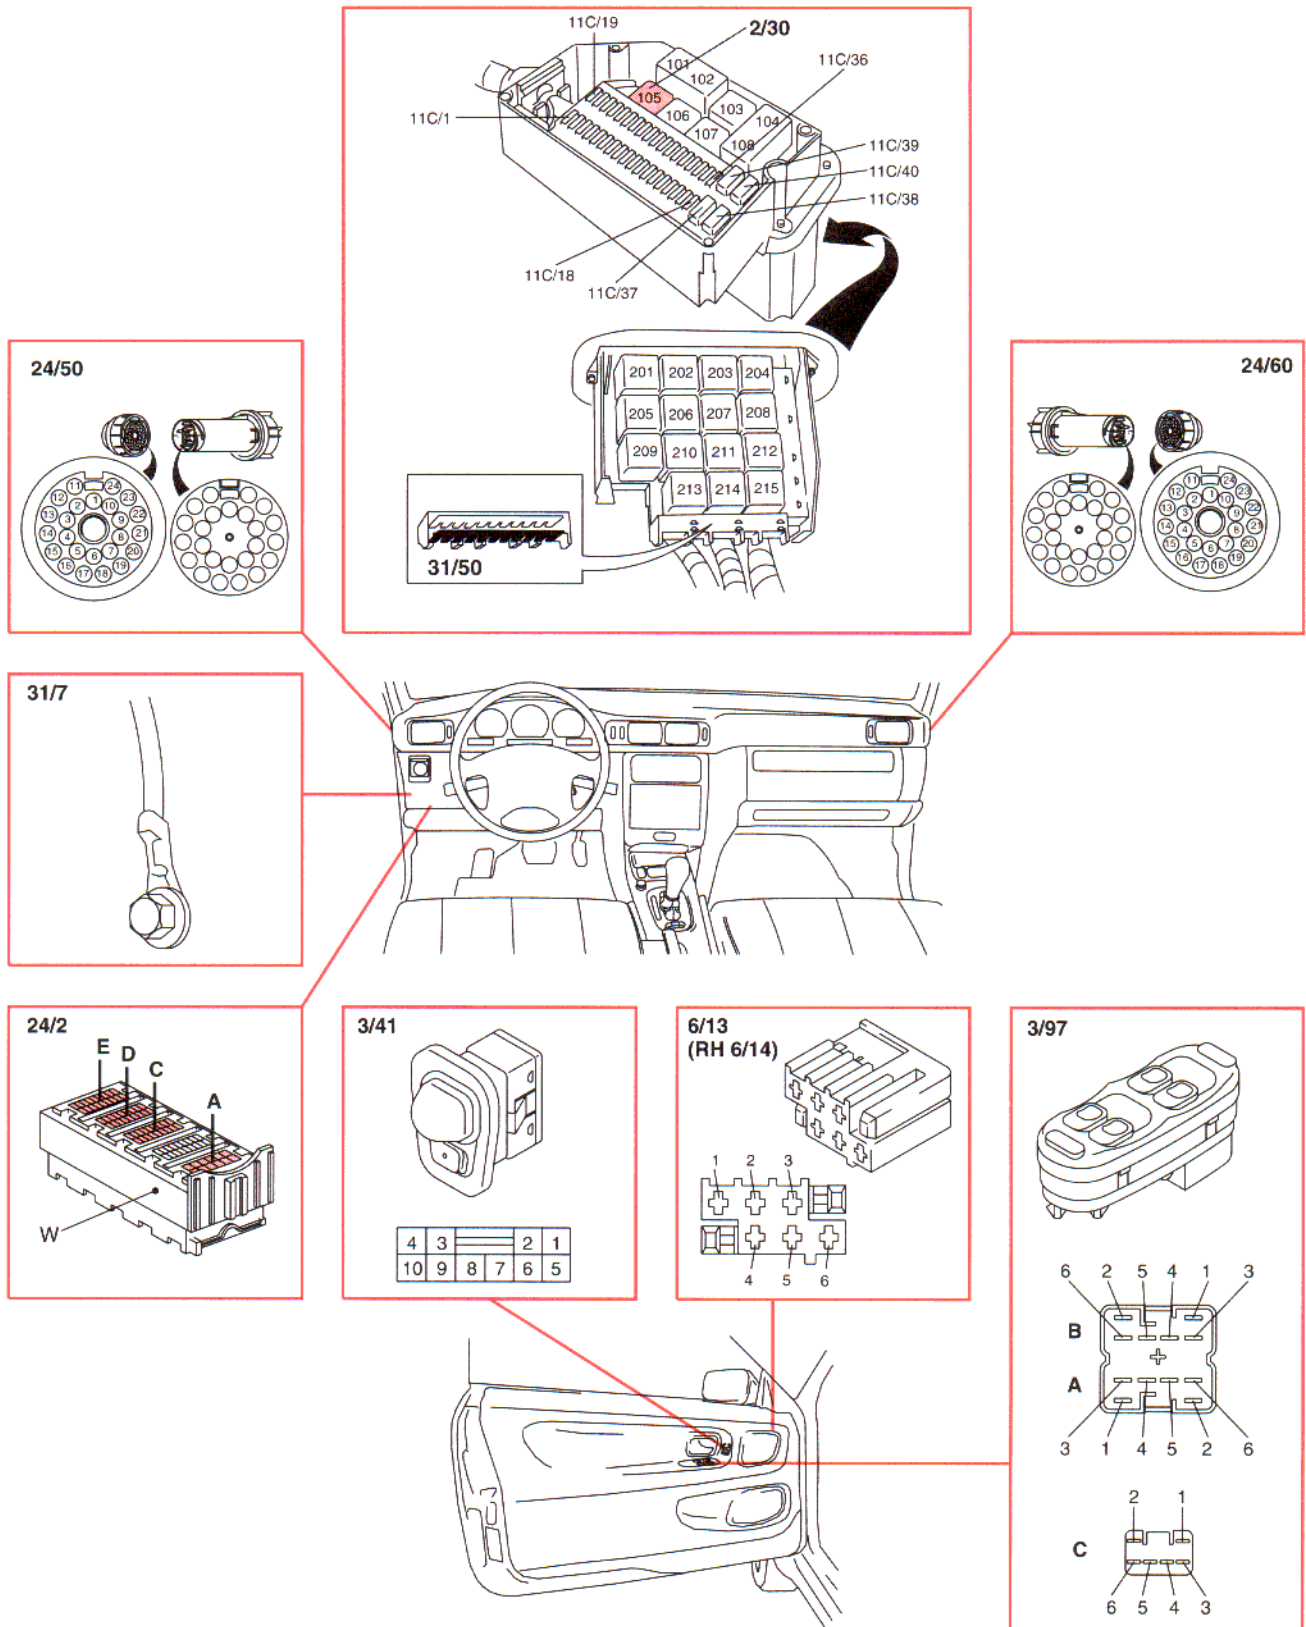











Electrical retracting door mirrors C70 Convertible

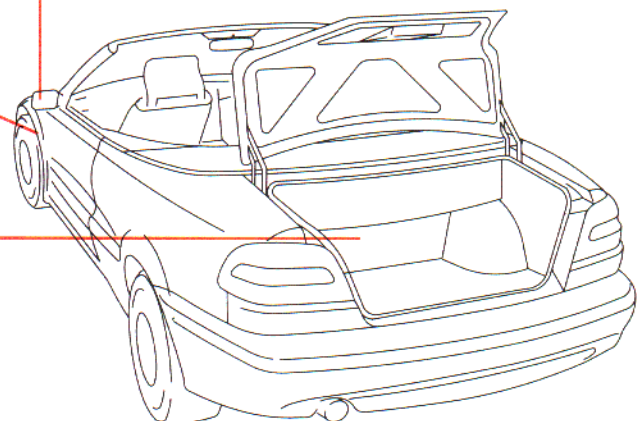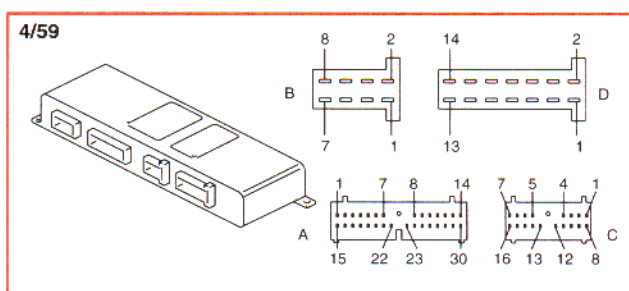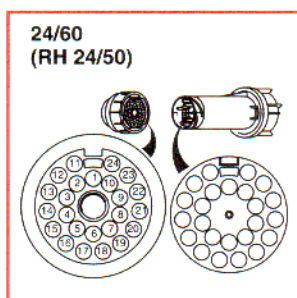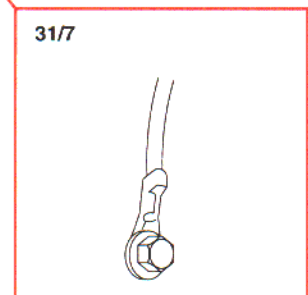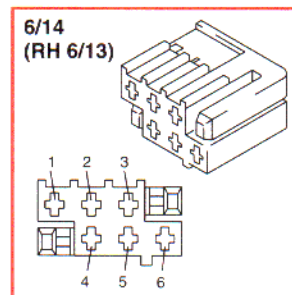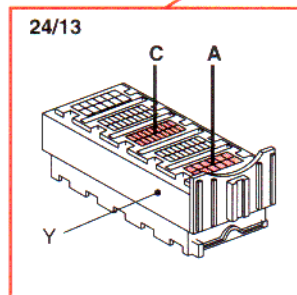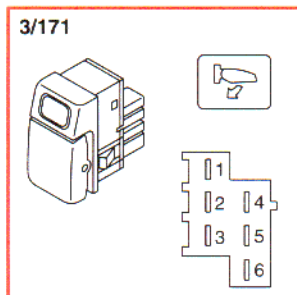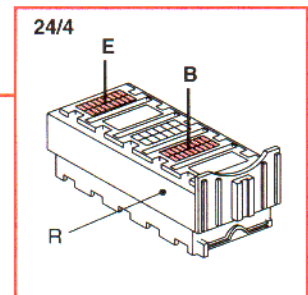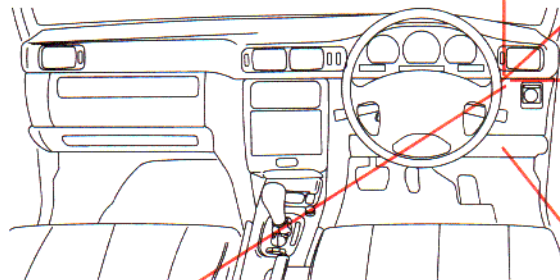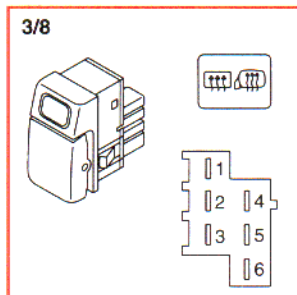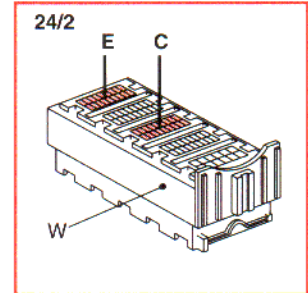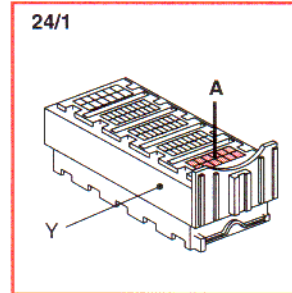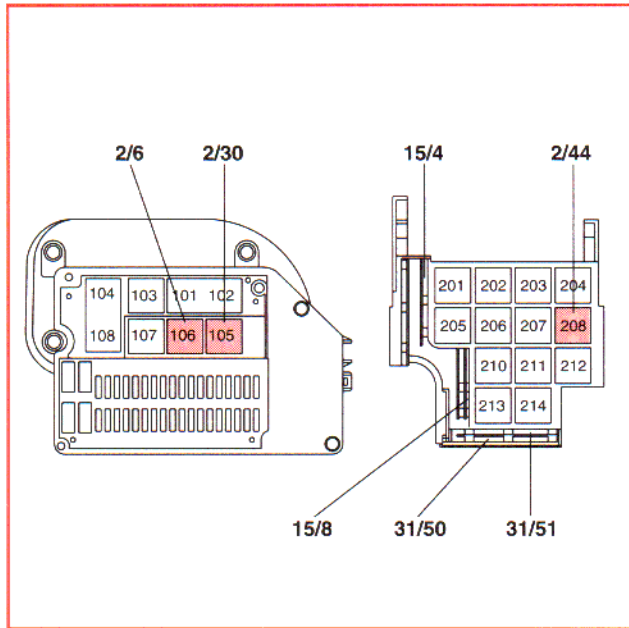










Electrical retracting door mirrors C70 coupé, S70, V70

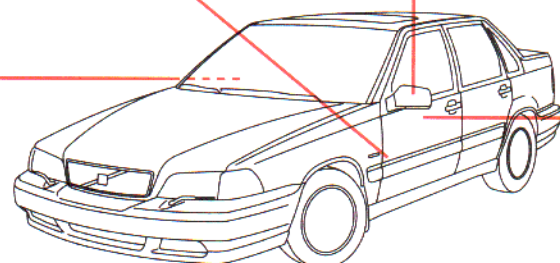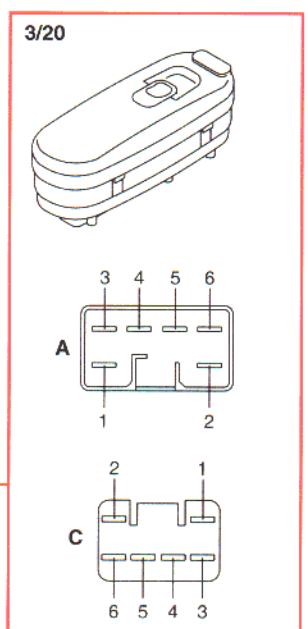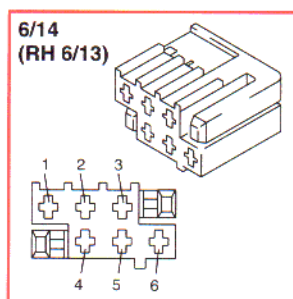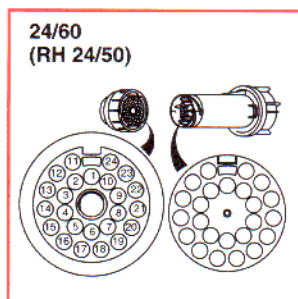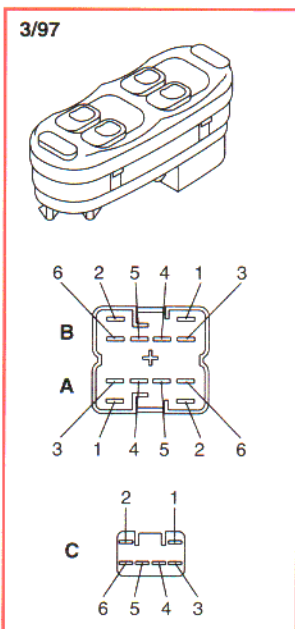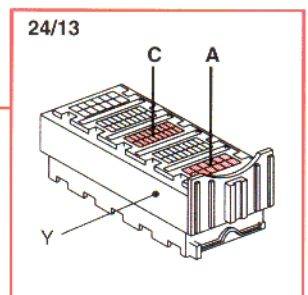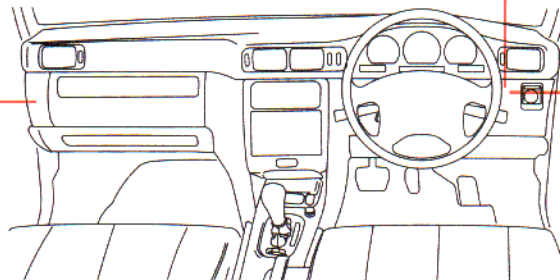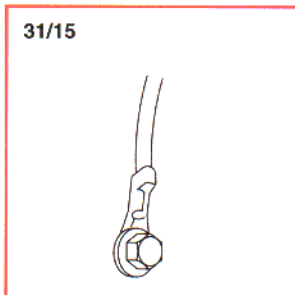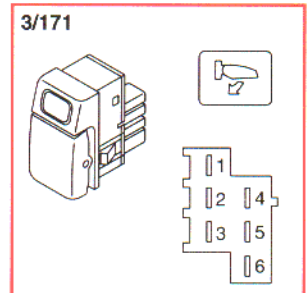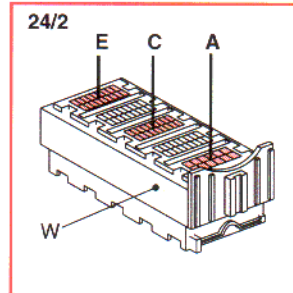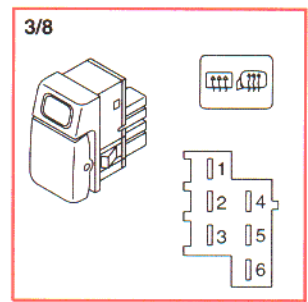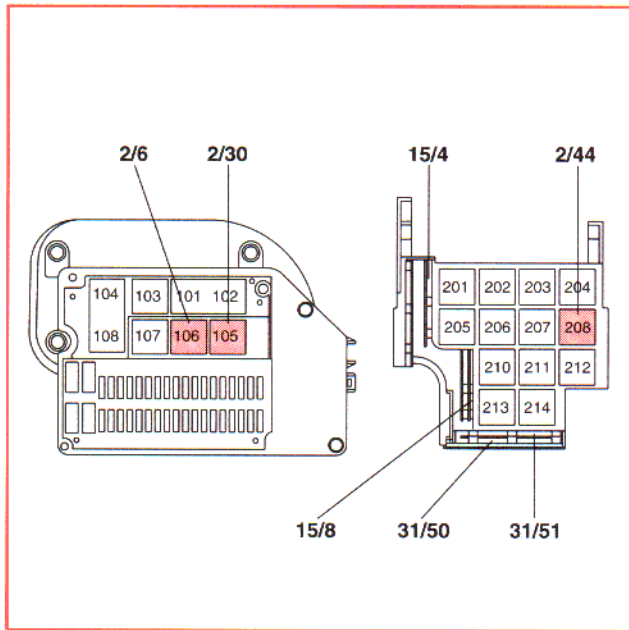












Electrically heated seats

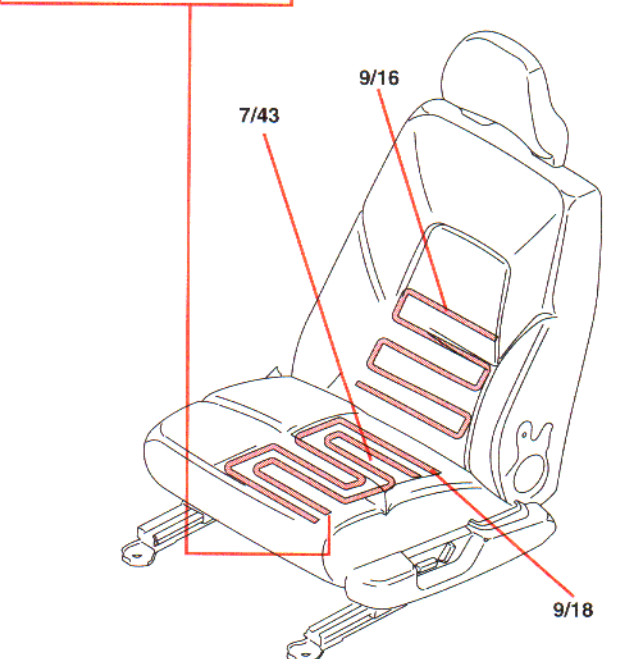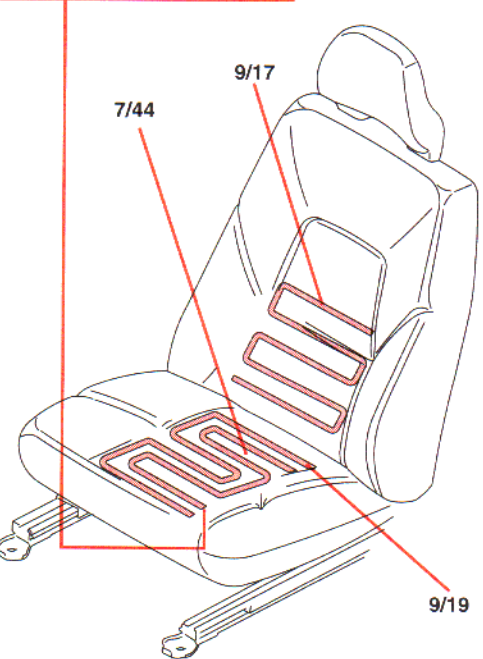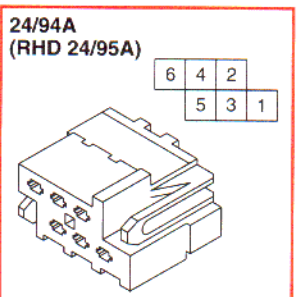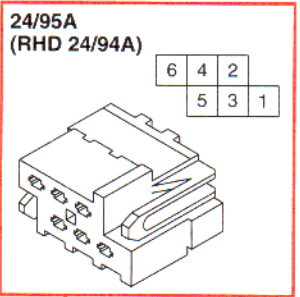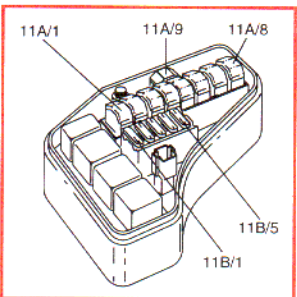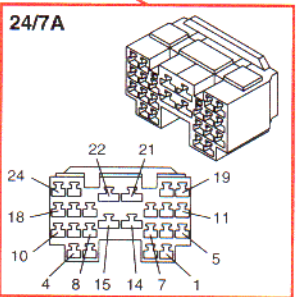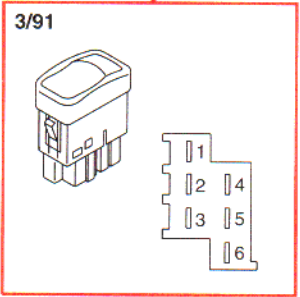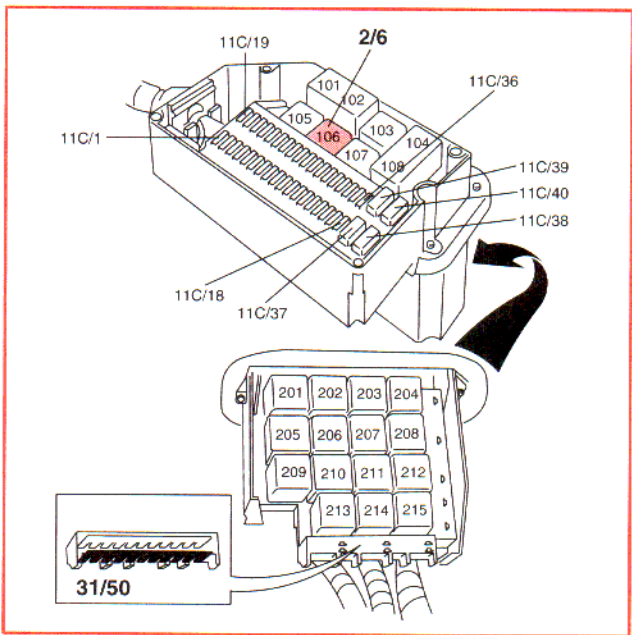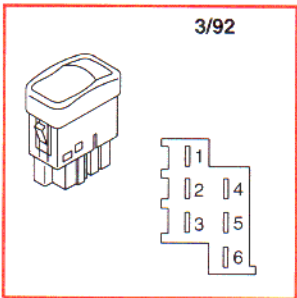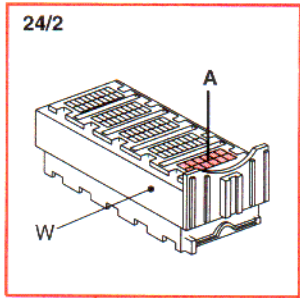







Heated rear seat

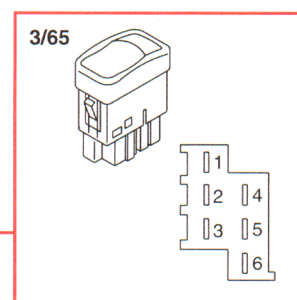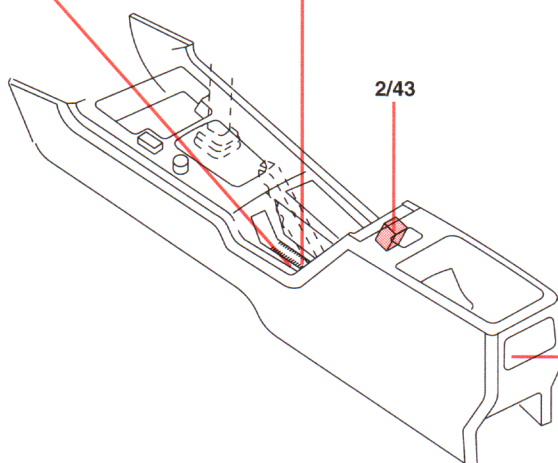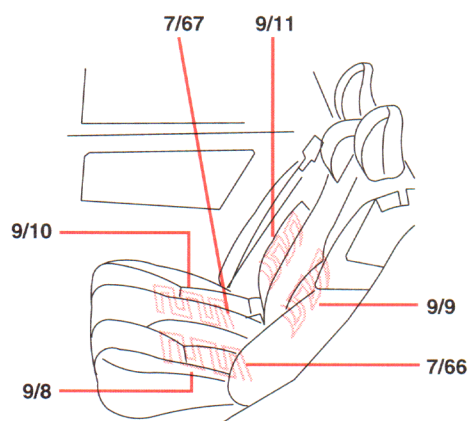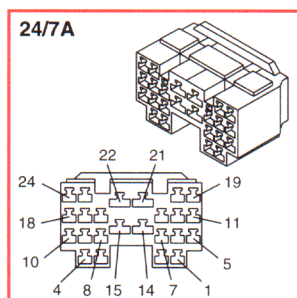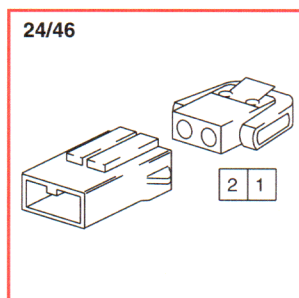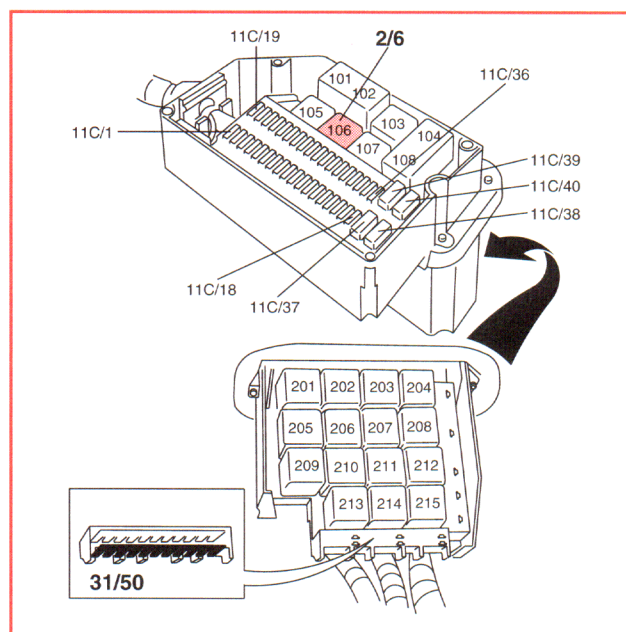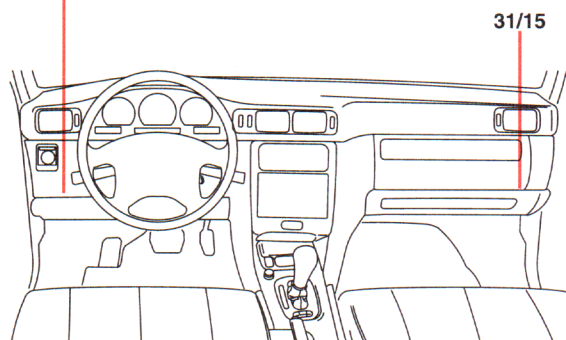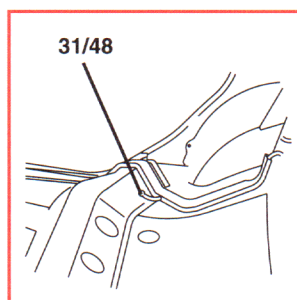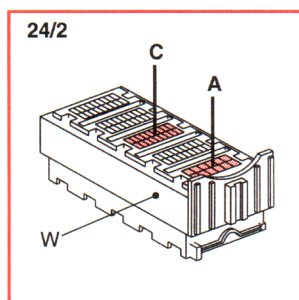


Power seats with memory






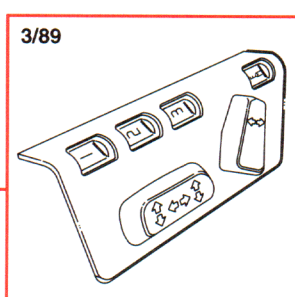
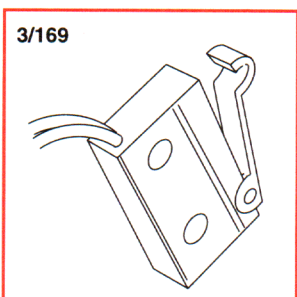
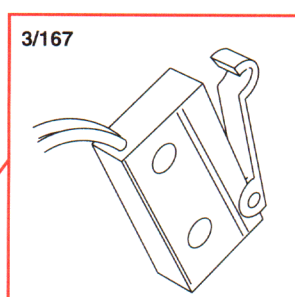
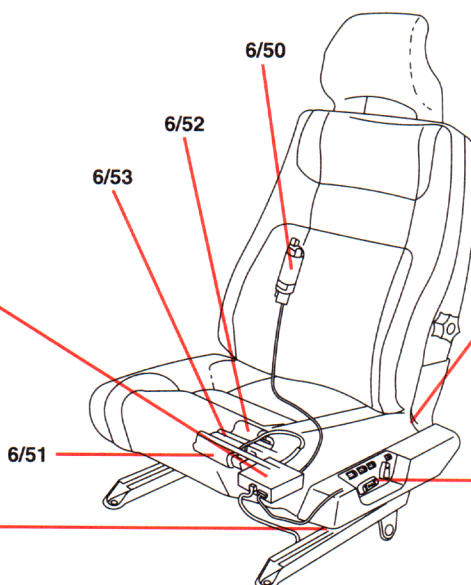
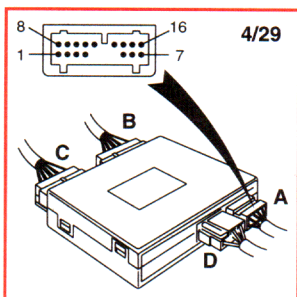
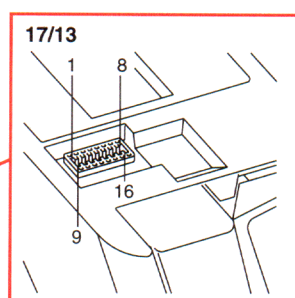
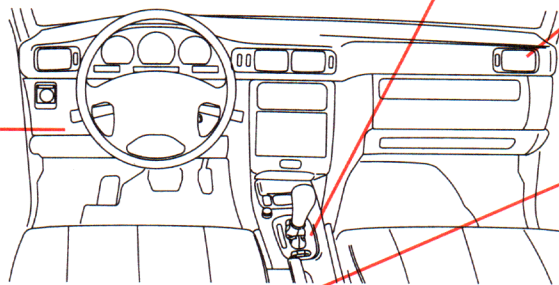
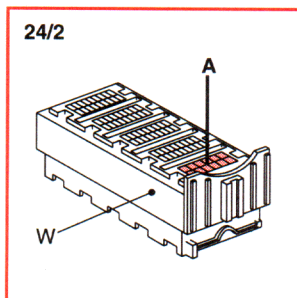
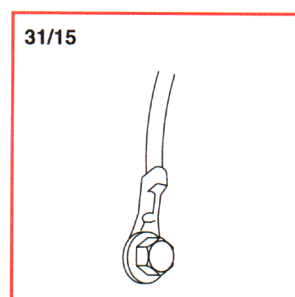
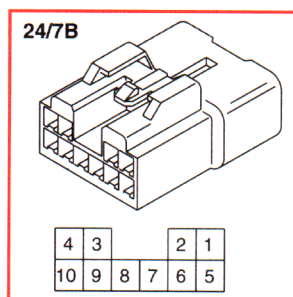
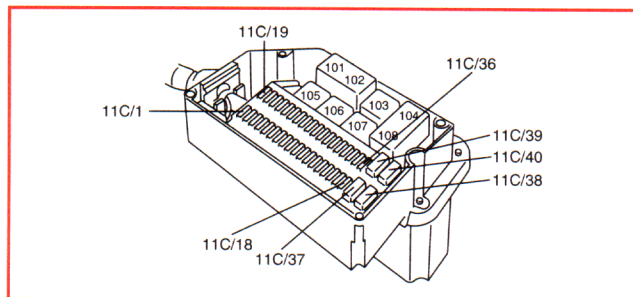


Power seats without memory











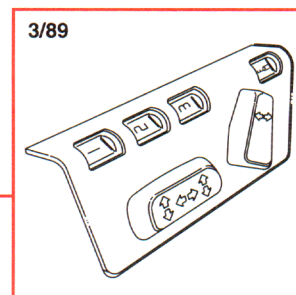
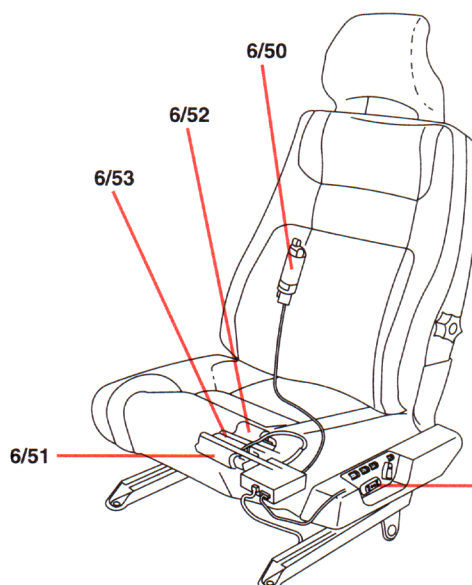
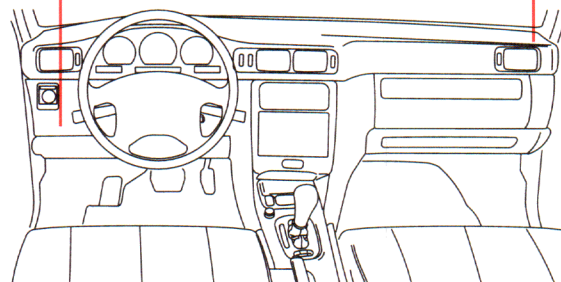
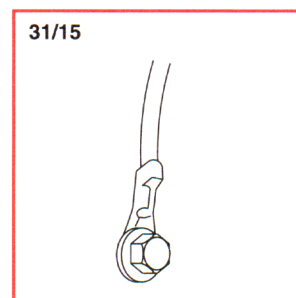
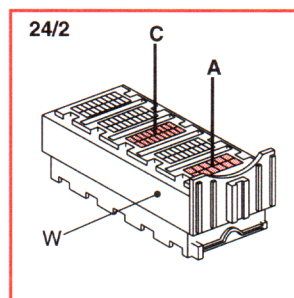
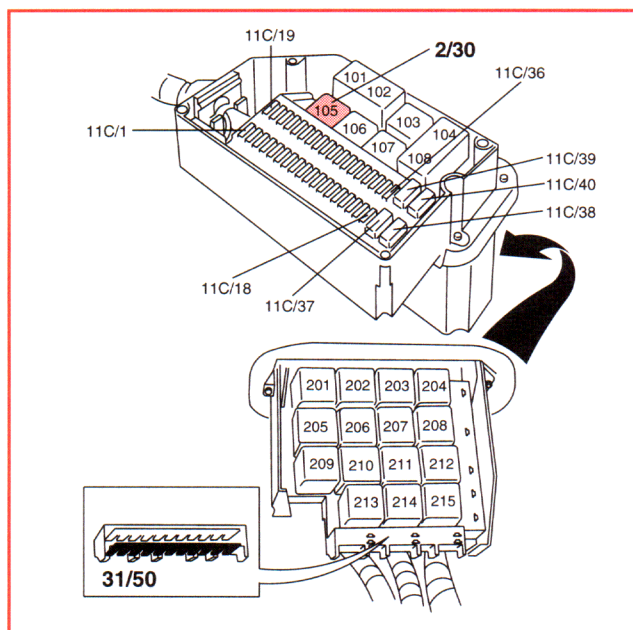


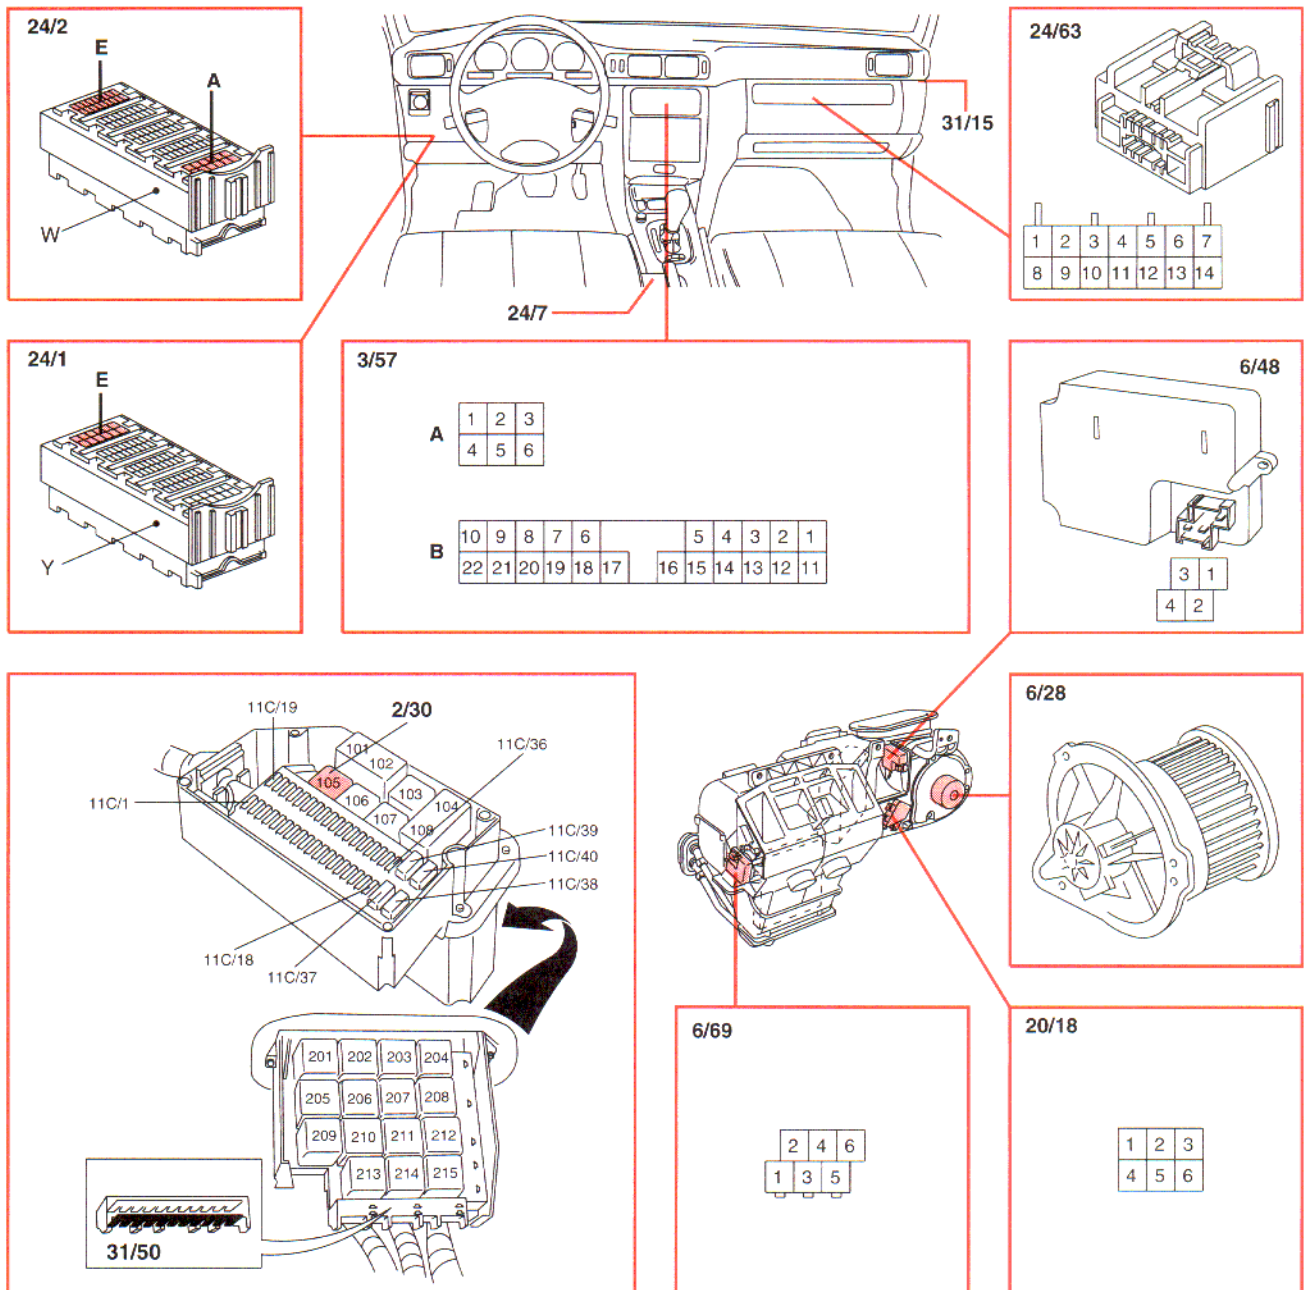


Manual climate control MCC Fenix 5.2, MSA 15.7

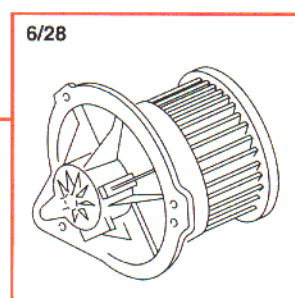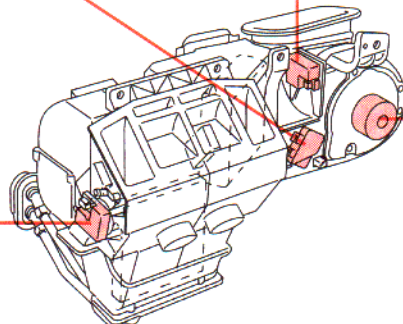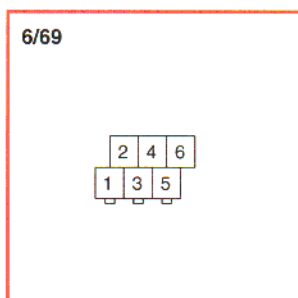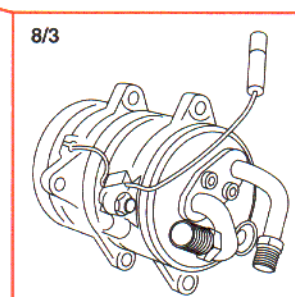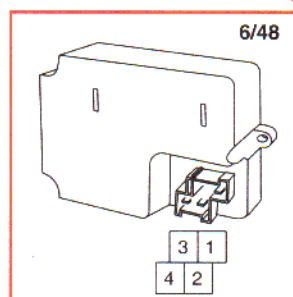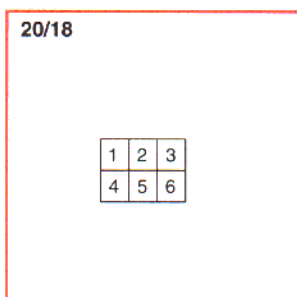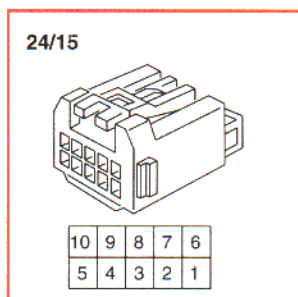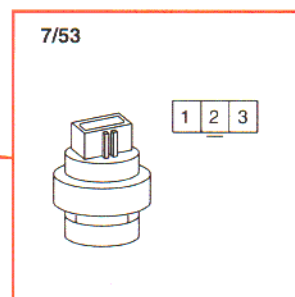
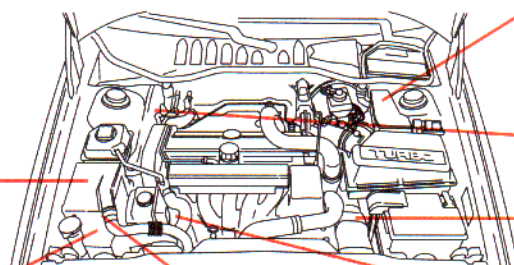
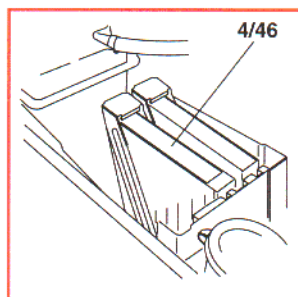
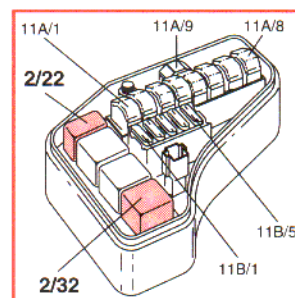
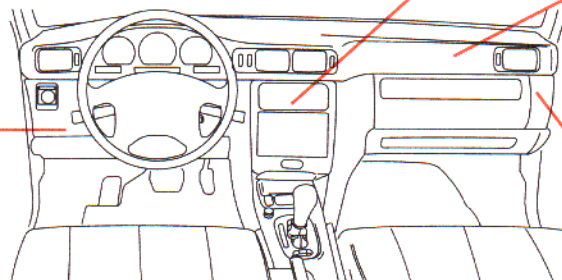
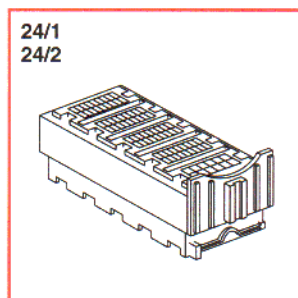
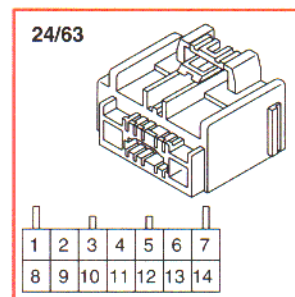
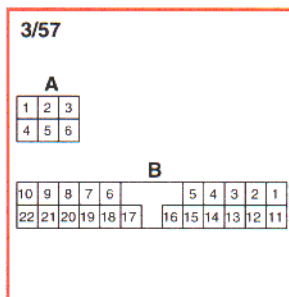
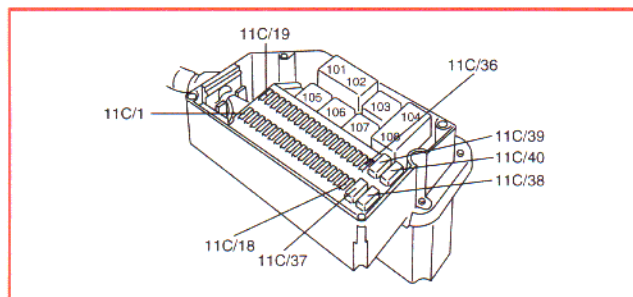













Manual climate control MCC Denso, ME7

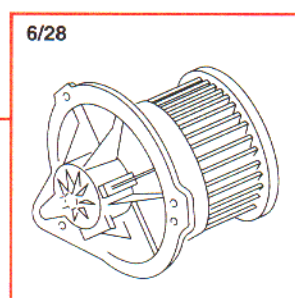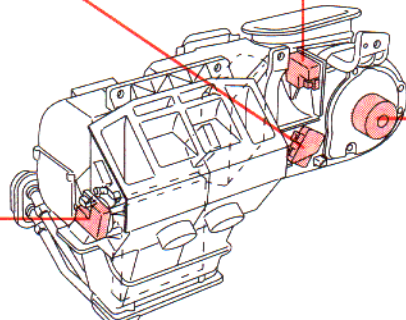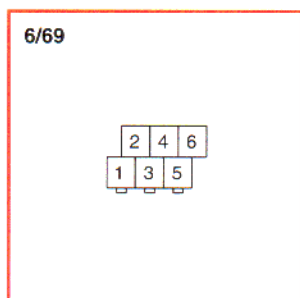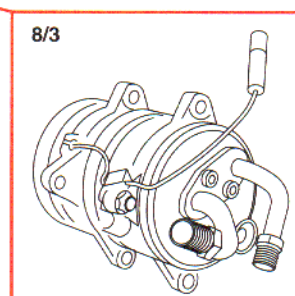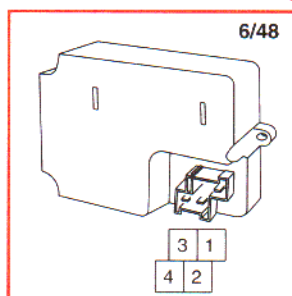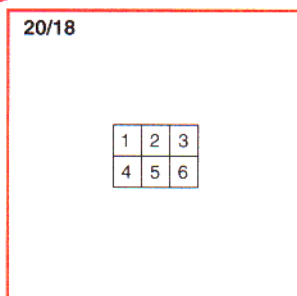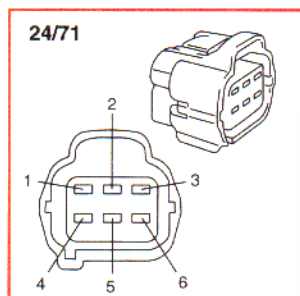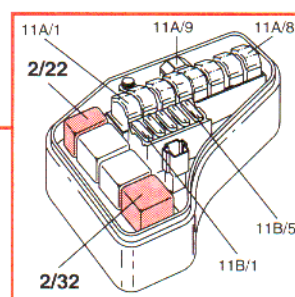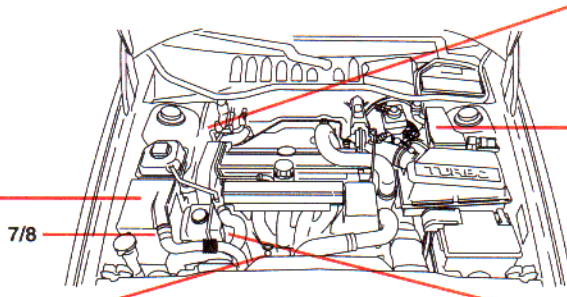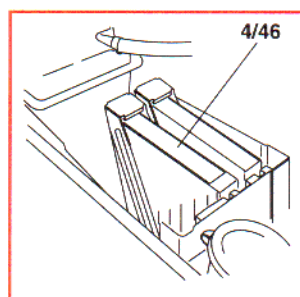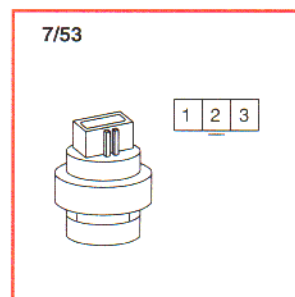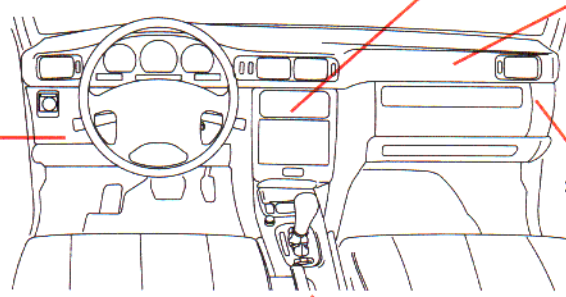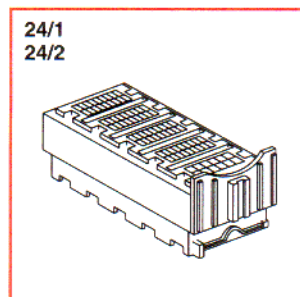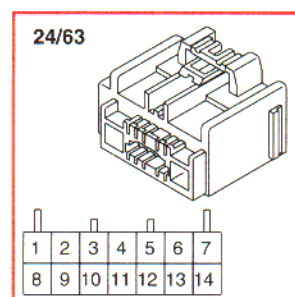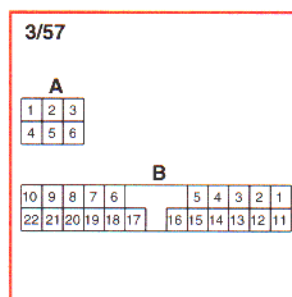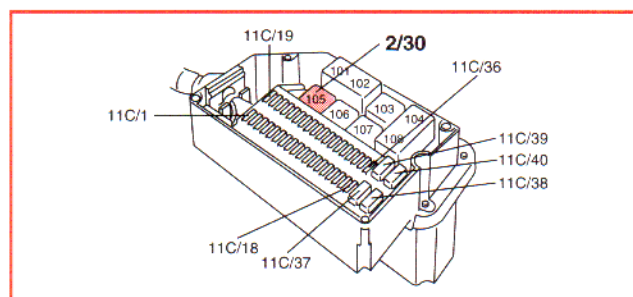












Electronic climate control ECC Fenix 5.2, MSA 15.7


















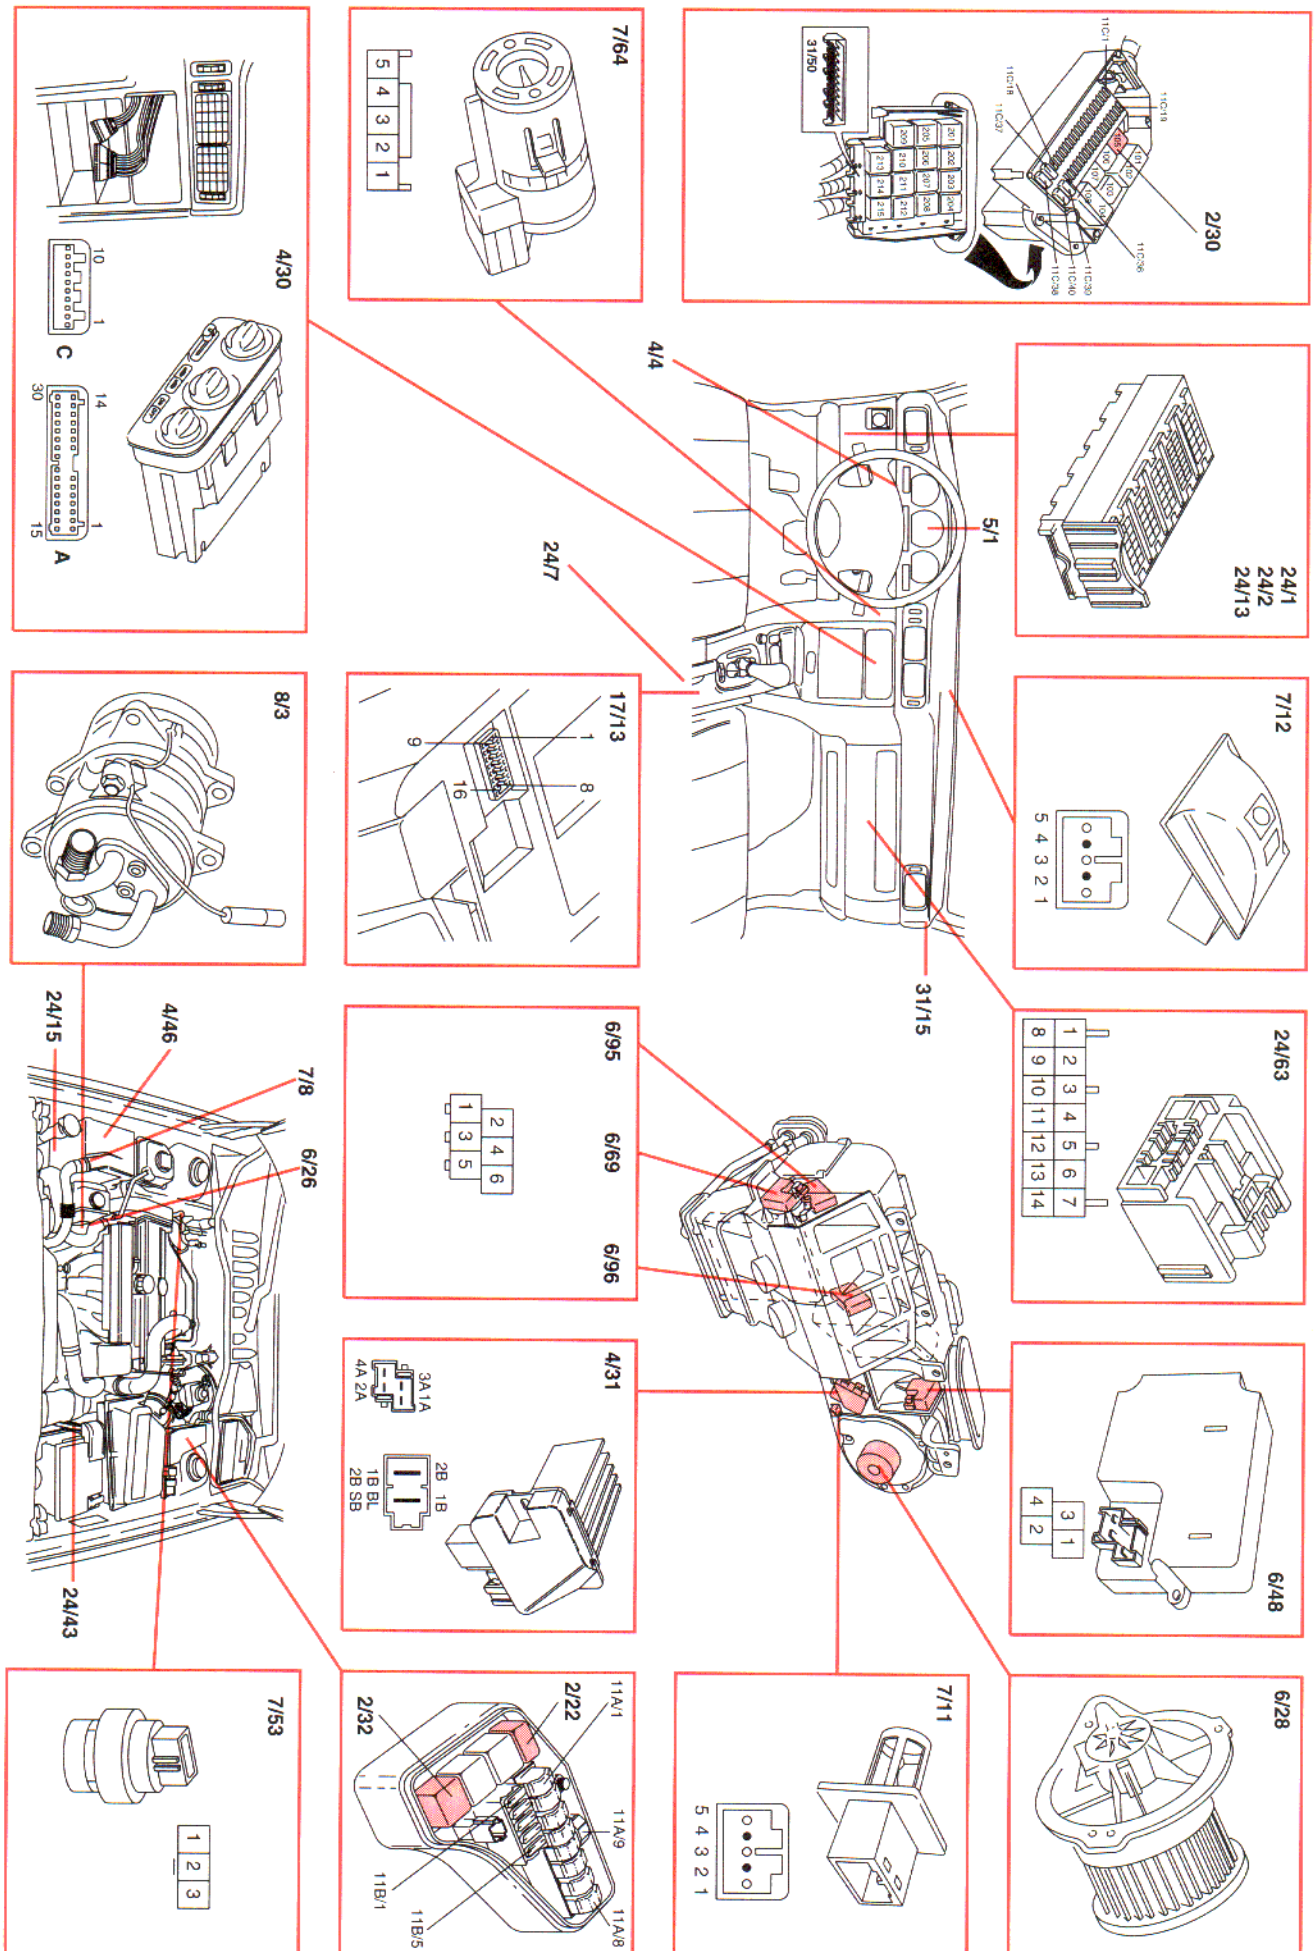


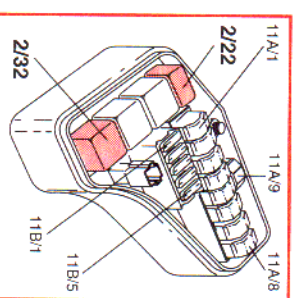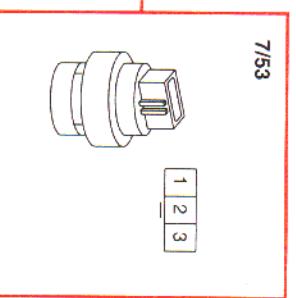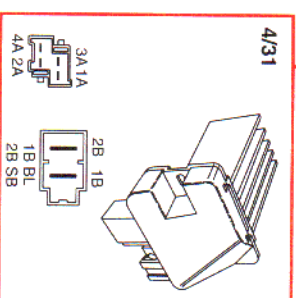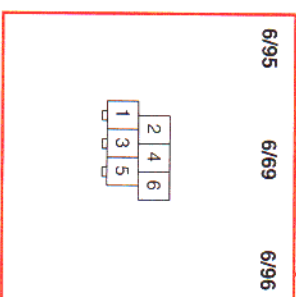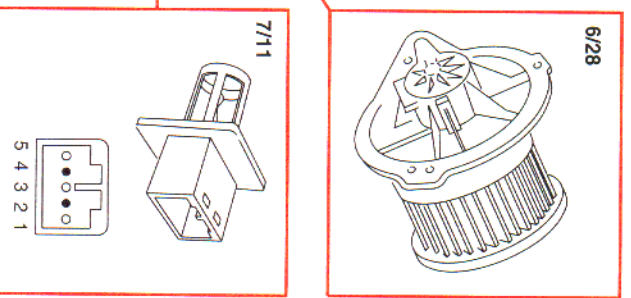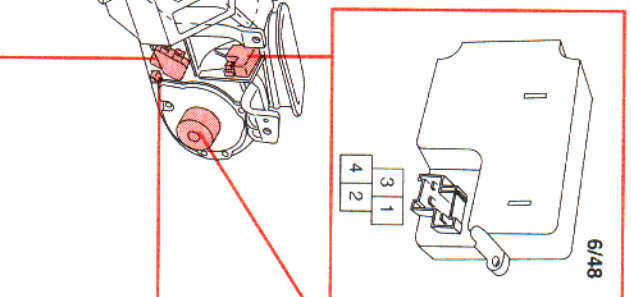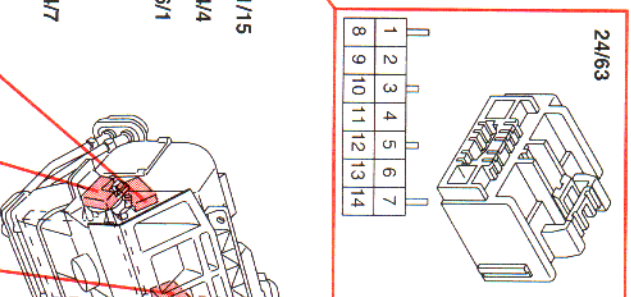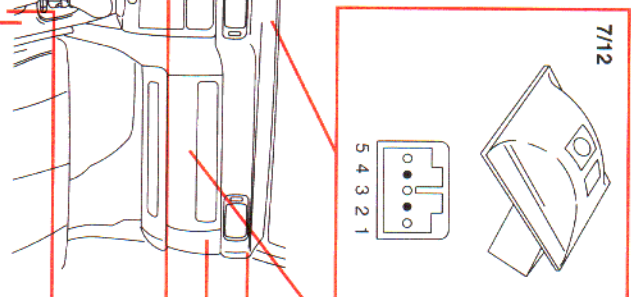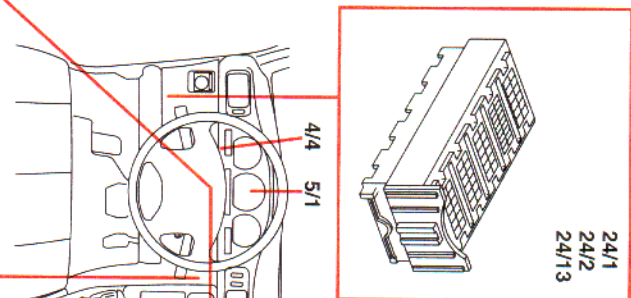

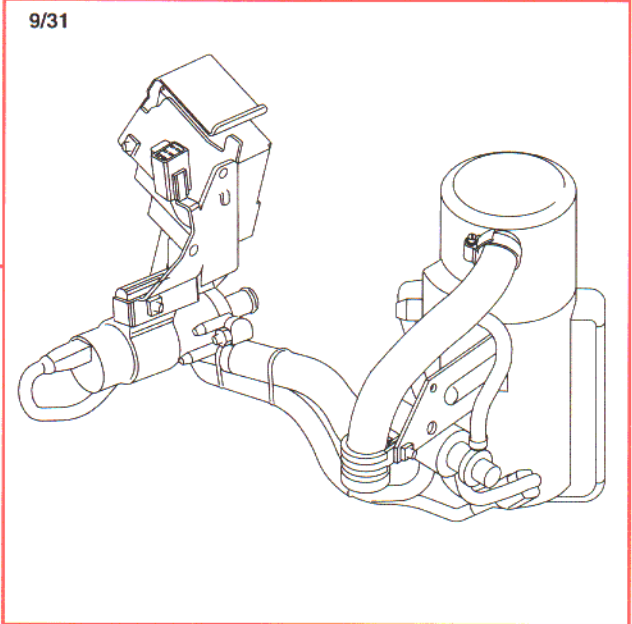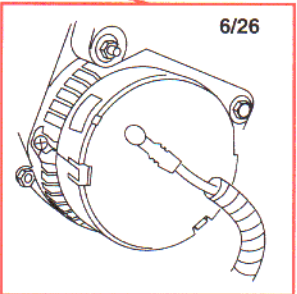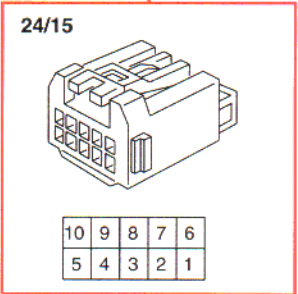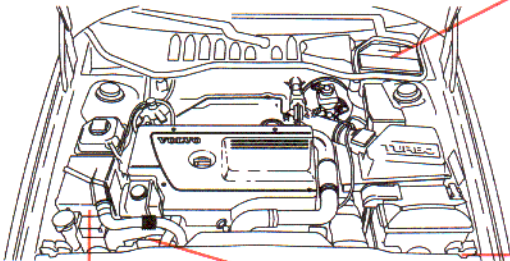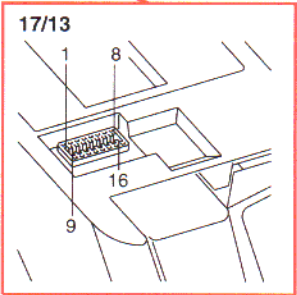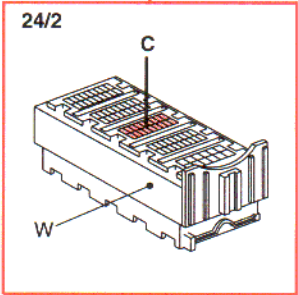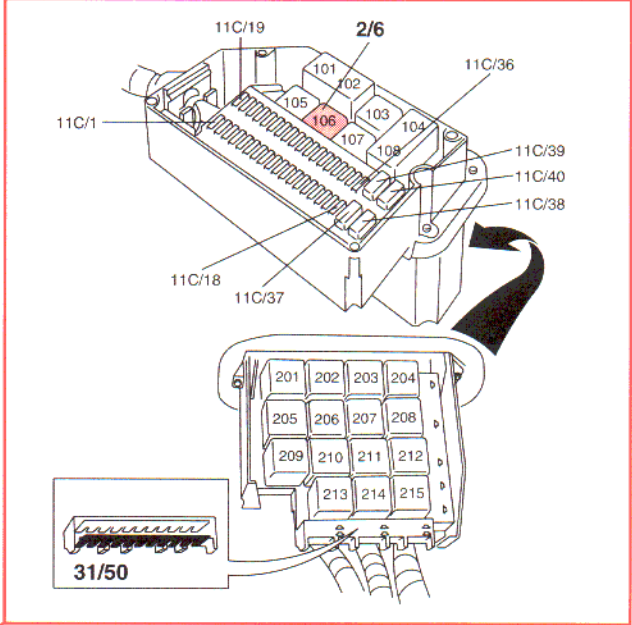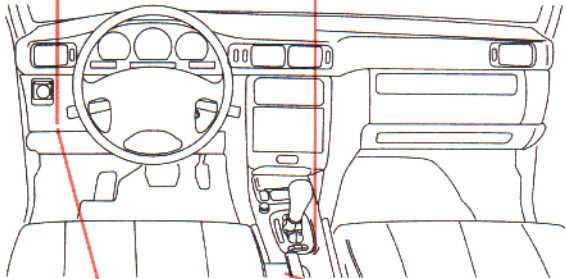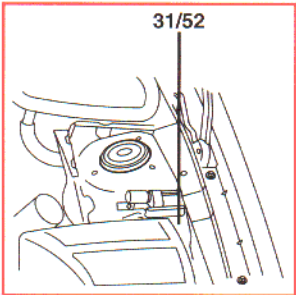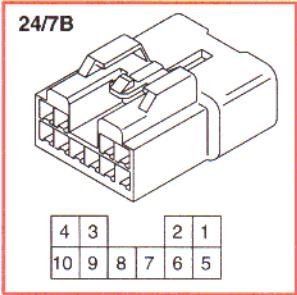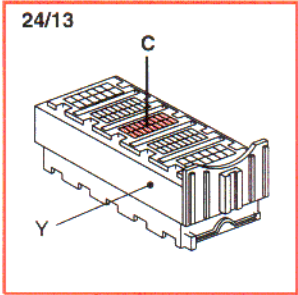


Cargo compartment fans

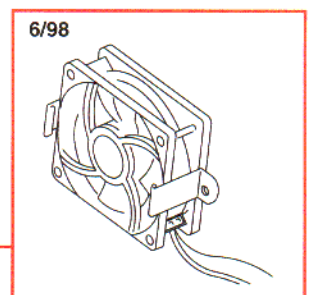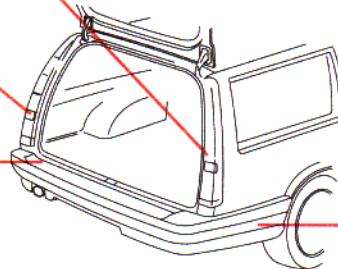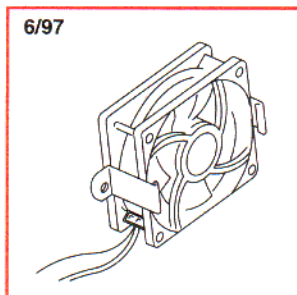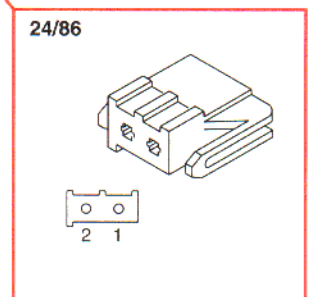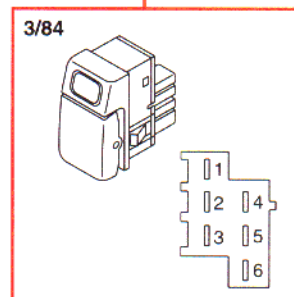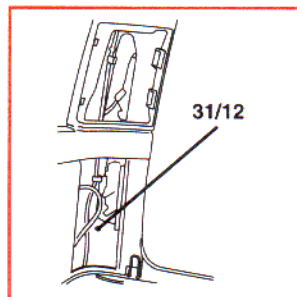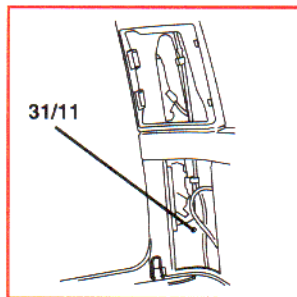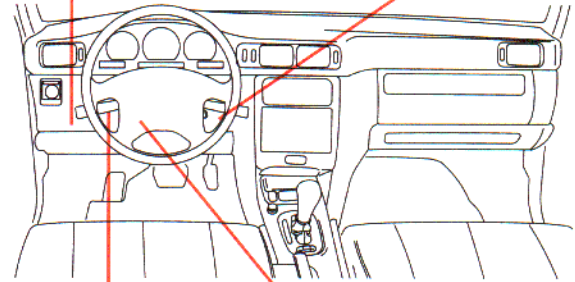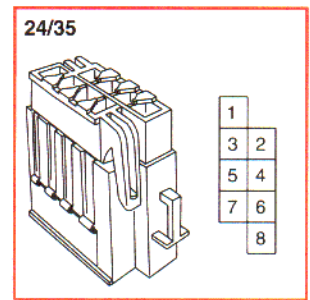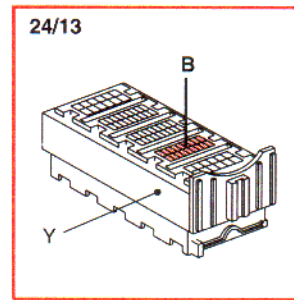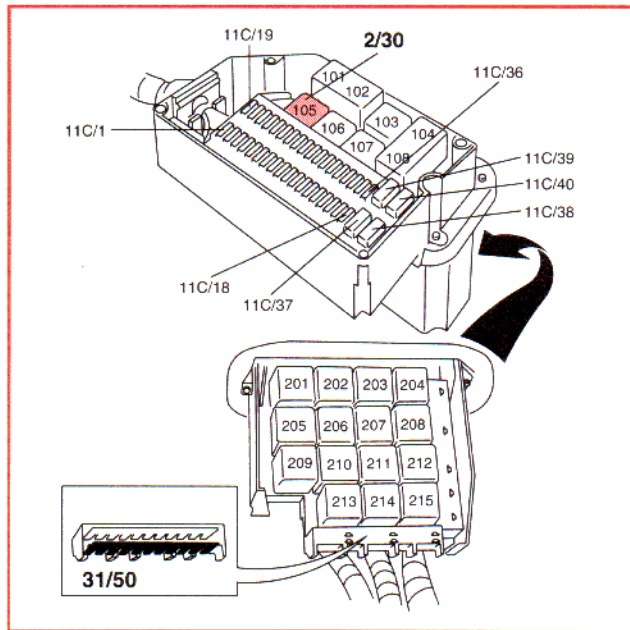


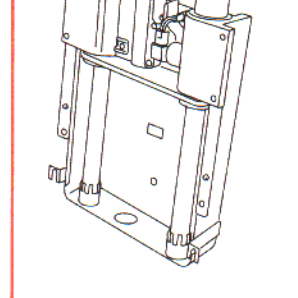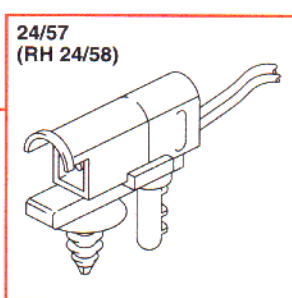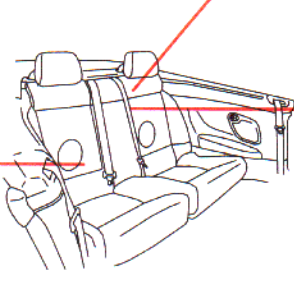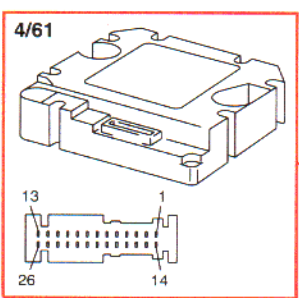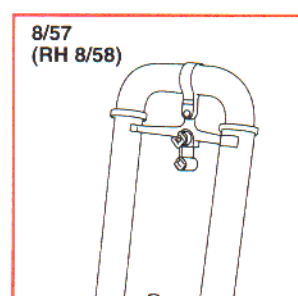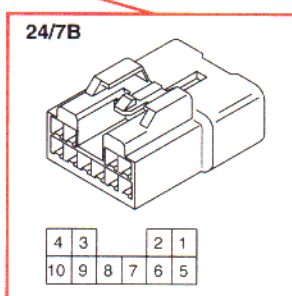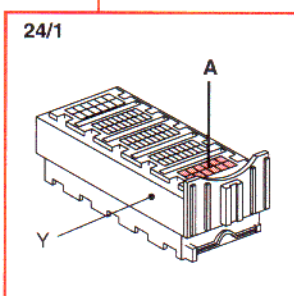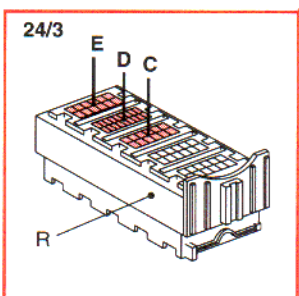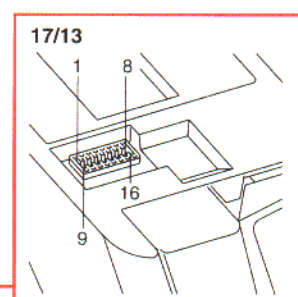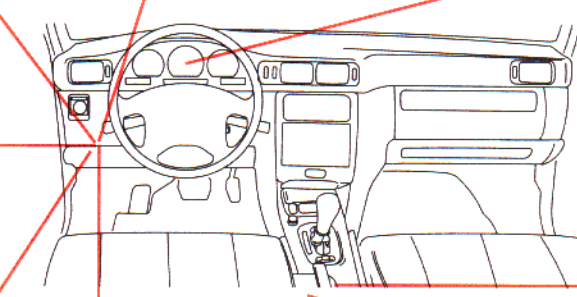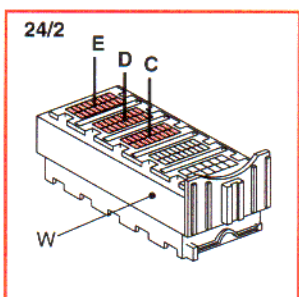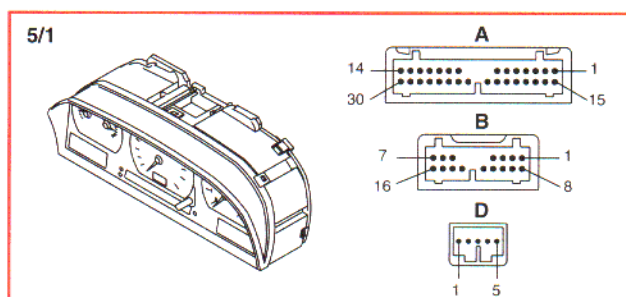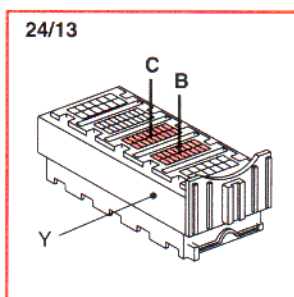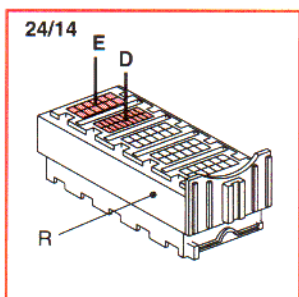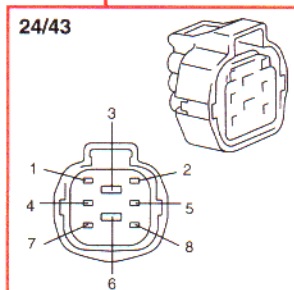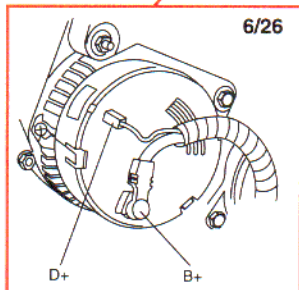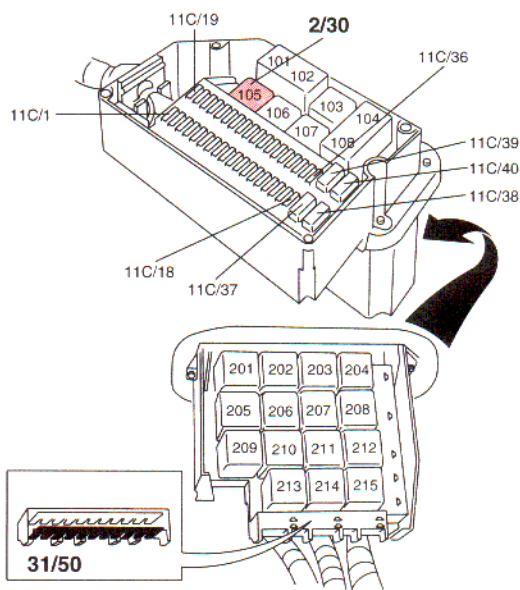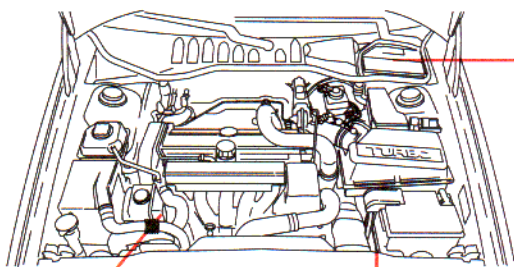

















SRS Supplemental Restraint System

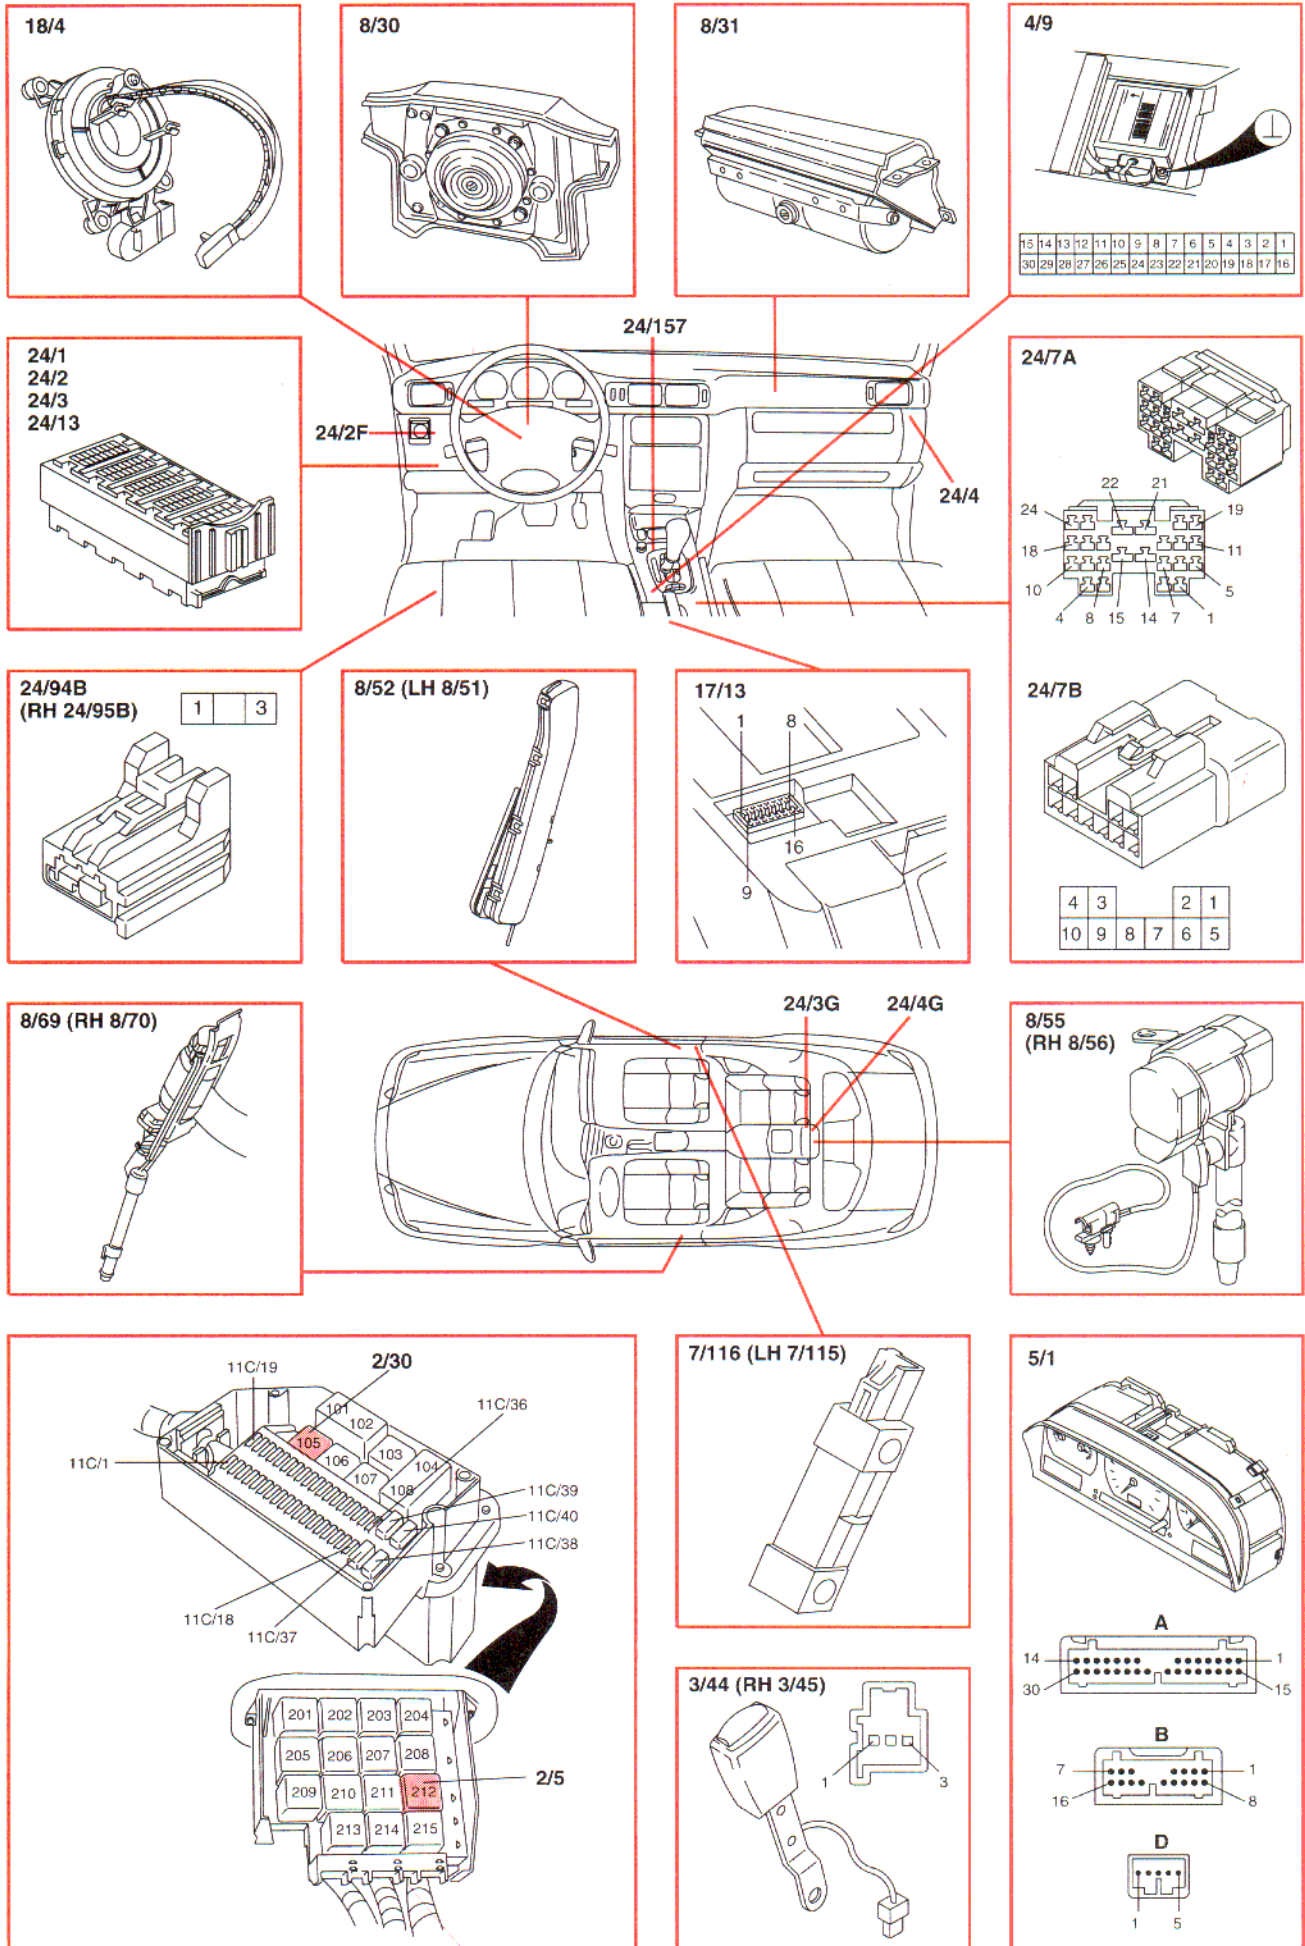

Remote controlled garage door opener

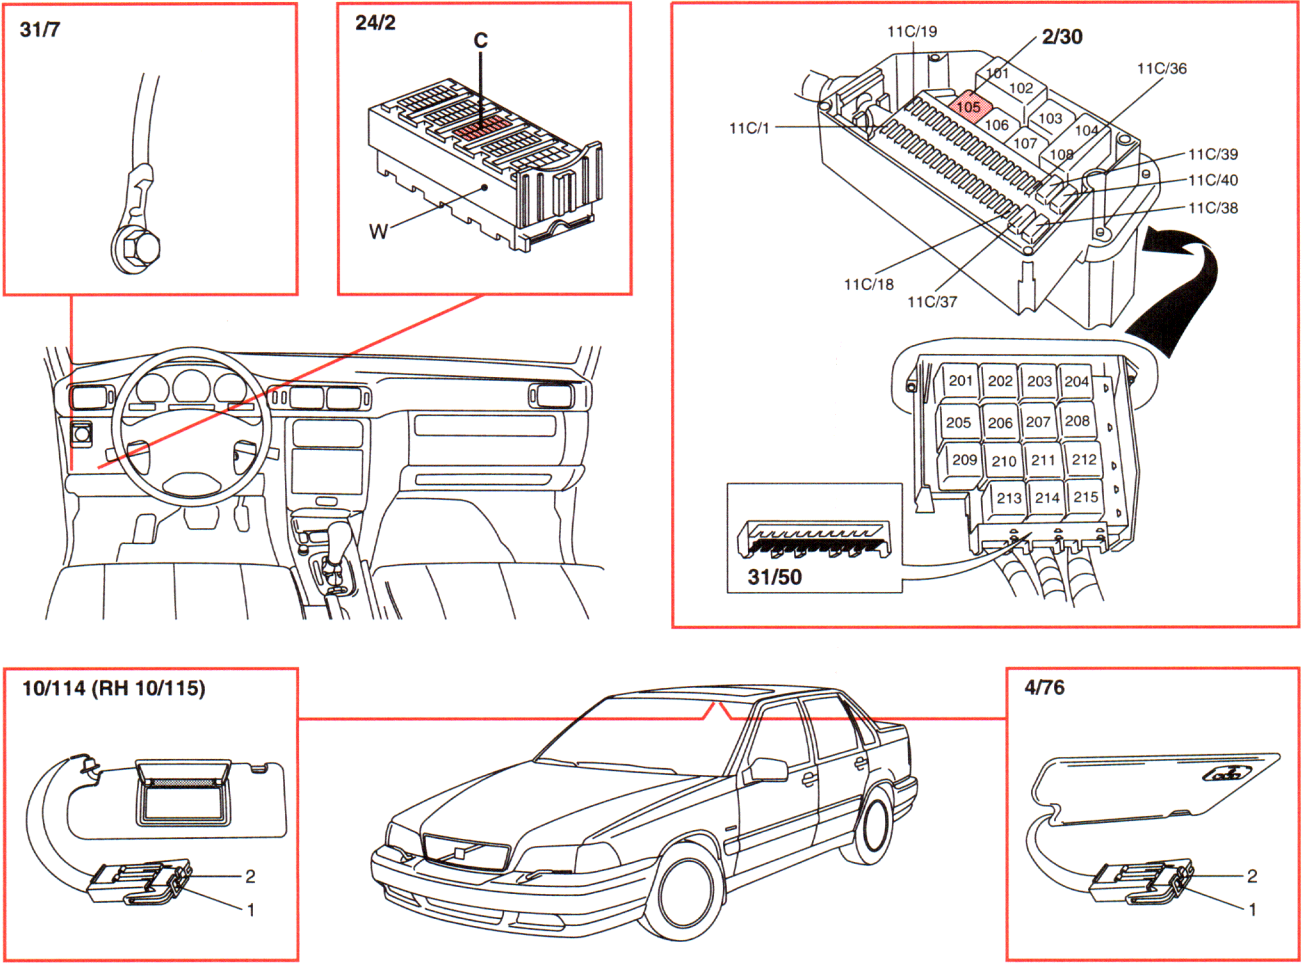

Rear view mirror with automatic dimming
C70 Convertible

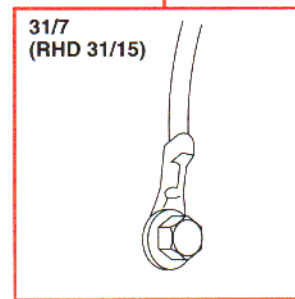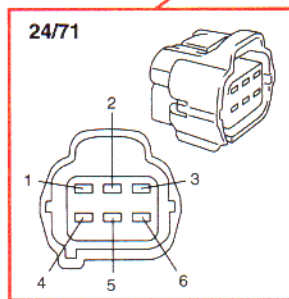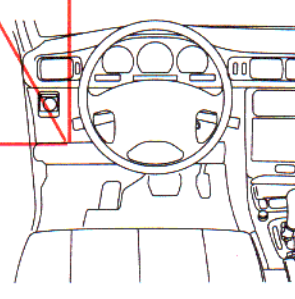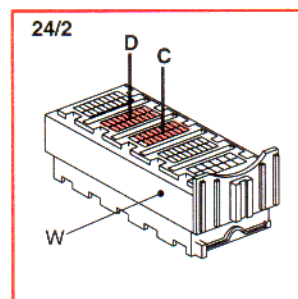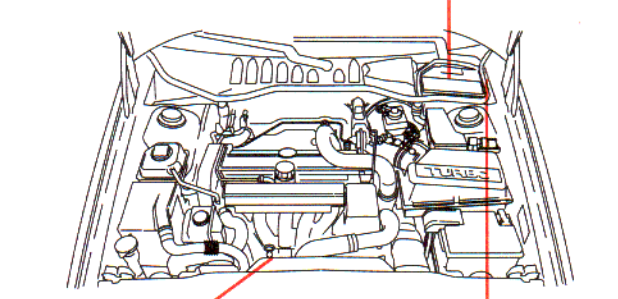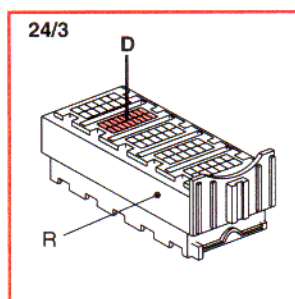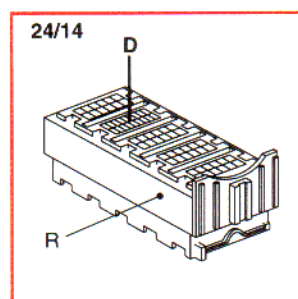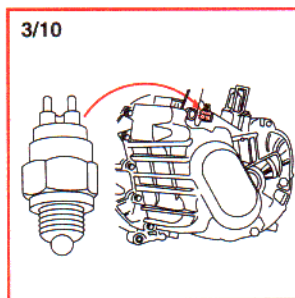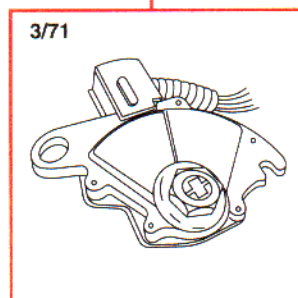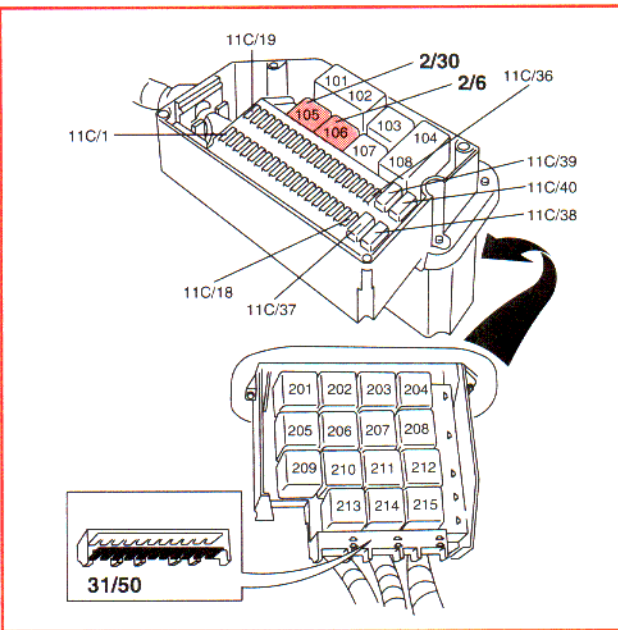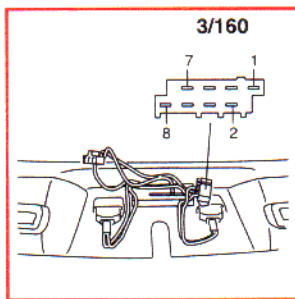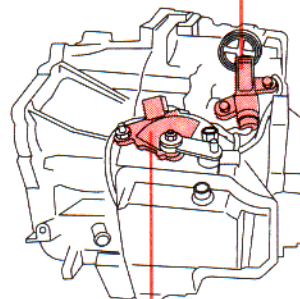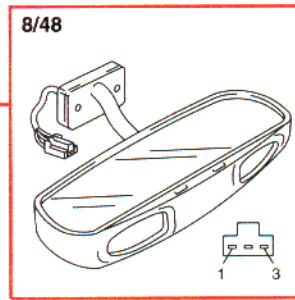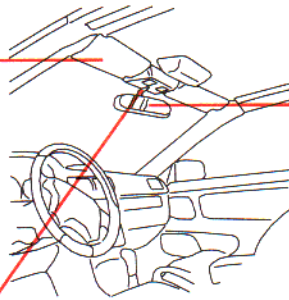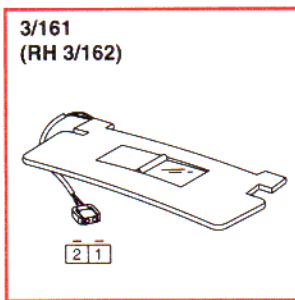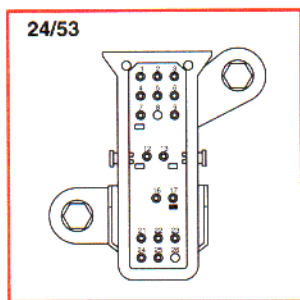

Rear view mirror with automatic dimming C70 coupé

